

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.

Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.

How often you apply the wax depends on how much wear the furniture receives


Part List

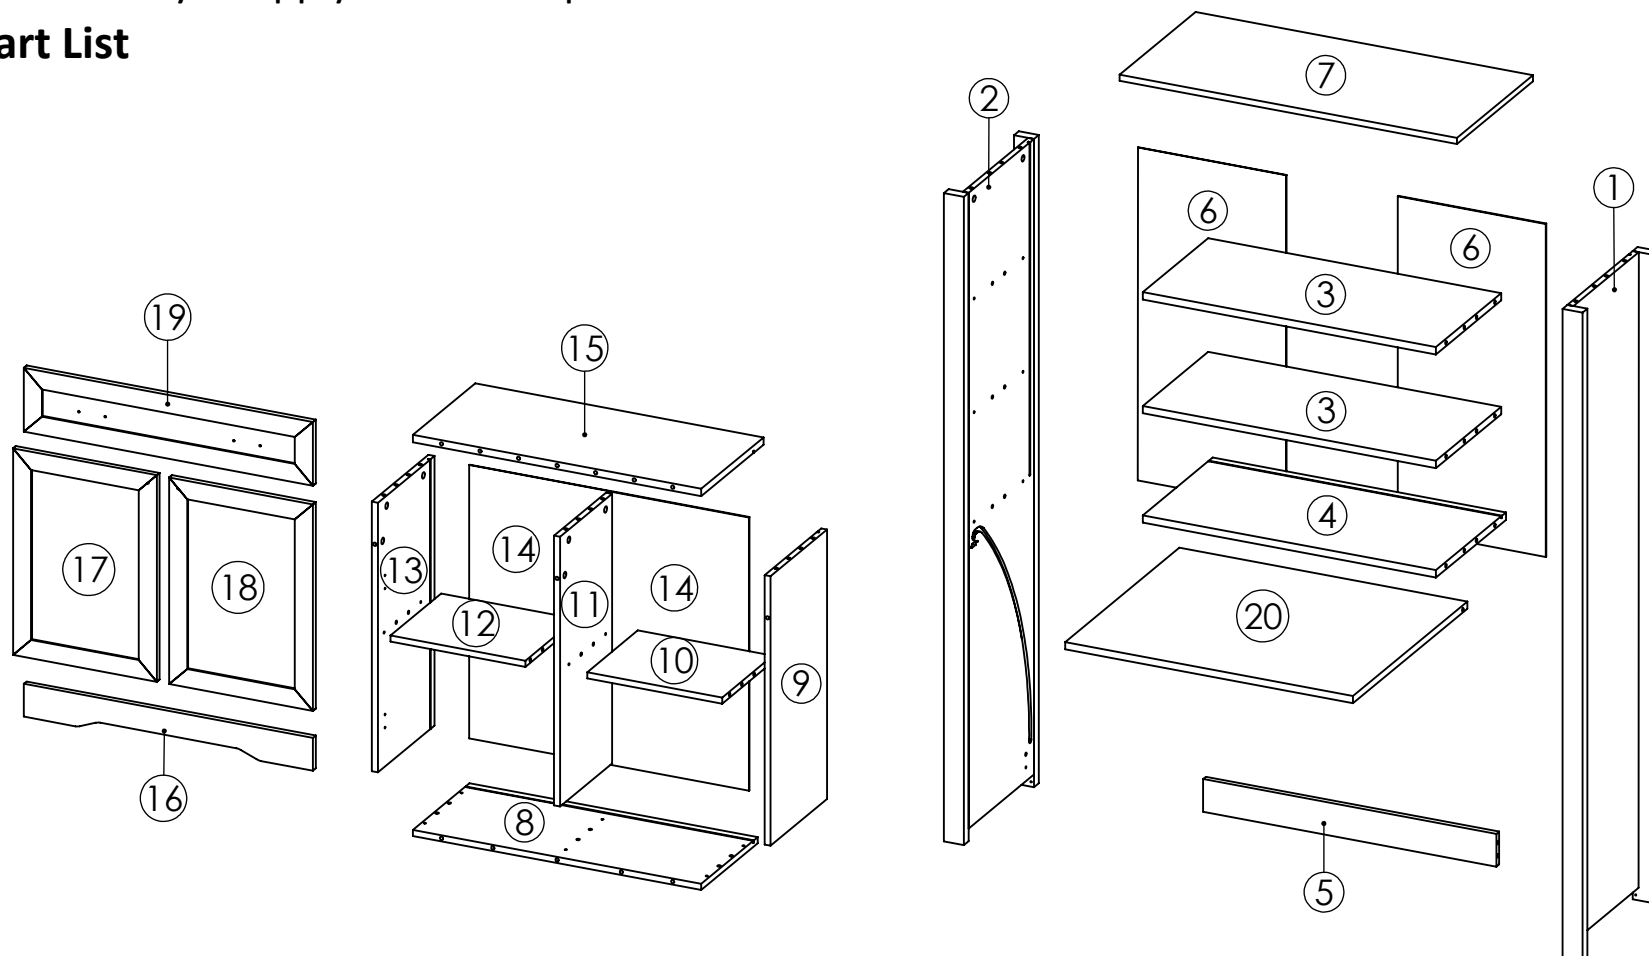

Model# ETG3100

Product Dimensions (Opened Position) : W 33.07" x D 49.49" x H 63.19"

Product Dimensions (Closed Position) : W 33.07" x D 15.67" x H 63.19"

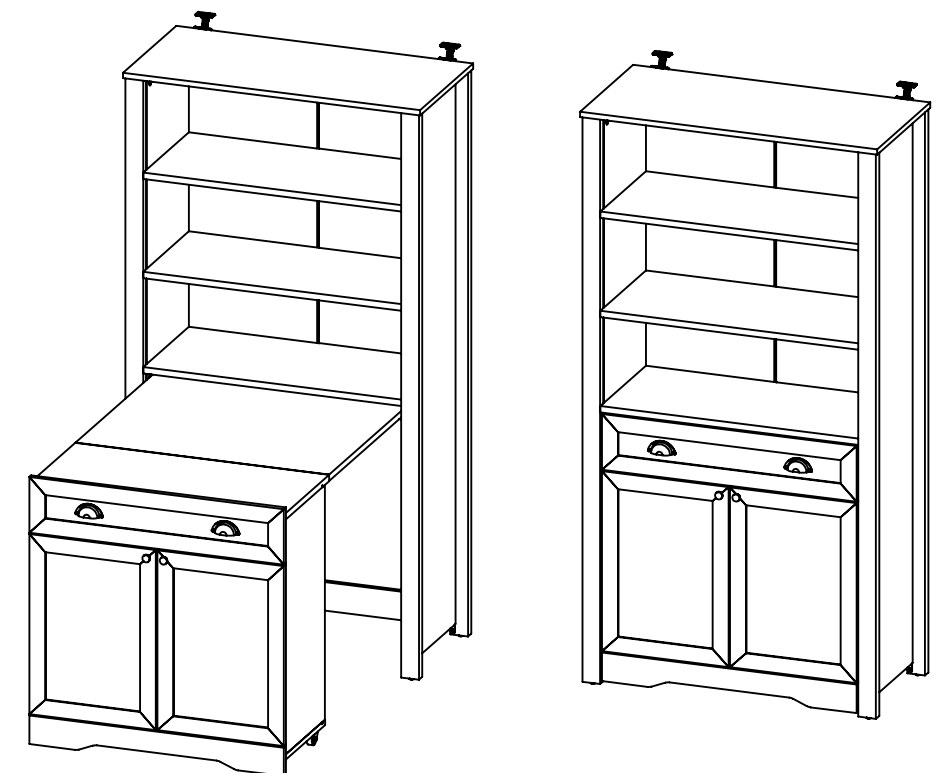

WARNING

TOTAL WEIGHT CAPACITY: 181 LBS

Open Shelf Load Capacity: 26 lbs













Top table Load Capacity: 67 lbs


Shelf Load Capacity: 9 lbs

Warning: Do not stand on bookshelf, desk & cabinet

Warning: Do not over torque bolt

Hardware List

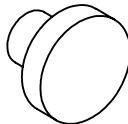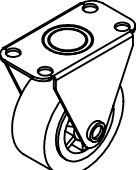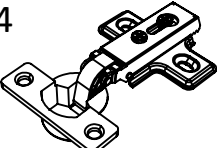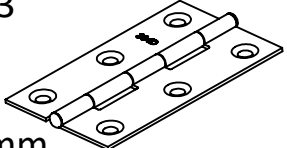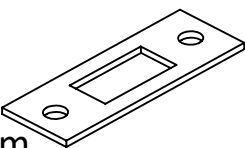HW1x42  Ø6x32 mm	HW2x42  Ø15x12 mm	HW3x43  Ø8x32 mm	HW4x6  Ø6x50 mm	HW5x18  Ø4x15 mm	HW6x12  Ø6x12 mm
HW7x28  Ø4x19 mm	HW8x2  Ø4x22 mm	HW9x28  10x14 mm	HW10x33  Ø20 mm OAK	HW11x4  Washer Ø4 mm	HW12x2  Ø9.5x12 mm
HW13x2  Ø20x15 mm	HW14x2  78 mm	HW15x32  ØM5x12 mm	HW16x4  49x46 mm	HW17x4  Ø26x83 mm Straight Hinge	HW18x1  List "H" 804 mm
HW19x1  List "H" 658 mm	HW20x2  36x36 mm	HW21x3  66x38 mm	HW22x2  50x18 mm	HW23x4  Ø3x12 mm	HW24x4  ØM3x2 mm
HW25x2  Ø8x28 mm					

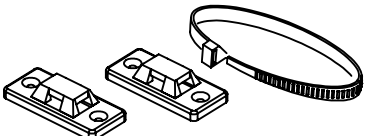Anti-tip Restrain Pack	
HW26x4  Ø6x15 mm	HW27x2SET  300 mm
HW28x4  Ø8x35 PLUG	HW29x4  Ø10x50 mm

Part List & HW

Piece	Description	Qty	Carton Call
1	Right Side Panel	1	1 of 2
2	Left Side Panel	1	1 of 2
3	Top Fixed Shelf	2	1 of 2
4	Center Fixed Shelf	1	1 of 2
5	Lower back plint	1	2 of 2
6	Back Panel	2	1 of 2
7	Top Panel	1	2 of 2
8	Storage Bottom Panel	1	2 of 2
9	Storage Right Side Panel	1	1 of 2
10	Storage Right Fixed shelf	1	2 of 2
11	Storage Center Panel	1	1 of 2
12	Storage Left Fixed shelf	1	2 of 2
13	Storage Left Side Panel	1	2 of 2
14	Storage Back Panel	2	2 of 2
15	Storage Top Panel	1	2 of 2
16	Storage Front Plint	1	2 of 2
17	Left Door	1	2 of 2
18	Right Door	1	2 of 2
19	Fixed Front Drawer	1	2 of 2
20	Table Desk	1	2 of 2


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32mm	42	1 of 2
HW2	Camlock Ø15x12mm	42	1 of 2
HW3	Wooden Dowel Ø8x32mm	43	1 of 2
HW4	Screw M6 x 50 mm	6	1 of 2
HW5	Screw M4 x 15 mm	18	1 of 2
HW6	Screw M6 x 12 mm	12	1 of 2
HW7	Screw M4 x 19 mm	28	1 of 2
HW8	Bolt JP 4 x 22 mm	2	1 of 2
HW9	Plastic Stopper 10x14mm	28	1 of 2
HW10	Cover Cap Sticker Ø20mm	33	1 of 2
HW11	Washer Ø4 mm	4	1 of 2
HW12	Cross Dowel Ø9.5x12 mm	2	1 of 2
HW13	Handle Knob Ø20x15mm	2	1 of 2
HW14	Handle Catam 78mm	2	1 of 2
HW15	Screw M5 x 12 mm	32	1 of 2
HW16	Wheel 49x46mm	4	1 of 2
HW17	Straight Hinge Ø26x83mm	4	1 of 2
HW18	List "H" 804 mm	1	1 of 2
HW19	List "H" 663 mm	1	1 of 2
HW20	Grender 36x36mm	2	1 of 2
HW21	Butterfly hinge 66x38mm	3	1 of 2
HW22	Metal plate stopper 50x18mm	2	1 of 2
HW23	Bolt JP M3 x 12 mm	4	1 of 2
HW24	Nut M3x2mm	4	1 of 2
HW25	Swing wheel plate Ø8x28mm	2	1 of 2
HW26	Screw M6 x 15 mm	4	1 of 2
HW27	Anti-Tip 300mm	2	1 of 2
HW28	Ø8x35mm PLUG	4	1 of 2
HW29	Screw M10 x 50 mm	4	1 of 2

PREPARATION

Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 60 minutes.

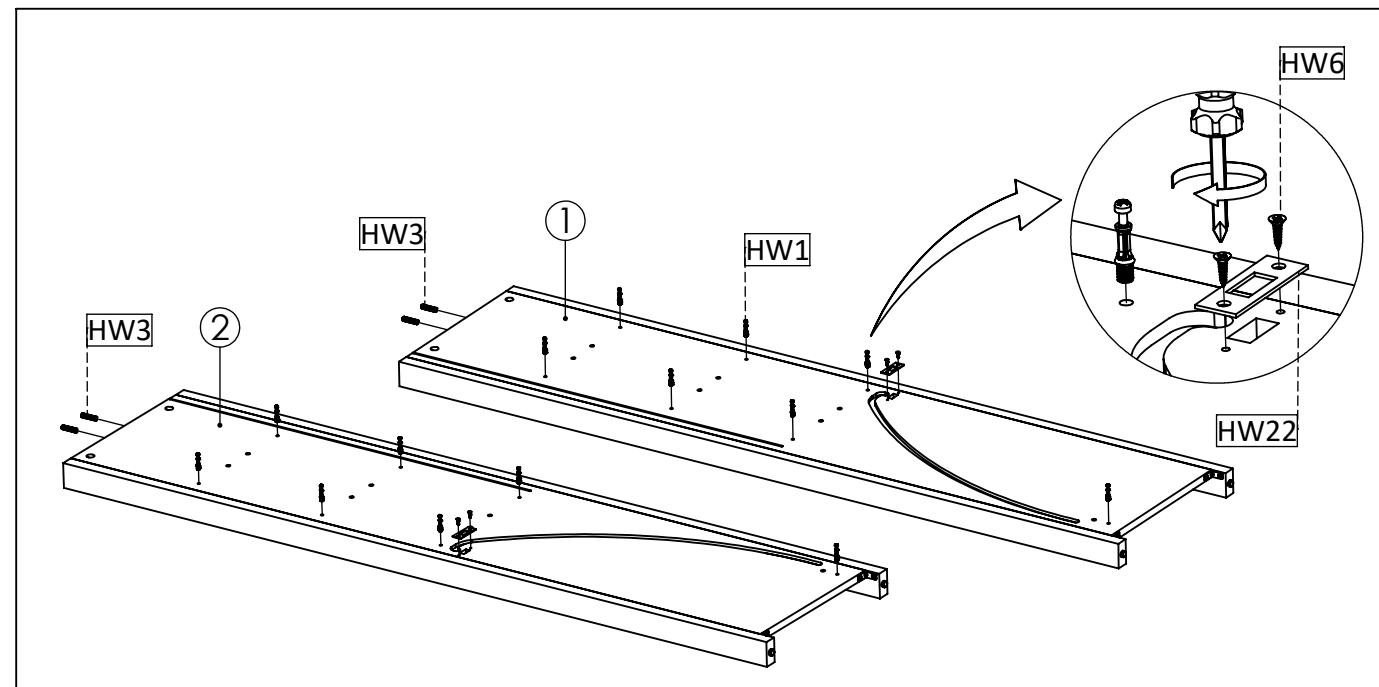


STEP1: Insert Cambolt (HW1) And Wooden Dowel (HW3) Into Right Side Panel (1) And Left Side Panel (2)


Continue with securing part of the Metal plate Stopper (HW22) into position as the above image, using screw M6x12mm (HW6)

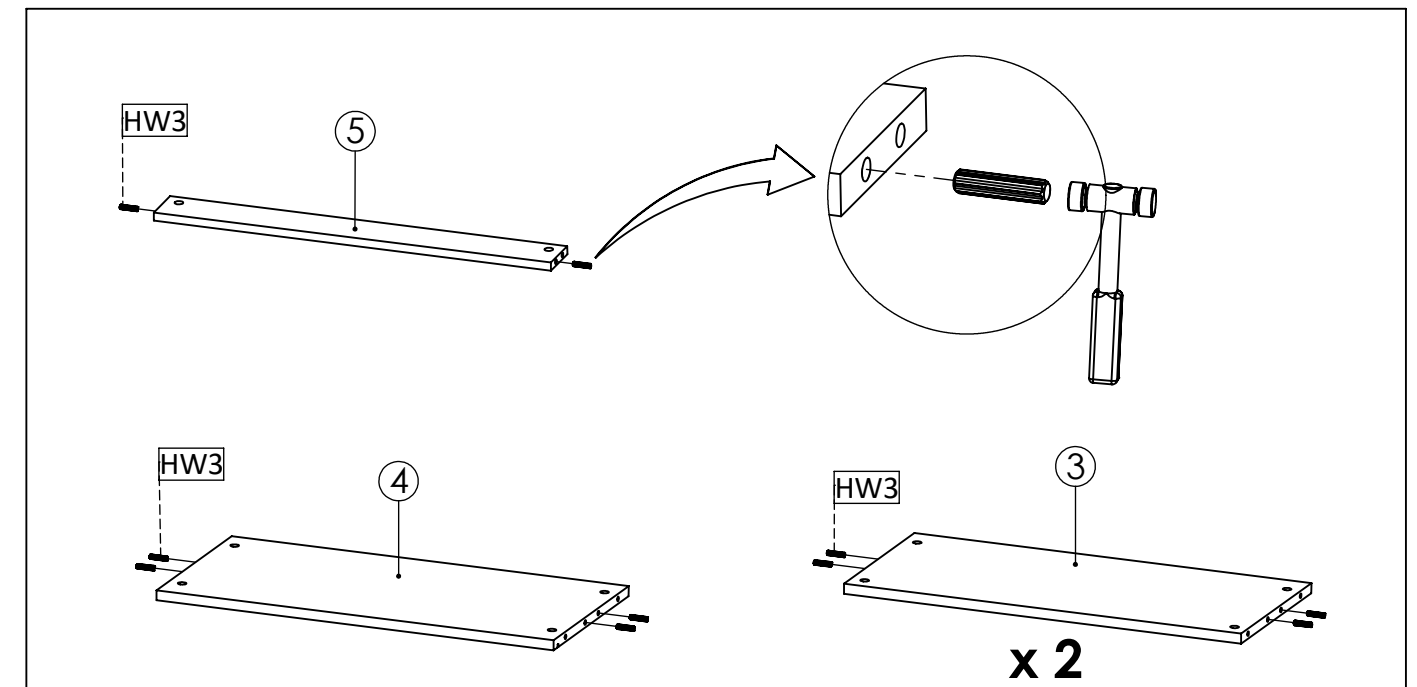


STEP2: Insert Wooden Dowel (HW3) into Top Fixed Shelf (3), Center Fixed Shelf (4) And Lower Back Plint (5).

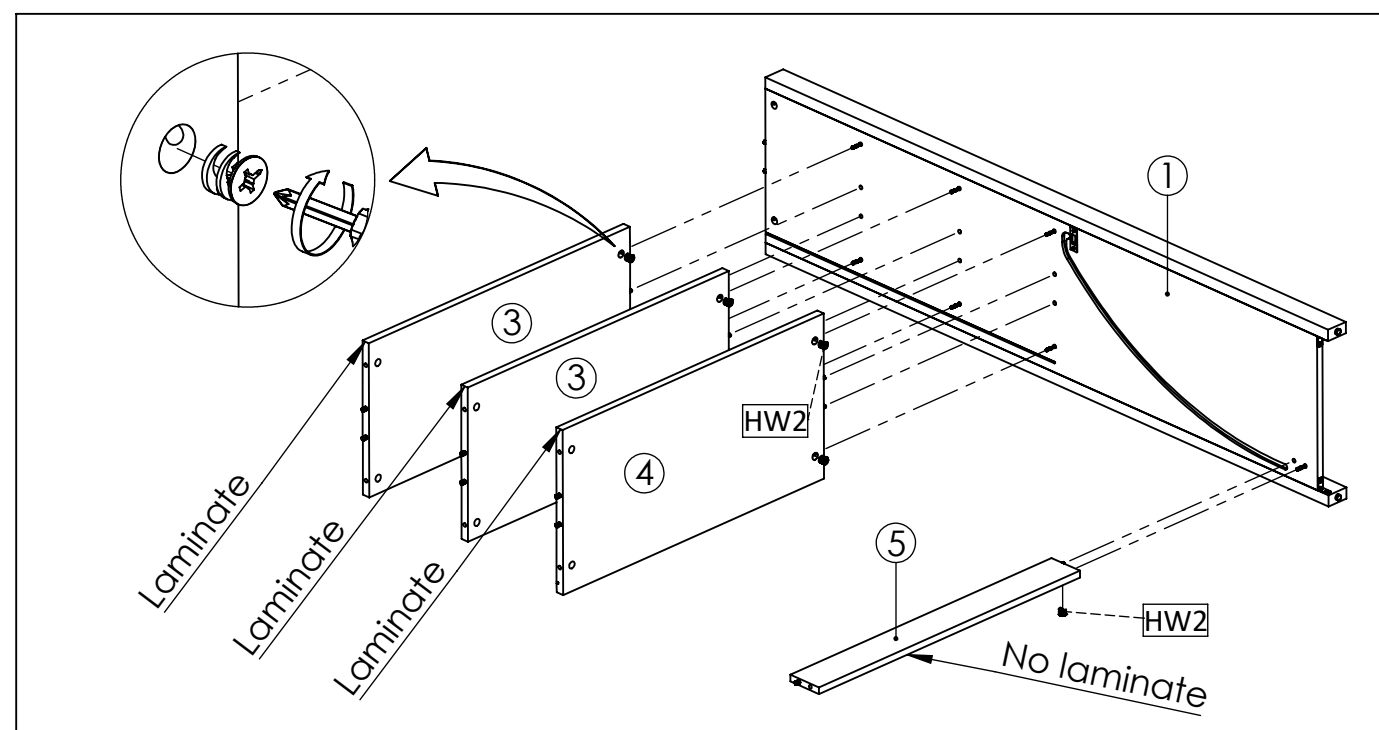


STEP3: Attach Top Fixed Shelf (3), Center Fixed Shelf (4) And Lower Back Plint (5) Into Right Side Panel (1). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

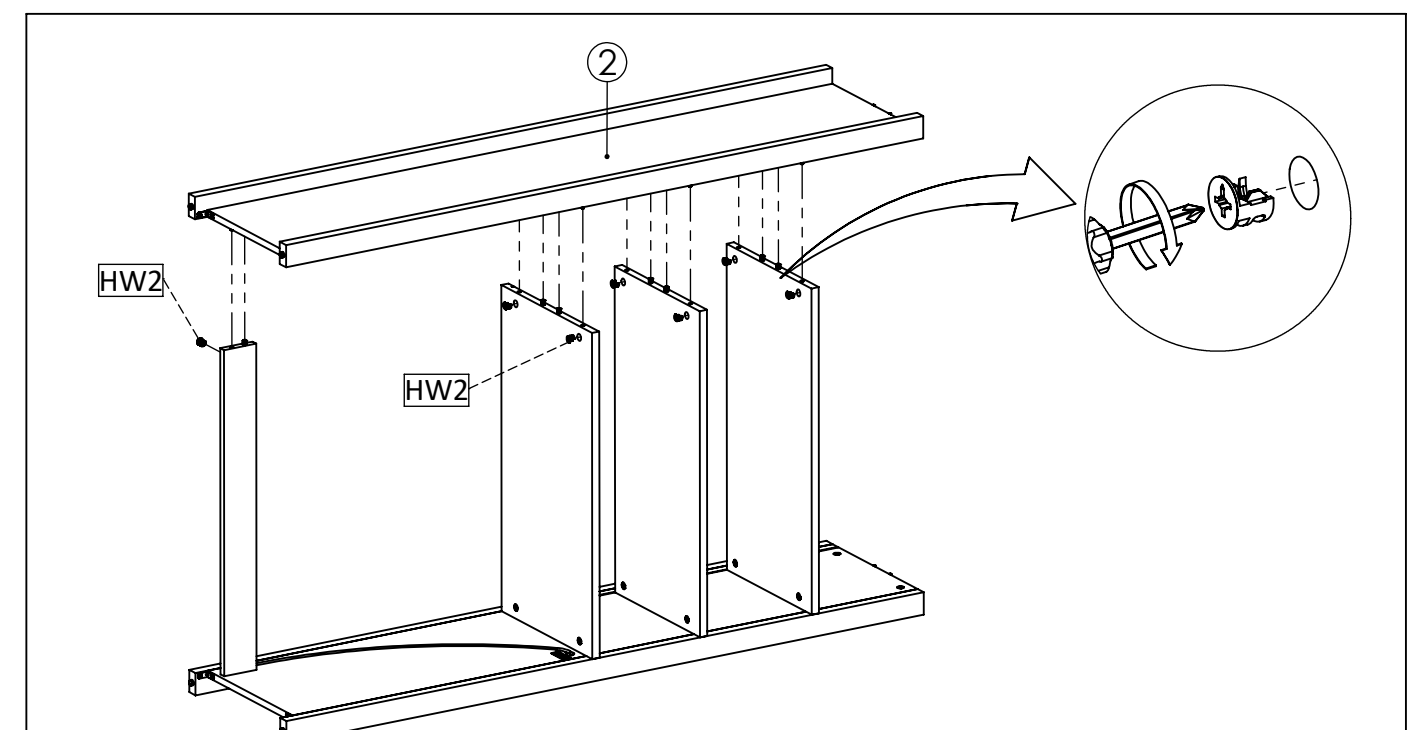


STEP4: Insert Right Side Panel (1). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

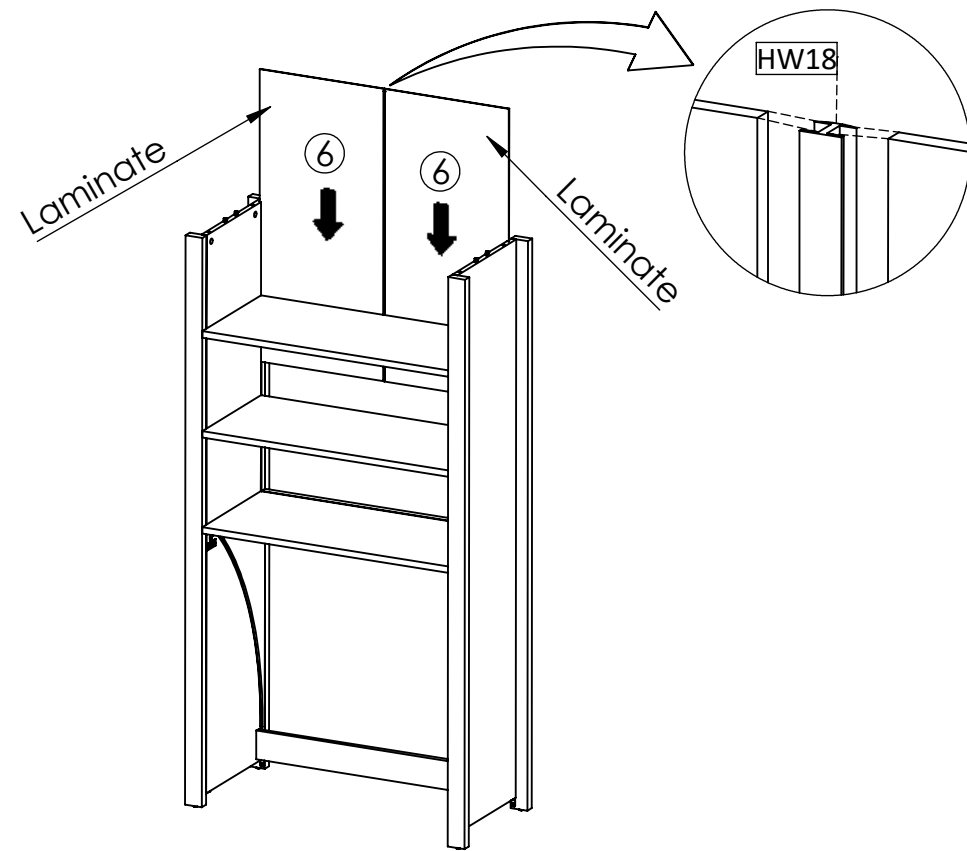


STEP5: Insert Back Panel x2 (6), And List "H" (HW18)

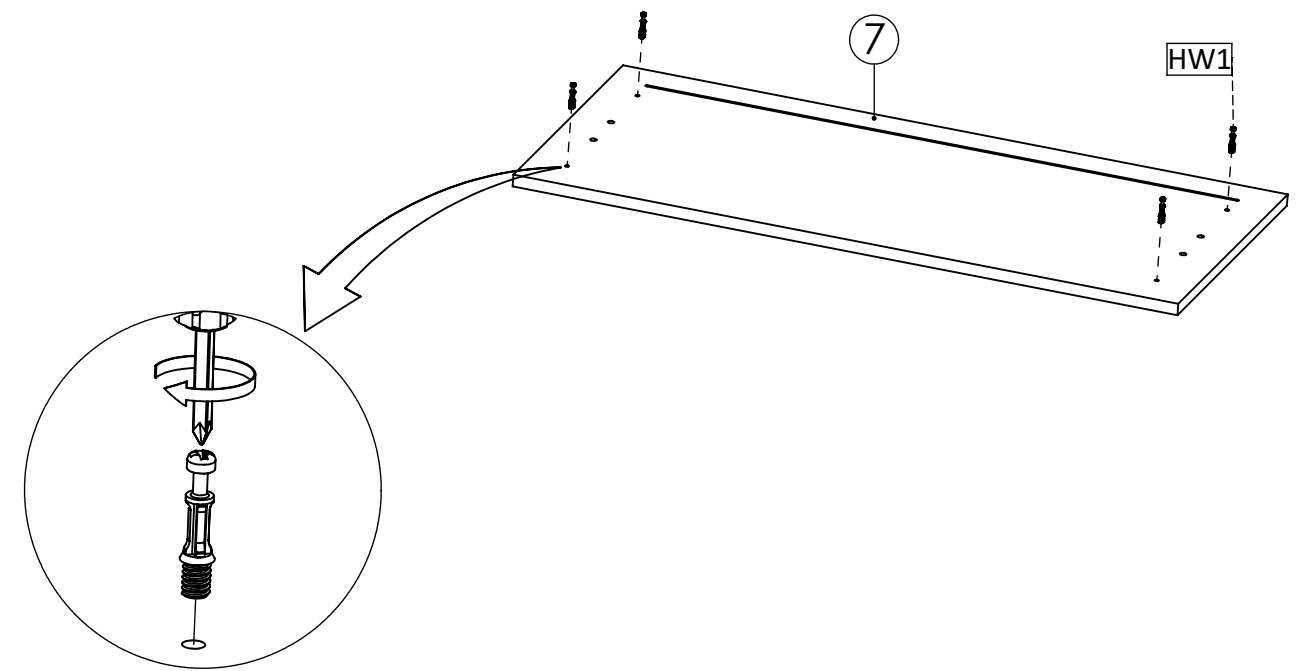


STEP6: Insert Cambolt (HW1) Into Top panel (7).

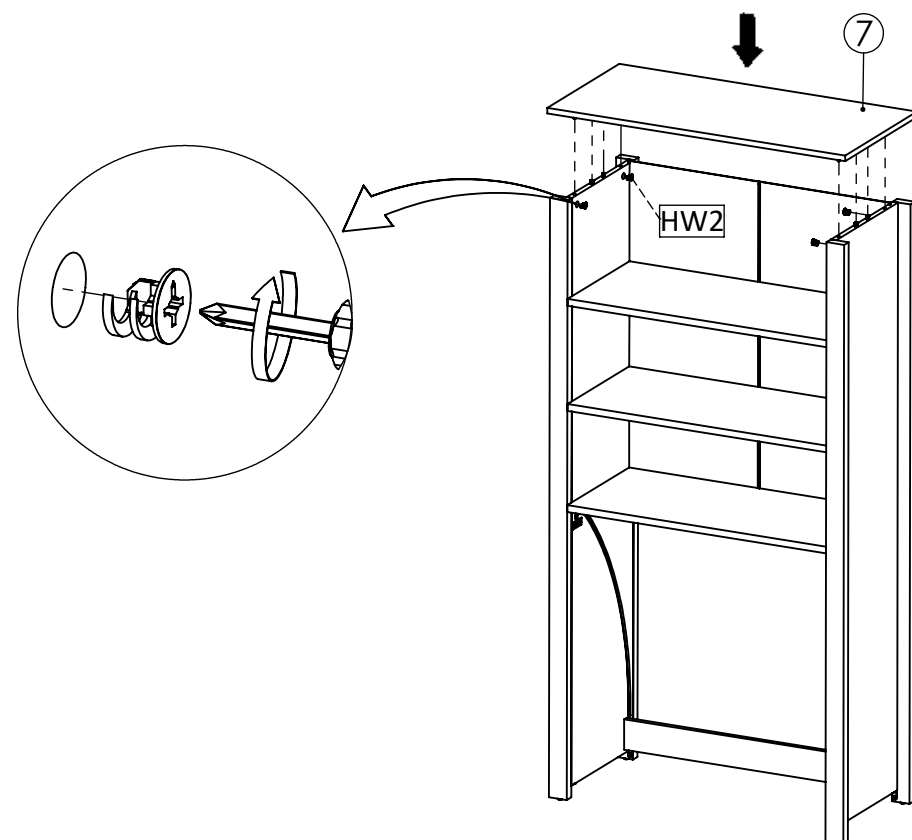


STEP7: Insert Top panel (7) Secure with Camlock (HW2), and tighten it using screwdriver.

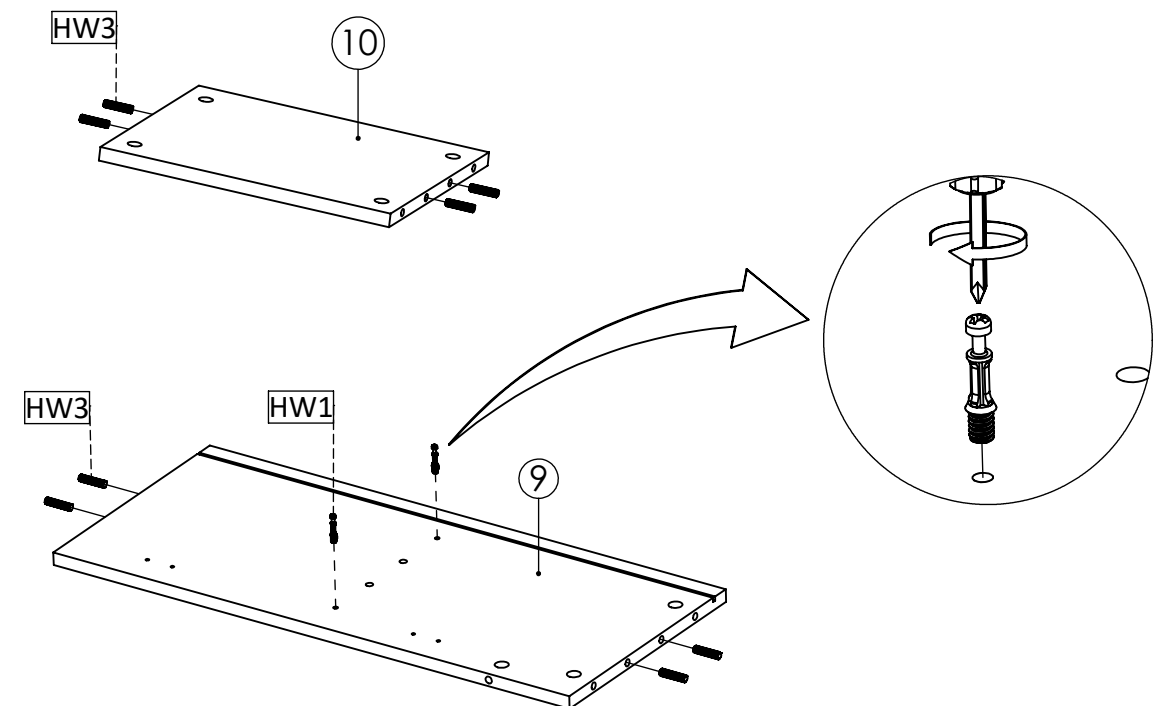


STEP8: Insert Cambolt (HW1) Into Storage Right Side Panel (9). Insert Wooden Dowel (HW3) Into Storage Right Side Panel (9) And Box Right Fixed Shelf (10)

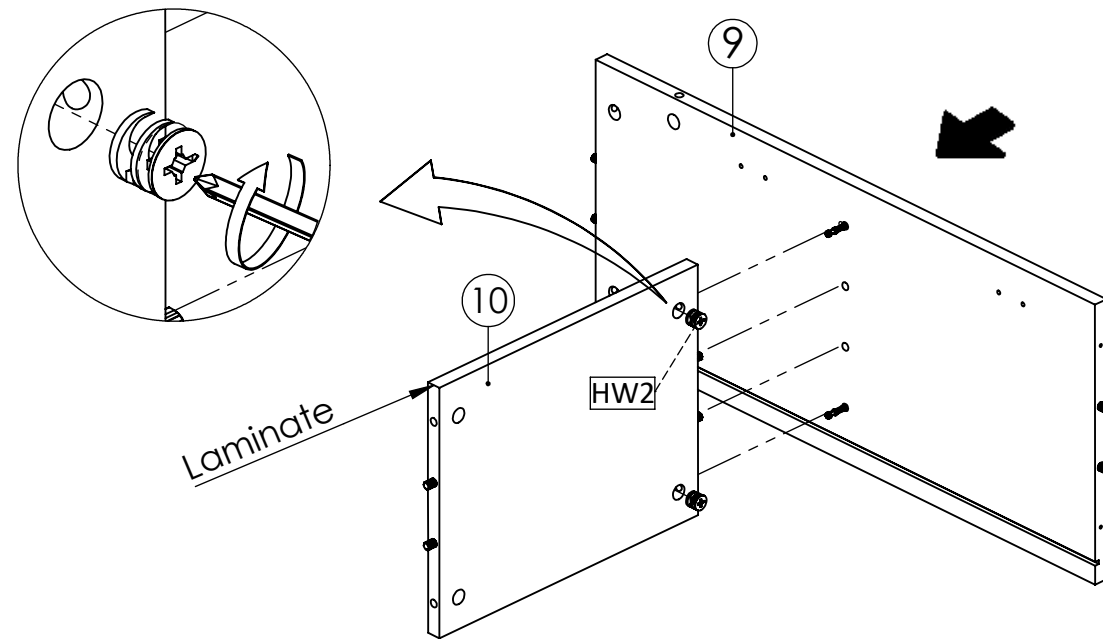


STEP9: Attach Storage Right Fixed Shelf (10) Into Storage Right Side Panel (9). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

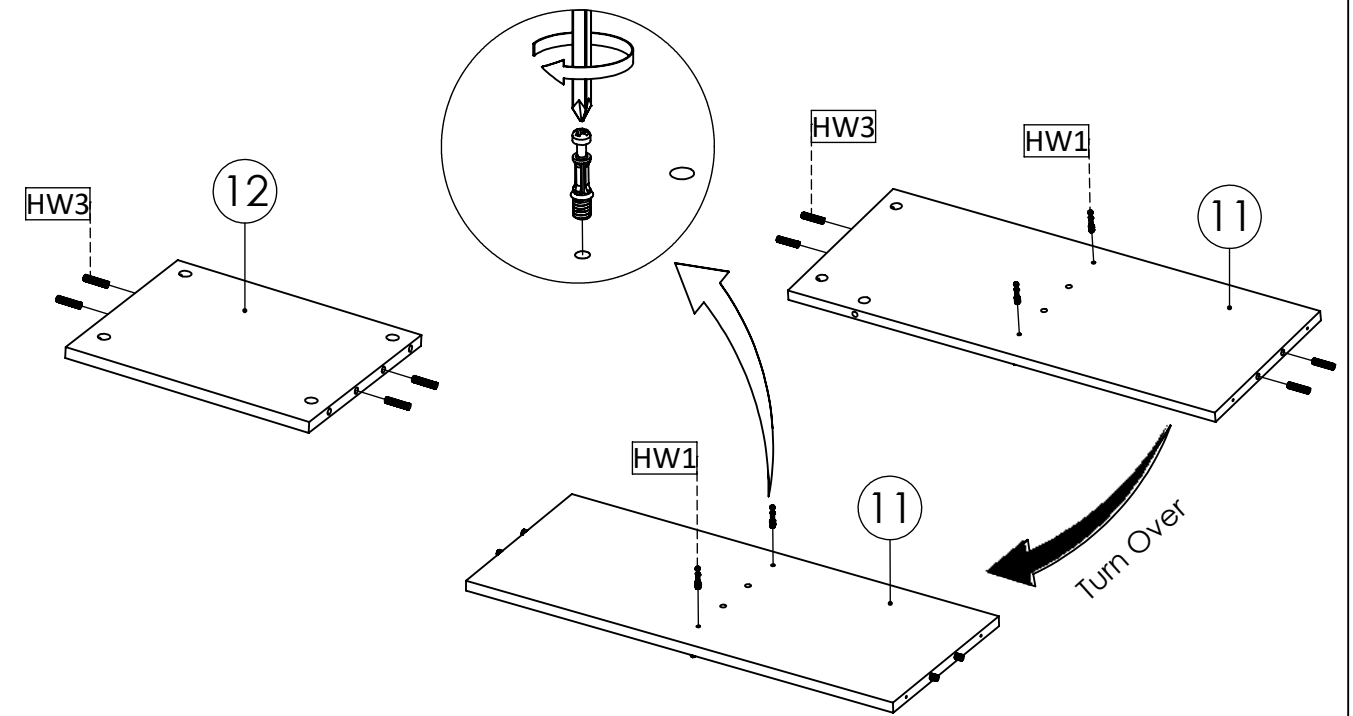


STEP10: Insert Cambolt (HW1) Into Storage Center Panel (11). Insert Wooden Dowel (HW3) Into Storage Center Panel (11) And Storage Left Fixed Shelf (12)

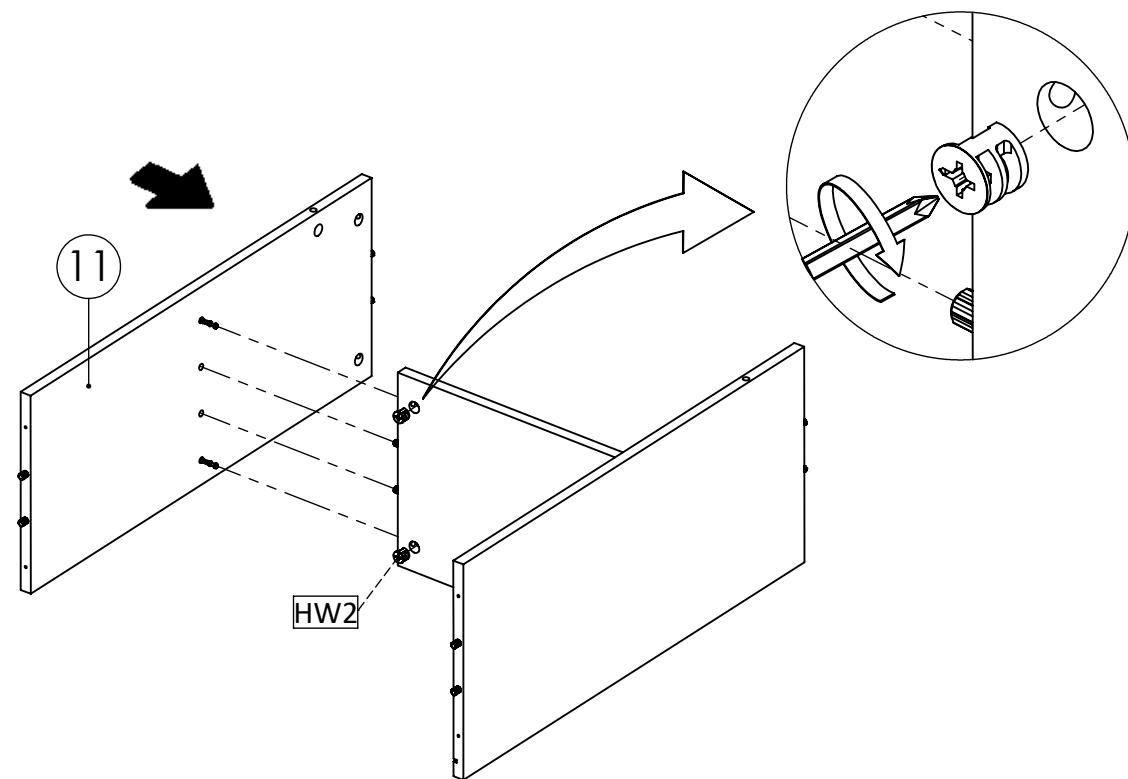


STEP11: Insert Storage Center Panel (11). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

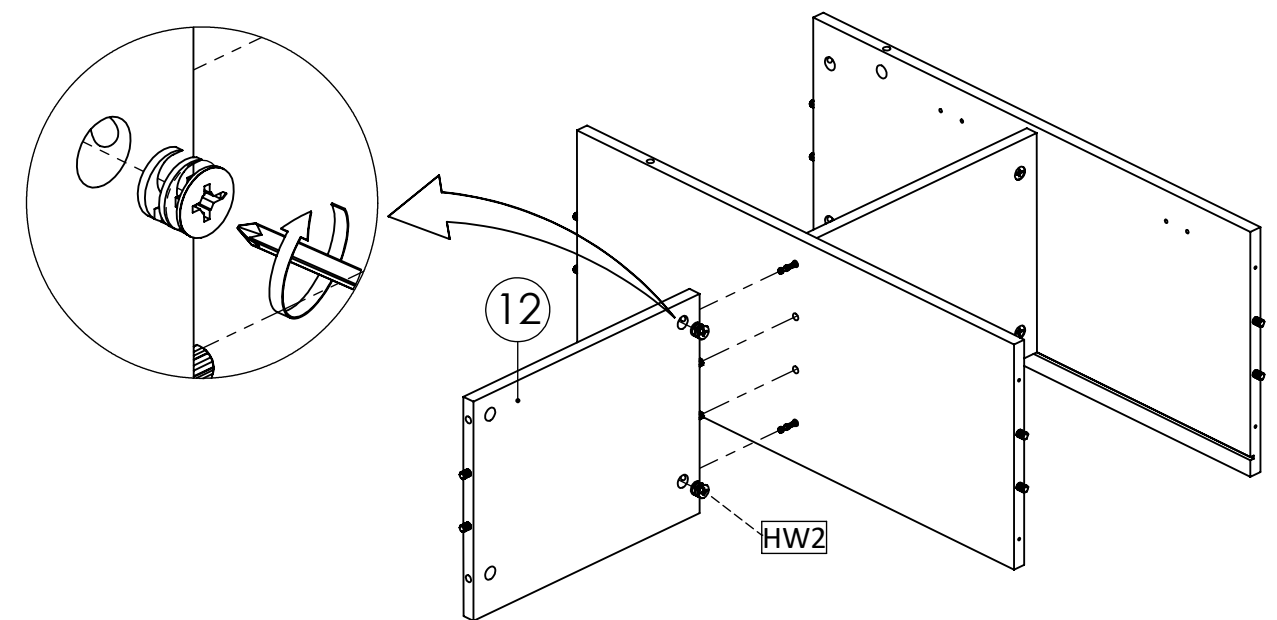


STEP12: Insert Storage Left Fixed Shelf (12). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

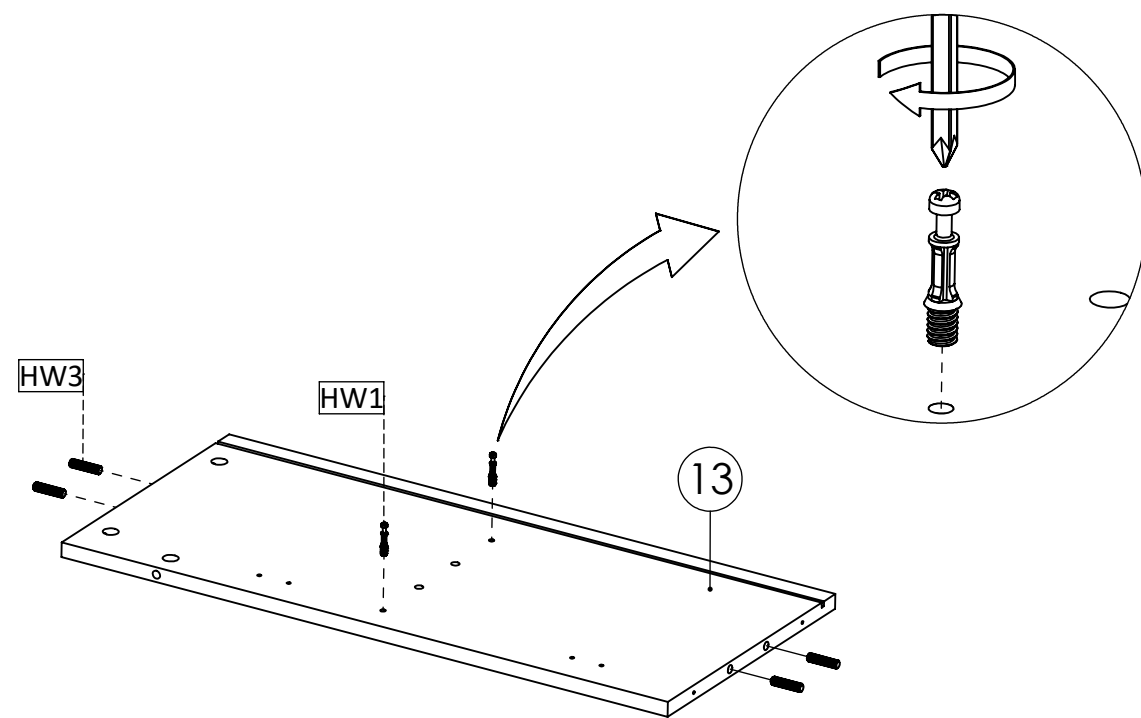


STEP13: Insert Cambolt (HW1) Into Storage Left Side Panel (13). Insert Wooden Dowel (HW3) Into Storage Left Side Panel (13)

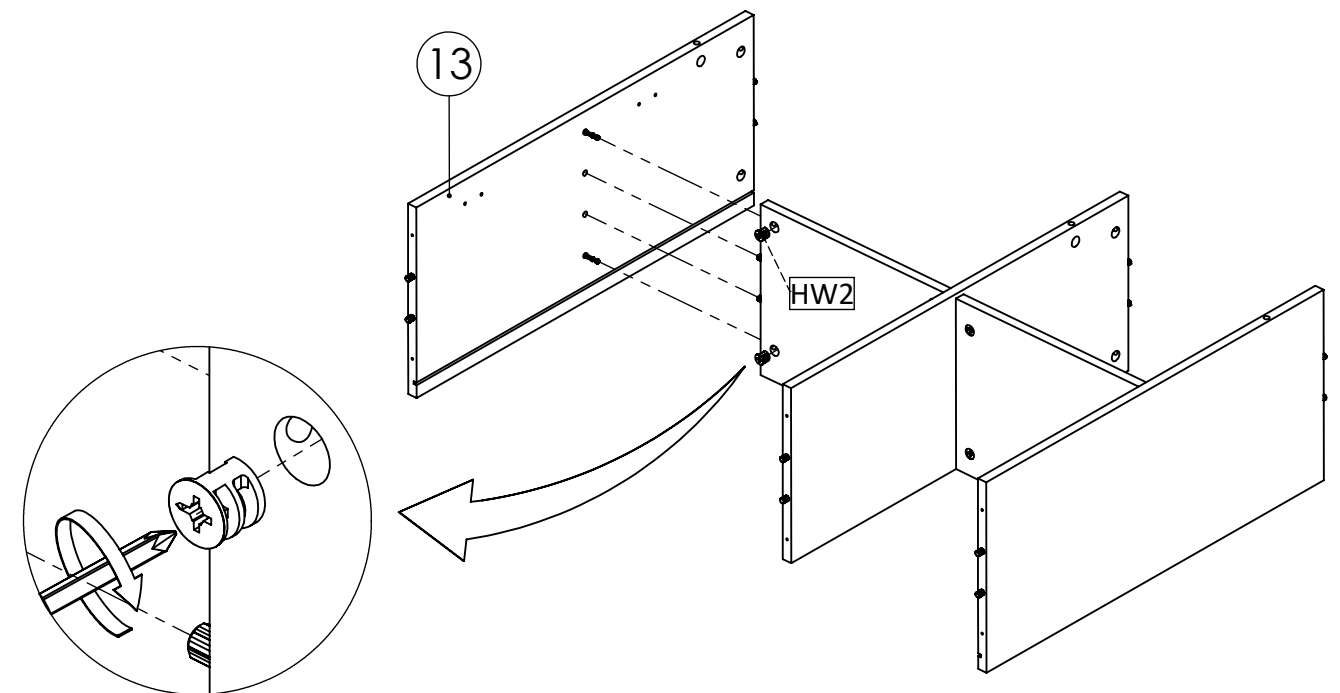





STEP14: Insert Storage Left Side Panel (13). Secure with Camlock (HW2) And Tighten It Using Screwdriver.

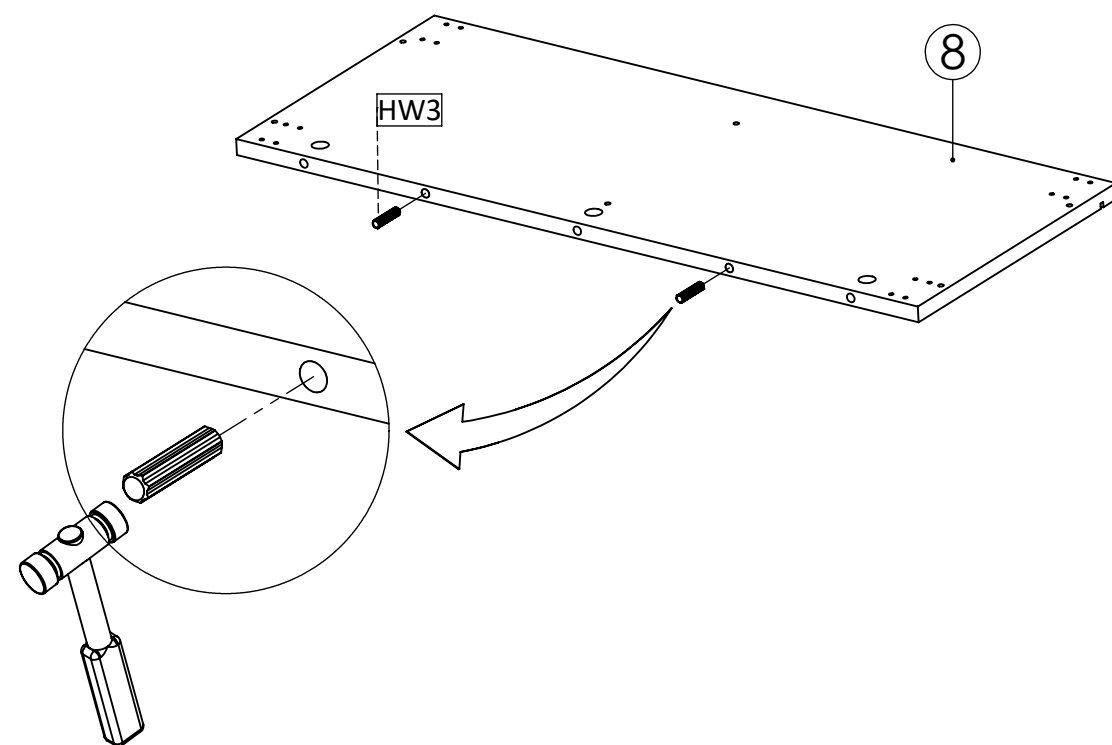


STEP15: Insert Wooden Dowel (HW3) Into Storage Bottom Panel (8).

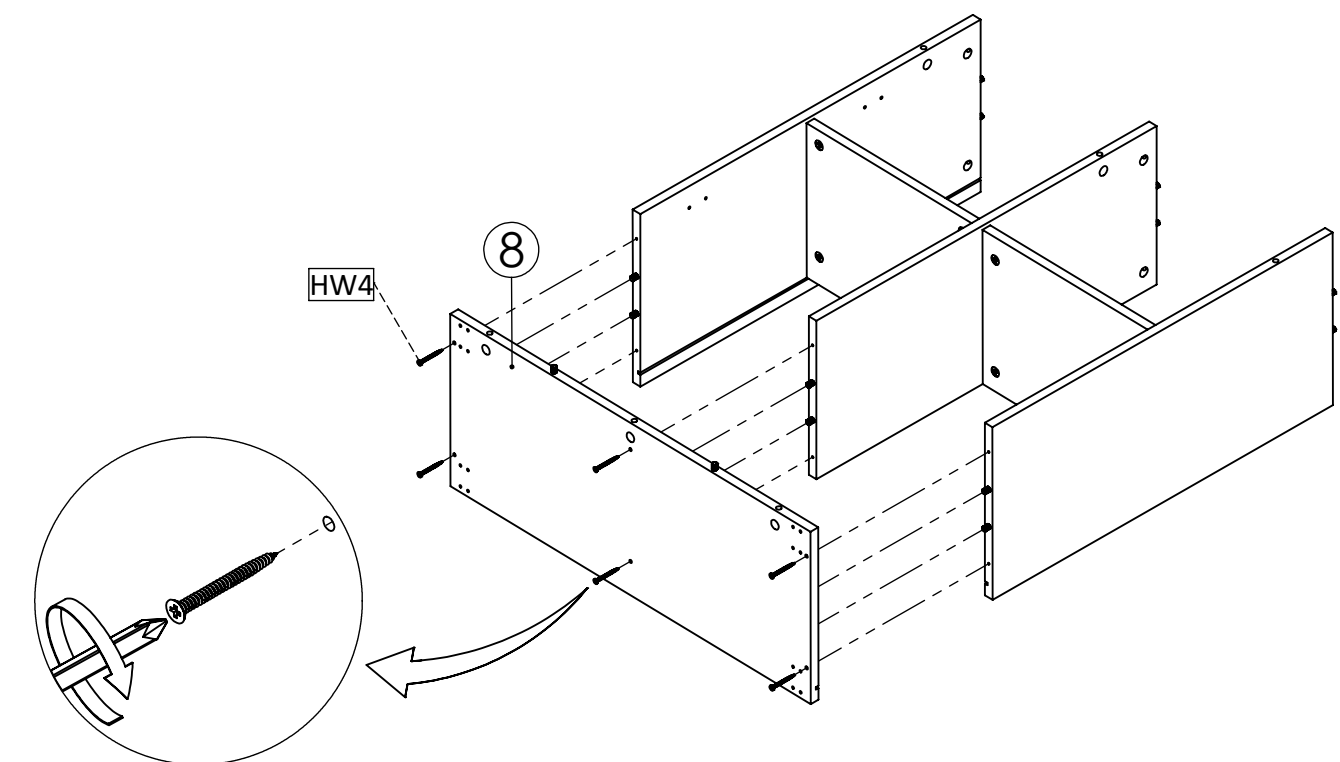


STEP16: Insert Storage Bottom Panel (8) Secure with Screw M6x50mm (HW4) And Tighten It Using Screwdriver.

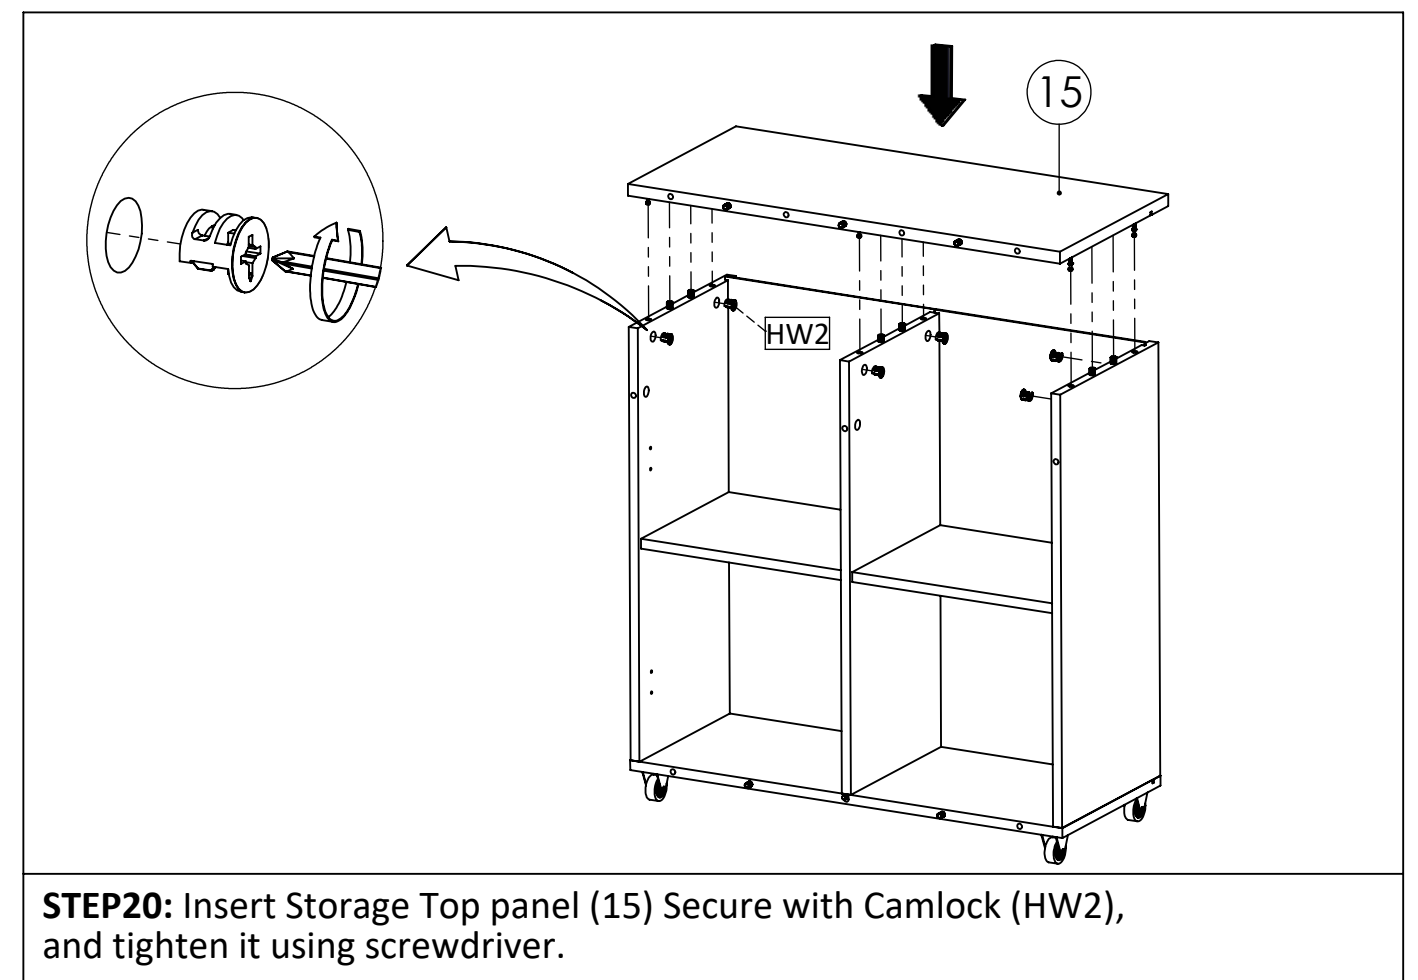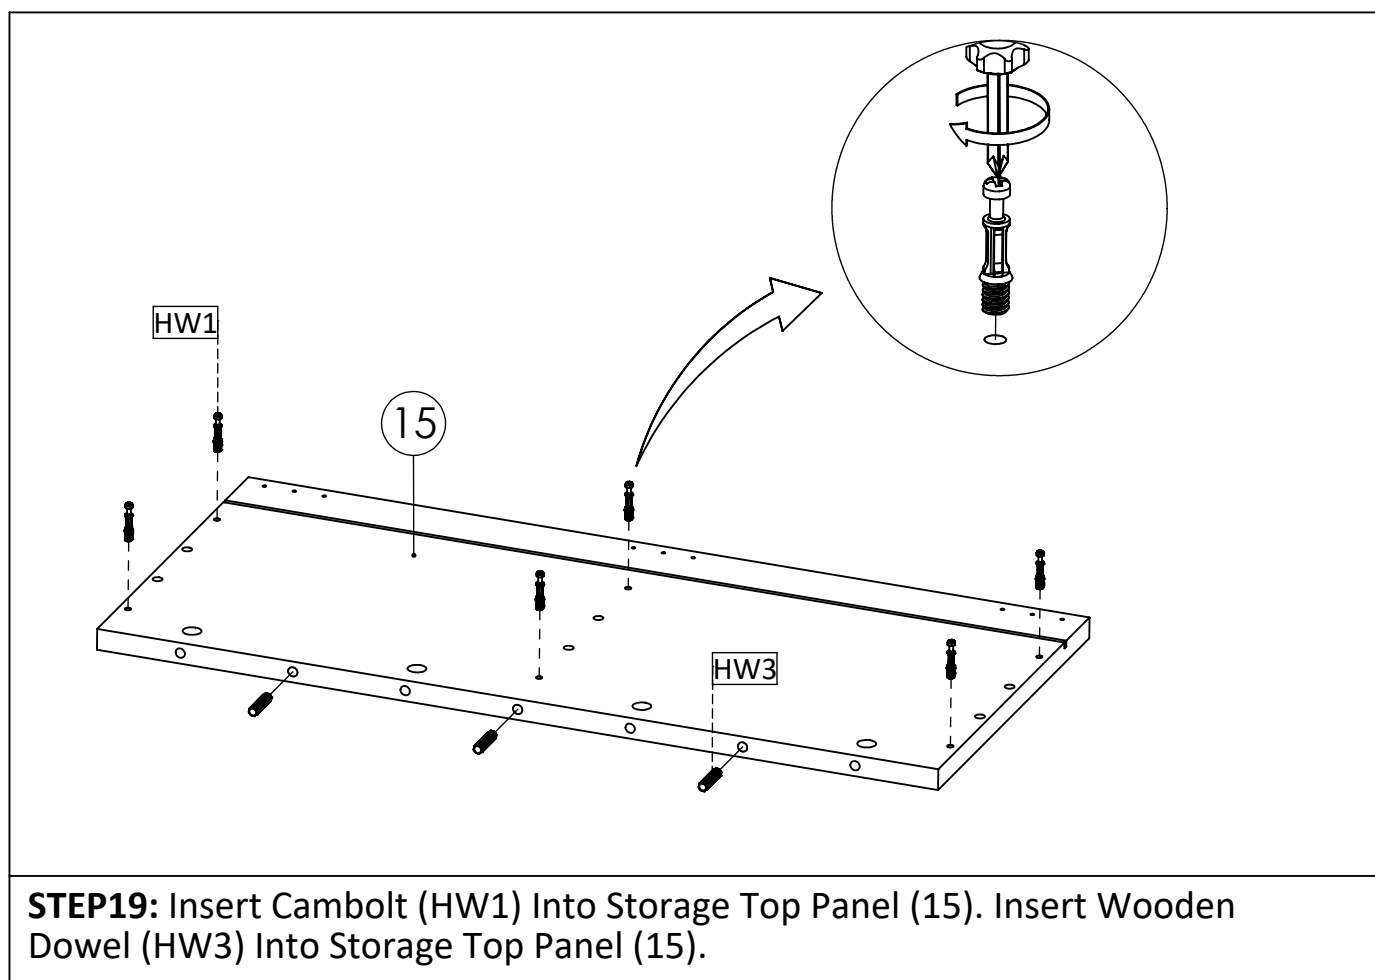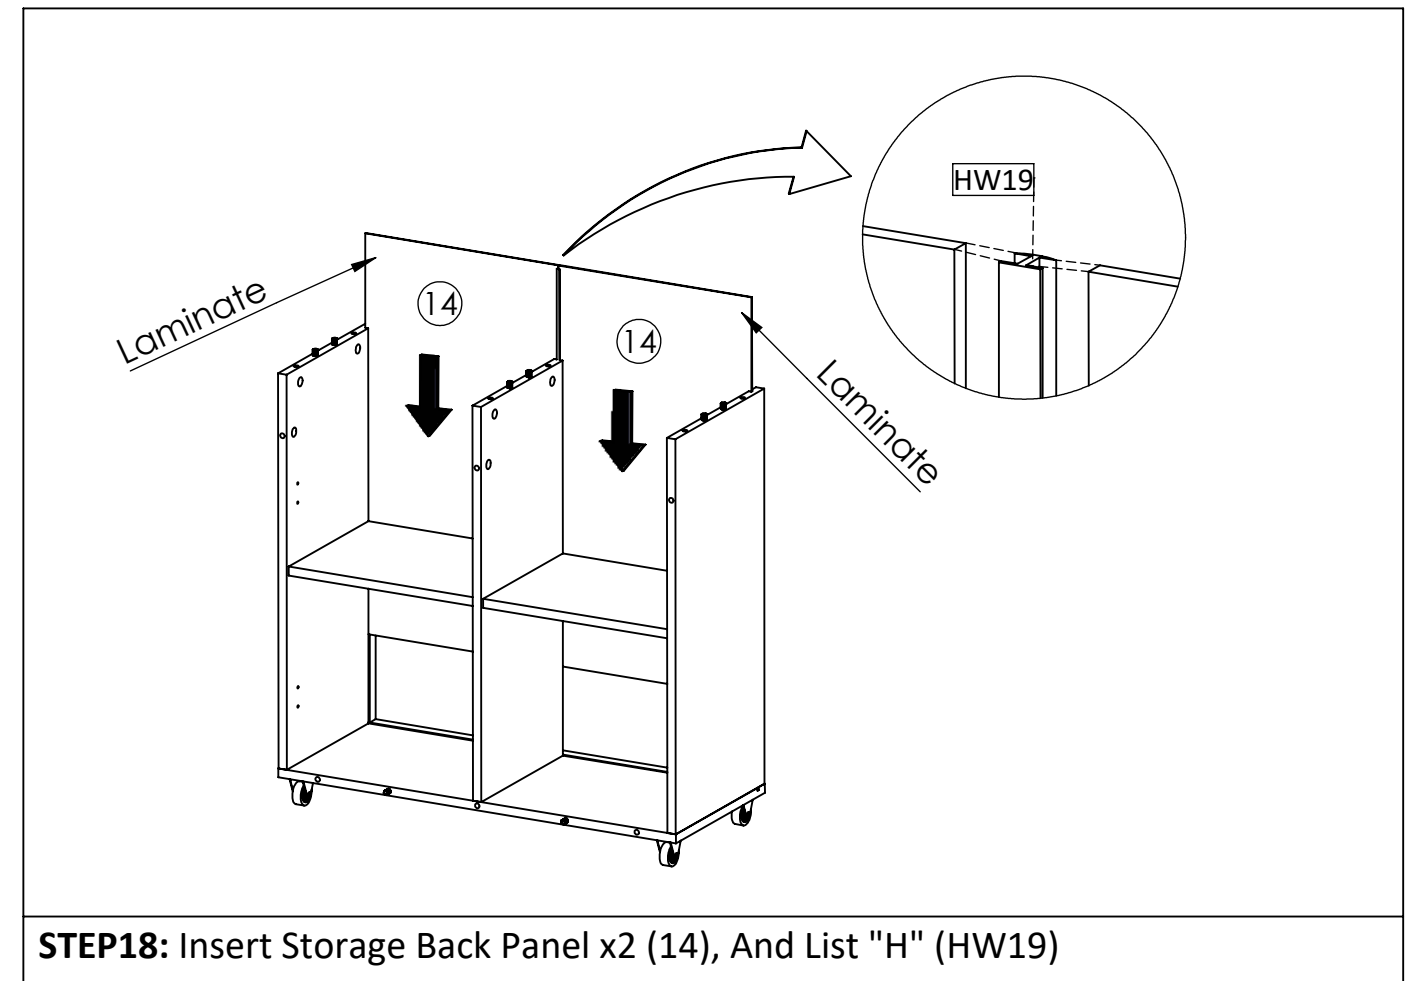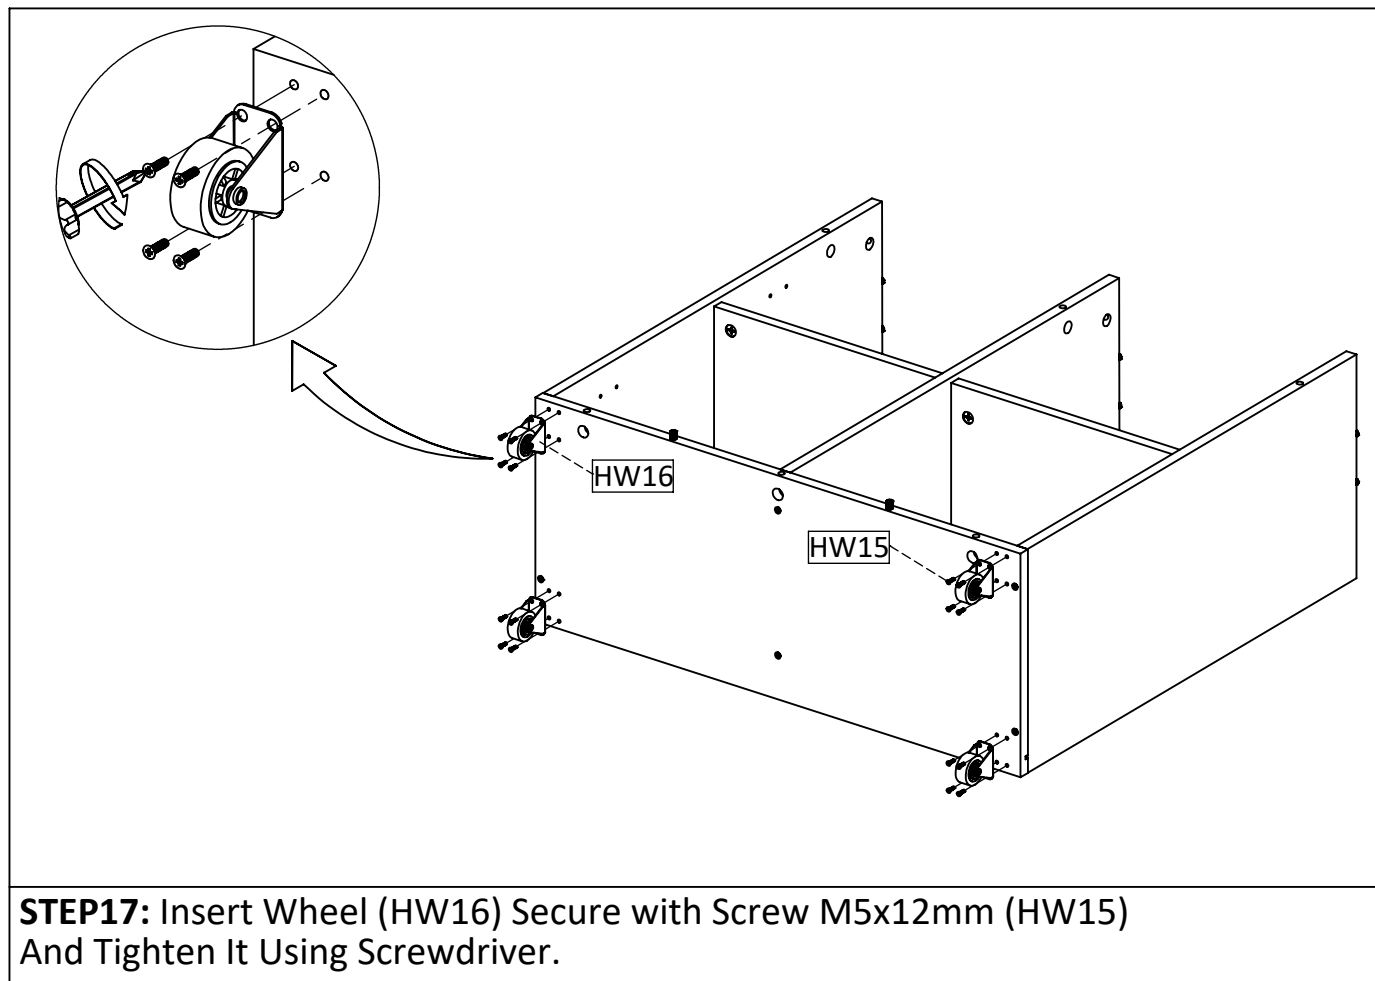


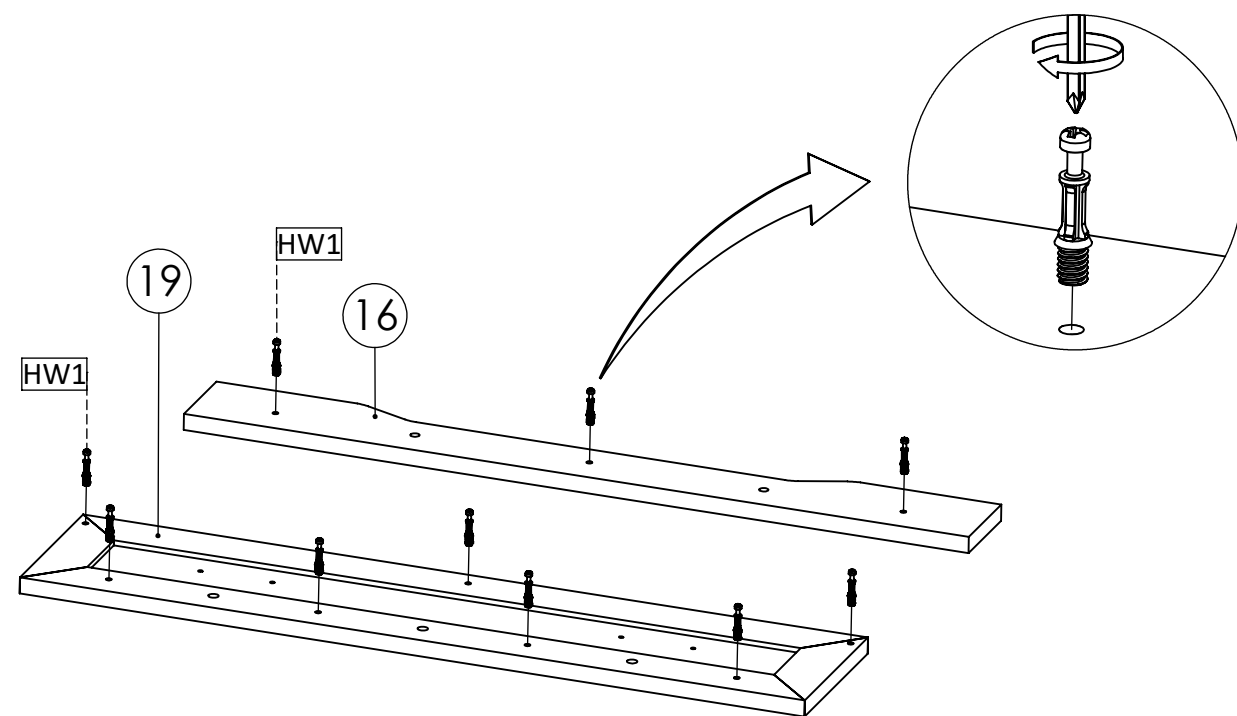


STEP21: Insert Cambolt (HW1) Into Storage front plint (16) And Fixed Front Drawer (19)

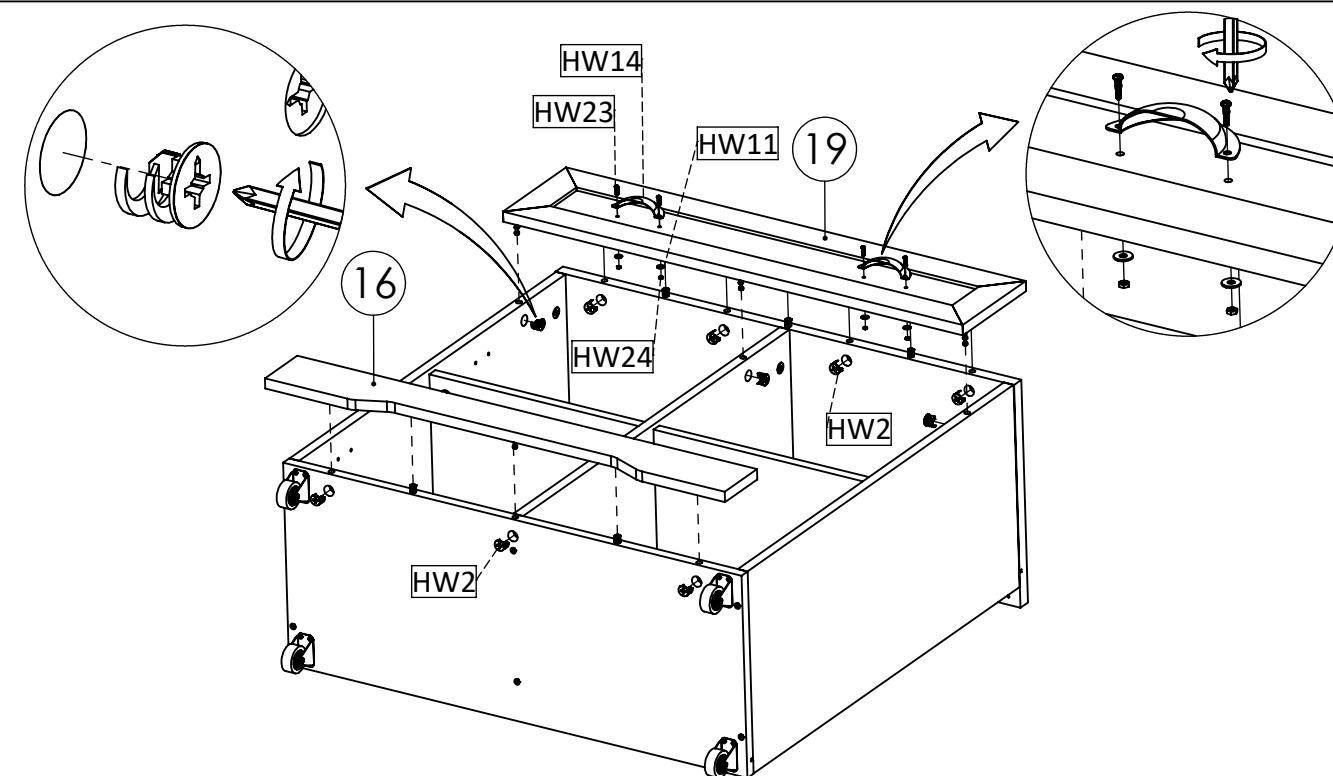


STEP22: Insert Box front plint (16) And Fixed Front Drawer (19) Secure with Camlock (HW2) And Tighten It Using Screwdriver. Insert Handle Catam (HW14) Secure with Screw M3x12 (HW23), Washer (HW11), Nut (HW24) And Tighten It Using Screwdriver.

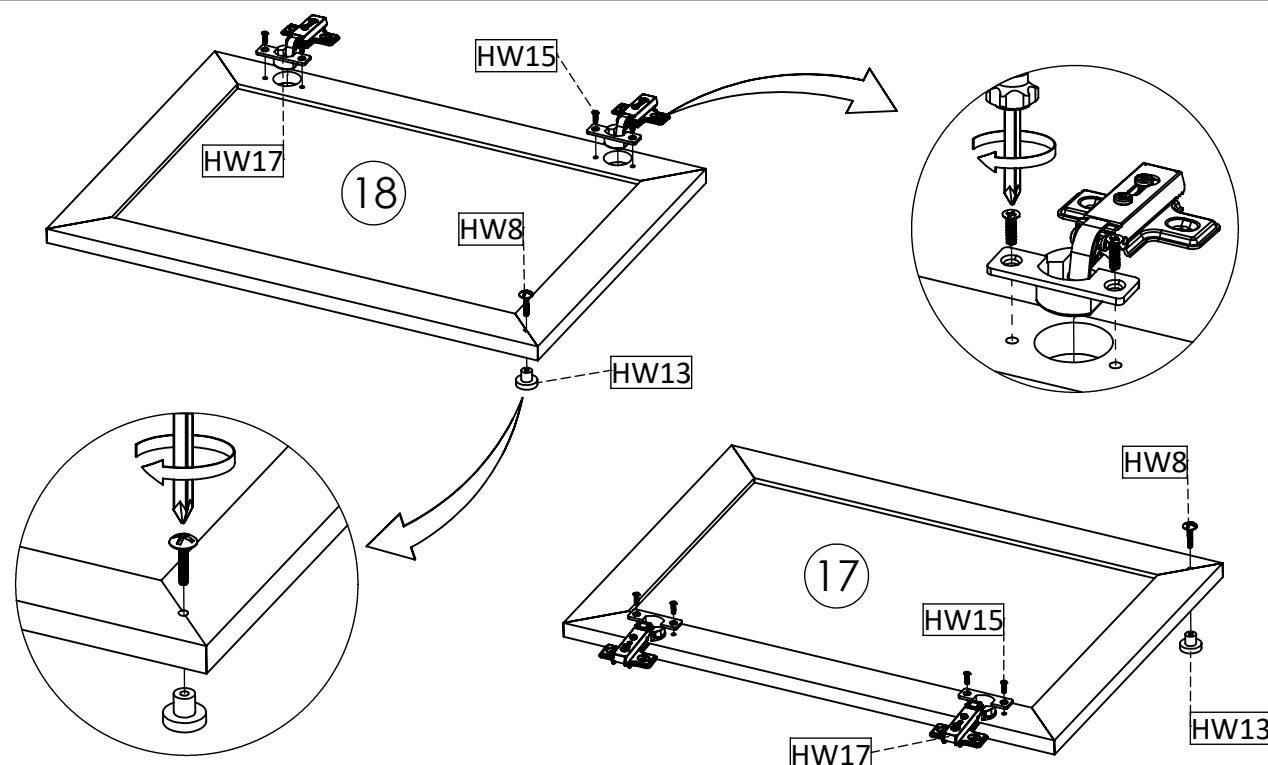


STEP23: Attach Straight Hinge (HW17) Into Left door (17) And Right door (18) Secure with Screw M5x12MM (HW15) And Tighten It Using Screwdriver. Insert Handle Knob (HW13) Secure with Screw M4x22 (HW8) And Tighten It Using Screwdriver.

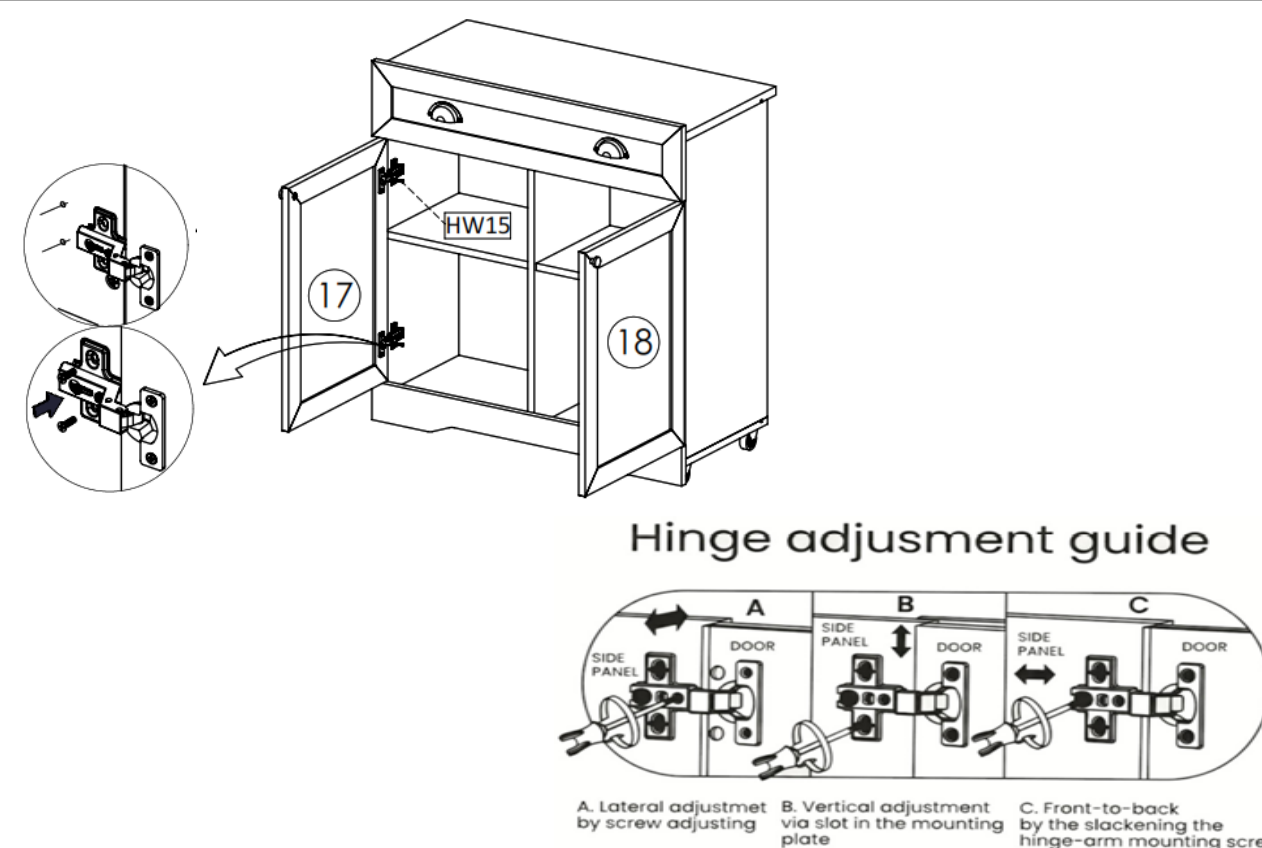


STEP24: Install the Straight Hinges (HW17) Into left doors (17) And right door (18) as shown. secure each hinges using M5X12 mm screws (HW15)

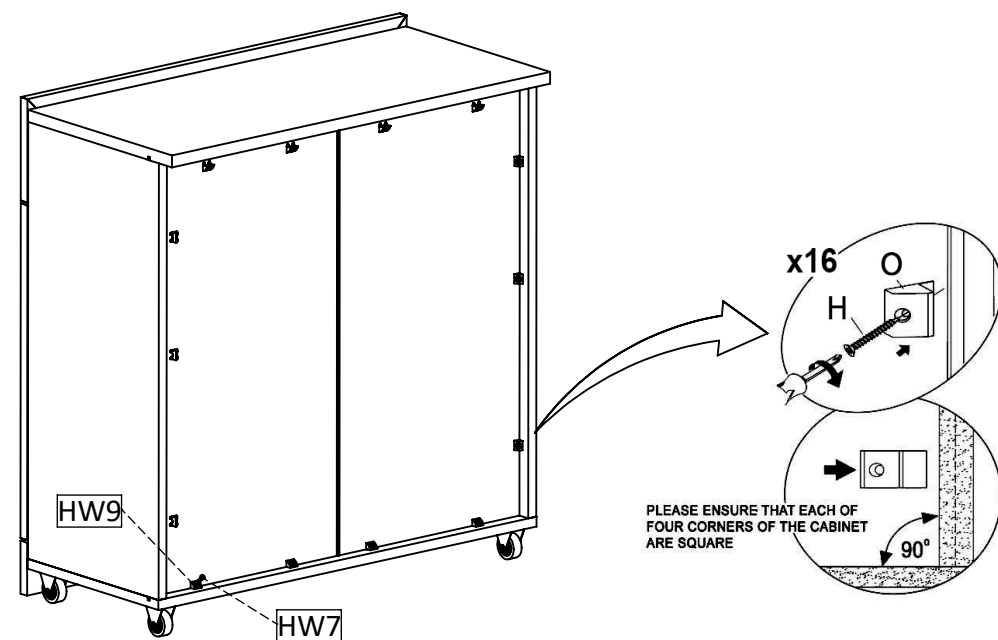


STEP25: Attach The Plastik Stopper (HW9) to the Storage Back Panel Secure with Screw M4x19 mm (HW7) And Tighten It Using Screwdriver.

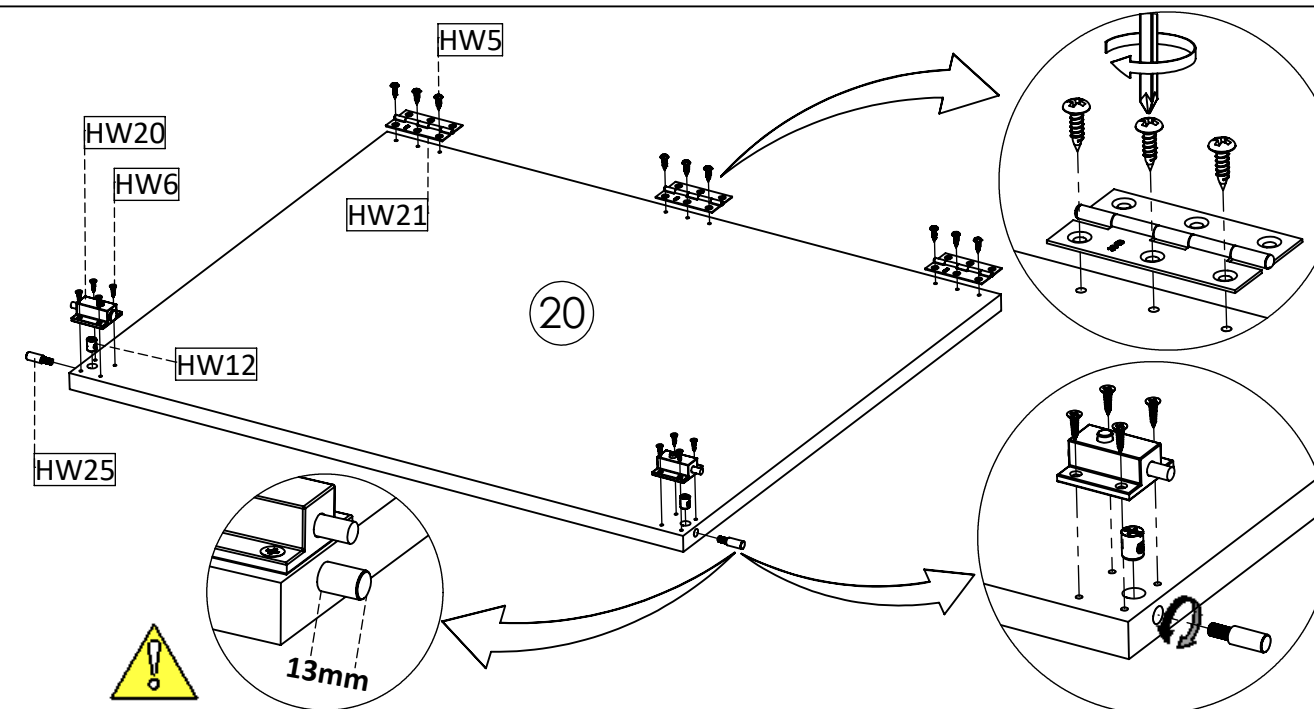

STEP26: Attach Butterfly Hinge (HW21) Secure with Screw M4x15 mm (HW5) And Tighten It Using Screwdriver. Insert Cross Dowel (HW12) Into Table Desk (20) And input Swing Wheel Plate (HW25) Attach Grender (HW20) Secure with Screw M6x12 mm (HW6) And Tighten It Using Screwdriver.

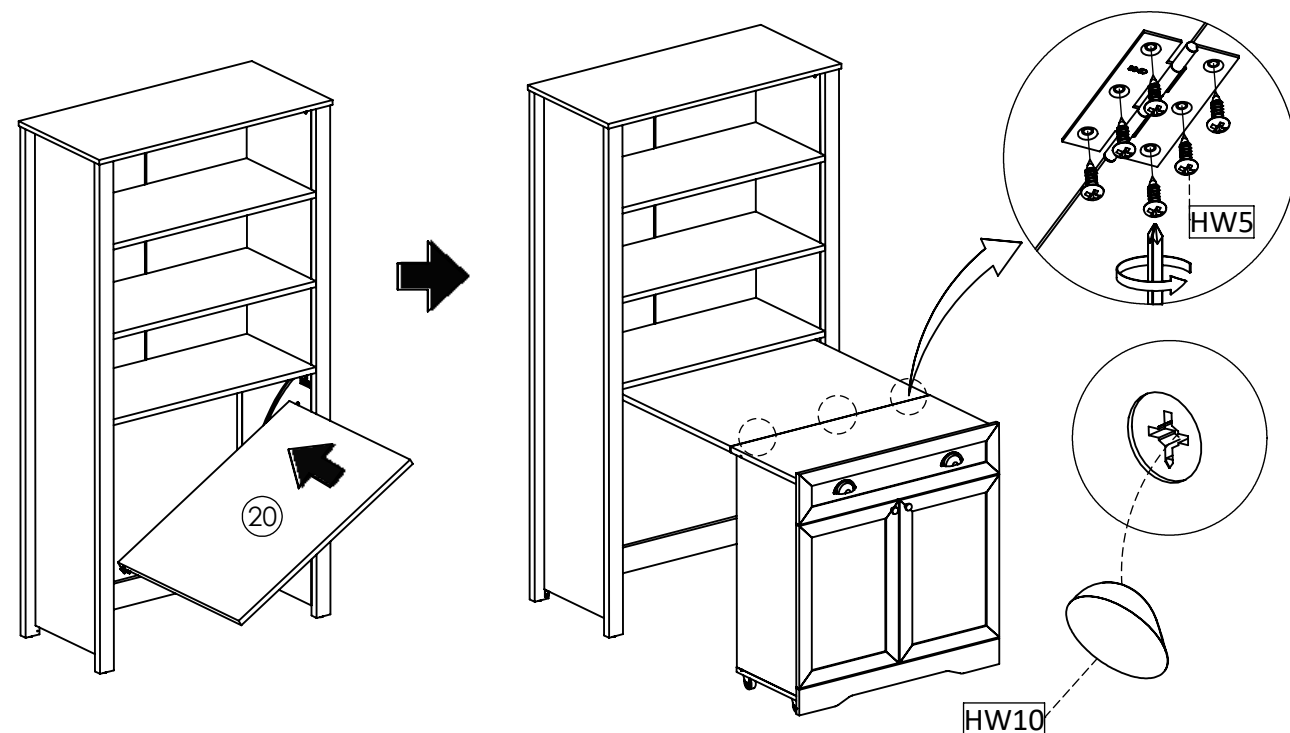


STEP27: Insert Table Desk (20) Into Assembly Continue Uniting Boxes That Have Been Assembled And Secure with Screw M4x15 mm (HW5) Continue to attach the cover cap sticker (HW10) to the panel that has lamination.

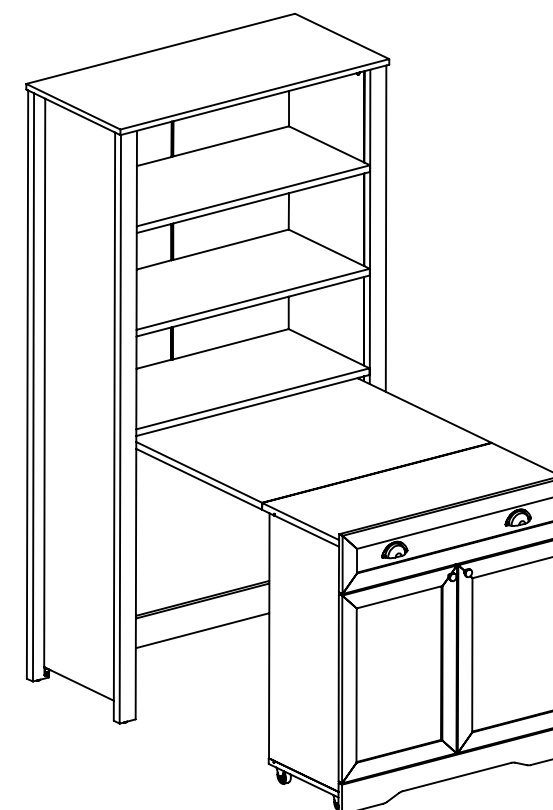

STEP28: Assembly Is Complete

WARNING


- Ensure the cabinet is fully inserted after using the desk.
- Verify the latch is securely locked before using the desk.

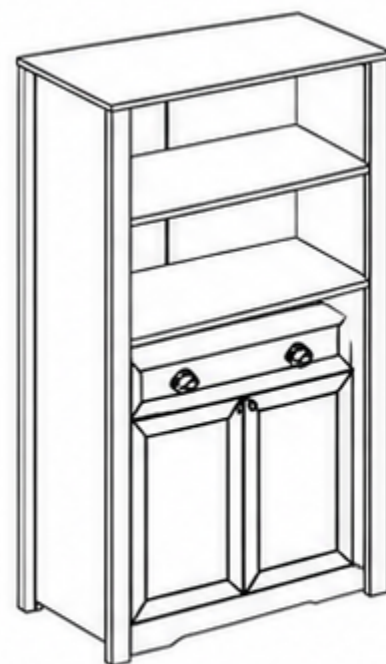


**CABINET CLOSED
(INSERTED)**



Pull the cabinet
out to use the
secret desk.

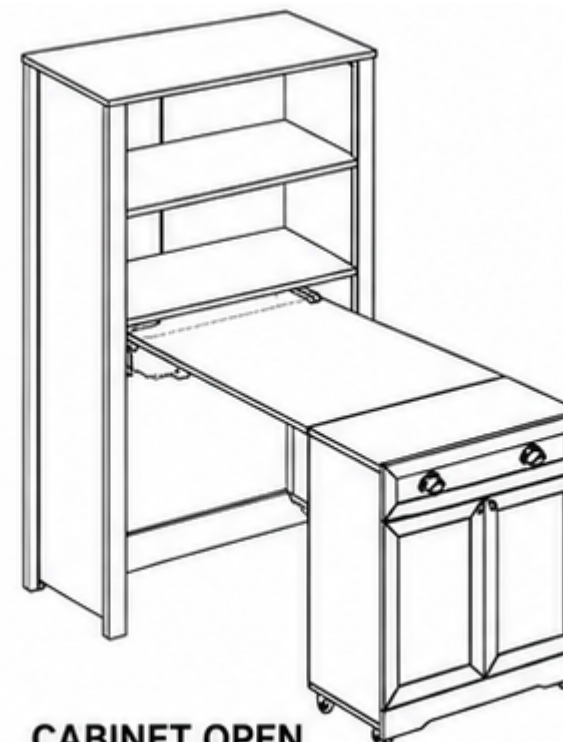

**CABINET OPEN
(DESK IN USE)**

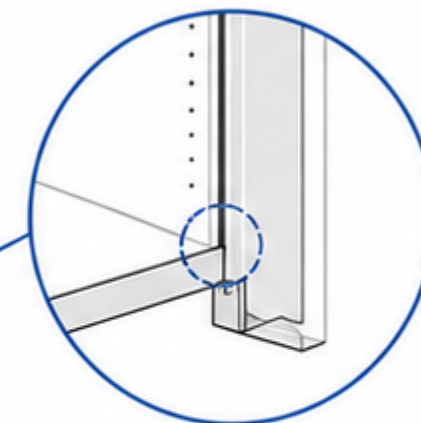

IMPORTANT:

Ensure the cabinet reaches
the stop position when
fully inserted.

HOW TO OPEN THE SECRET DESK

1

PULL OUT



Pull the cabinet outward until
the desk top is fully extended
and locked in place.



2

LOCK


Press the LOCK latch until it
clicks into the locked position.

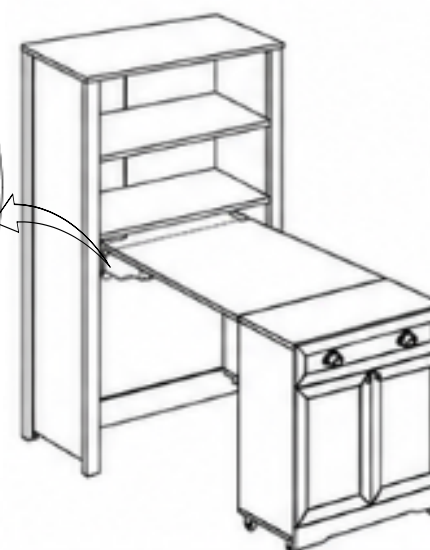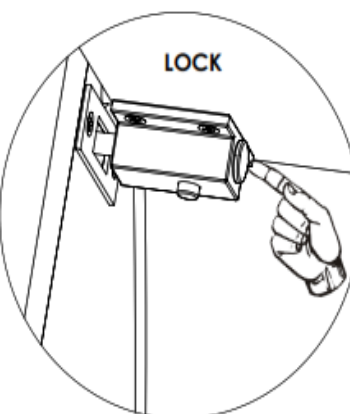


3

CHECK


Ensure the desk top is
stable and ready to use.

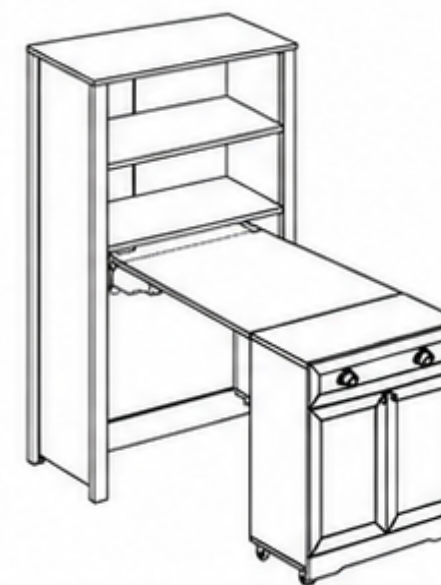


After use, push the cabinet
fully back into the bookcase
until it stop .

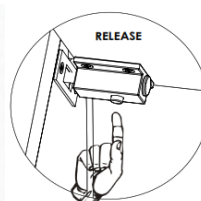



press the latch (RELEASE)

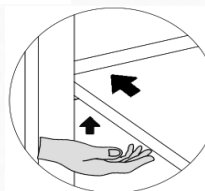

Lift the front slightly, to align
the guide rails.

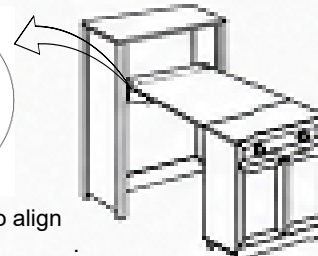

Push the cabinet completely
inward until it is fully seated.

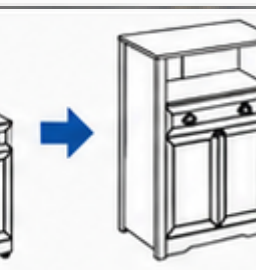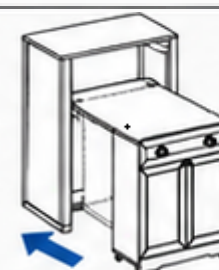




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

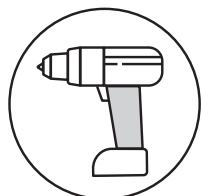


REQUIRED TOOL
8MM / 5/16" DRILL BIT

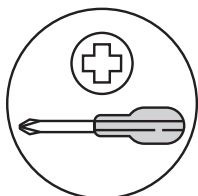

REQUIRED TOOL




Hardware (HW28/HW29) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.


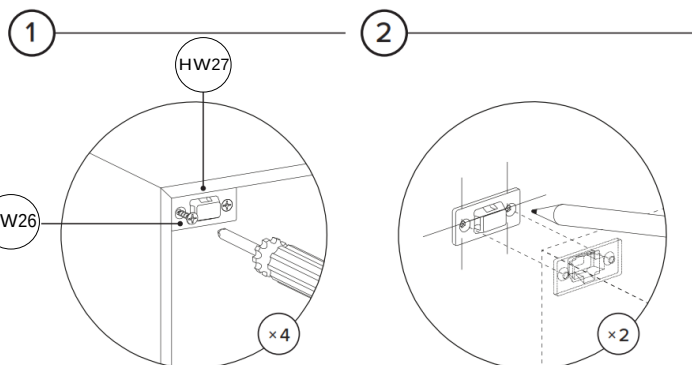


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.

Mark on wall where second pair of brackets should be placed.

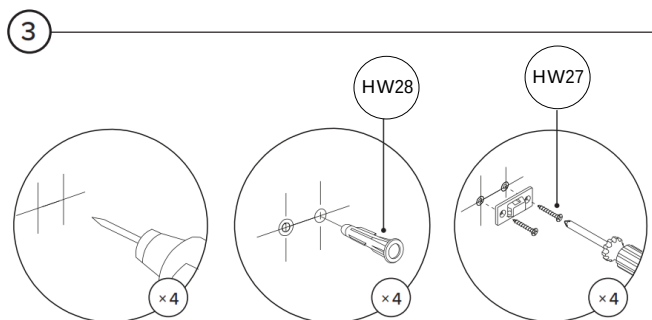

Drill holes in wall using 8mm / 5/16" drill bit.

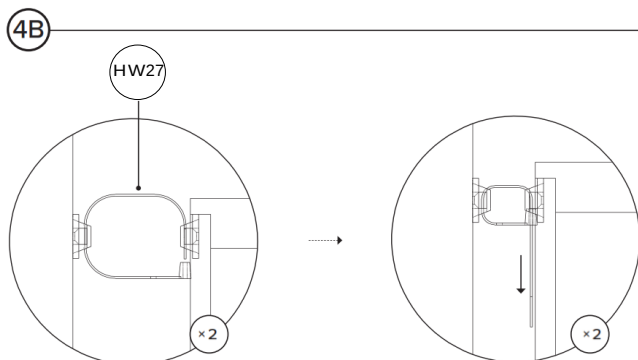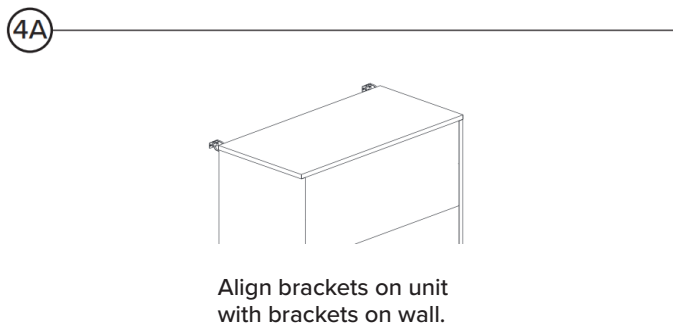

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW27	BRACKET 	4
HW26	M6 × 15MM SCREW 	4
HW28	M8 × 35MM PLUG 	4
HW29	M10 × 50MM SCREW 	4
HW27	STRAP 	2