


RCC5FDRDS


Assembly Instructions

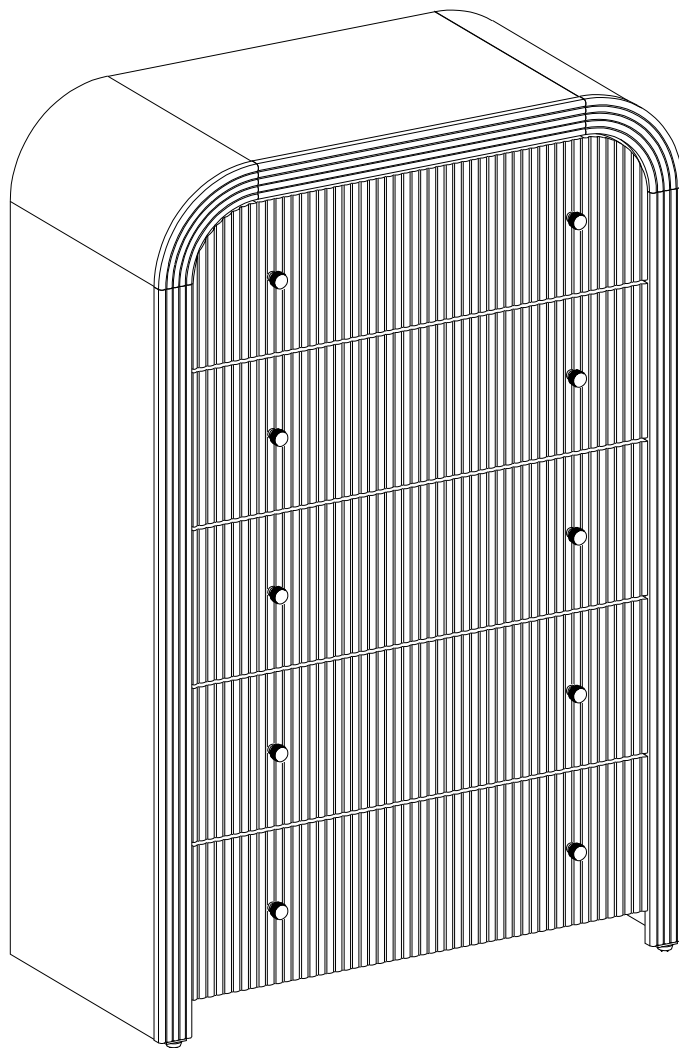


Date 2025-06-24 Rev.01-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

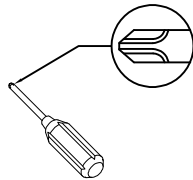

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

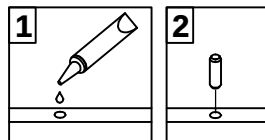


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

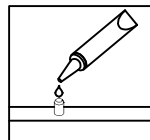


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

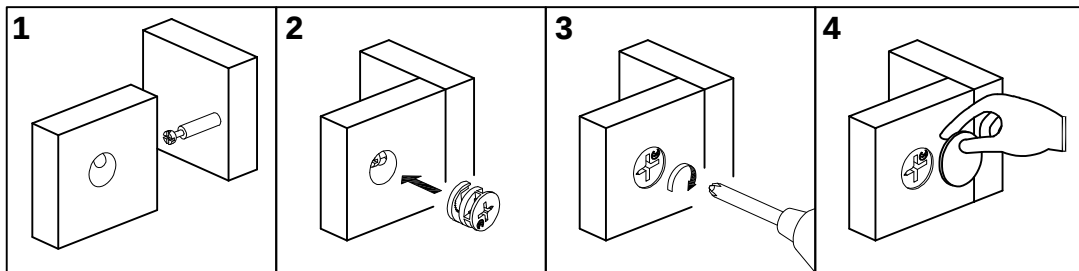





- VII. Power tools should not be used to assemble this product .

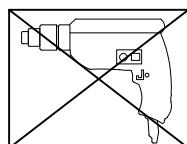


Parts List

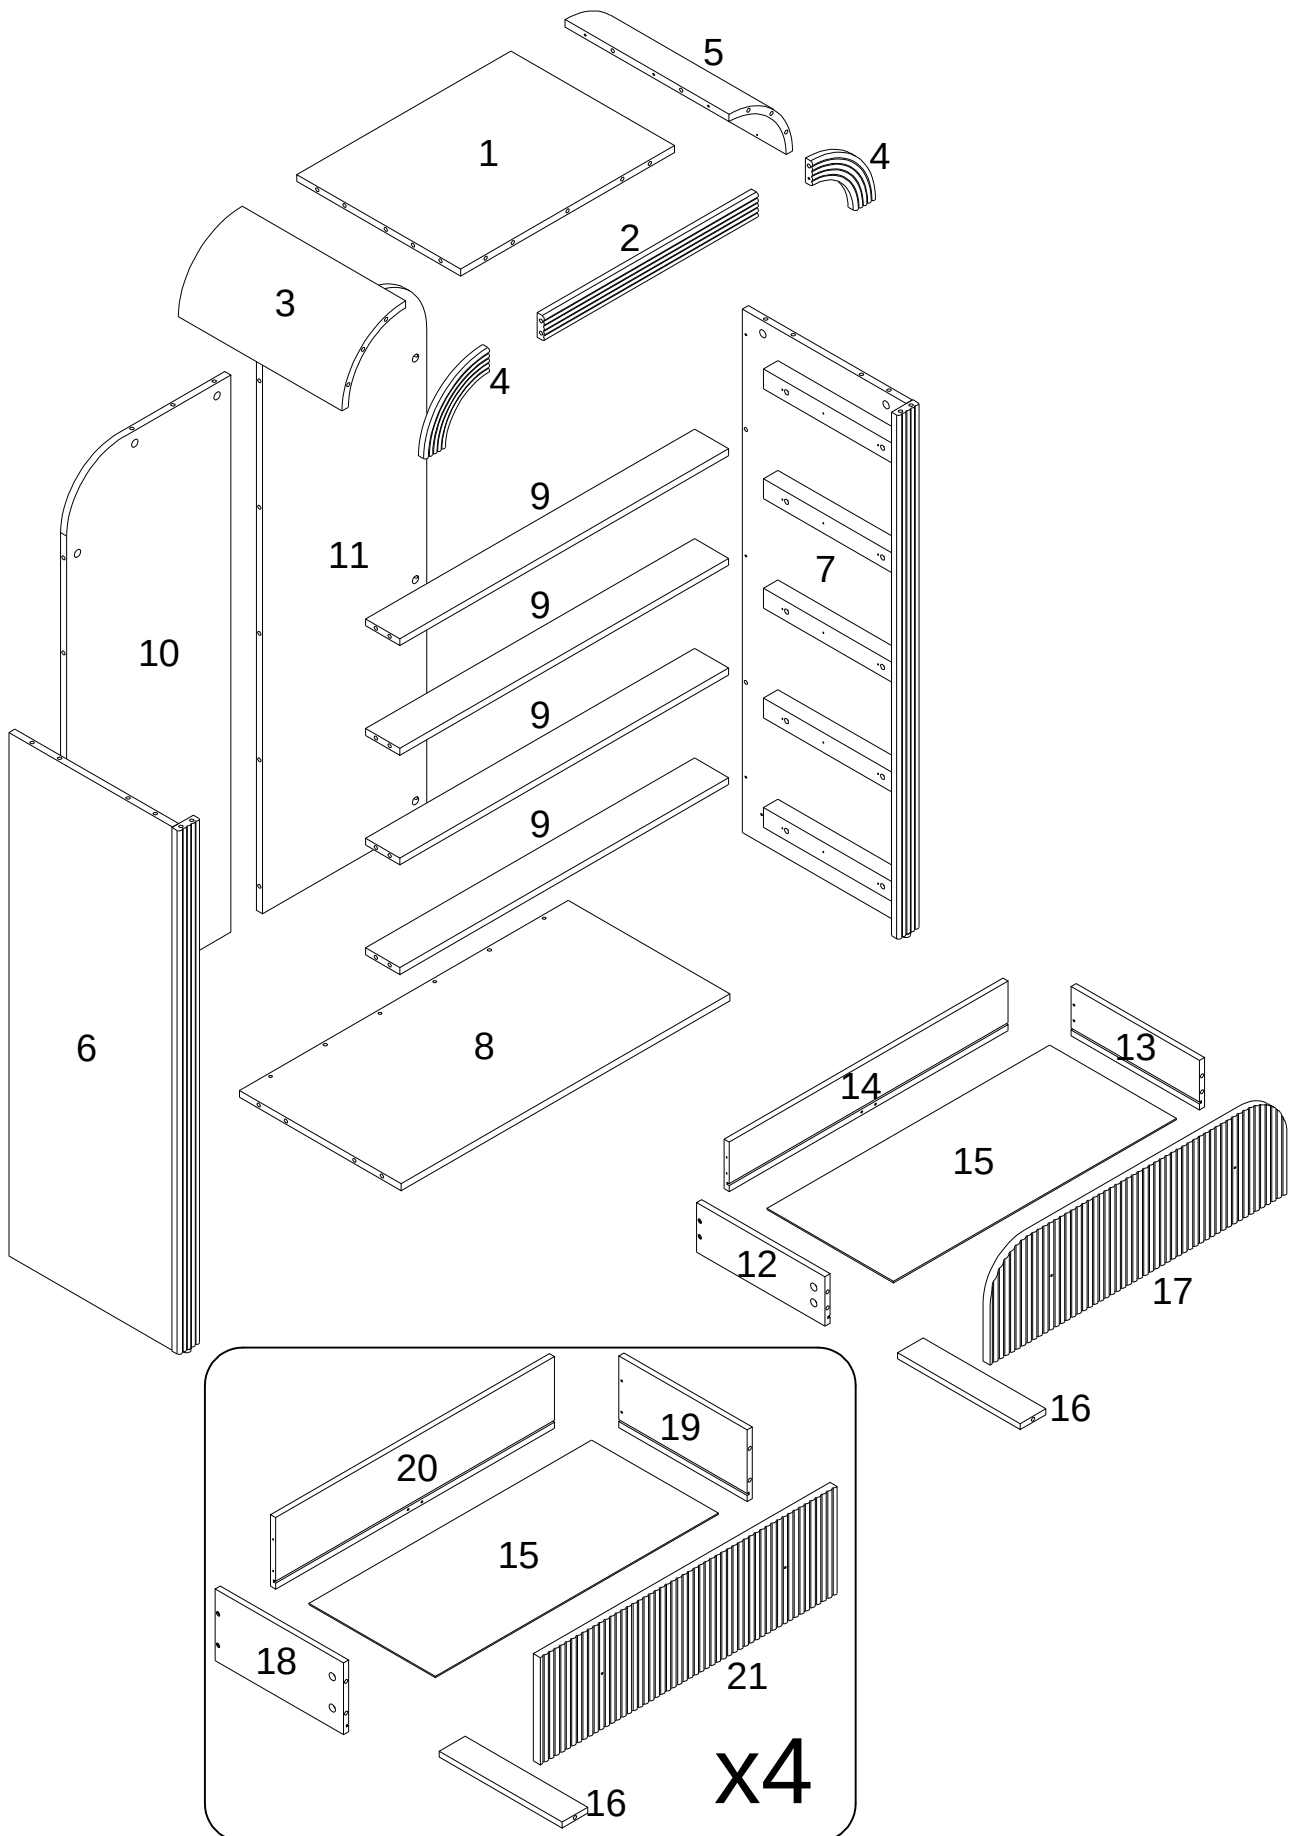

Hardware List


A		Ø8x30mm	Wood Dowel	38 pcs
B		Ø6x35mm	Cam bolt	66 pcs
C		Ø15x11mm	Large Cam lock	41 pcs
D		Ø30mm	Cam cover	74 pcs
E			Glue tube	2 pcs
F		Ø15x9mm	Small Cam lock	25 pcs
G		Ø18*25mm	Knob	10 pcs
H			Tipping Restraint Hardware	1 set
I		Ø4*38mm	Screw	30 pcs
J		Ø4*25mm	Bolt	10 pcs
K			Metal plate	6 pcs
L		Ø3.5x12mm	Screw	60 pcs
M		12"	Left Glide Track	5 pcs
N		12"	Left Glide Runner	5 pcs
O		12"	Right Glide Track	5 pcs
P		12"	Right Glide Runner	5 pcs
Q		Ø6x50mm	Screw	4 pcs
R		M 4	Allen Wrench	1 pc

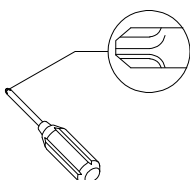

Philips head screwdriver required for assembly
(not included)


Hardware List

S		Ø3.5x12mm	Screw	12 pcs
T		Ø8x40mm	Wood Dowel	5 pcs

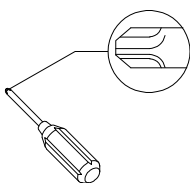


Philips head screwdriver required for assembly
(not included)


Step 1

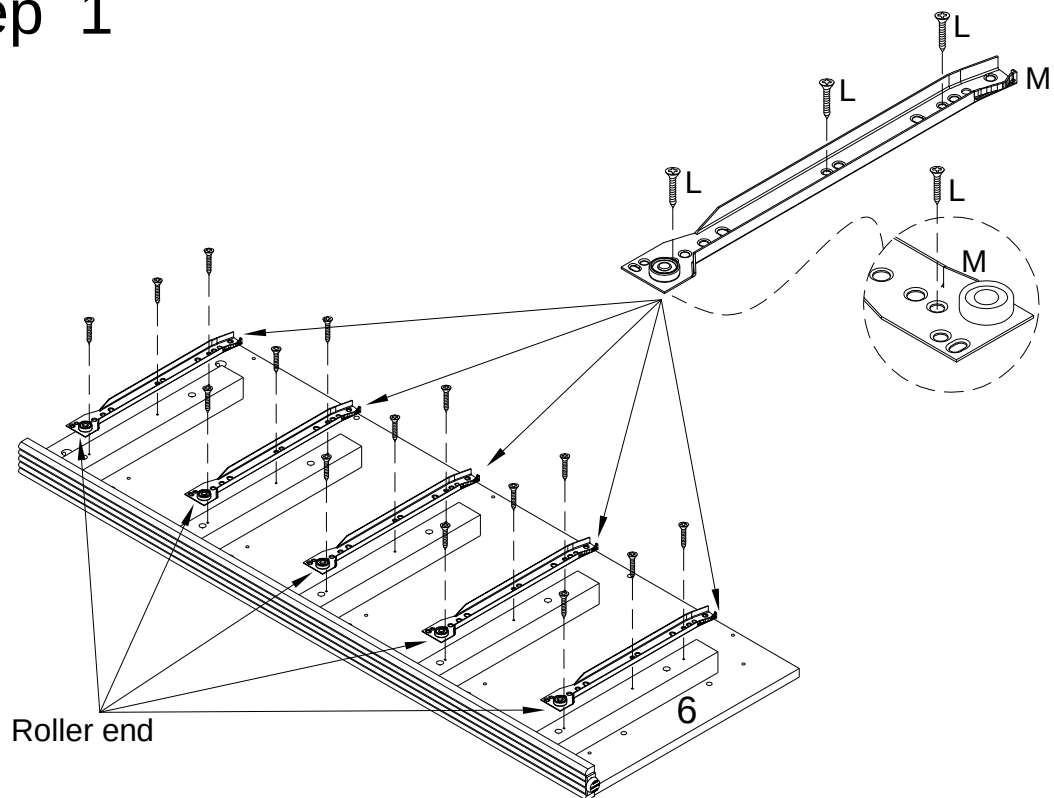


Step 2

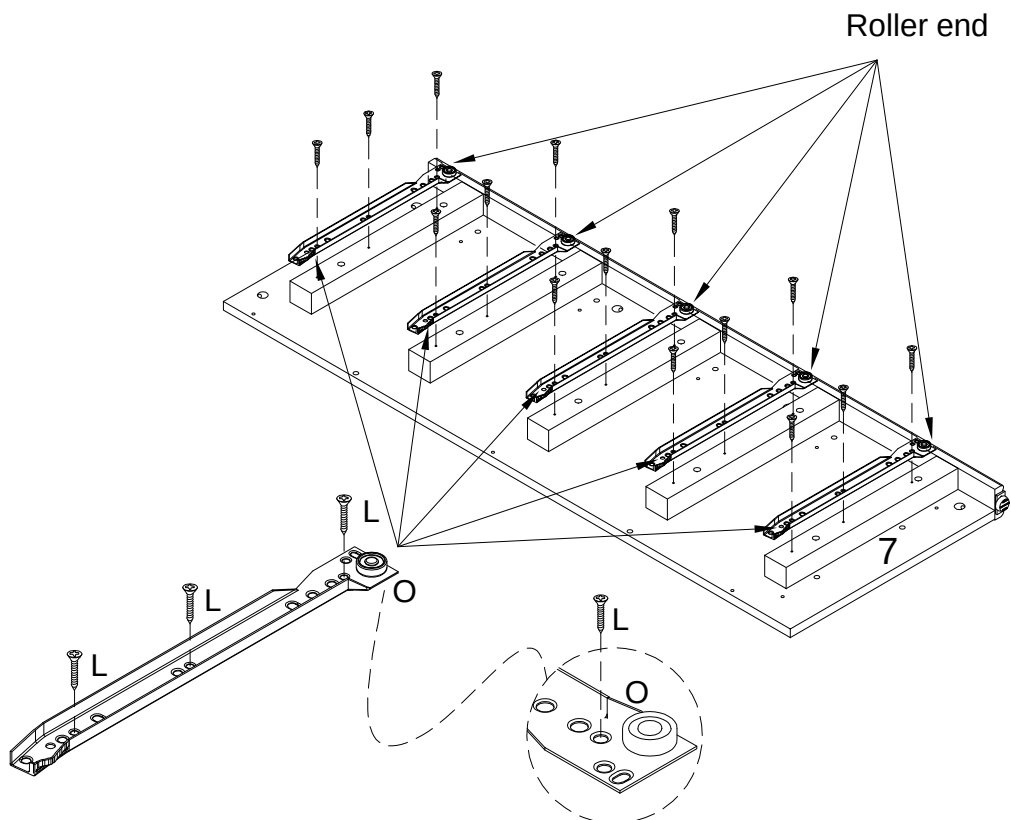


Step 3

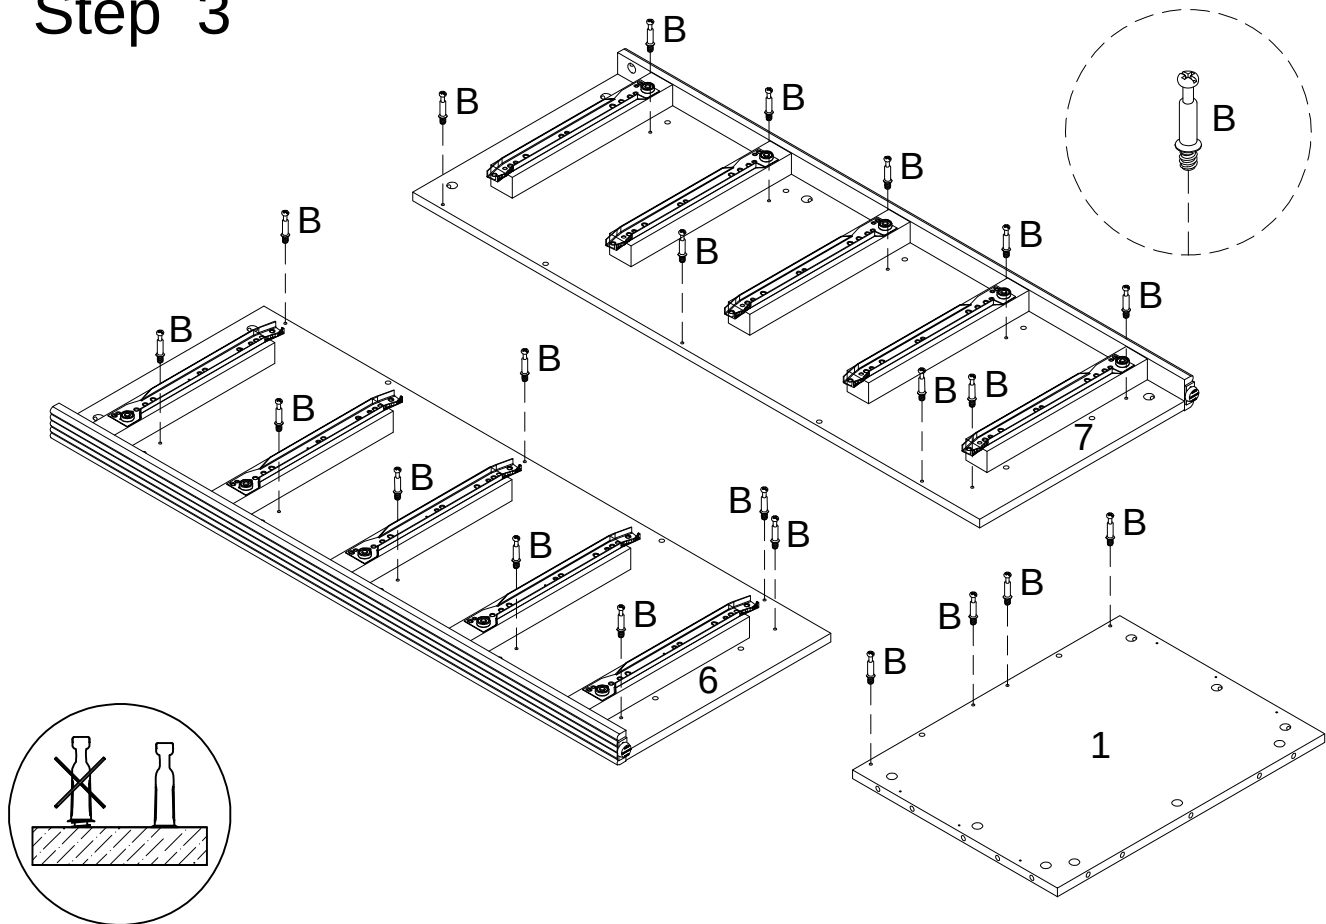


Step 4

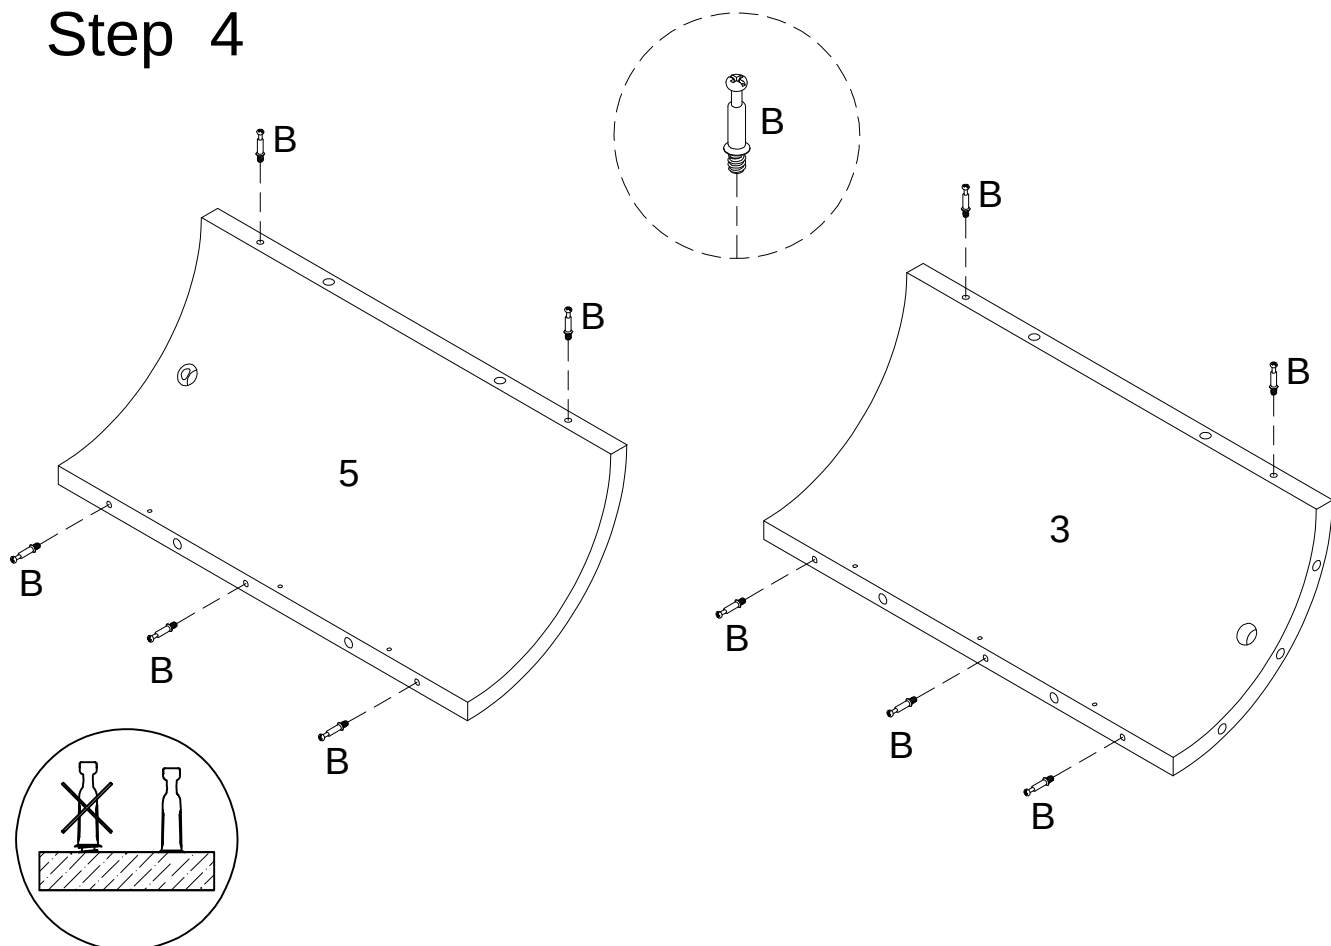


Step 5

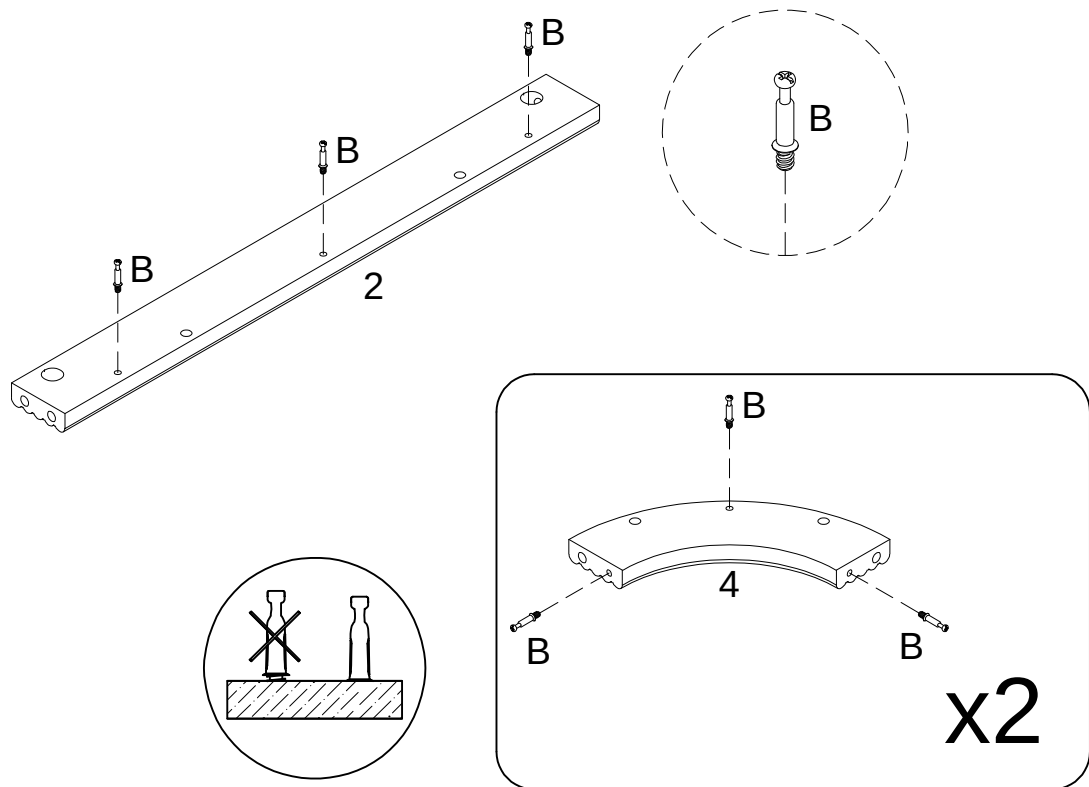


Step 6

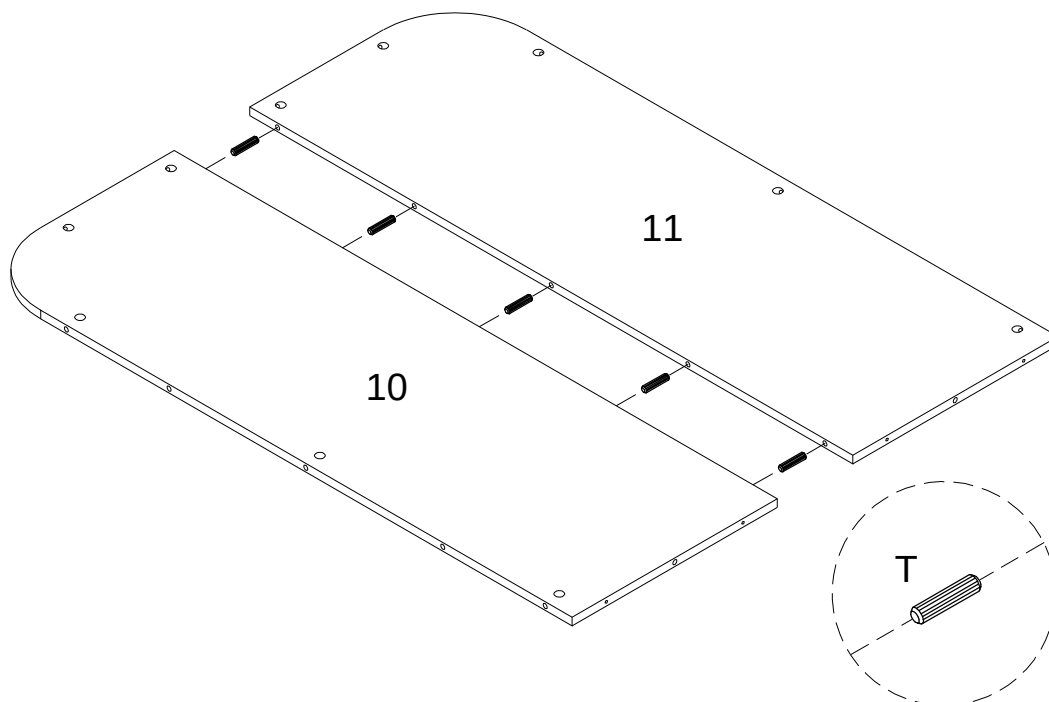


Step 7

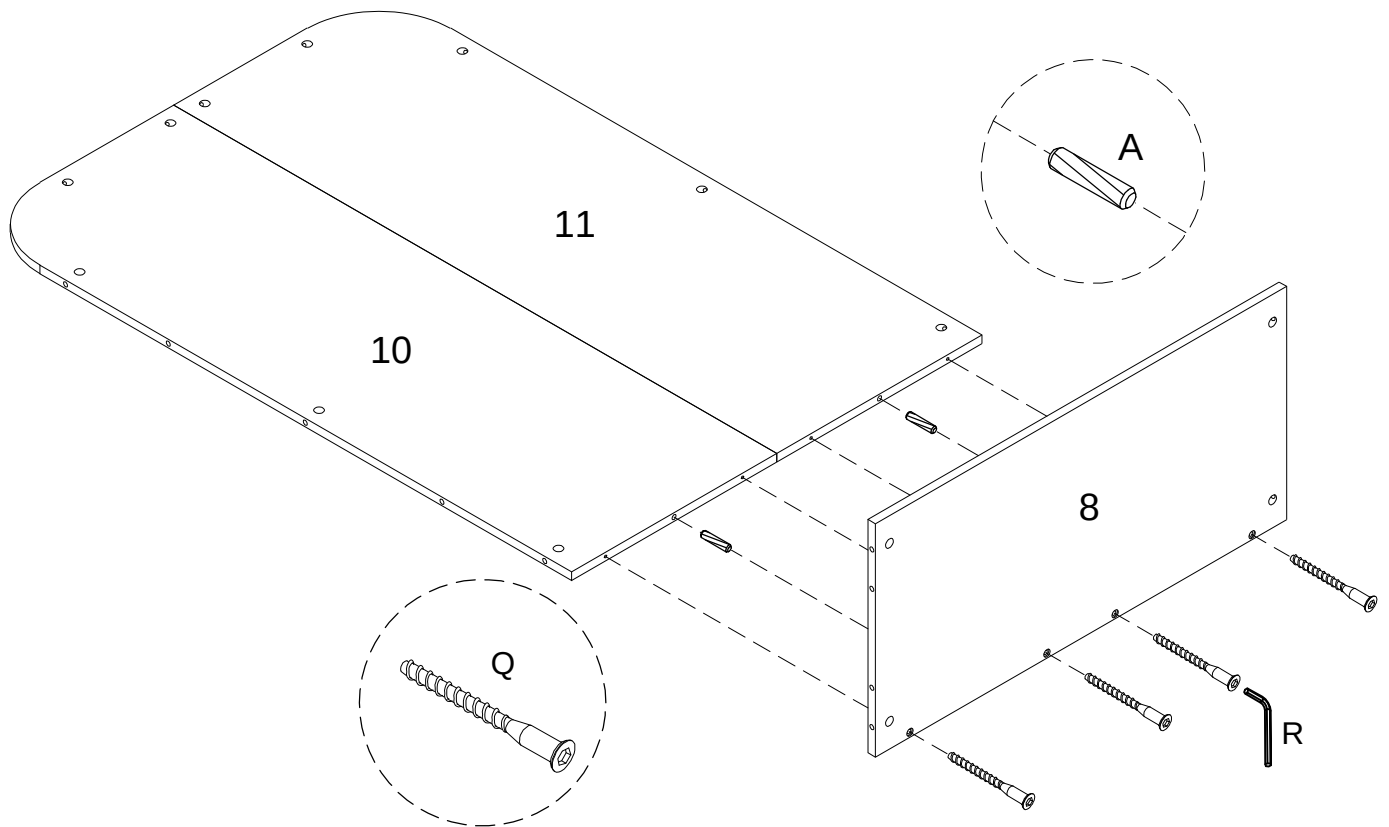


Step 8

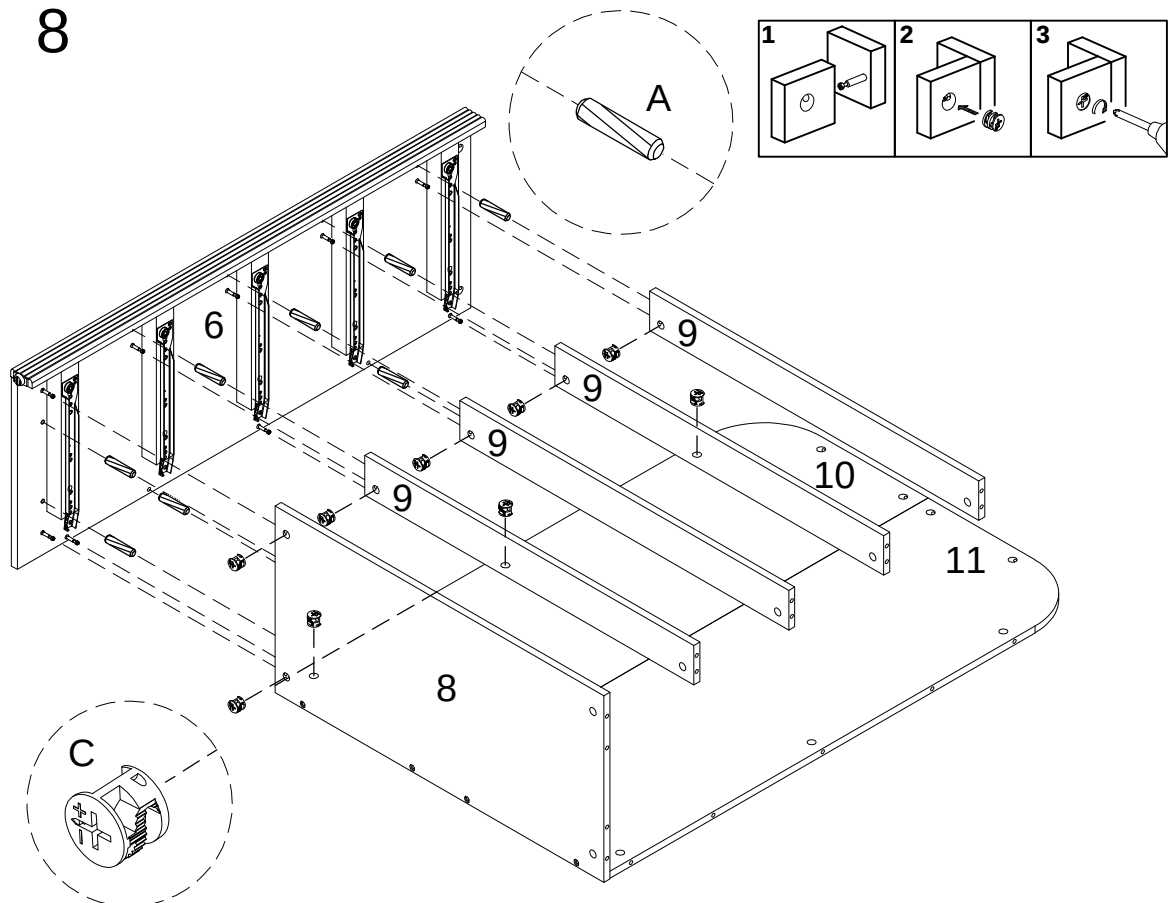



Step 9

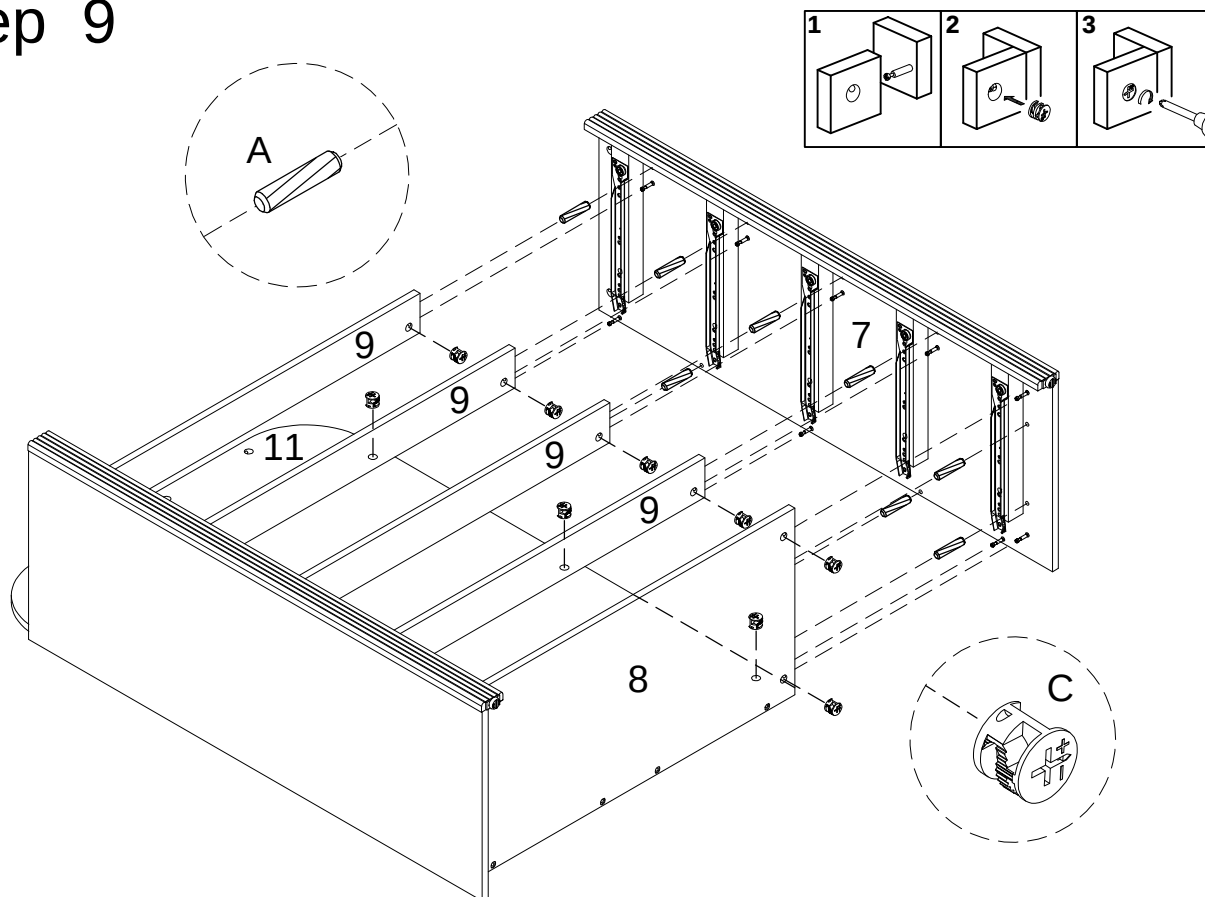


Step 10

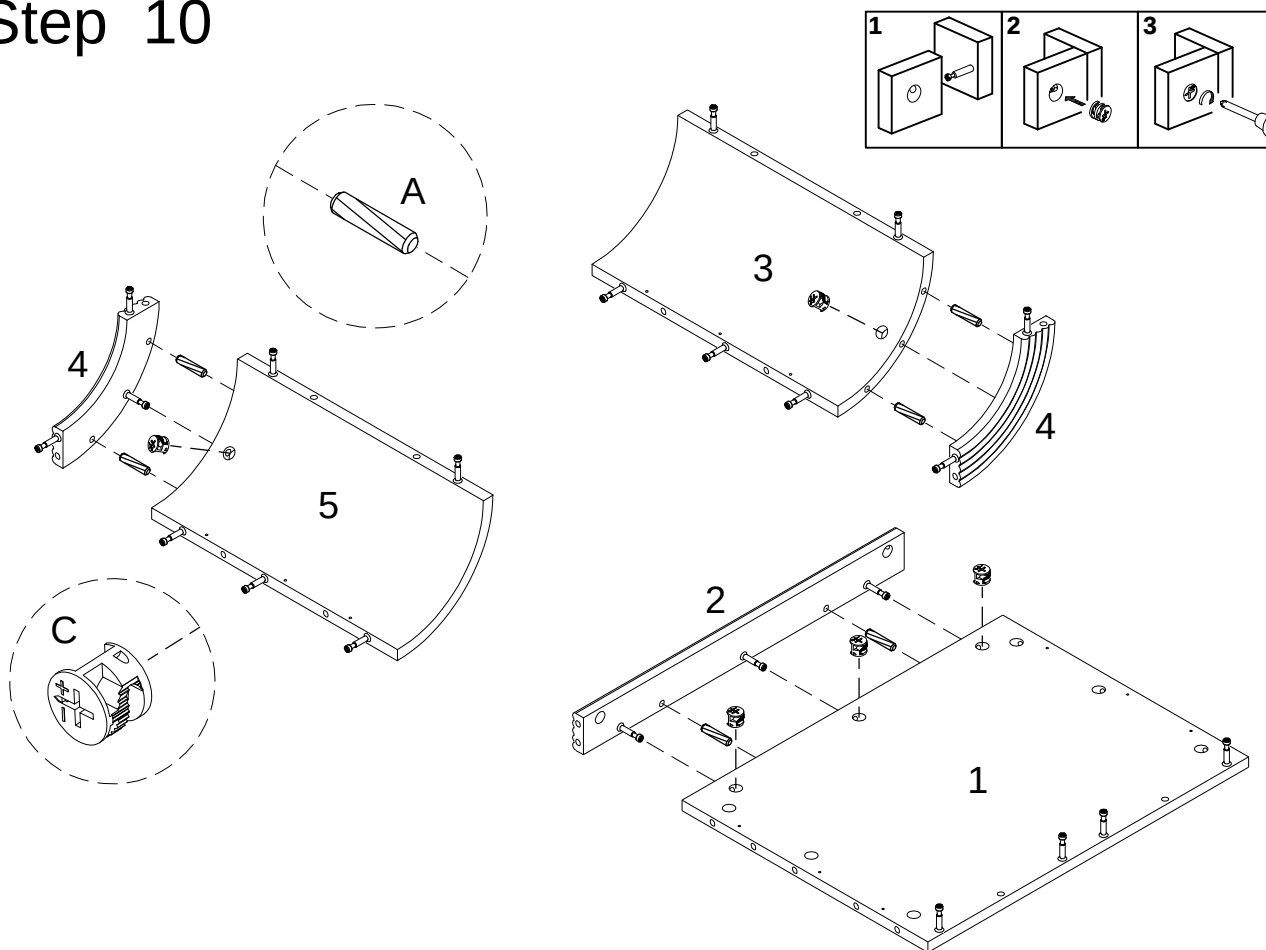


Step 11

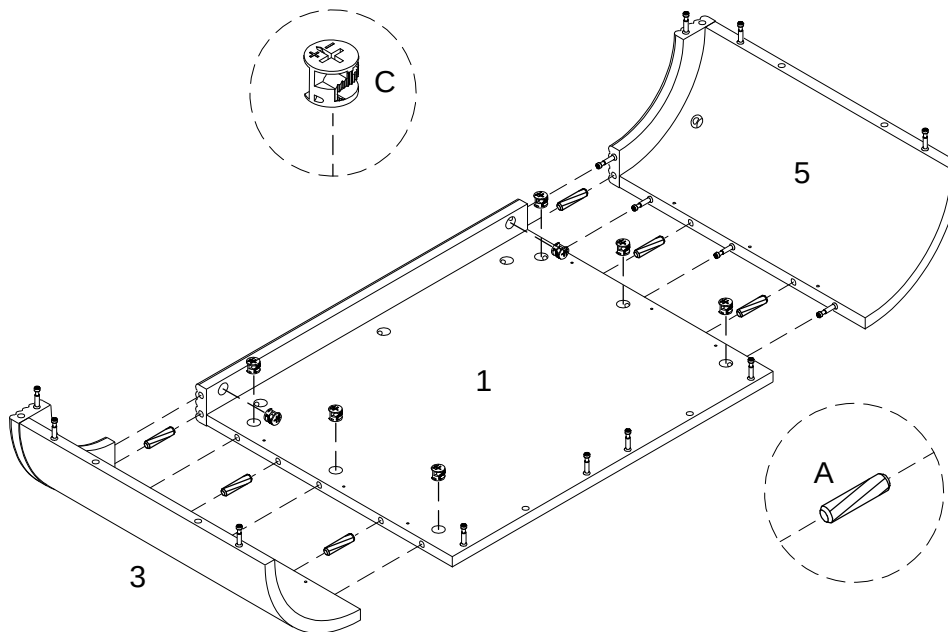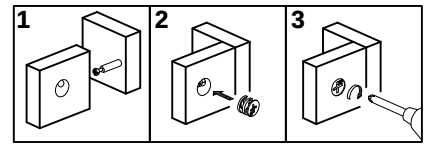


Step 12

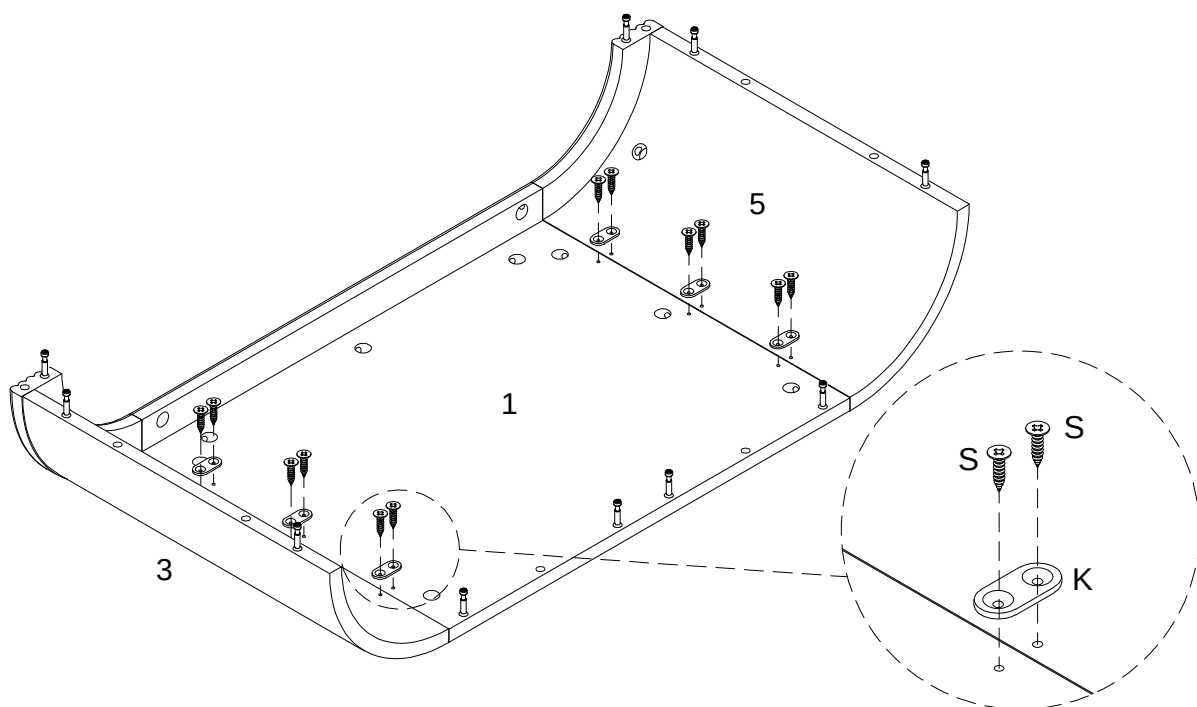


Step 13

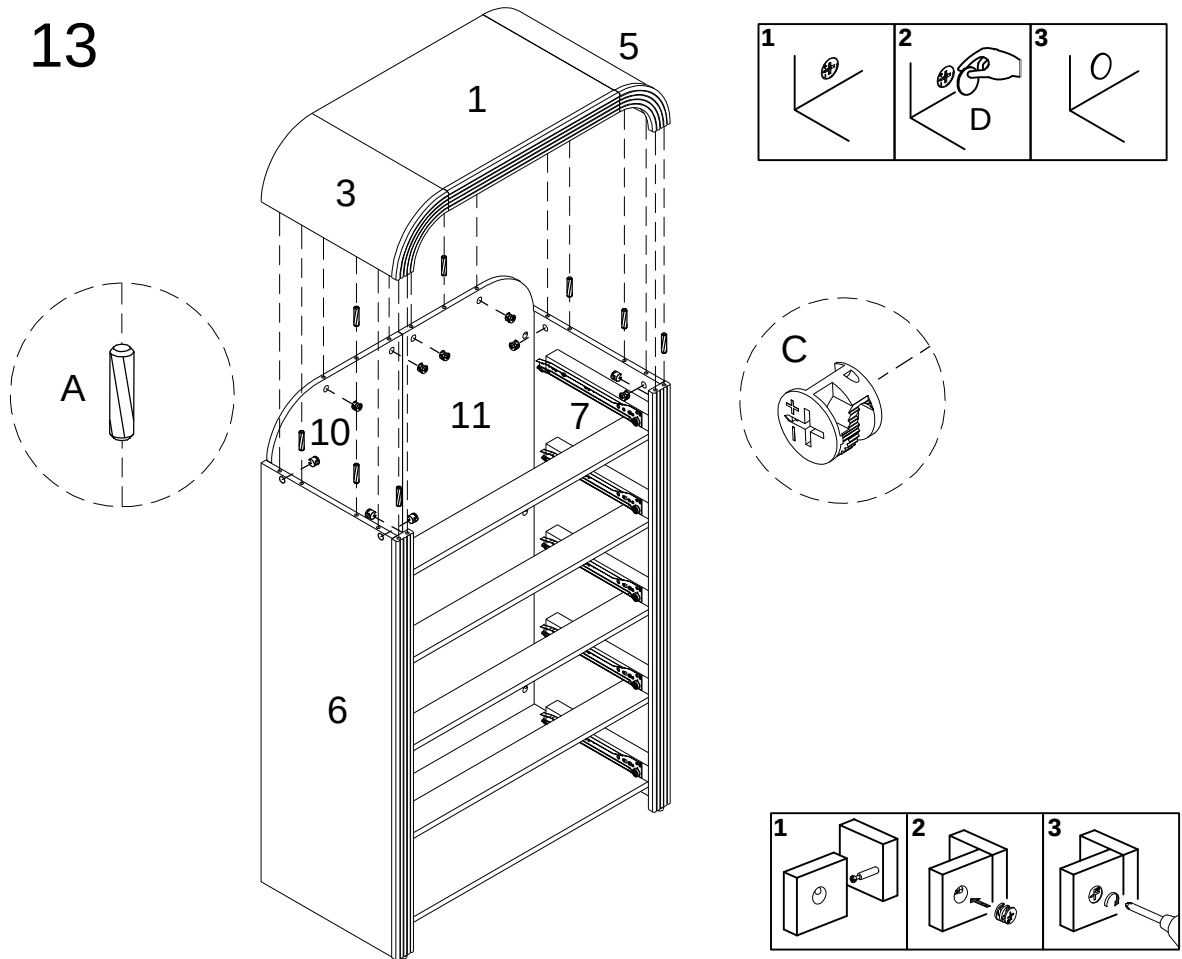


Step 14

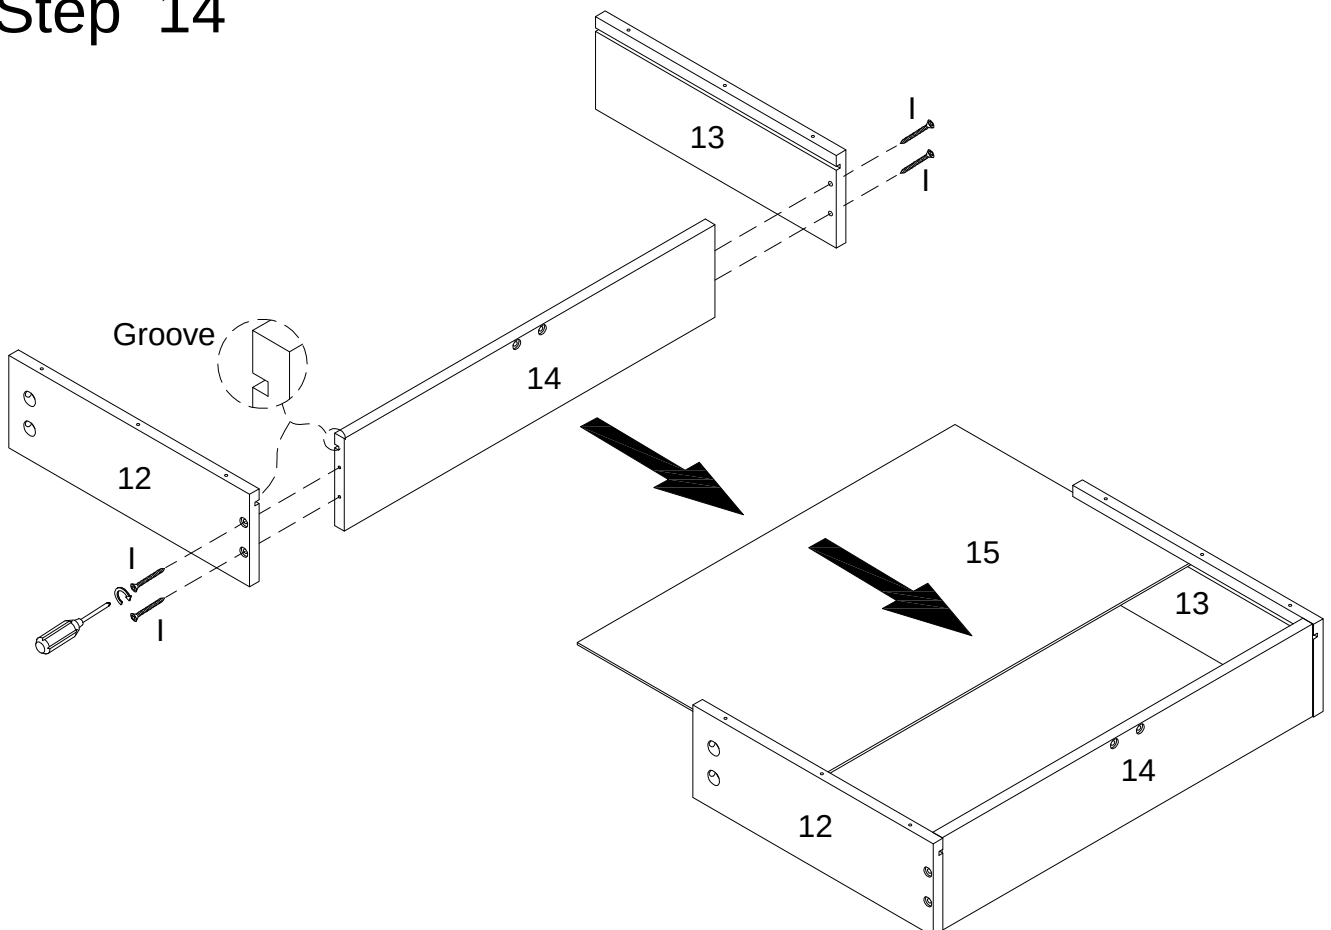


Step 15

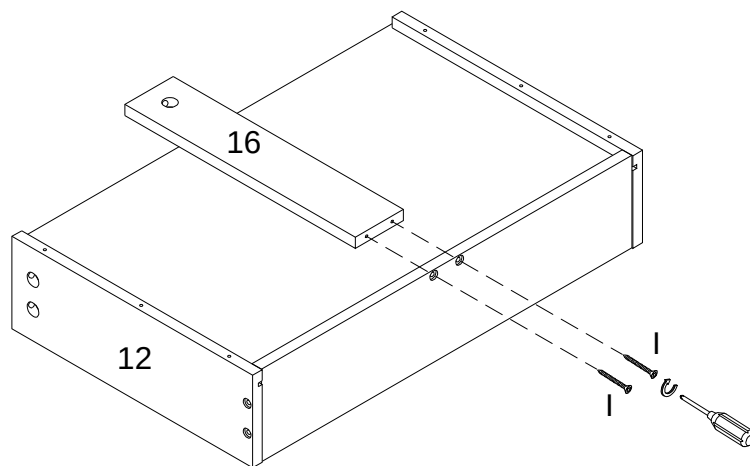


Step 16

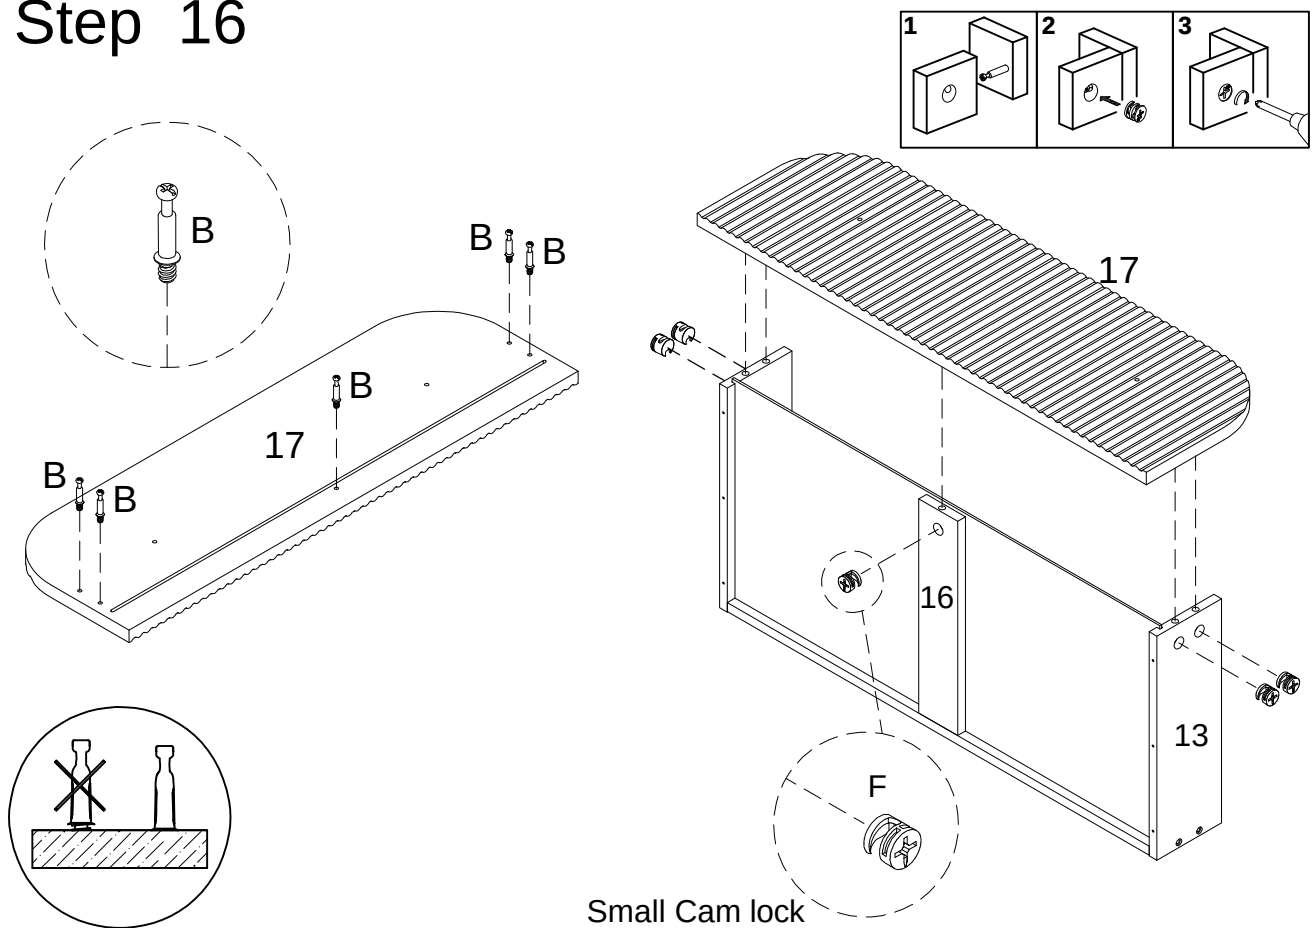


Step 17

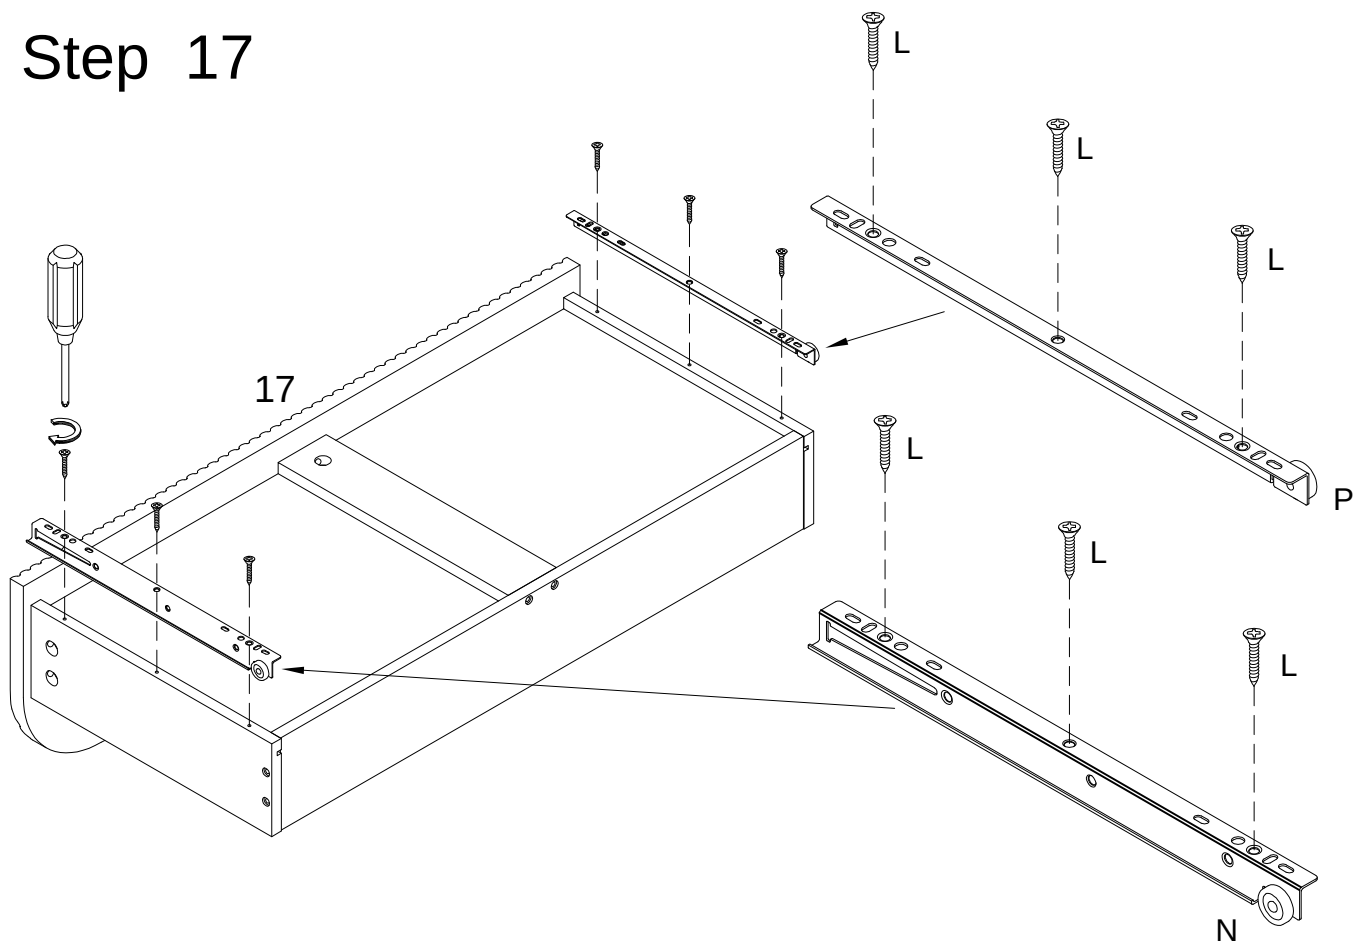


Step 18

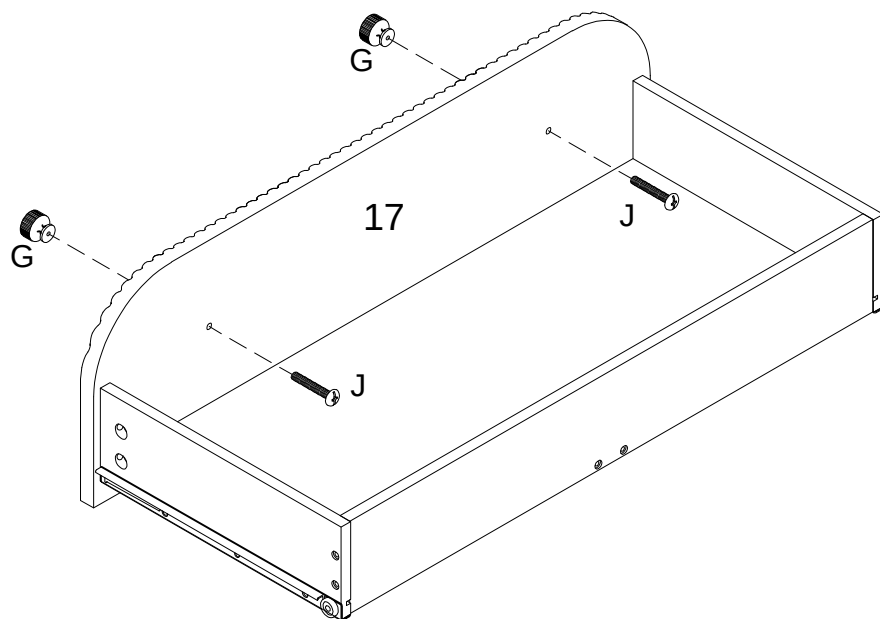


Step 19

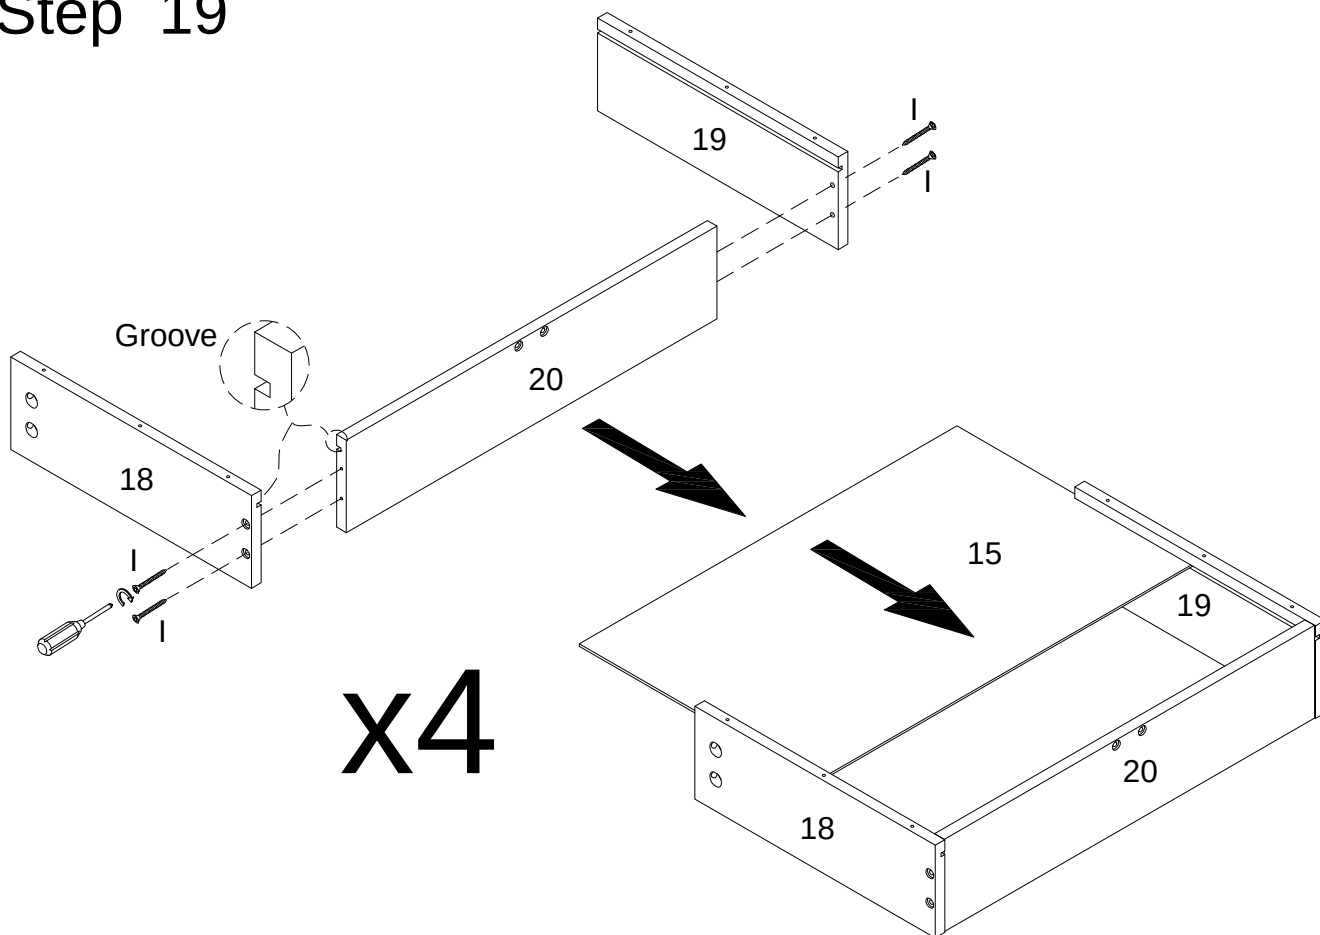


Step 20

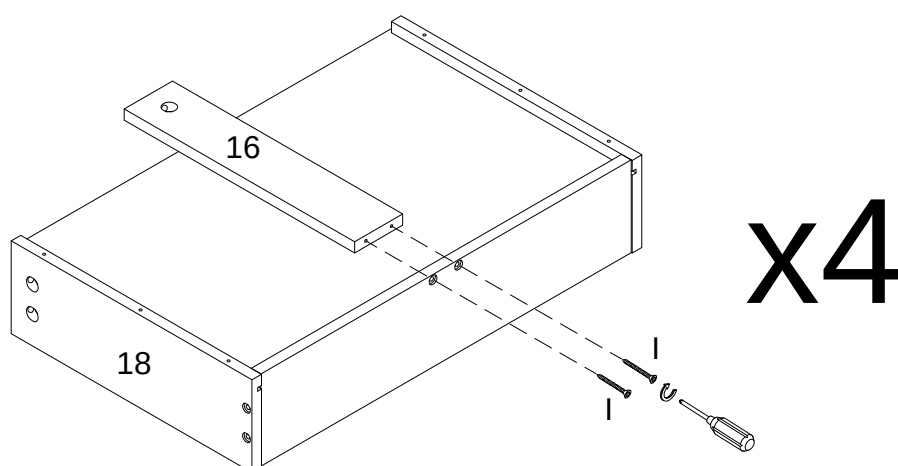


Step 21

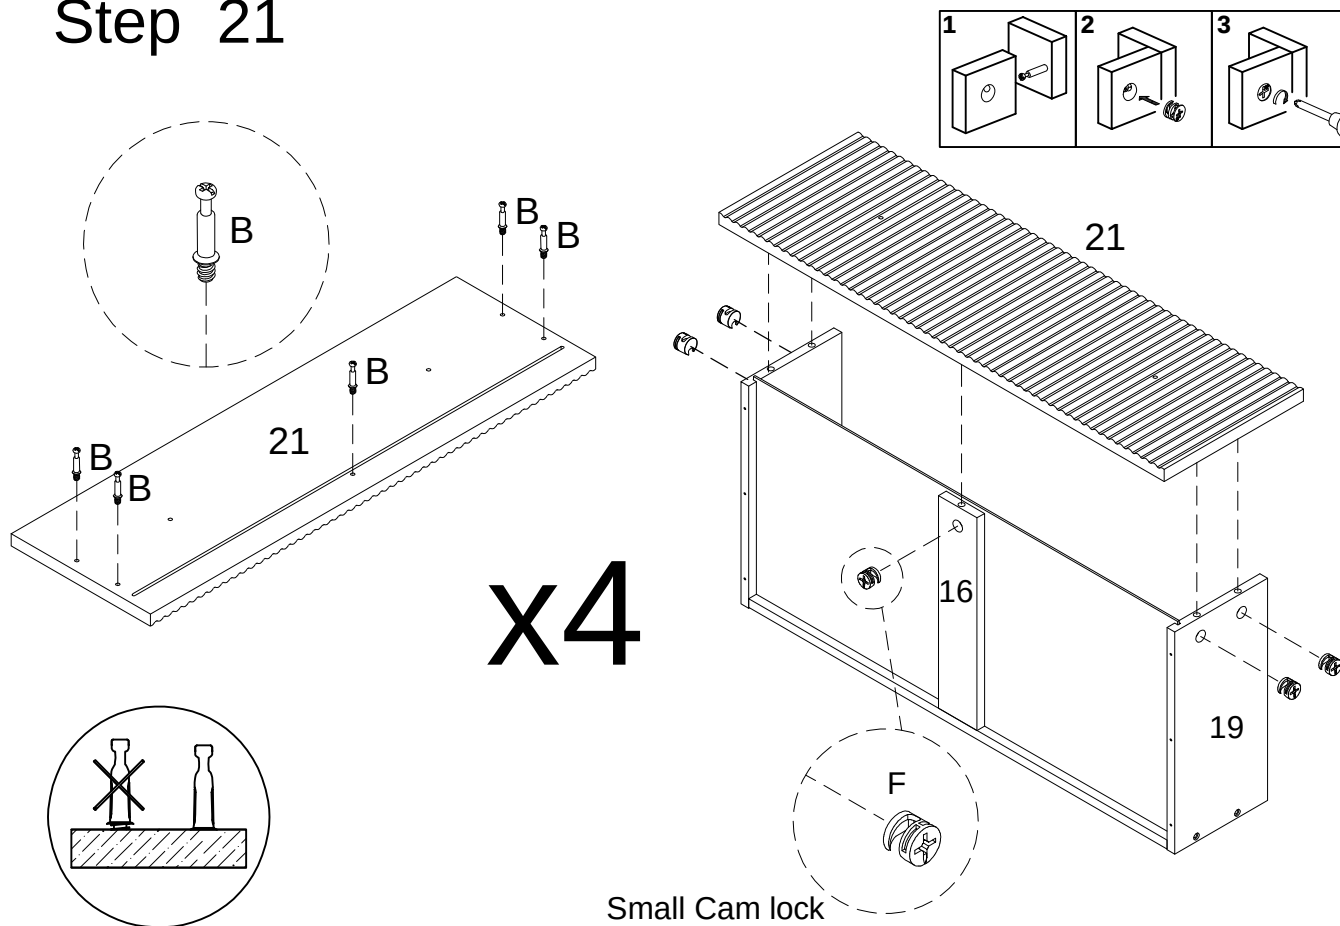


Step 22

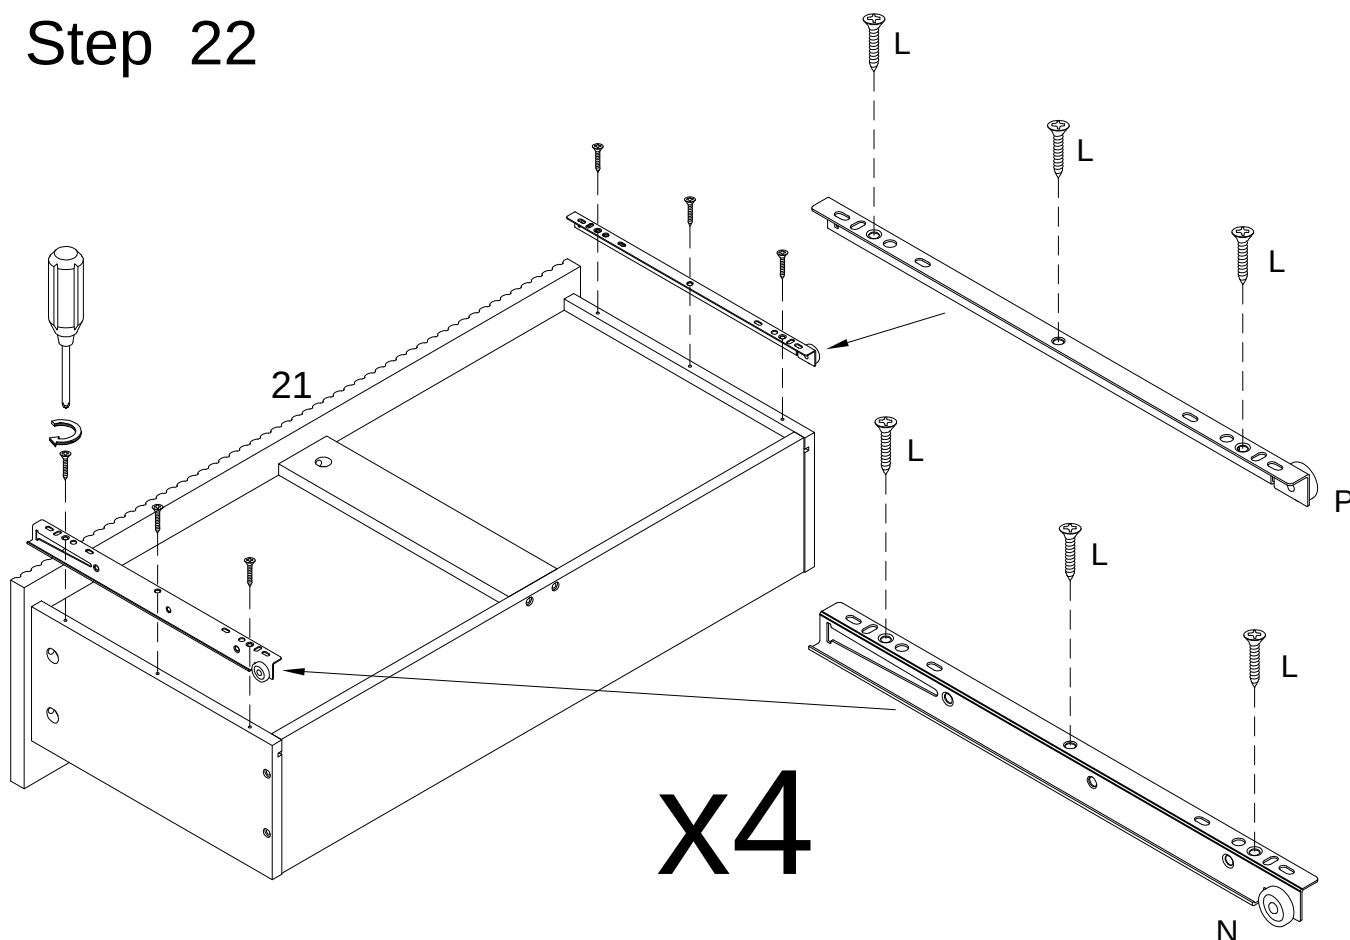

Step 23

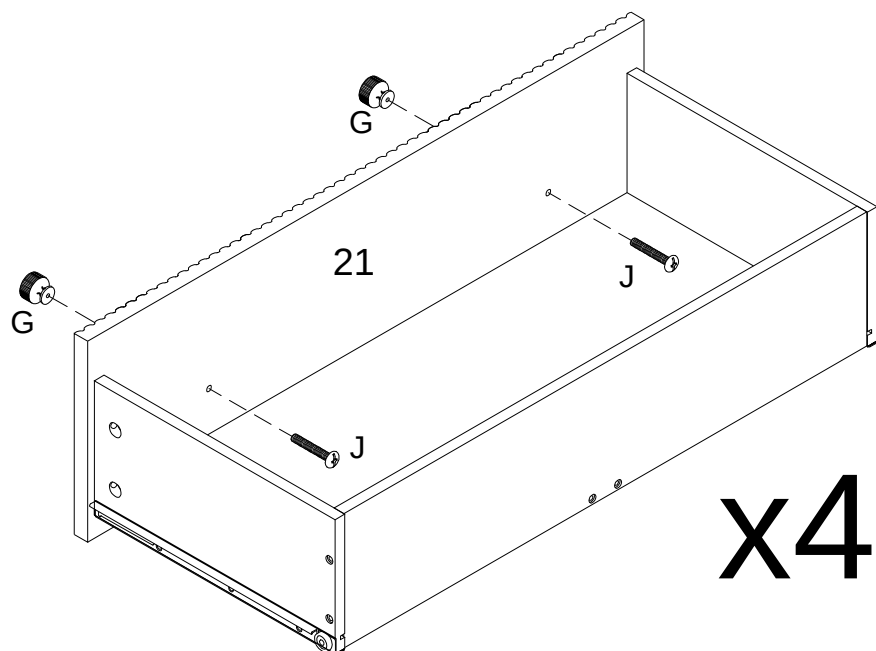



Step 24

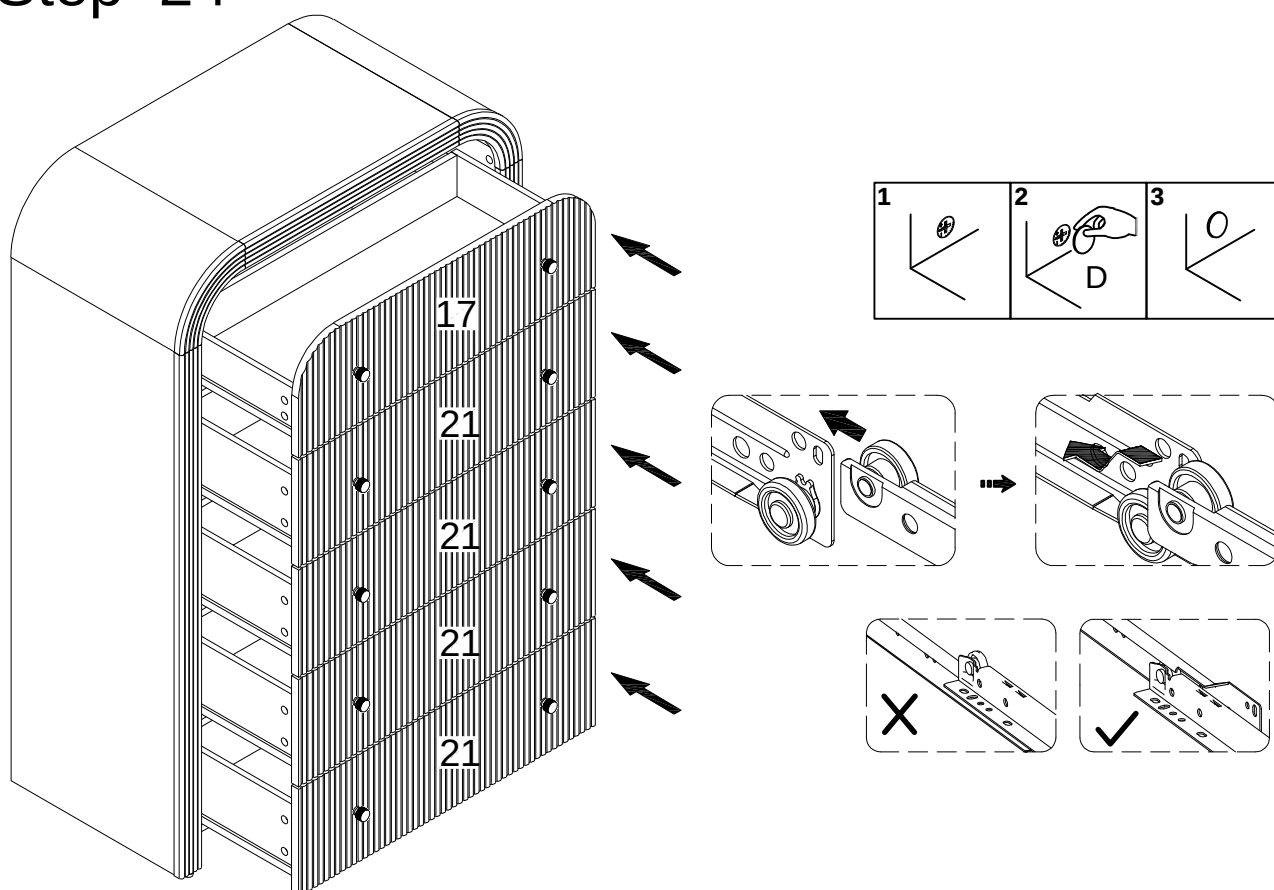


Step 25

Note: It is necessary to assemble the metal plate at the bottom of front legs to keep this unit more stable .

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

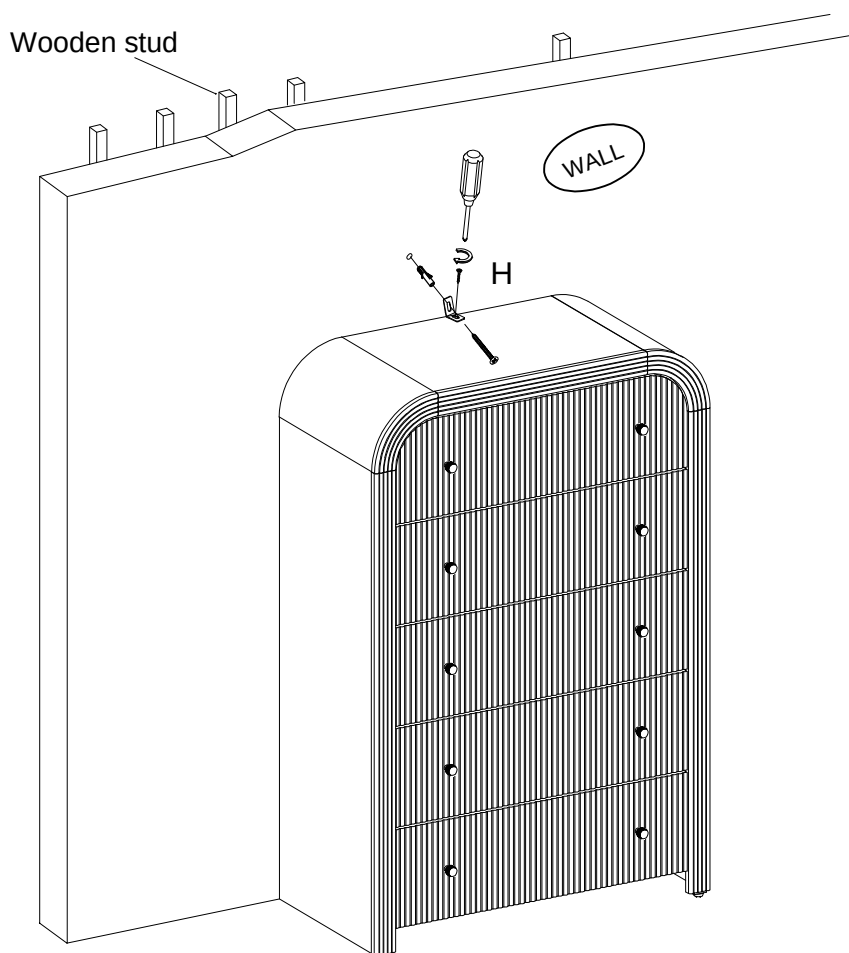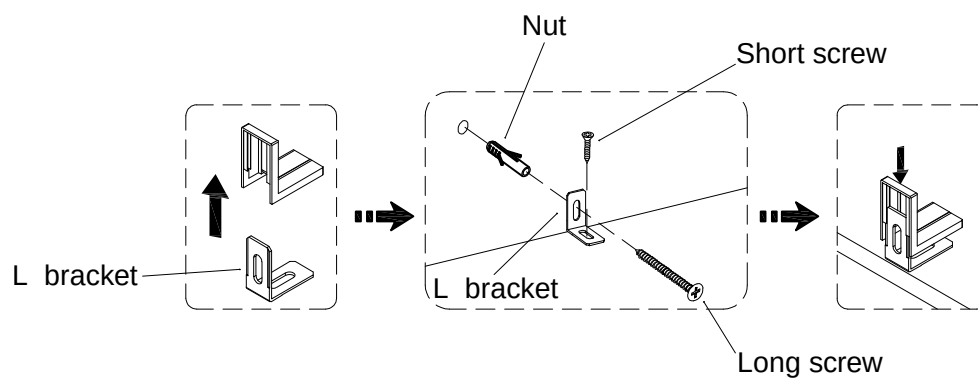

Step 26

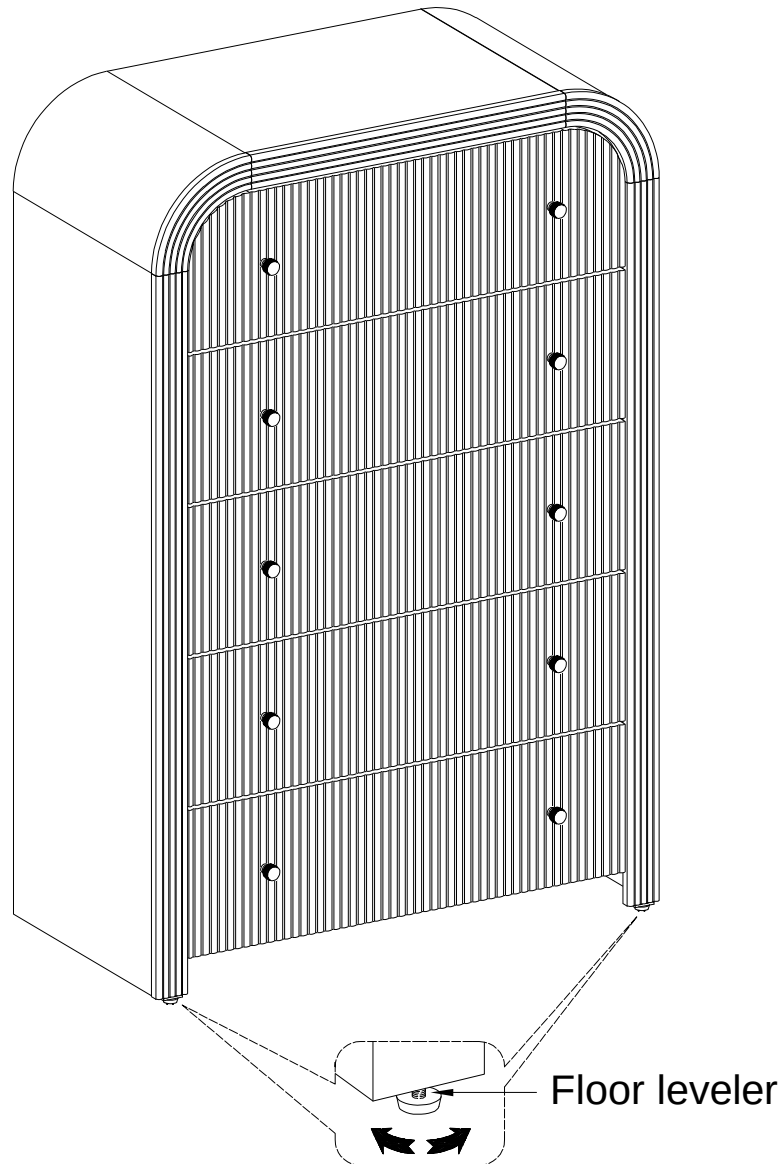

If necessary adjust the floor leveler at the bottom of the Leg to improve the gap around the Drawer.

Final Assembly