
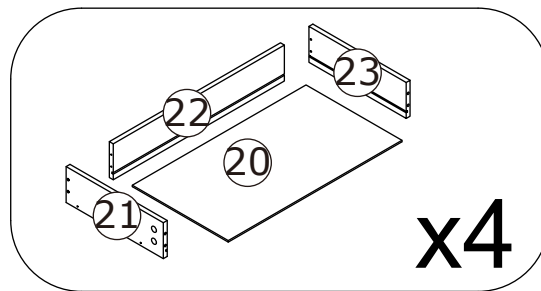
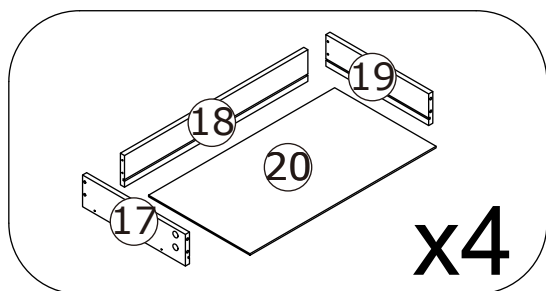
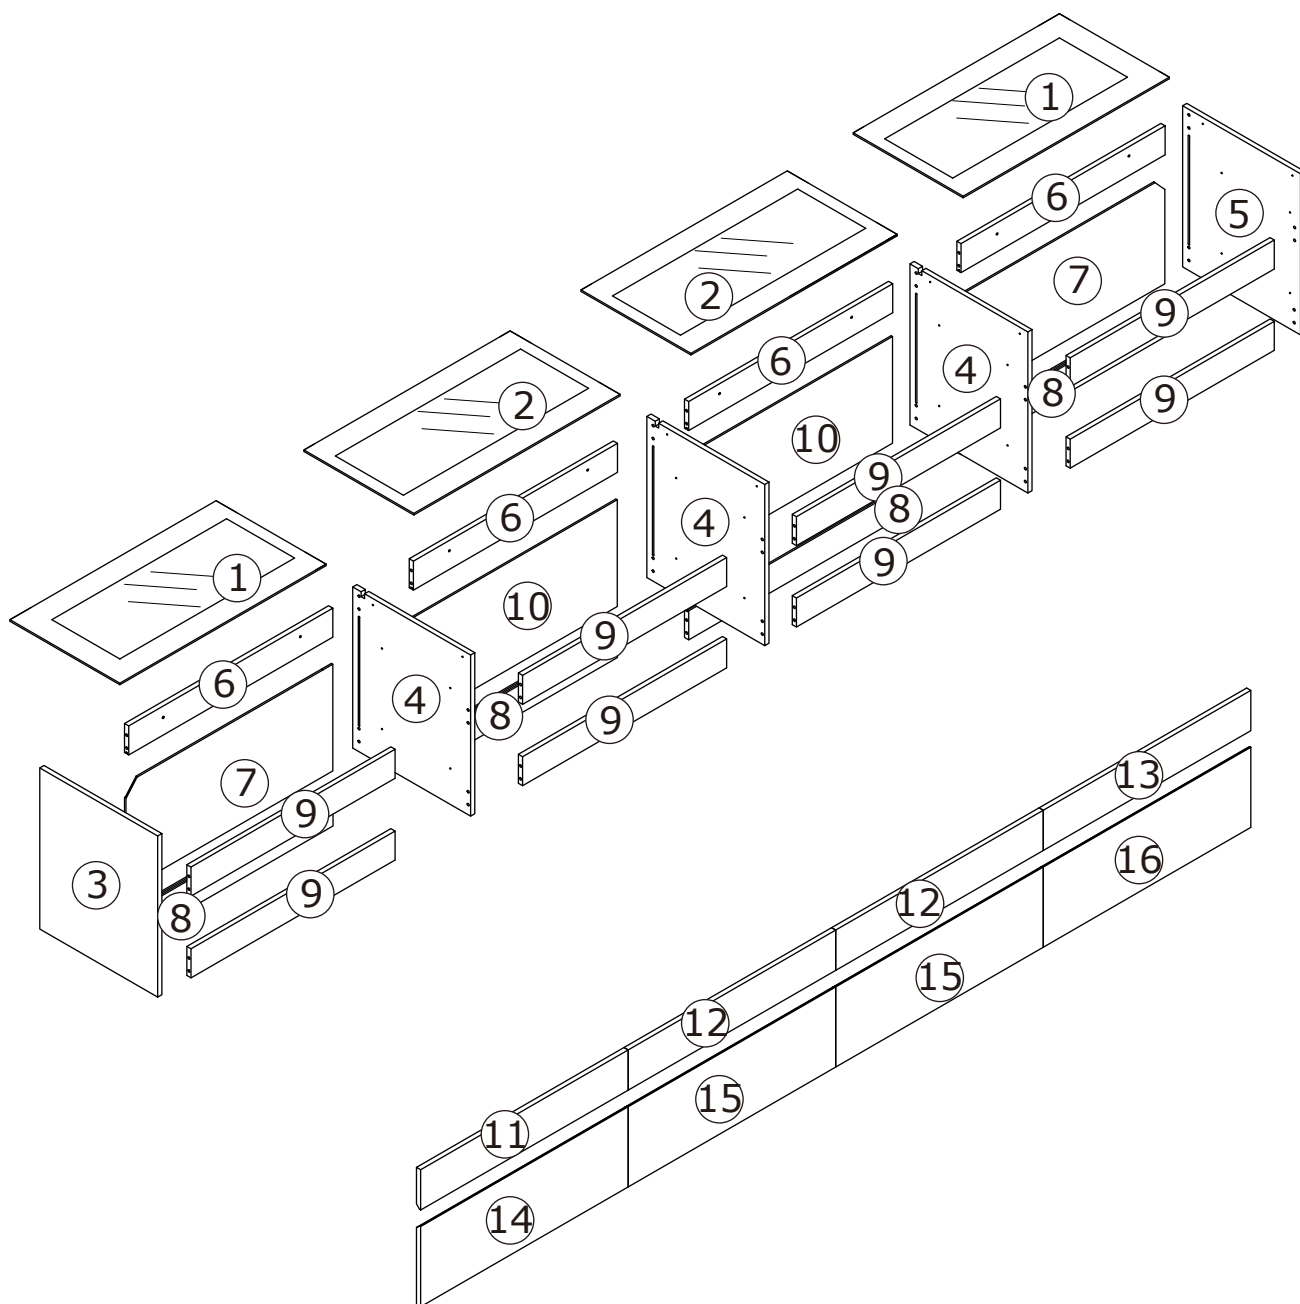
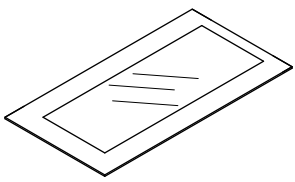
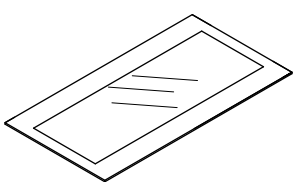
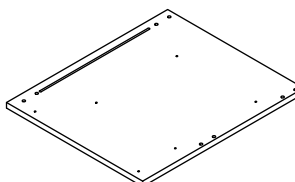
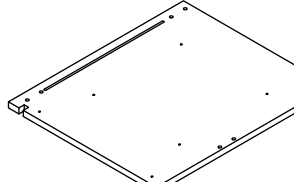
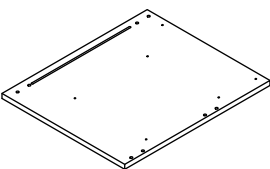
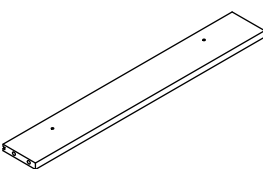
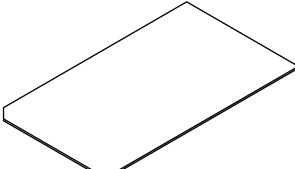
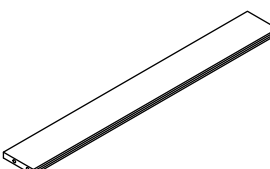
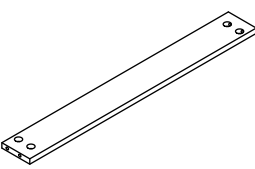
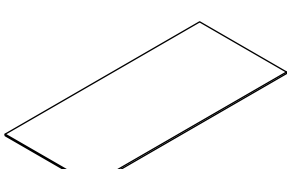
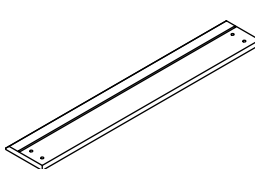
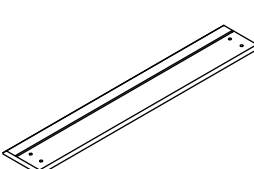
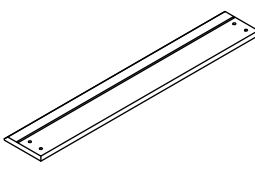
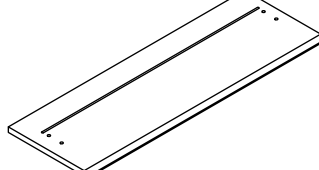
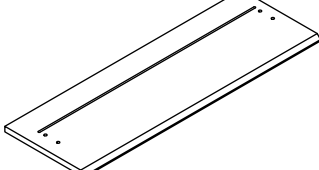
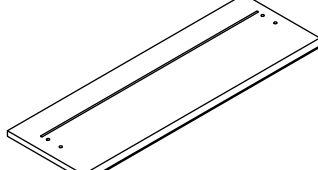
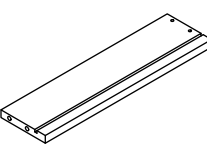
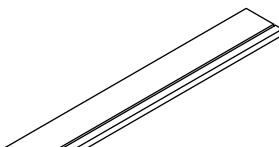
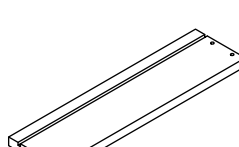
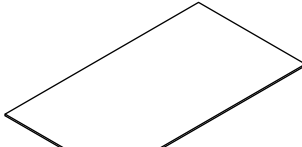
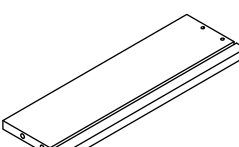
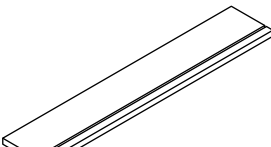








Installation instruction

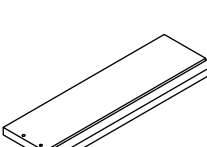

Parts and Operation Elements

			
① 2pcs	② 2pcs	③ 1pcs	④ 3pcs
			
⑤ 1pcs	⑥ 4pcs	⑦ 2pcs	⑧ 4pcs
			
⑨ 8pcs	⑩ 2pcs	⑪ 1pcs	⑫ 2pcs
			
⑬ 1pcs	⑭ 1pcs	⑮ 2pcs	⑯ 1pcs
			
⑰ 4pcs	⑱ 4pcs	⑲ 4pcs	⑳ 8pcs
			
㉑ 4pcs	㉒ 4pcs	㉓ 4pcs	



Hardware

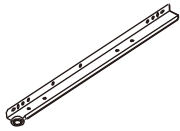									
Cam bolt		Cam Lock		4x35mm screw		3x12mm screw			
A	96pcs	B	96pcs	D	32pcs	E	72pcs	F	16pcs
									
3.5x12mm screw								3x14mm screw	
G	16pcs	H	1pcs	J	8pcs	K	16pcs	L	16pcs
									
DR		DL		CR		CL			
8pcs		8pcs		8pcs		8pcs			








SPARE BAG







THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

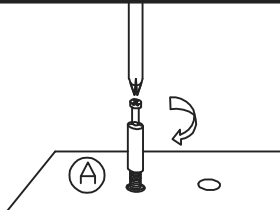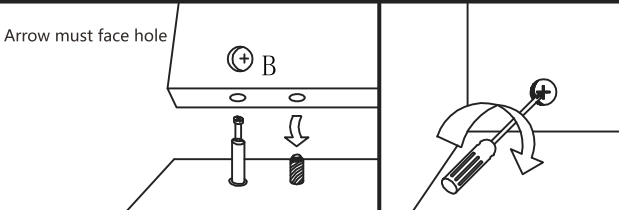		
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.	Screw the camlock firmly into locked position.


1

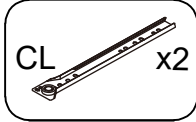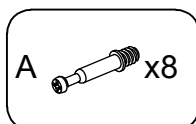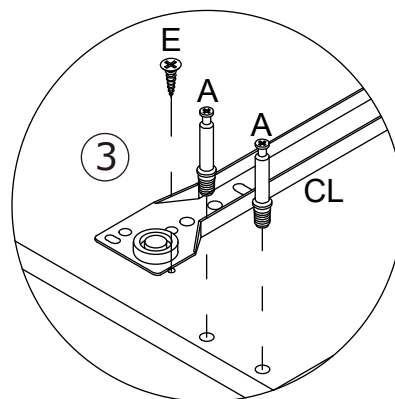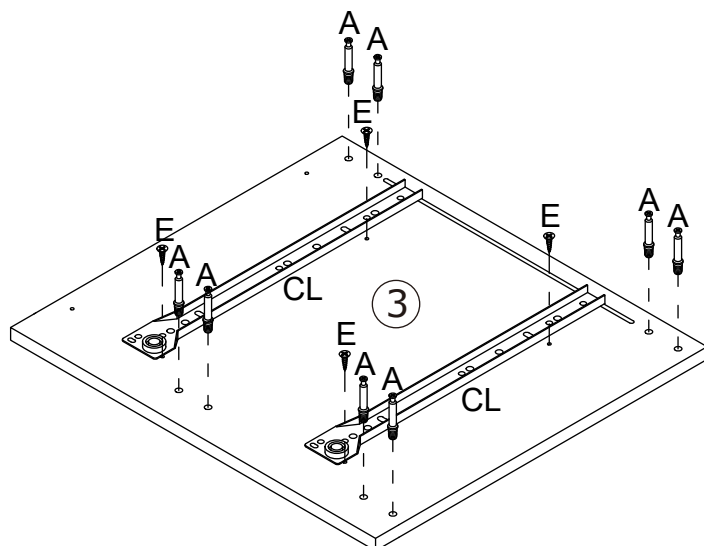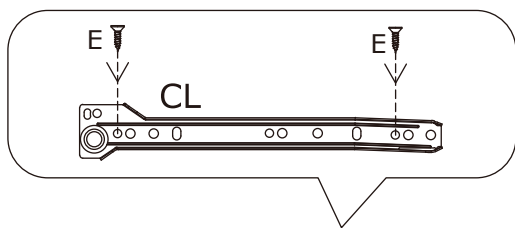

2

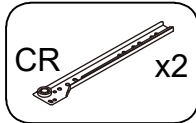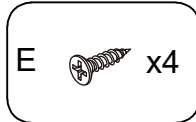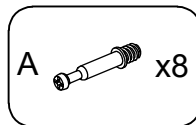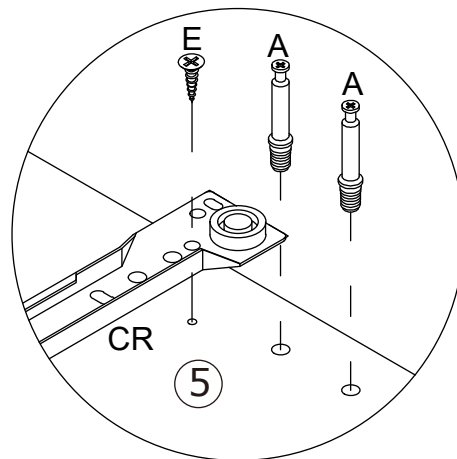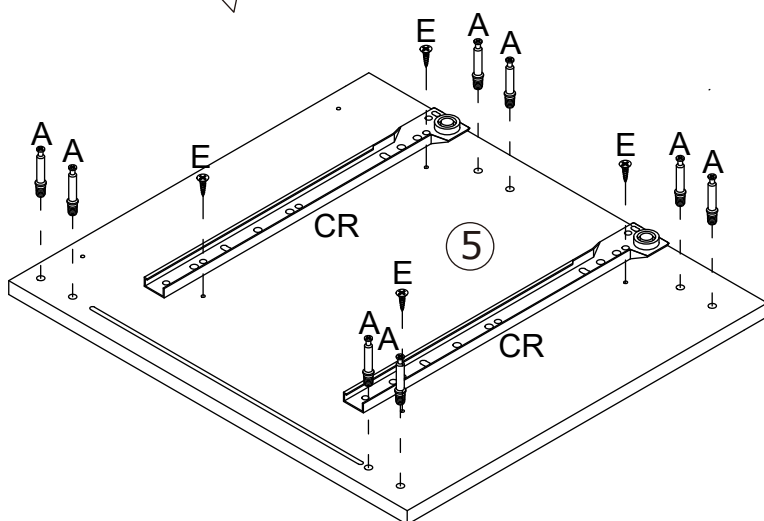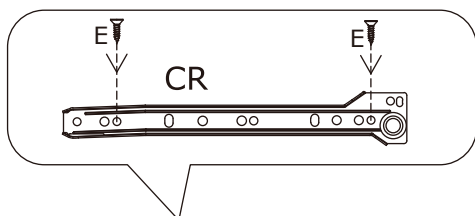

3

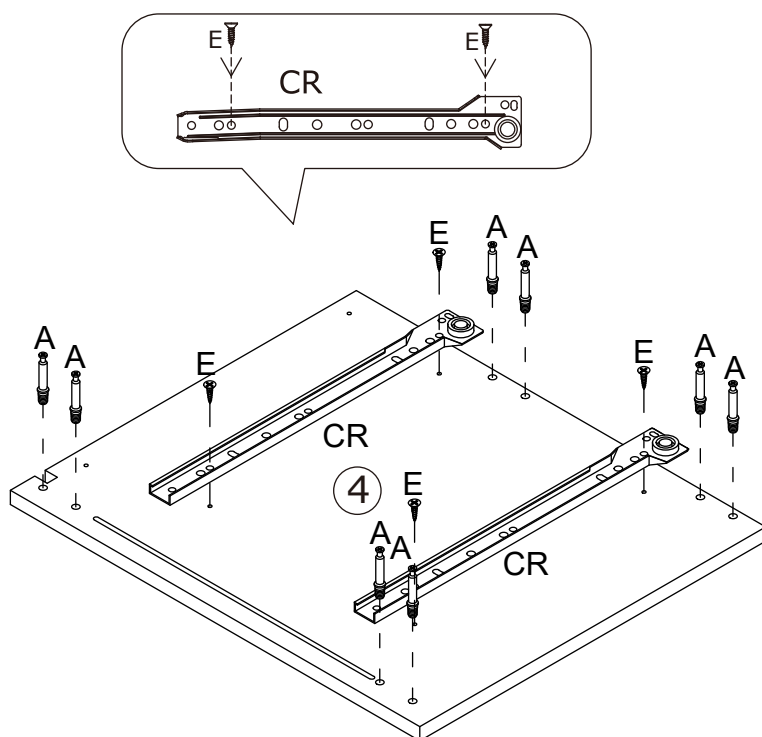


A  x8


E  x4

CR  x2

x3

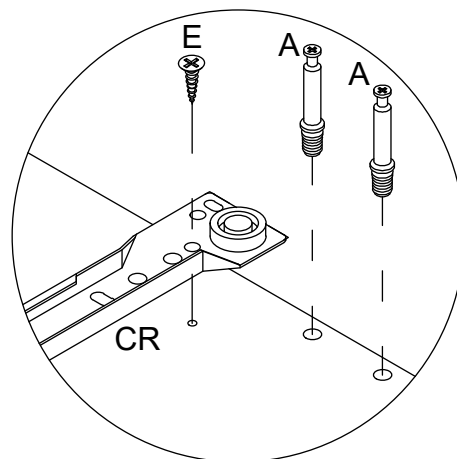

4

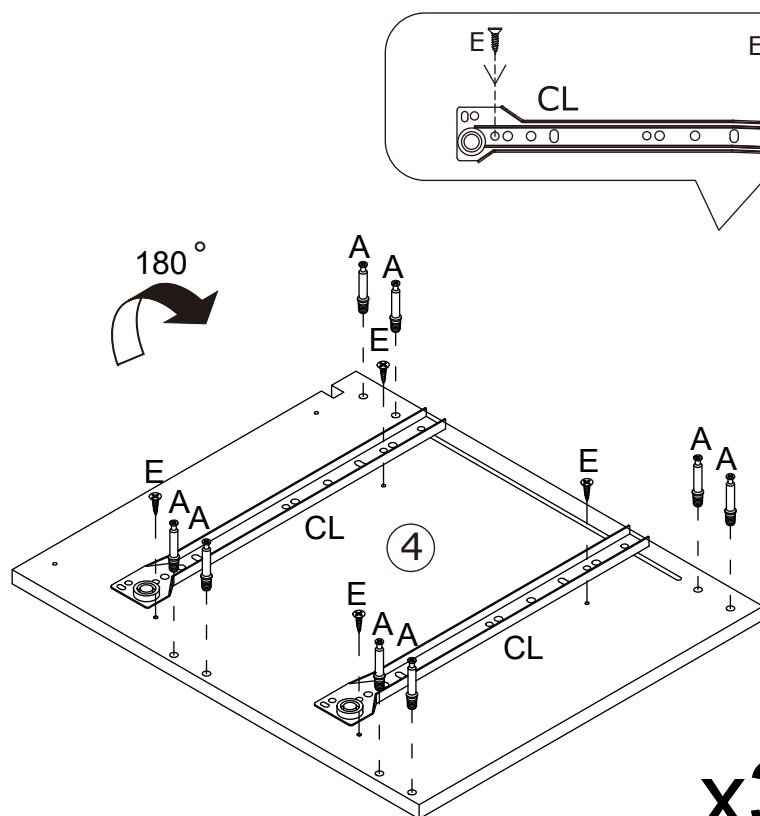


A  x8




E  x4

CL  x2

x3



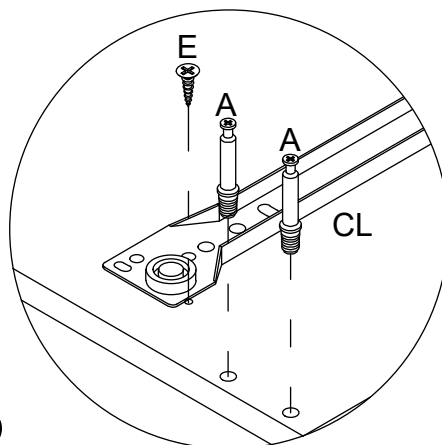


Picture 1

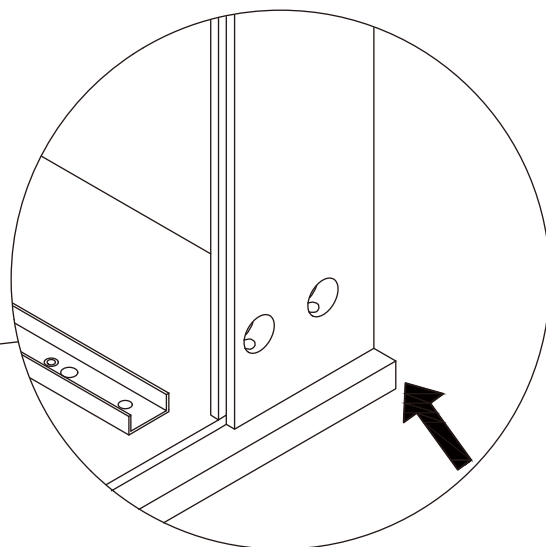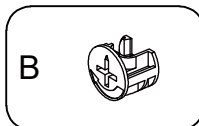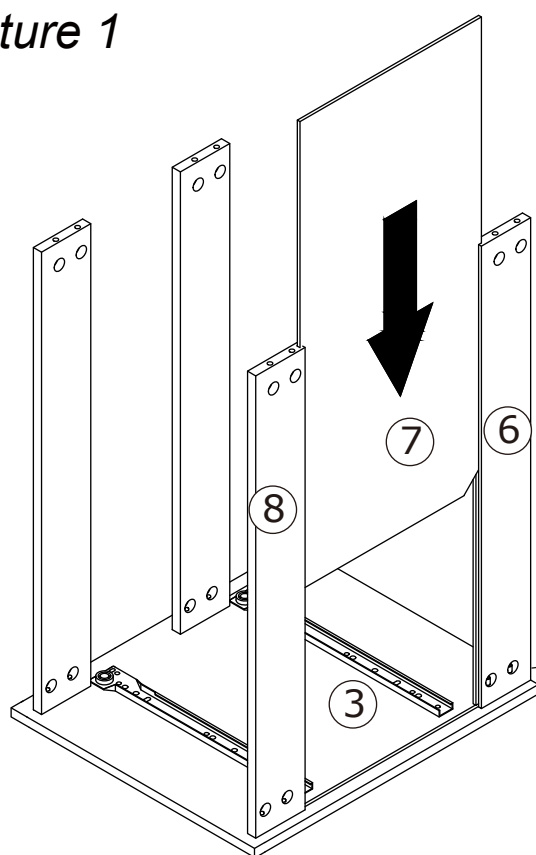



⚠Note: the orientation of the holes for the accessory B.
Picture 1 is correct, while Picture 2 is incorrect.

Picture 2

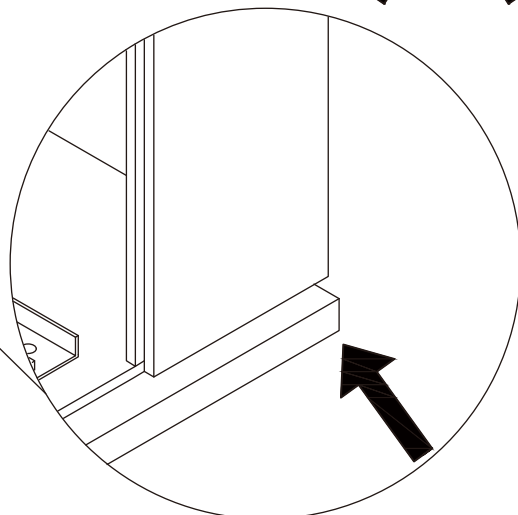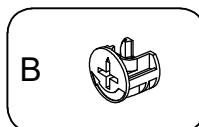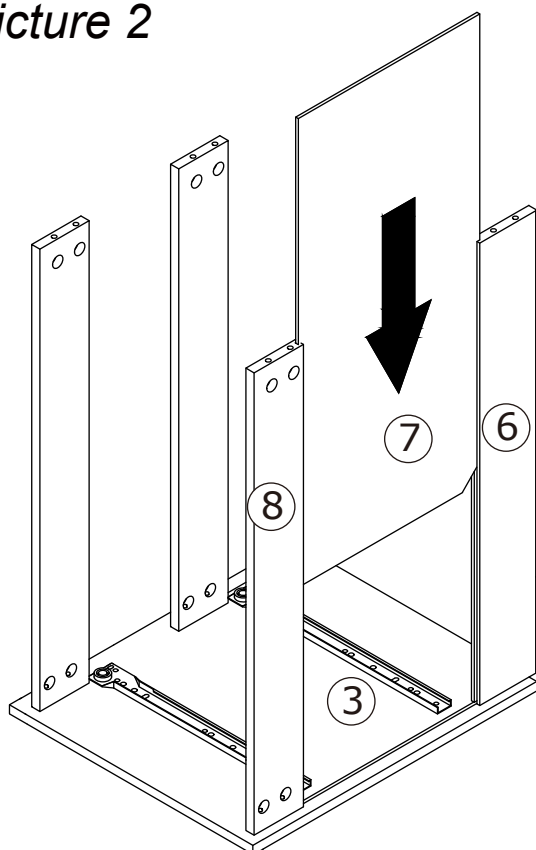


5

B  x8

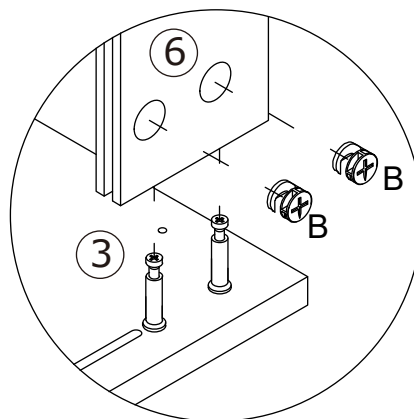
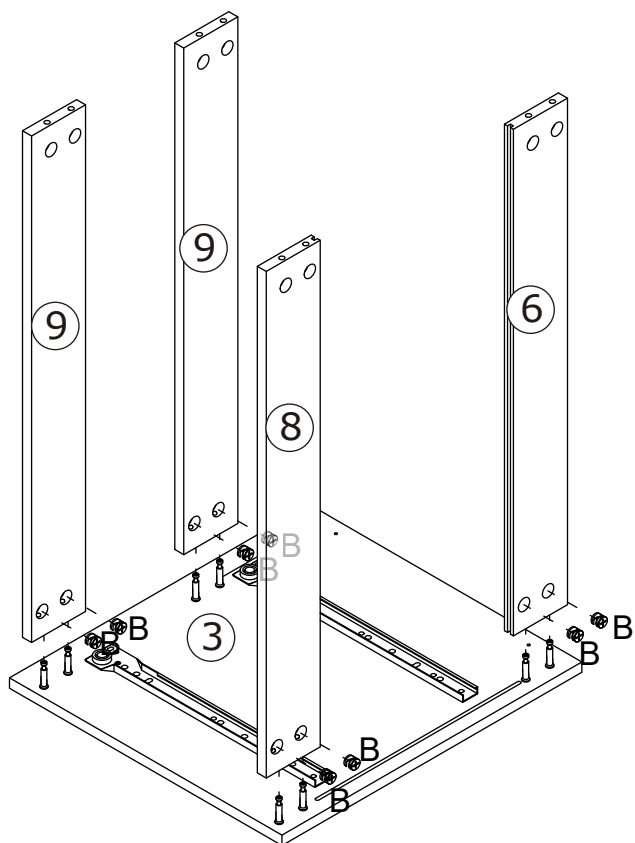


6

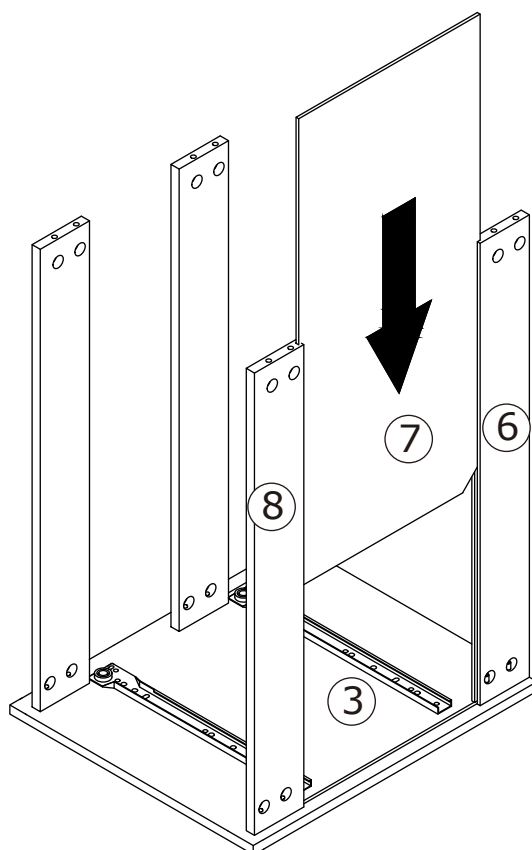



7

B  x8

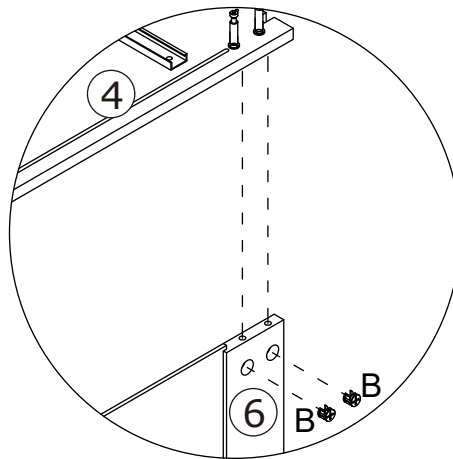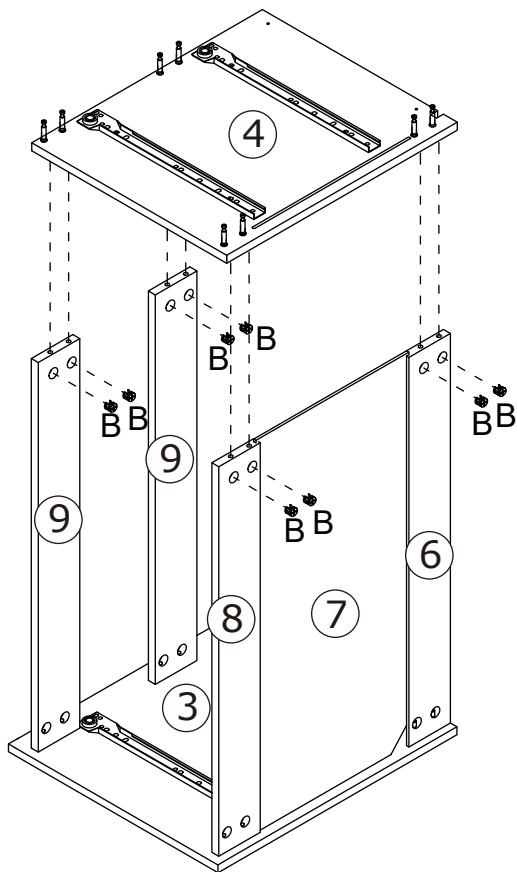


8

B  x8

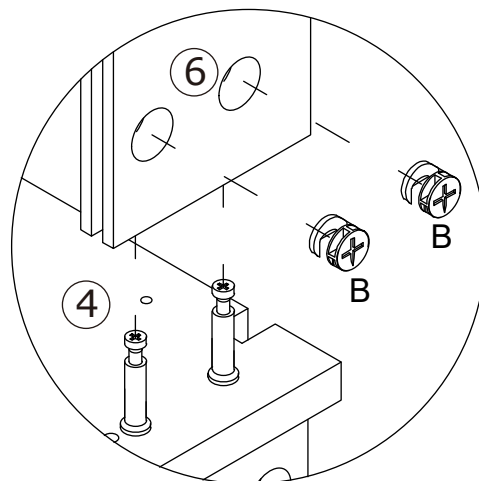
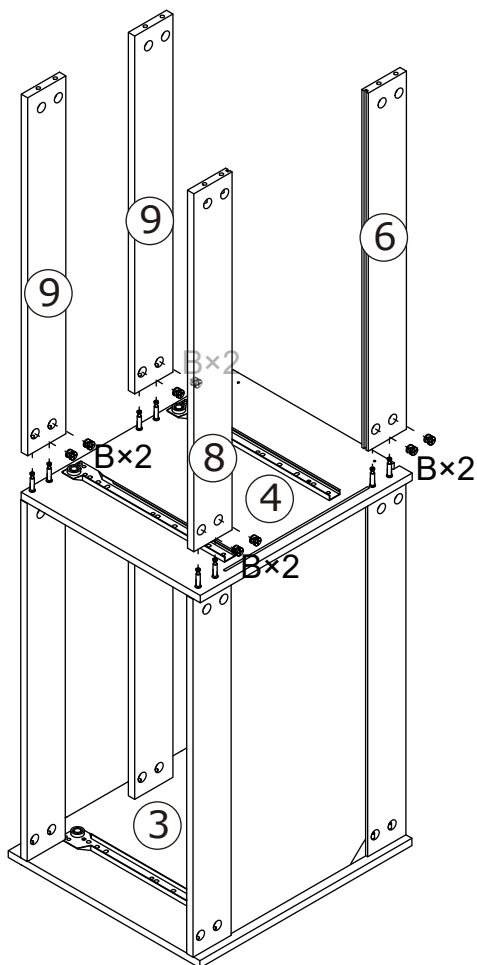


9

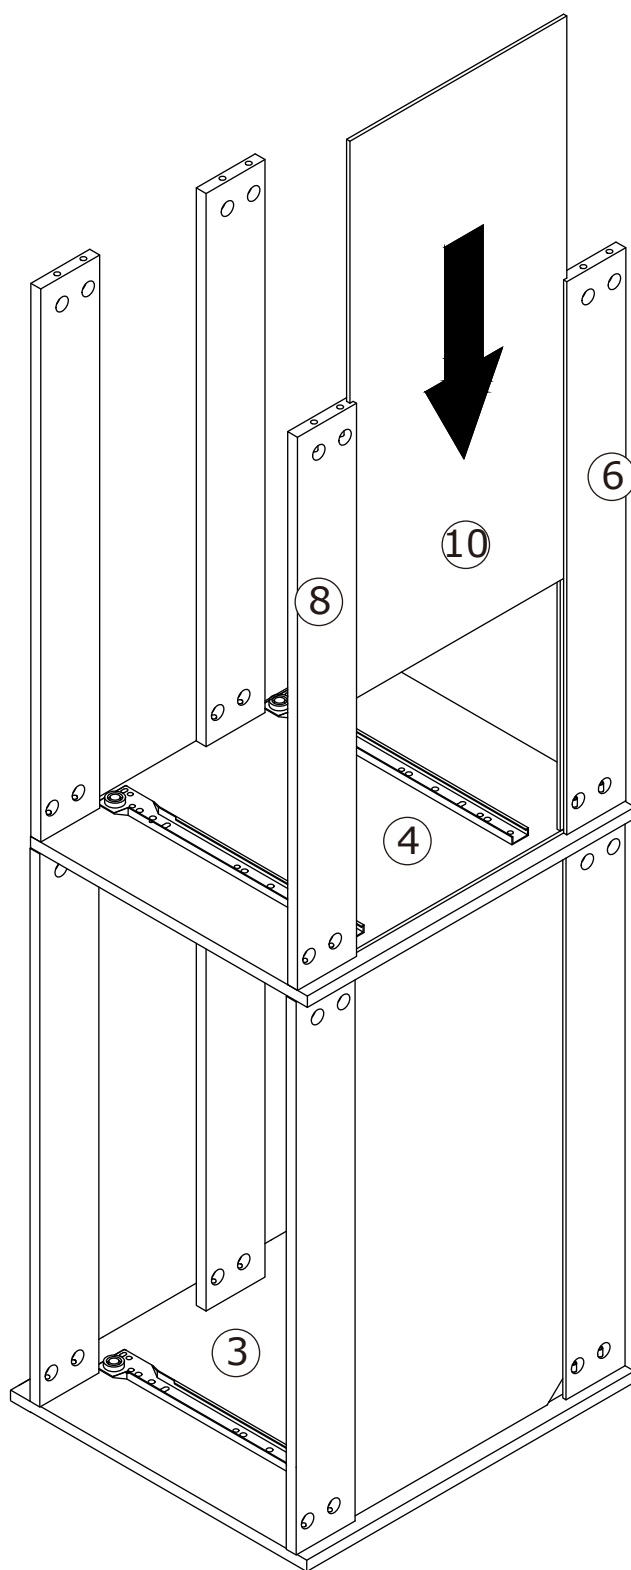


10


B  x8

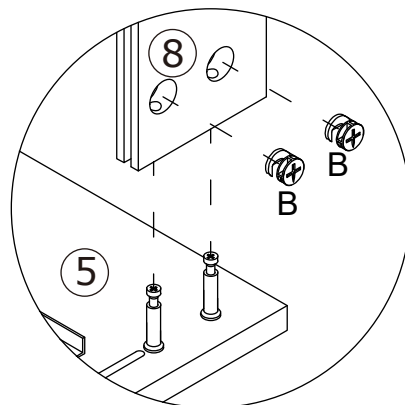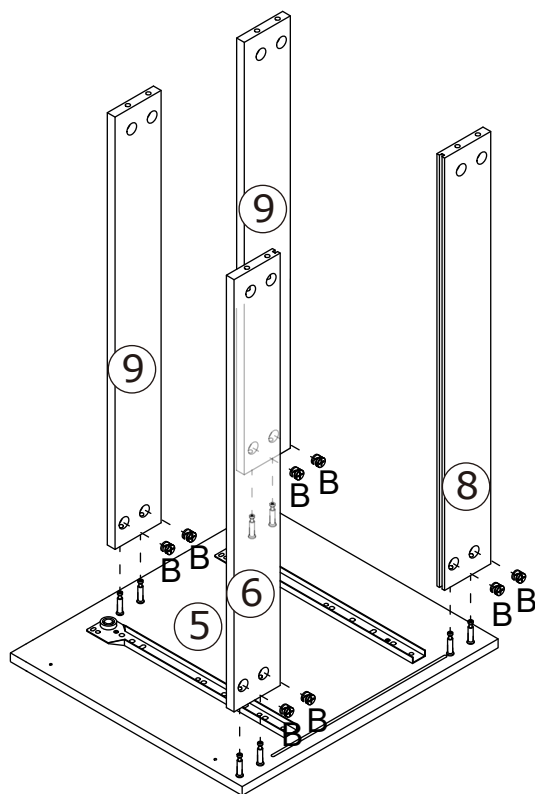



11

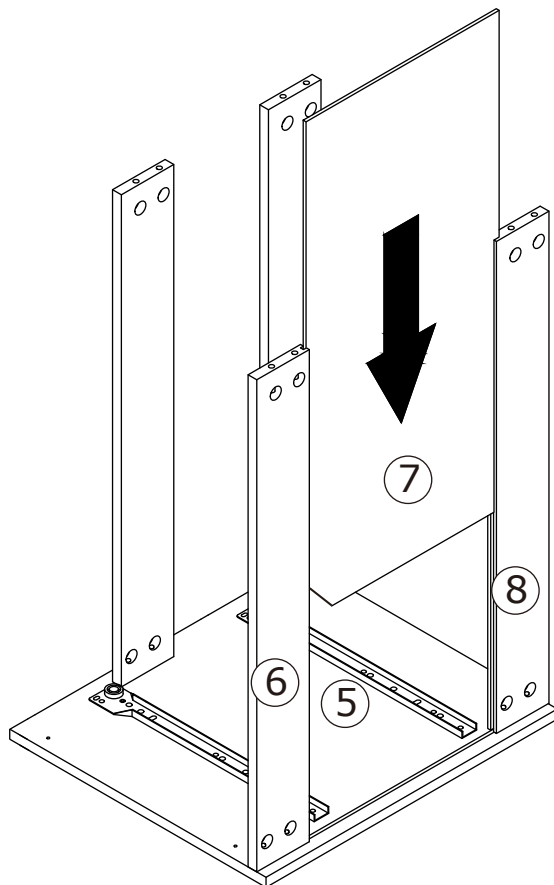


12

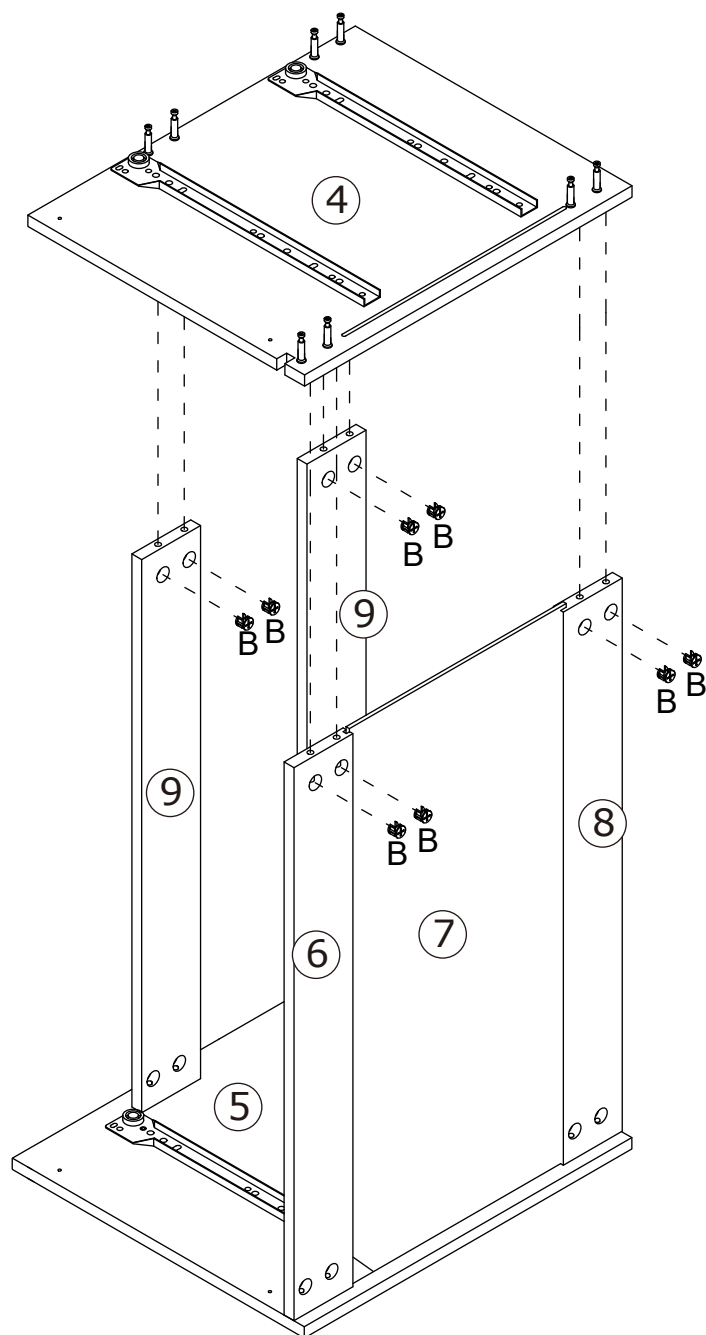



13

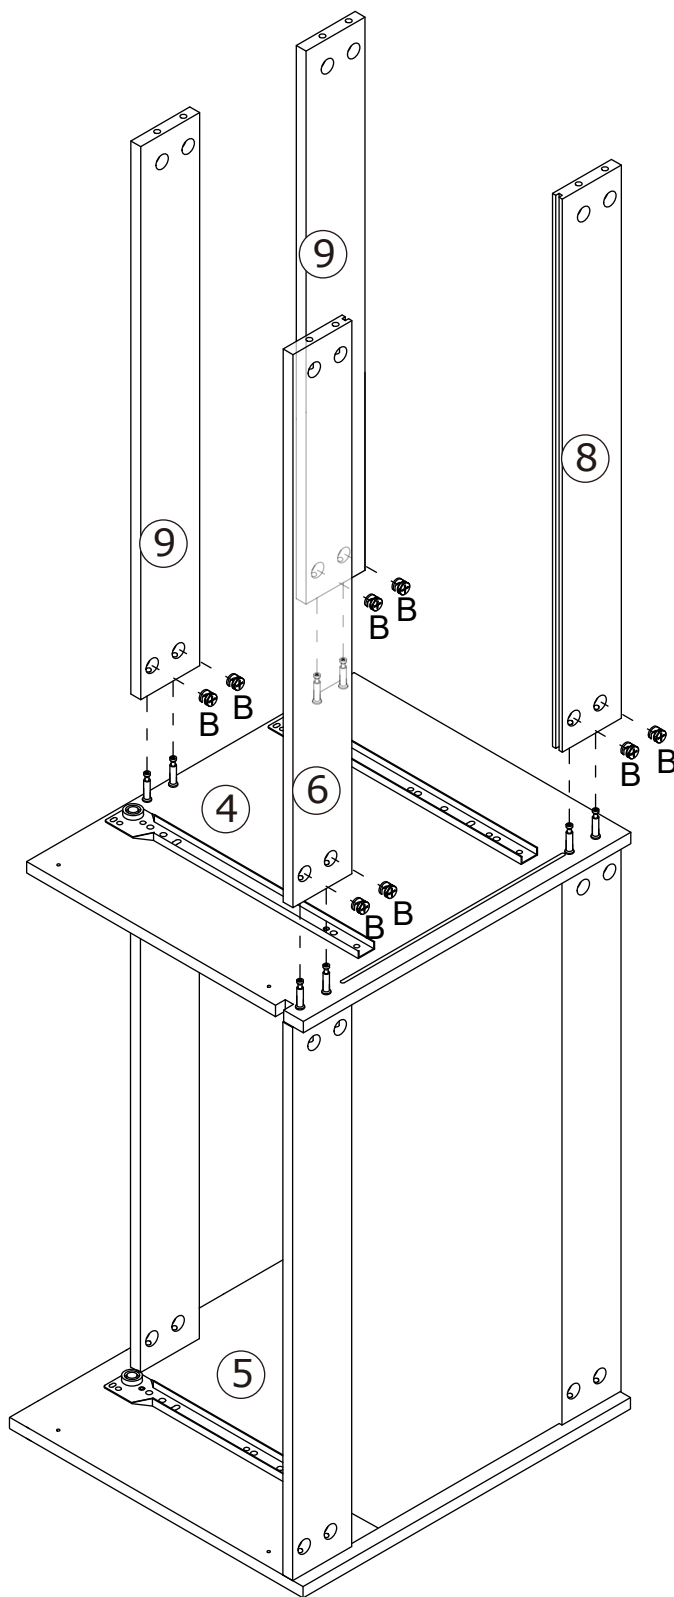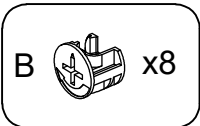

14

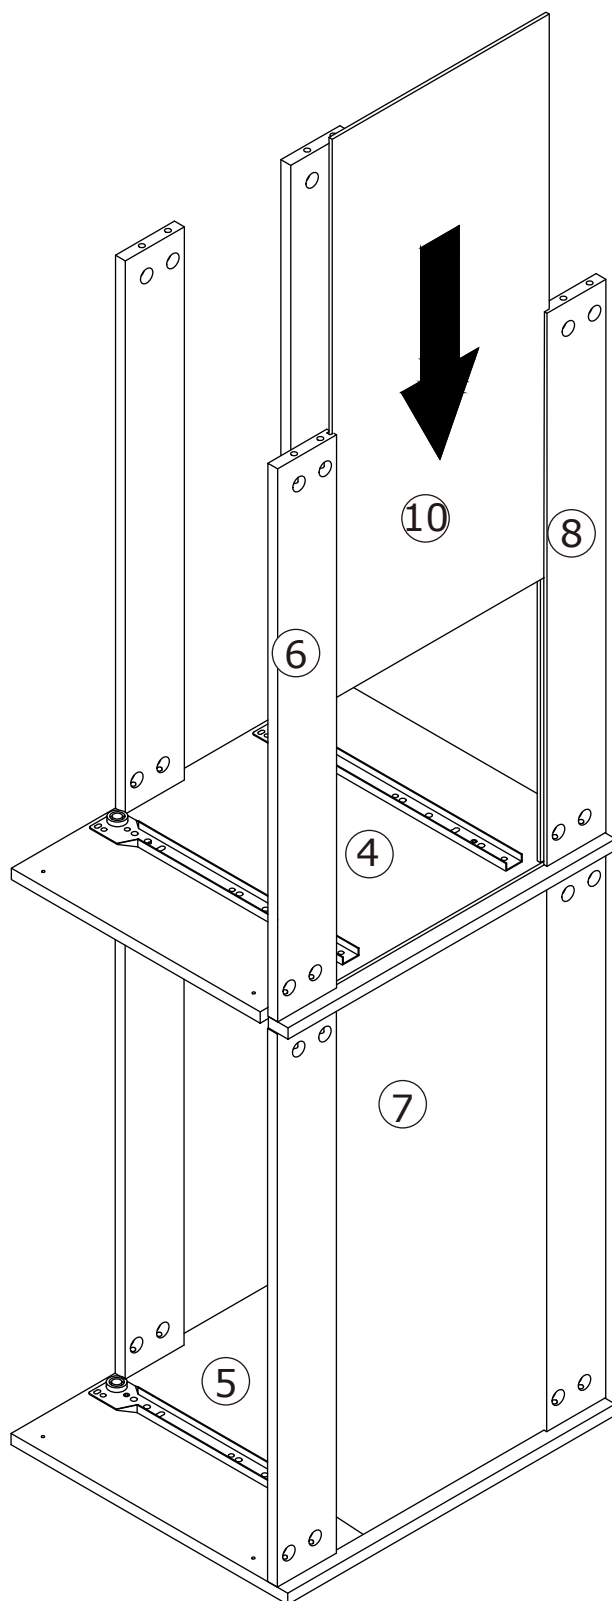


15

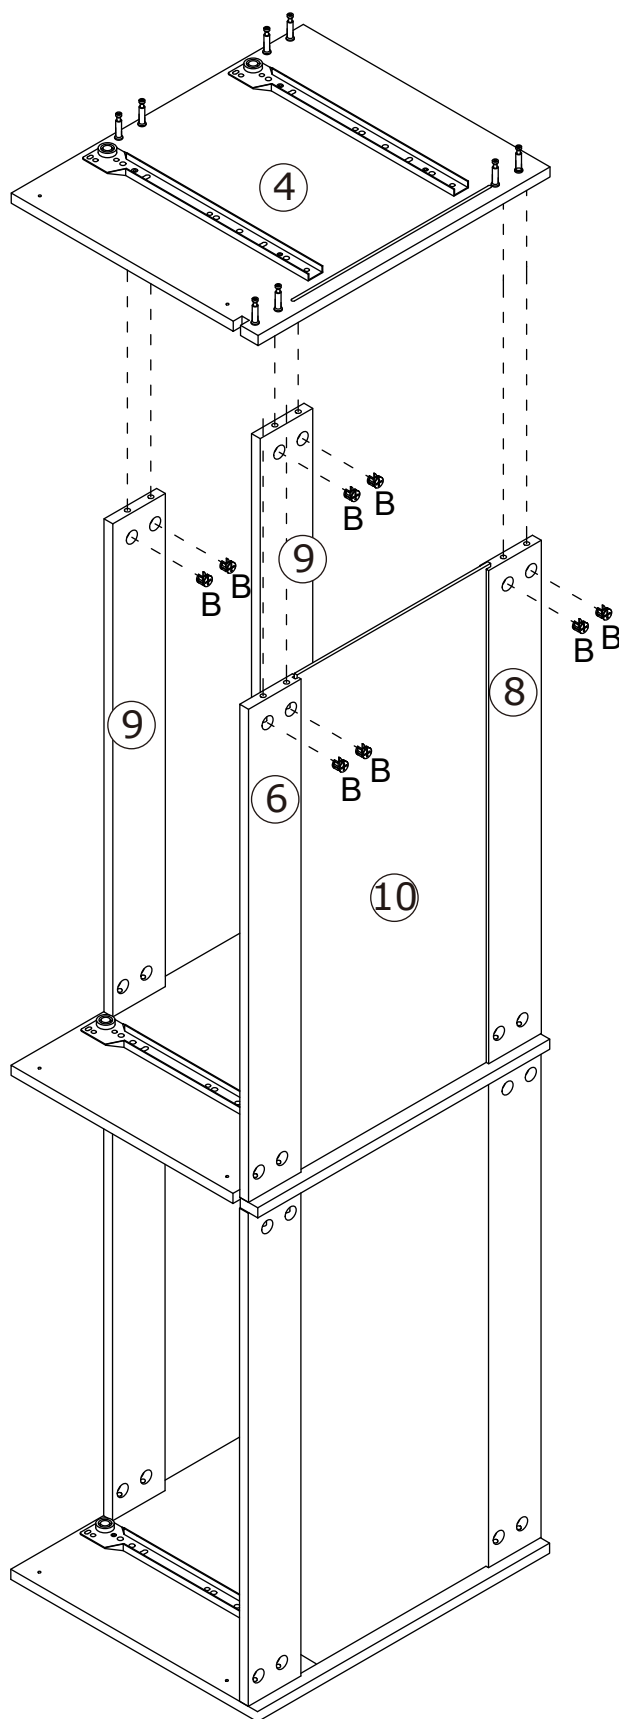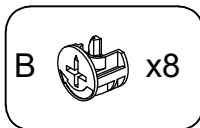

16

B  x8

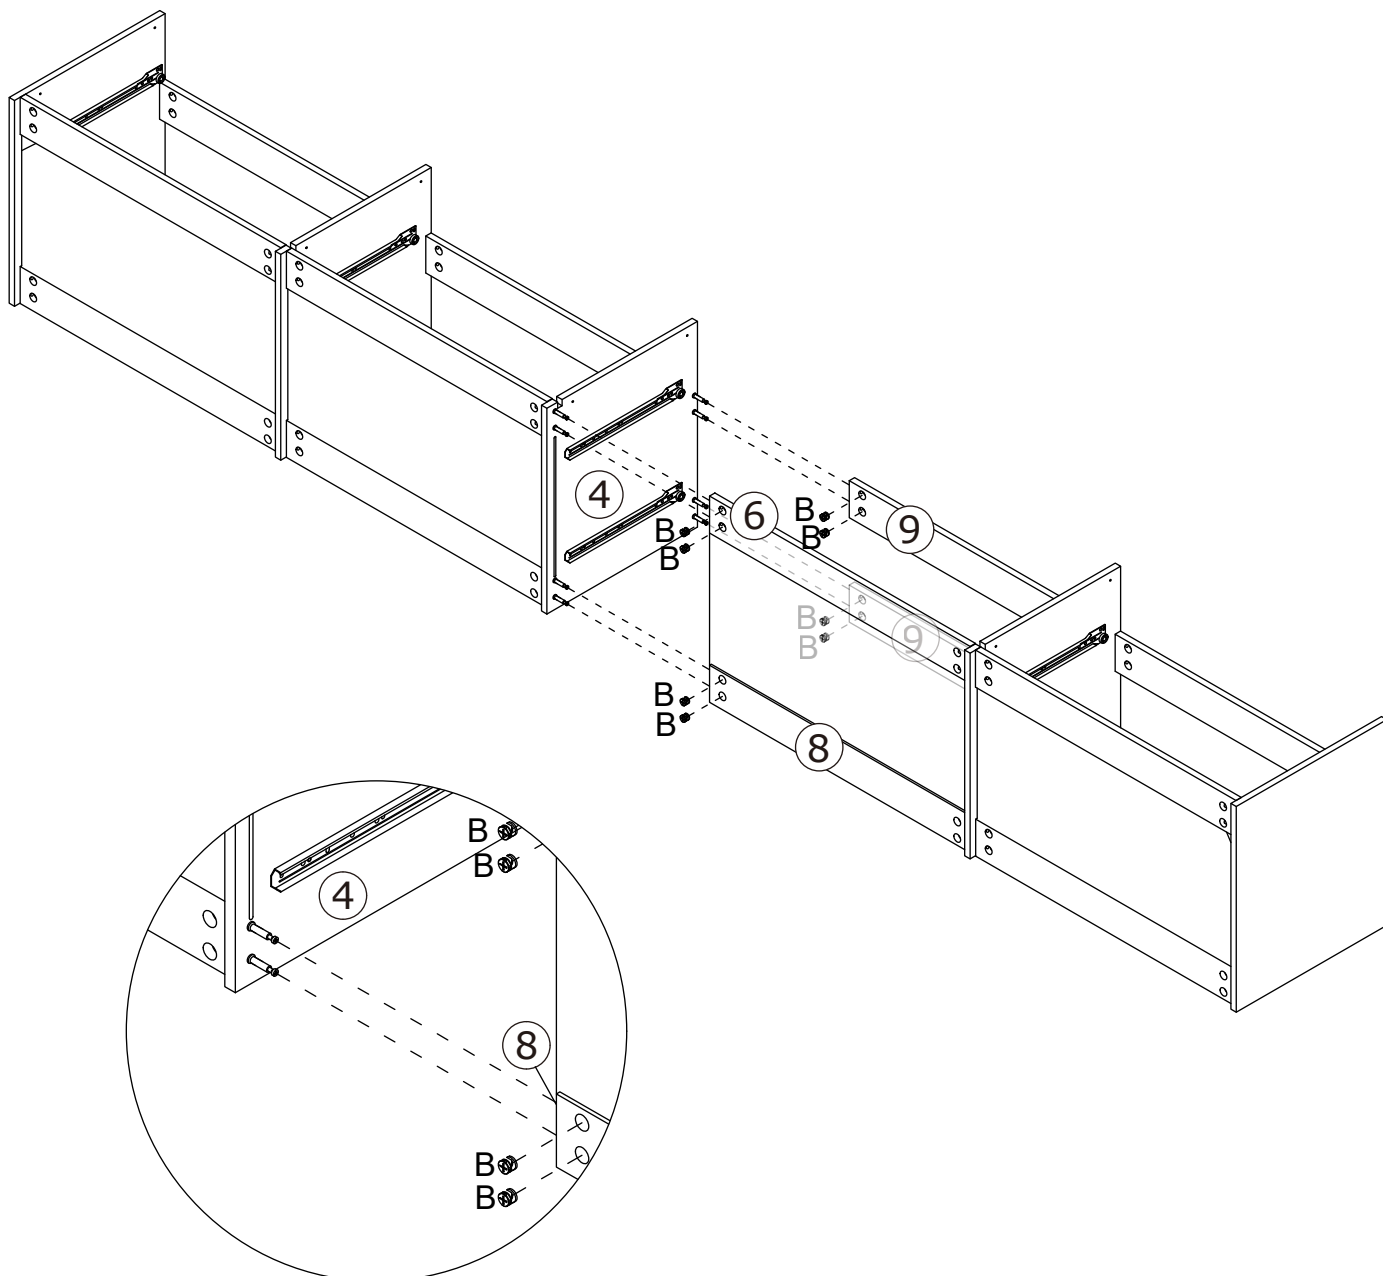

17




E  x8

F  x16



G  x16

H  x1

J  x8

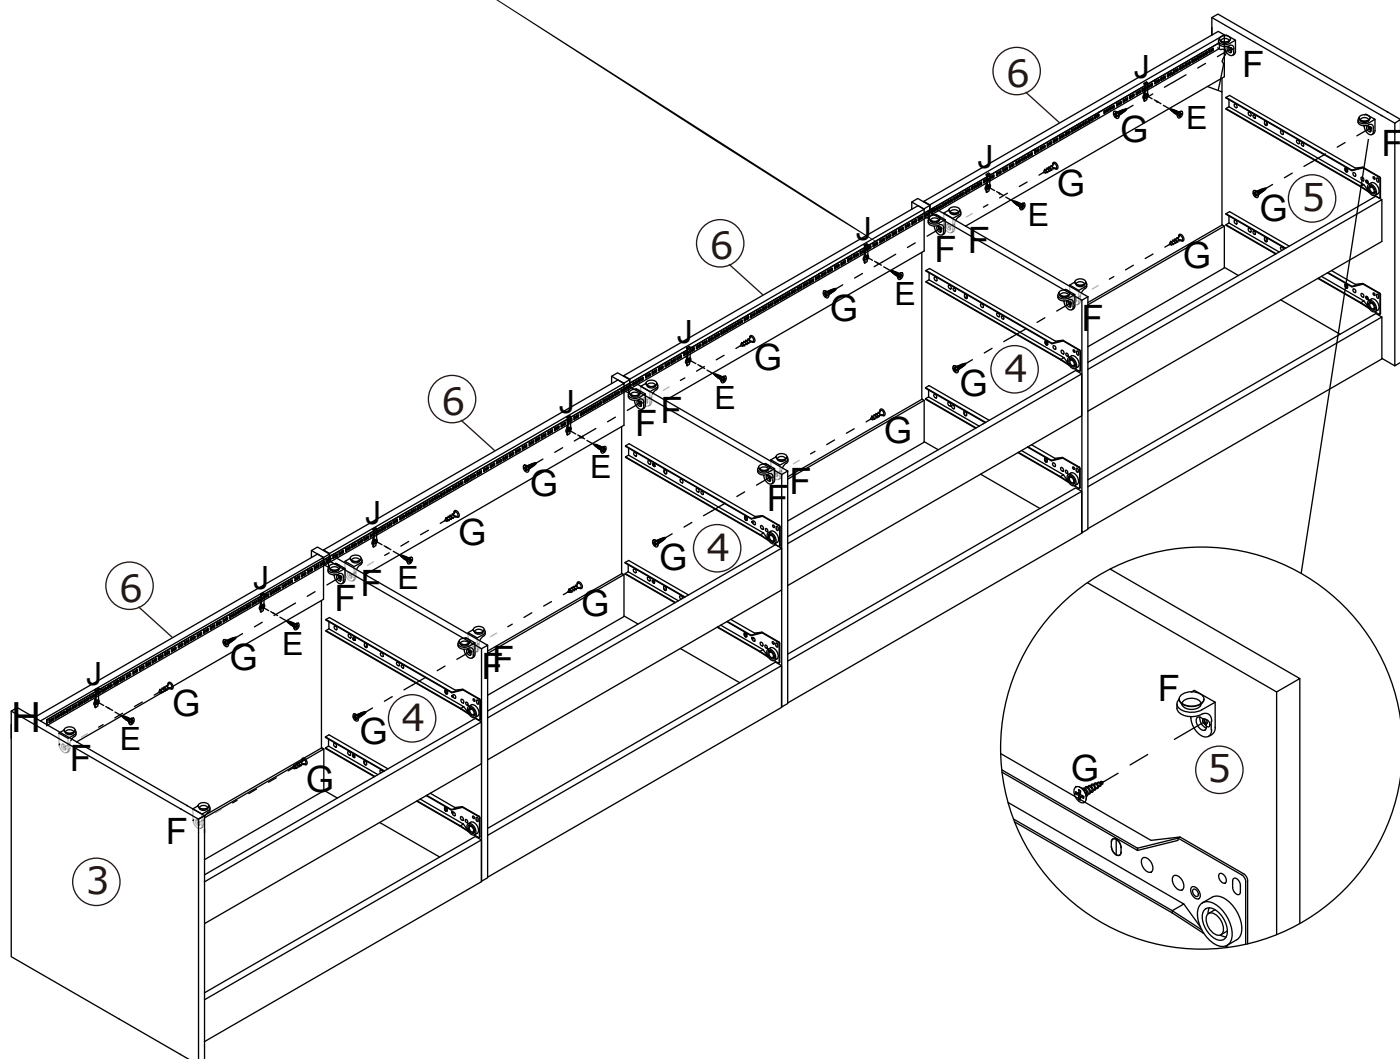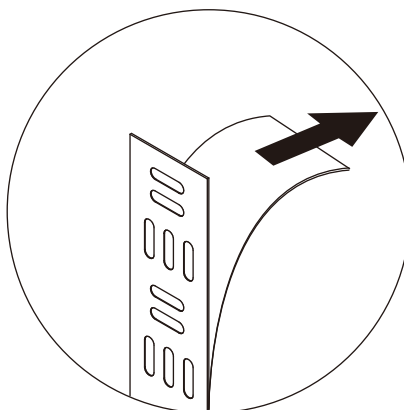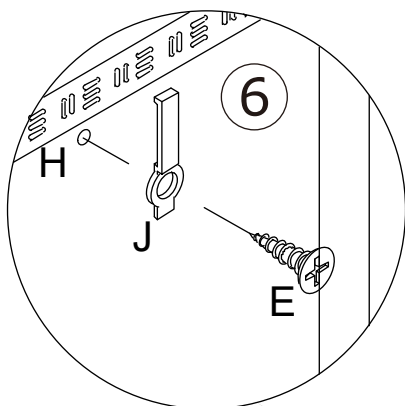


18

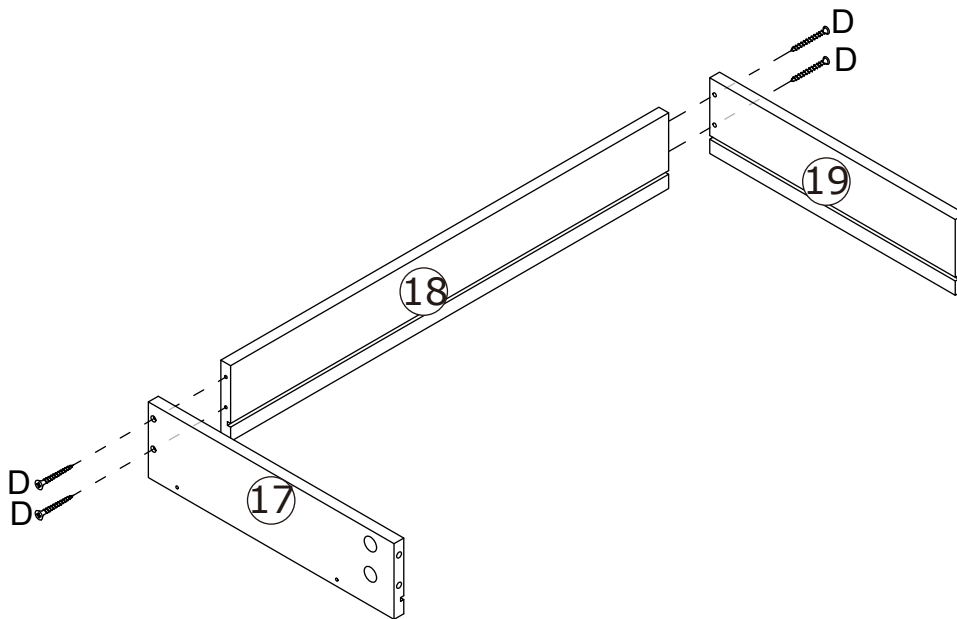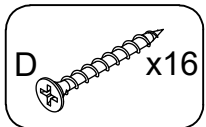




x4

19


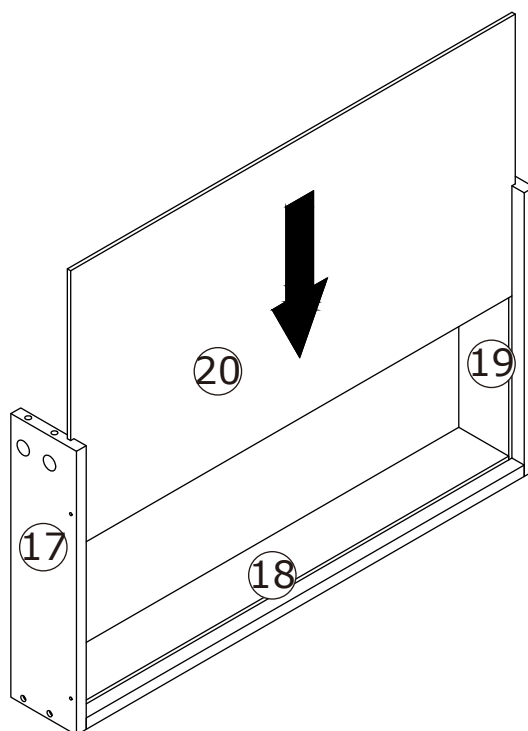


x4

20

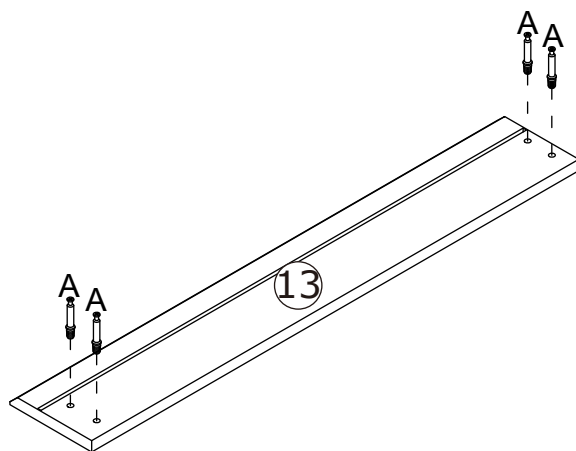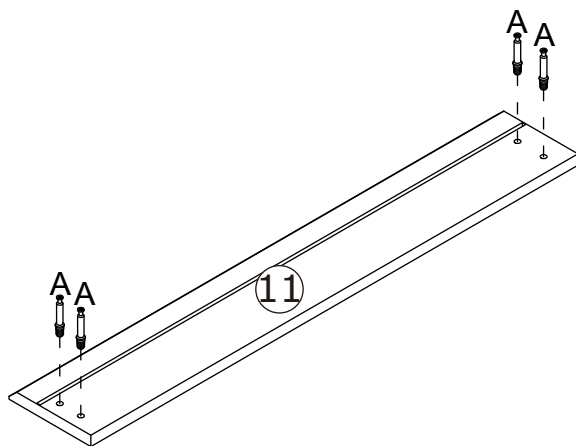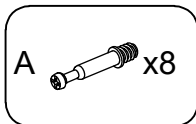



21

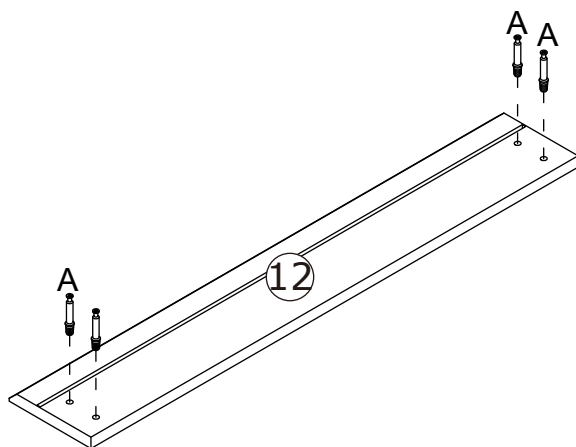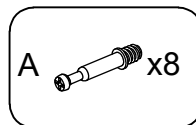

x2


22

B  x8

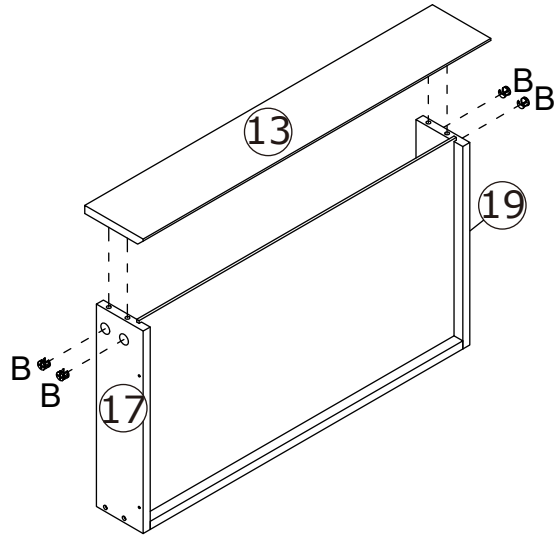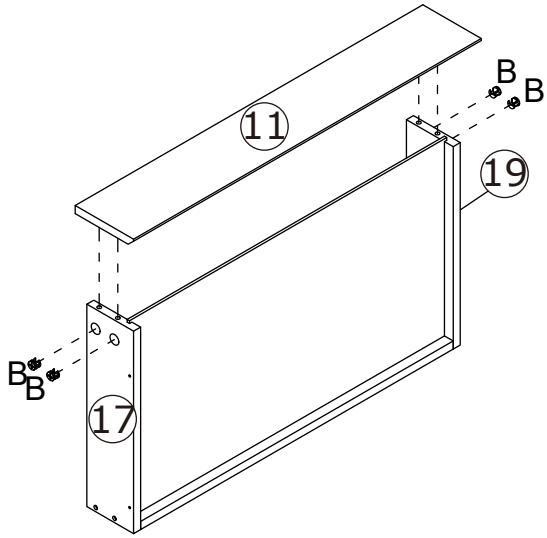

23

B  x8

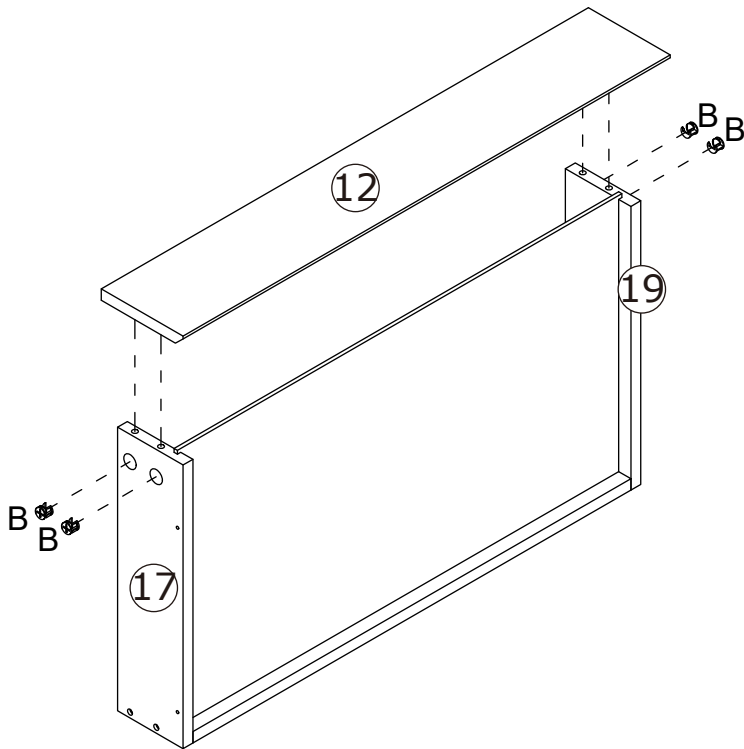


x2



24





E  x8

DL  x2

DR  x2

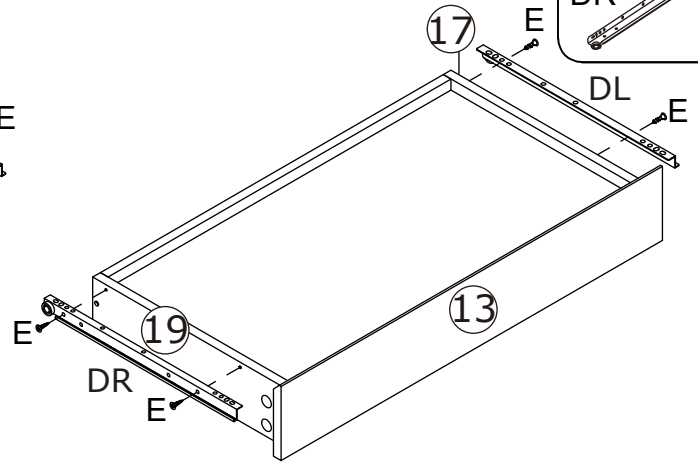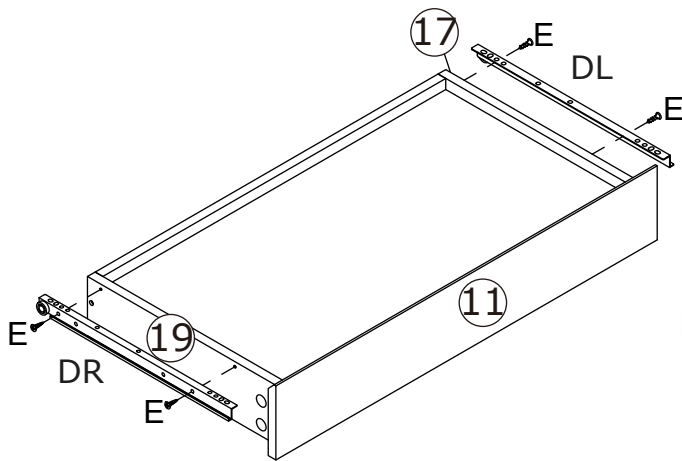


25

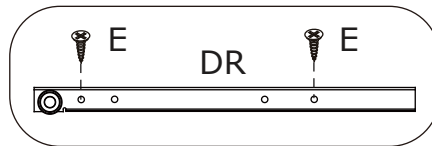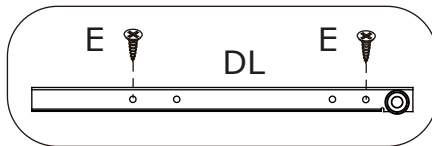

E  x8



DL  x2

DR  x2

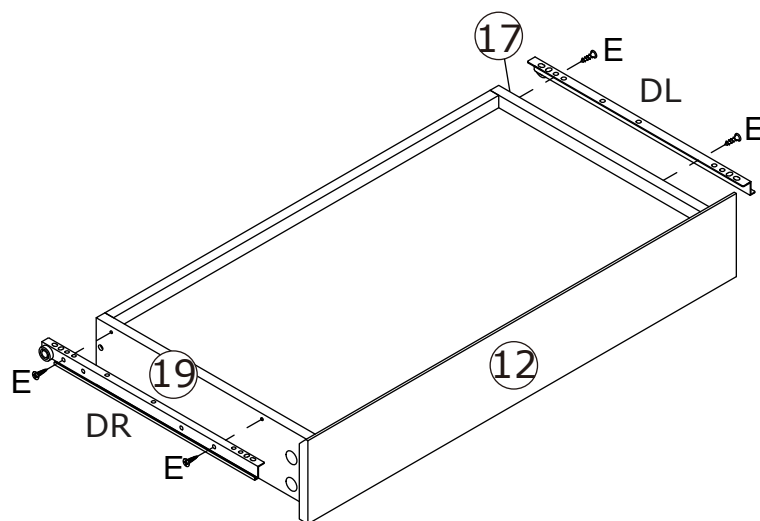


x2

26

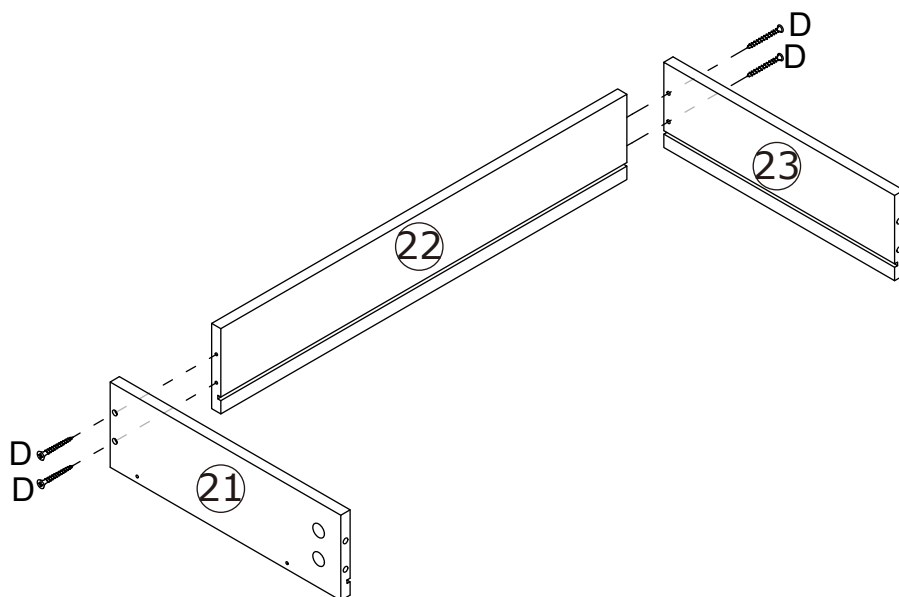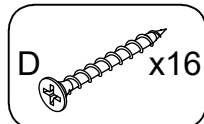

x4



27

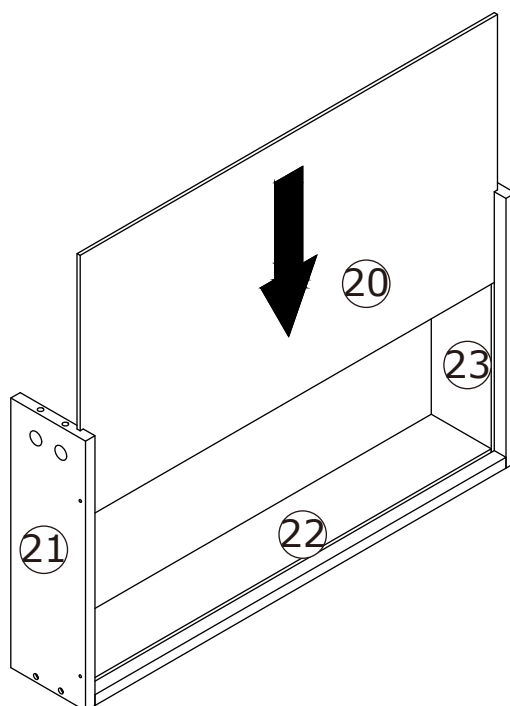

x4


28

A  x8

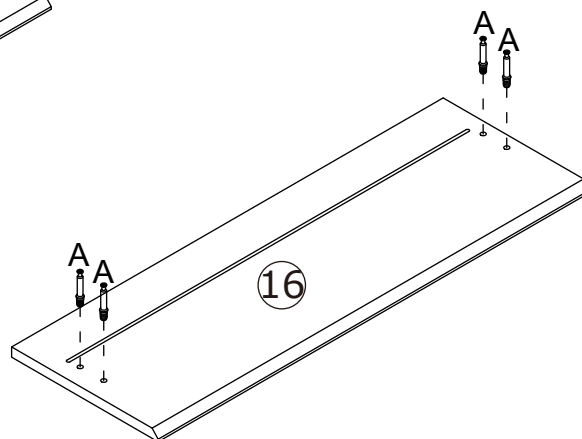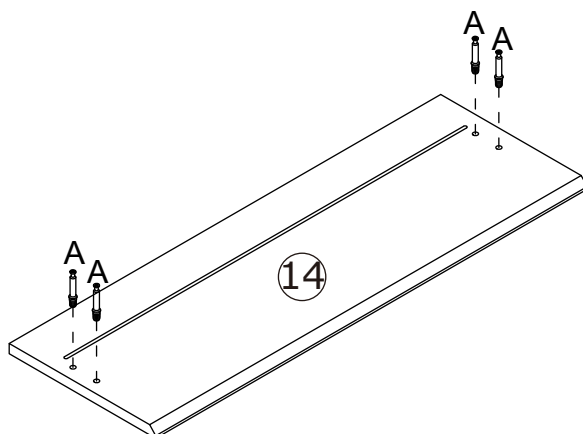




29

A  x8


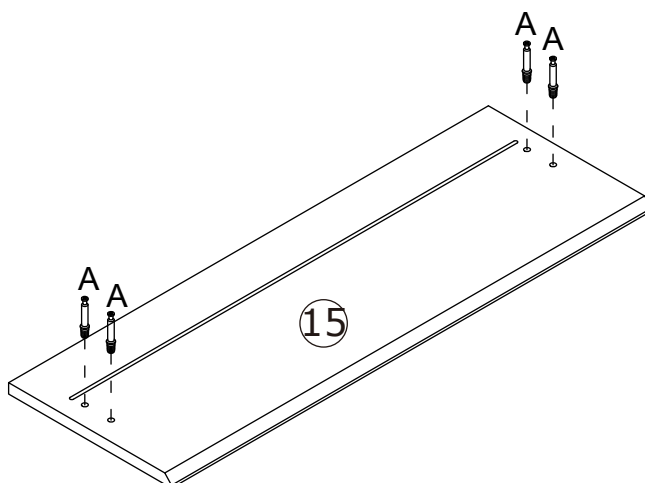


x2

30

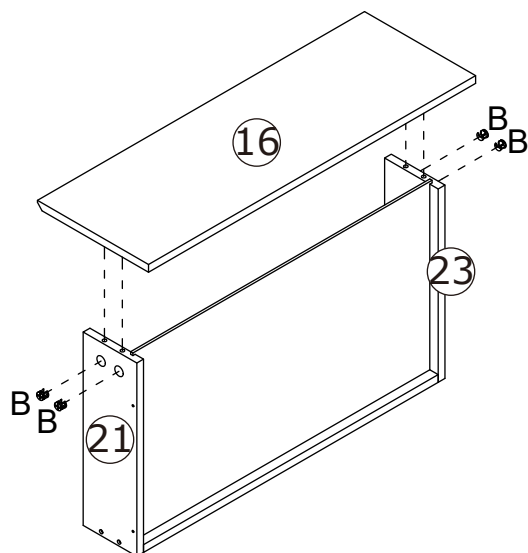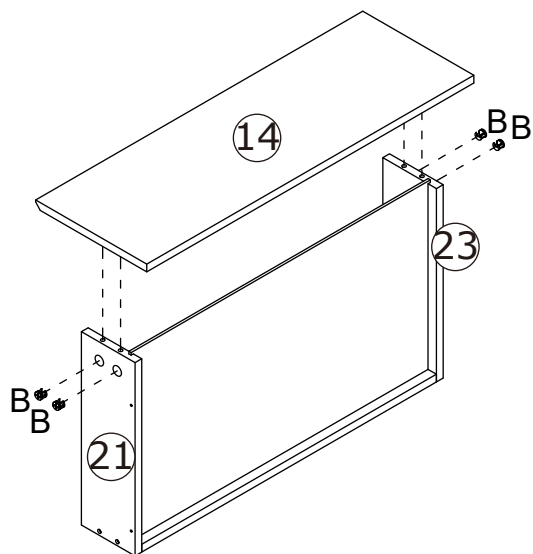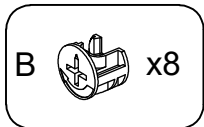


31

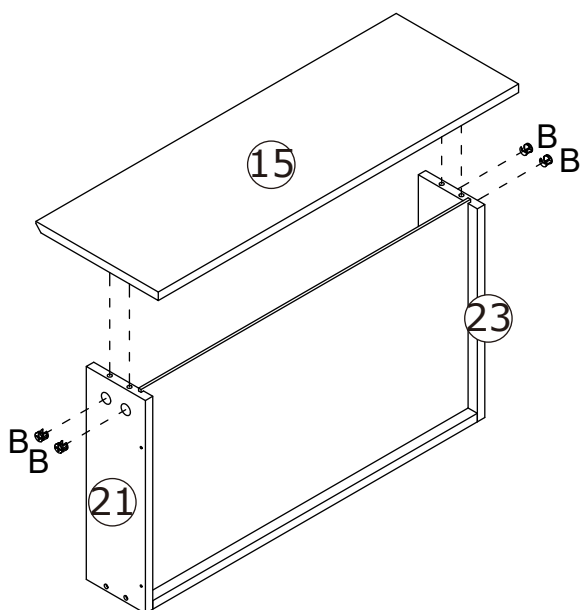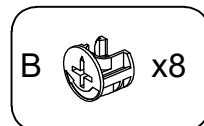

x2



32

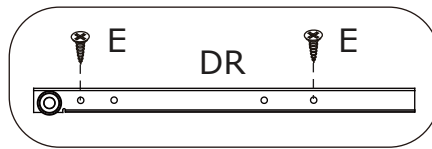



E  x8

DL  x2


DR  x2

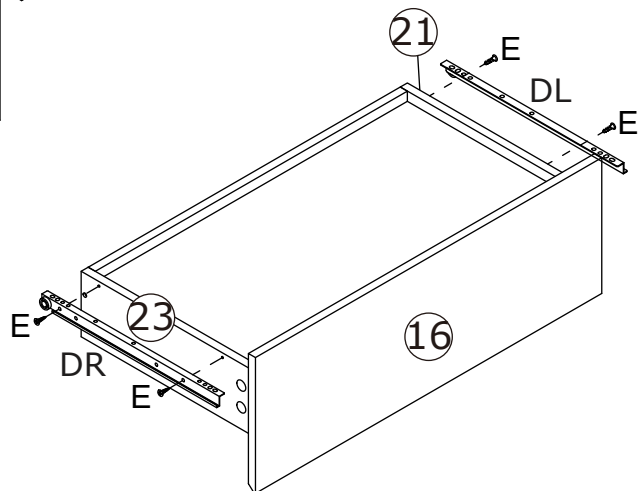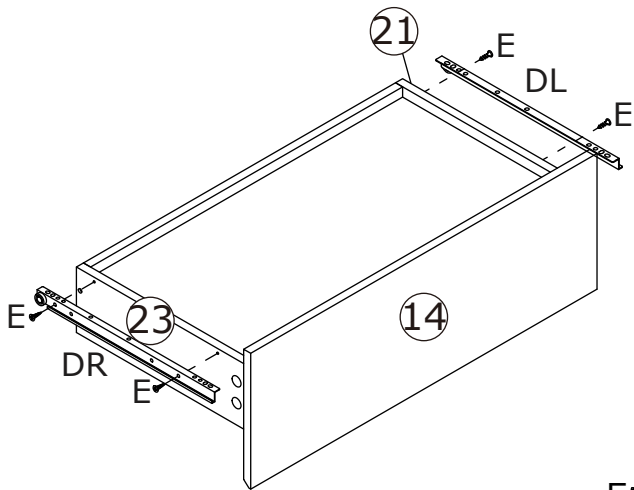


33

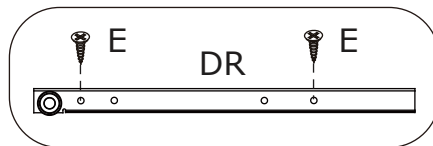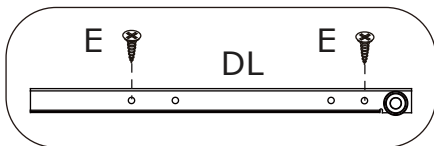

E  x8


DL  x2


DR  x2

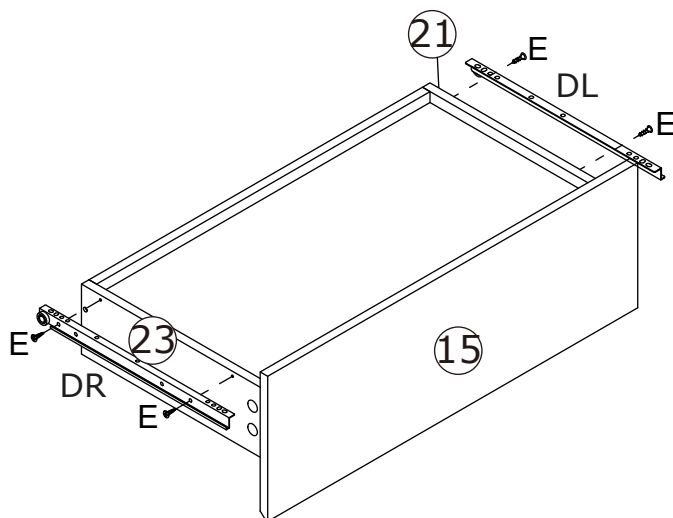

x2

34

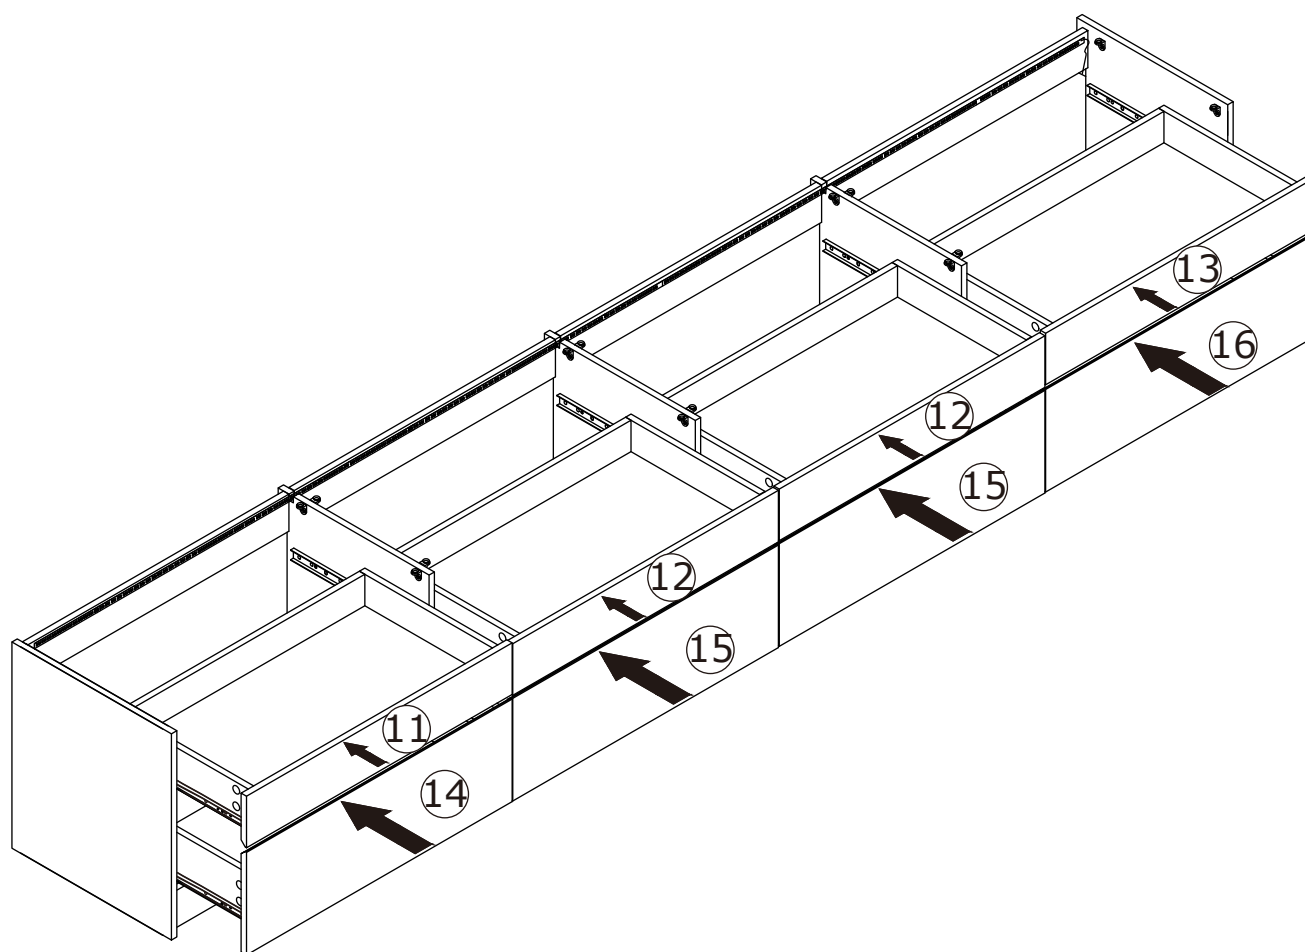

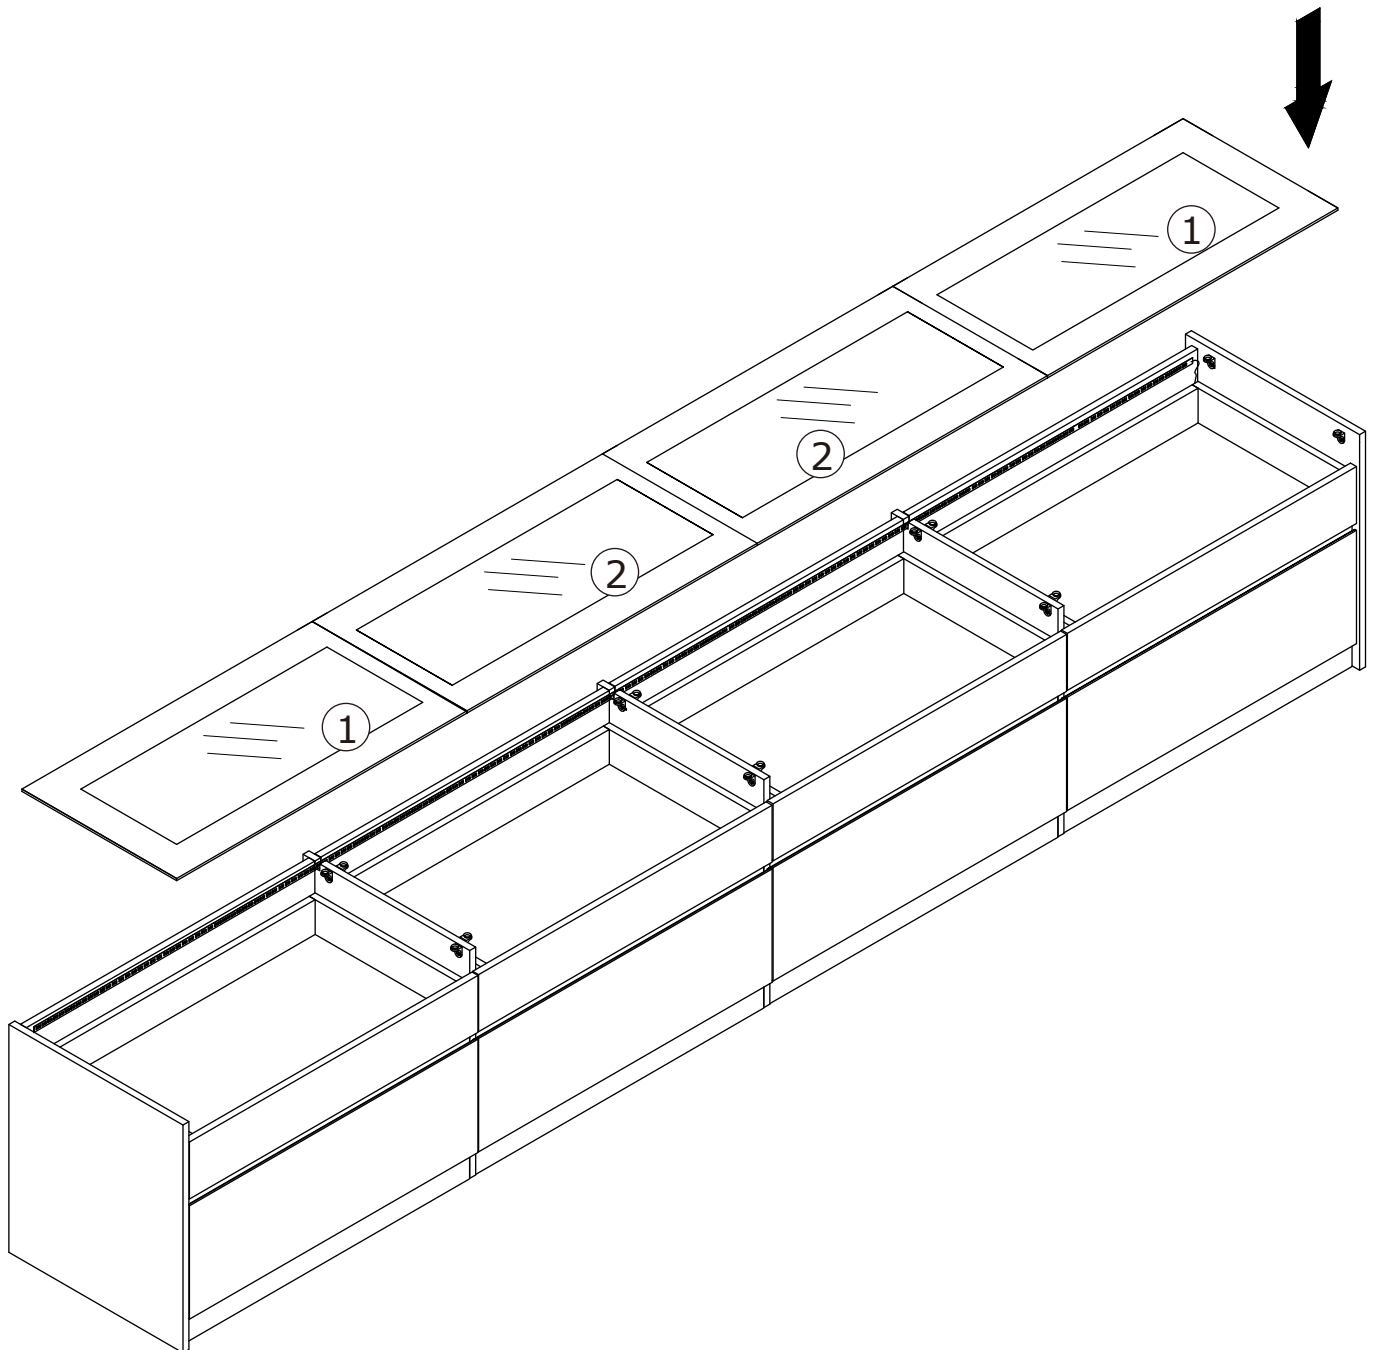

36

K  x16

L  x16

