

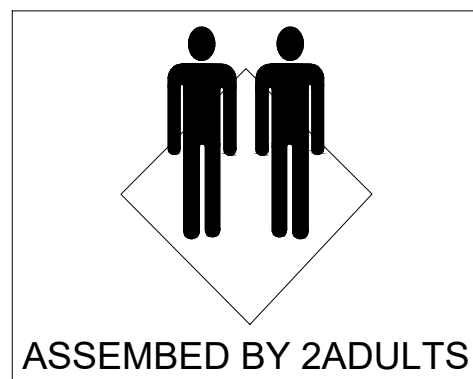


Arc-shaped computer desk

AJ-DJ505017

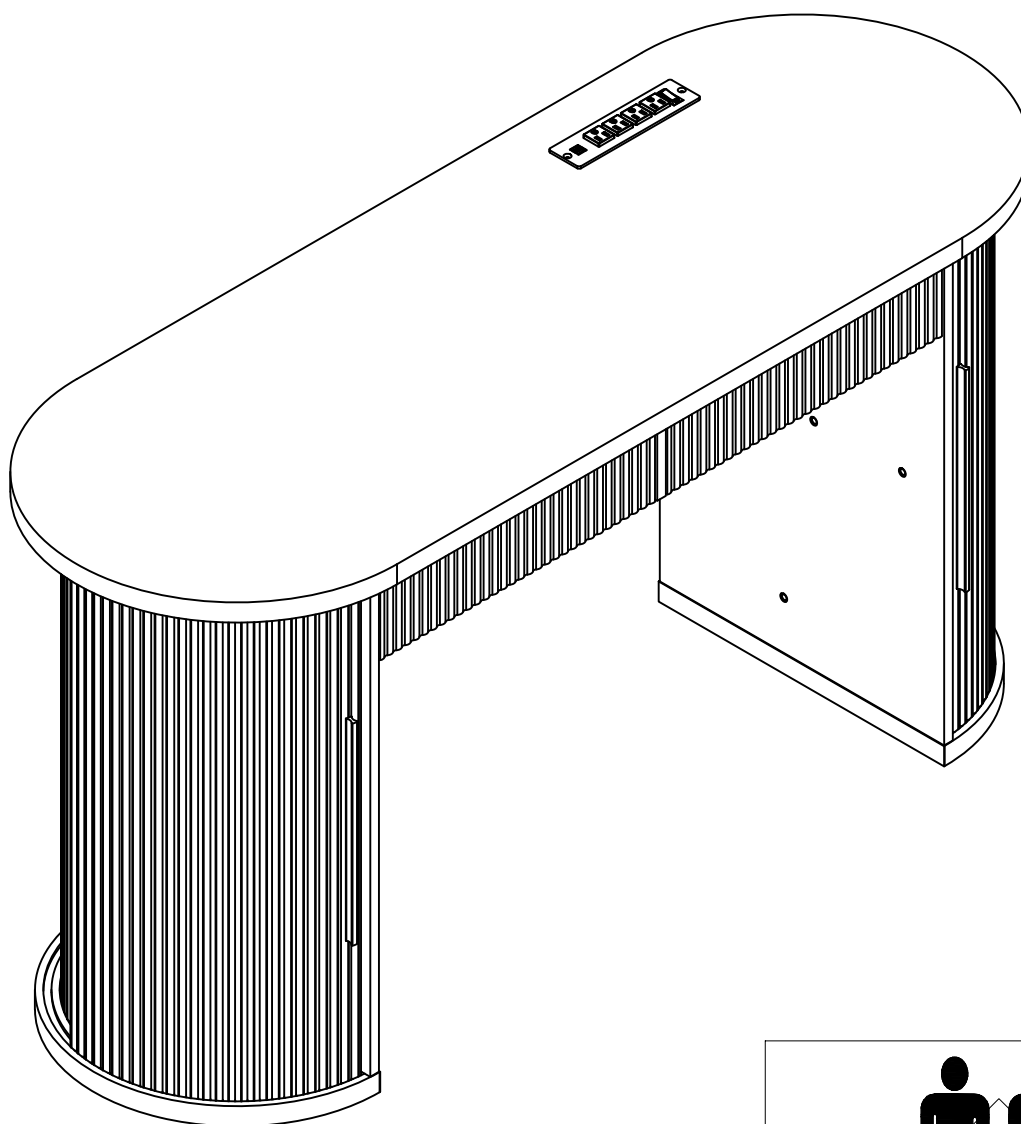


version: 1.0

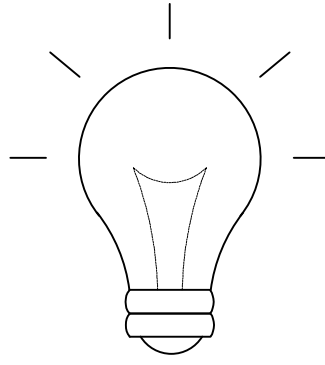


friendly reminder











To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

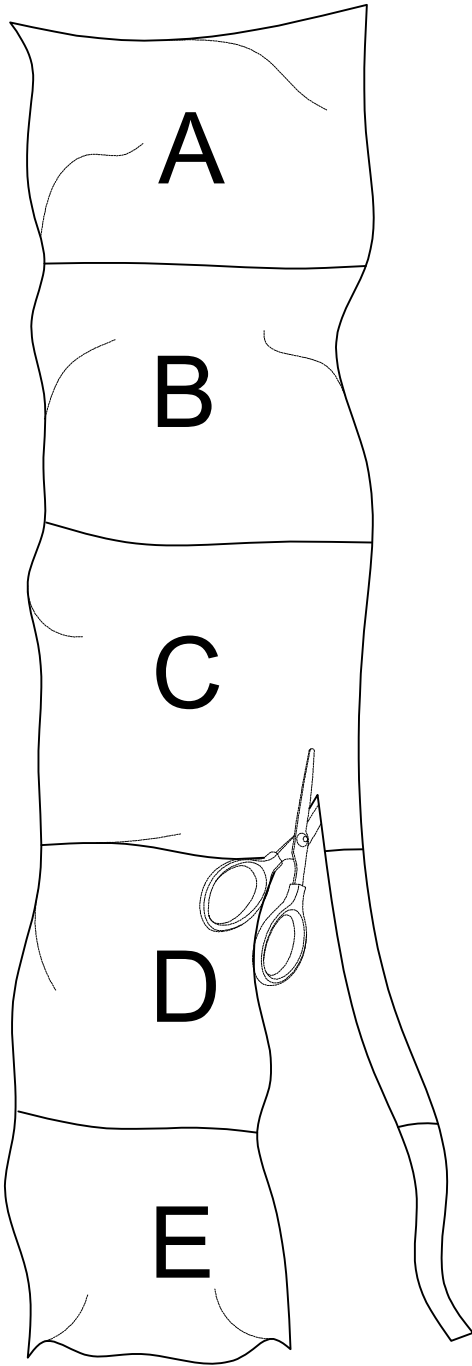


ASSEMBLY INSTRUCTIONS

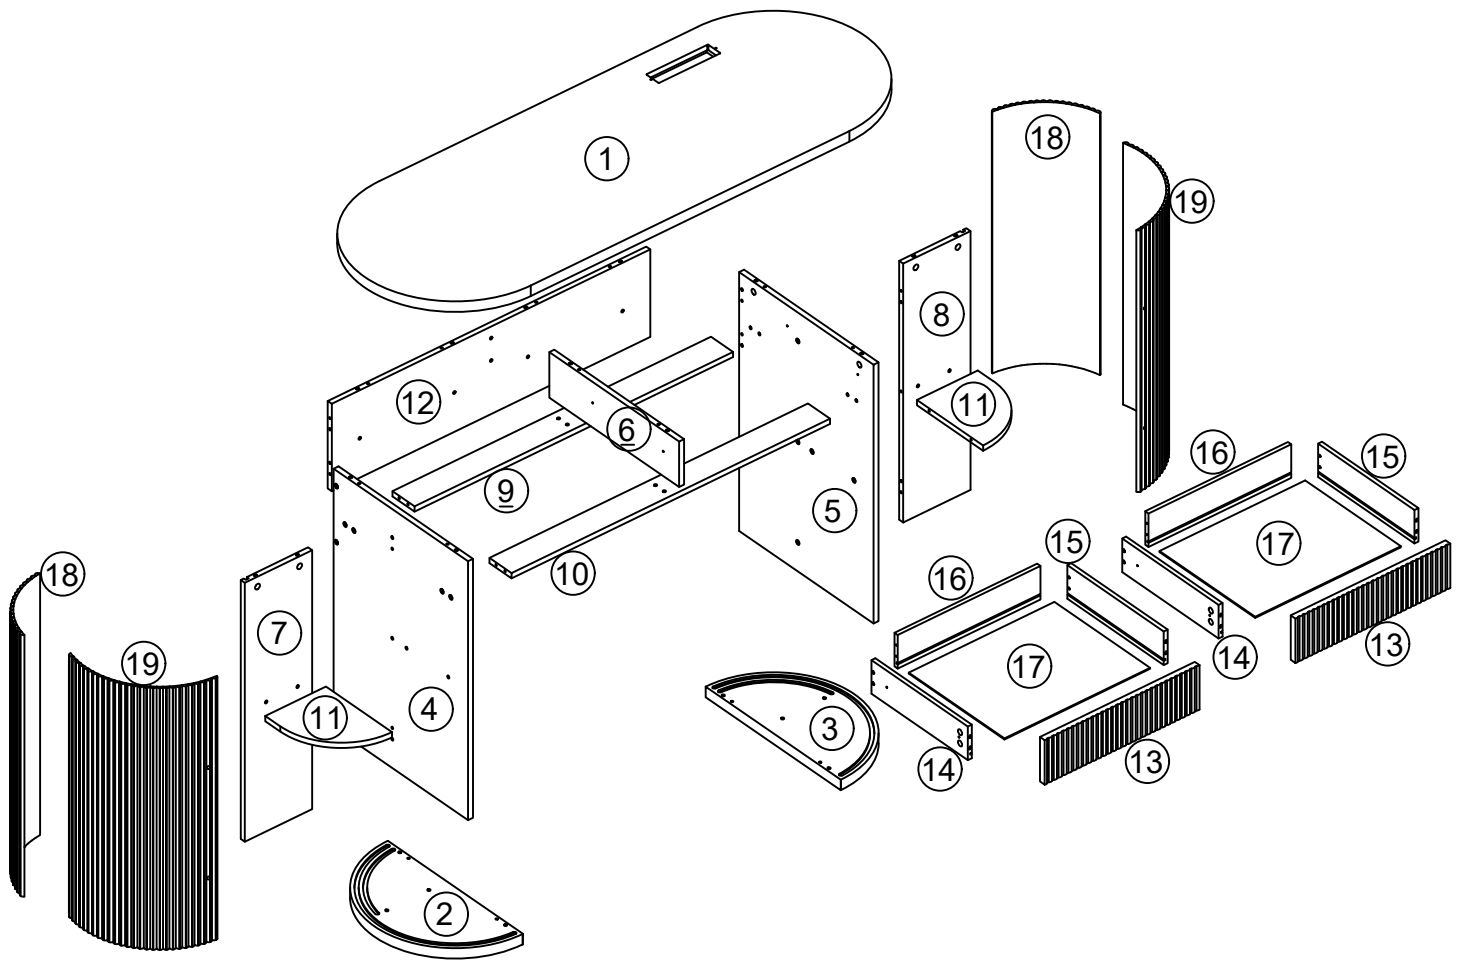


ASSEMBLY INSTRUCTIONS

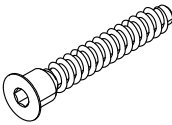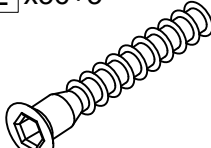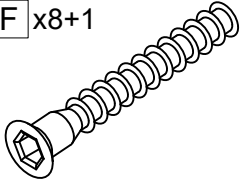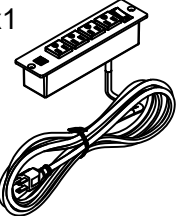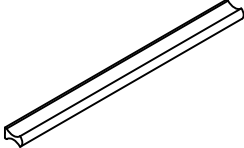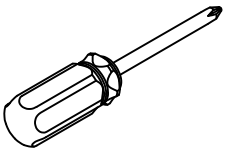A x22+2  Ø6x35mm	B x22+2  Ø15x10mm	C x22+2  Ø6x30mm	D x8+1  Ø5x38mm 3mm	E x36+3  Ø7x38mm 4mm
F x8+1  Ø7x48mm 4mm	G x1 	H x22+2  Ø3.5x12mm	I x2  L=340mm	J x2 
K x4+1  M4x10mm	L x8+1  Ø30x3mm	M x1  4mm	N x1  3mm	O x26+3  Ø20mm
				

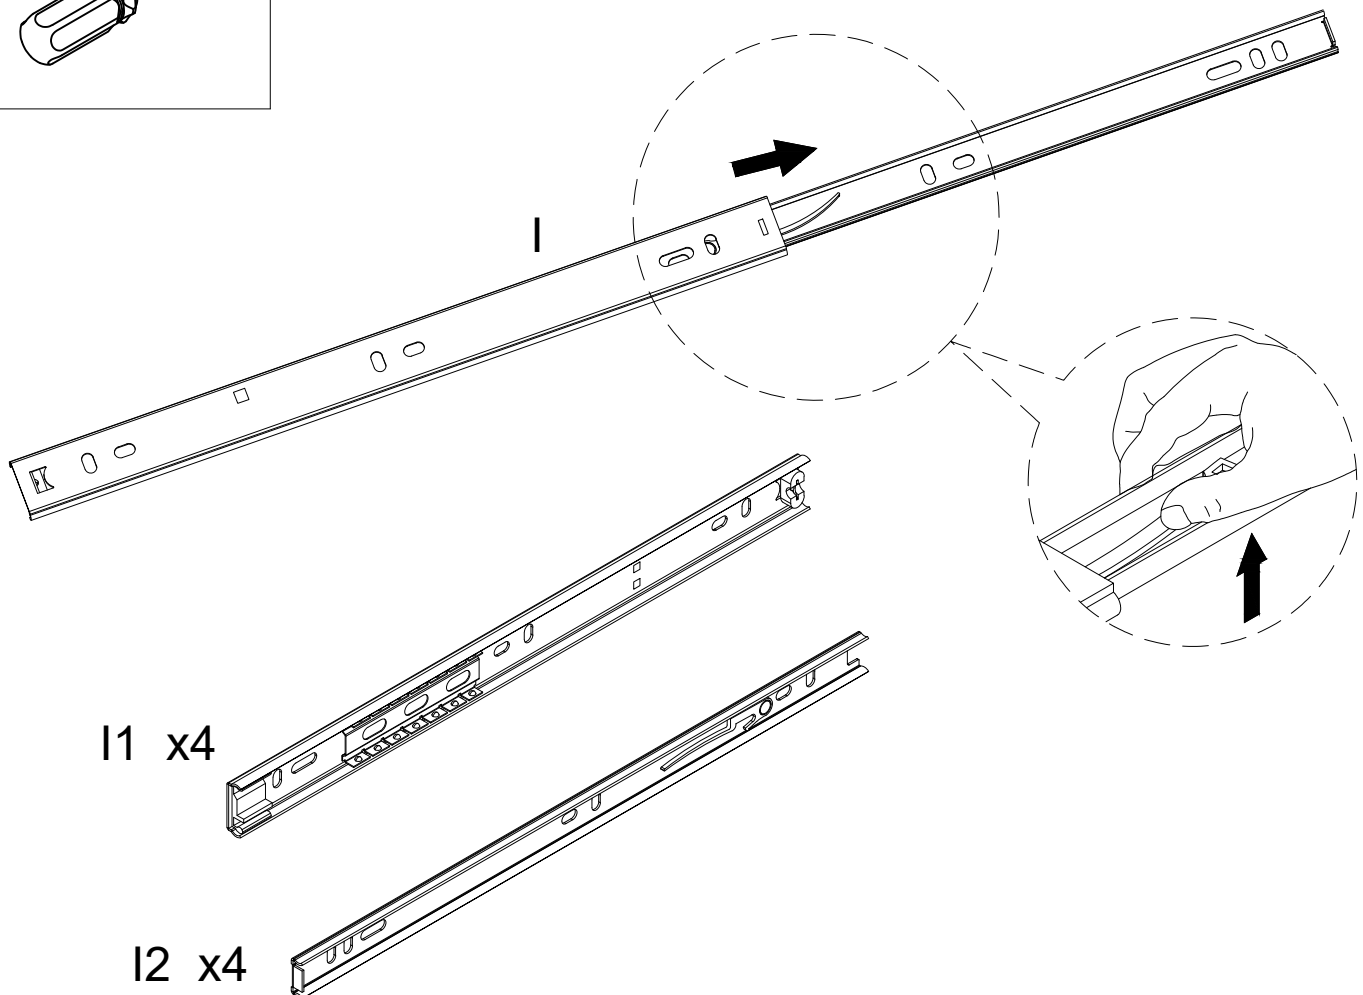


ASSEMBLY INSTRUCTIONS

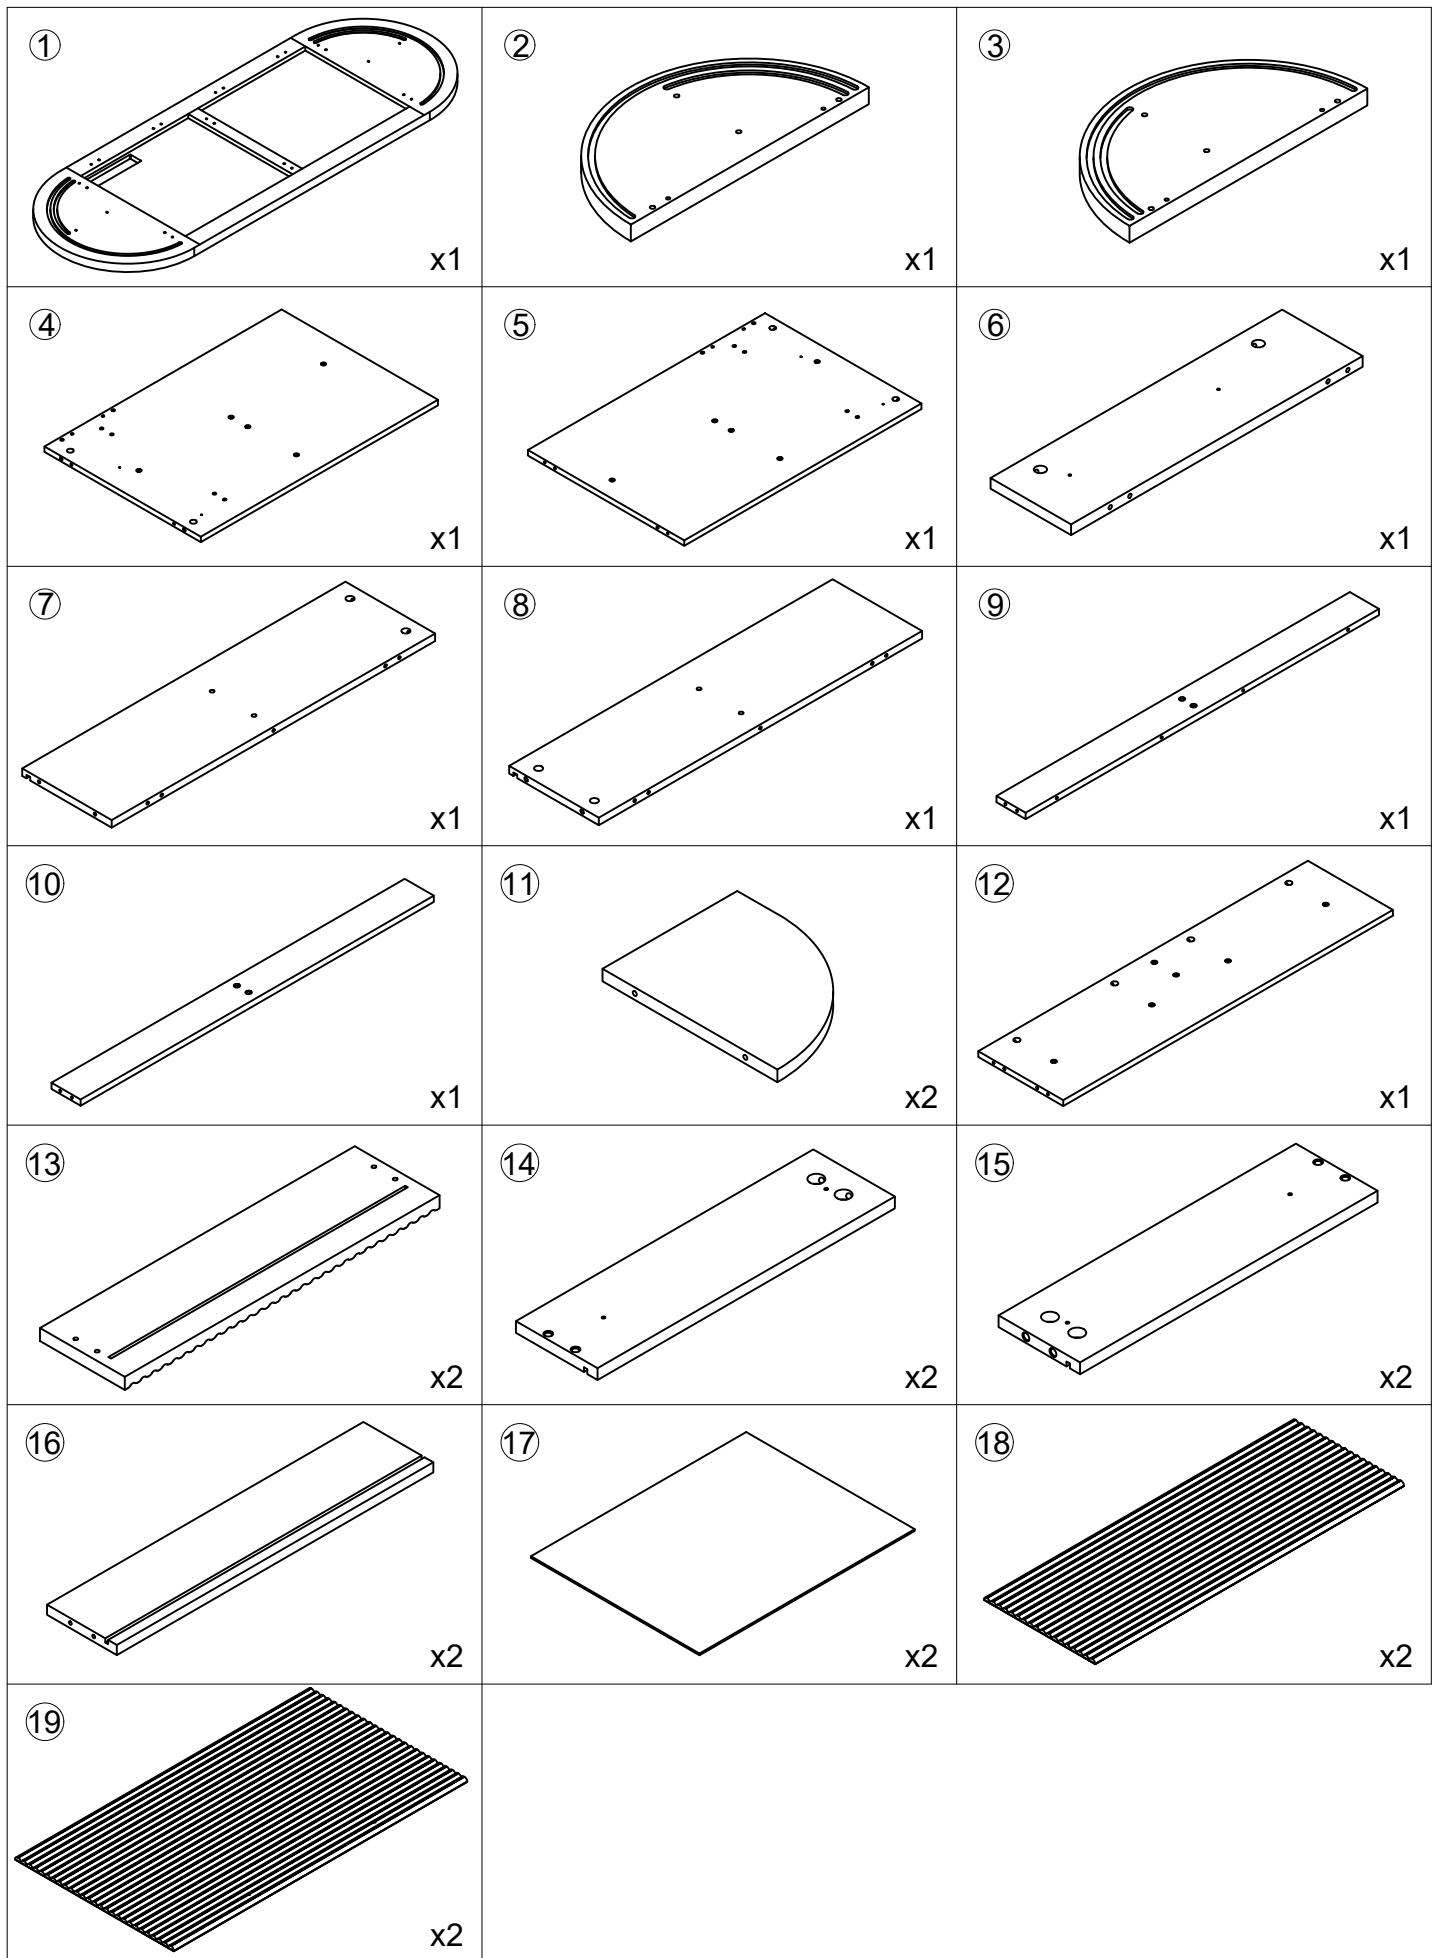


INSTALLATION INSTRUCTION

STEP 1

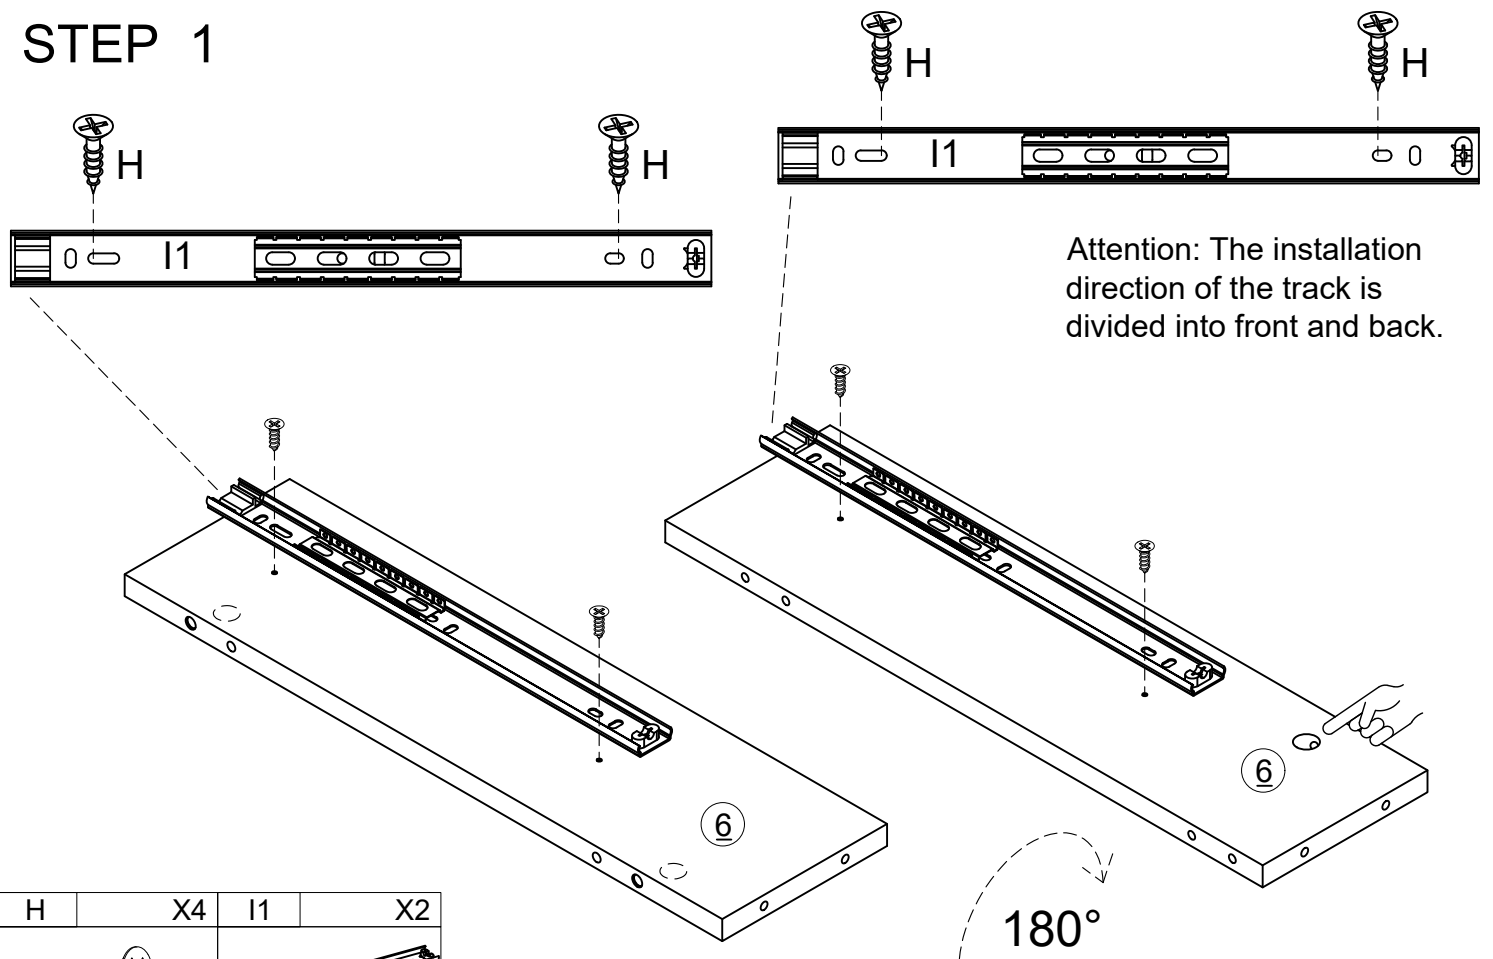


STEP 2

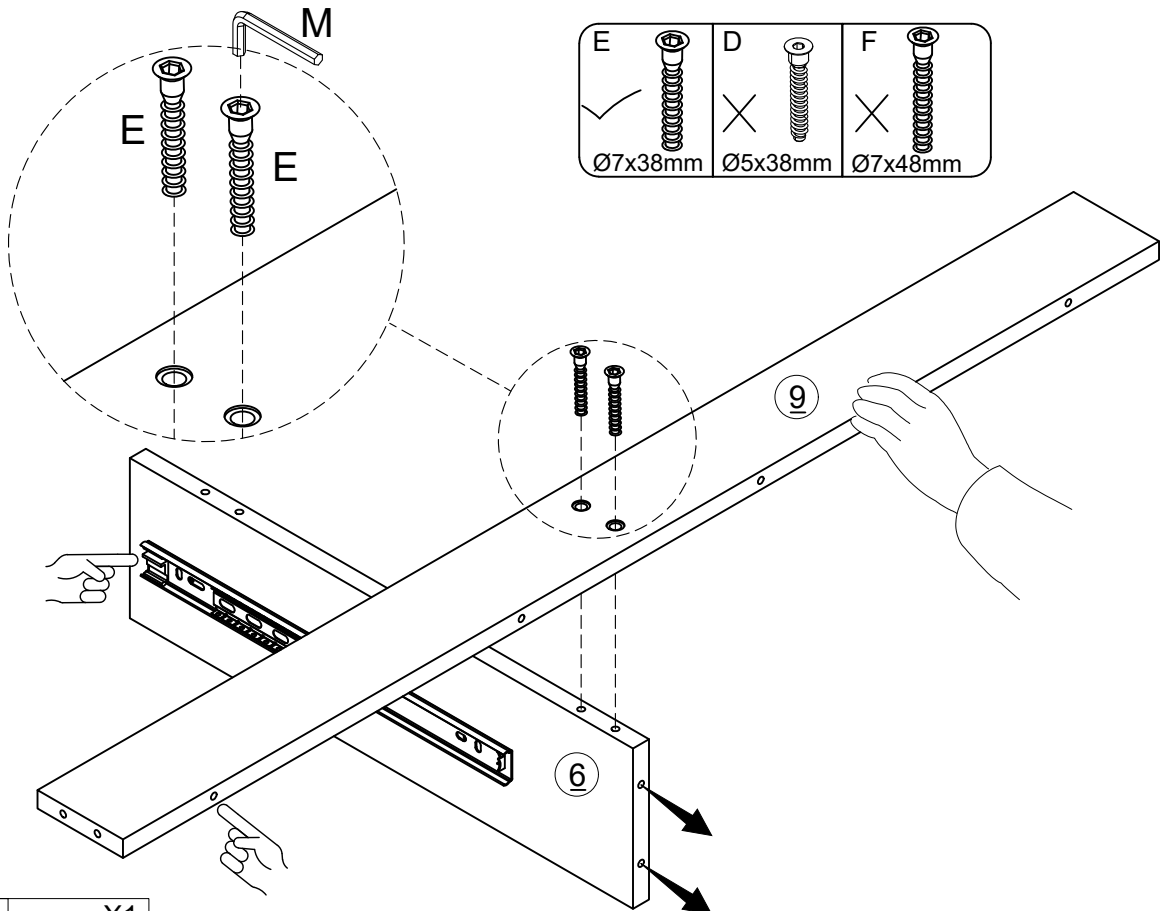


E	X2	M	X1
Ø7x38mm		4mm	

INSTALLATION INSTRUCTION

STEP 3

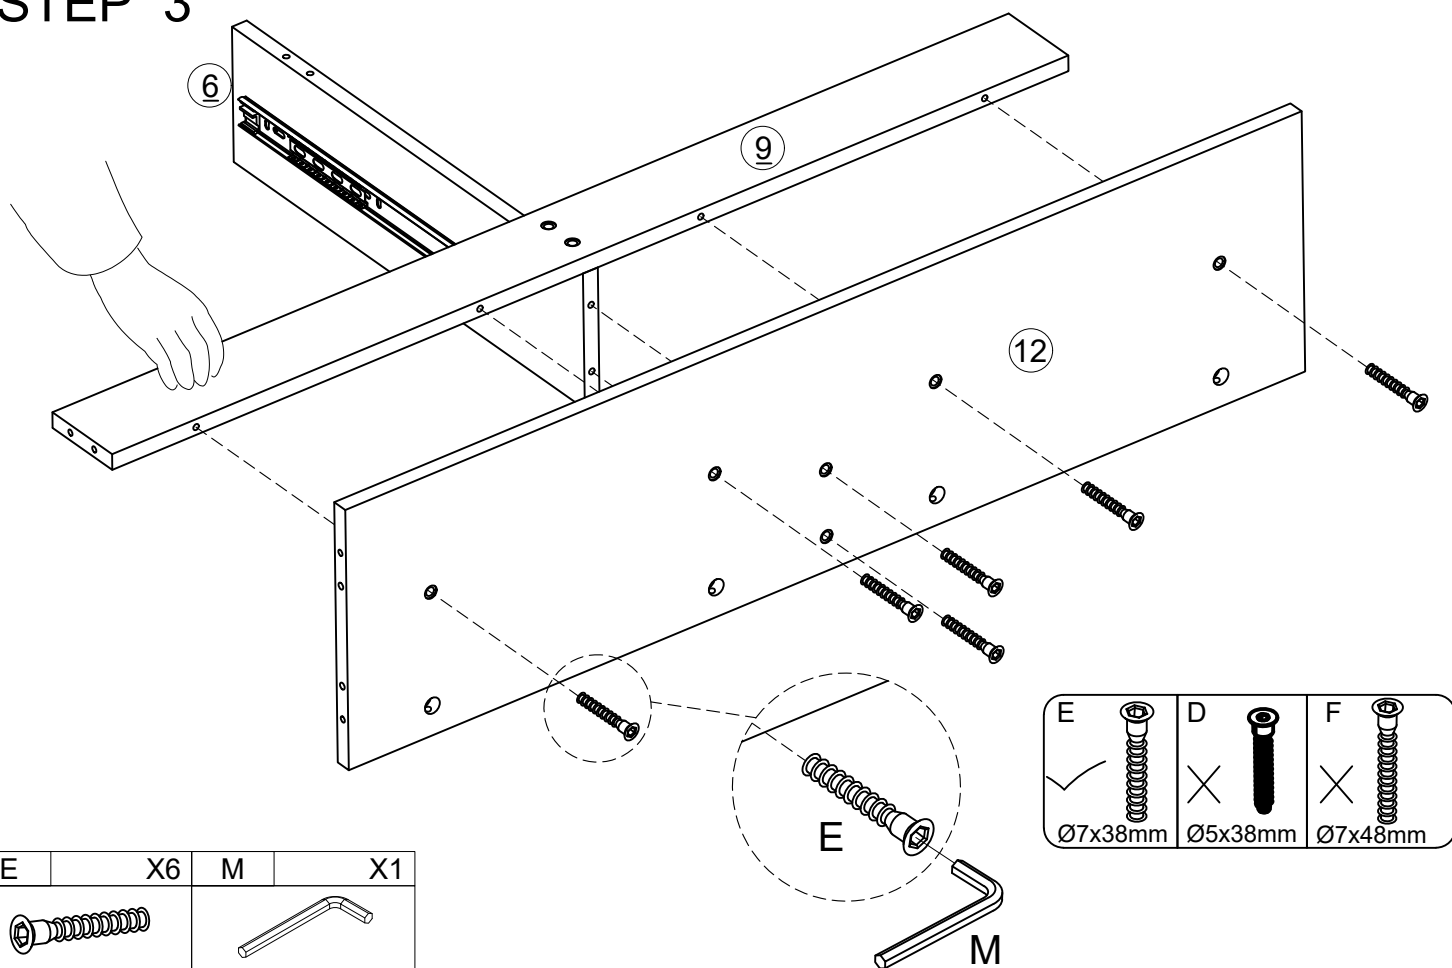



STEP 4

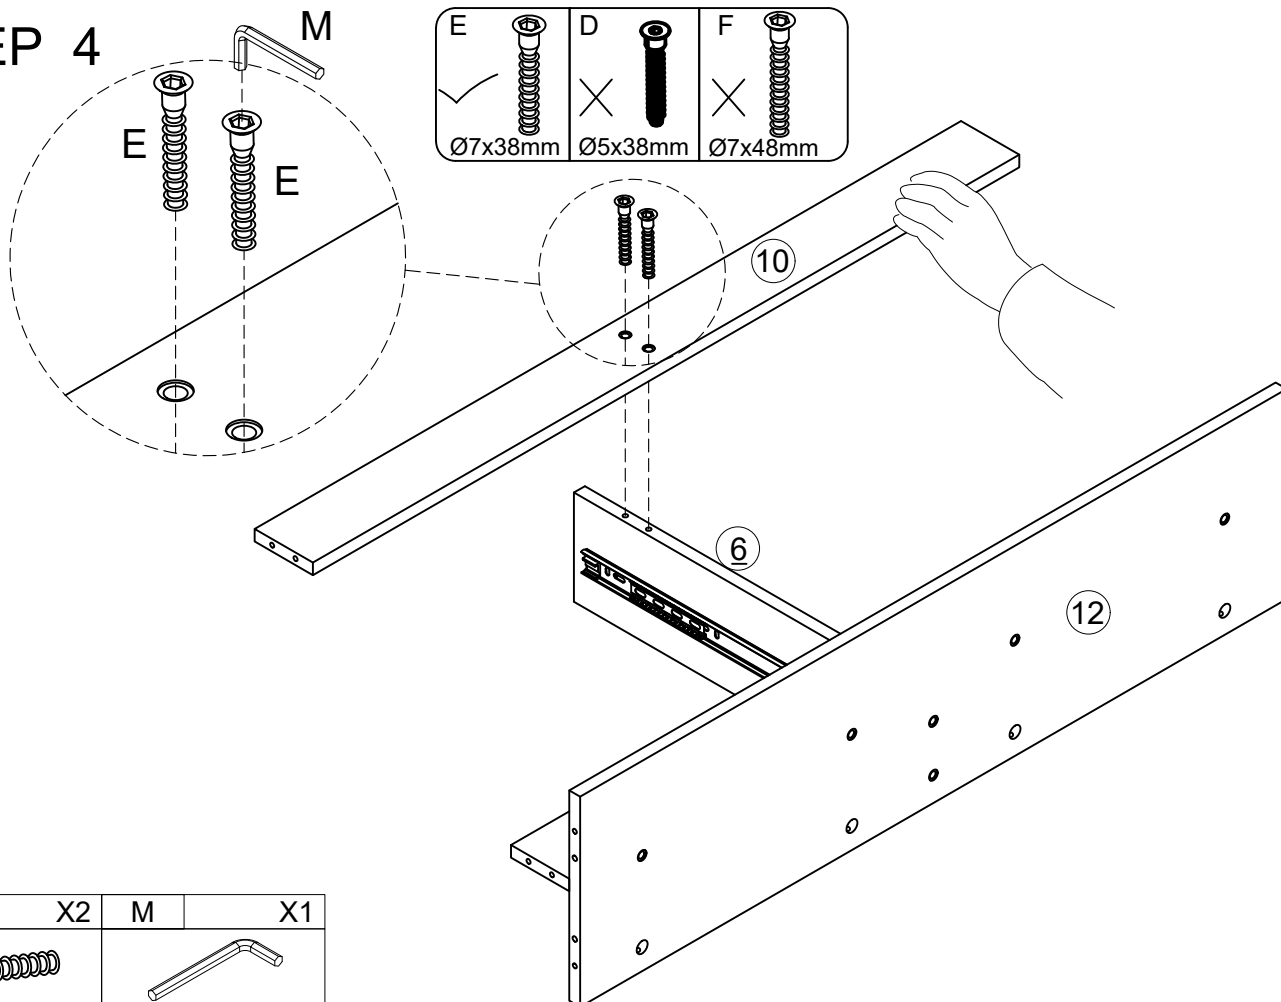


INSTALLATION INSTRUCTION


STEP 5

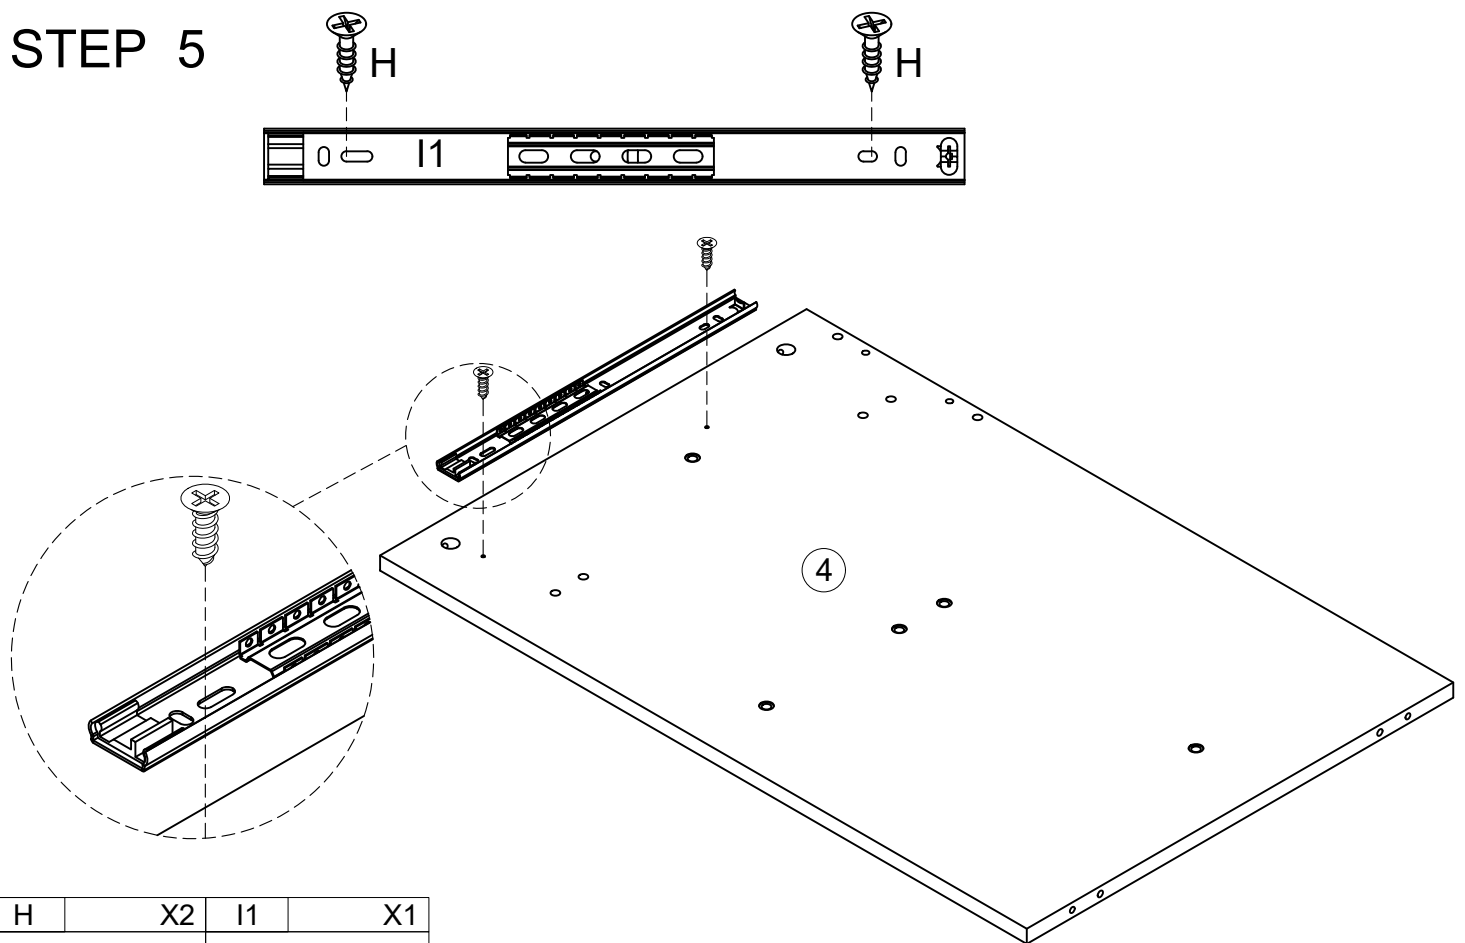

H	X2	I1	X1
			
Ø3.5x12mm			


STEP 6

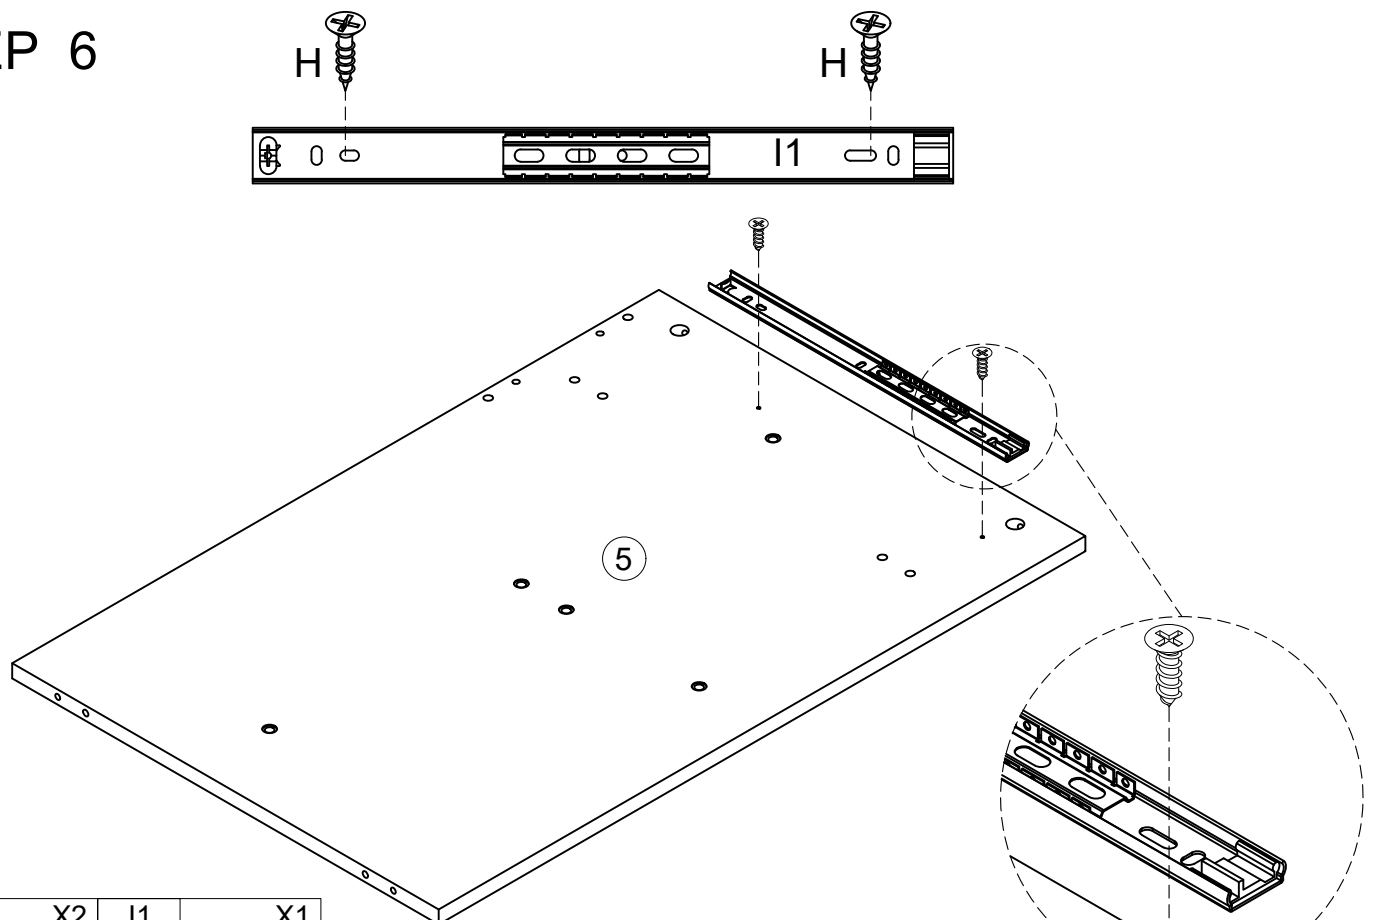


H	X2	I1	X1
			
Ø3.5x12mm			

INSTALLATION INSTRUCTION

STEP 7



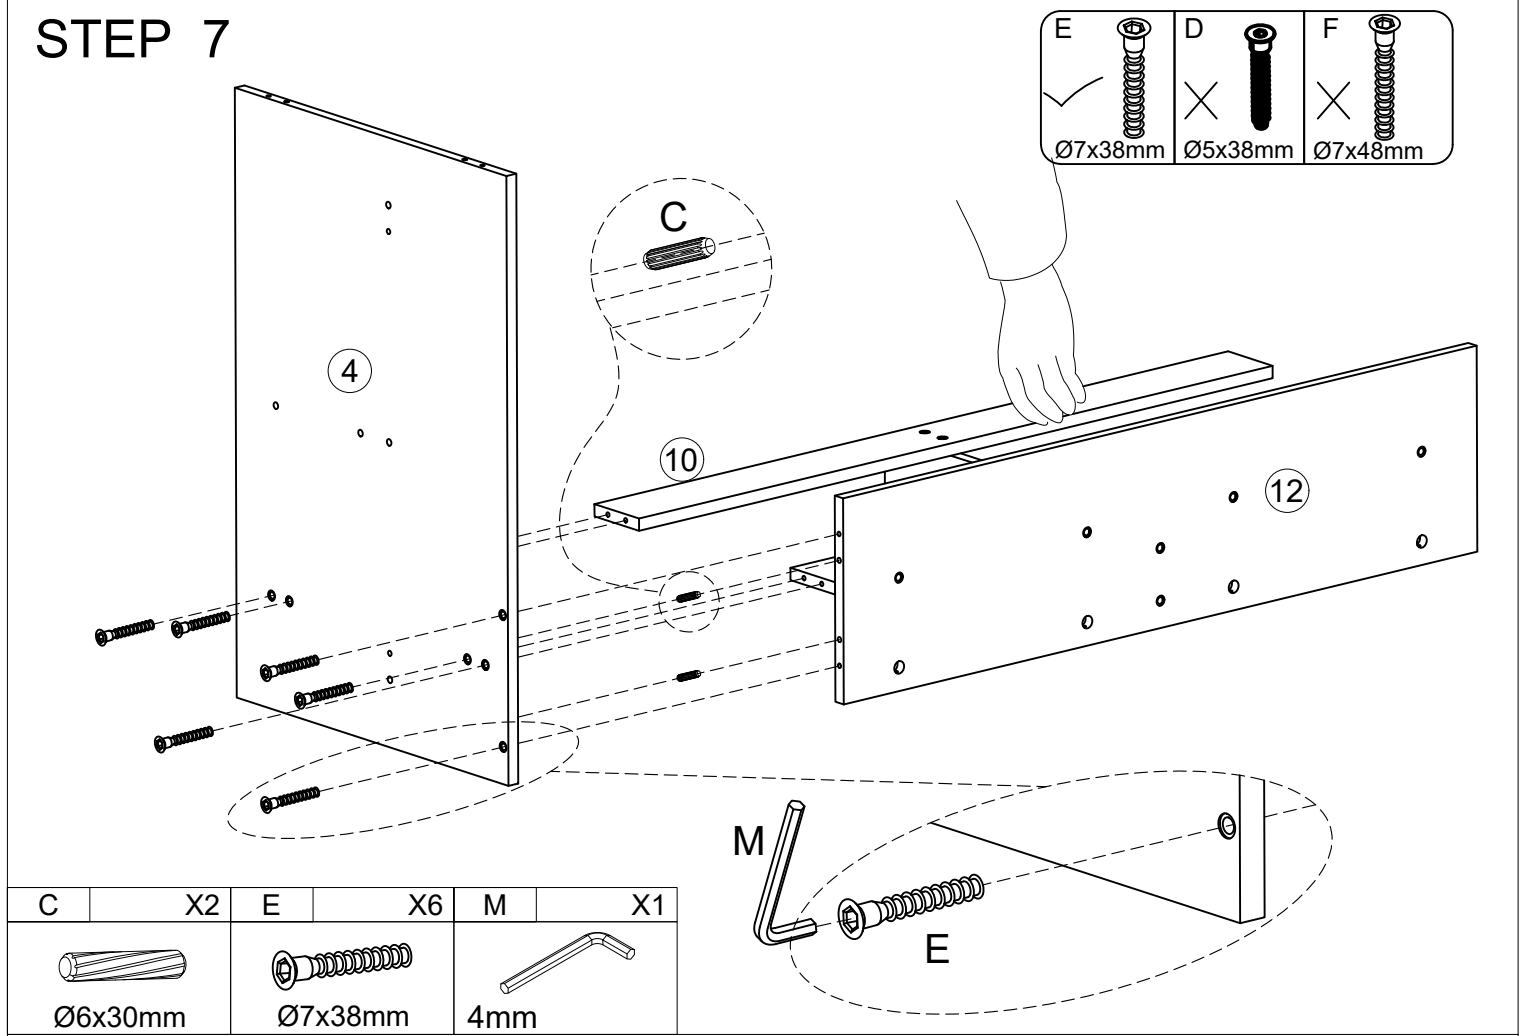



STEP 8

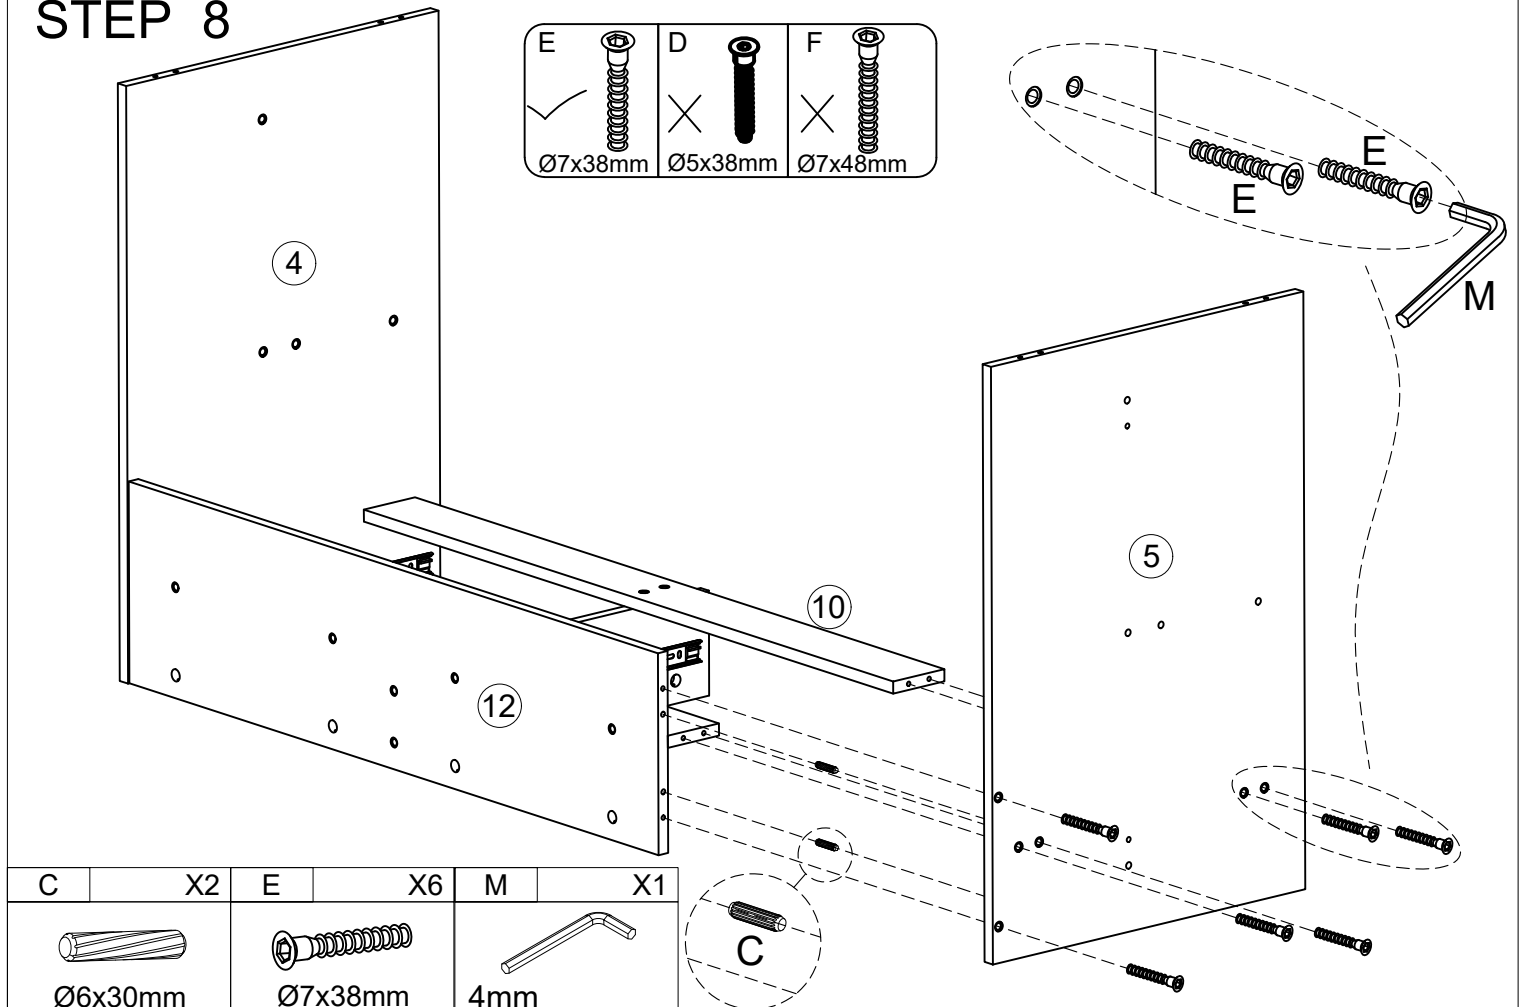



INSTALLATION INSTRUCTION

STEP 9

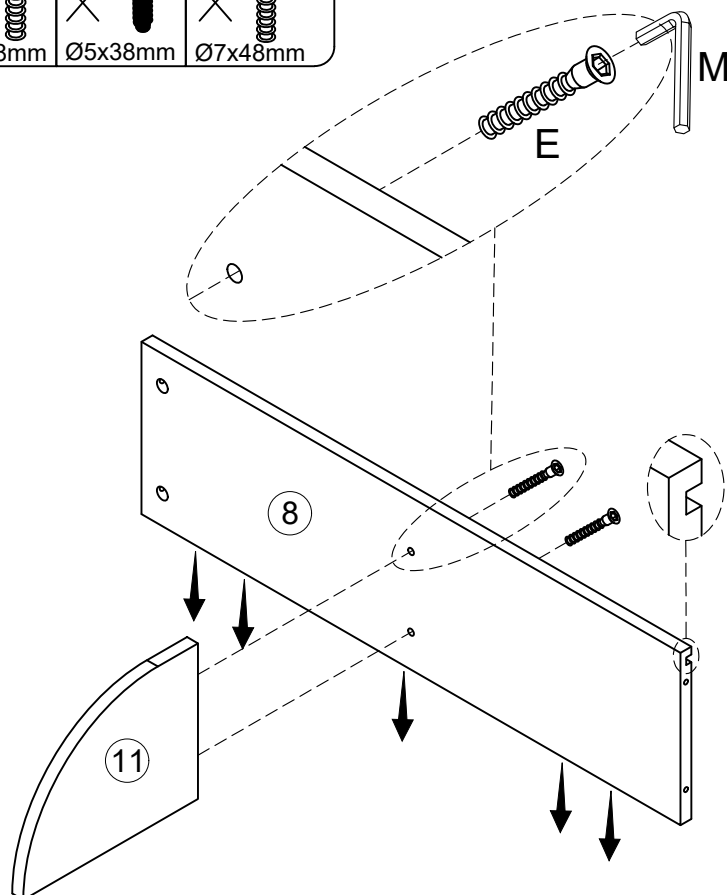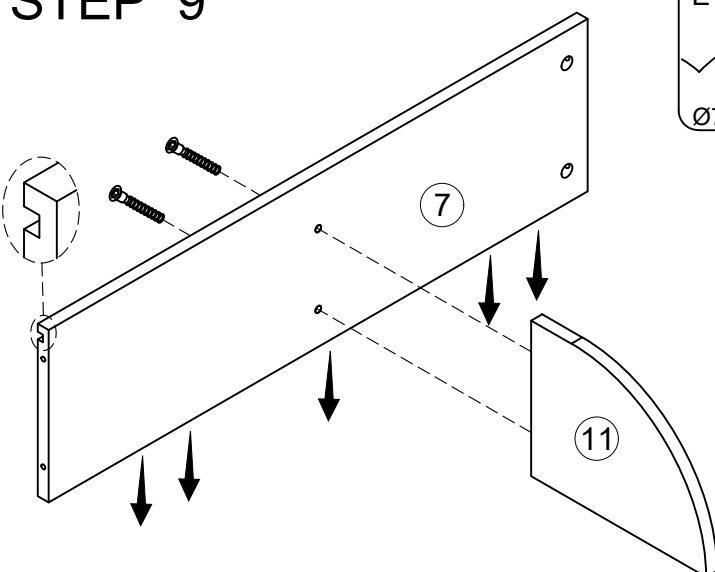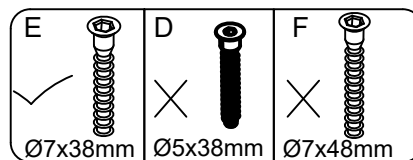


E	X4	M	X1
			
Ø7x38mm		4mm	

STEP 10

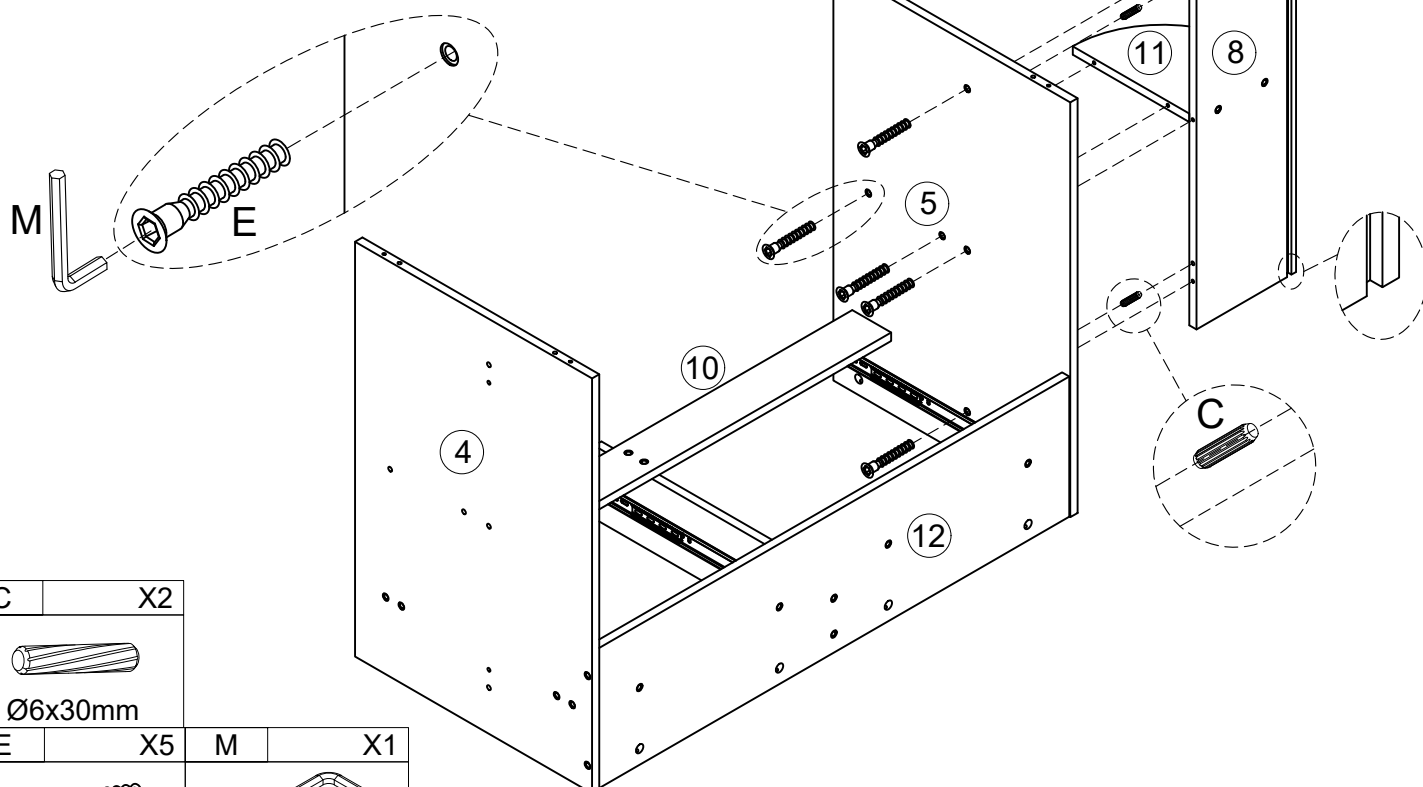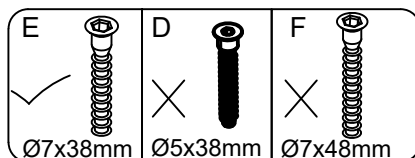


C	X2
	
Ø6x30mm	



E	X5	M	X1
			
Ø7x38mm		4mm	

INSTALLATION INSTRUCTION

STEP 11

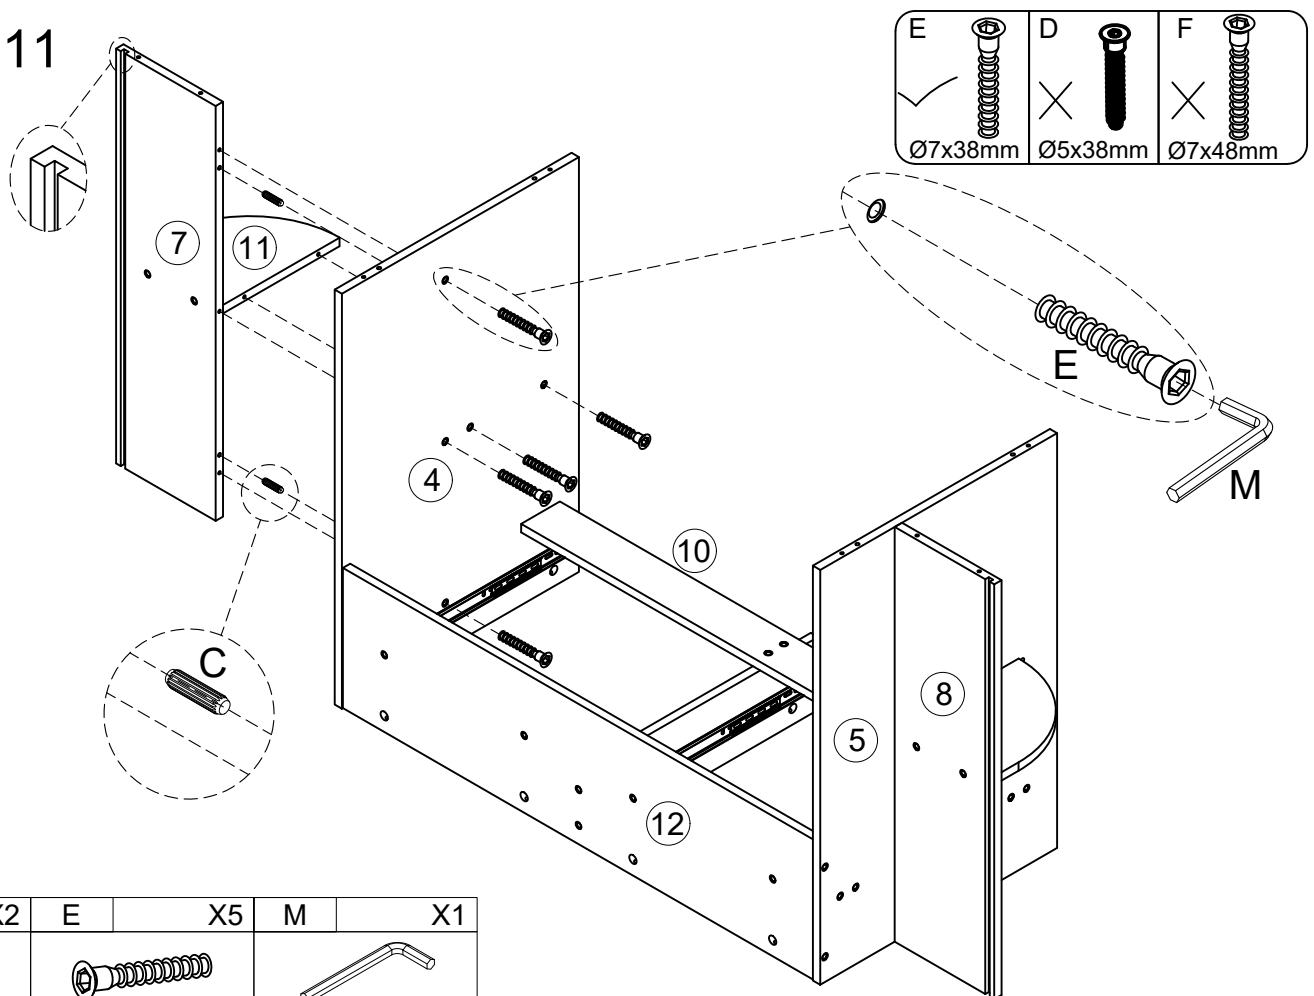




STEP 12

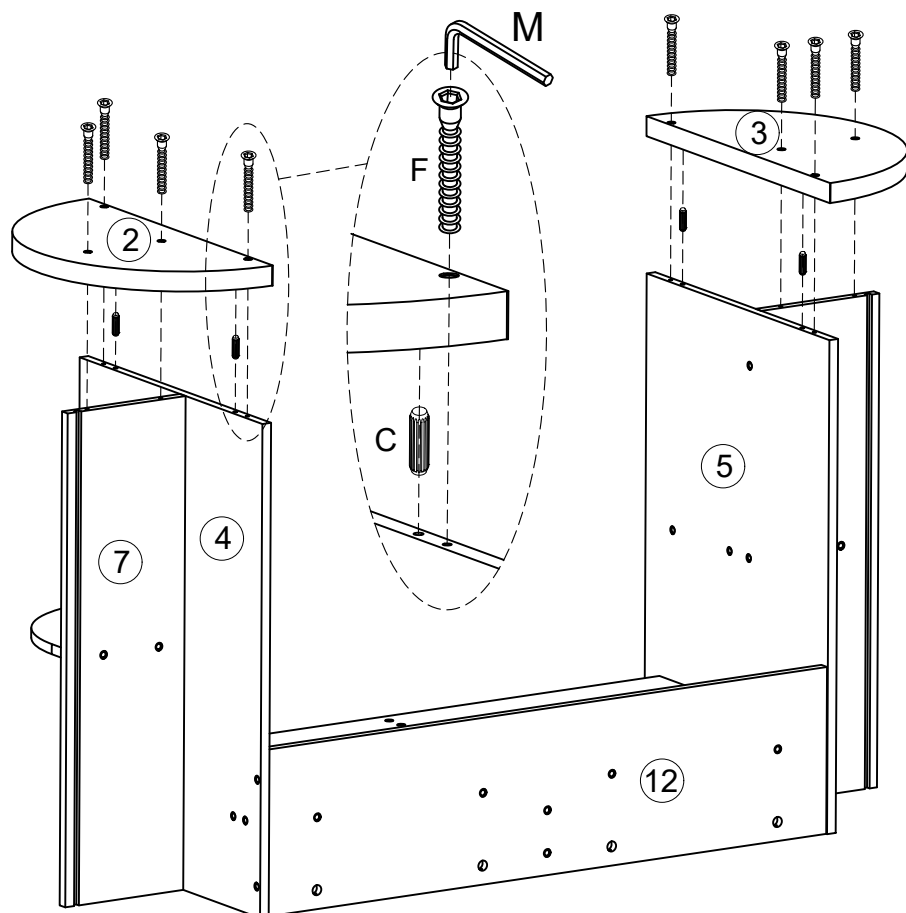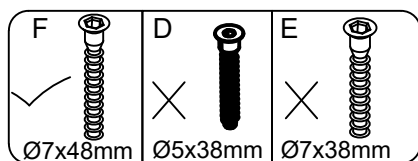

C	X4	F	X8	M	X1
Ø6x30mm		Ø7x48mm		4mm	

INSTALLATION INSTRUCTION


STEP 13

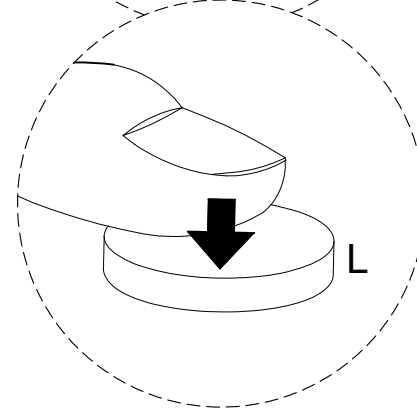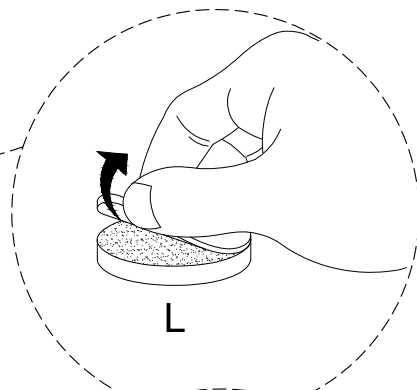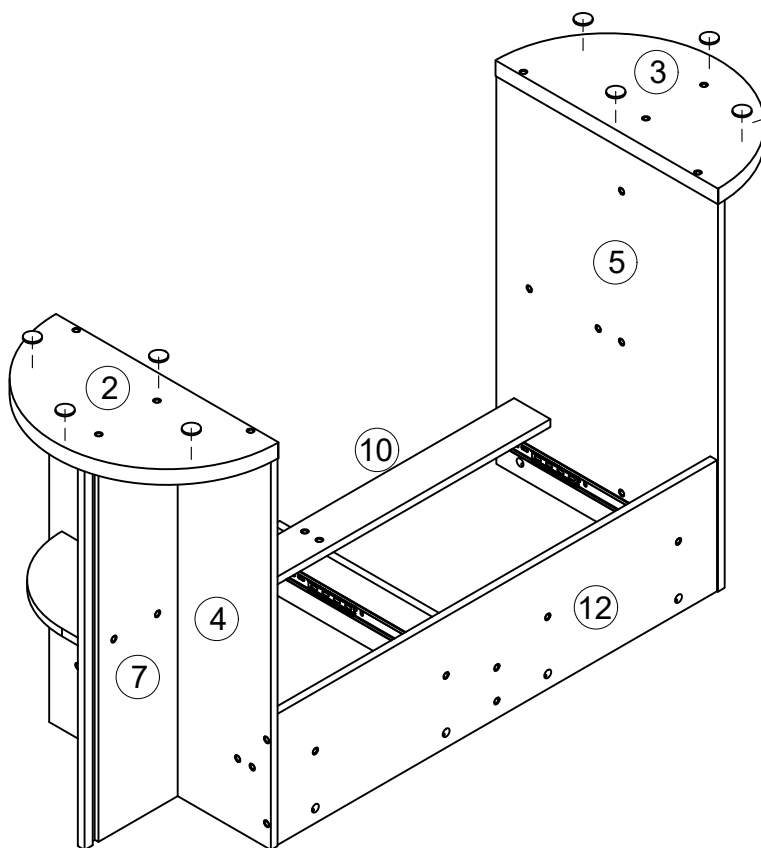


L	X8
Ø30x3mm	

STEP 14

X 2

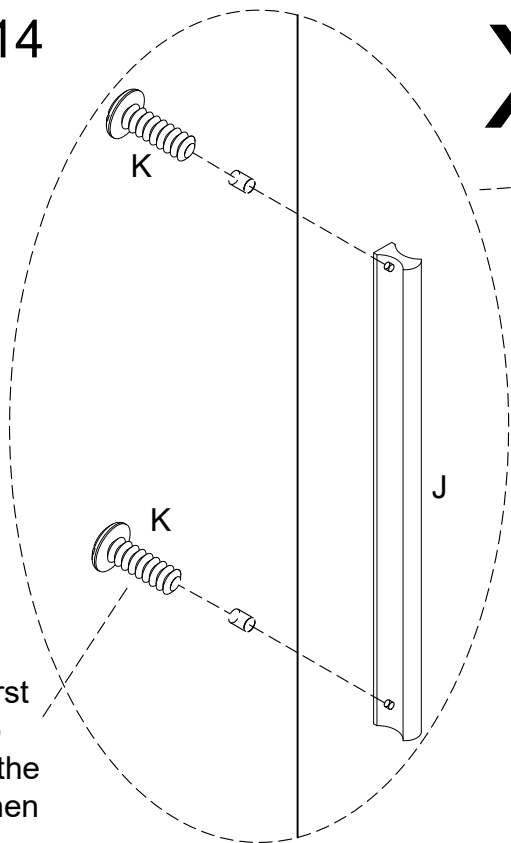

Attention: First align the two screws with the holes, and then tighten them.

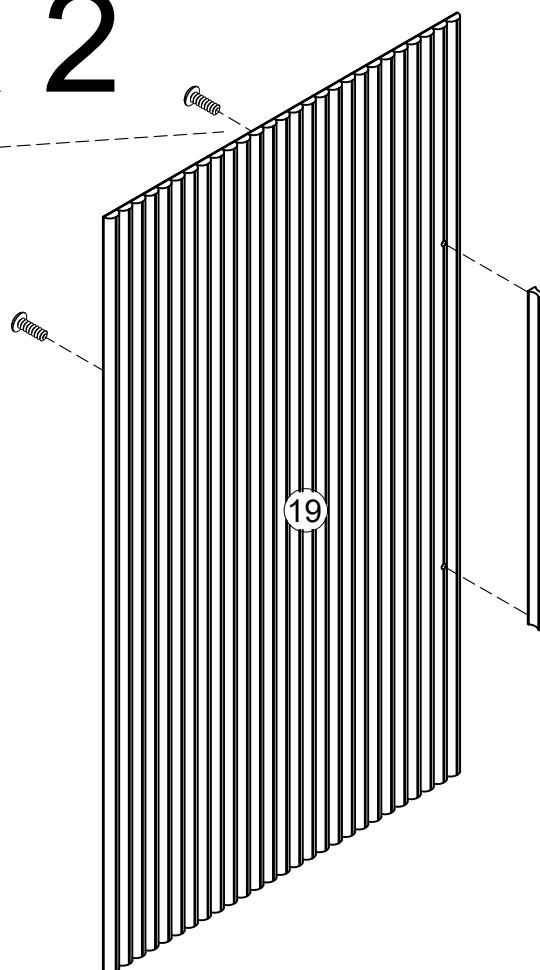


J	X2	K	X4
		M4x10mm	

INSTALLATION INSTRUCTION

STEP 15


180°

Fully insert board # 18 into the innermost slots of board # 2 and board # 3.

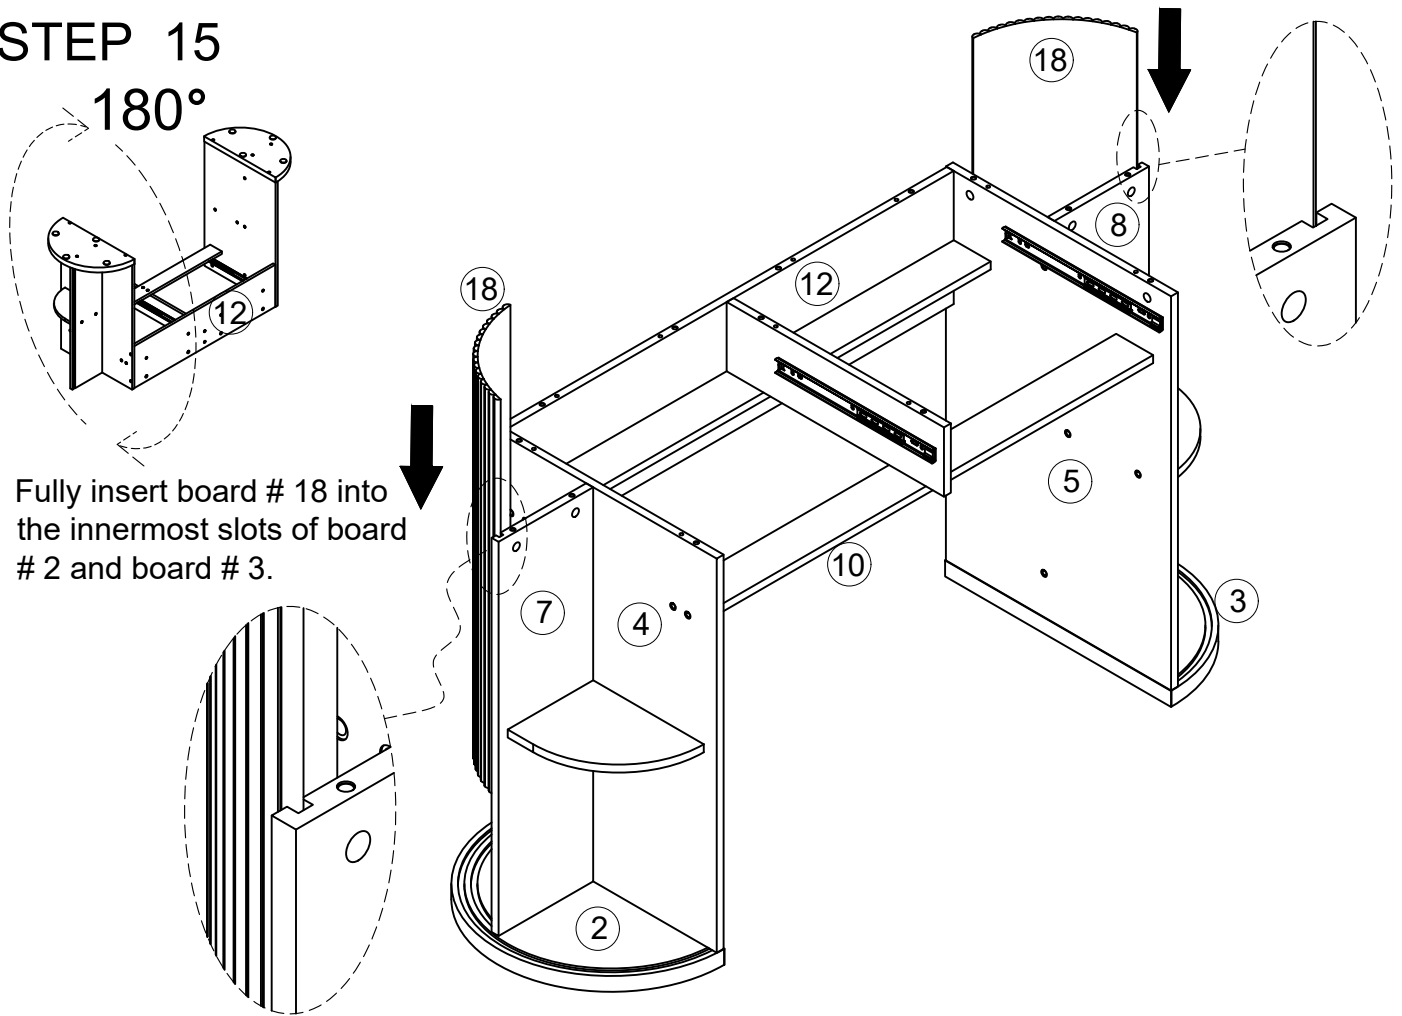


STEP 16

Fully insert board # 19 into the outermost slots of boards # 2 and # 3.

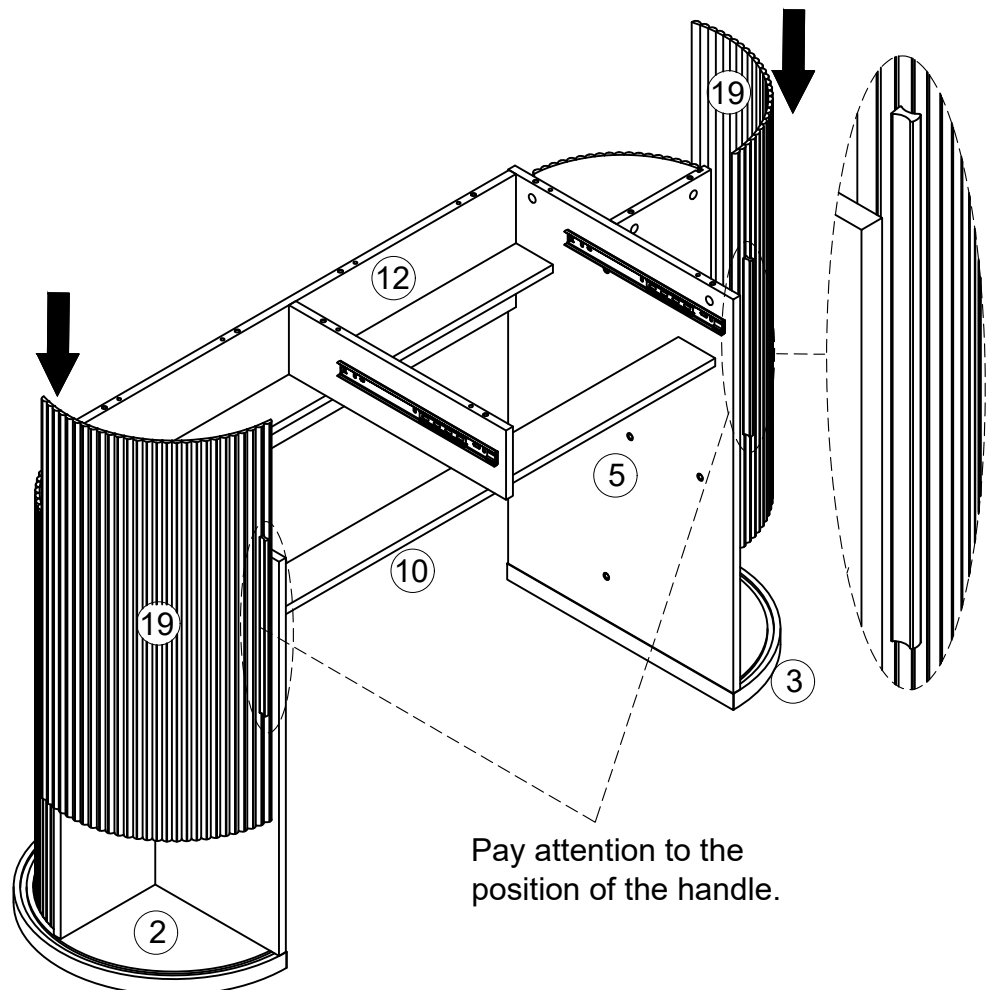


INSTALLATION INSTRUCTION


STEP 17

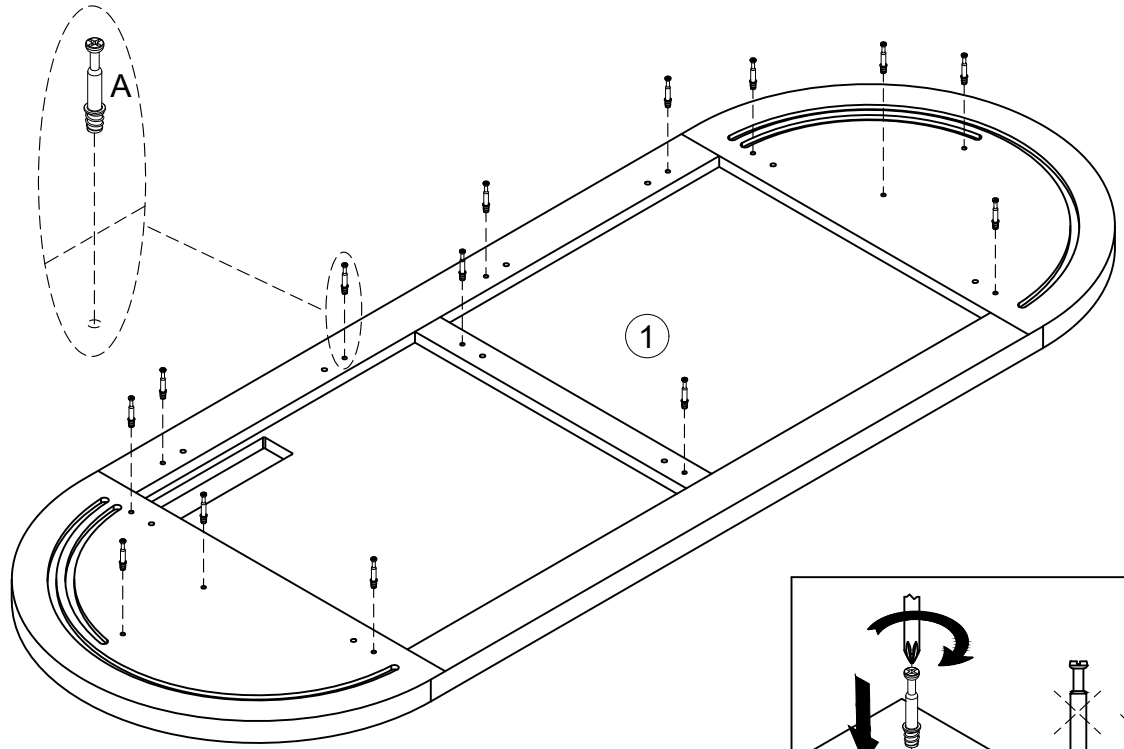


A X14



Ø6x35mm

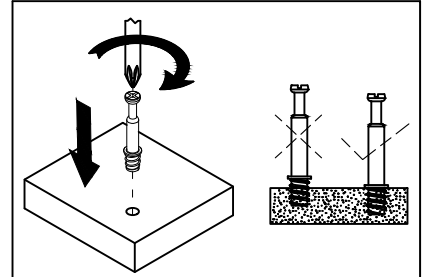

STEP 18

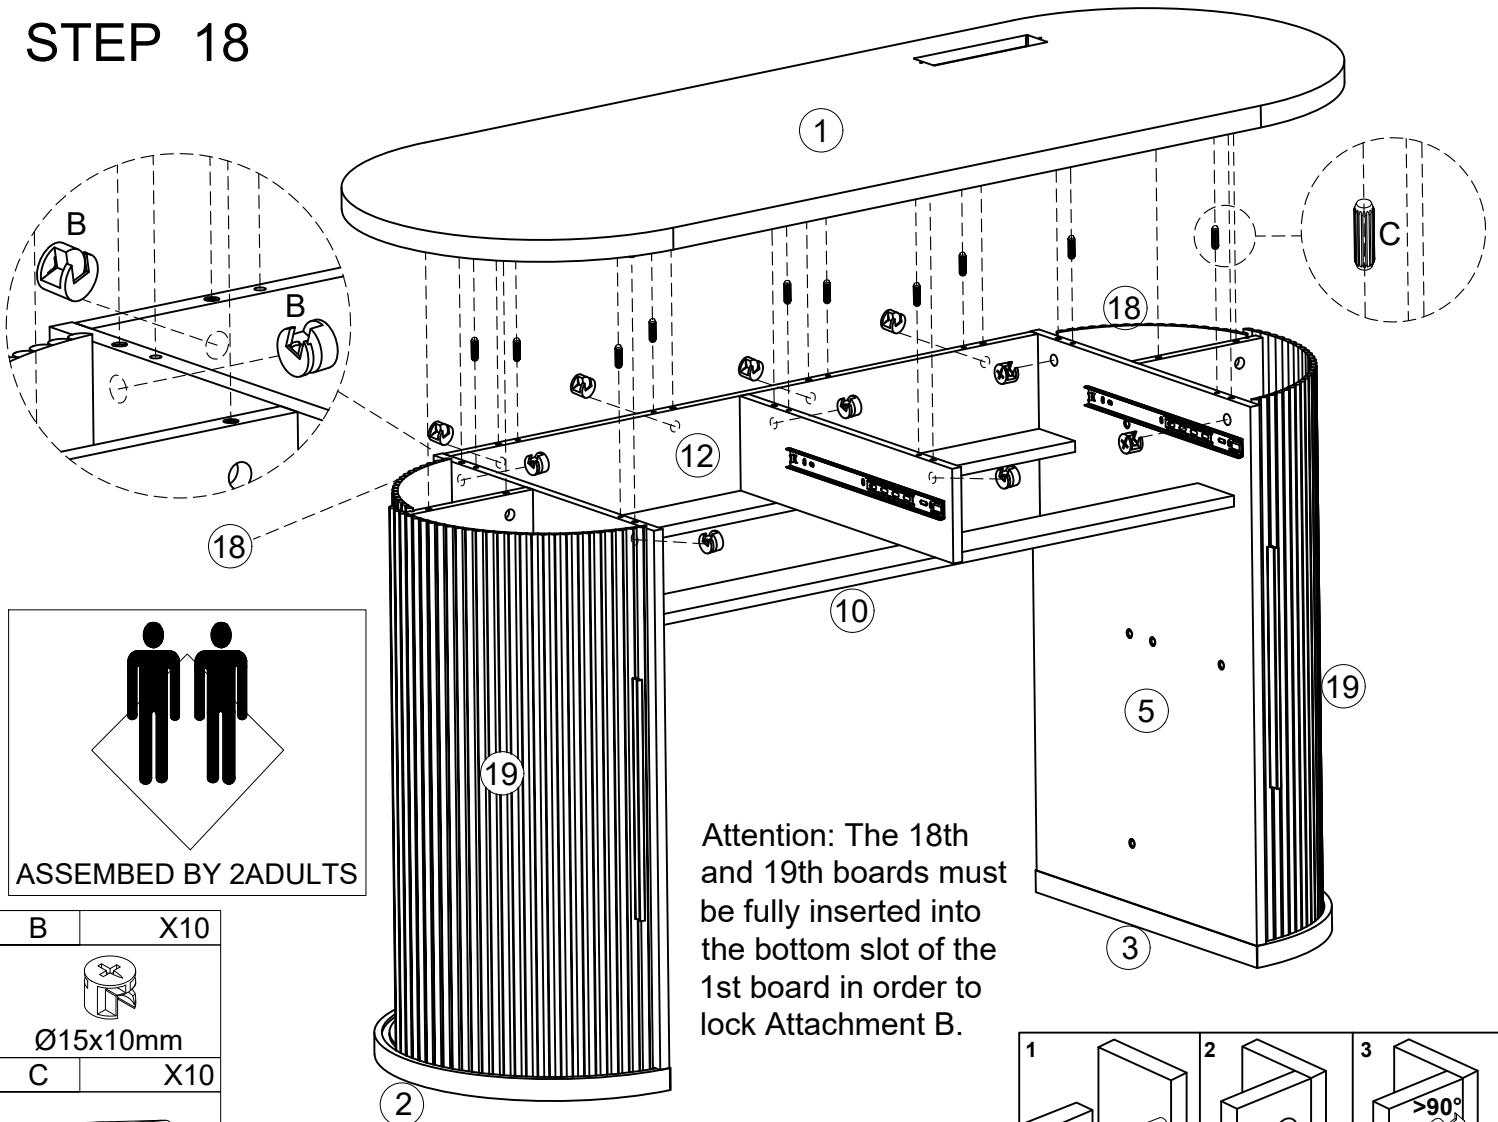

Attention: The 18th and 19th boards must be fully inserted into the bottom slot of the 1st board in order to lock Attachment B.

ASSEMBLED BY 2ADULTS

B X10




Ø15x10mm

C X10




Ø6x30mm

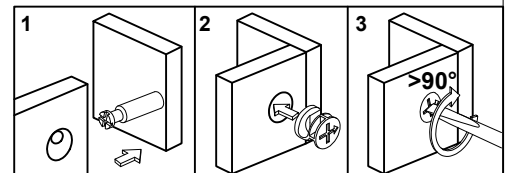


INSTALLATION INSTRUCTION


STEP 19

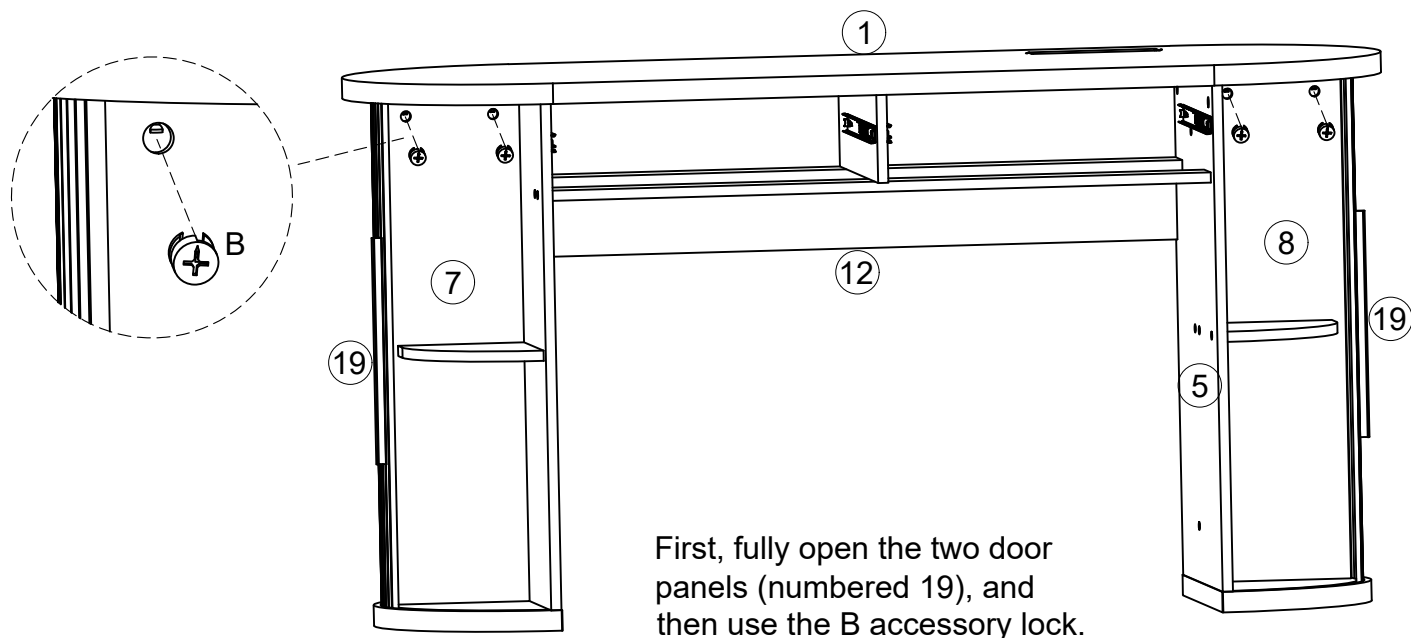

B	X4
	
Ø15x10mm	

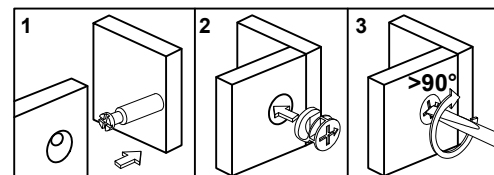

STEP 20

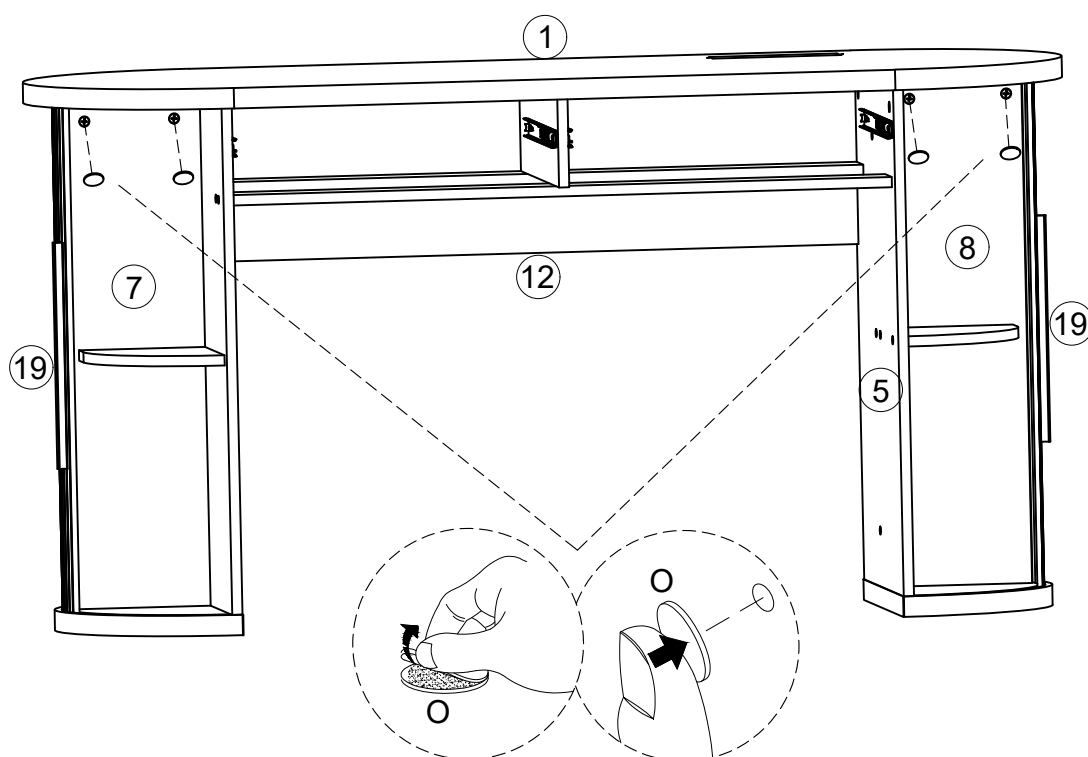



O	X4
	
Ø20mm	

Cover this hole.

INSTALLATION INSTRUCTION


STEP 21

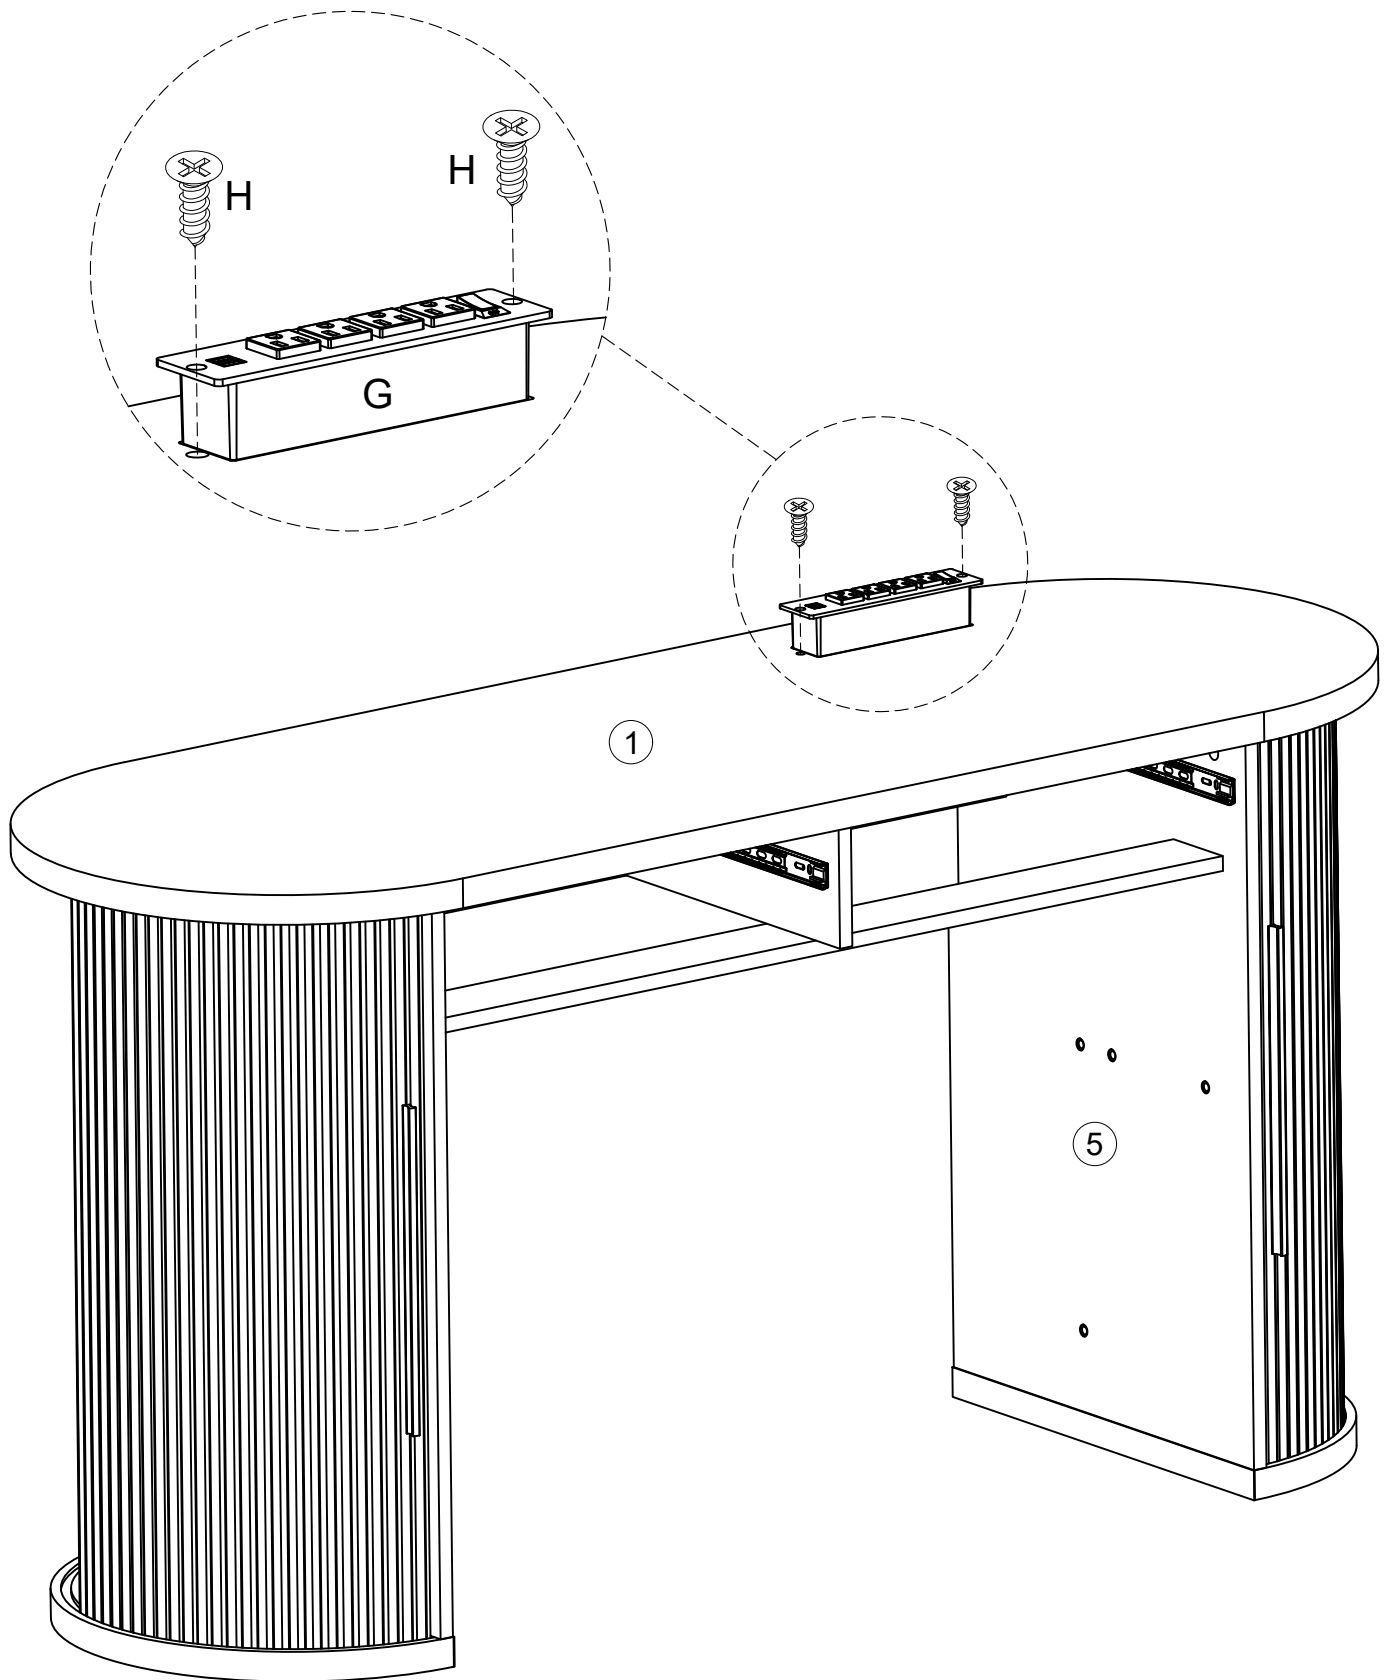


G	X1	H	X2
			
		Ø3.5x12mm	

INSTALLATION INSTRUCTION

STEP 22

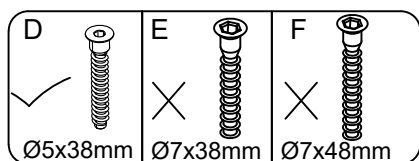


X 2

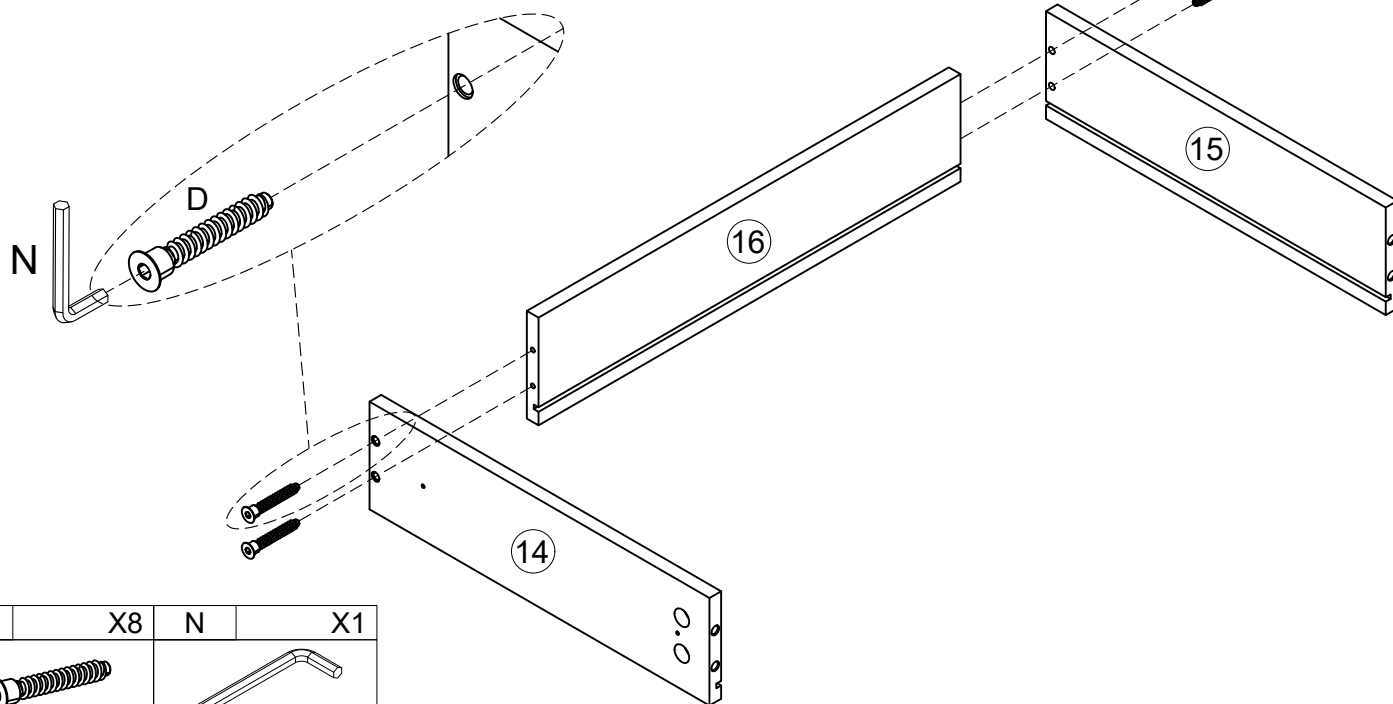

D	X8	N	X1
Ø5x38mm		3mm	

STEP 23

X 2

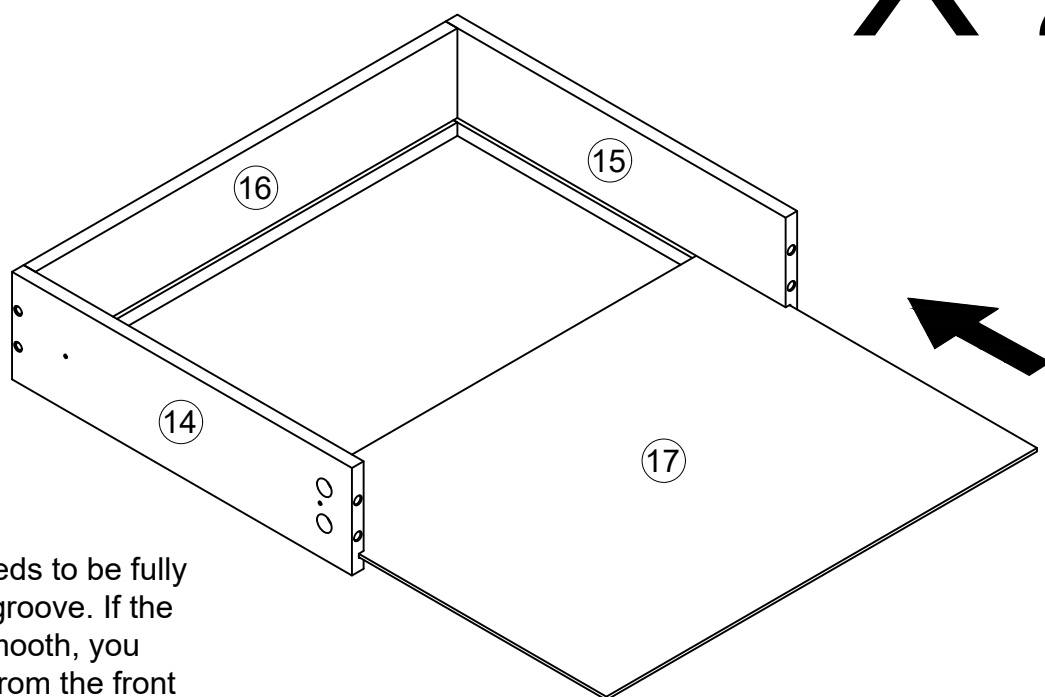


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


INSTALLATION INSTRUCTION



STEP 24

X 2


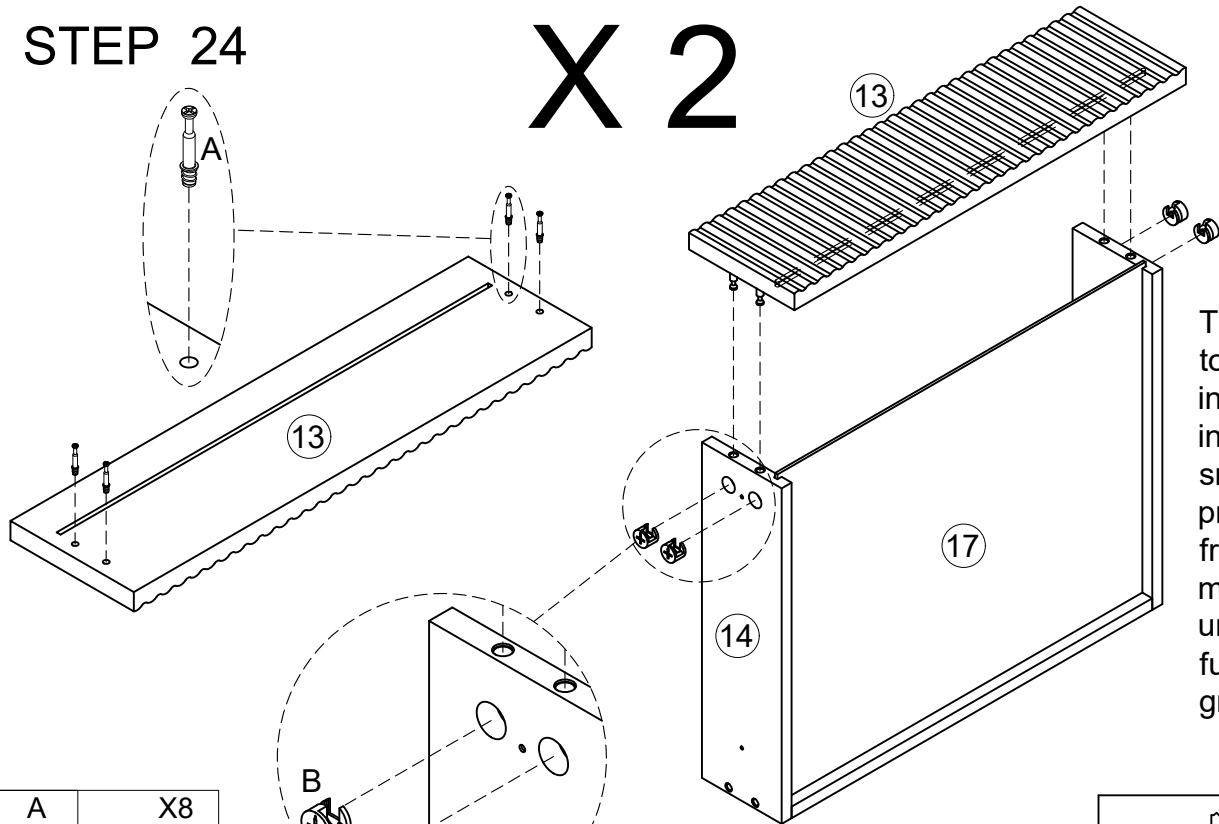


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

A	X8
	
Ø6x35mm	
B	X8
	
Ø15x10mm	

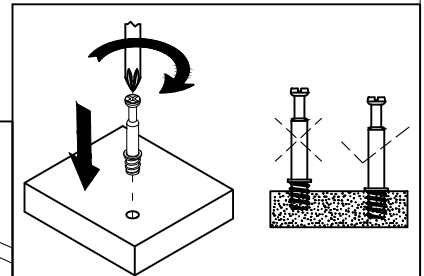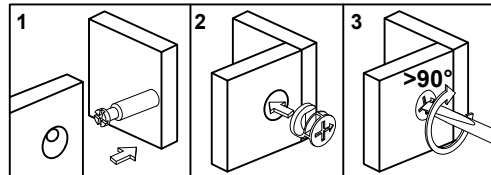


STEP 25

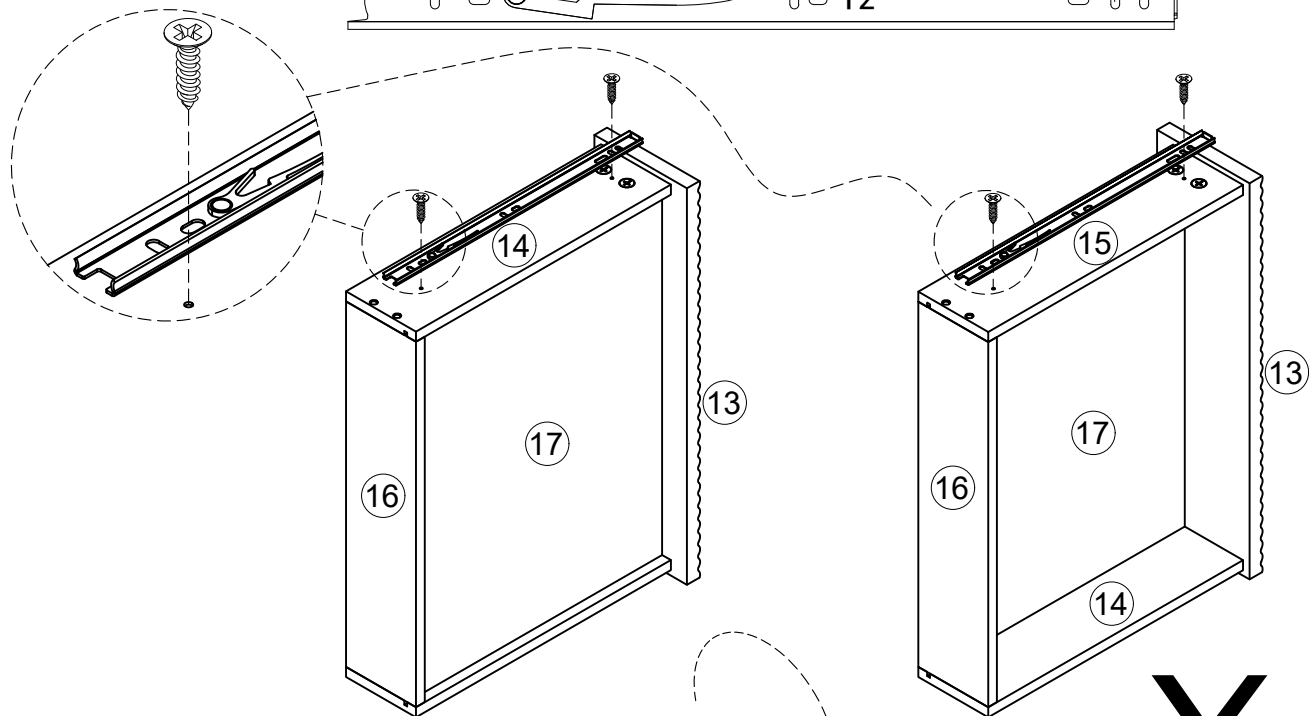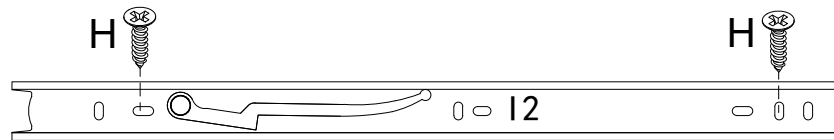



180°

X 2


H	X8	I2	X4
			
Ø3.5x12mm			

INSTALLATION INSTRUCTION

STEP 26

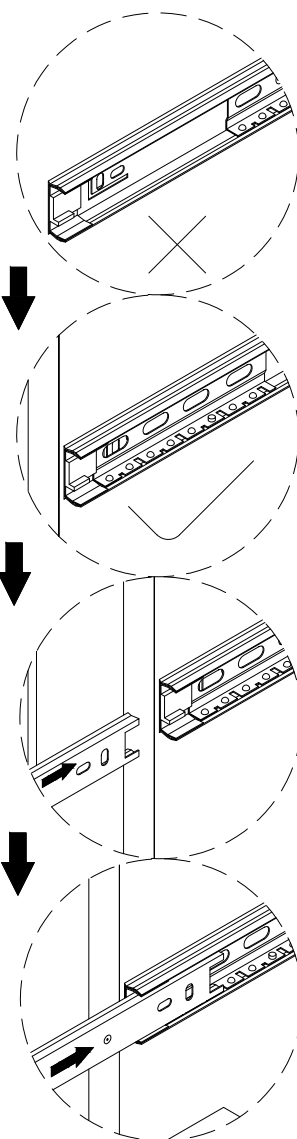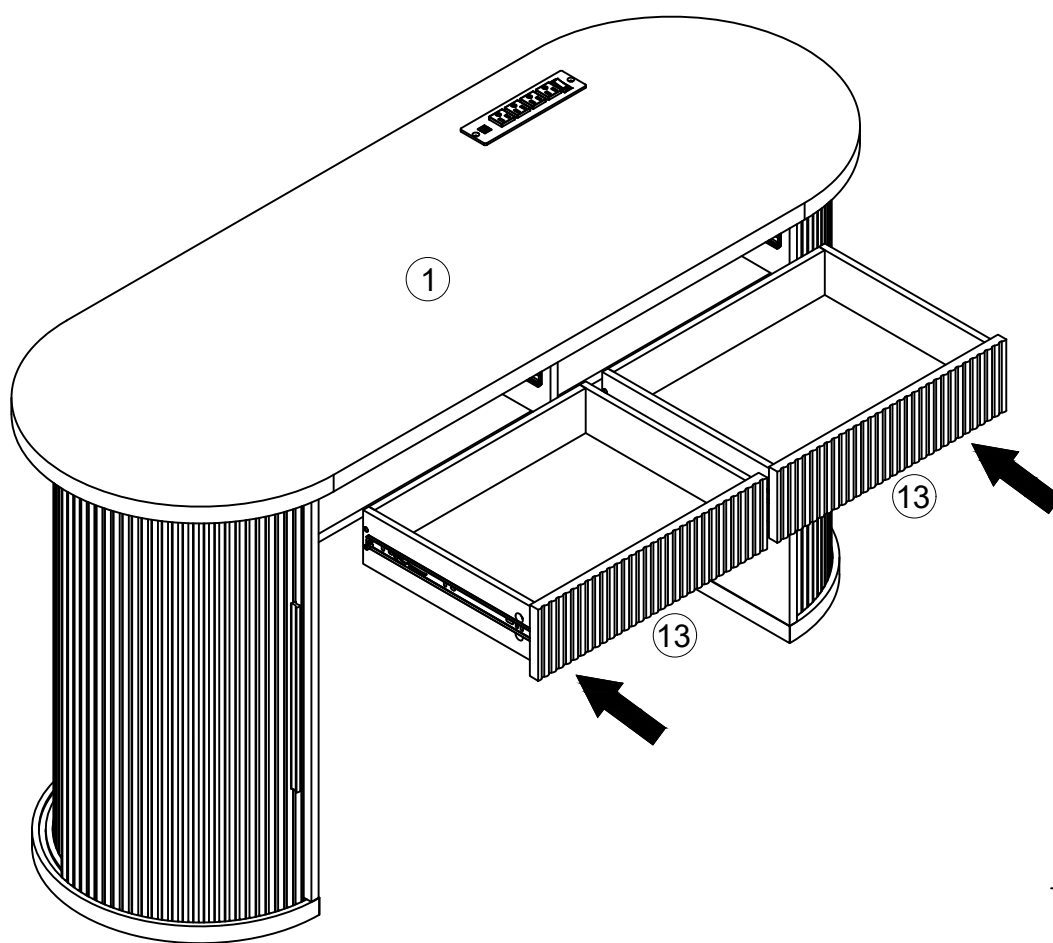


This screw can be loosened to adjust the top and bottom gaps of the drawer

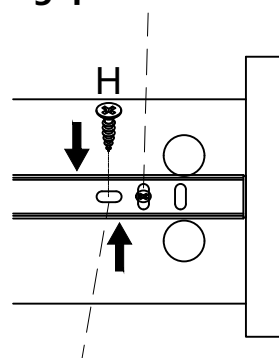

Lock screw (H) after adjusting the upper and lower gaps


H	X4
---	----



Ø3.5x12mm

INSTALLATION INSTRUCTION

STEP 27

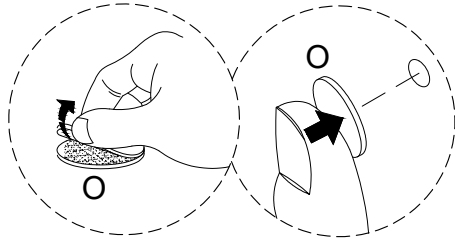

You can cover these
holes as needed

