



ASSEMBLY INSTRUCTION

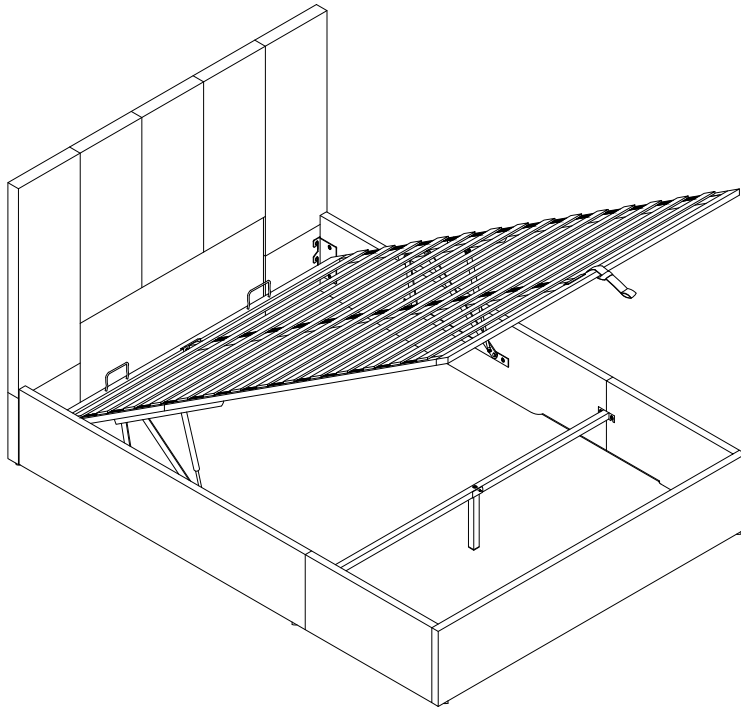


Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE



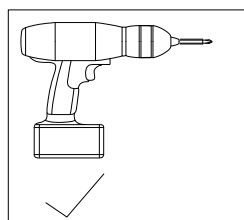













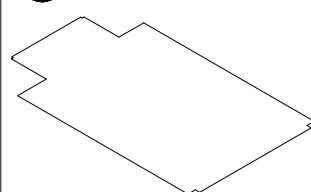
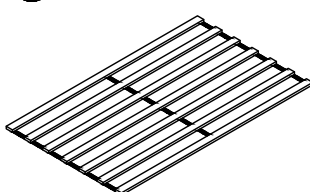

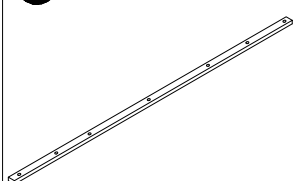
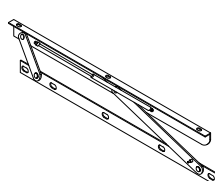
1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

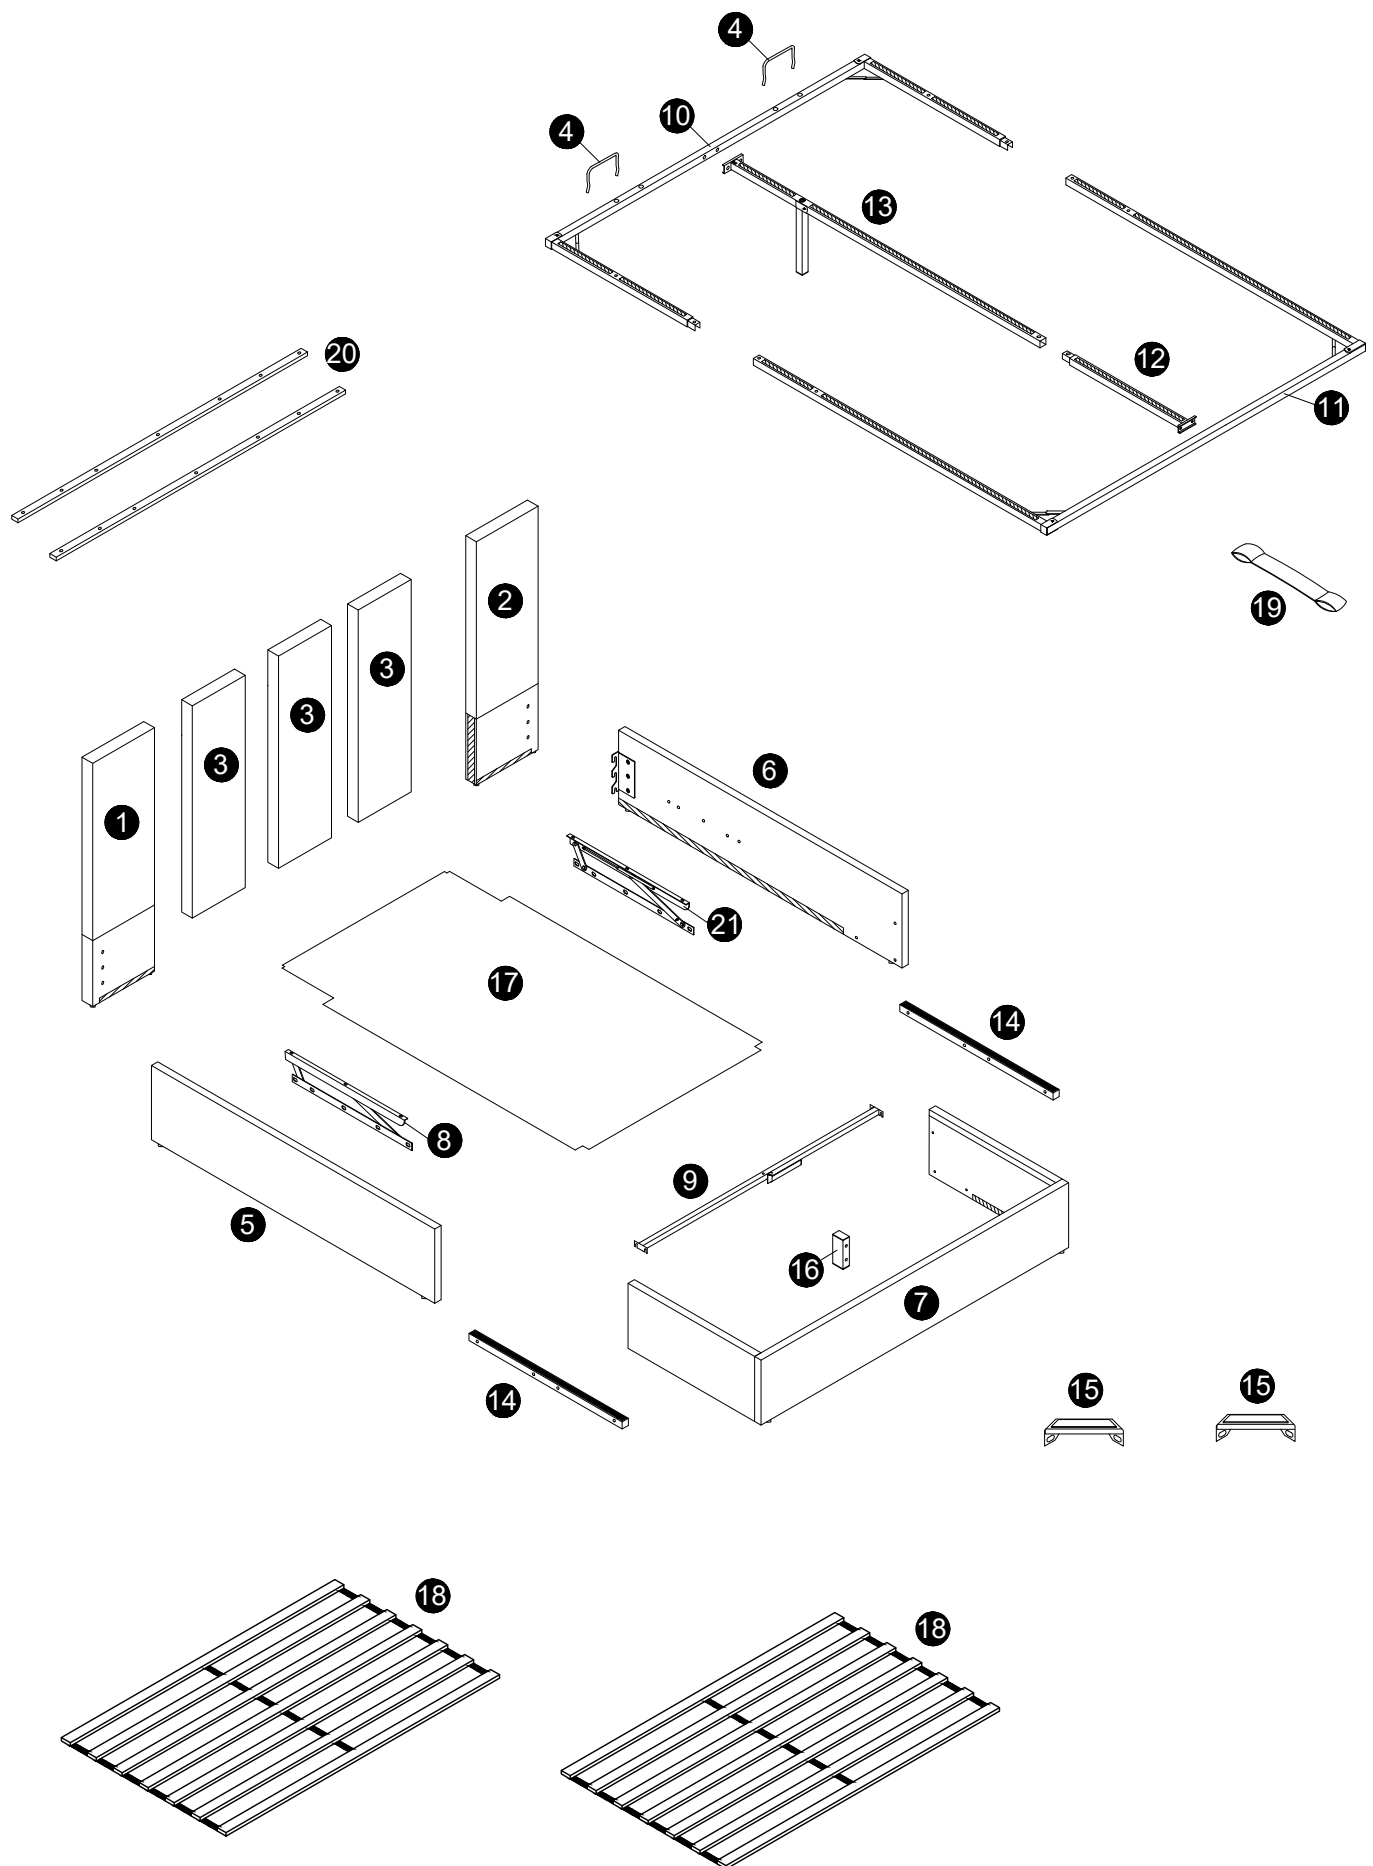

PART LIST



PART LIST

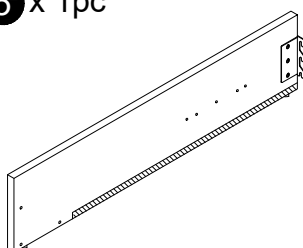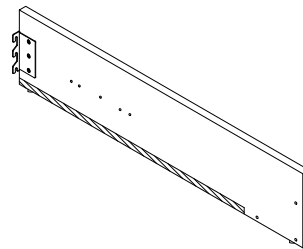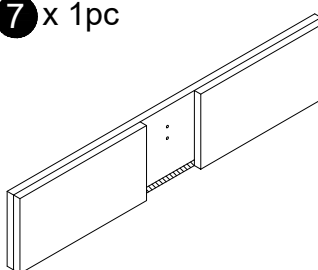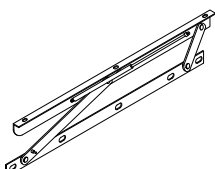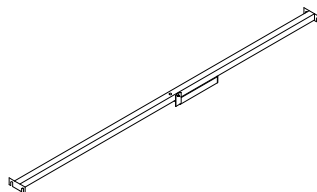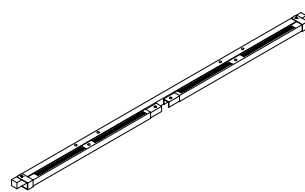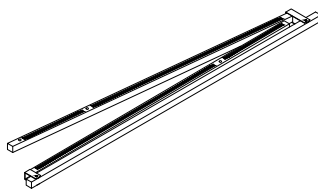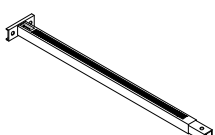1 x 1pc	2 x 1pc	3 x 3pcs	4 x 2pcs	
				
5 x 1pc	6 x 1pc	7 x 1pc	8 x 1pc	
				
9 x 1pc	10 x 1pc	11 x 1pc	12 x 1pc	
				
13 x 1pc	14 x 2pcs	15 x 2pcs	16 x 1pc	
				
17 x 1pc	18 x 2pcs	19 x 1pc	20 x 2pcs	21 x 1pc
				

HARDWARE LIST



H1 M5 x 1pc



H2 M8x25mm x 23pcs



H3 M8x35mm x 28pcs



H4 M8x60mm x 2pcs



H5 M8 x 43pcs



H6 M8x17mm x 61pcs



H7 M8 x 6pcs




H8 M14 x 1pc




H9 M8x45mm x 8pcs

1

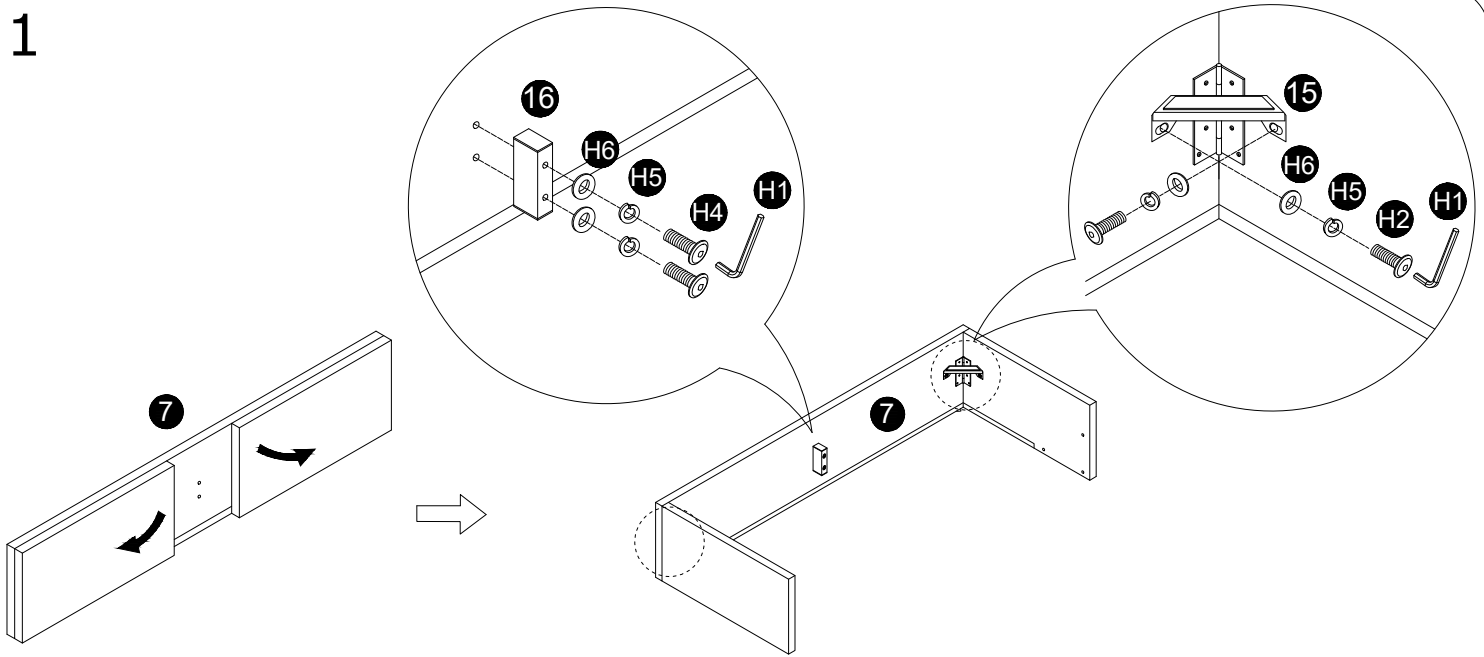


2

Loosely screw parts 1, 2, and 20 together to facilitate inserting part 3 between 1 and 2. Tightening the screws too much will make it difficult to insert part 3.

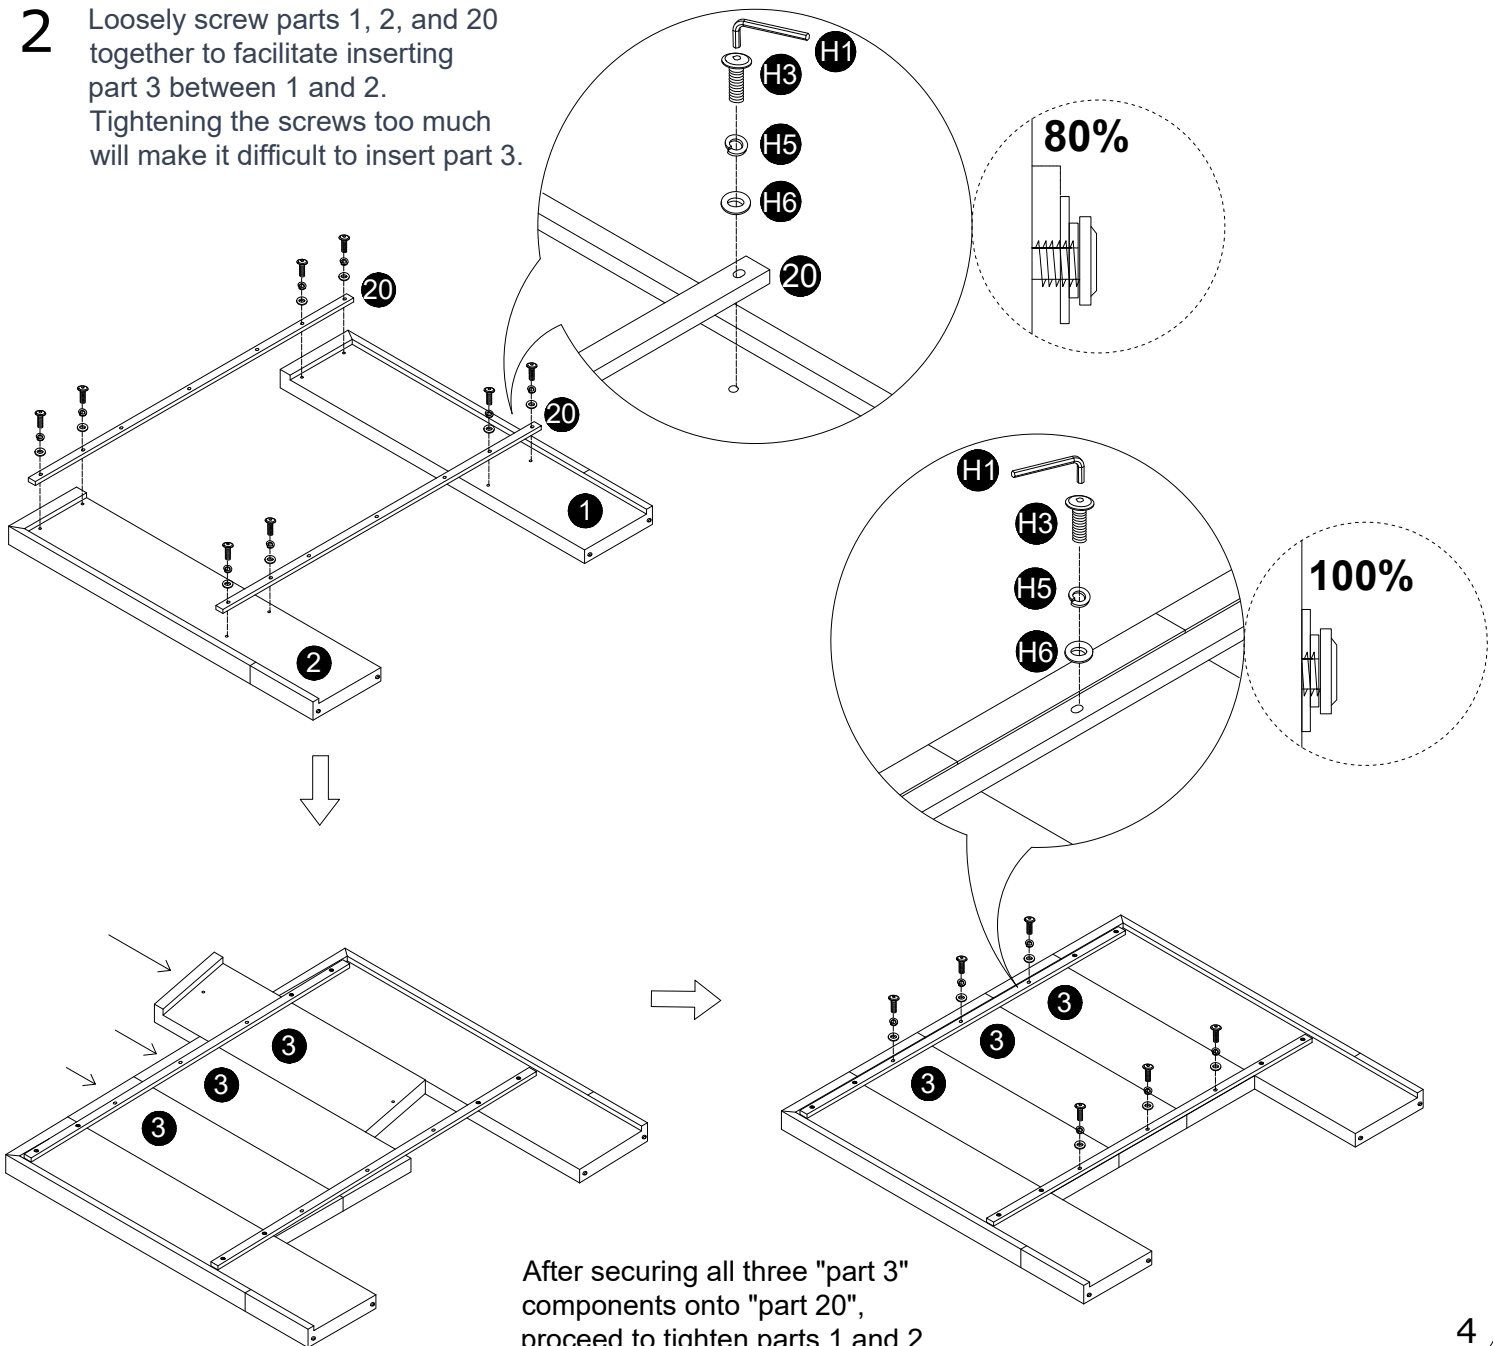


After securing all three "part 3" components onto "part 20", proceed to tighten parts 1 and 2.


3

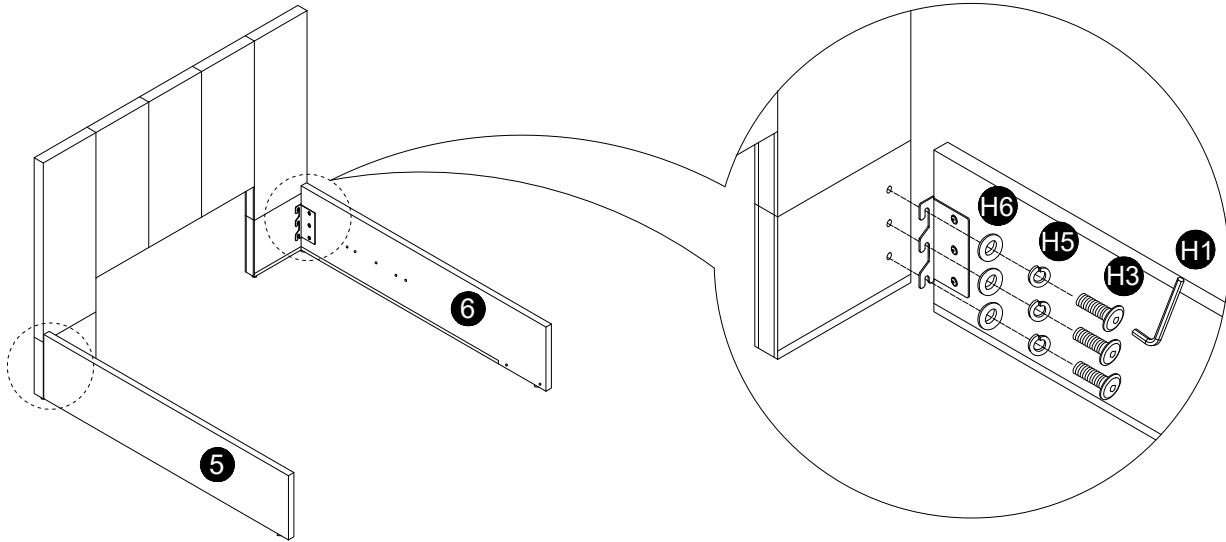


4

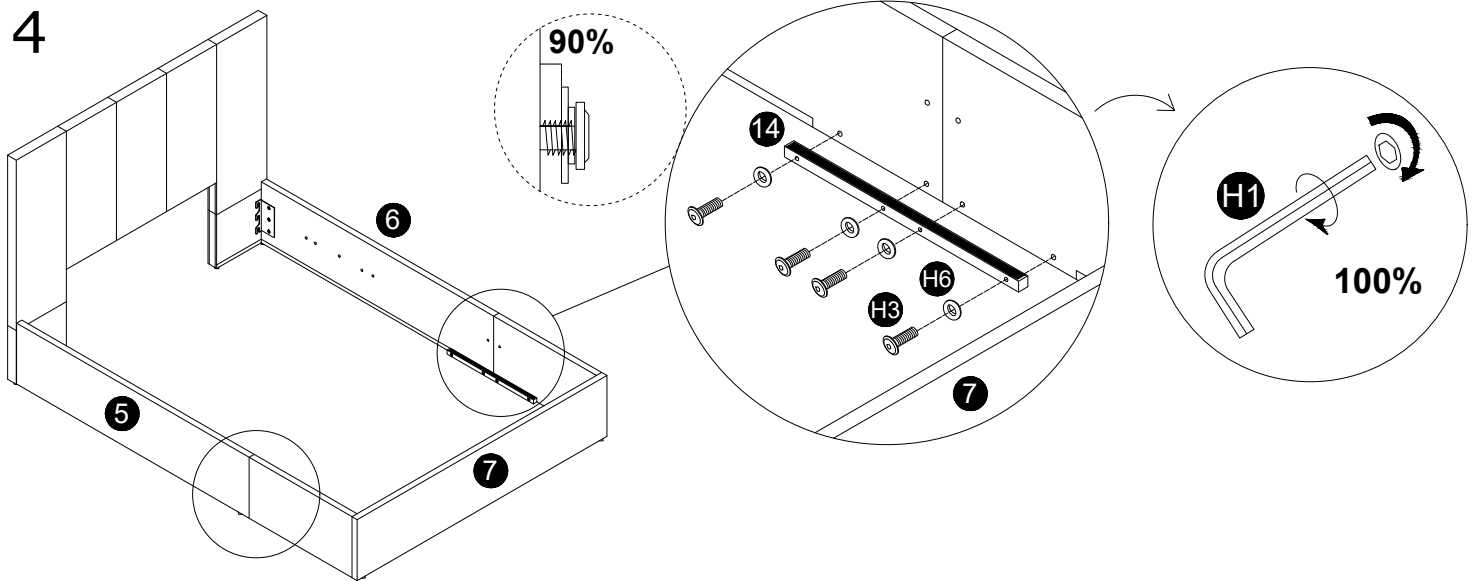


5

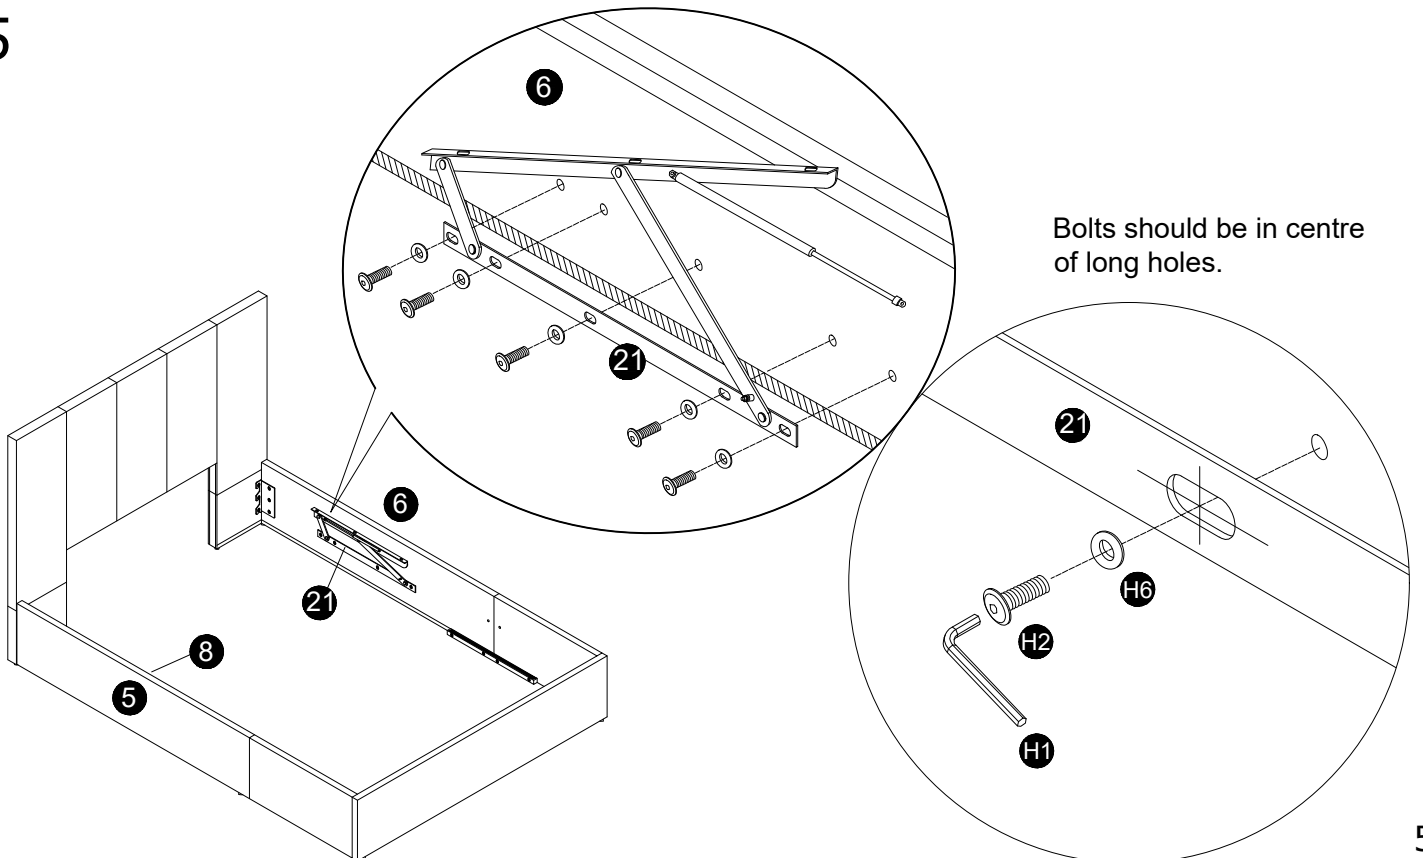


6

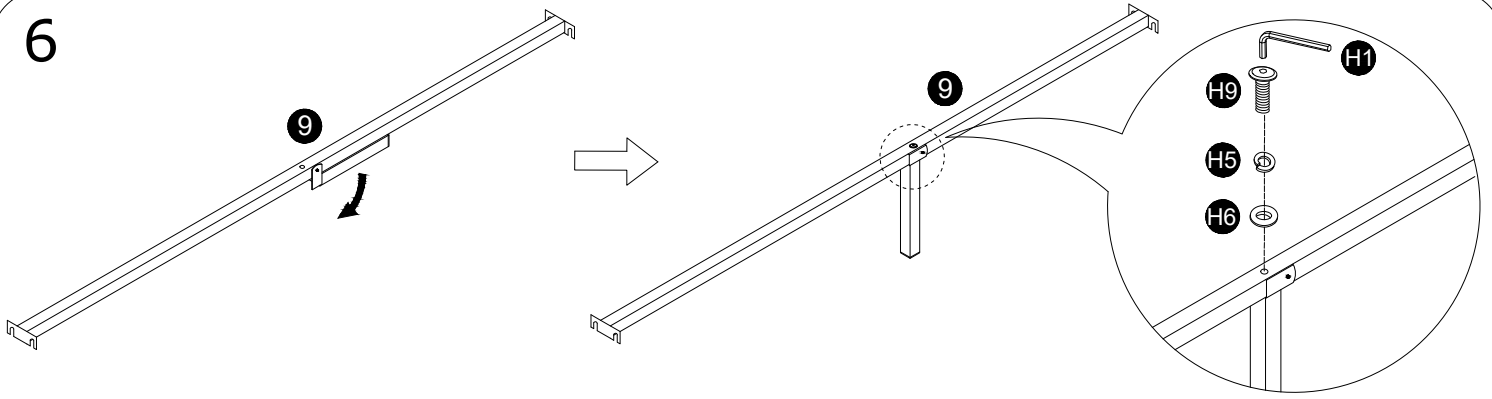


7

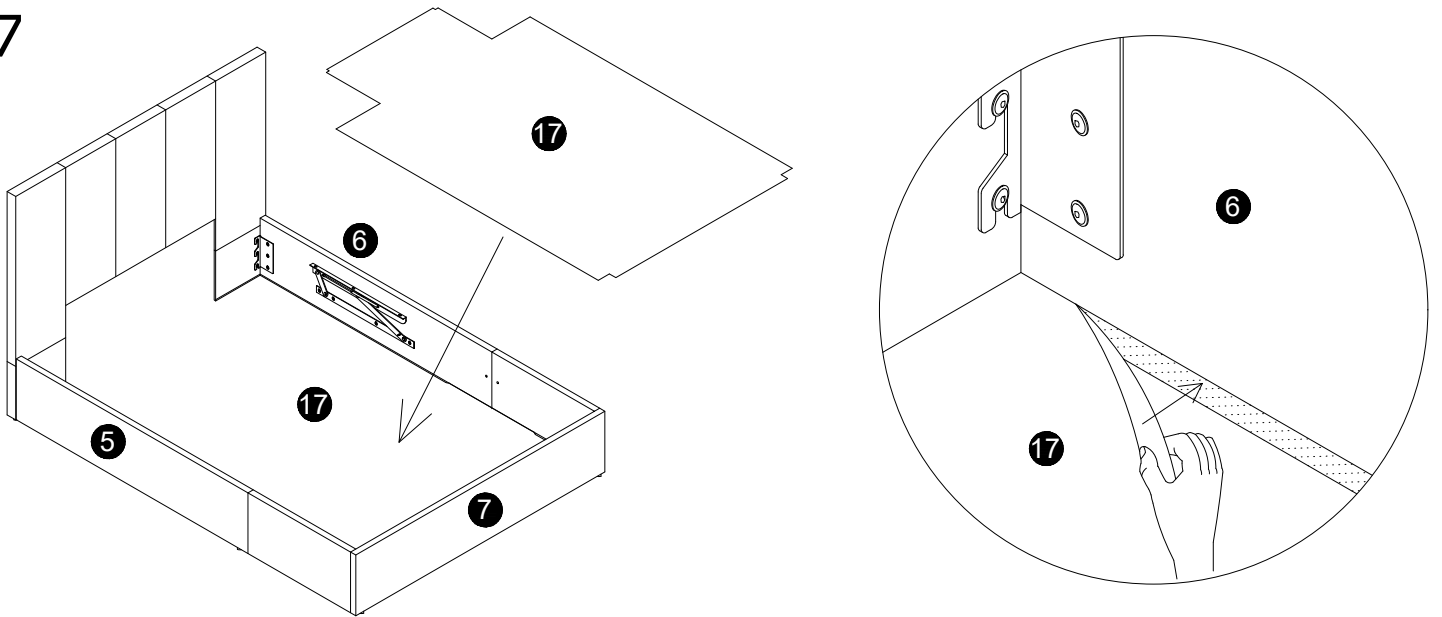


8



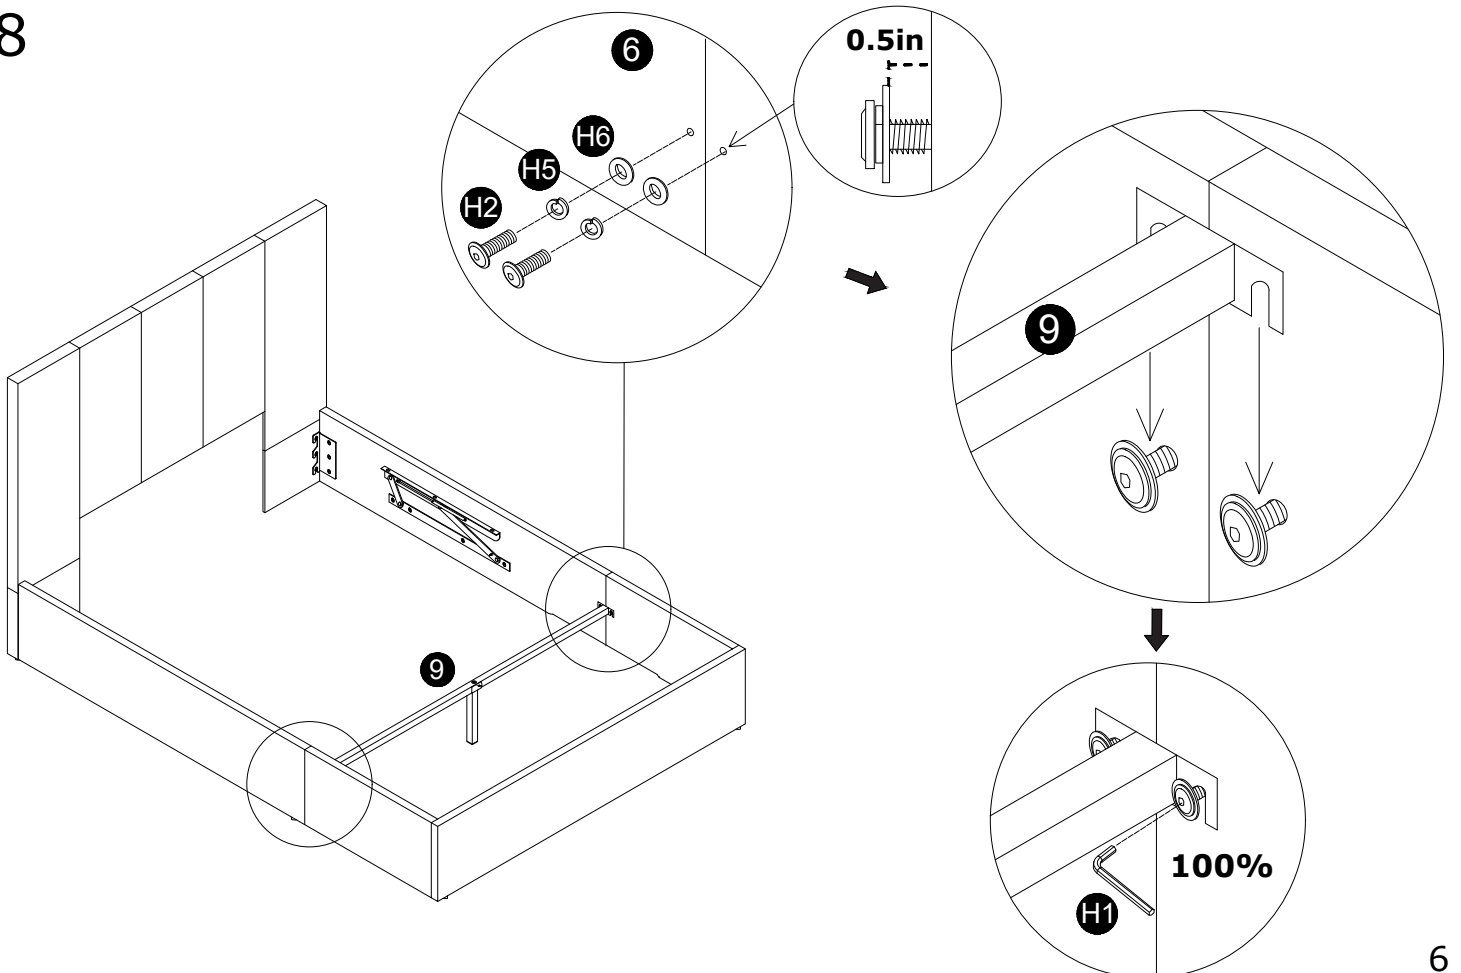


9


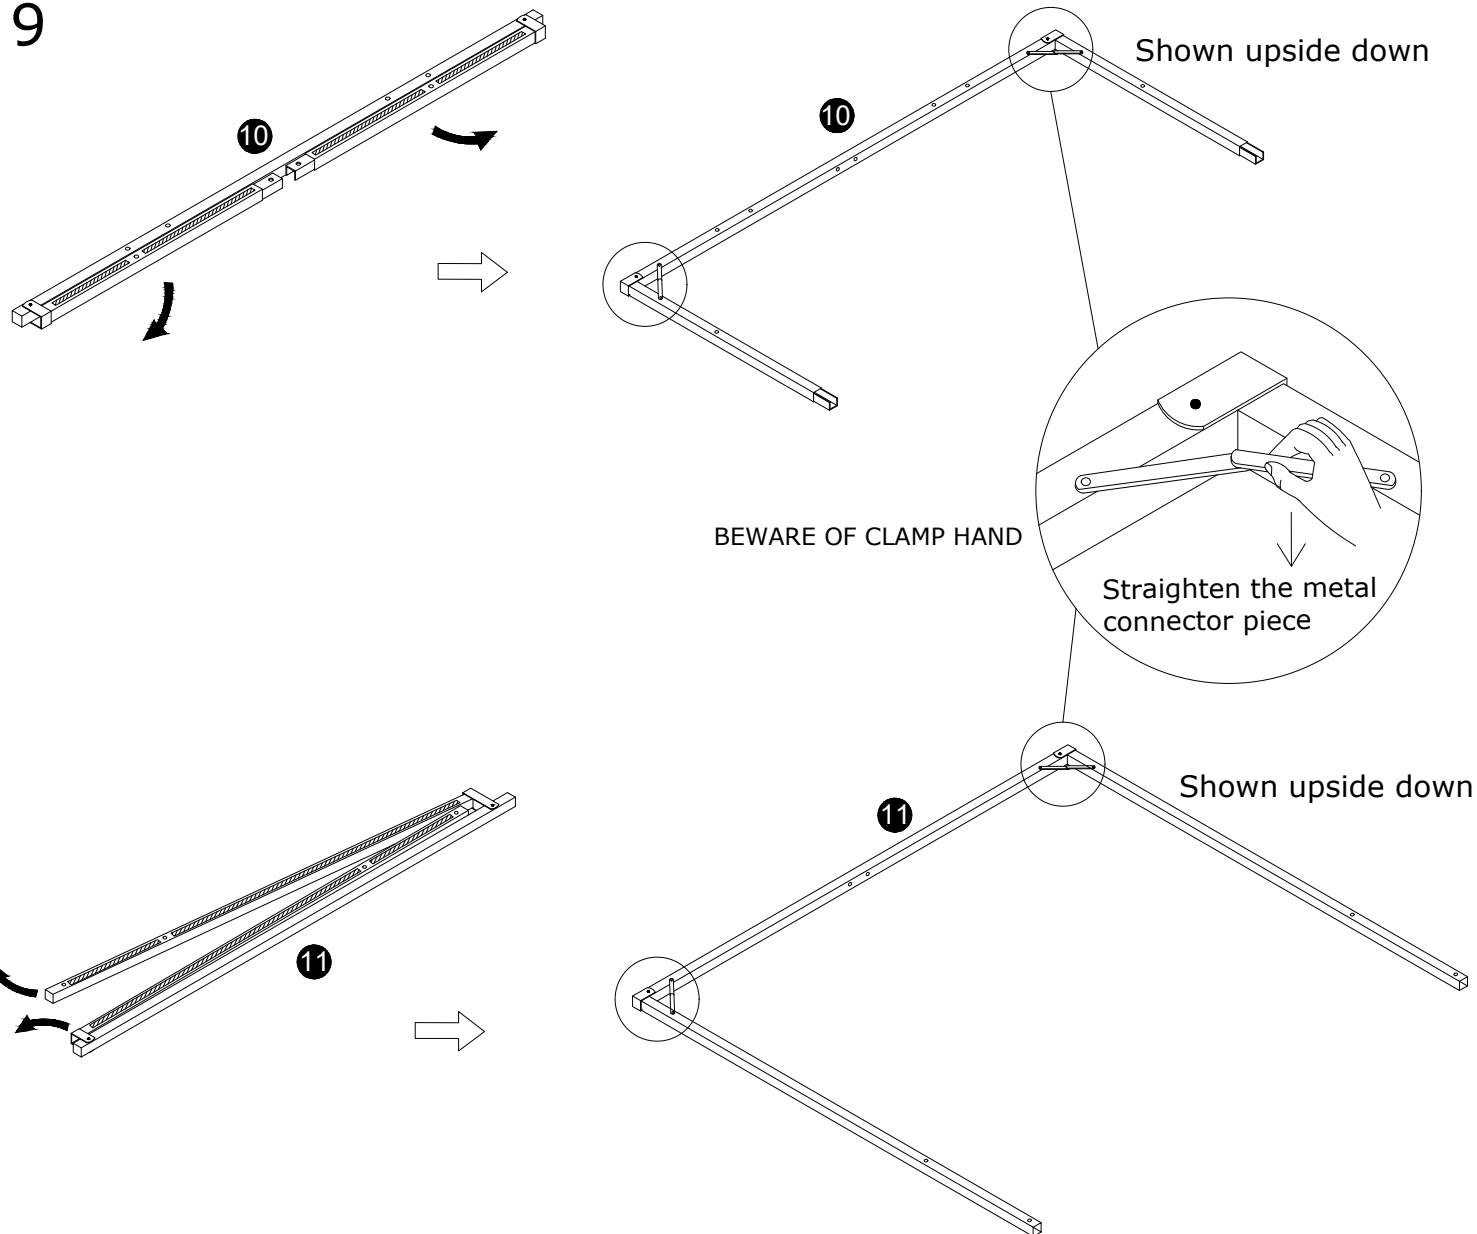


10

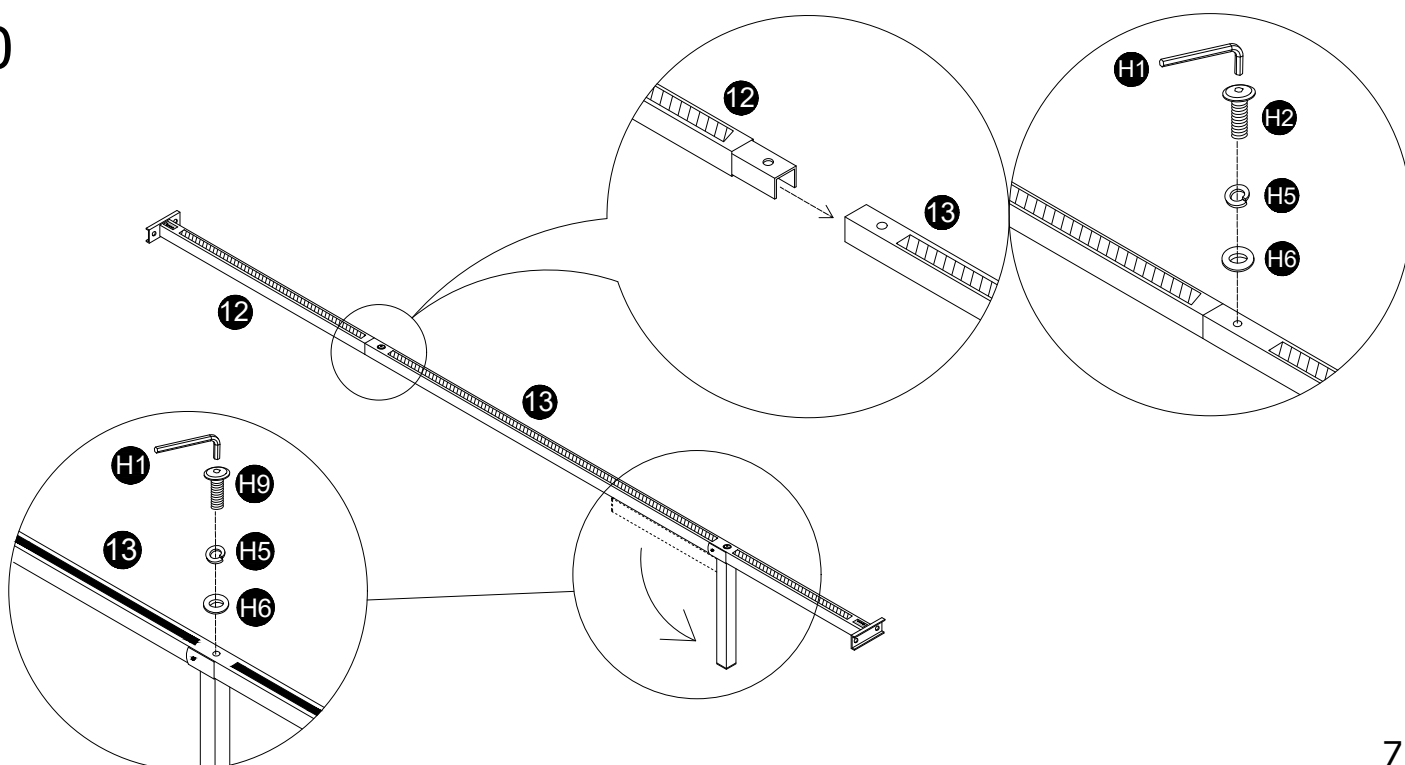

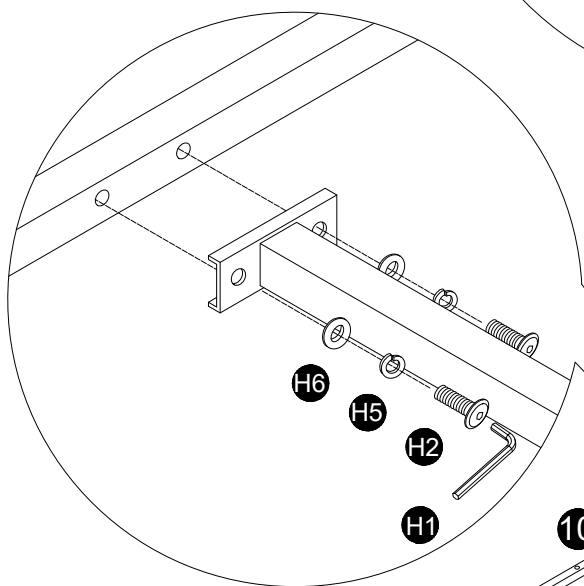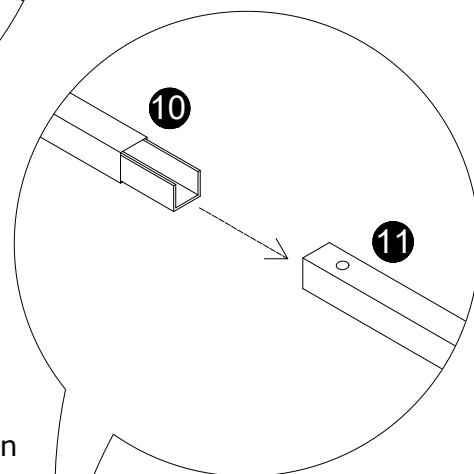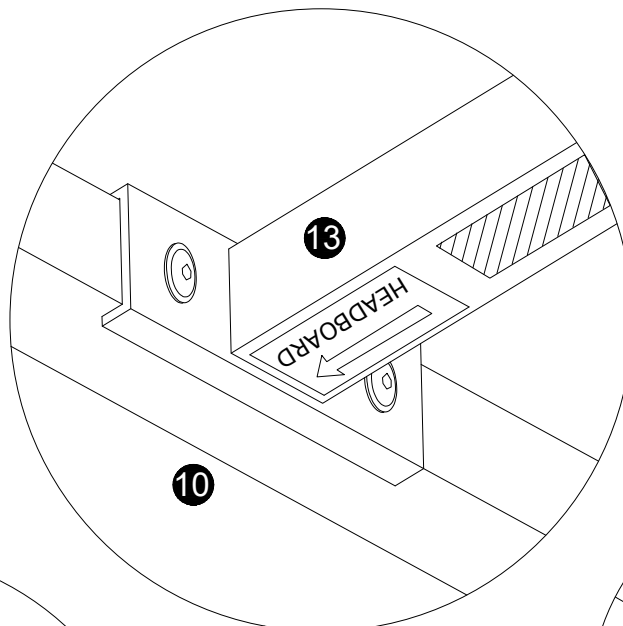


Shown upside down

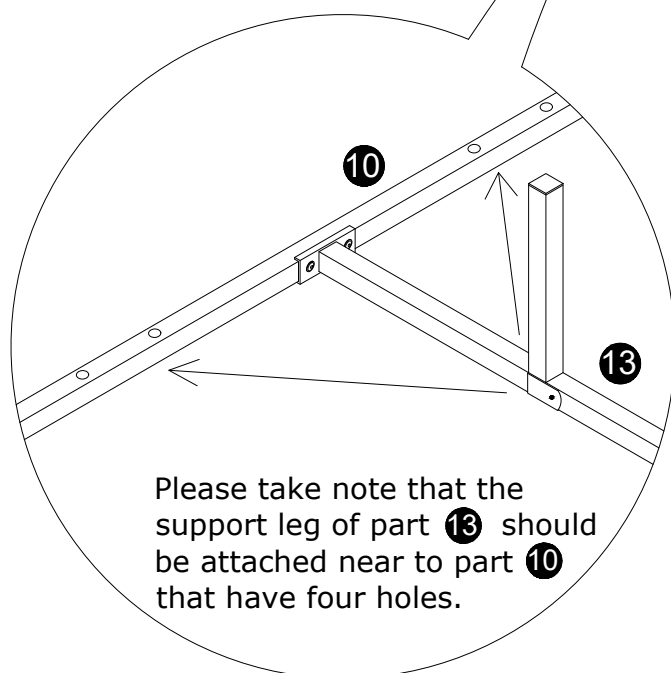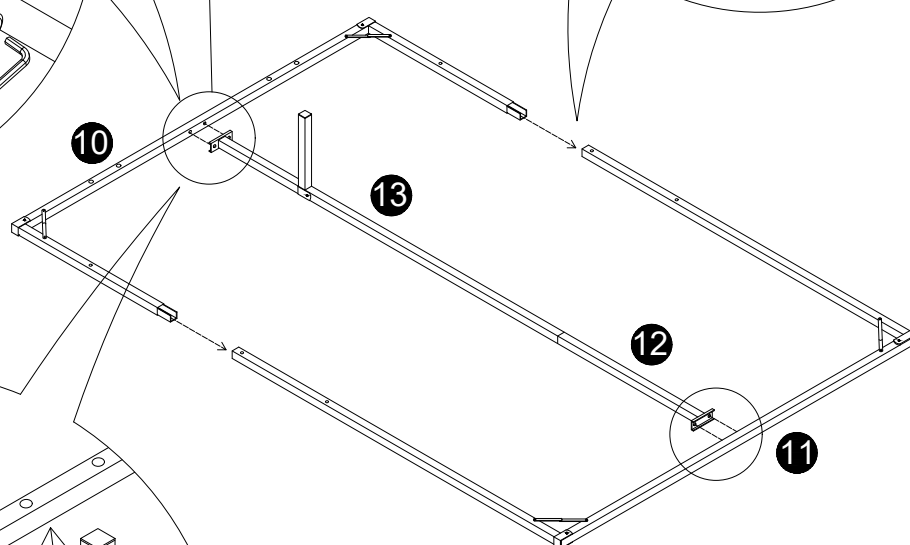


Please take note that the support leg of part 13 should be attached near to part 10 that have four holes.

12

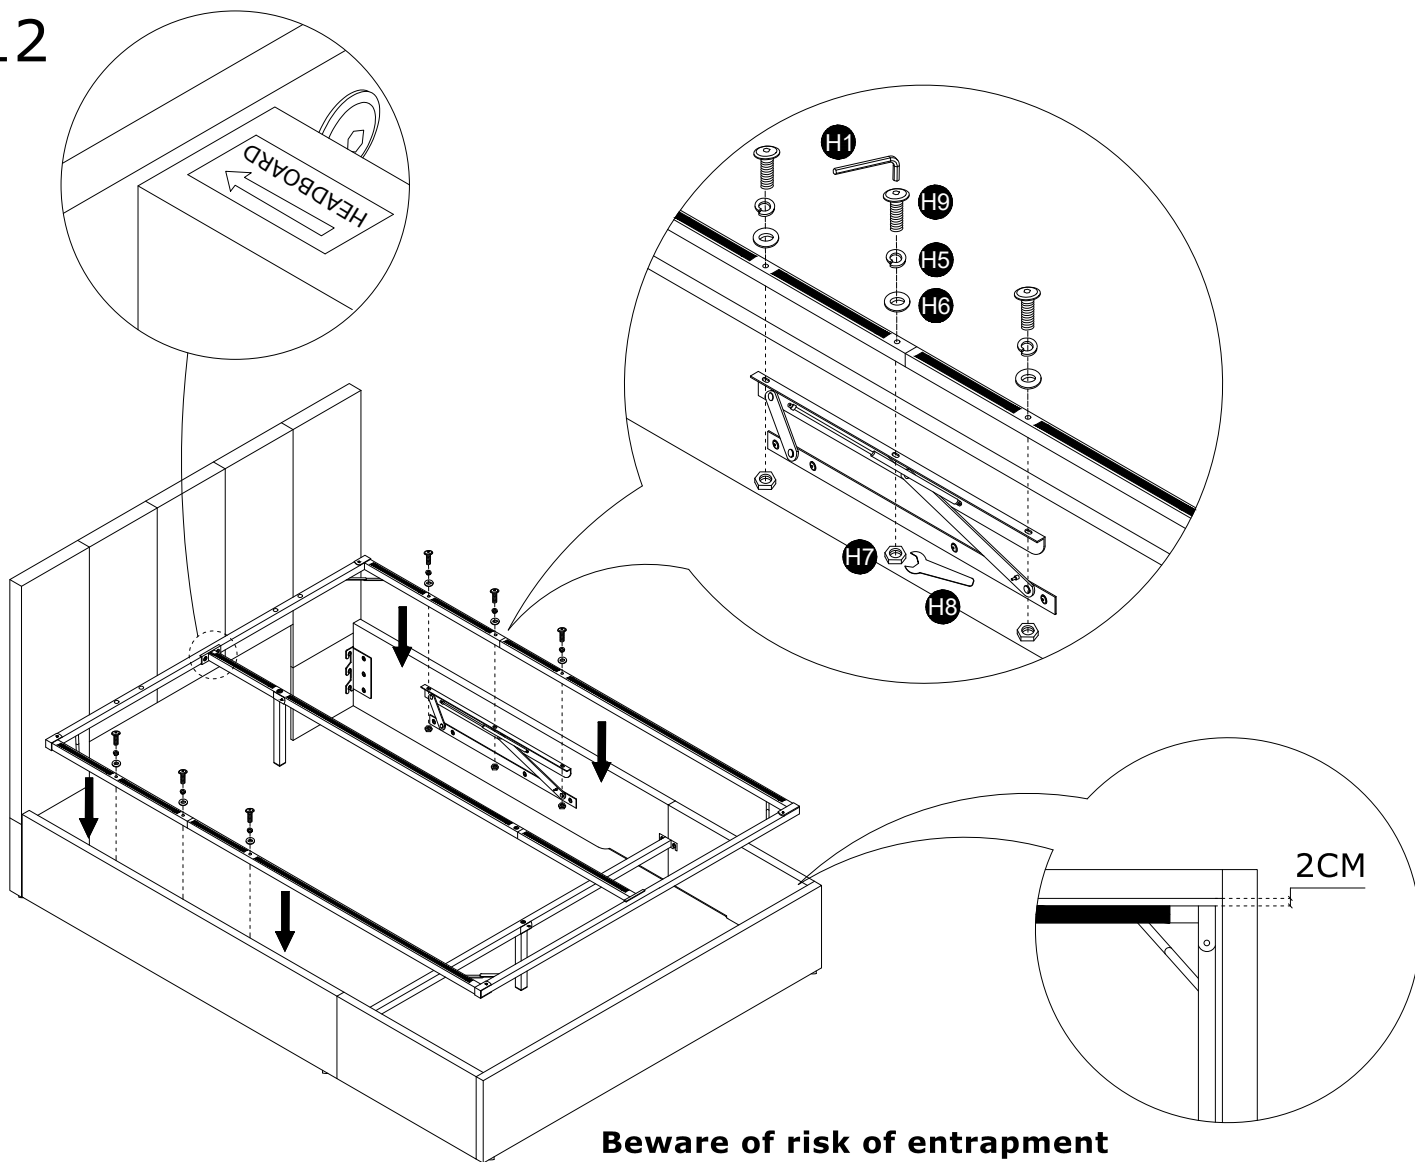


**Beware of risk of entrapment
from folding hinges!**

13

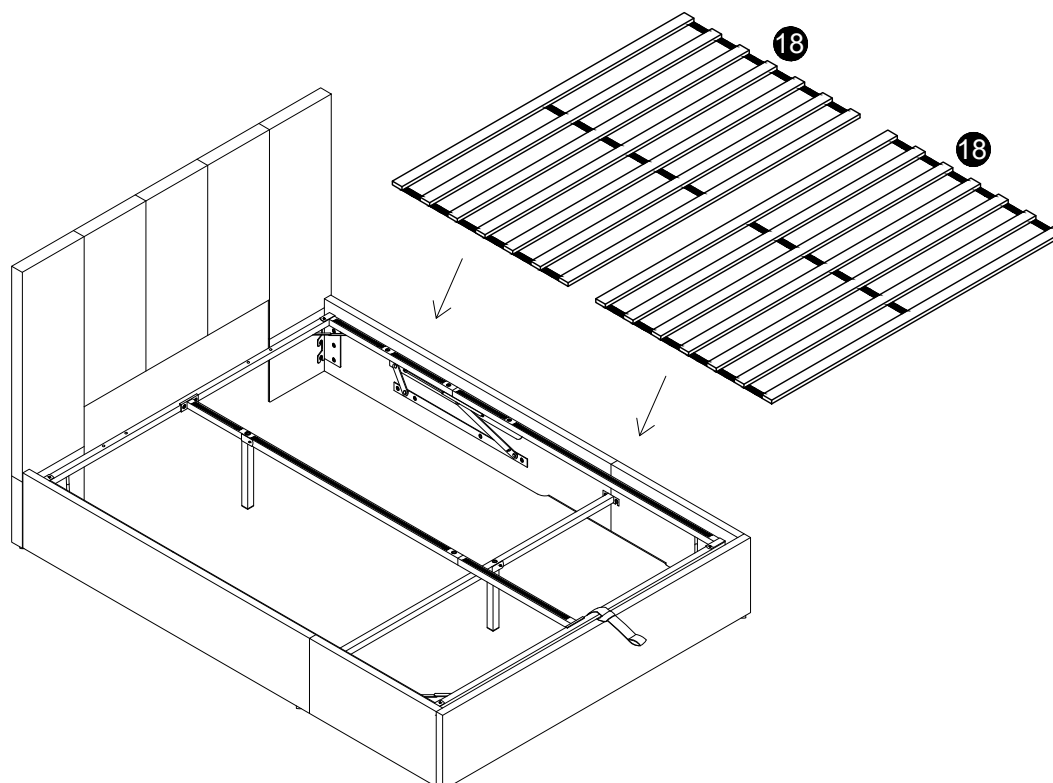


14

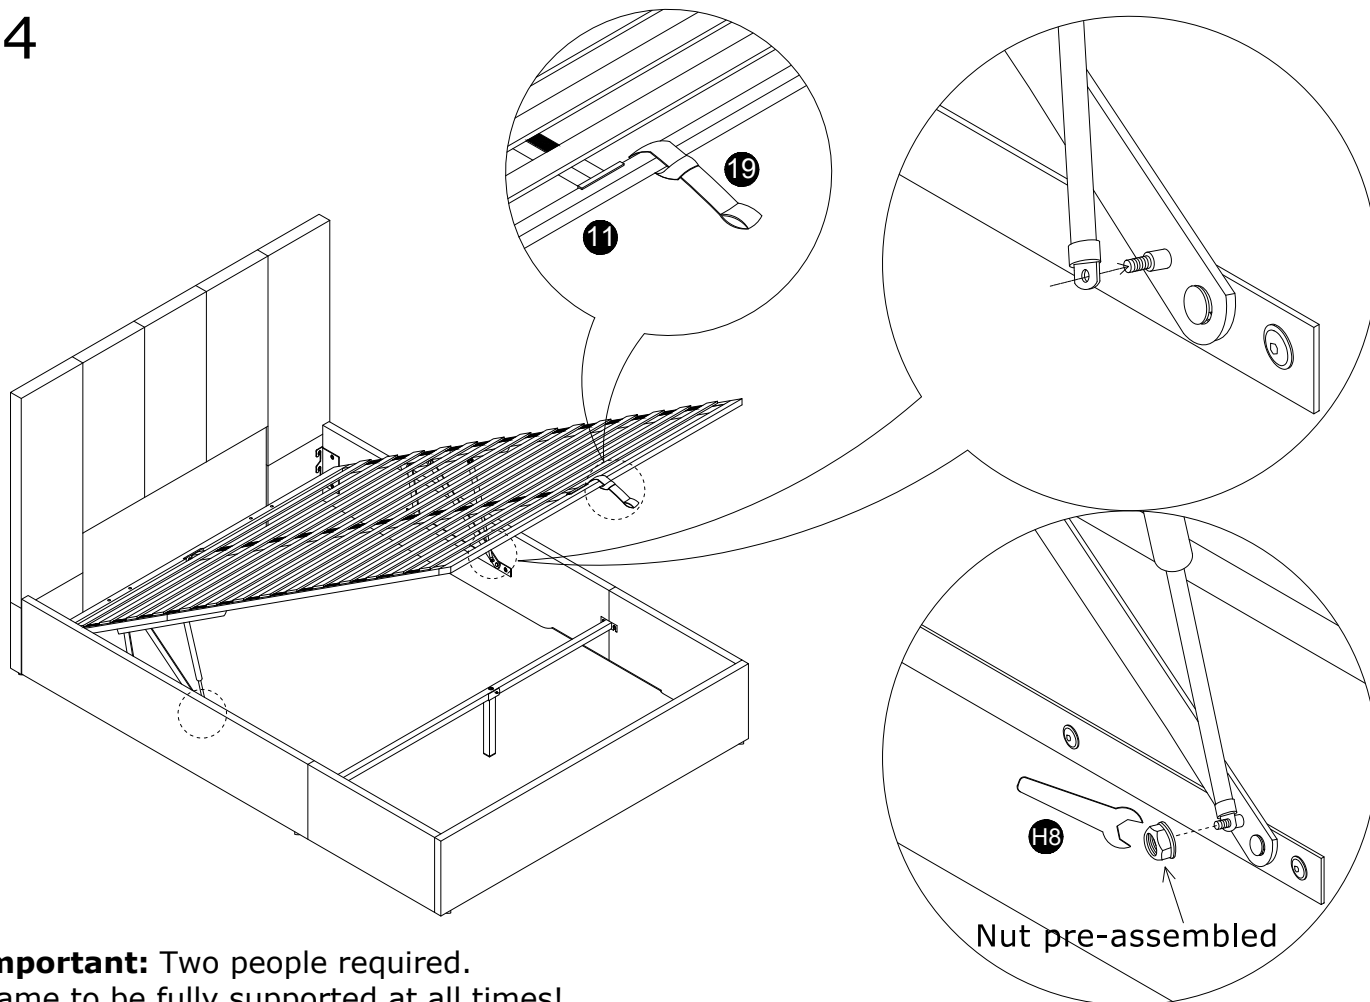

Important: Two people required.
Frame to be fully supported at all times!

15

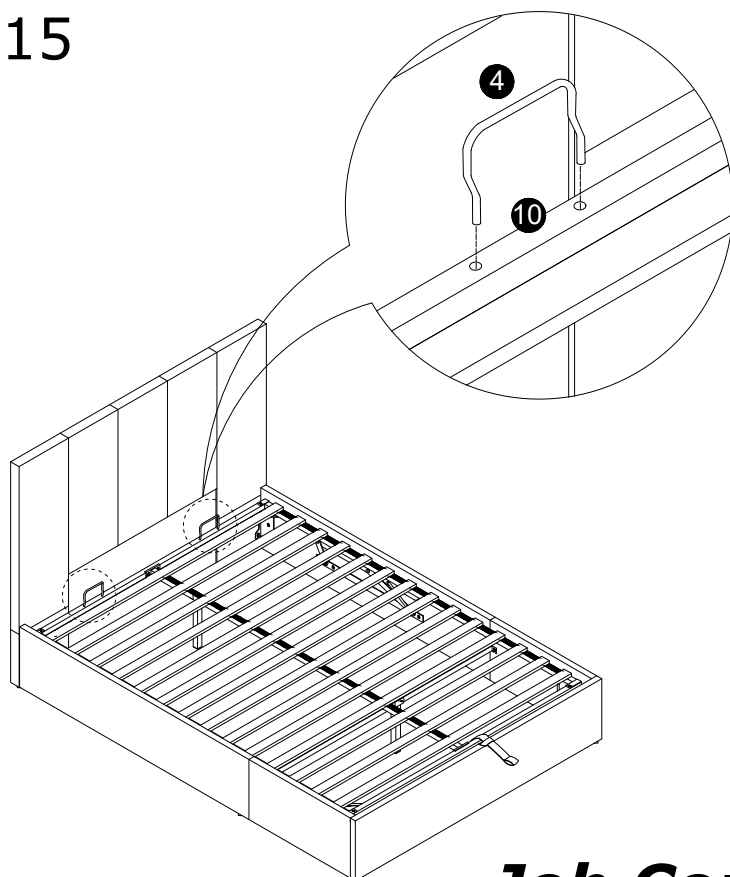

After placing the mattress on frame,
push down the frame with 30lbs force.



Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.