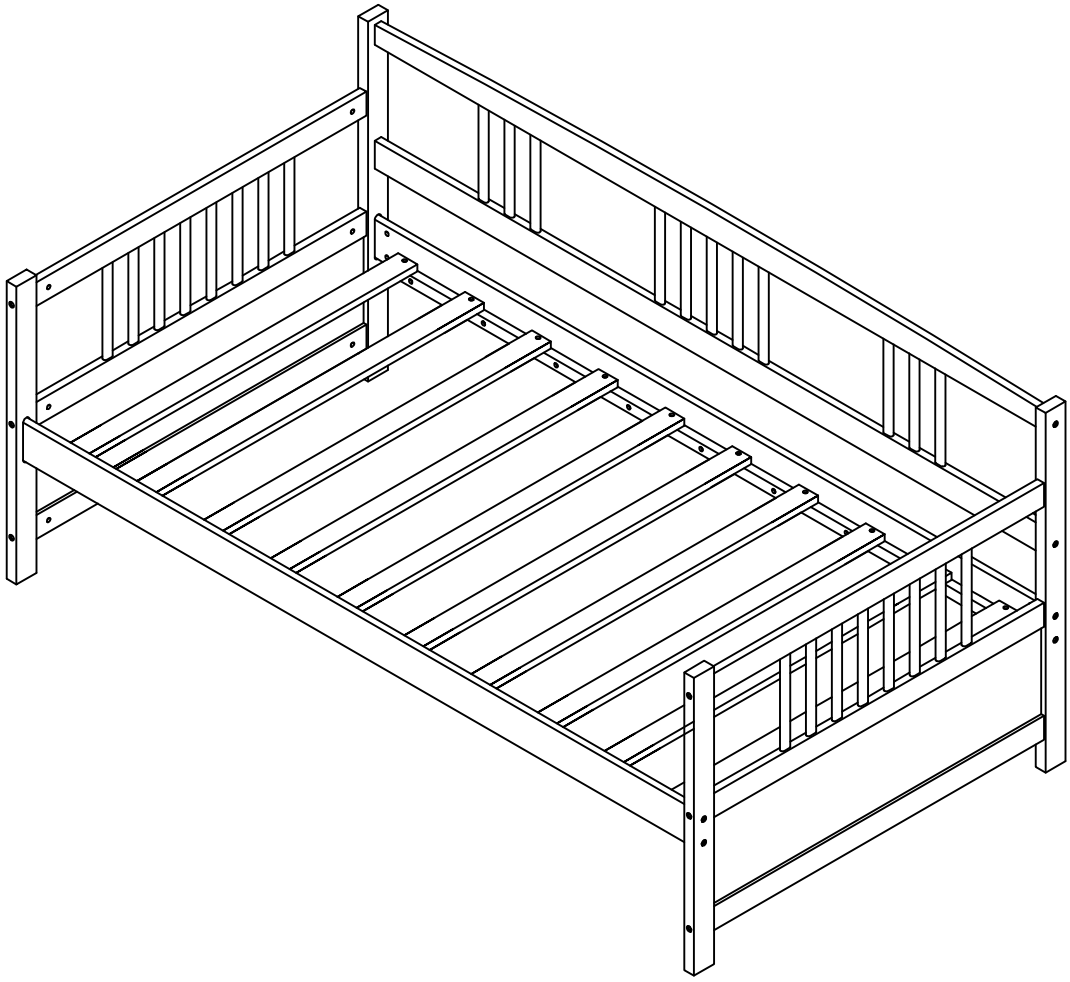
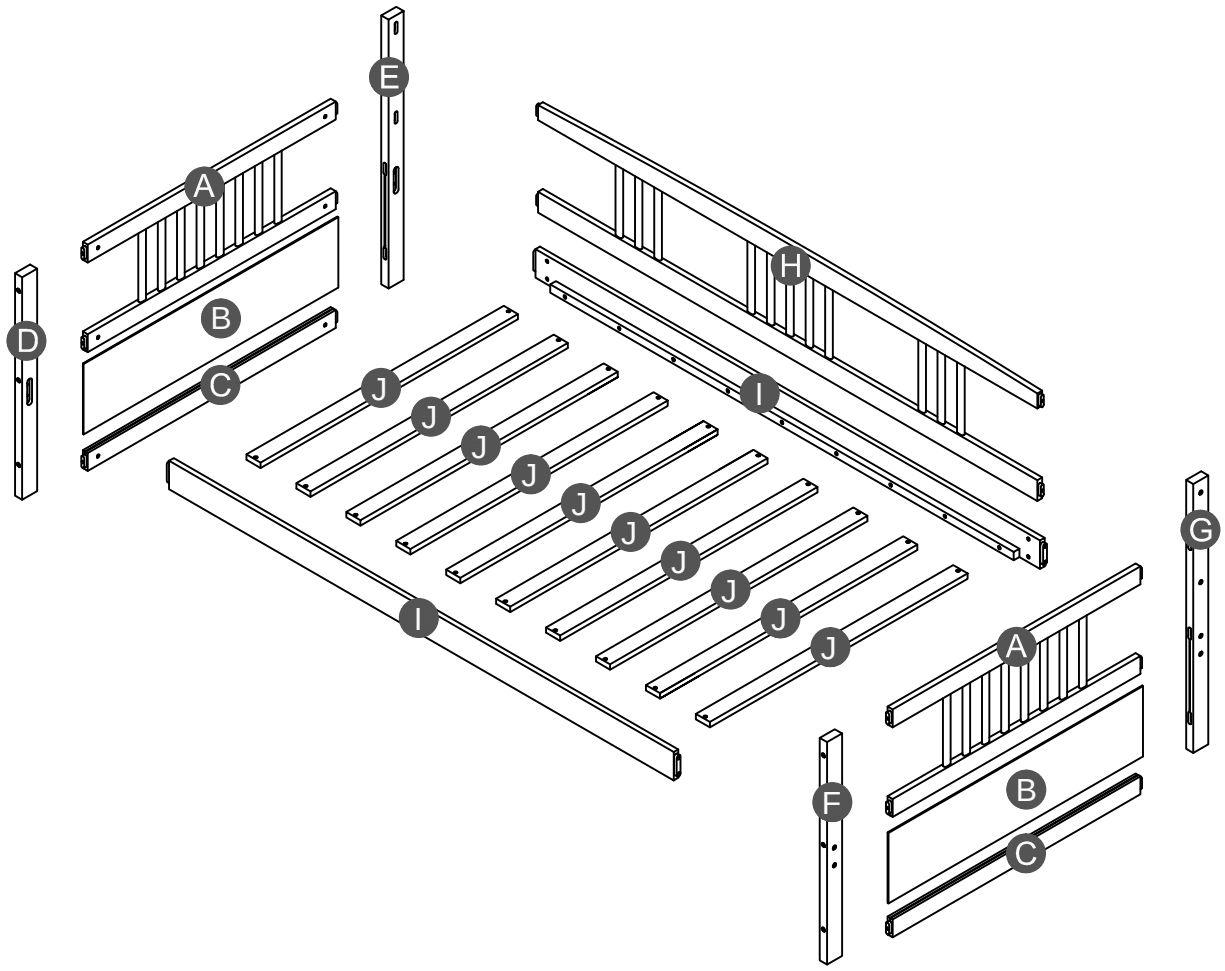
ASSEMBLY INSTRUCTIONS







TWIN DAYBED





Detail View




Part List

A  Frame HB/FB - 2pcs	**B**  Side panel - 2pcs	**C**  Horizontal bar - 2pcs
D  Leg left (Front) - 1pc	**E**  Leg left (Back) - 1pc	**F**  Leg right (Front) - 1pc
G  Leg right (Back) - 1pc	**H**  Long guard rail - 1pc	**I**  Side rail - 2pcs
J  Slats - 10pcs		

Hardware List

1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(24pcs)
4  Ø4*30mm Wood screws (20pcs)	5  (1/4")4.5*58mm Allen key (1pc)	


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)






PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS ！

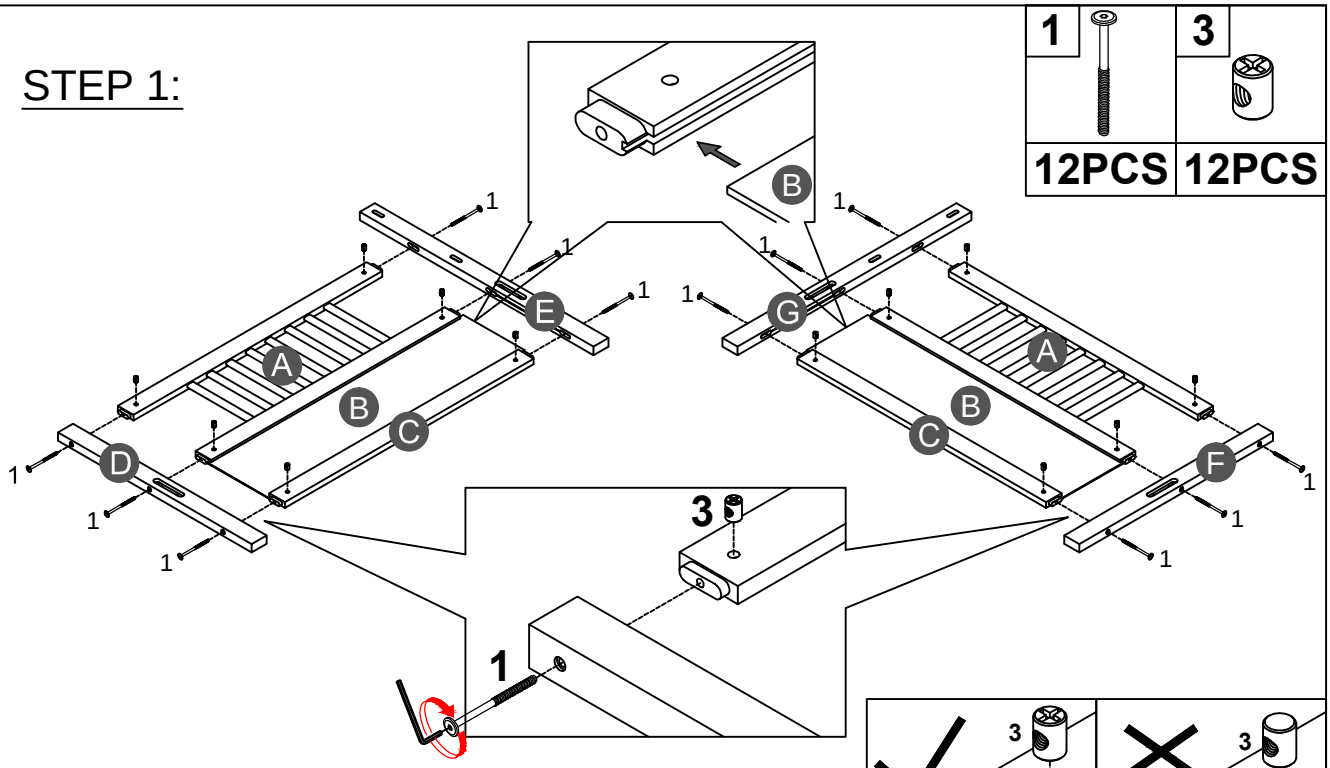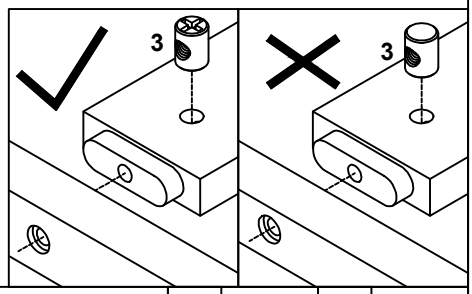
STEP 1:





Note:Part 3 will face up with the "x" mark on it, otherwise it cannot be tightened

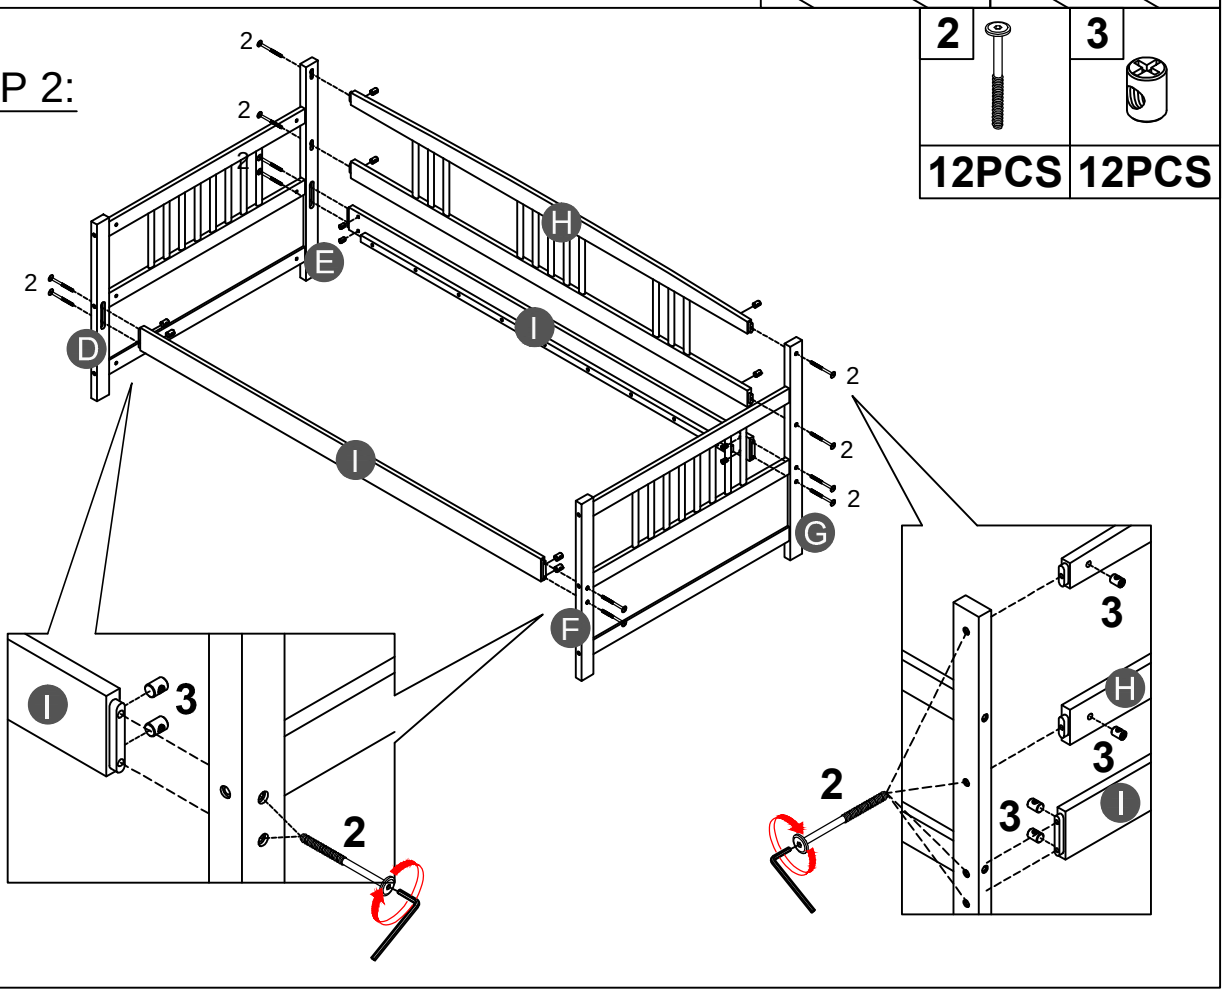
STEP 2:



STEP 3:

4

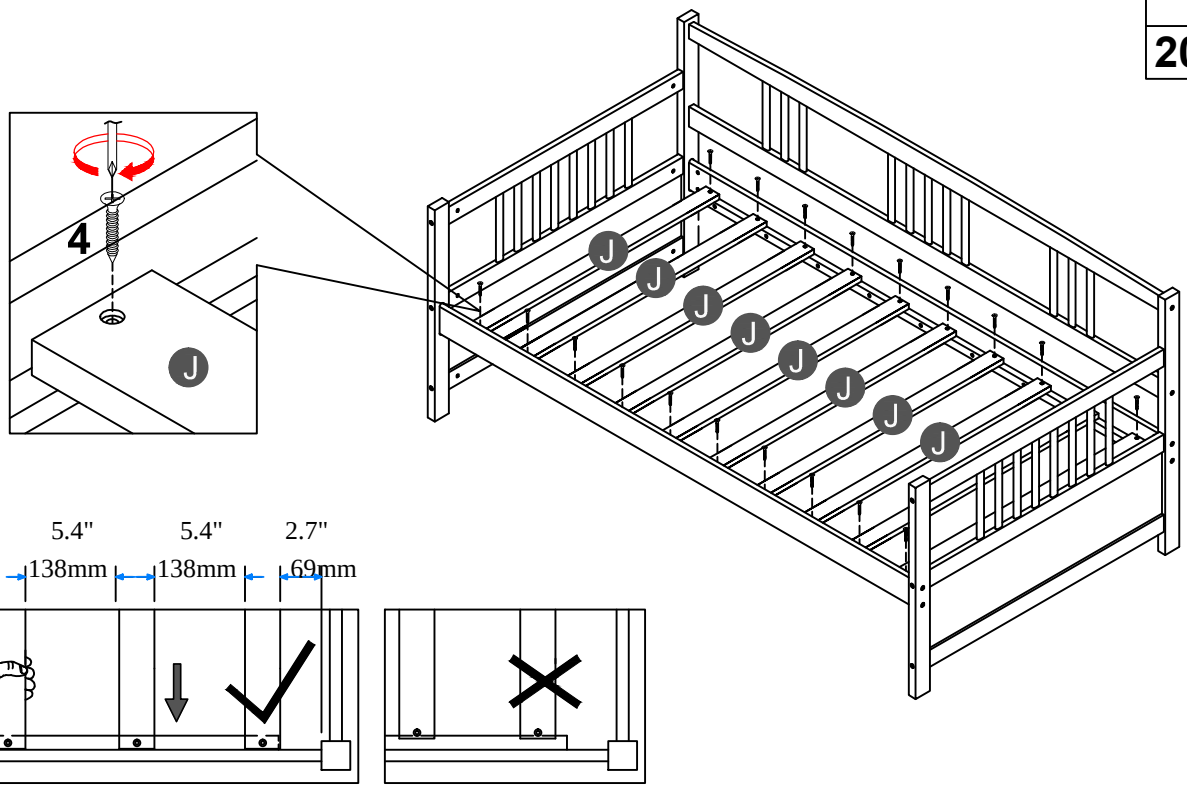20PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

