



ASSEMBLY INSTRUCTIONS








TWIN FLOOR BED WITH BOOK SHELF (WITH DOOR)

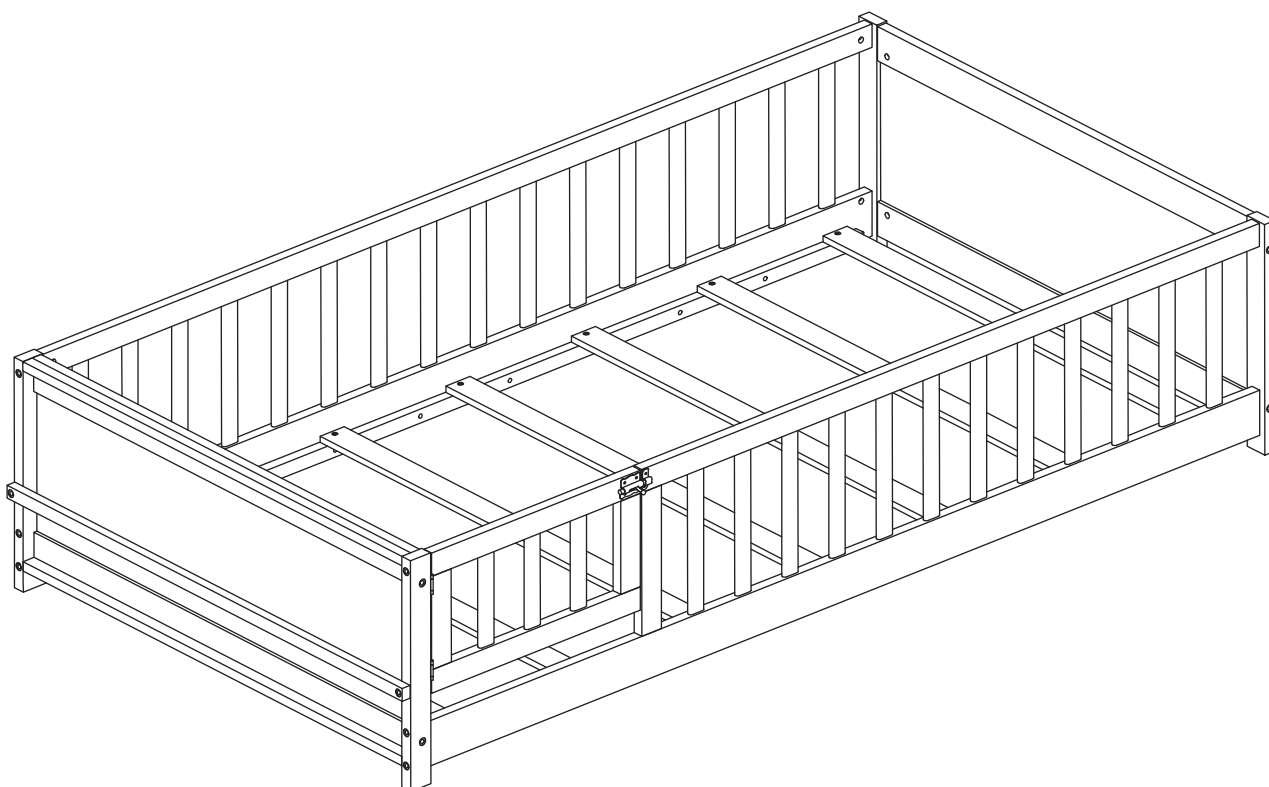







Detail View

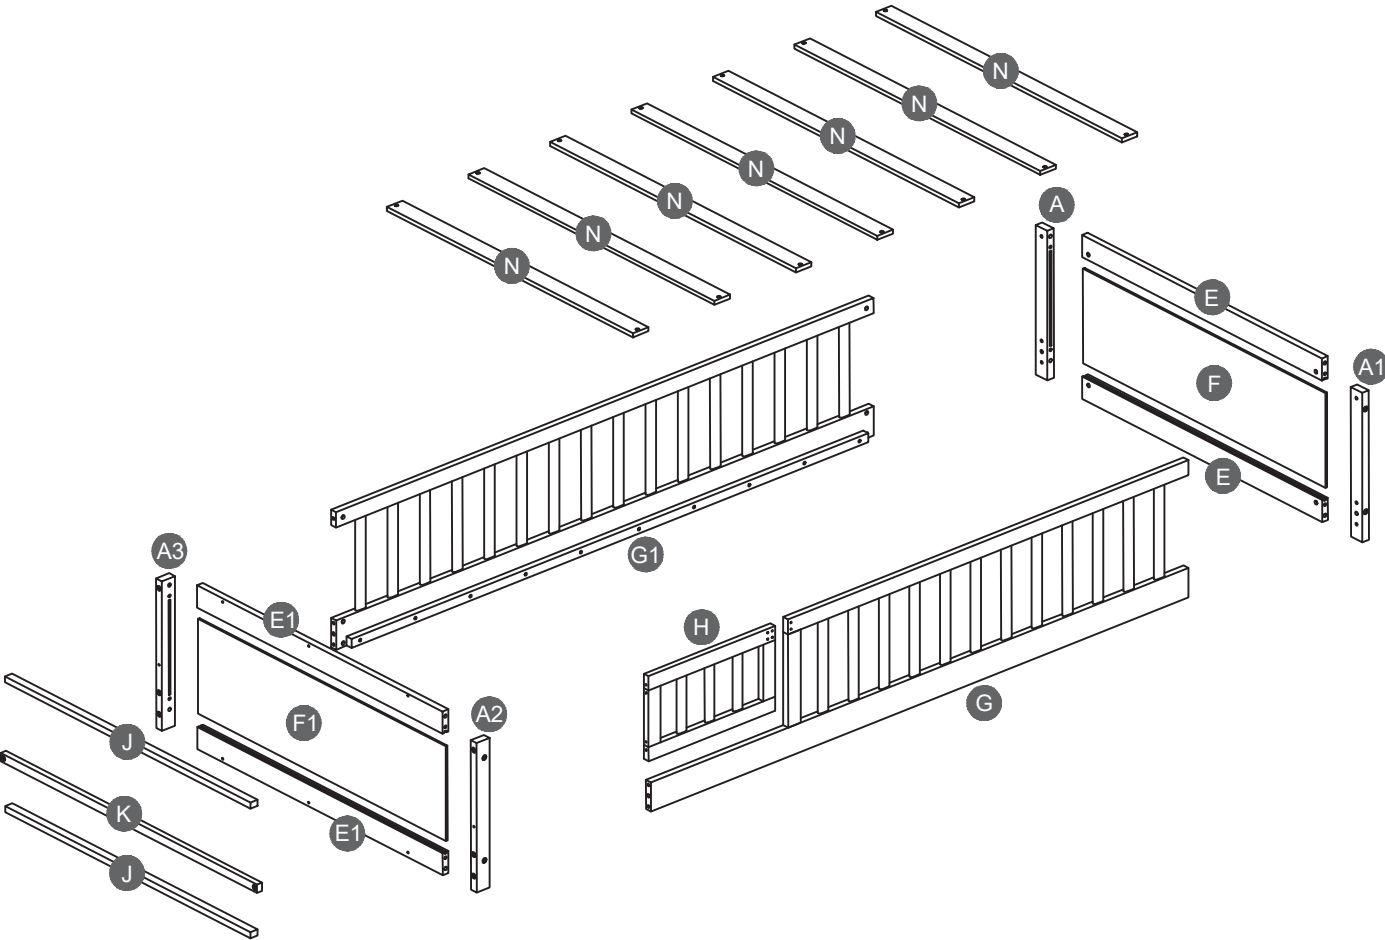


Part List

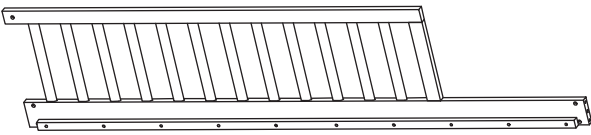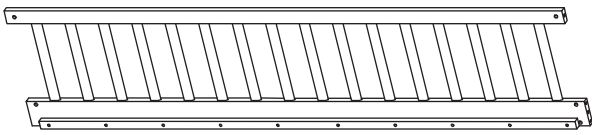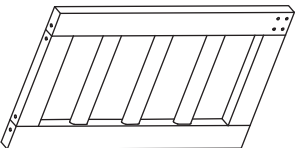A  Leg - 1pc	A1  Leg - 1pc
A2  Leg - 1pc	A3  Leg - 1pc
E  Hb. Panel (Top & Bottom) - 2pcs	E1  Fb. Panel (Top & Bottom) - 2pcs
F  Fb. Mid. Panel (Short) - 1pc	F1  Fb. Mid. Panel (Long) - 1pc
J  Fb. Support Bar (Top & Bottom) - 2pcs	K  Fb. Support Bar (Mid.) - 1pc
G  Side Rail Front - 1pc	G1  Side Rail Back - 1pc
H  Door - 1pc	N  Bed Slats - 7pcs

Hardware List


1  M6 x 80mm JCBC (9pcs)	2  M6 x 15mm Barrel Nut (19pcs)	3  M10 x 40mm Wood Dowel (12pcs)
4  Sticker Cap (2pcs)	5  M6 x 65mm JCBC (10pcs)	6  20 x 20 x 233mm Wood Block (1pc)
7  M4 x 25mm CSK Screw (14pcs)	8  M6 x 30mm JCBC-W (6pcs)	9  M6 x 30mm JCBC (2pcs)
10  6 x 24 x 55mm (135°) Hinges (2pcs)	11  10 x 40 x 60mm Lock (1pc)	12  M3.5 x 16mm CSK Screw (14pcs)
13  M4 Allen Key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

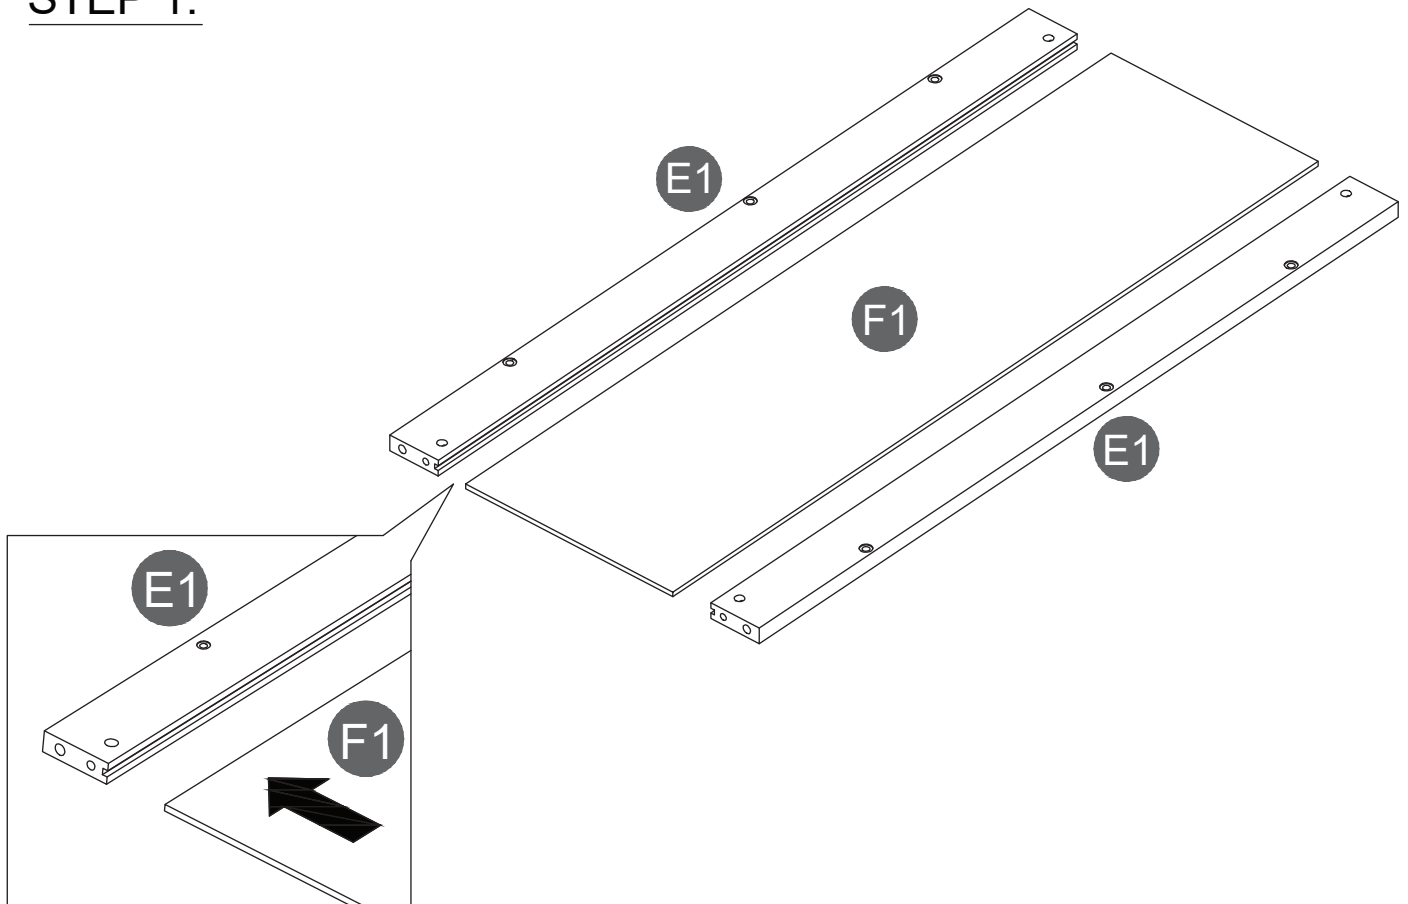


STEP 2:

2	3	5	8
4PCS	4PCS	4PCS	6PCS

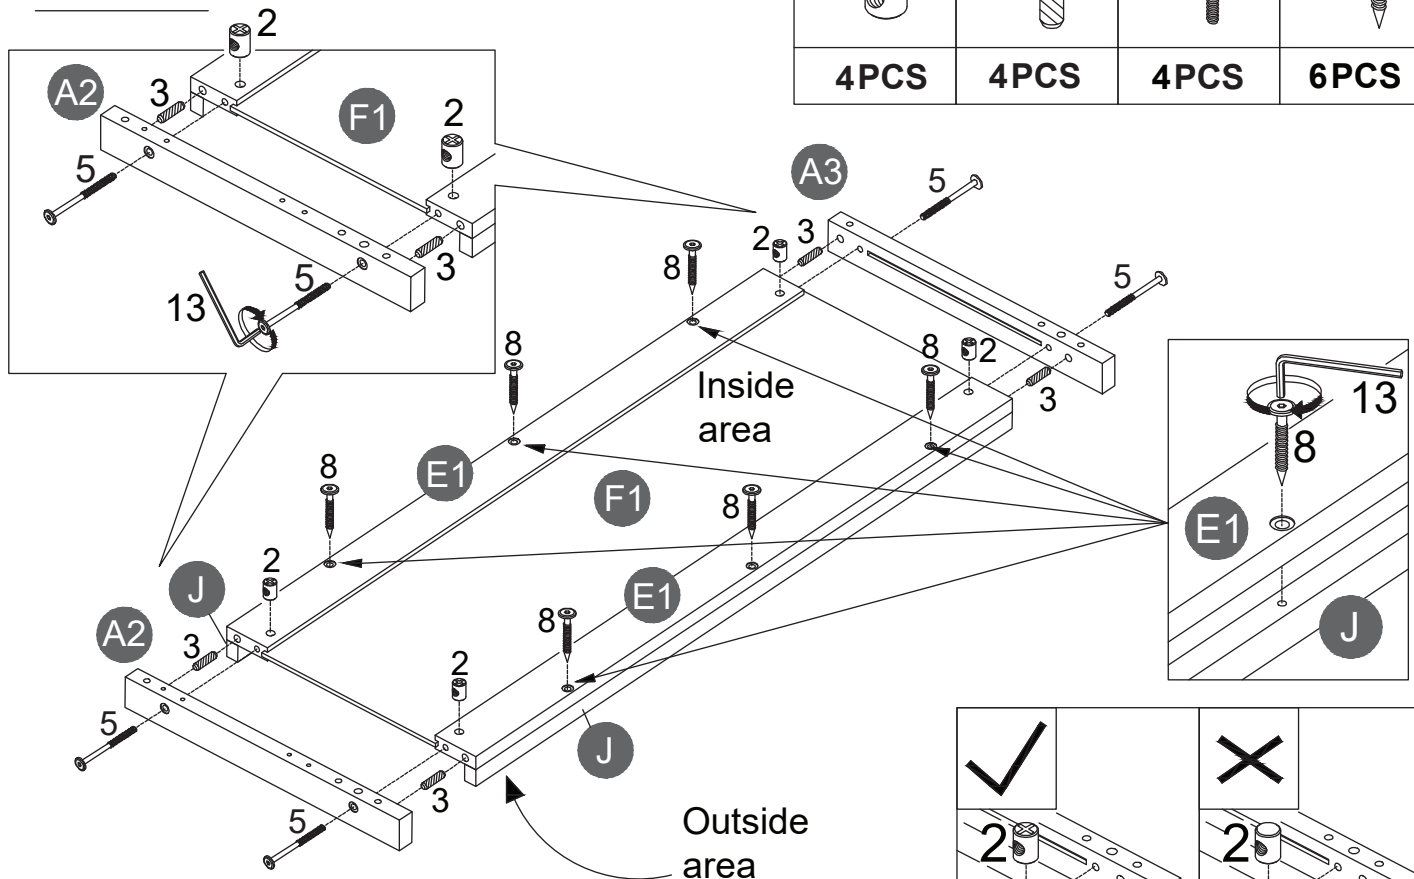


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened


STEP 3:

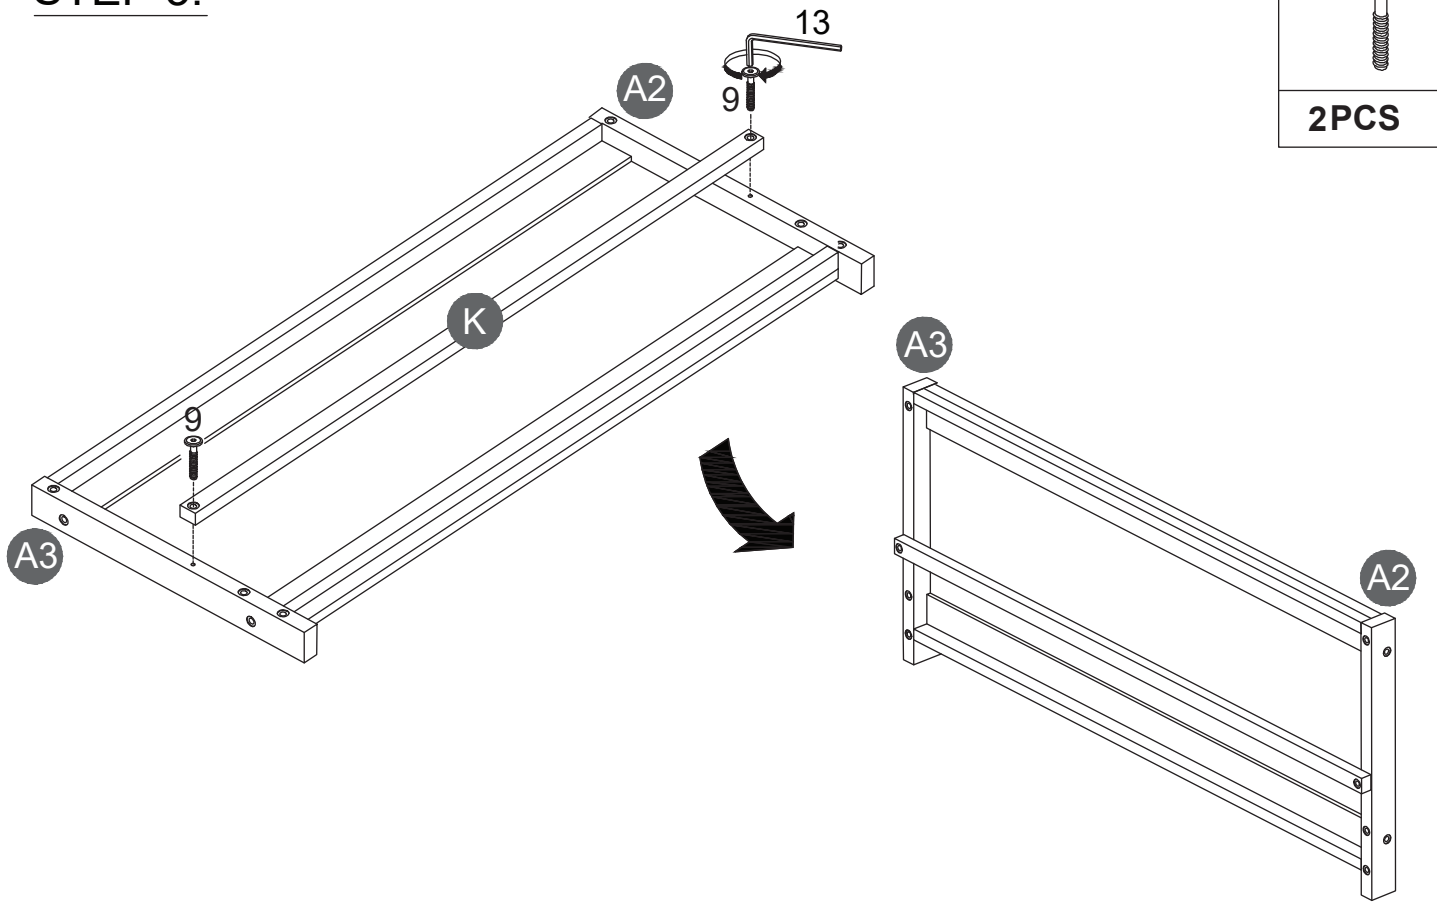

STEP 4:

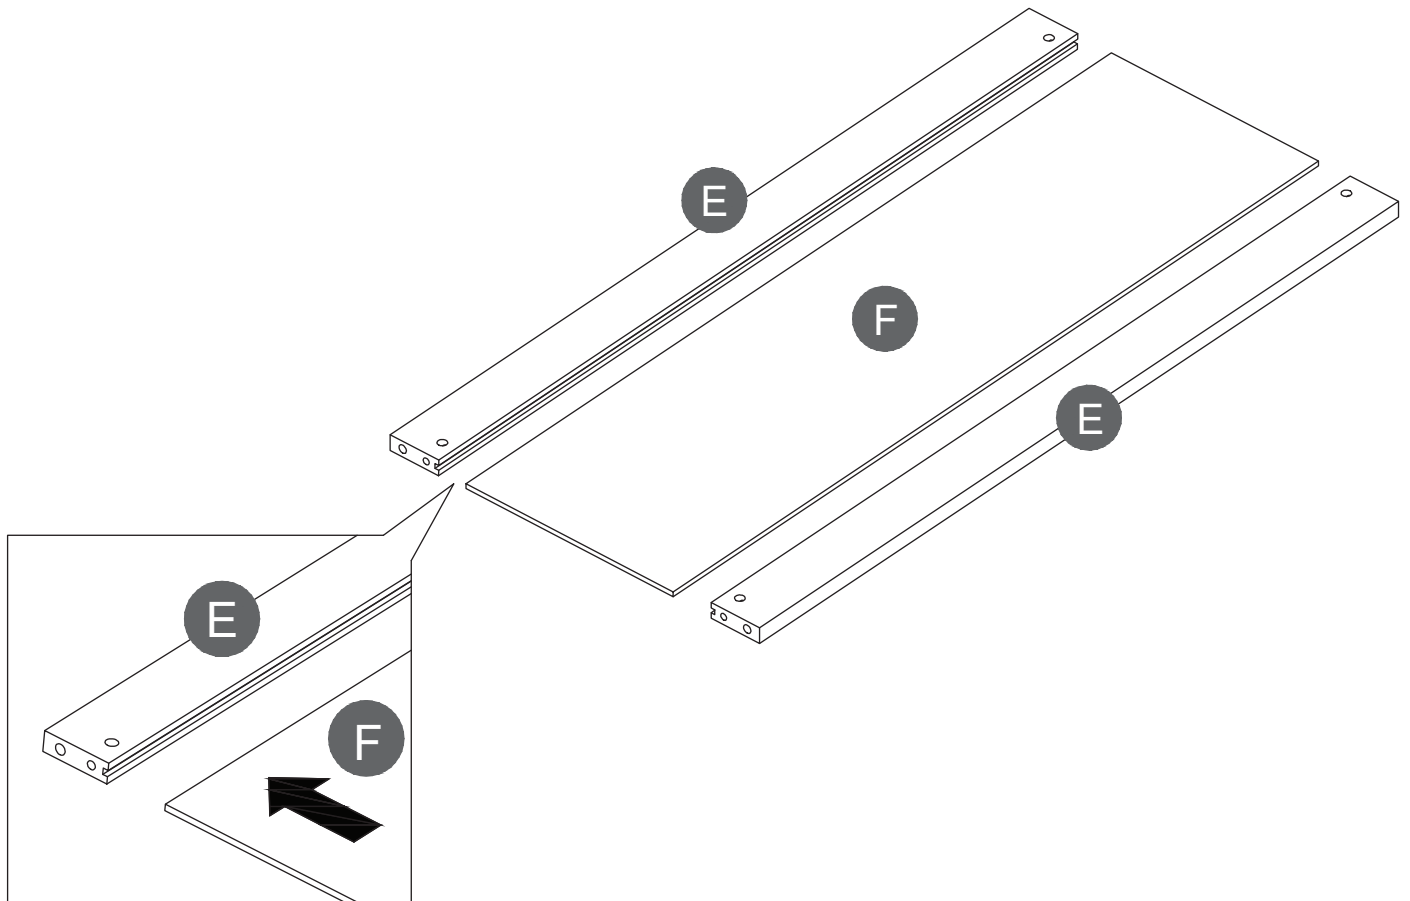


STEP 5:

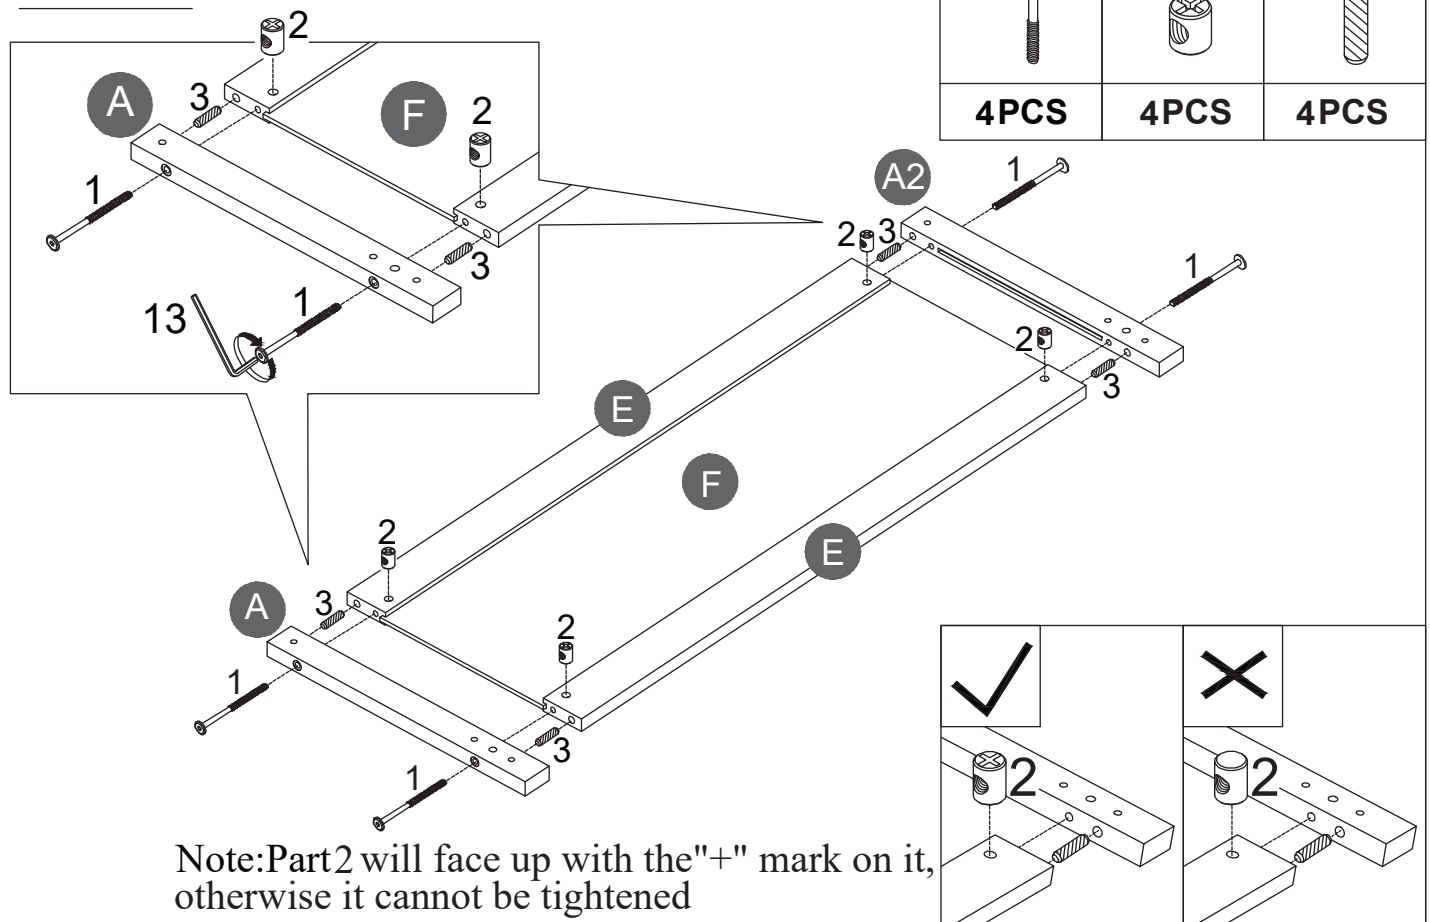



STEP 6:

1	2	3	4	5
5PCS	11PCS	4PCS	2PCS	6PCS

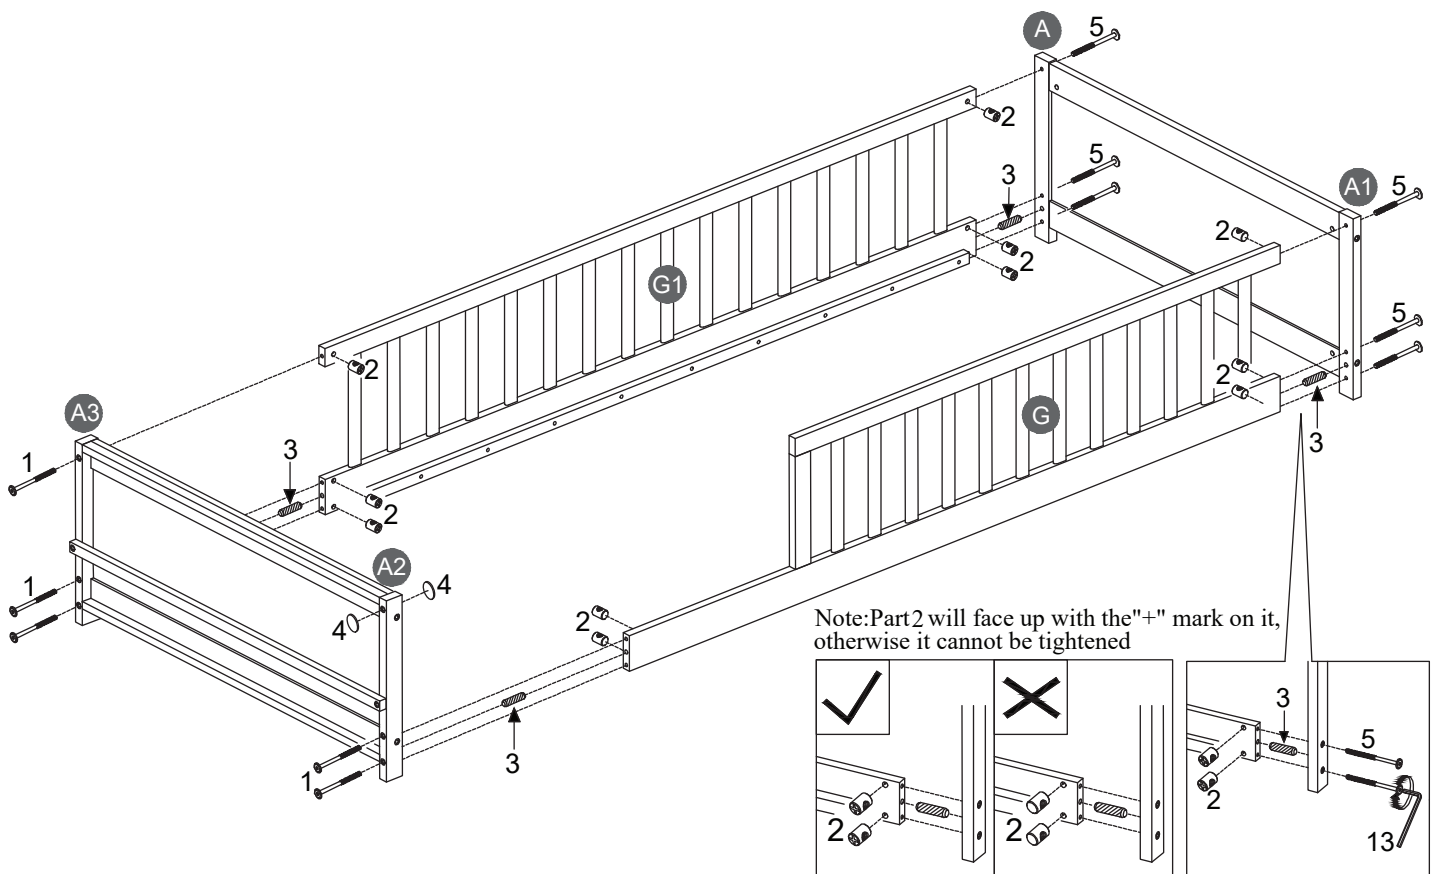


STEP 7:

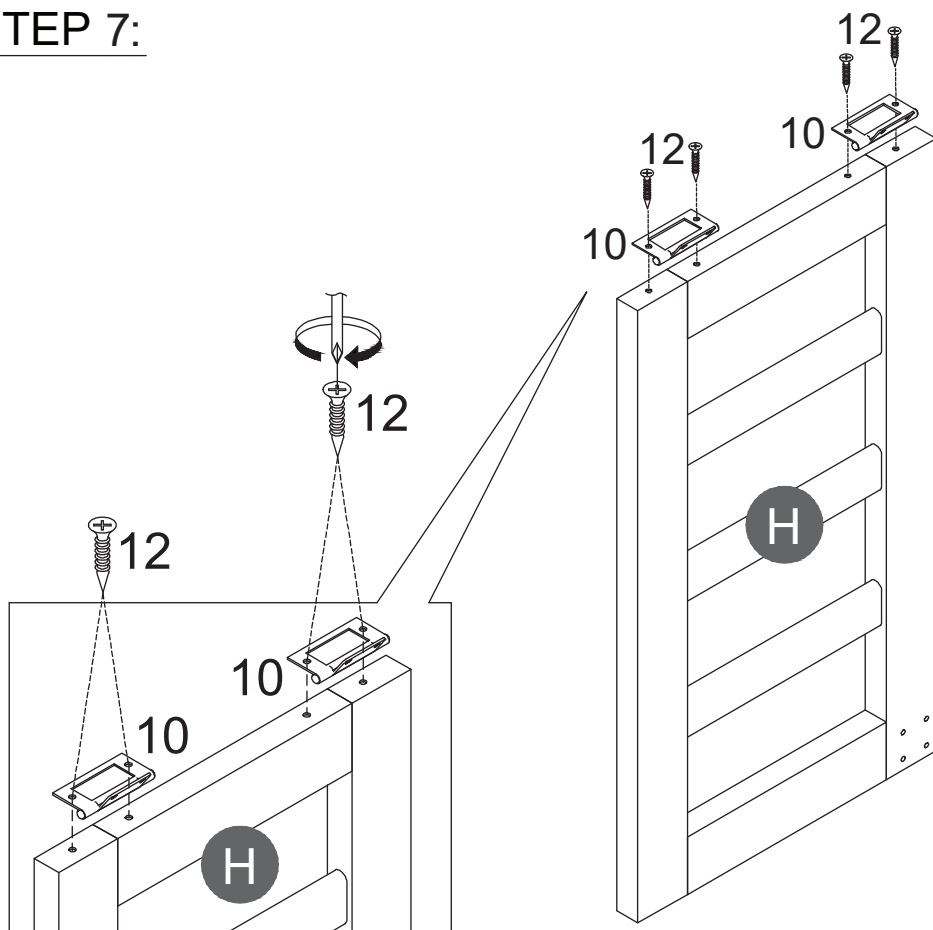

10	12
	
2PCS	4PCS


STEP 8:

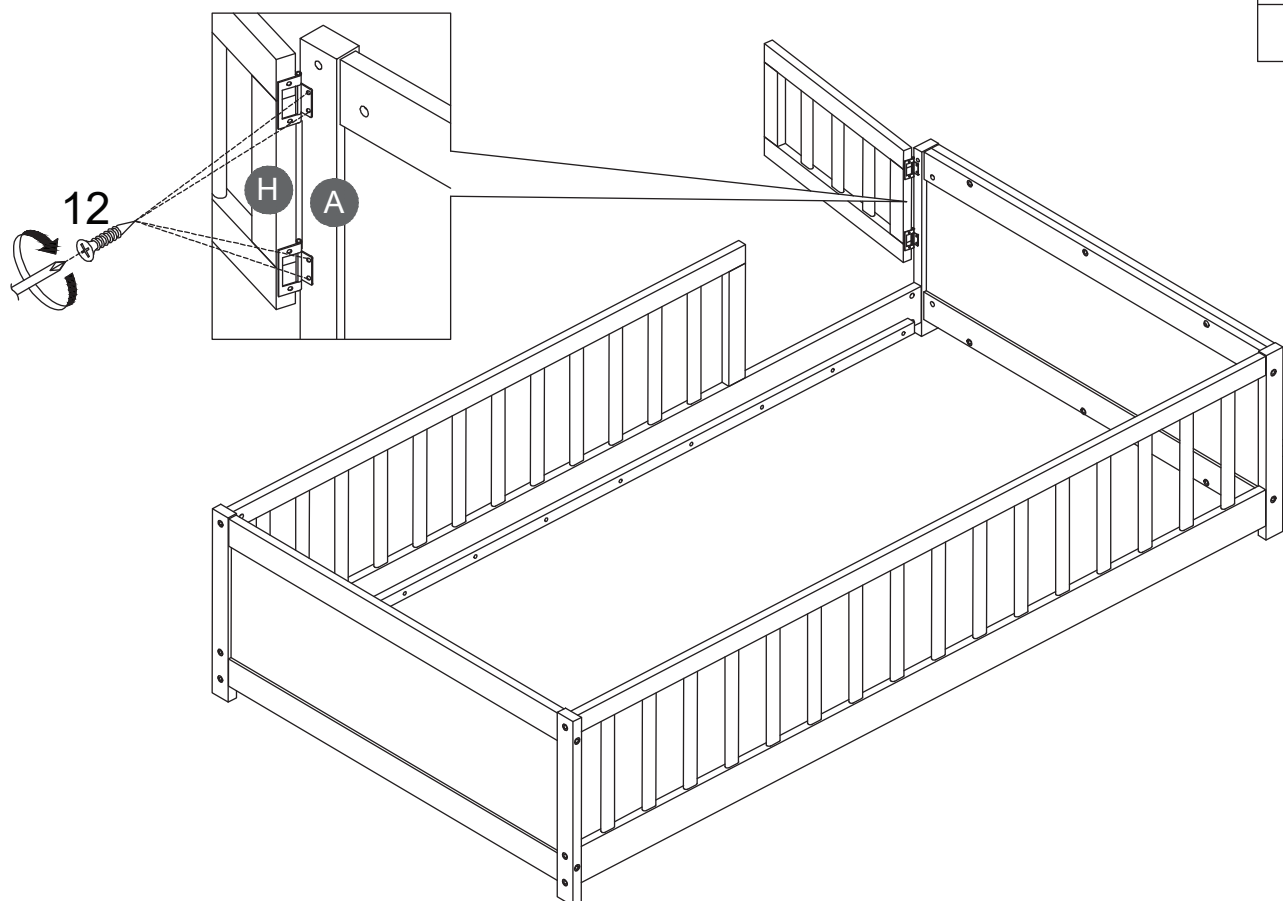


12


4PCS

STEP 9:

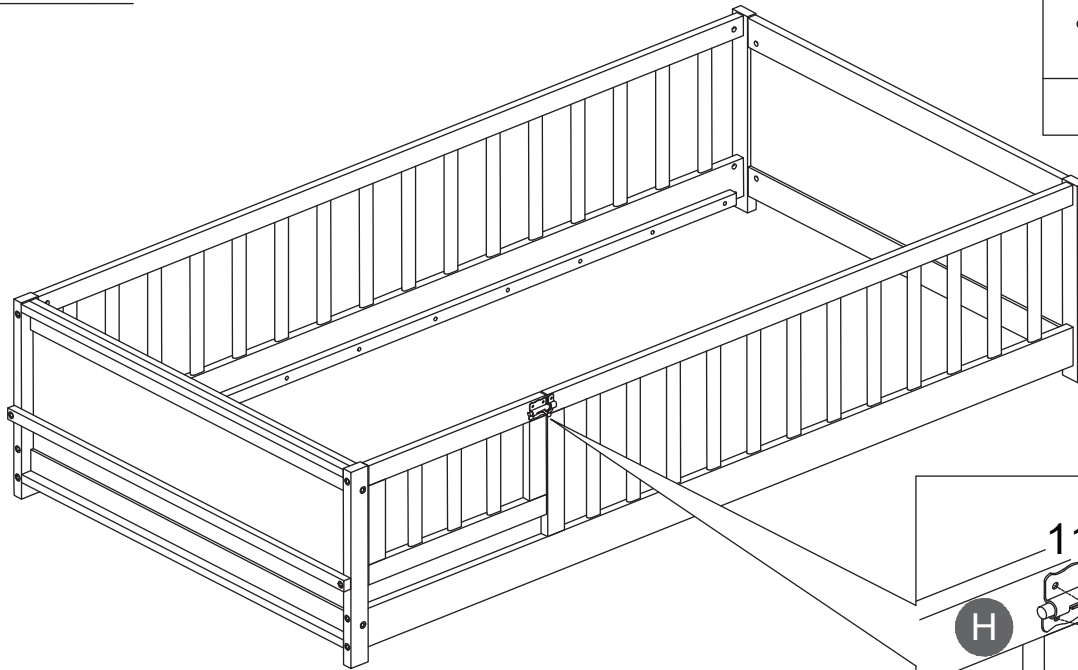


11	12
	
1 PC	6 PCS


STEP 10:

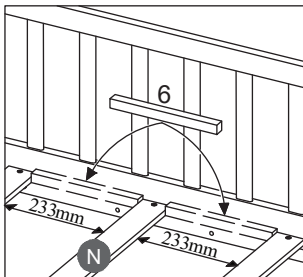

Note: Use Wood Block as a guidance distance between Bed Slats.

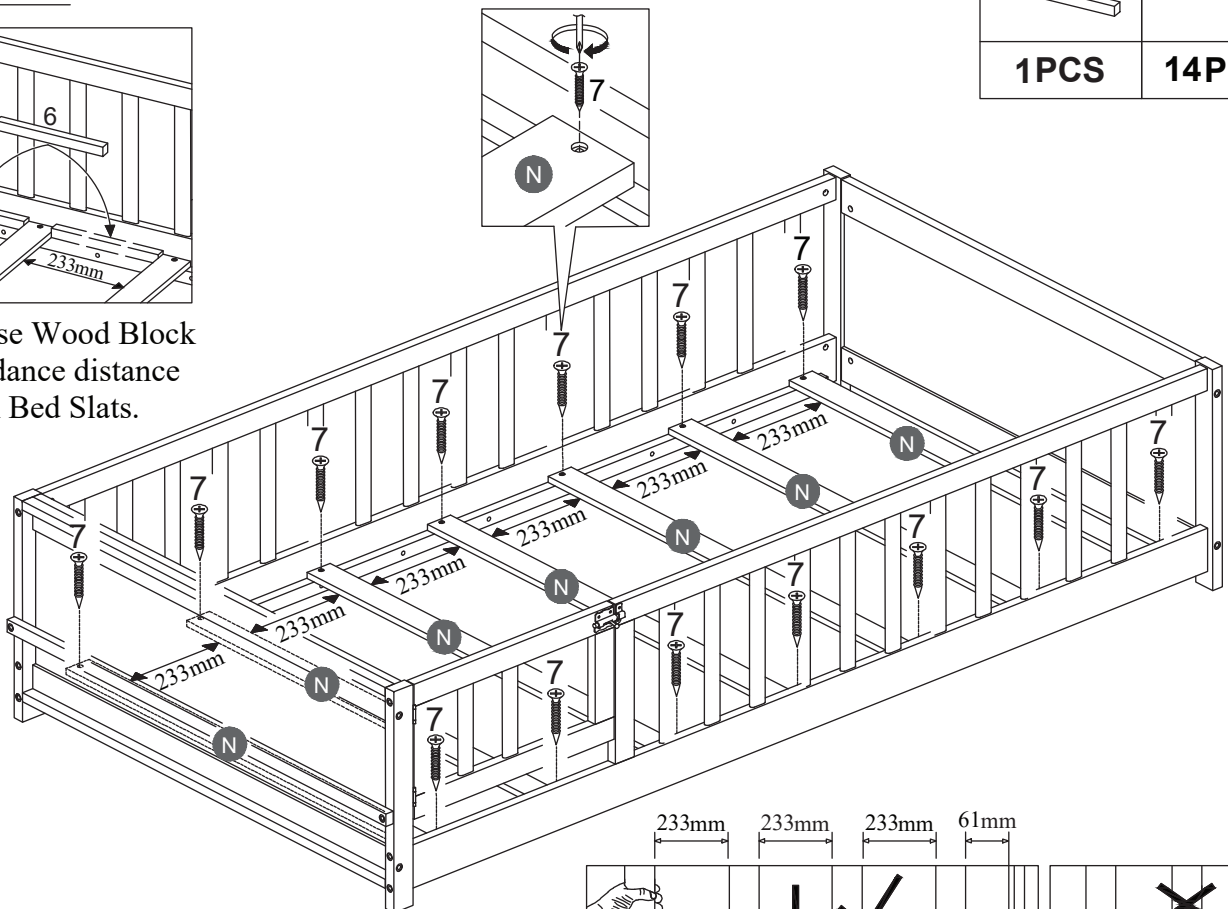

6	7
	
1 PCS	14 PCS

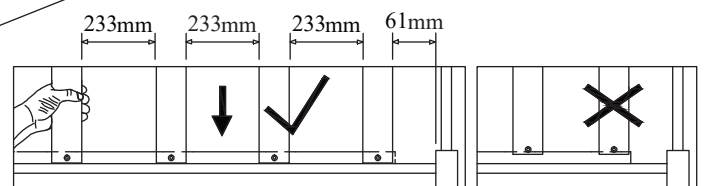

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.