

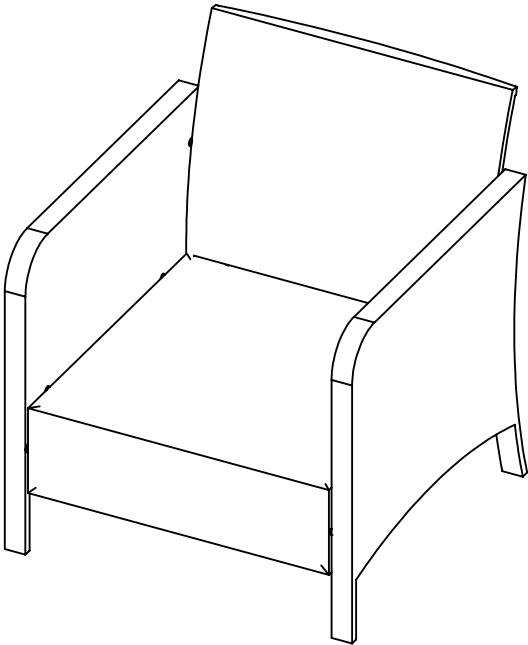
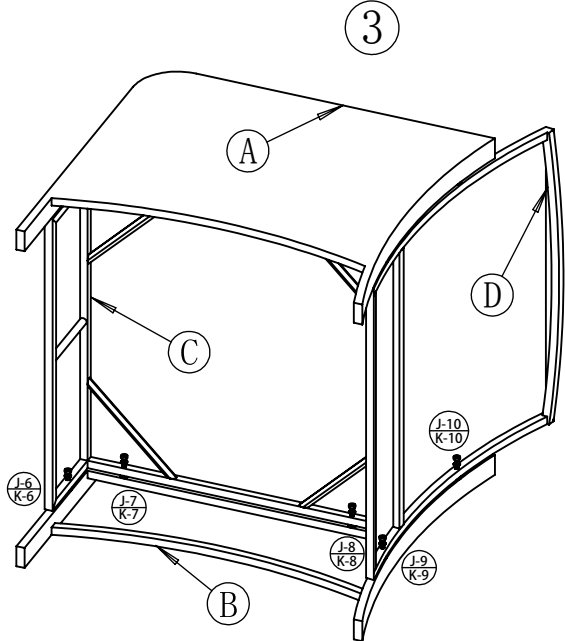



Assembly Instructions

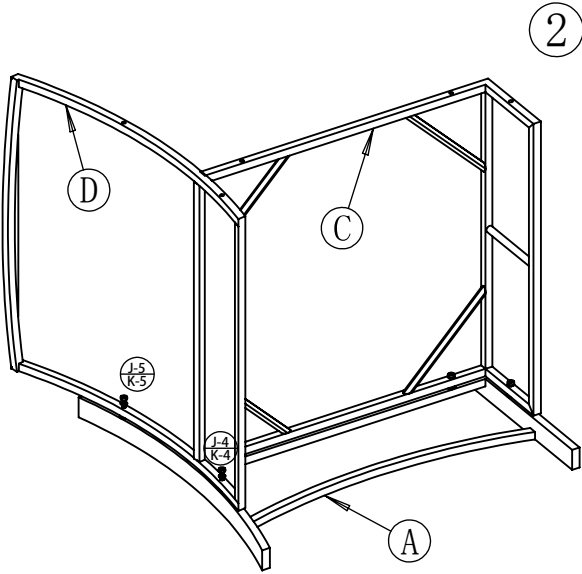





No	Part Image	Qty
A		1
B		1
C		1
D		1
J	 M6*30	10
K		10

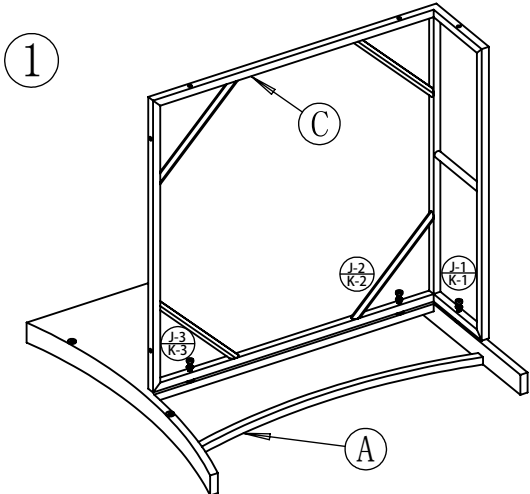


Notes:Do not tighten bolts fully until parts are all connected!

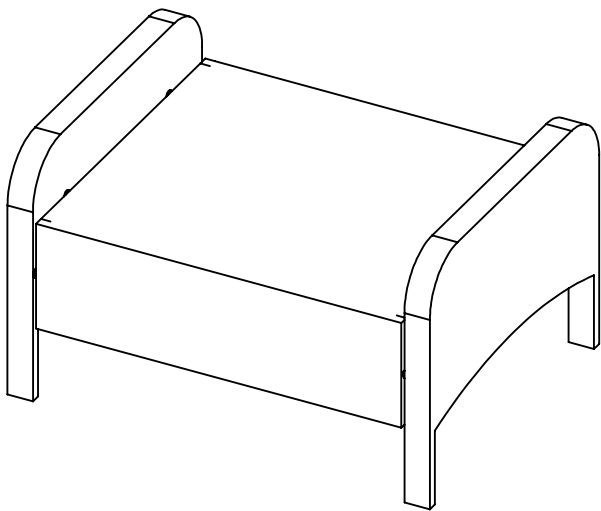

Part No	Part Image	Qty
E		2
F		1
J	 M6*30	8
K		8

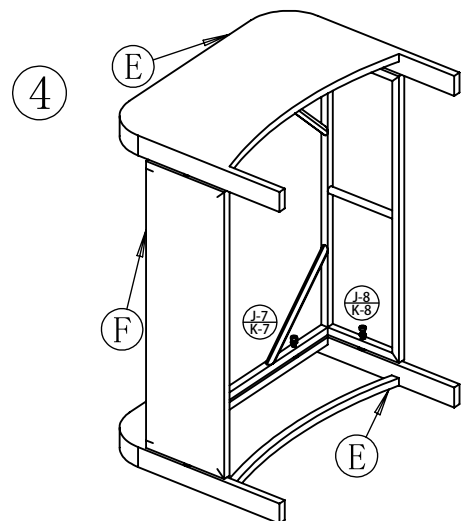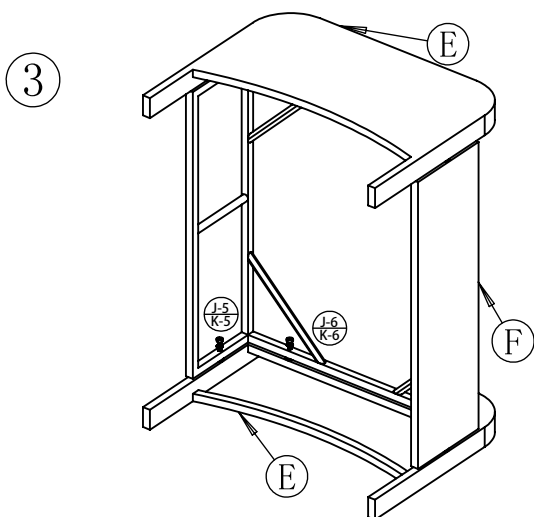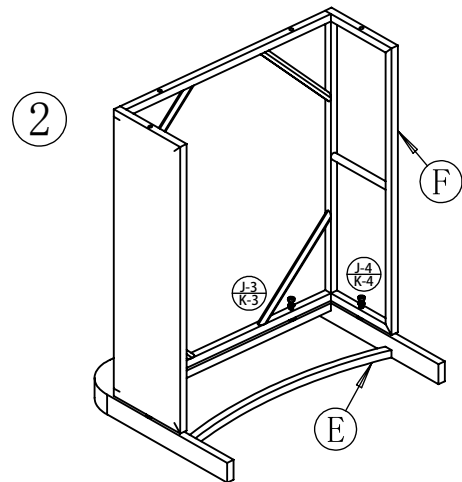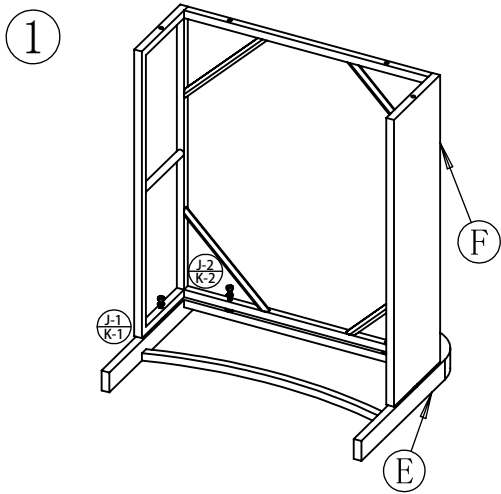

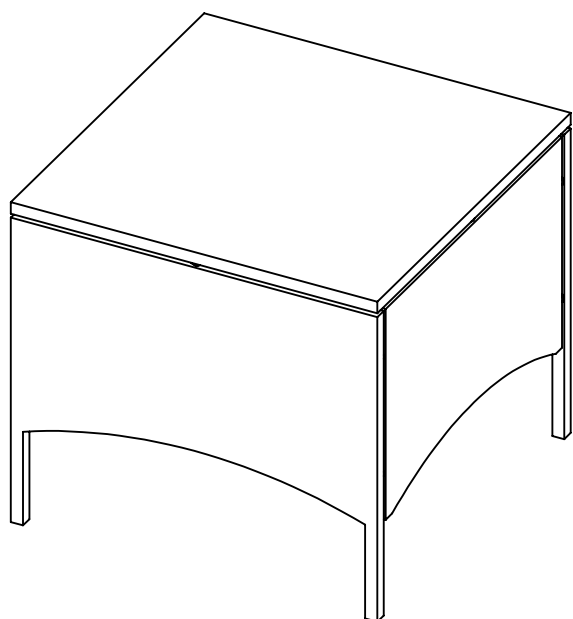

Part No	Part Image	Qty
G		1
H		2
I		2
J		12
K		12

