




SPARE PARTS

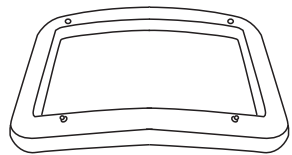


Ax1

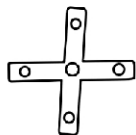

Ex1

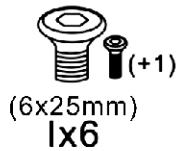


(6x25mm)
1x6

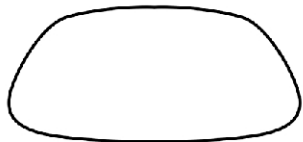


Bx1




Fx1

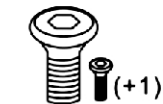

(6x35mm)
Jx2

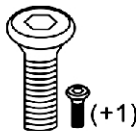

(6x60mm)
Kx5

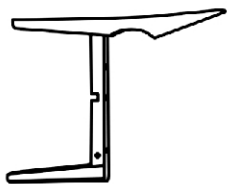


Cx1



Gx13



Lx1

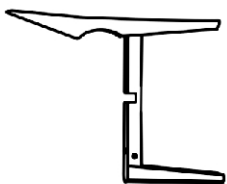

Dx1




Hx13




Mx4

ASSEMBLY INSTRUCTIONS

1

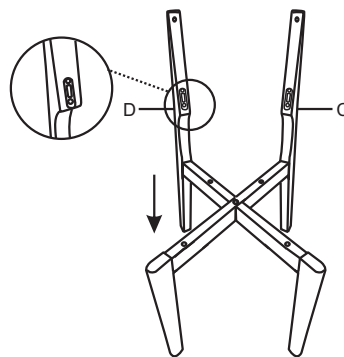


2

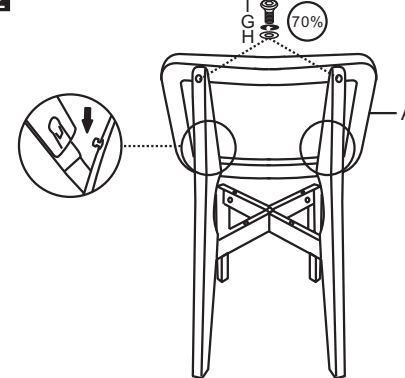


Note:

1. Insert the backrest (A) vertically into the groove on the wooden frame (C,D).
2. When installing, align one side of the screw and screw it in, then tighten the other side. If there is a slight deviation in the hole position, external force can be used to align it.
3. Be careful during installation to prevent scratches on the backrest.


3

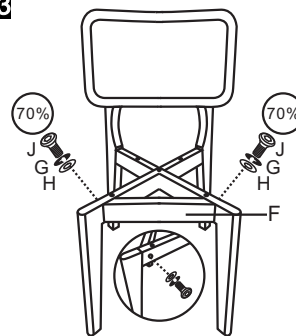


4

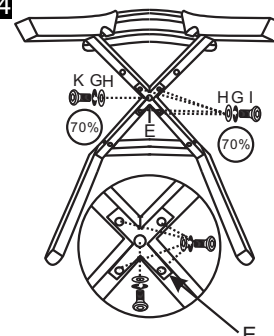


5

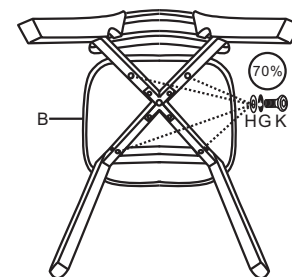

6

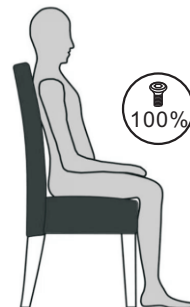

7

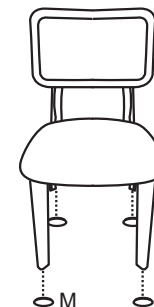

8

