

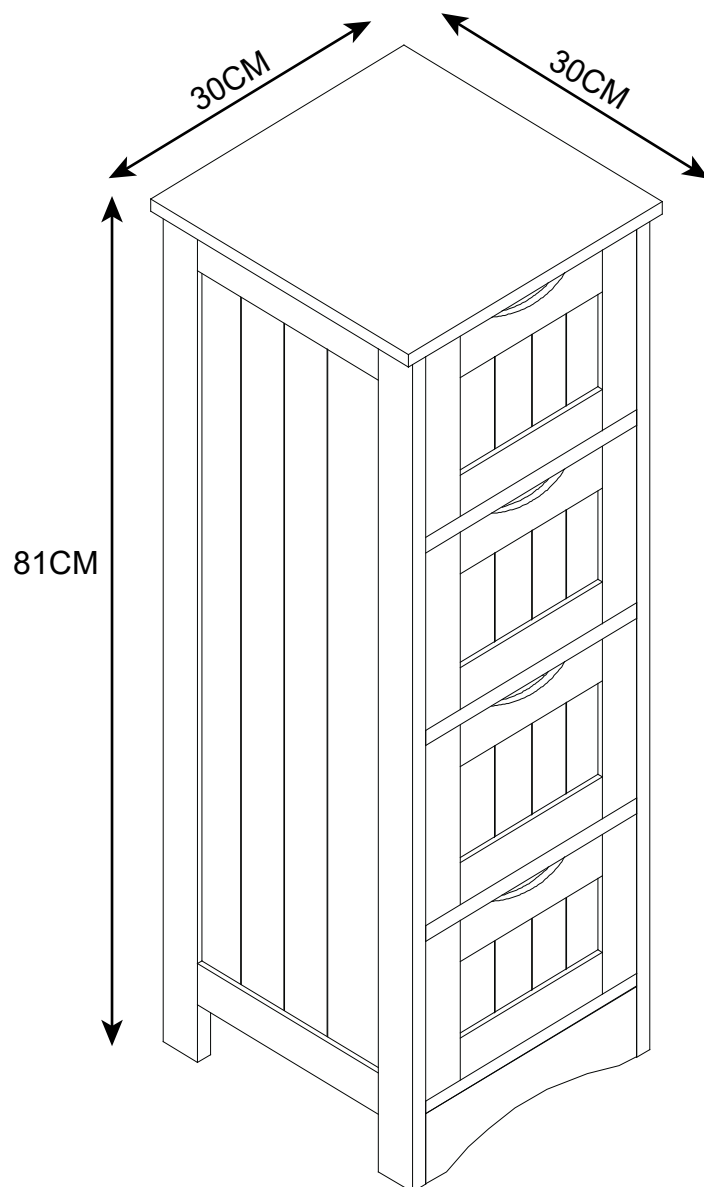
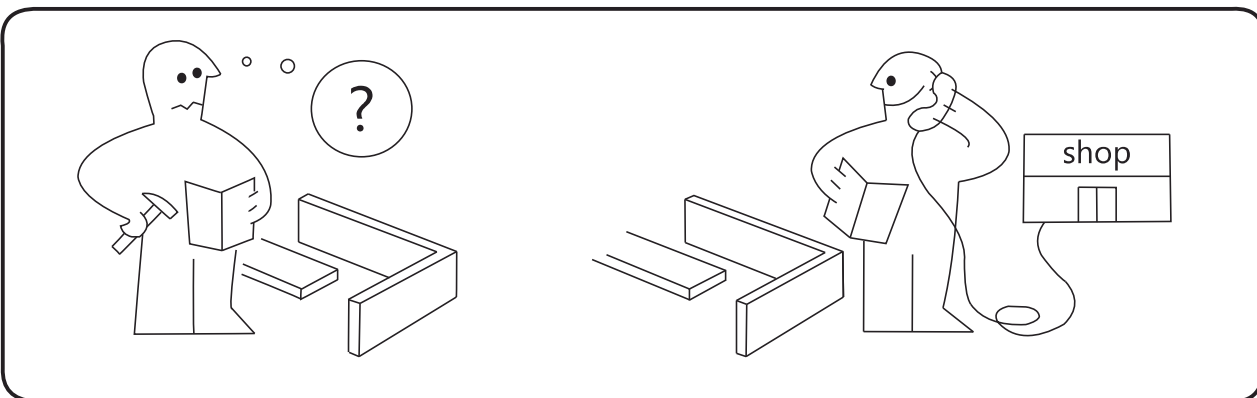
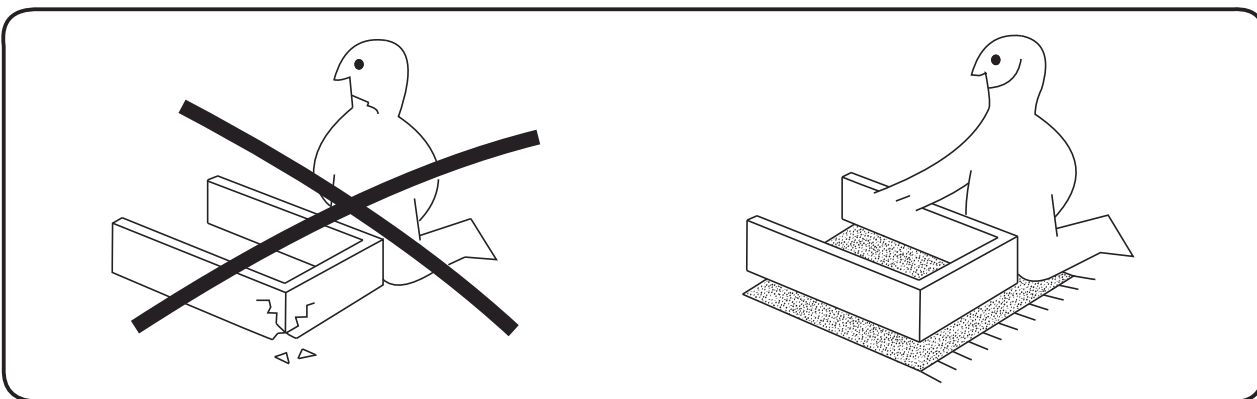



Montageanleitung

Möbel 2761 Schmalen Badschrank Bianco Grau

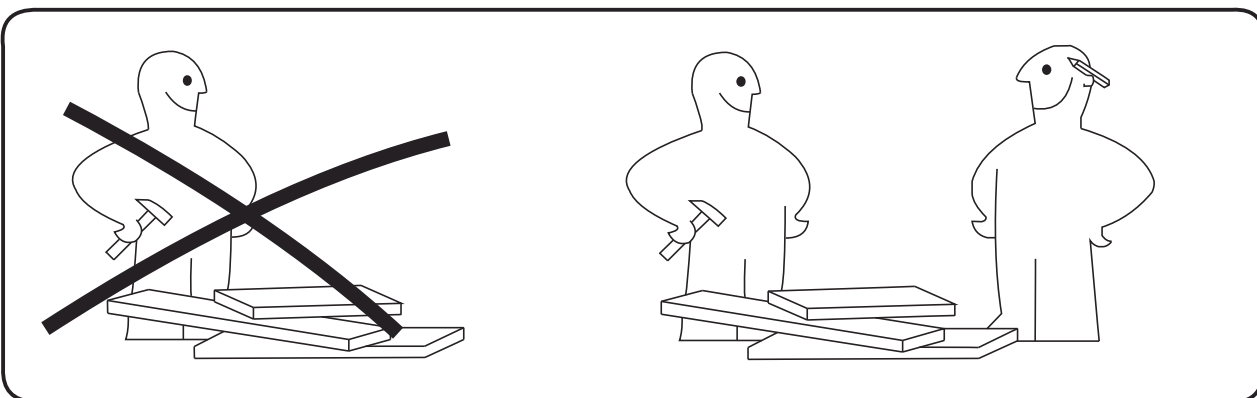

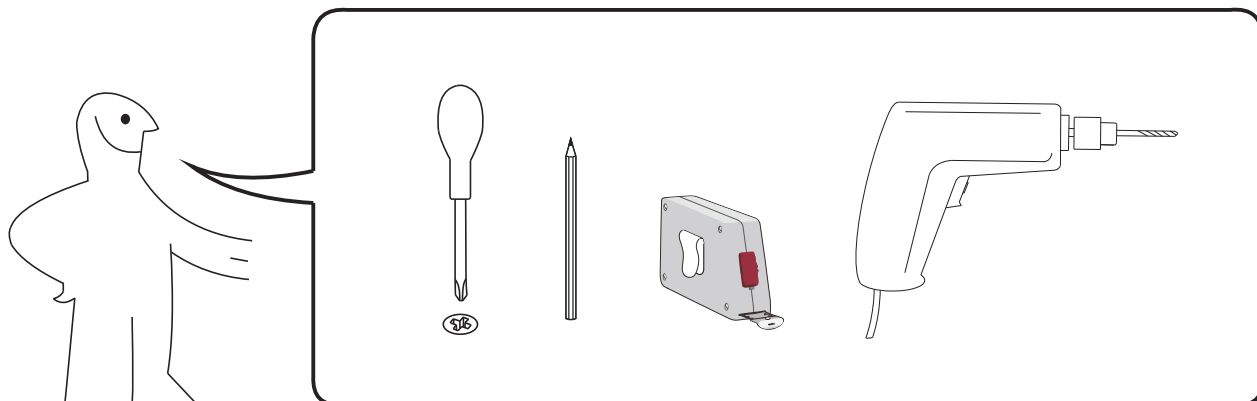

Parts List/Teile Liste

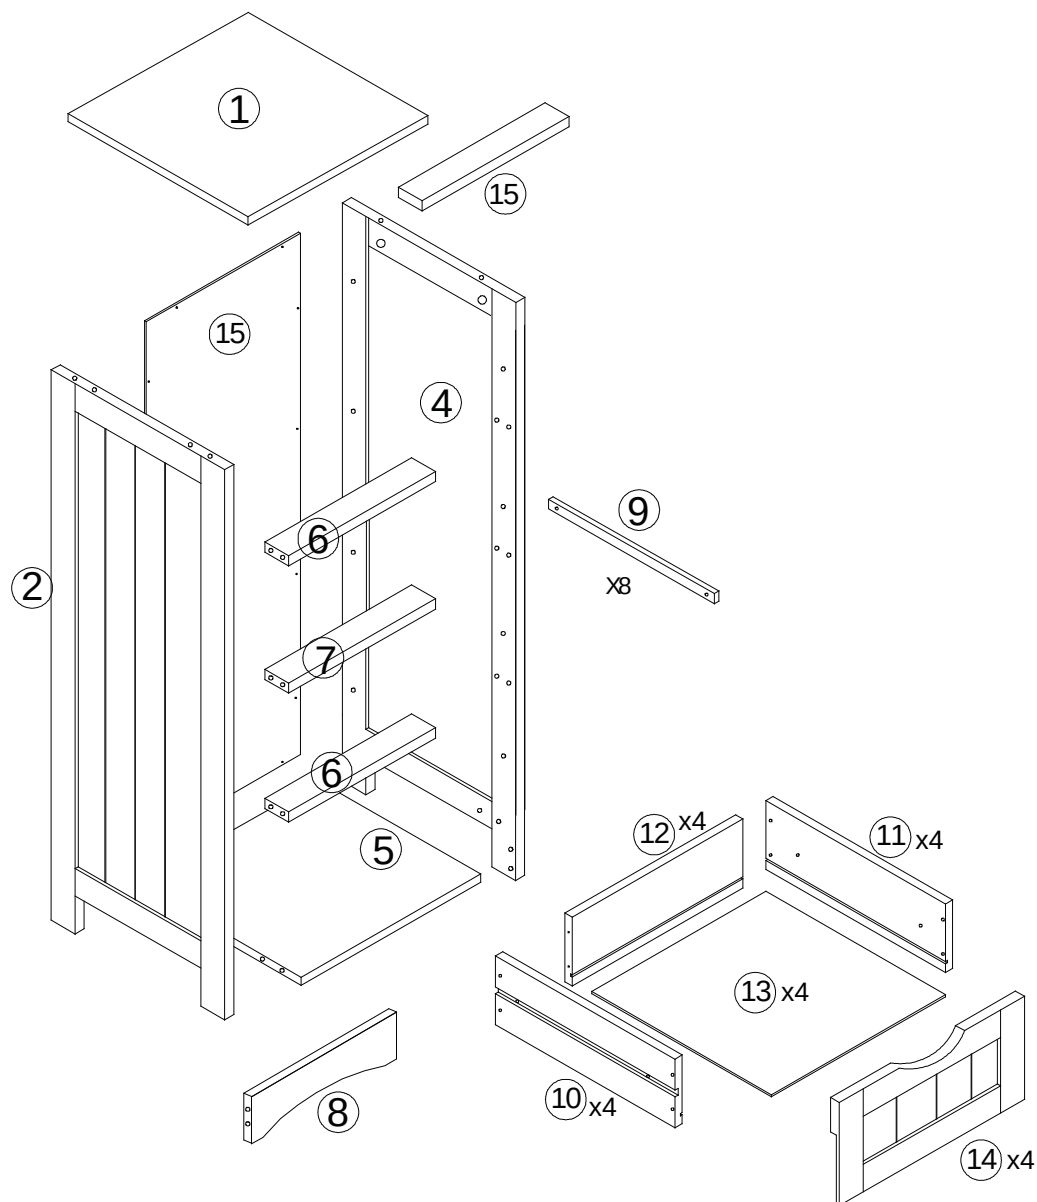

Ax14pcs



Bx14pcs



Cx14pcs



Dx2pcs



Ex16pcs




Fx12pcs




Gx32pcs


STEP 1

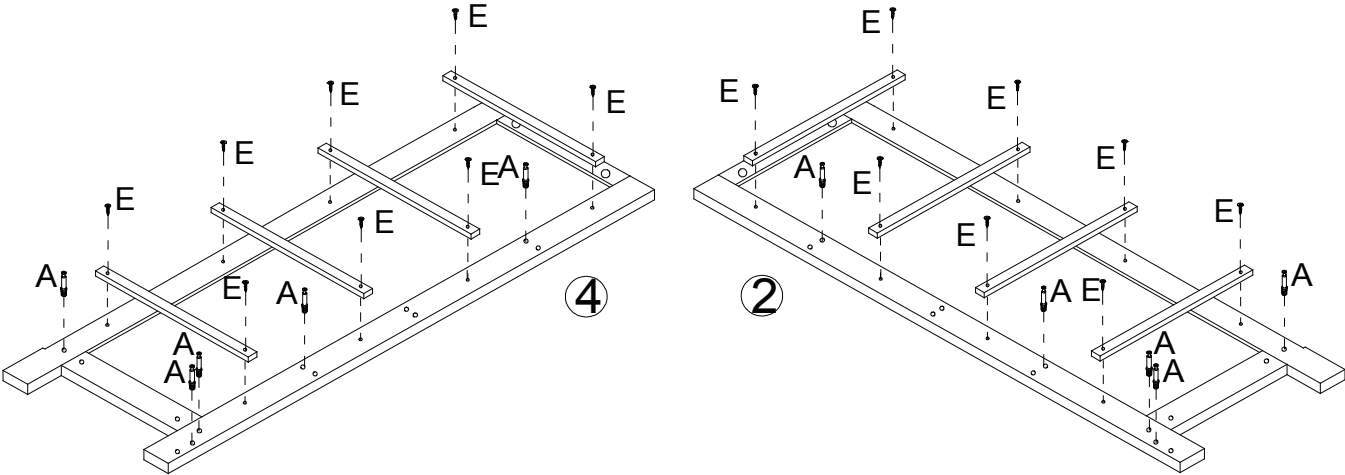


STEP 2

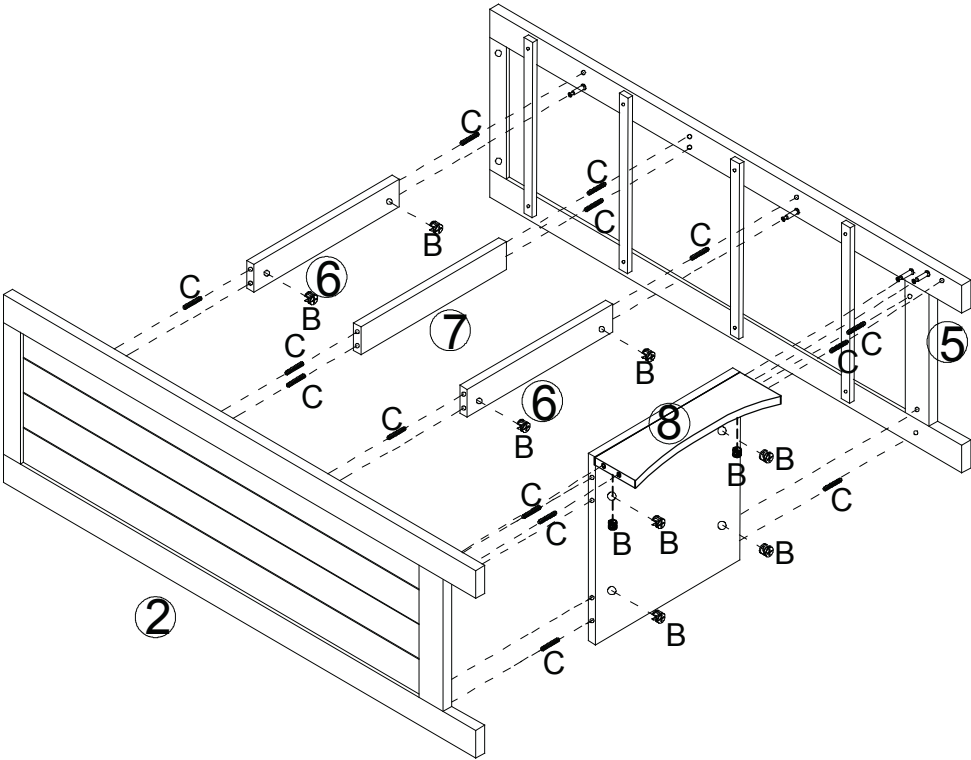


STEP 3

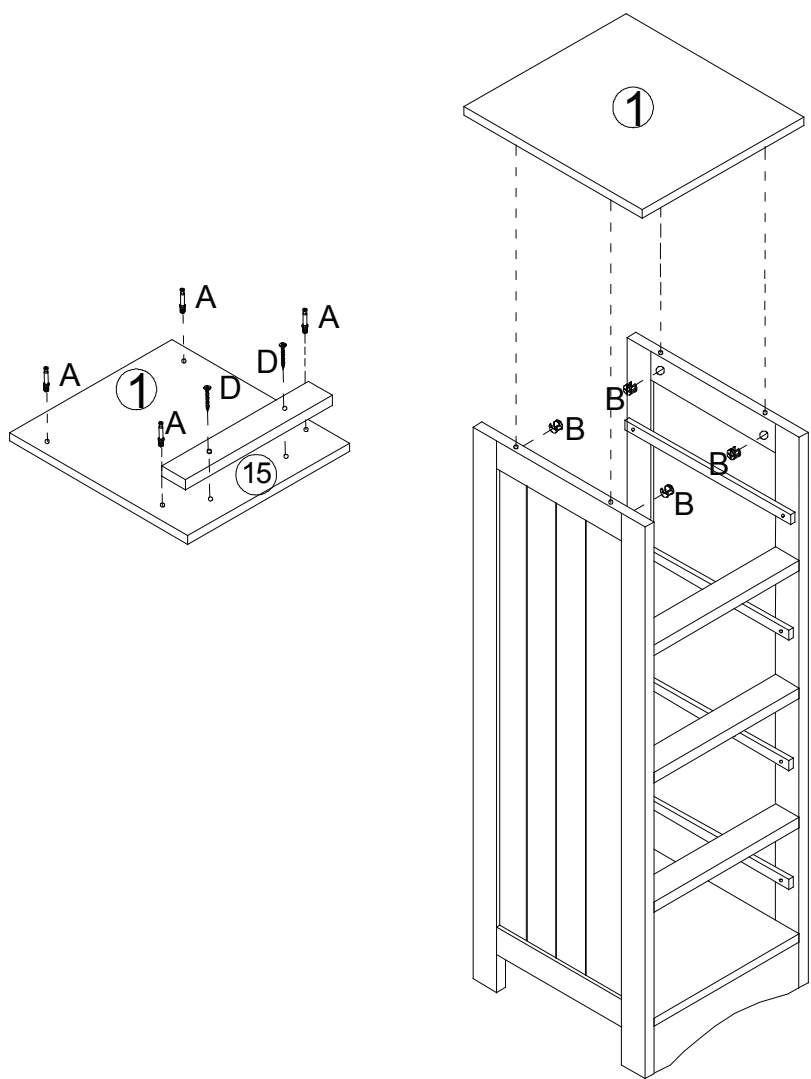

STEP 4

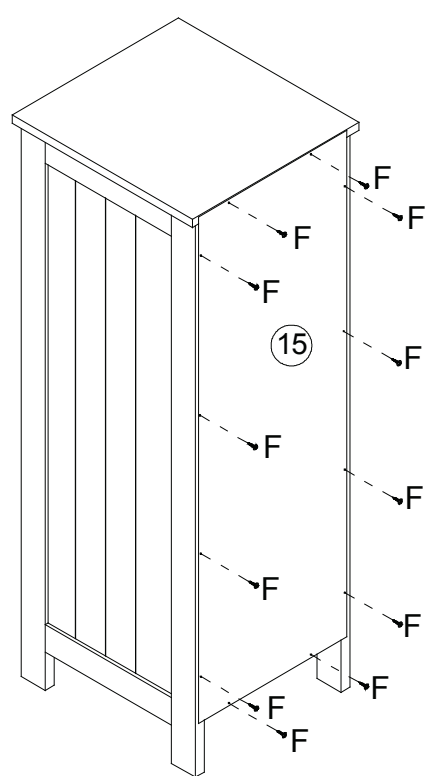

STEP 5

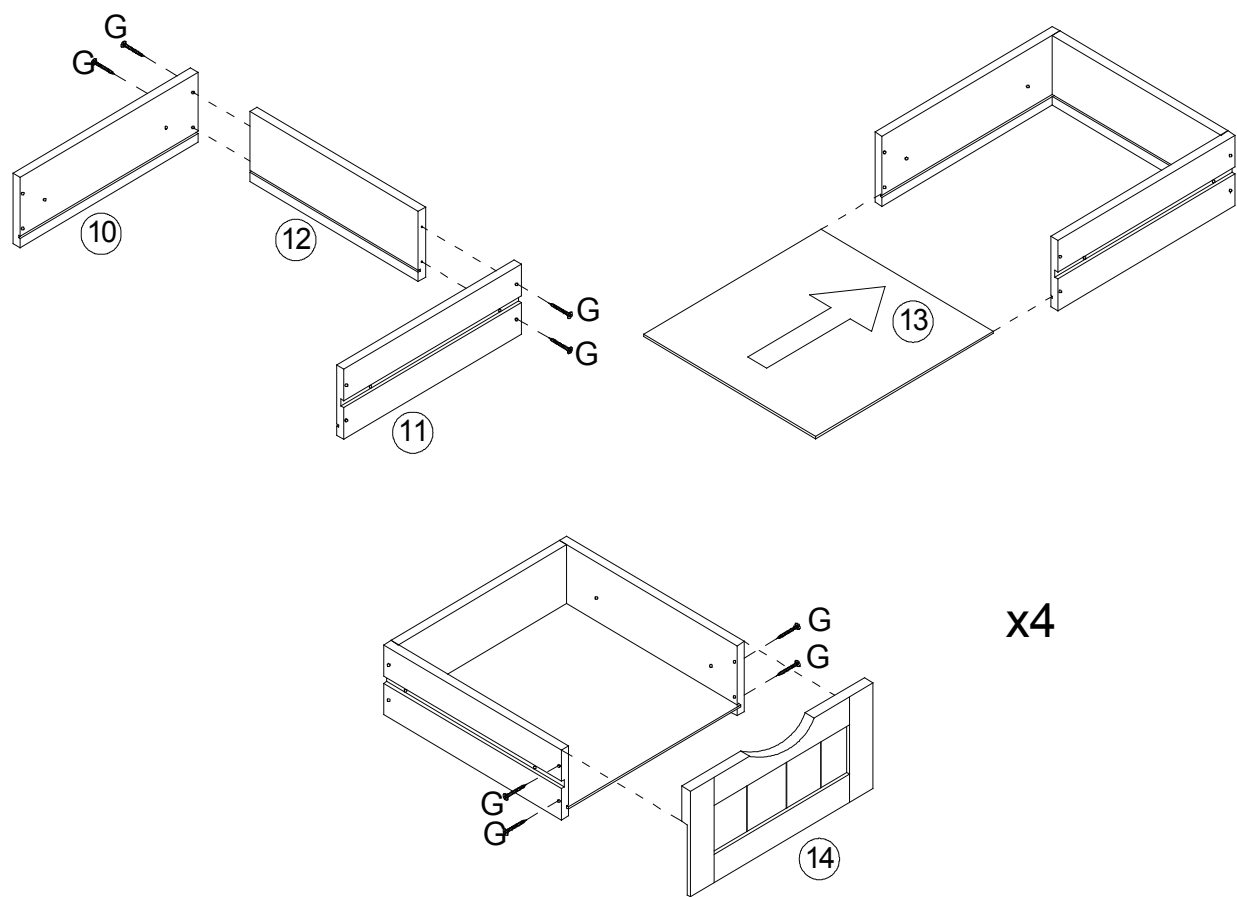

STEP 6

