




87017 Product Installation Instructions

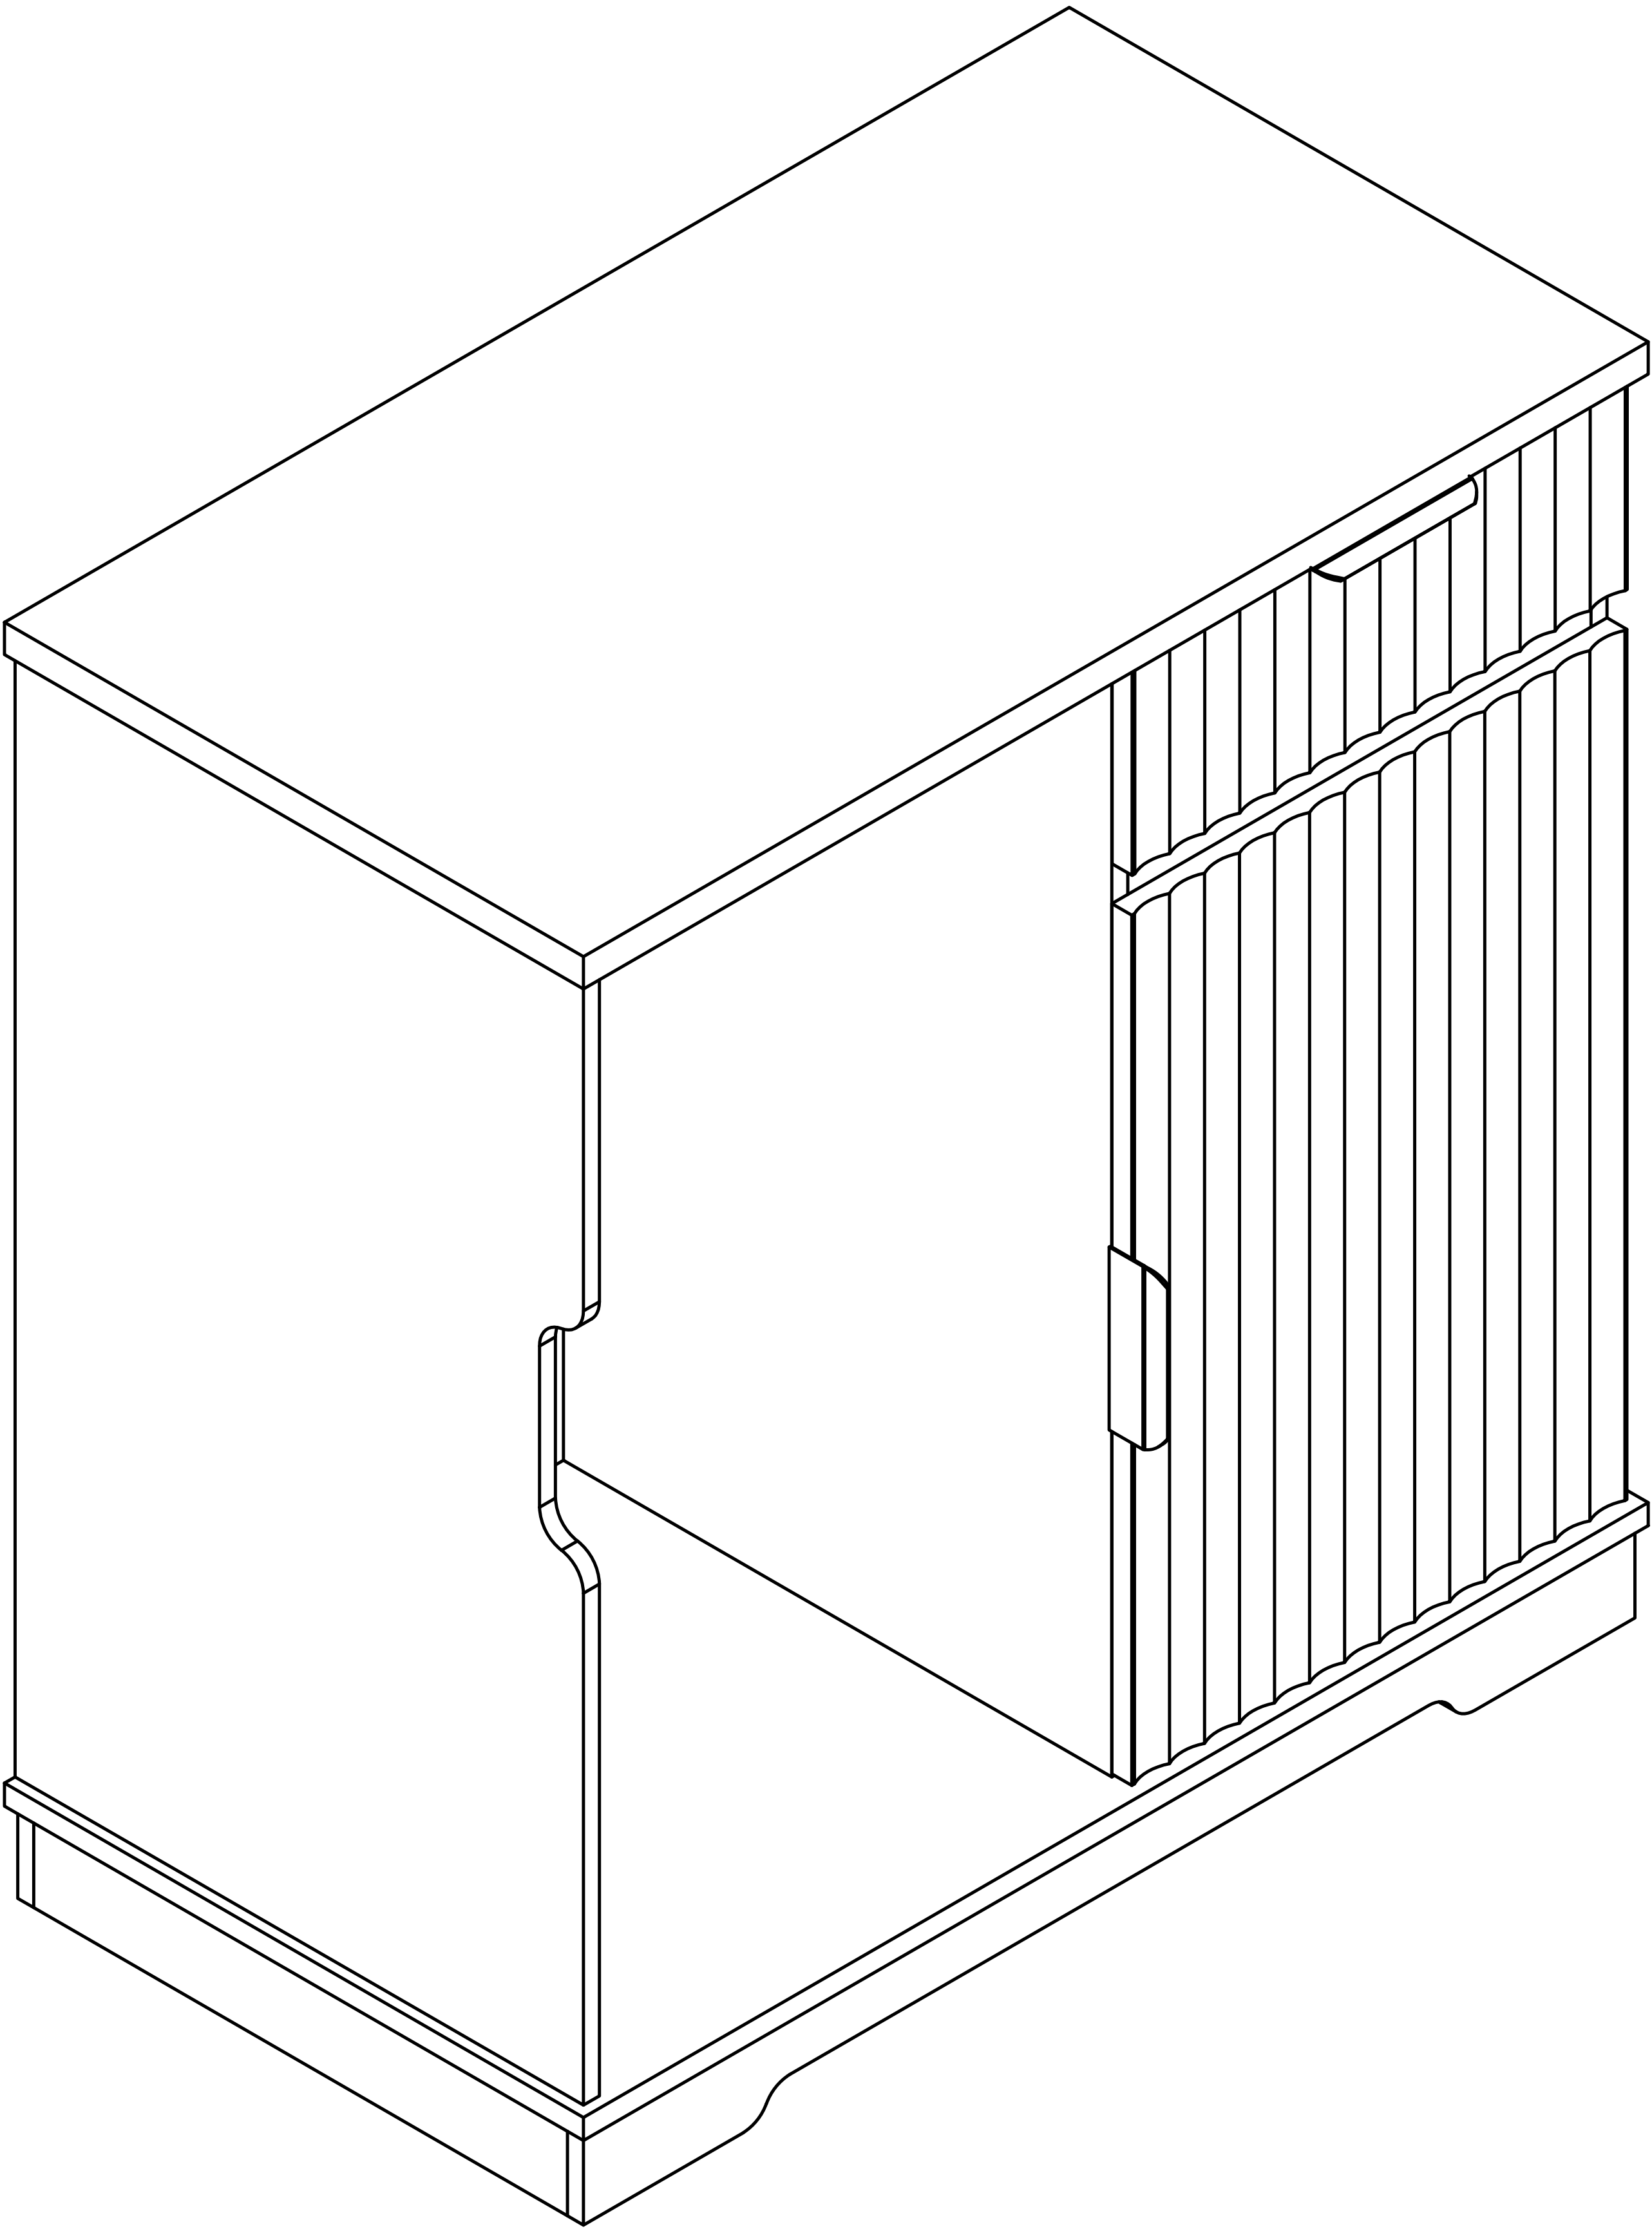


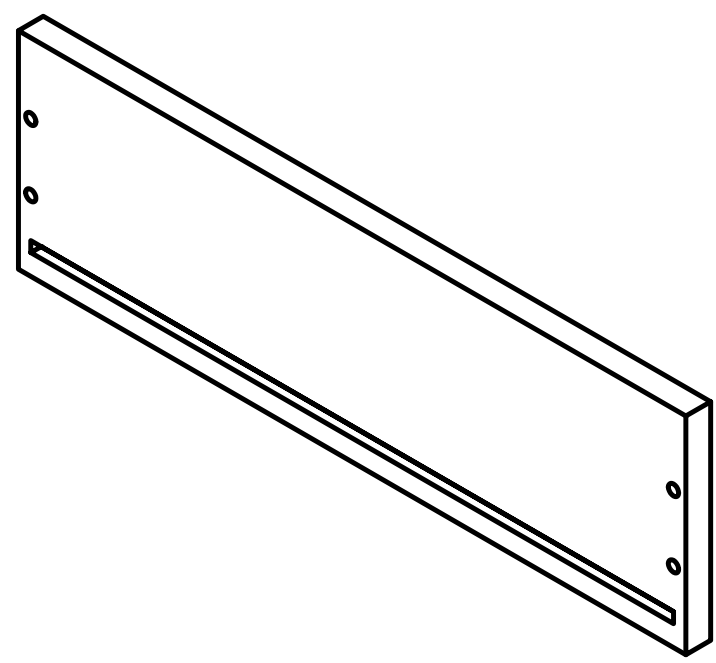


Ax1

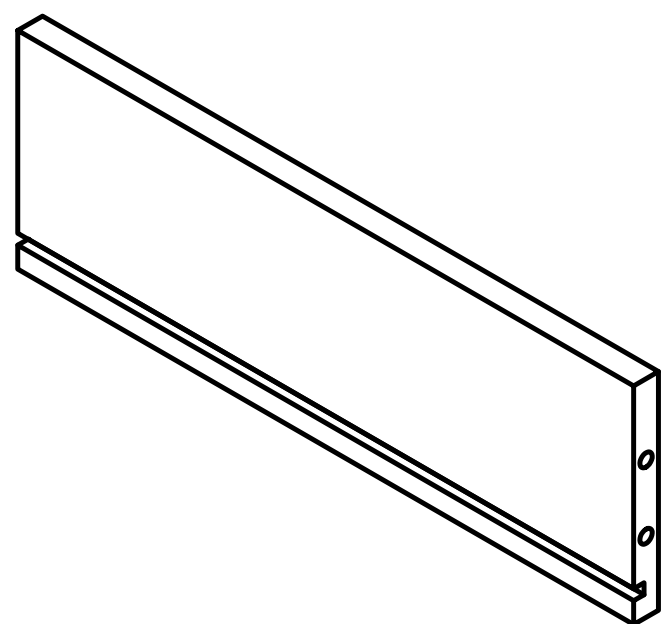


Bx2

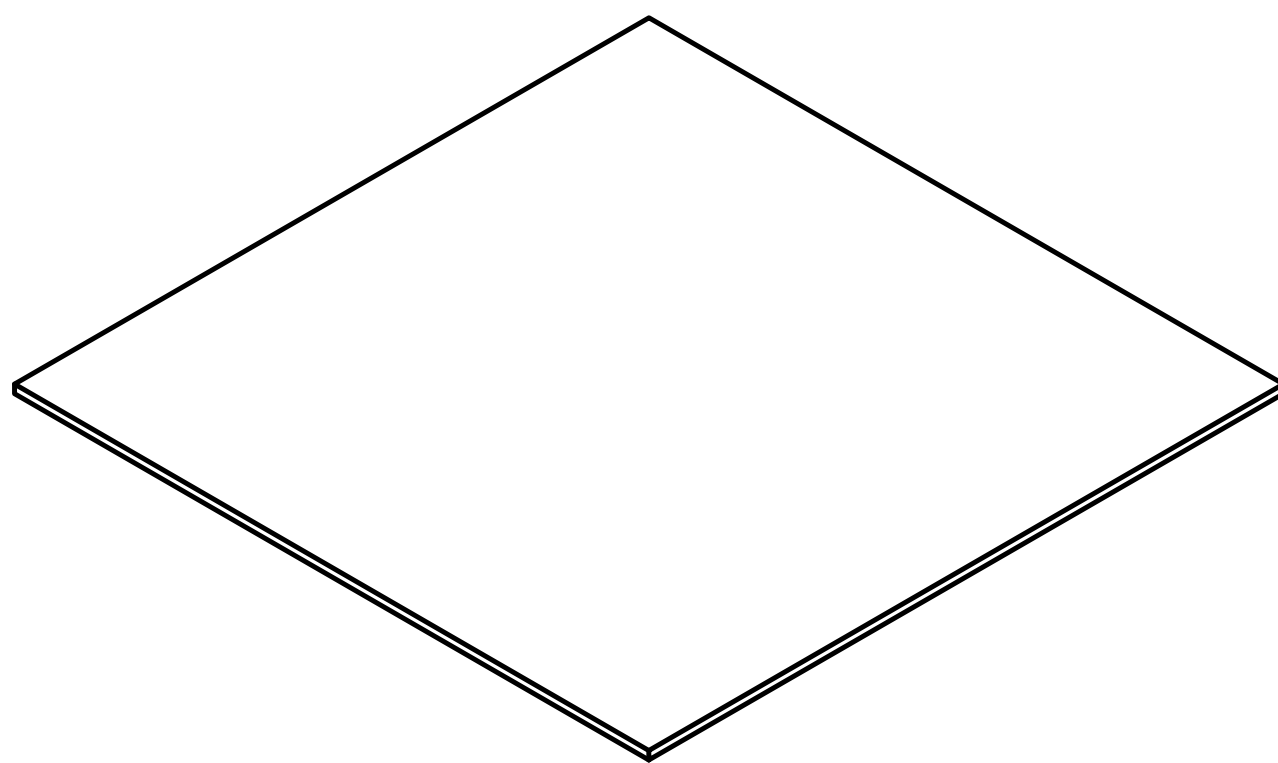


Cx1

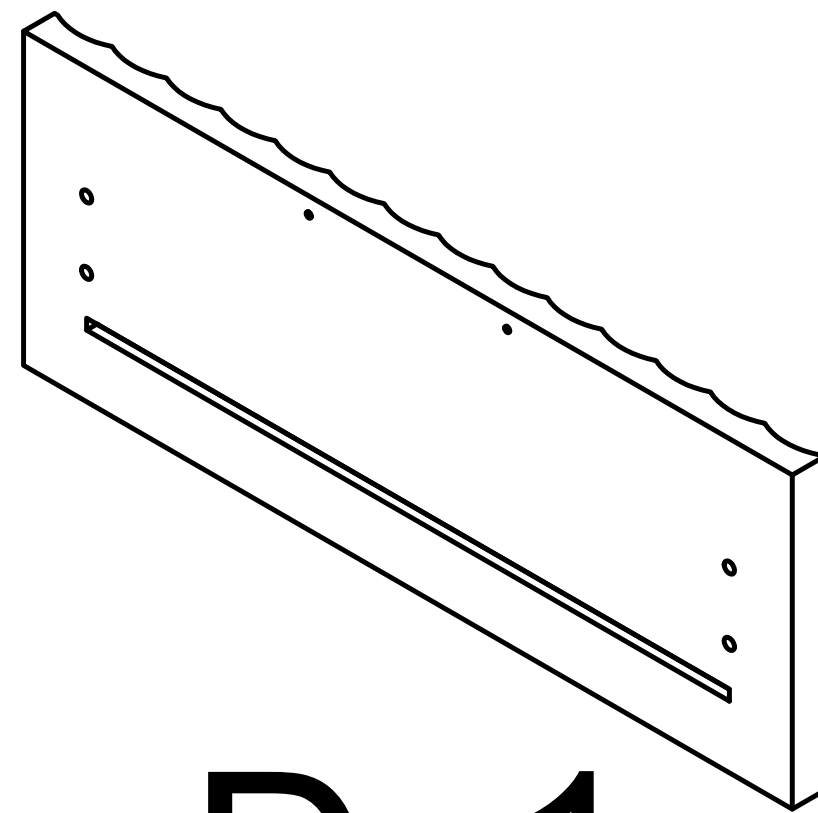


Dx1

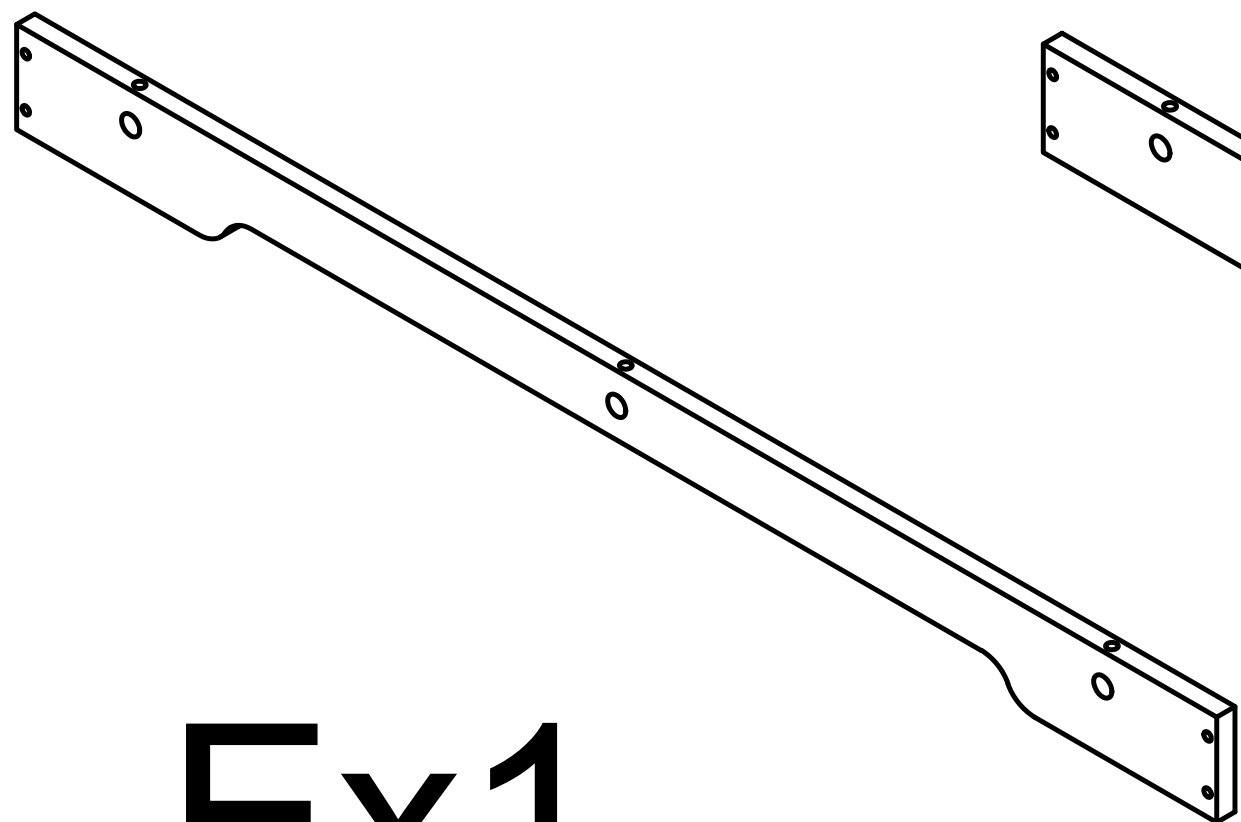


Ex1

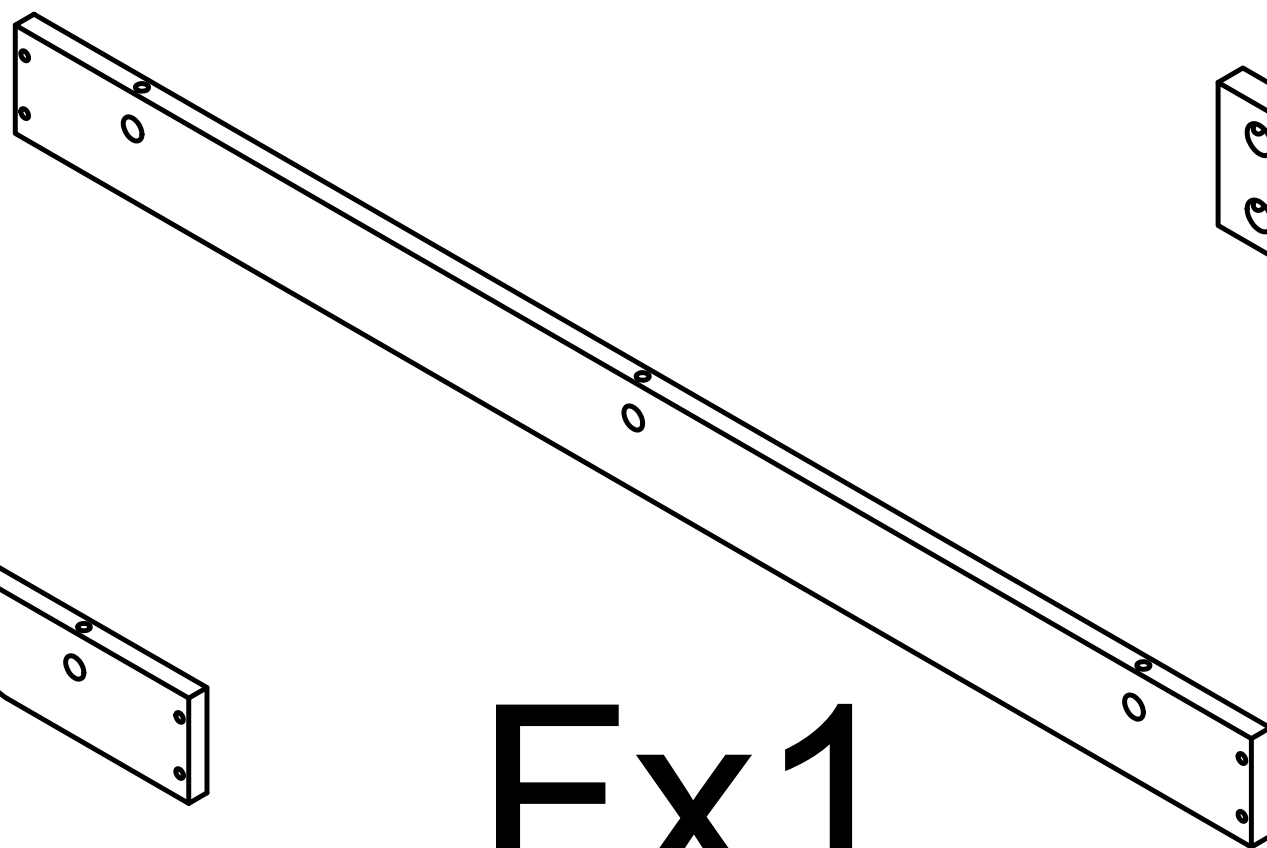


Fx1

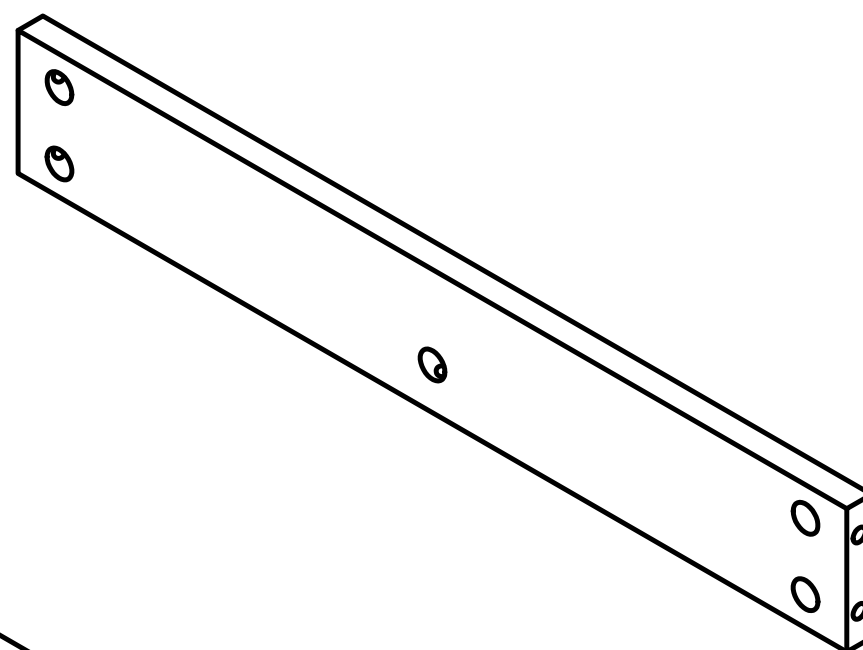


Gx2

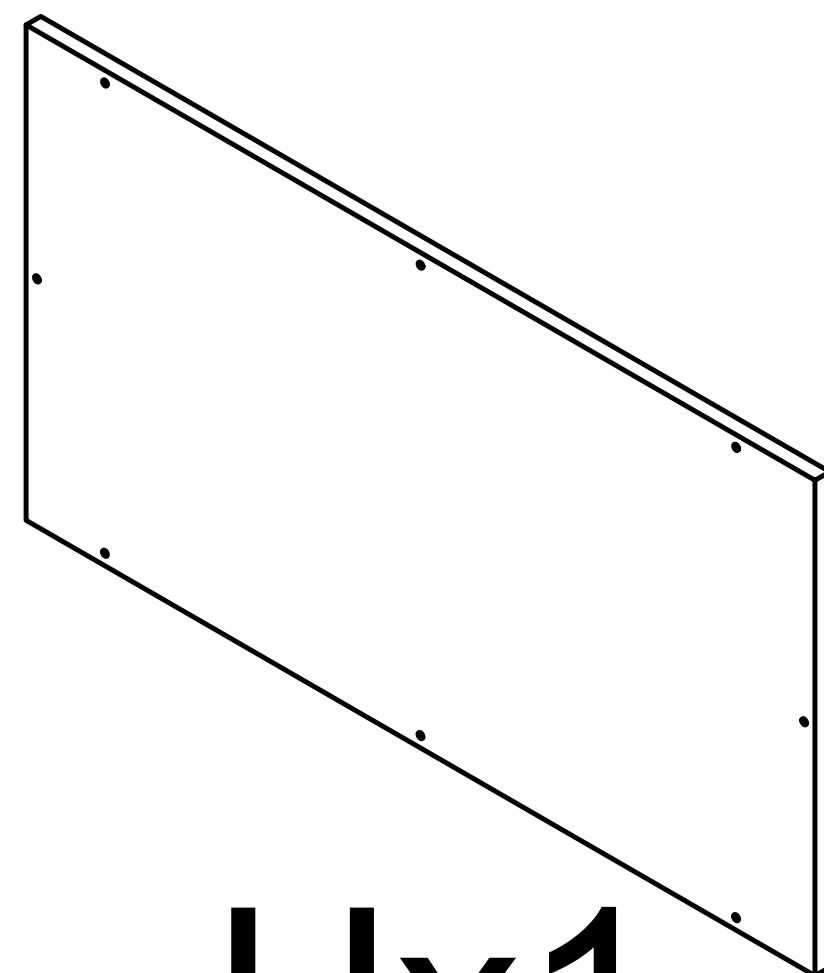


Hx1

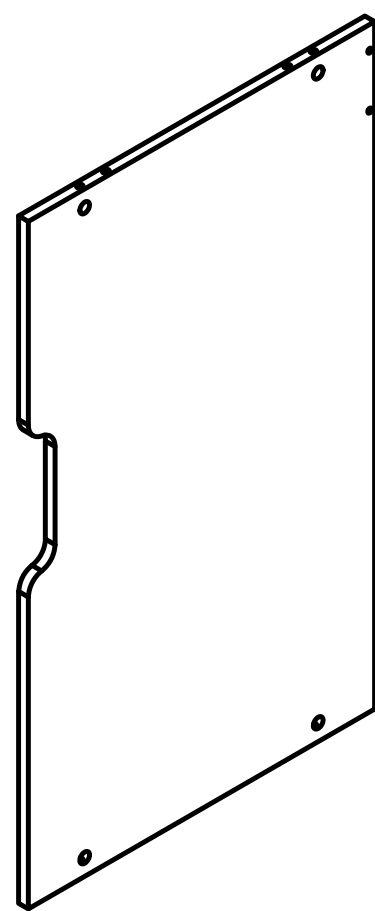


Ix1

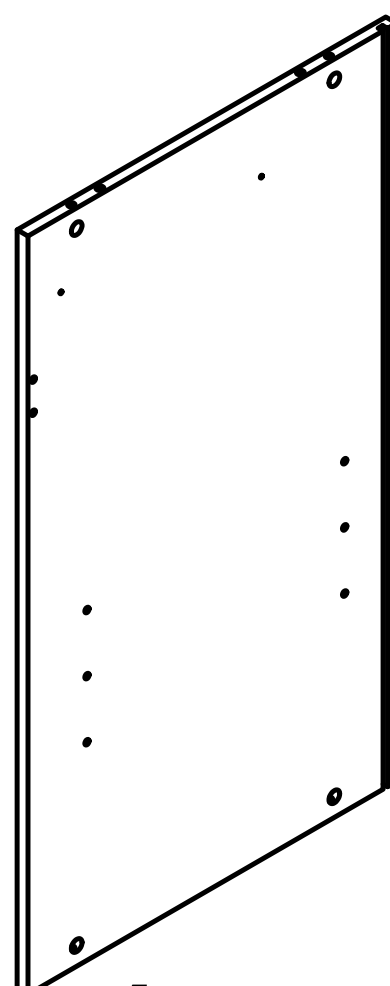


Jx1

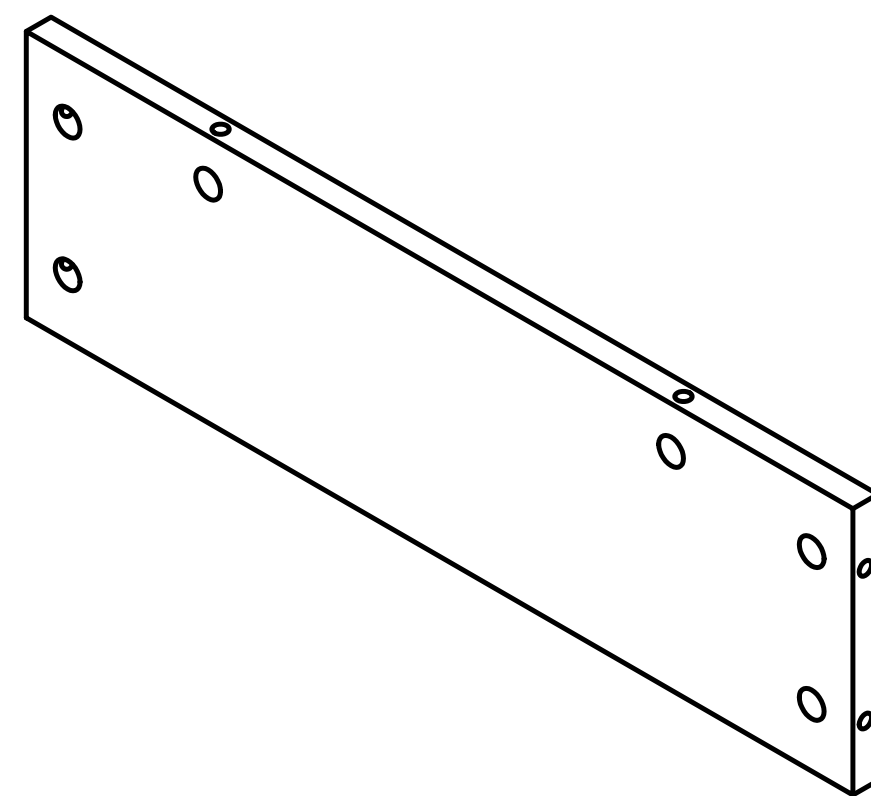


Kx1

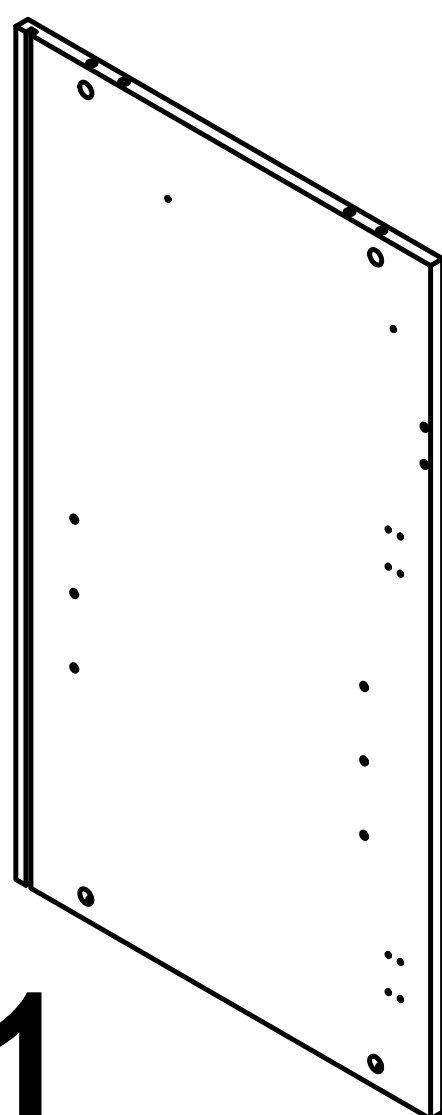


Lx1

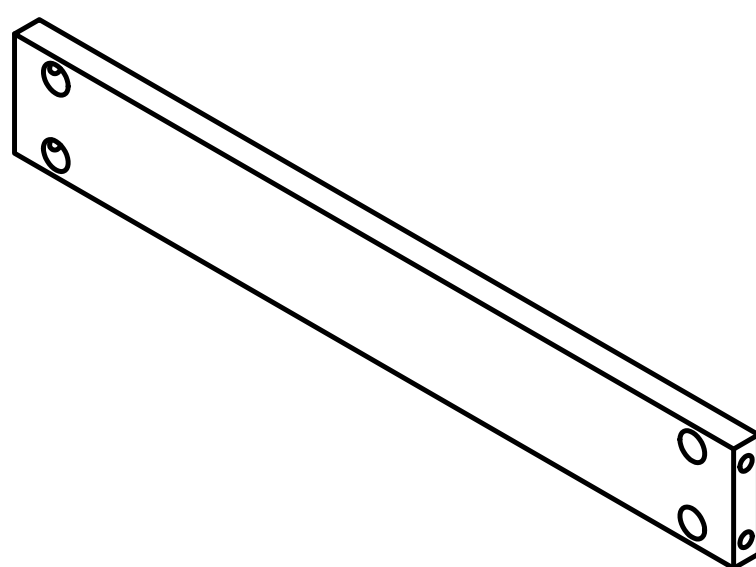


Mx1

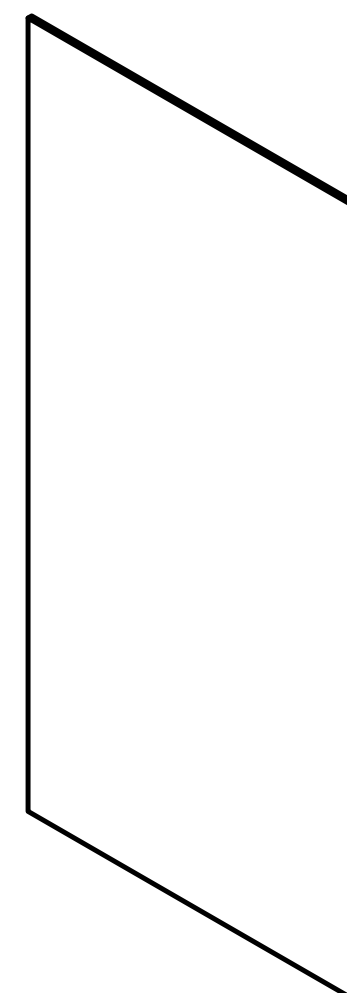


Nx1

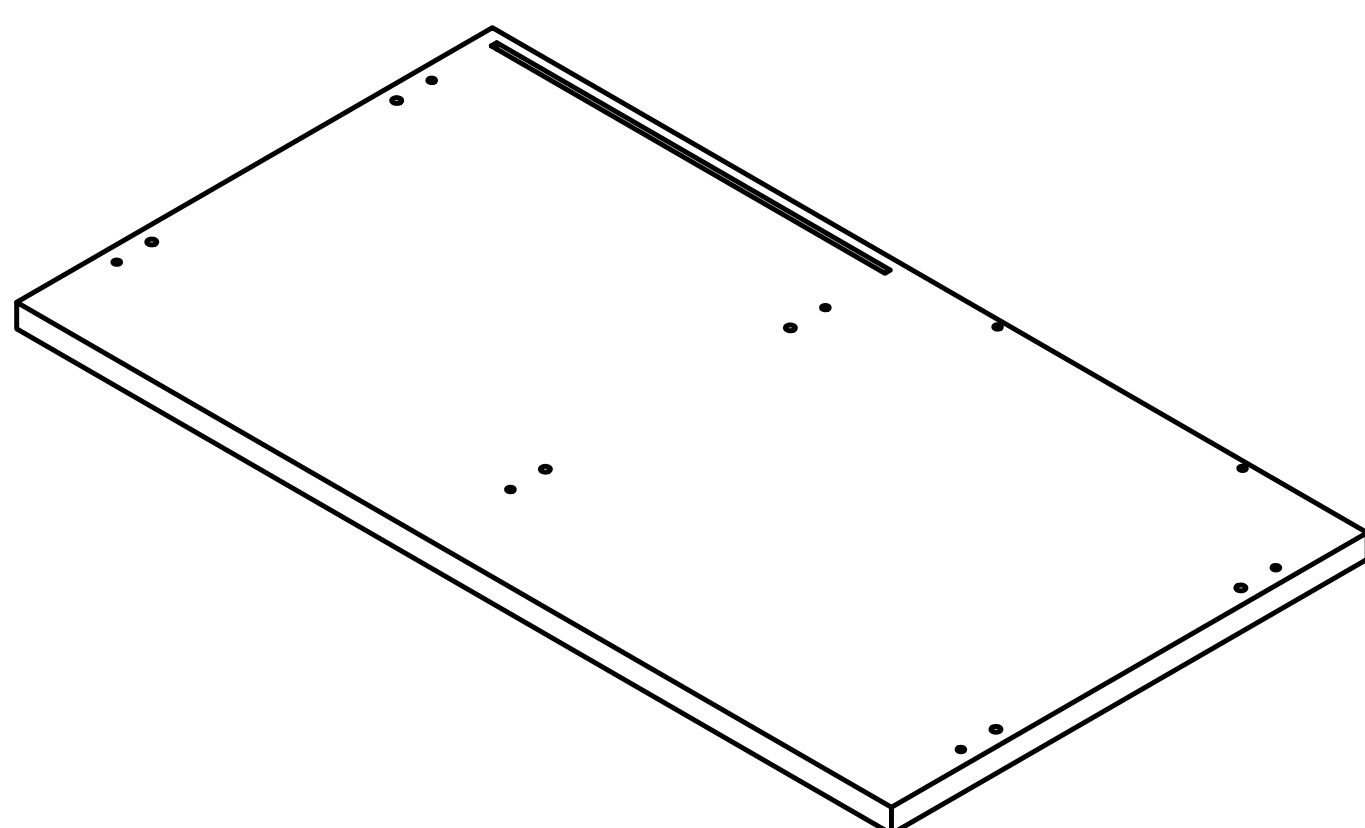


Ox1

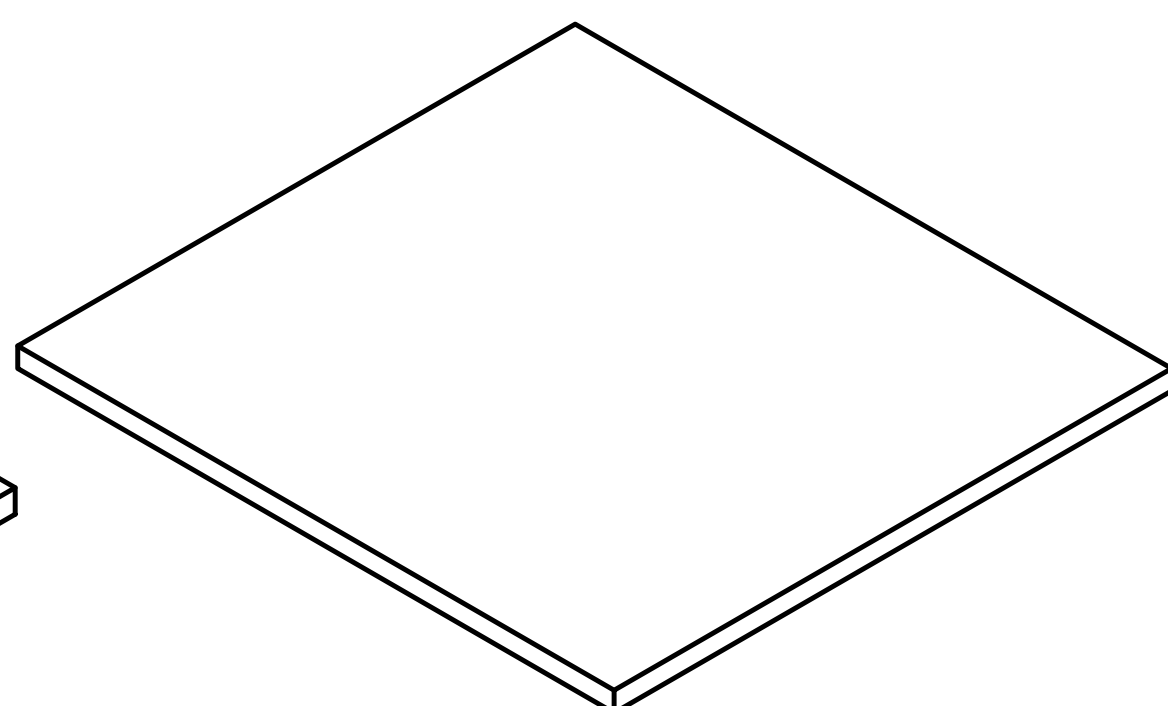









Px1

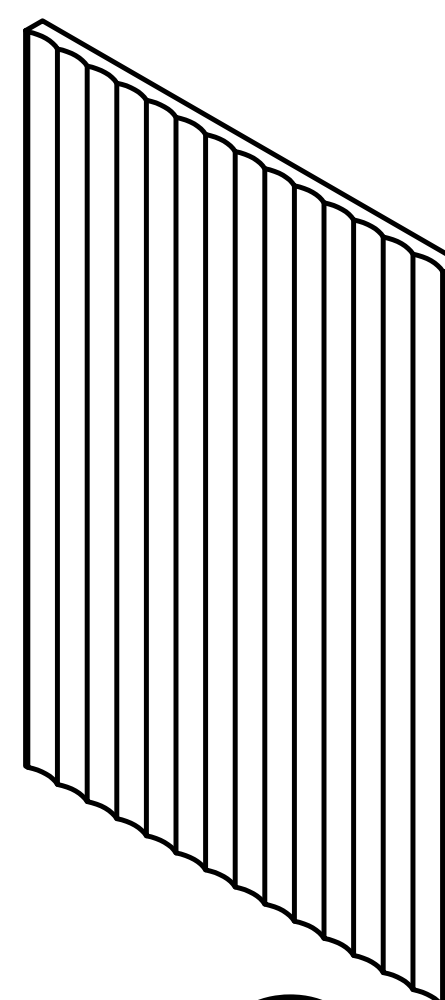


Qx1

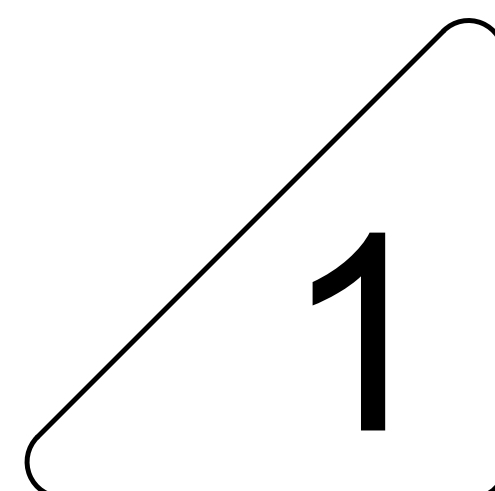


1

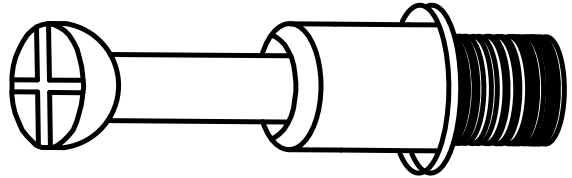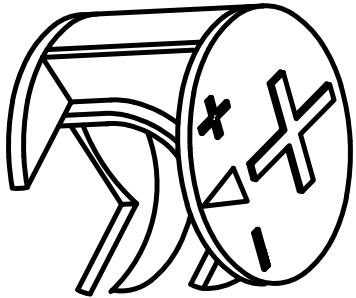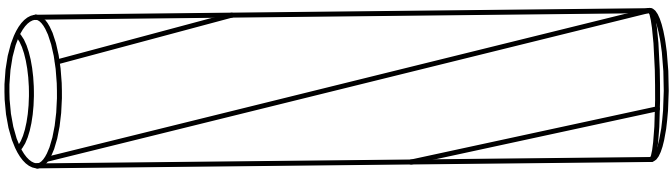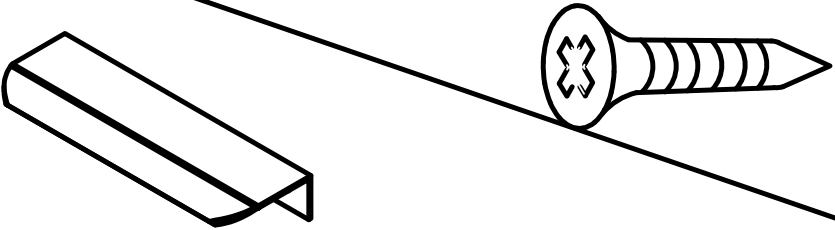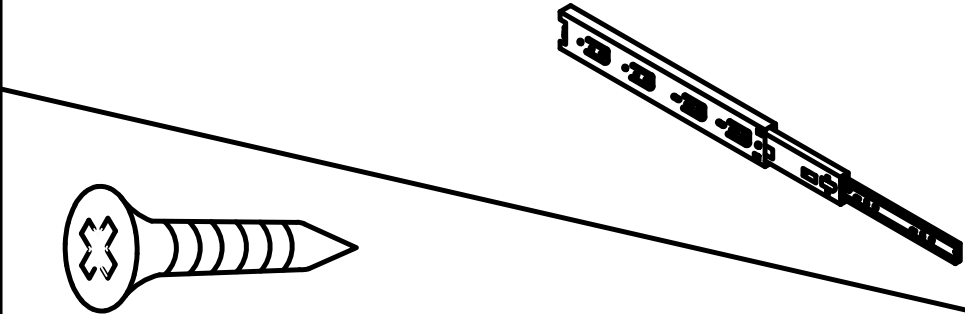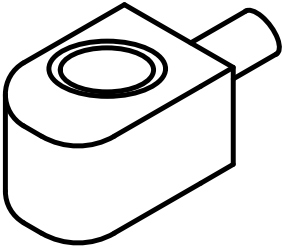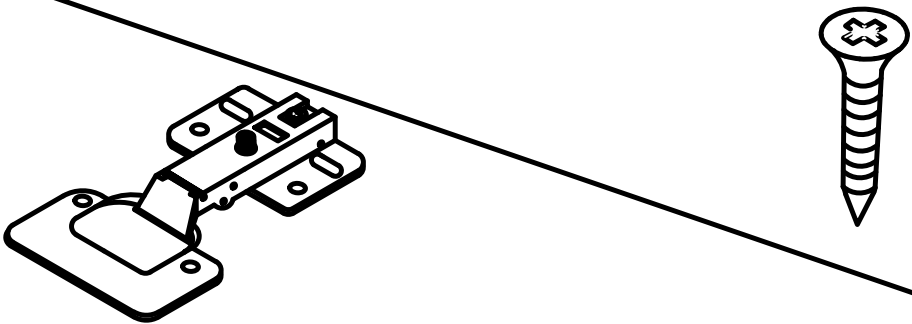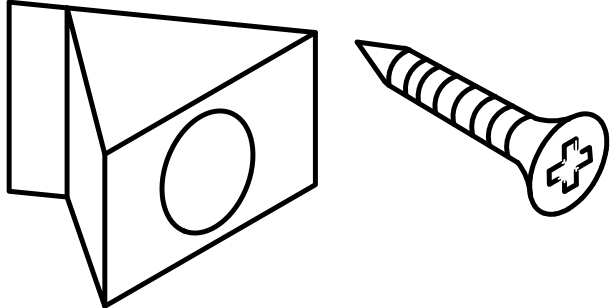①		Two In One Screw (6x28mm)	46pcs +4pcs
②		Two In One Nut (10x12mm)	46pcs +4pcs
③		Wood Chipping (6x30mm)	12pcs +2pcs
④		Handle & Screw (3. 5x10mm)	4pcs +1pcs 2pcs
⑤		Screw & Guide (29cm) (3x12mm)	2pcs 10pcs +2pcs
⑥		Non-slip pads (50x10x2mm)	5pcs +1pcs
⑦		Laminate support nail	4pcs +1pcs
⑧		Hinge & Screw (3. 5x12mm)	12pcs +2pcs 2pcs
⑨		Fixing Clip & Screw (3x16mm)	6pcs +2pcs

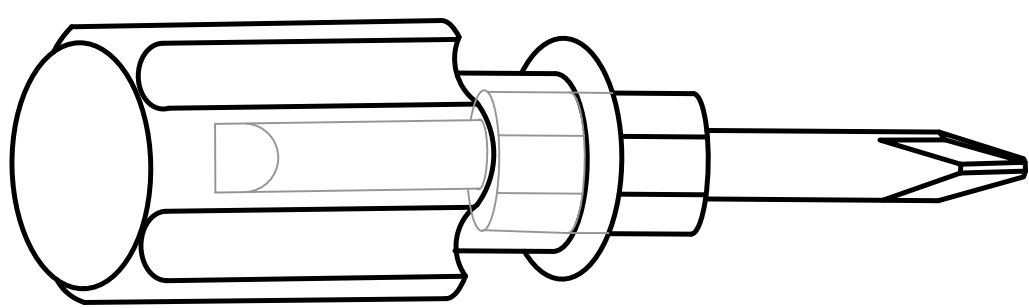


1pcs

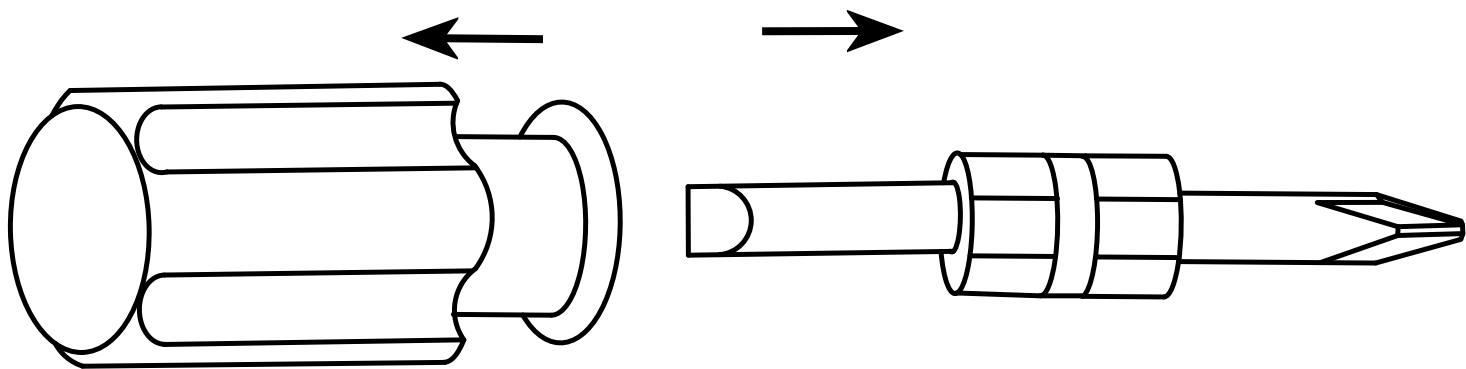


Double-head screwdriver, use as required

Product structure decomposition

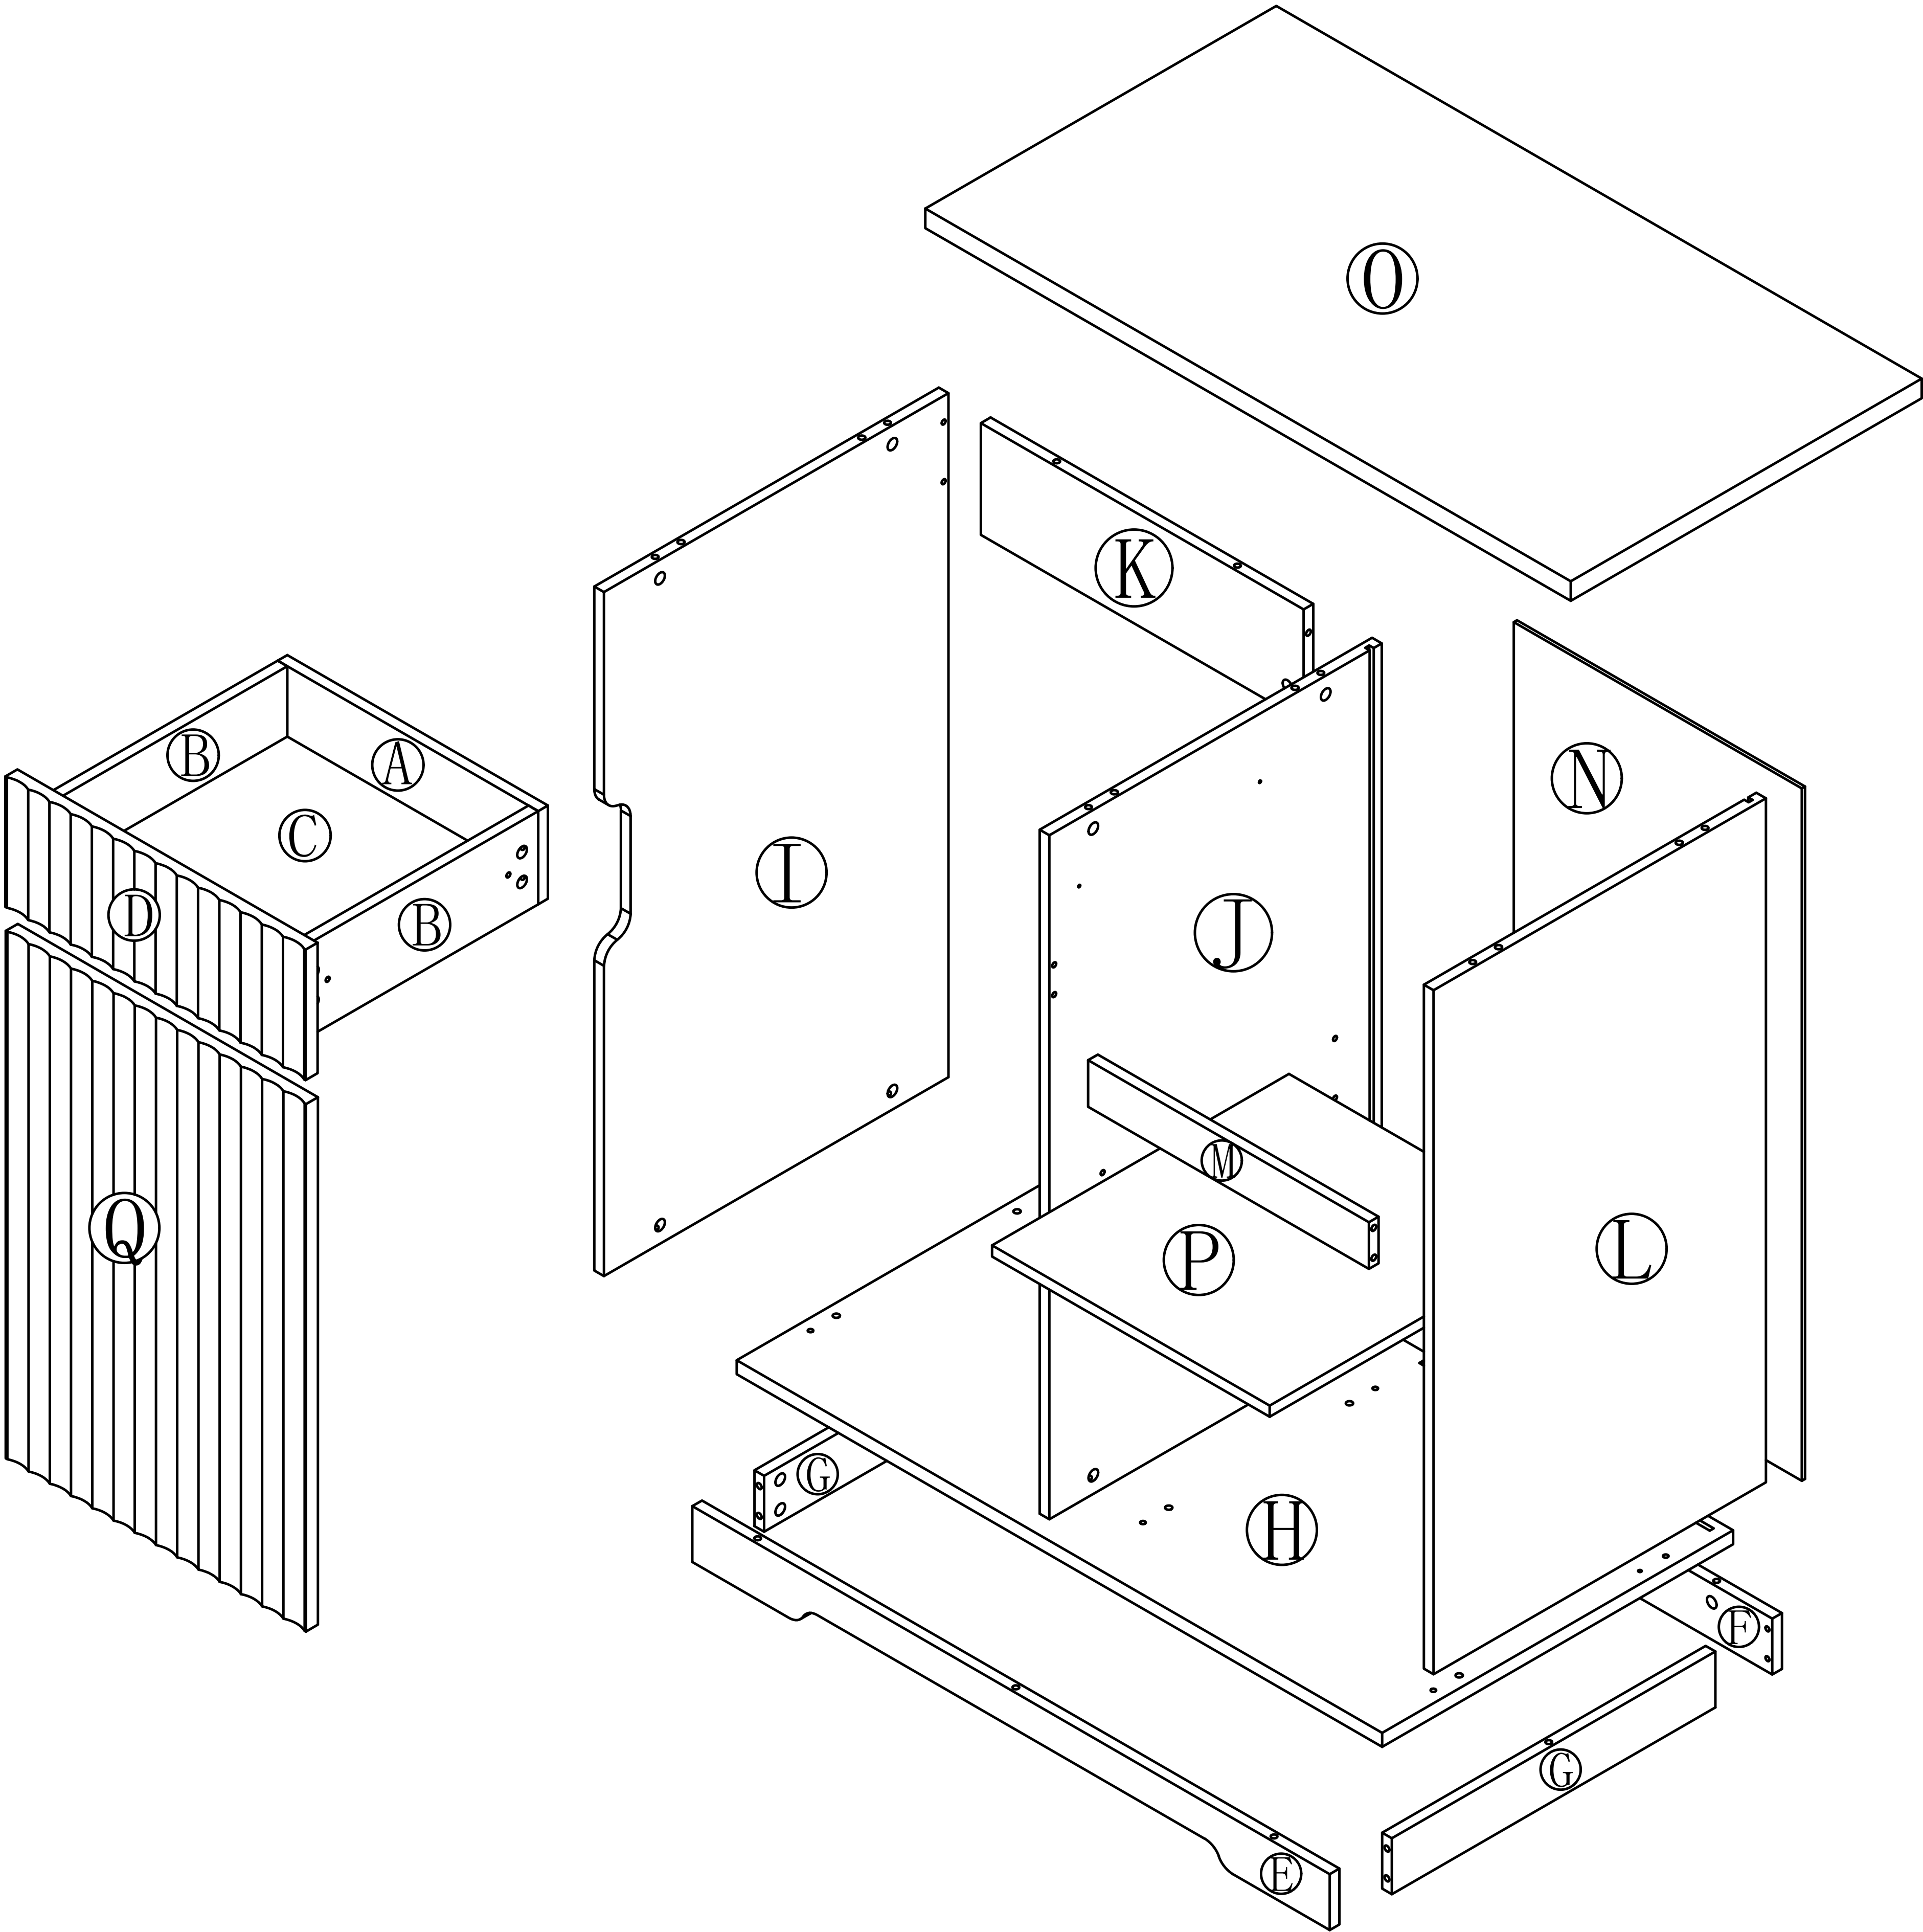


Use parts ① and ②




Step1

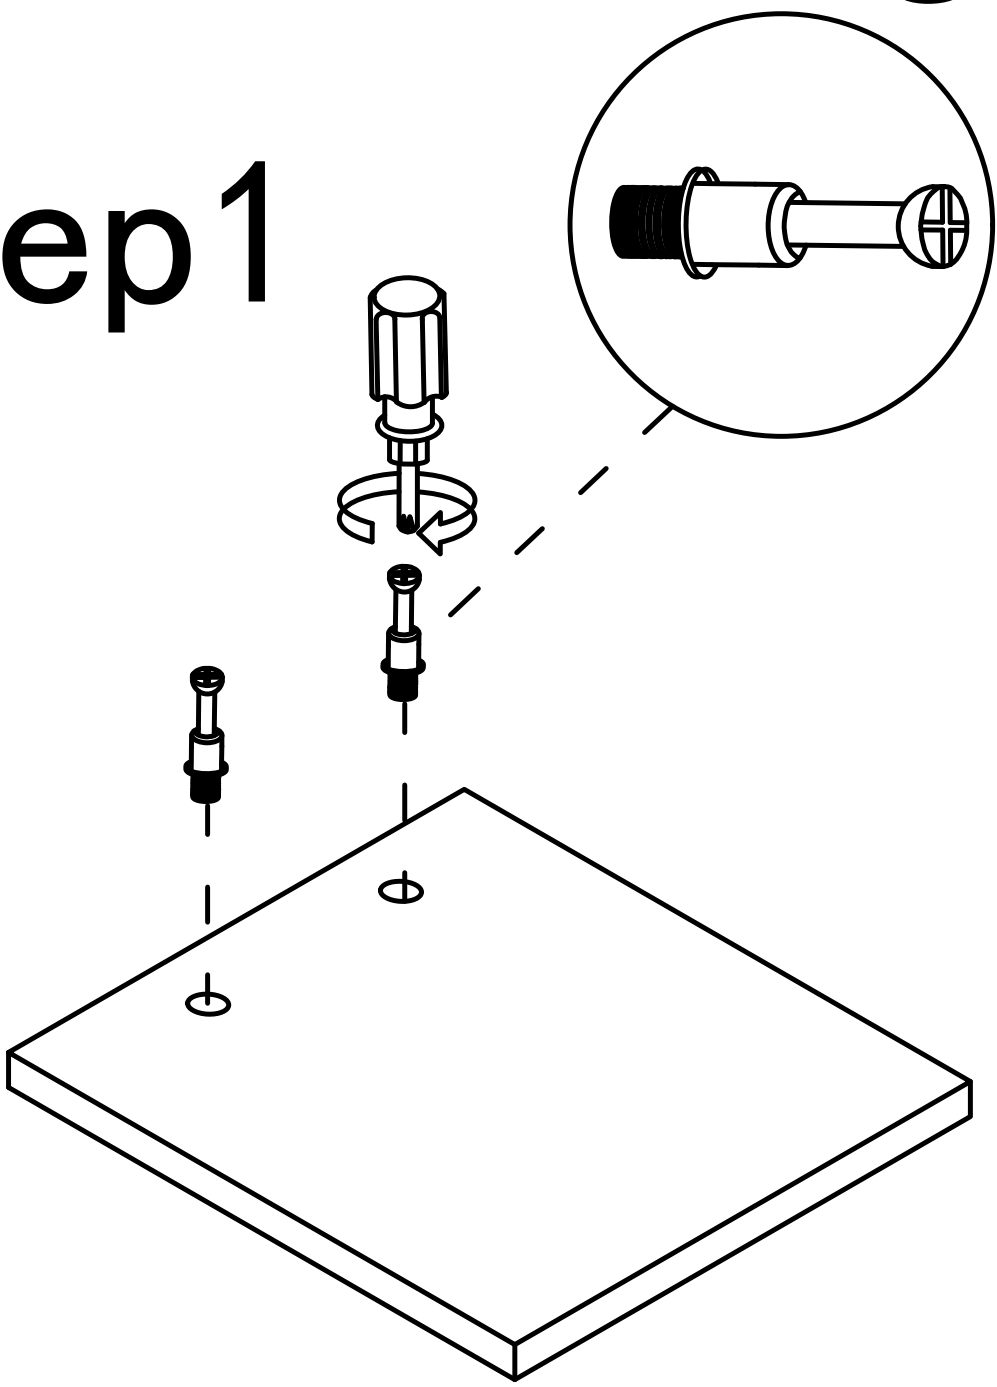

Step2

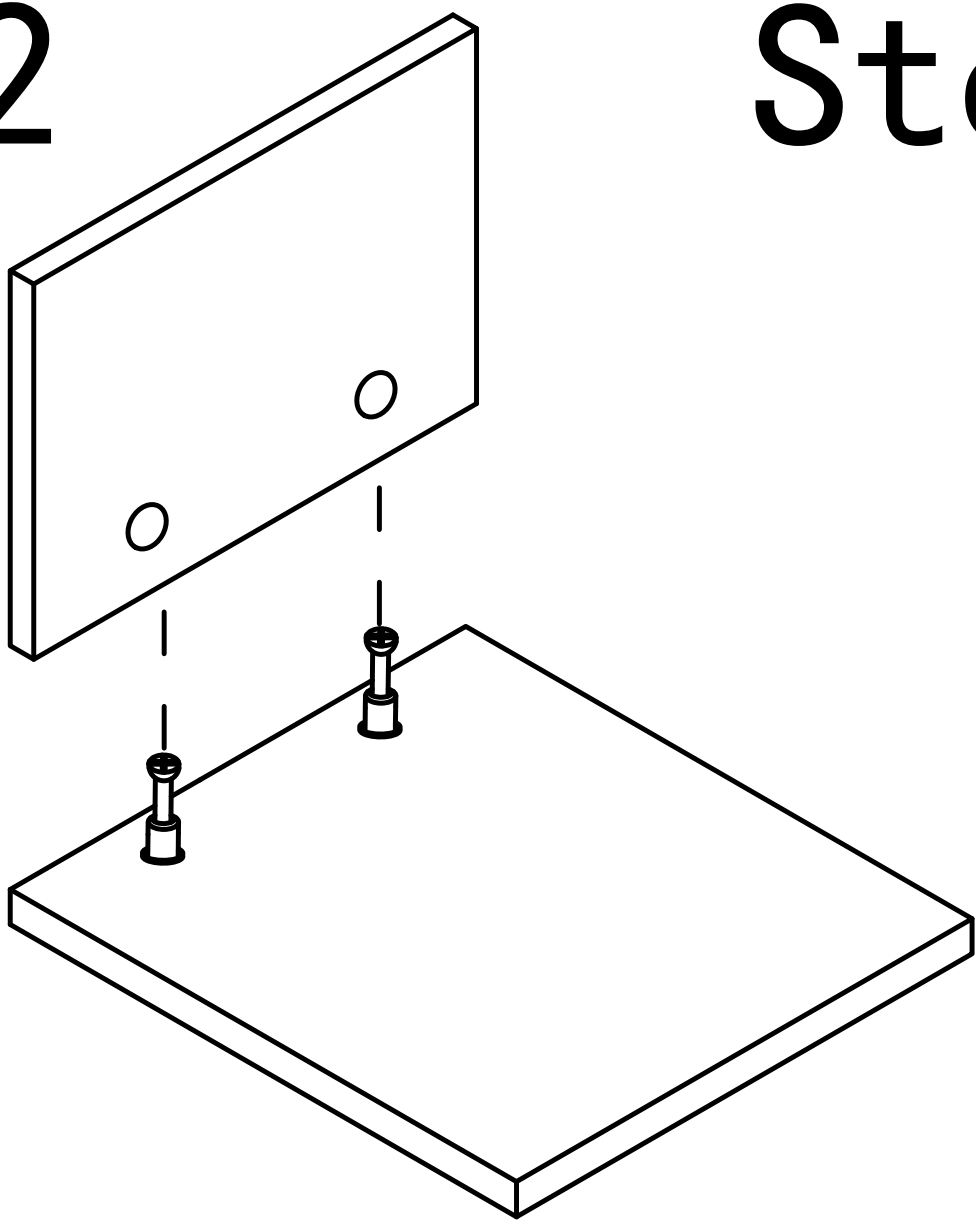



Step3

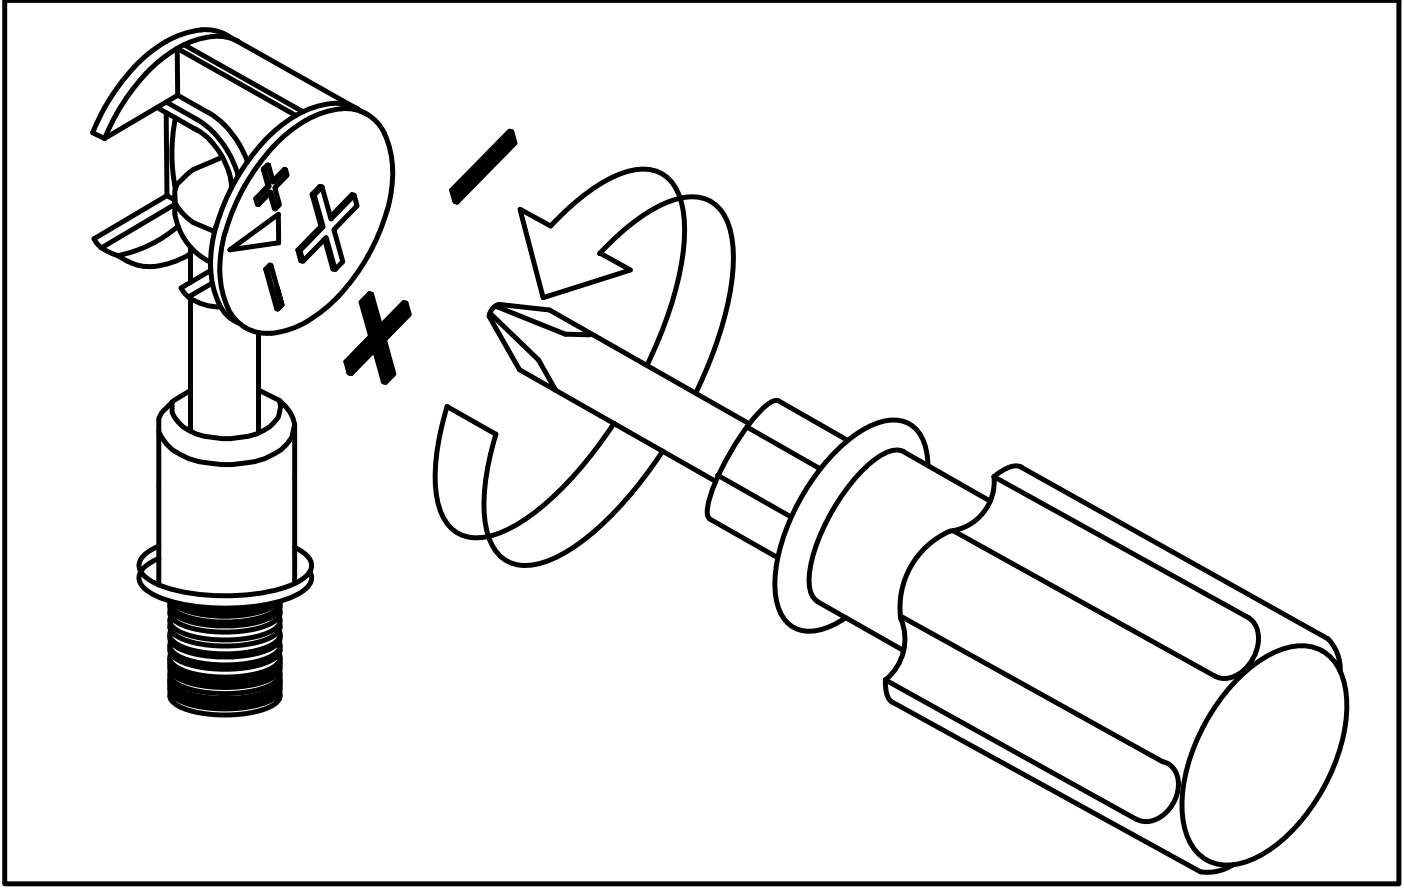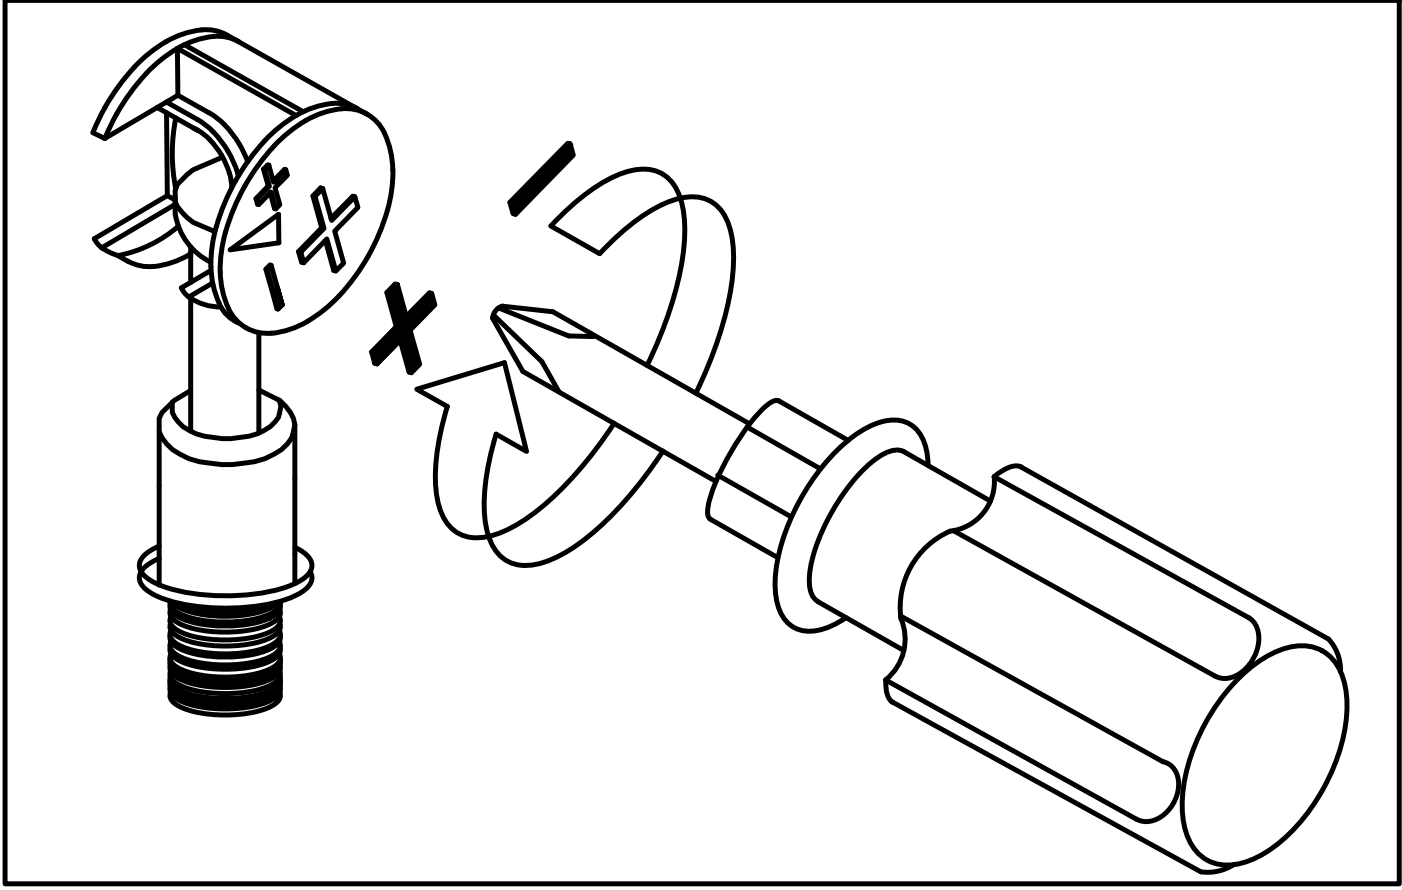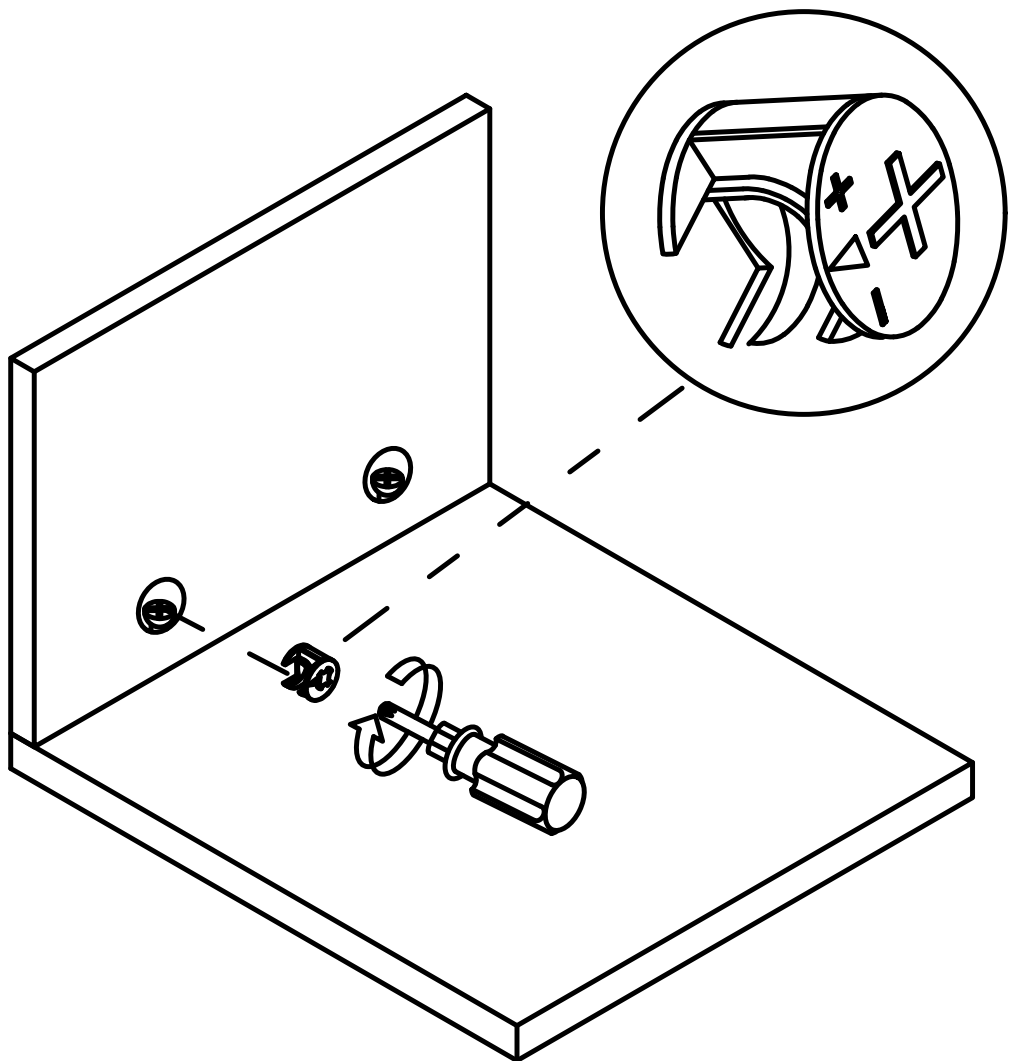


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign


Step 1

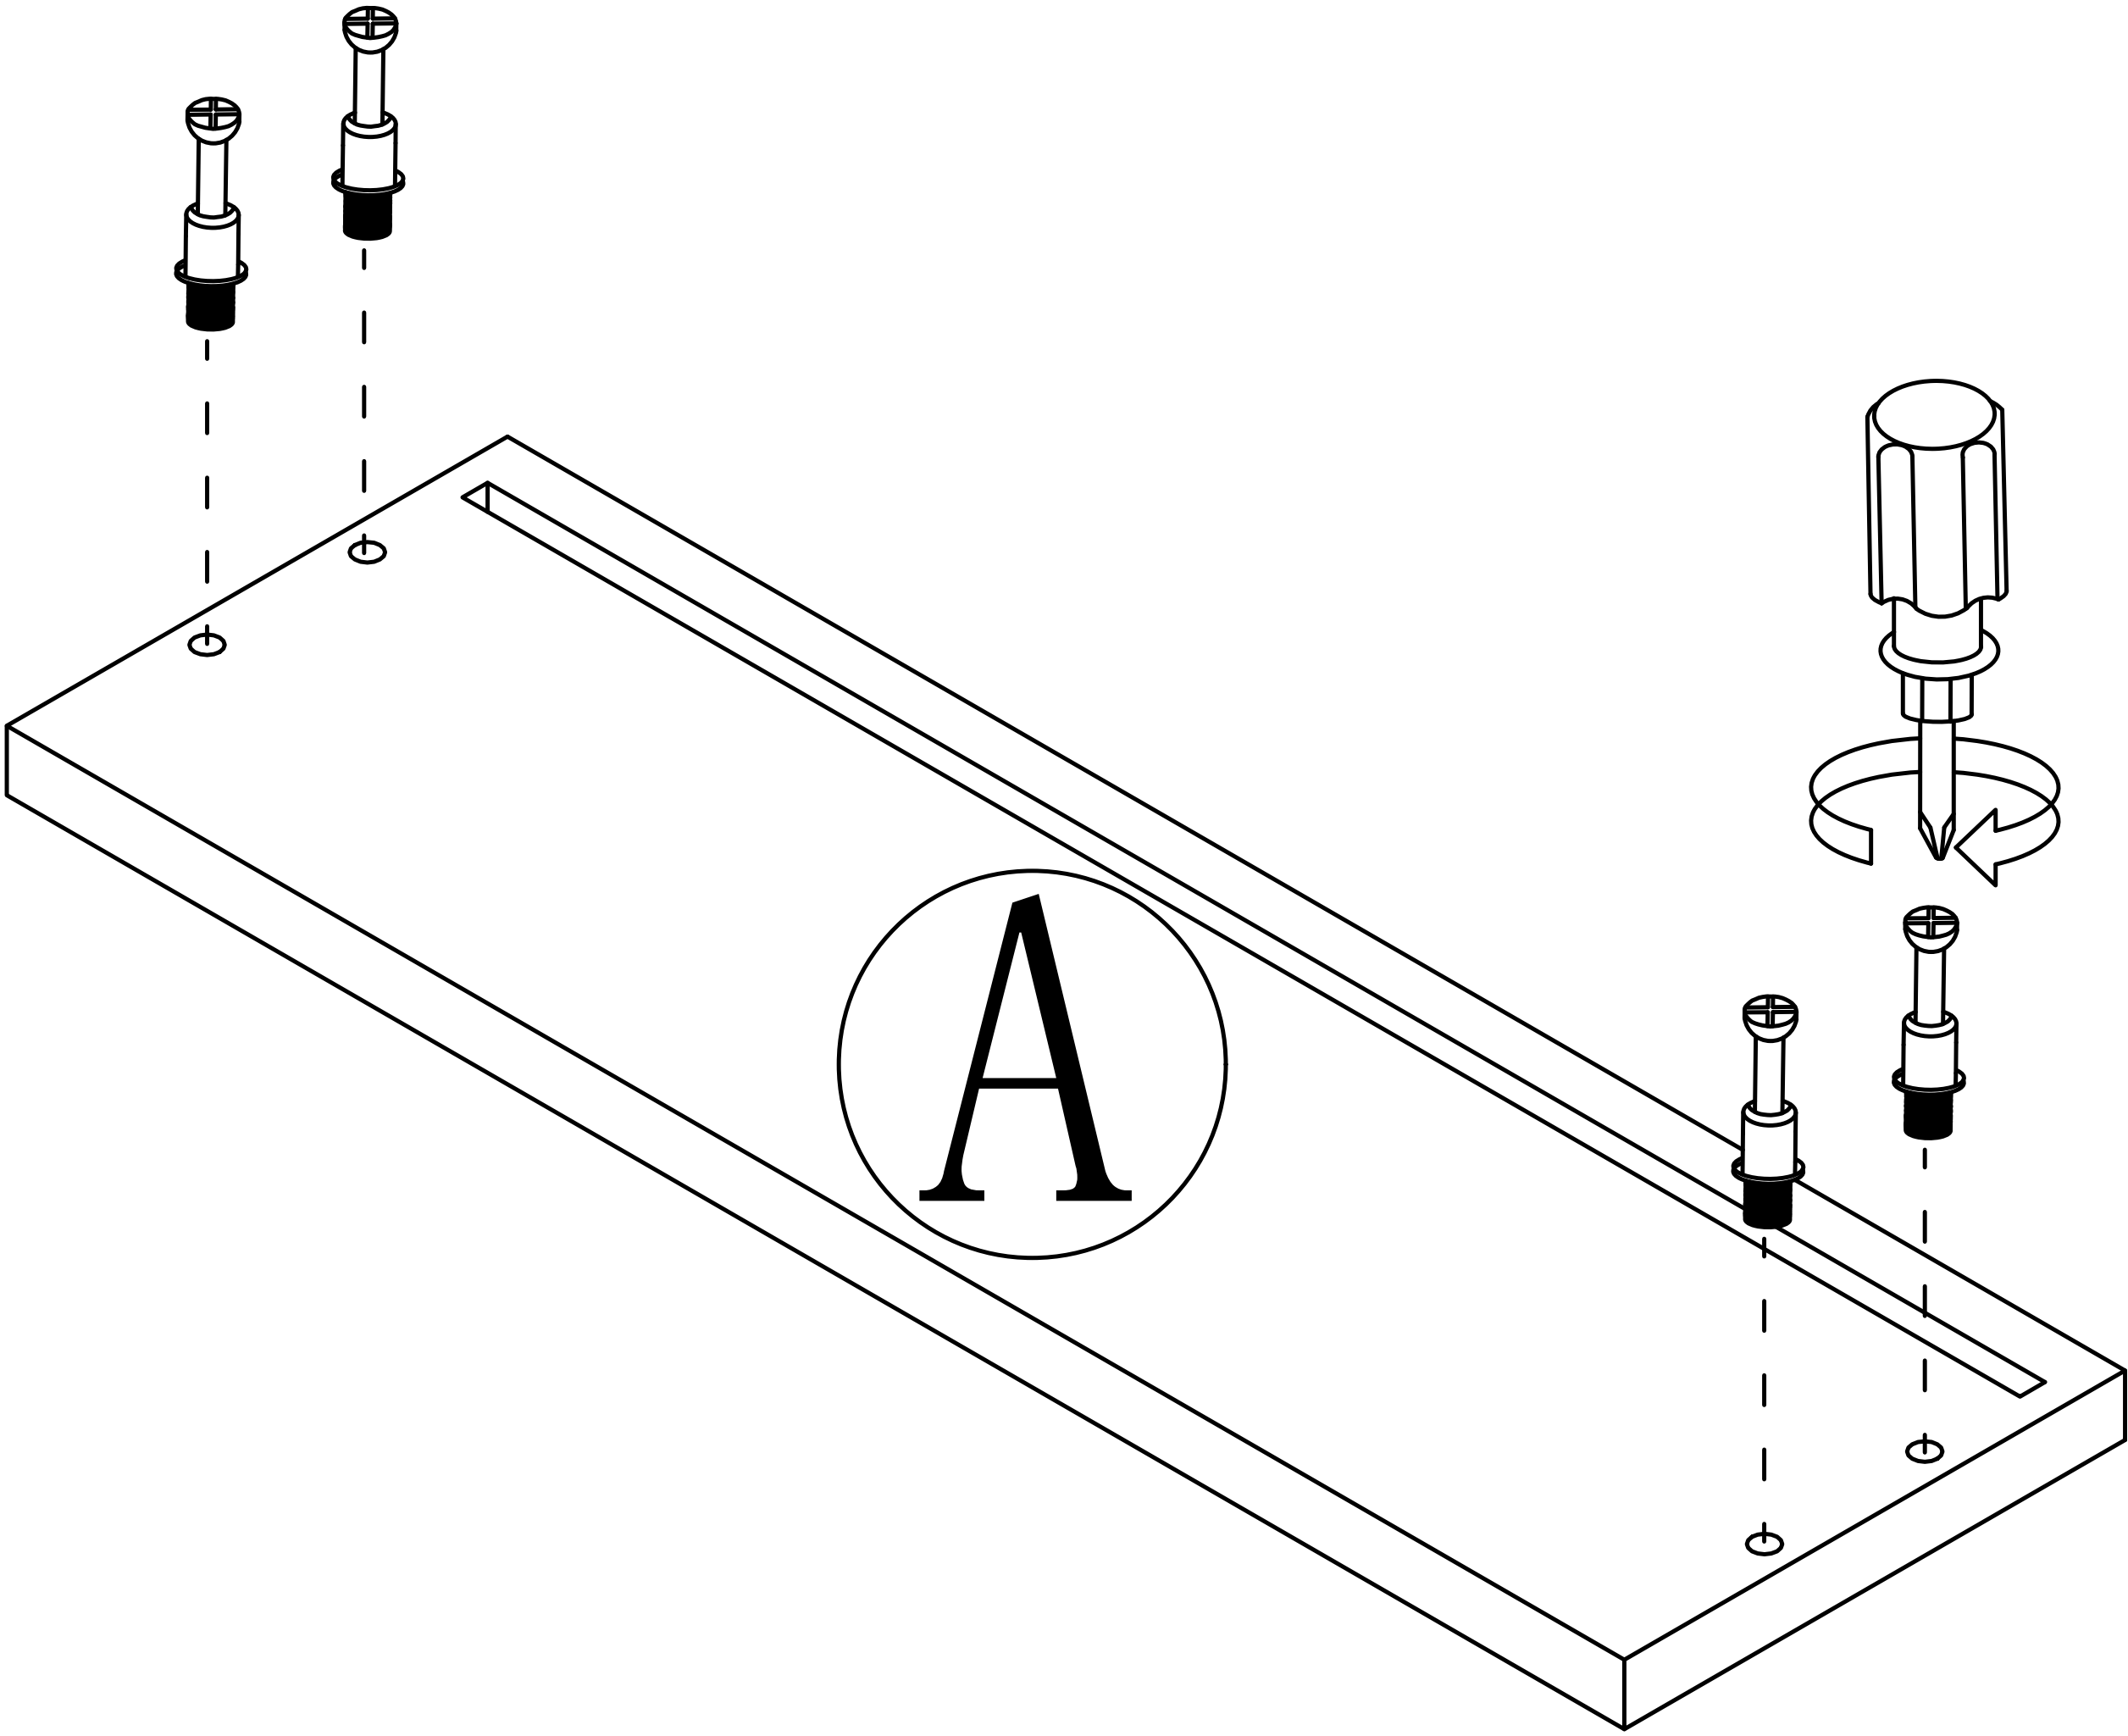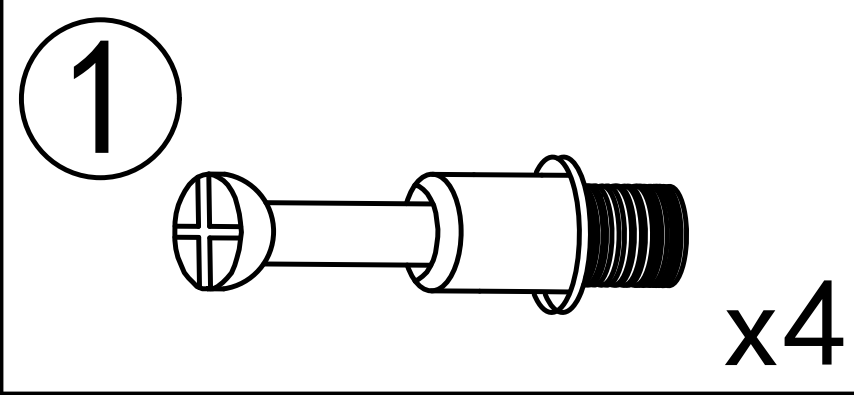

Step 2

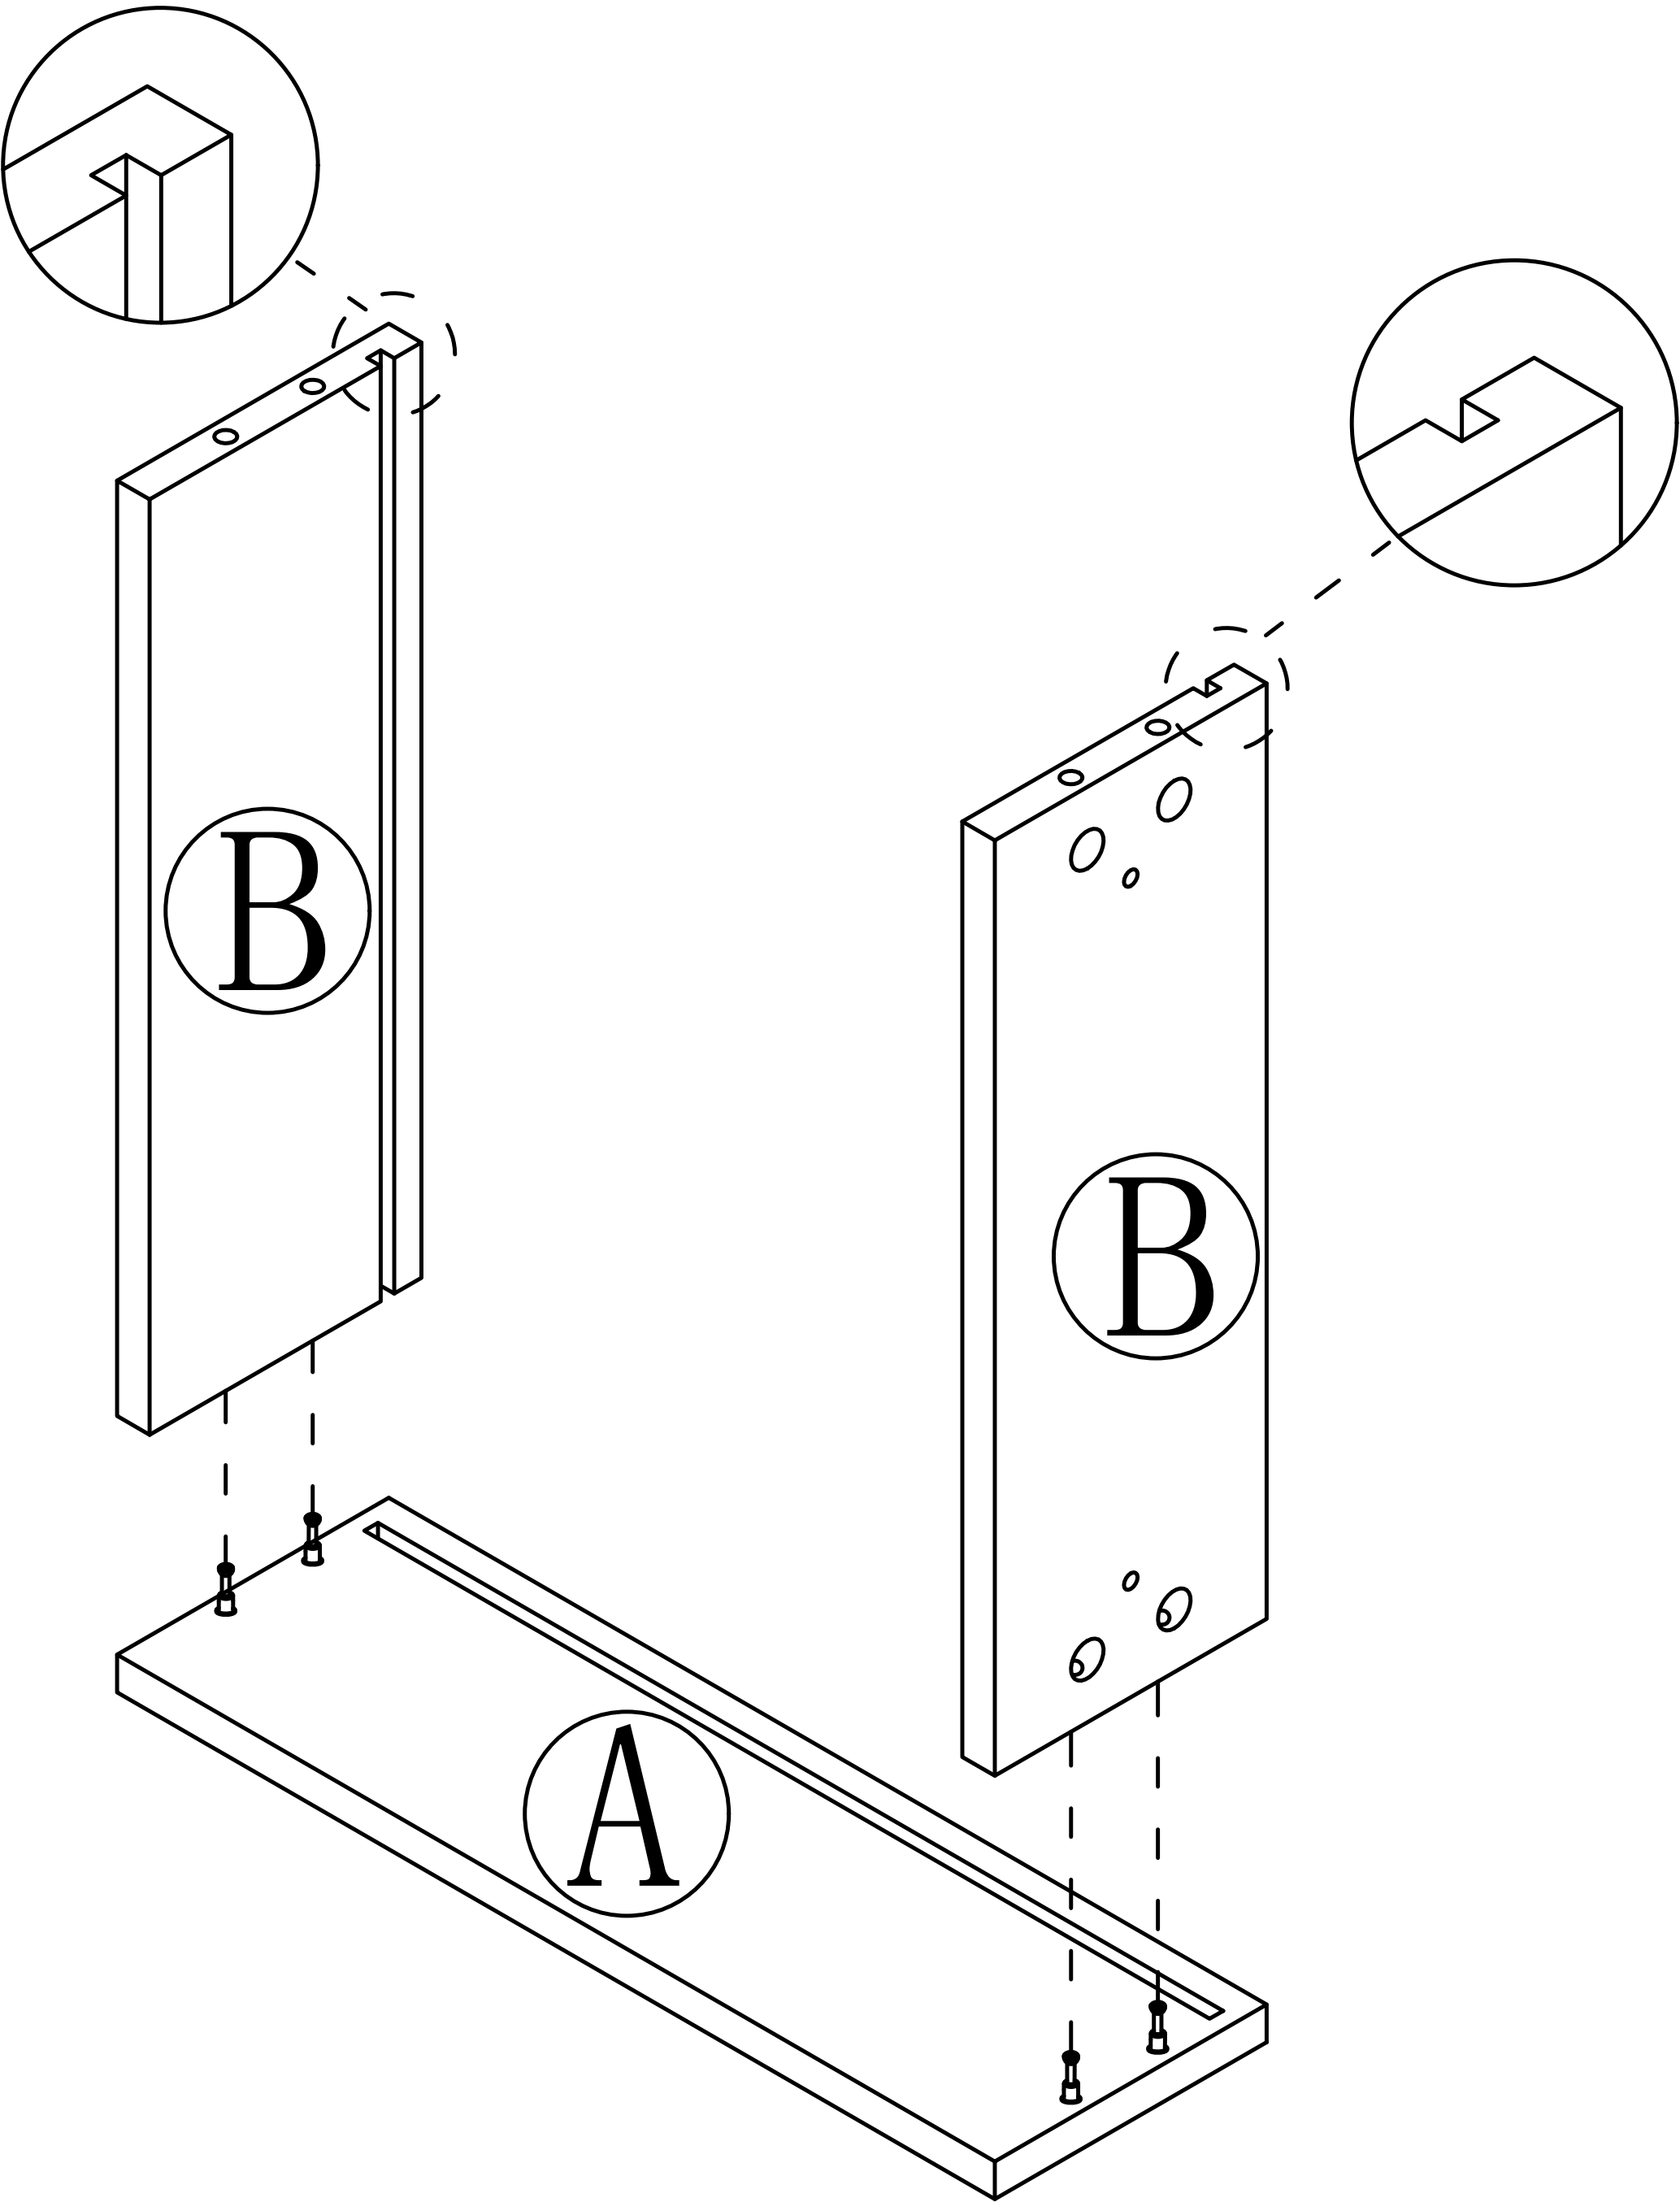



Step 3

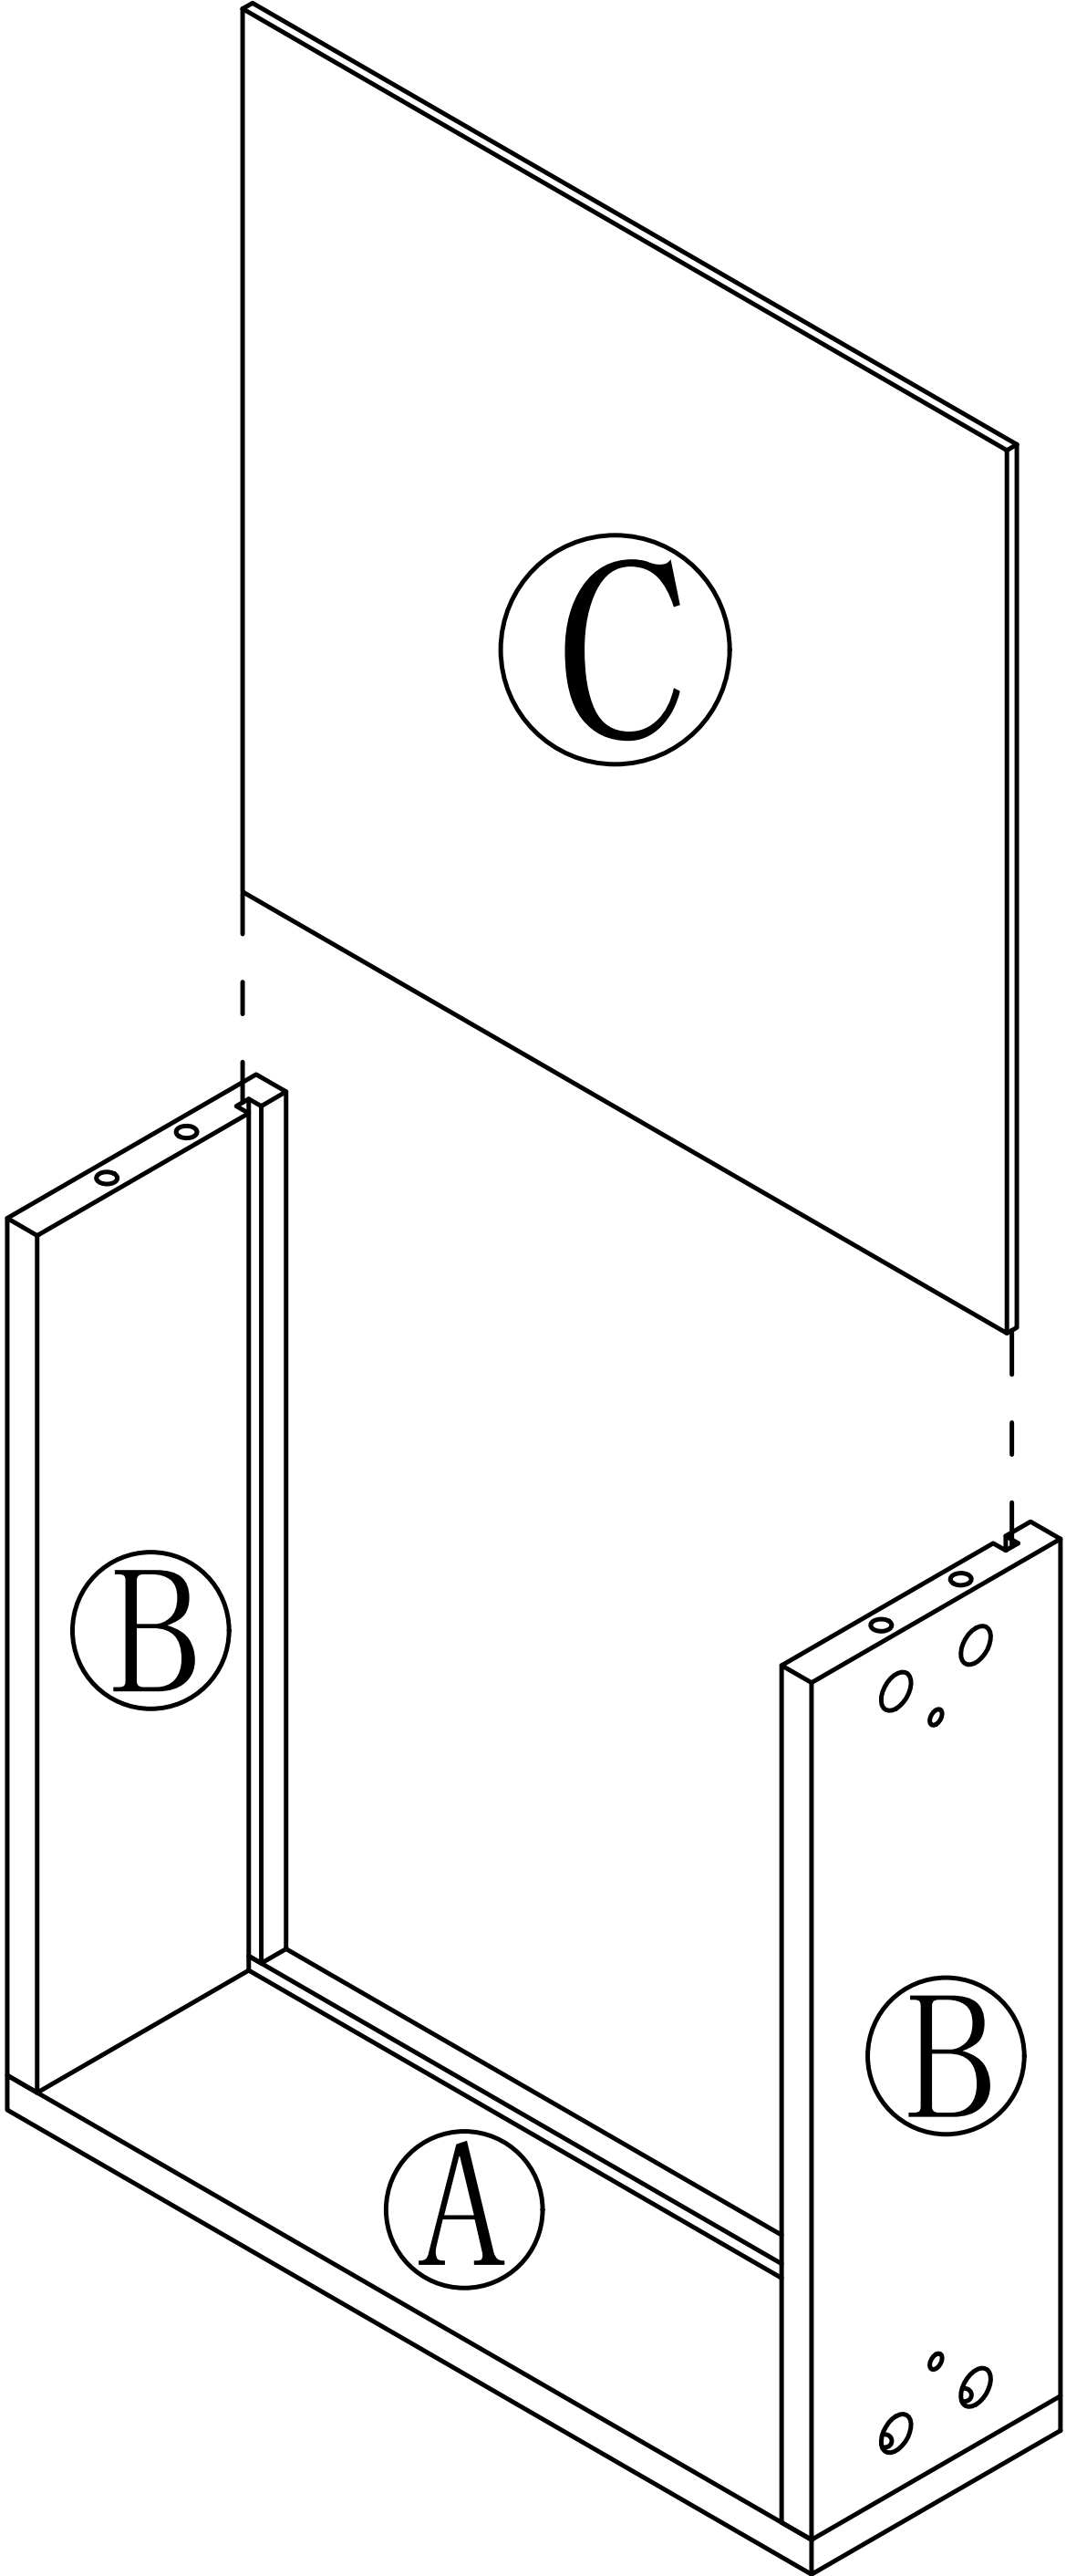

Step 4


1

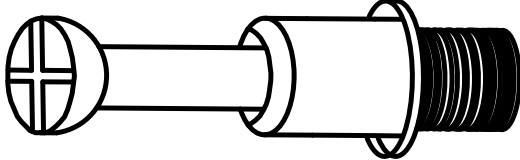
x4

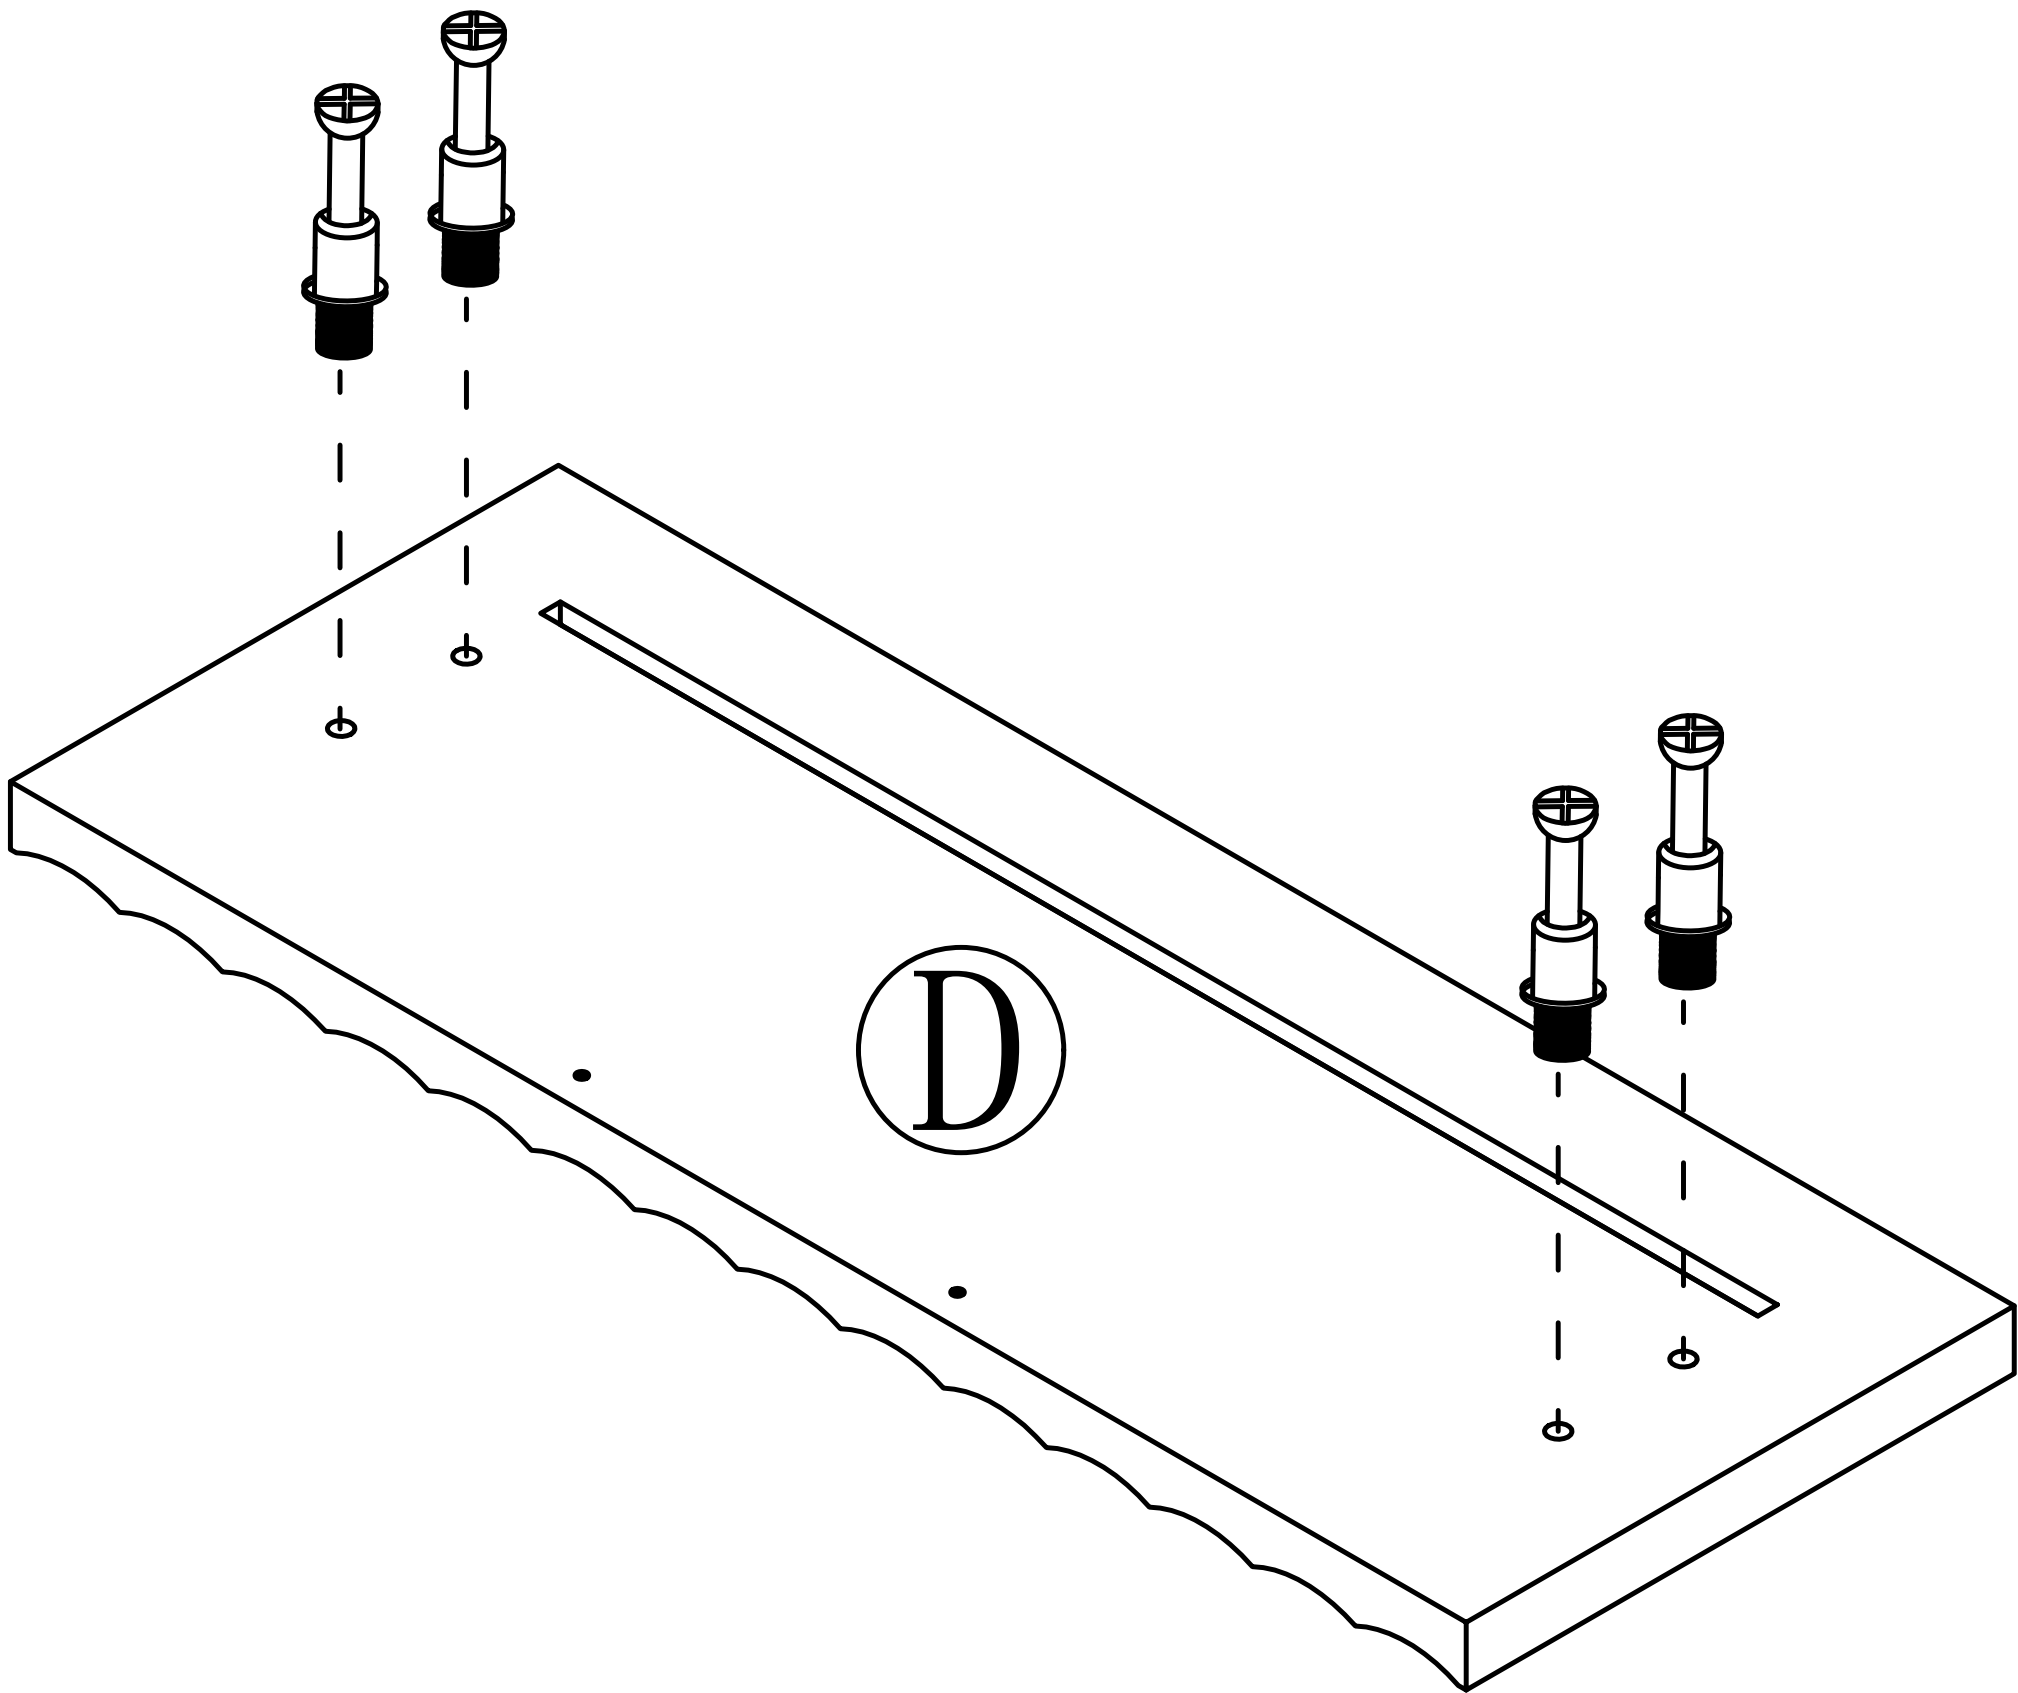

Step 5


2

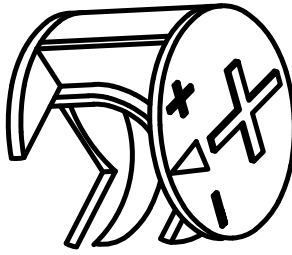x8

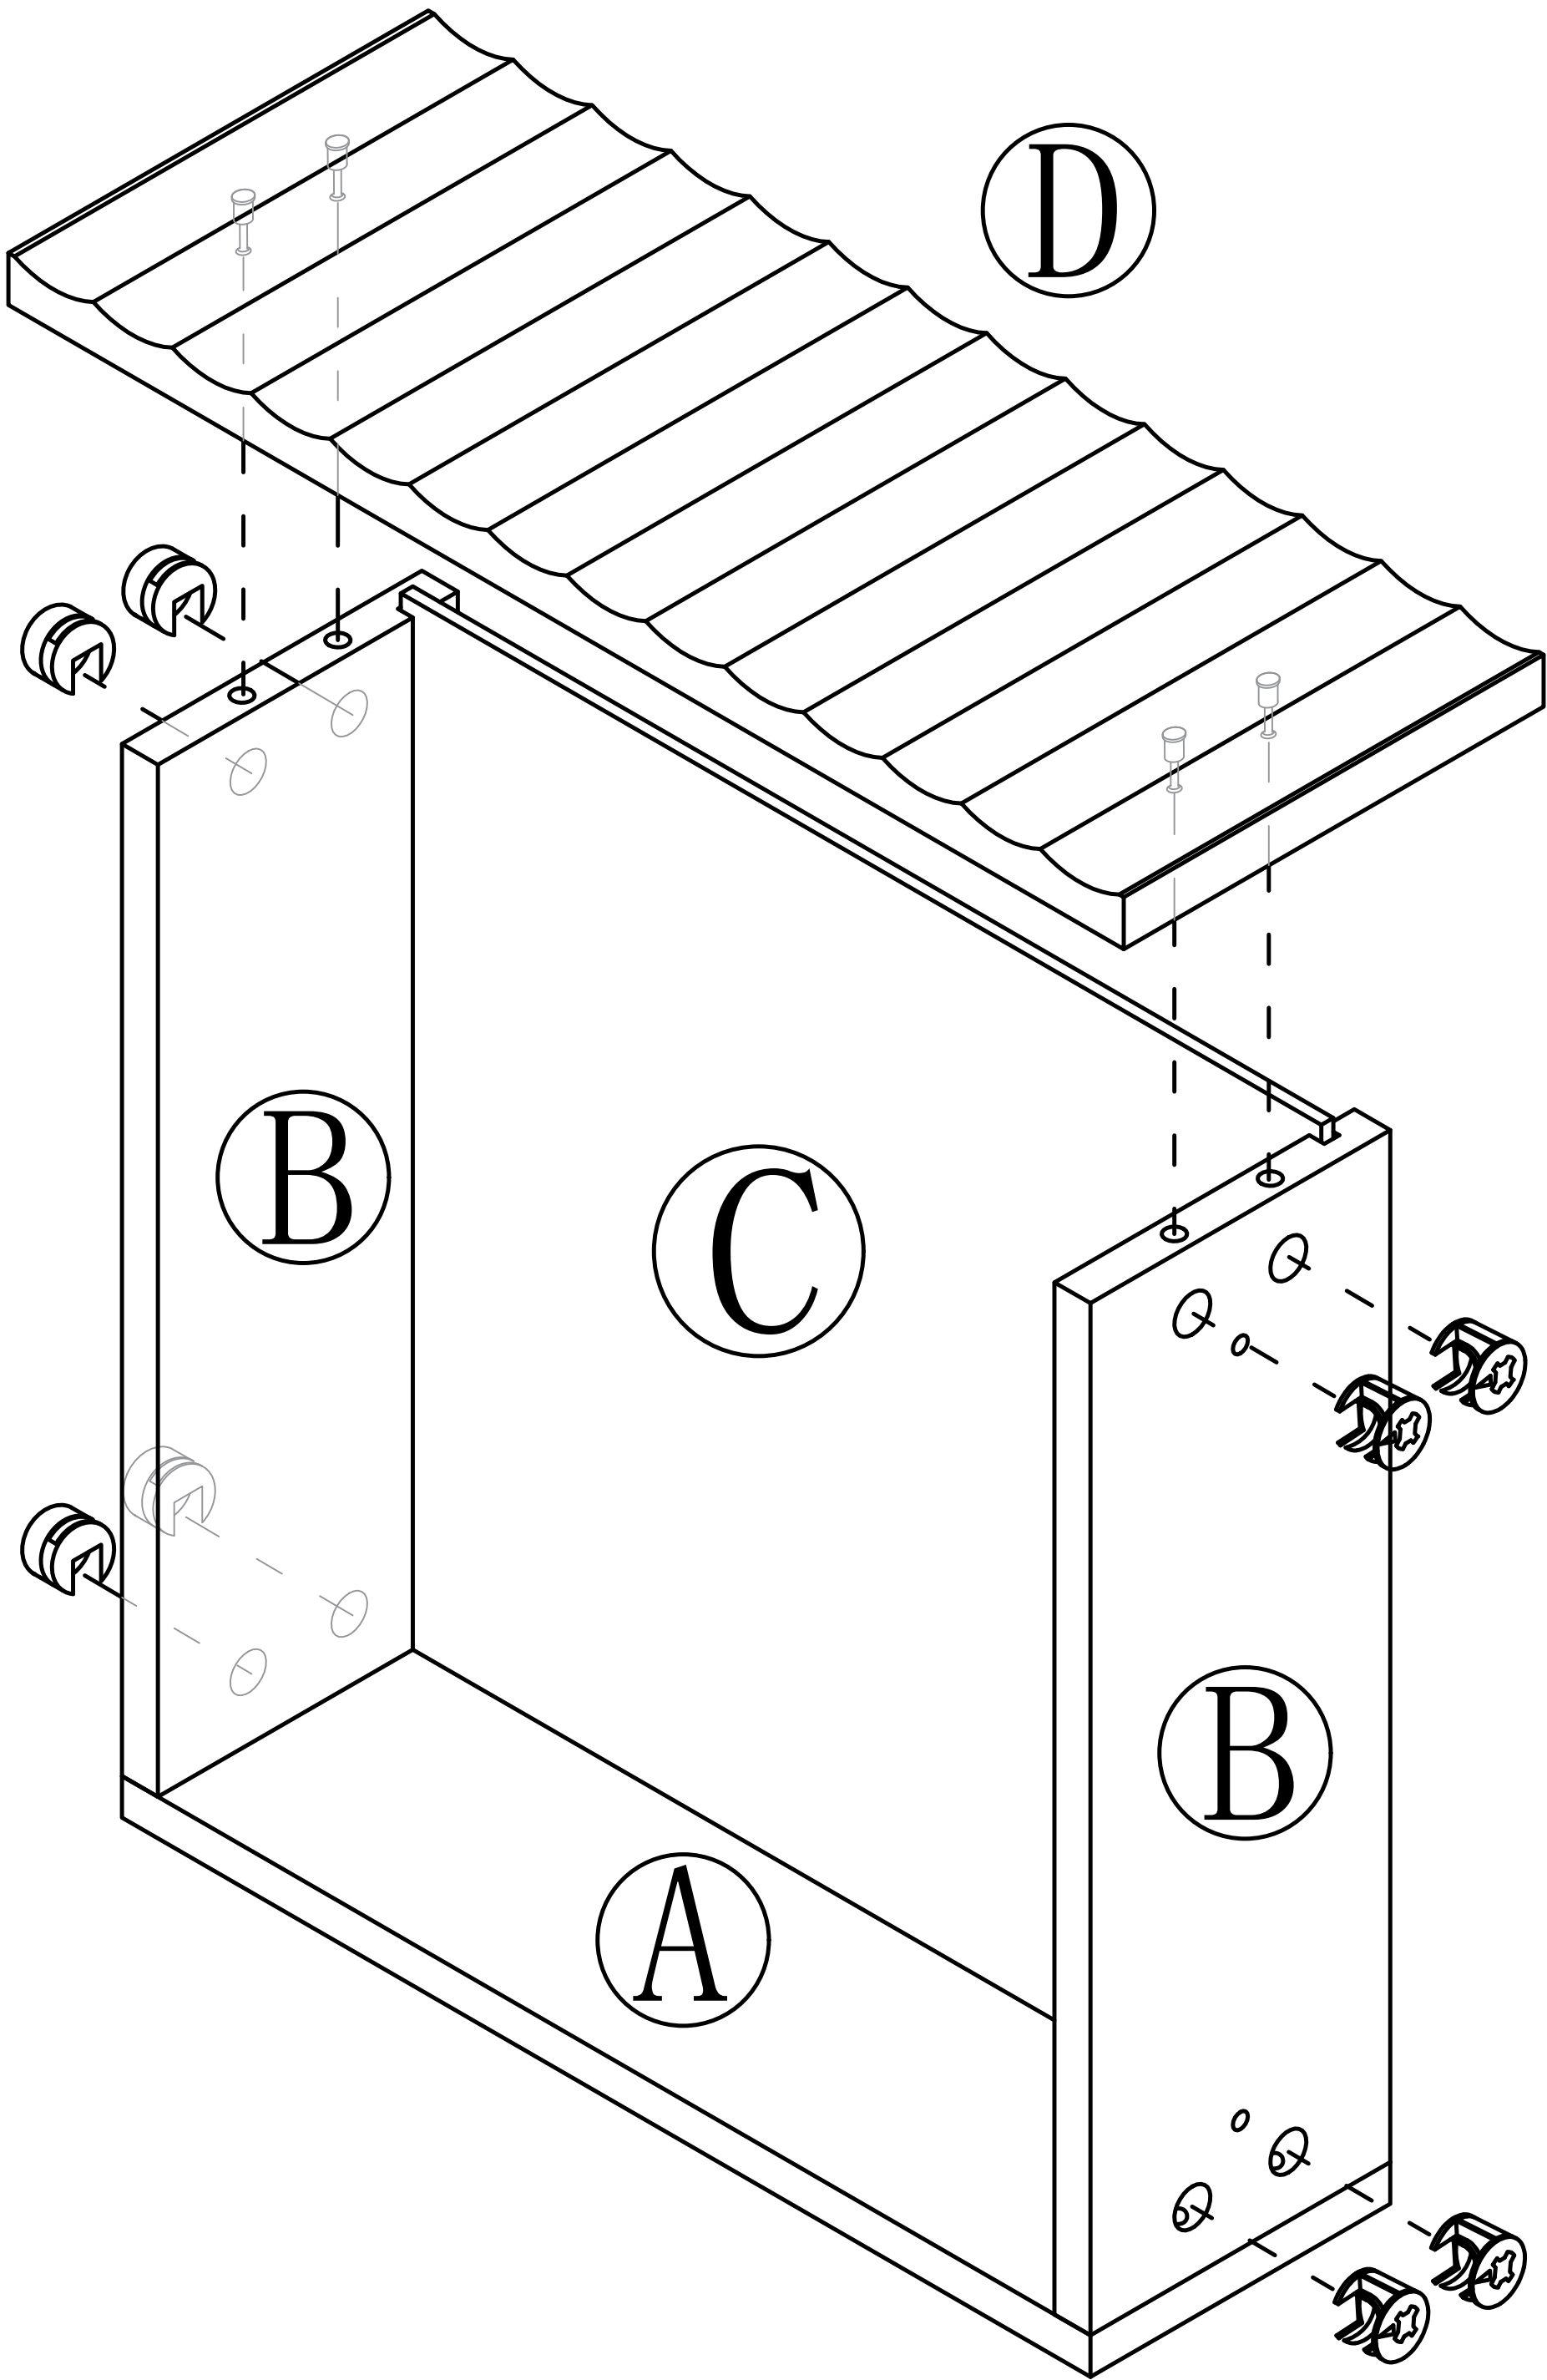


Use parts ⑤

Drawer rail breakdown diagram

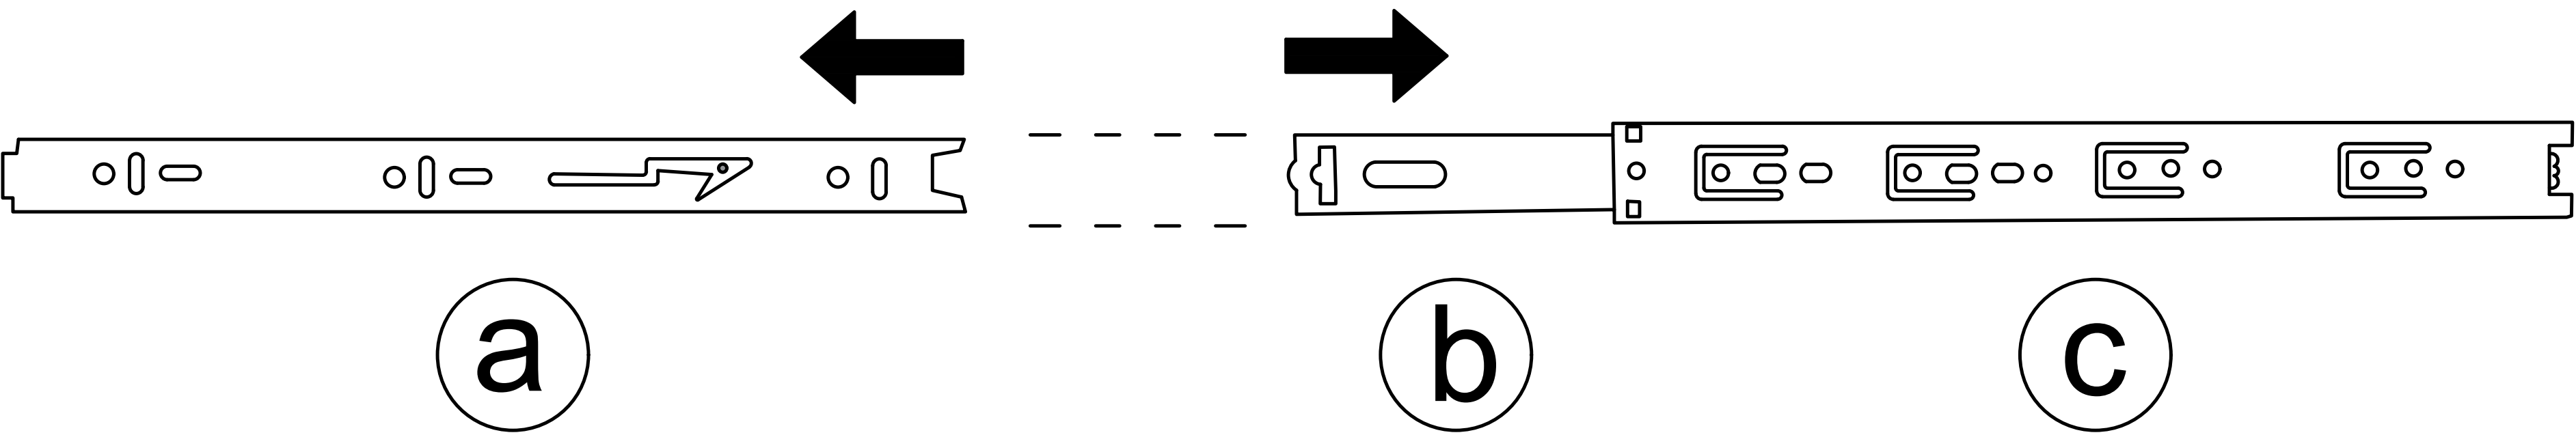


① Dismantle the schematic diagram

Step 1 : Pull the rails apart





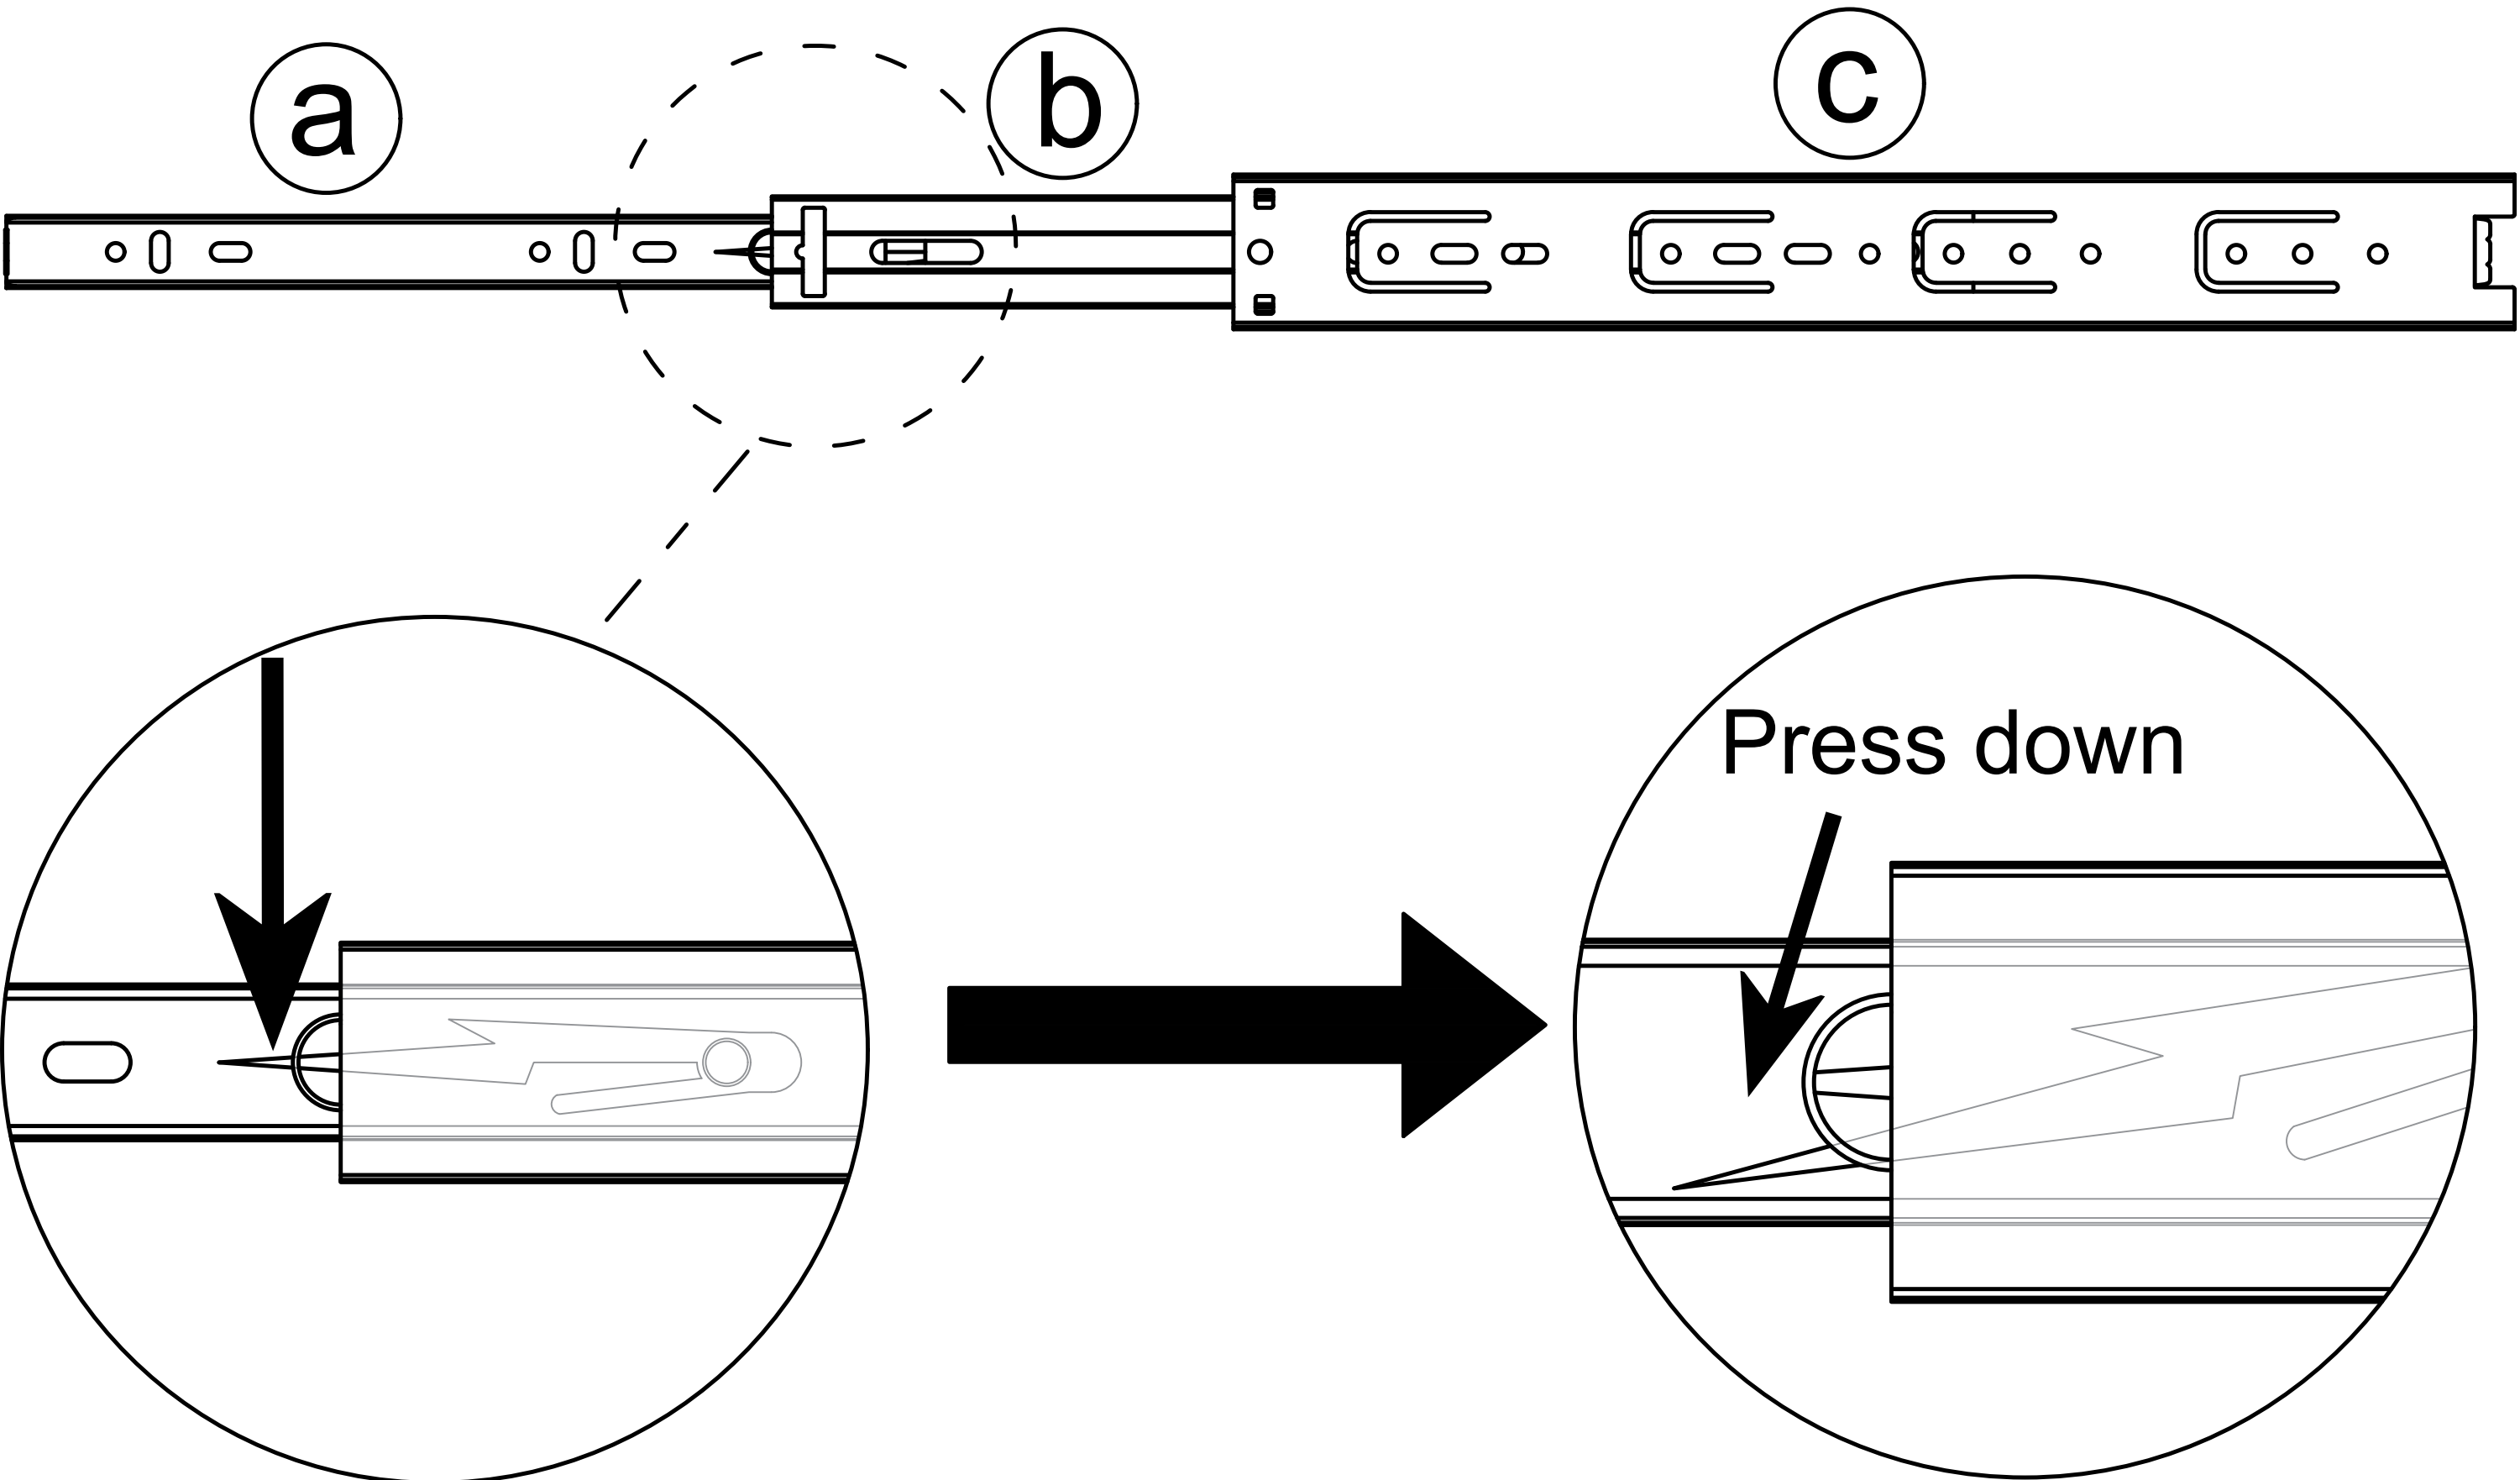


Step 2 : Press the nylon button and pull out (a).




Drawer rail decomposition completed schematic diagram

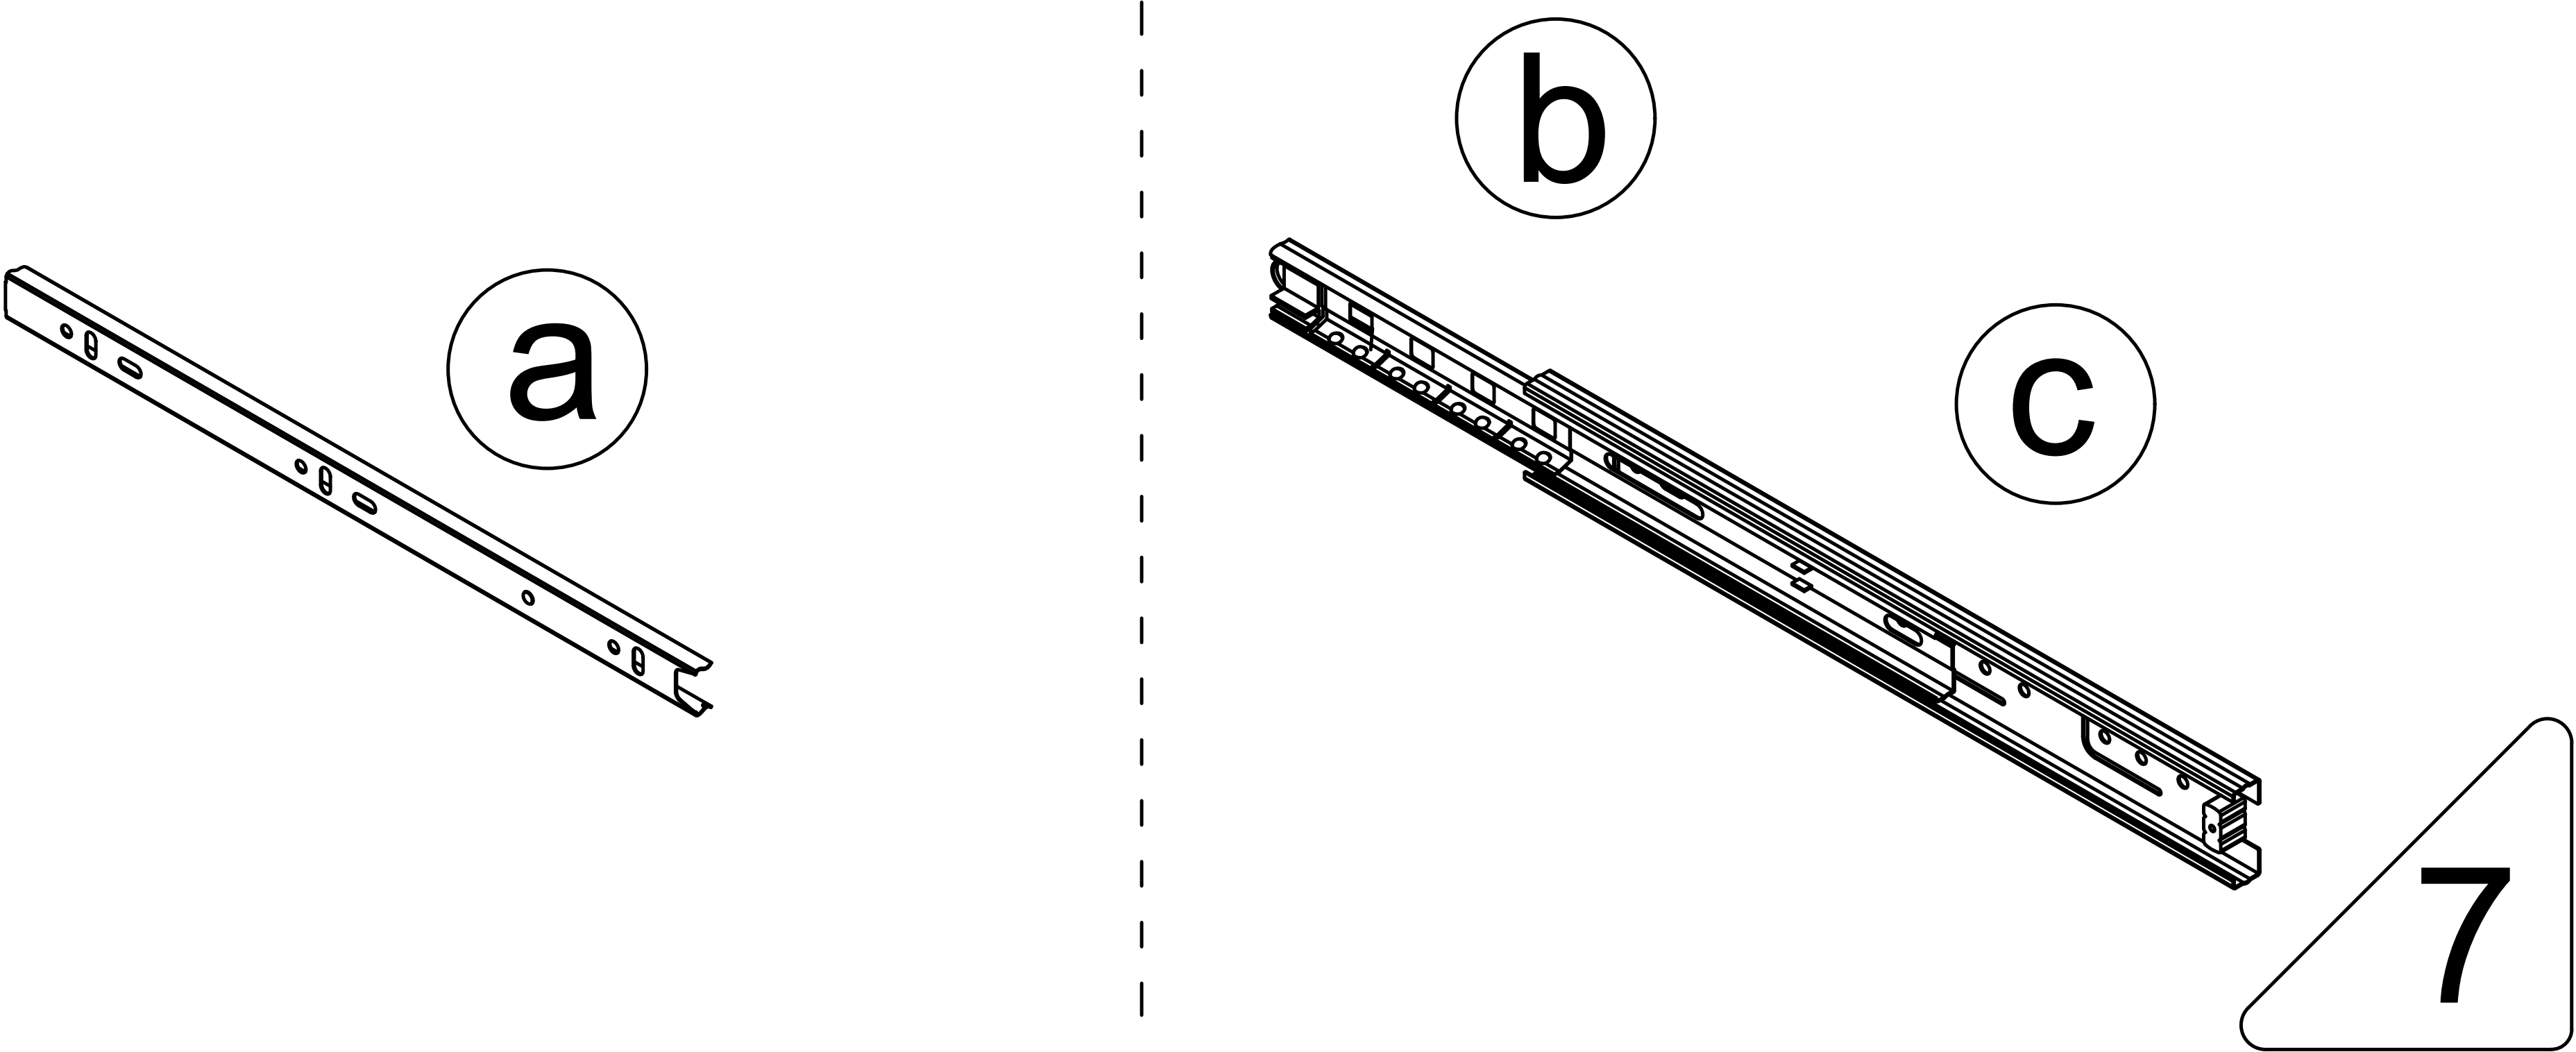

Step 6

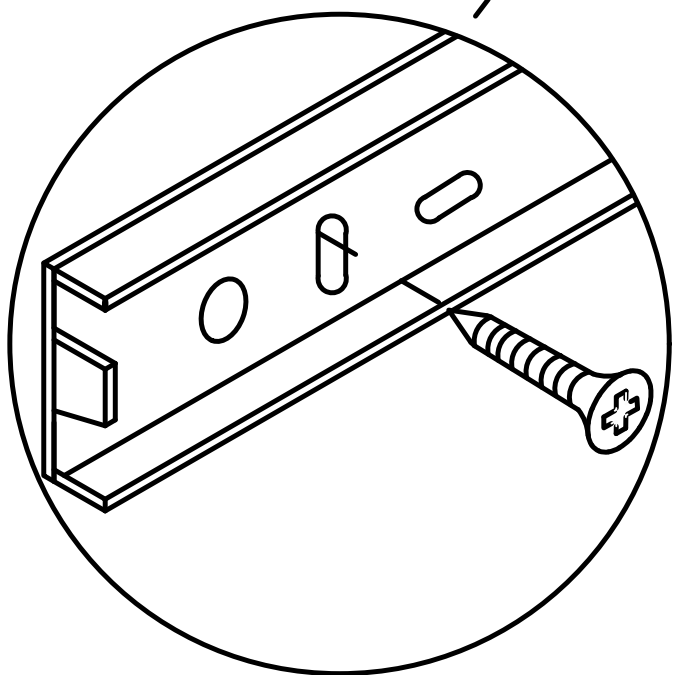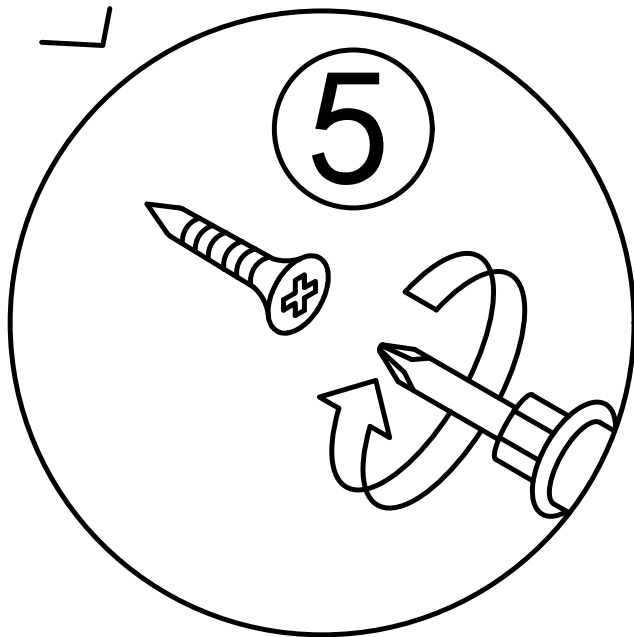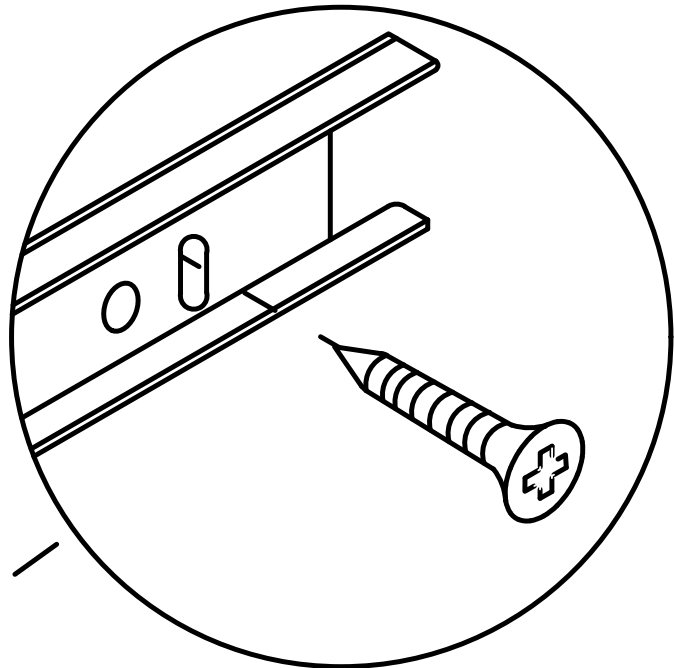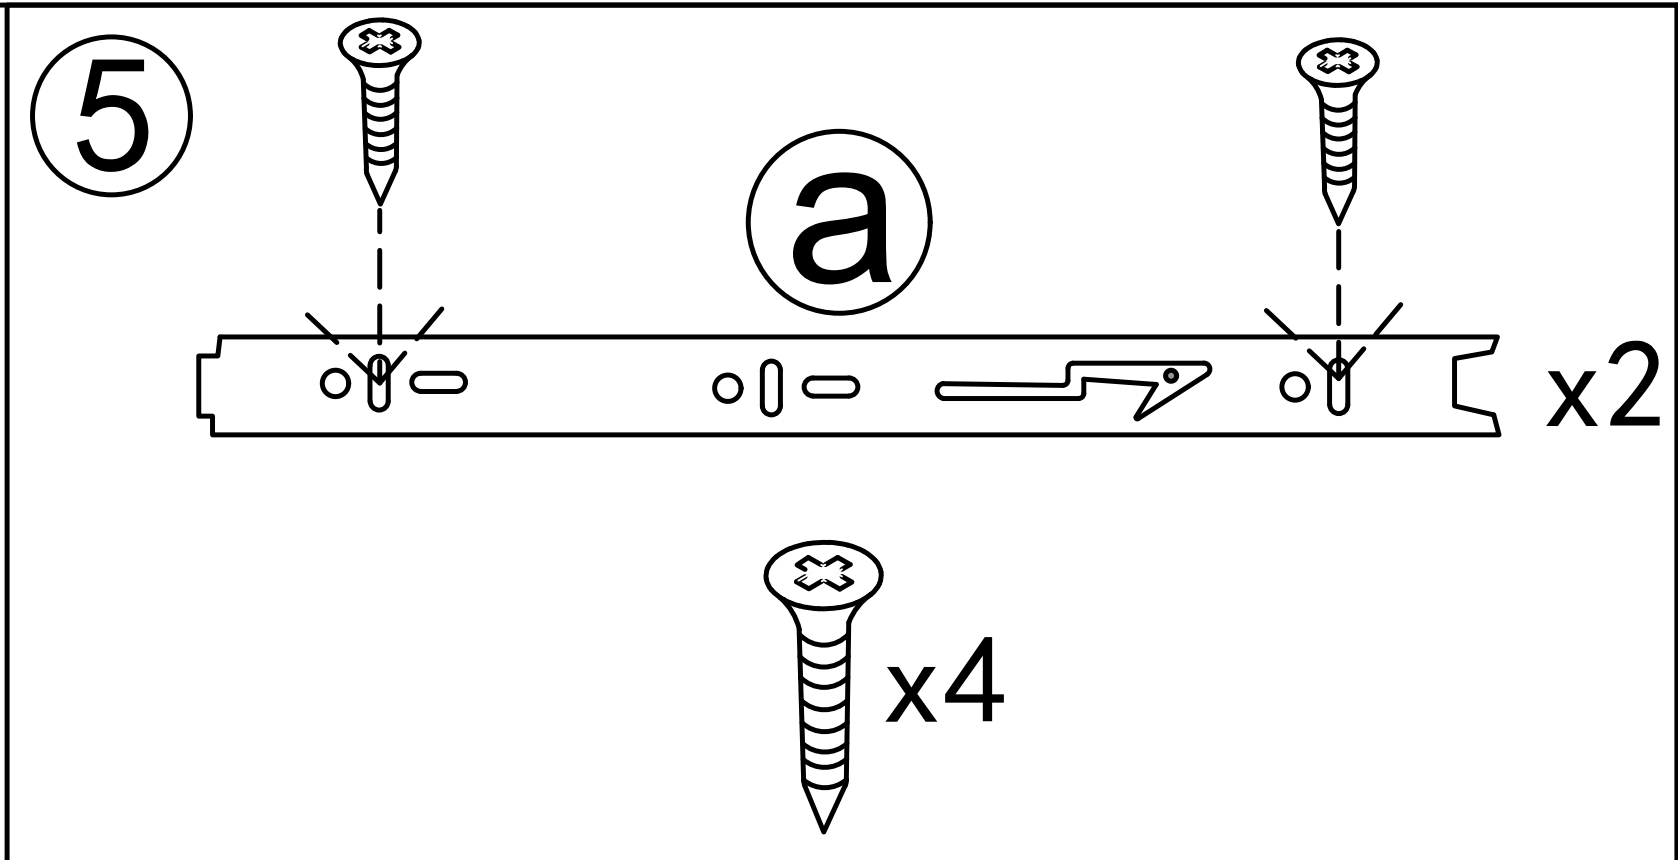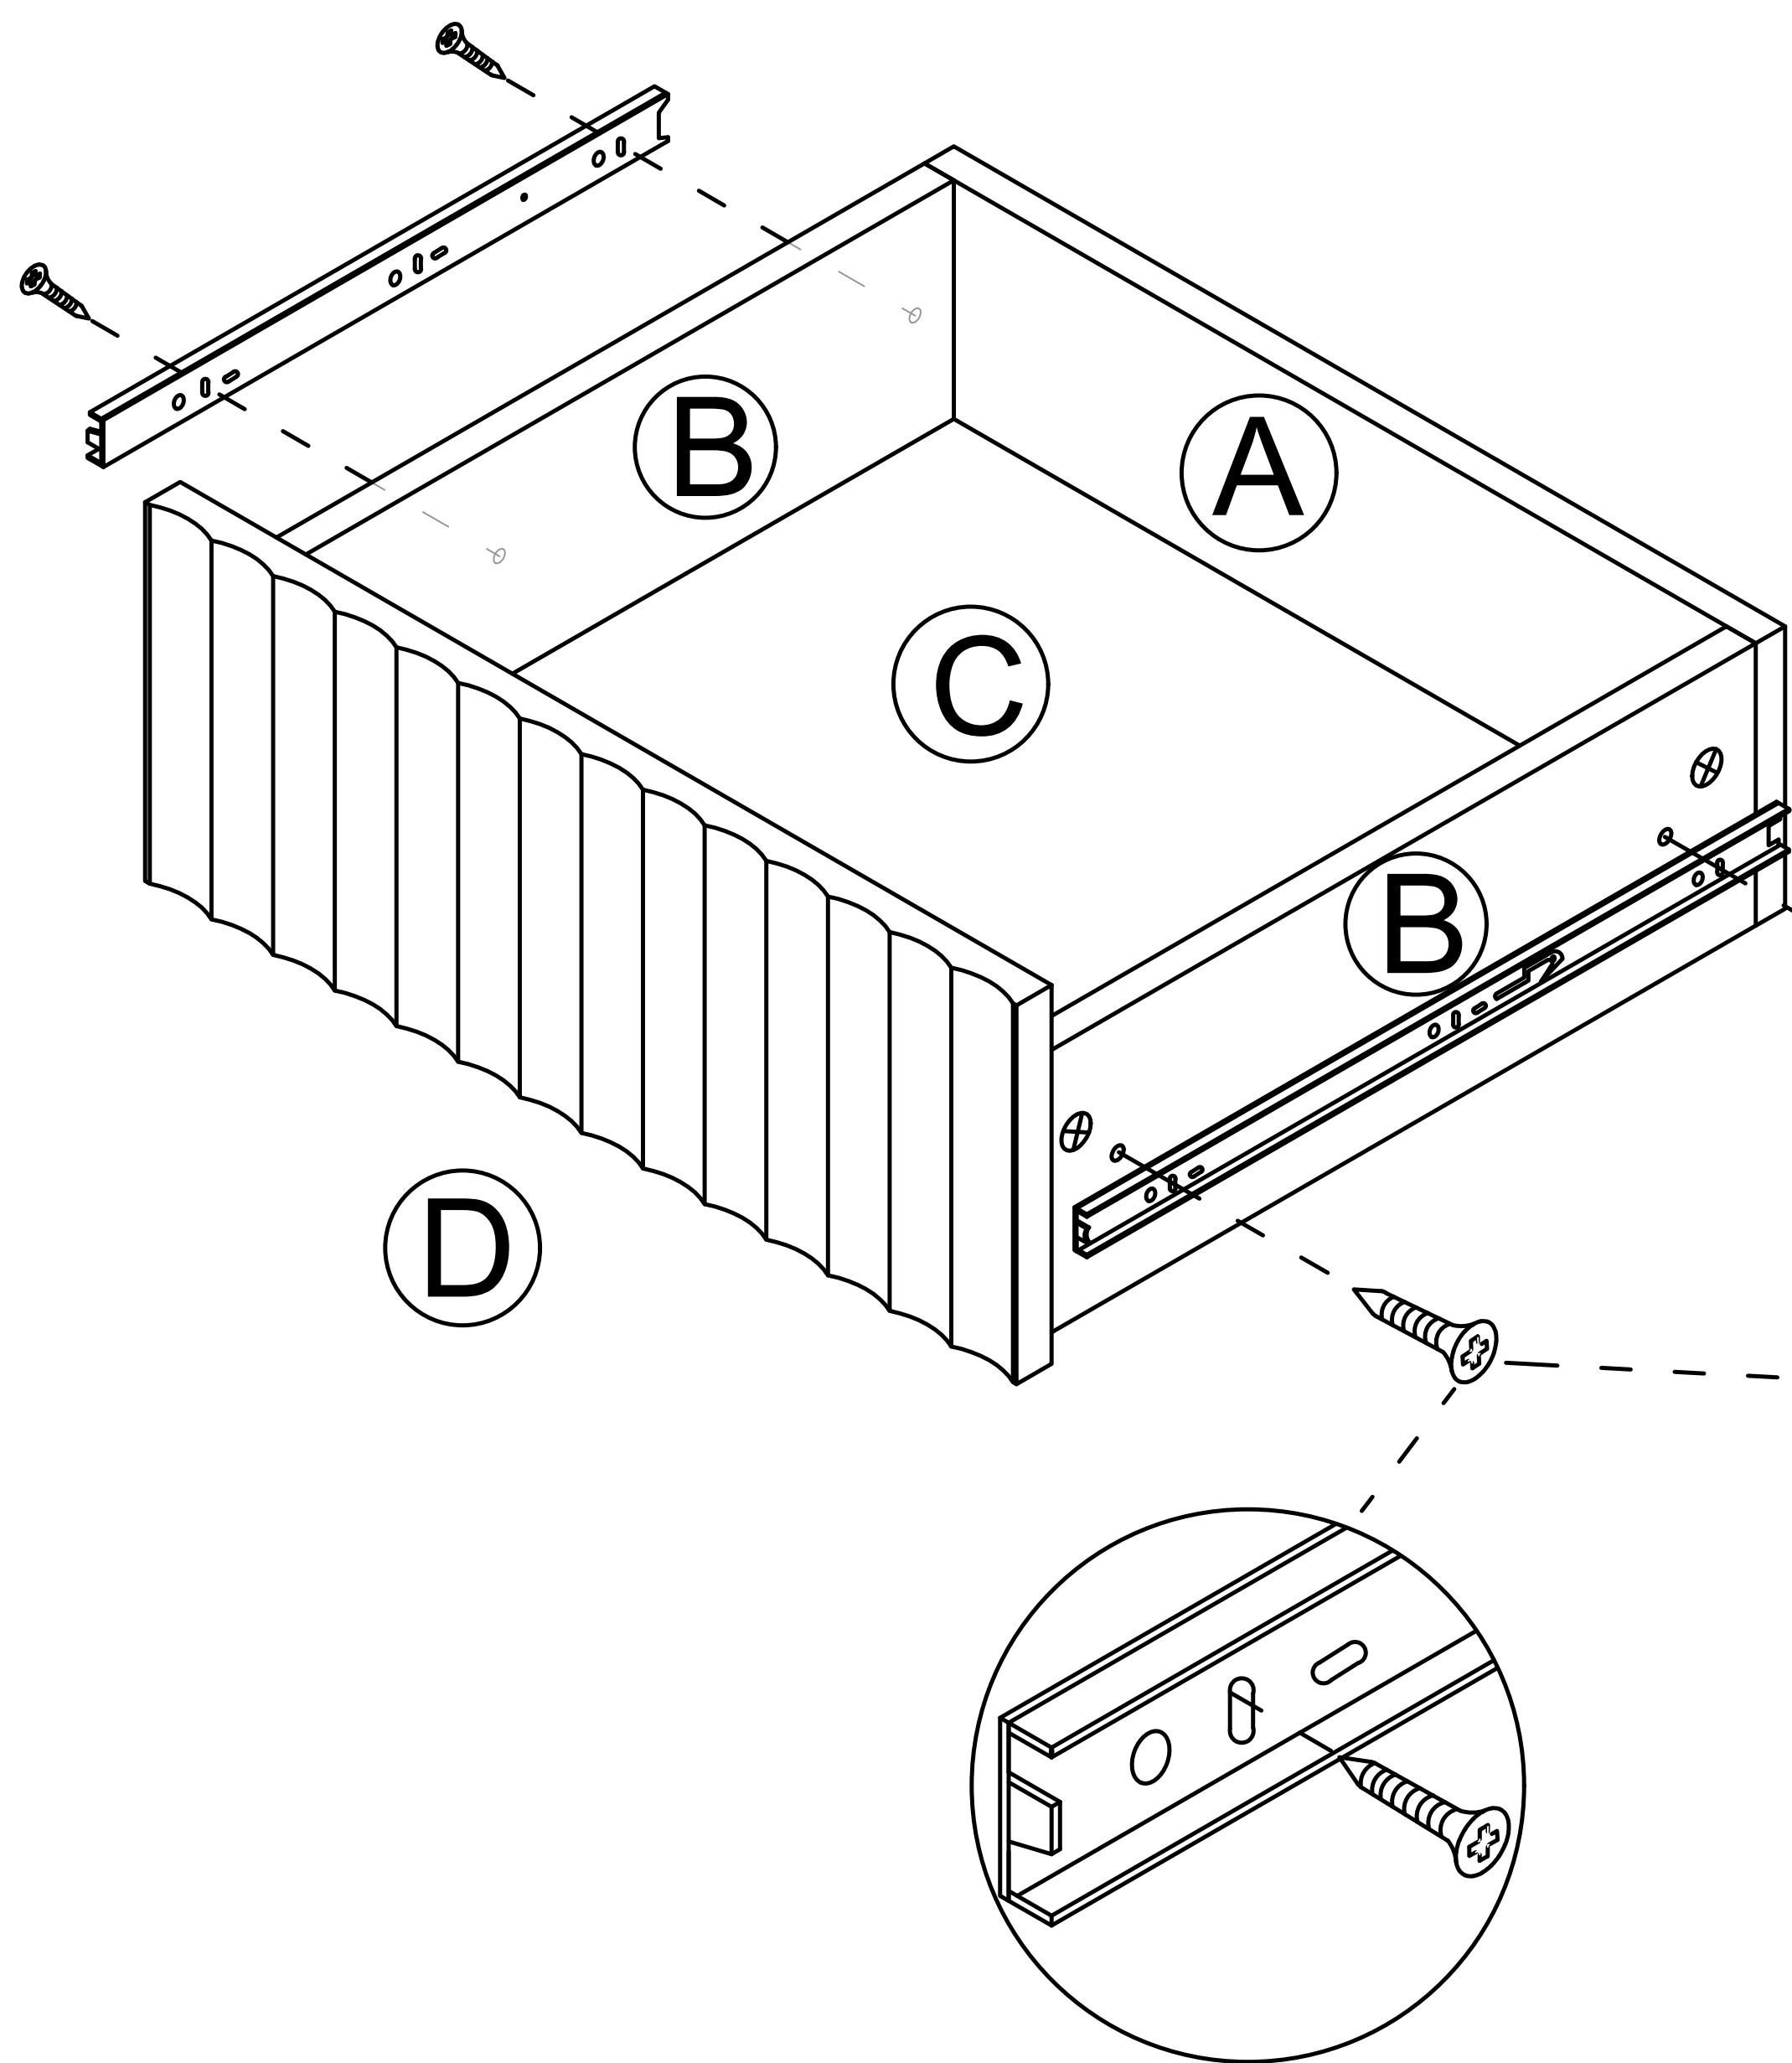



Step 7

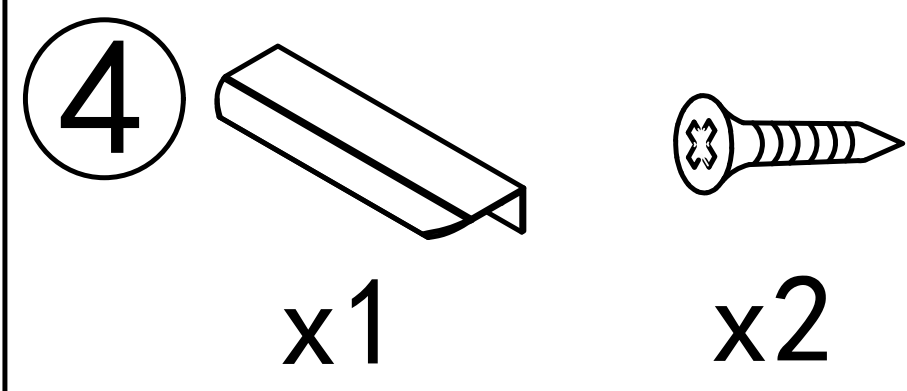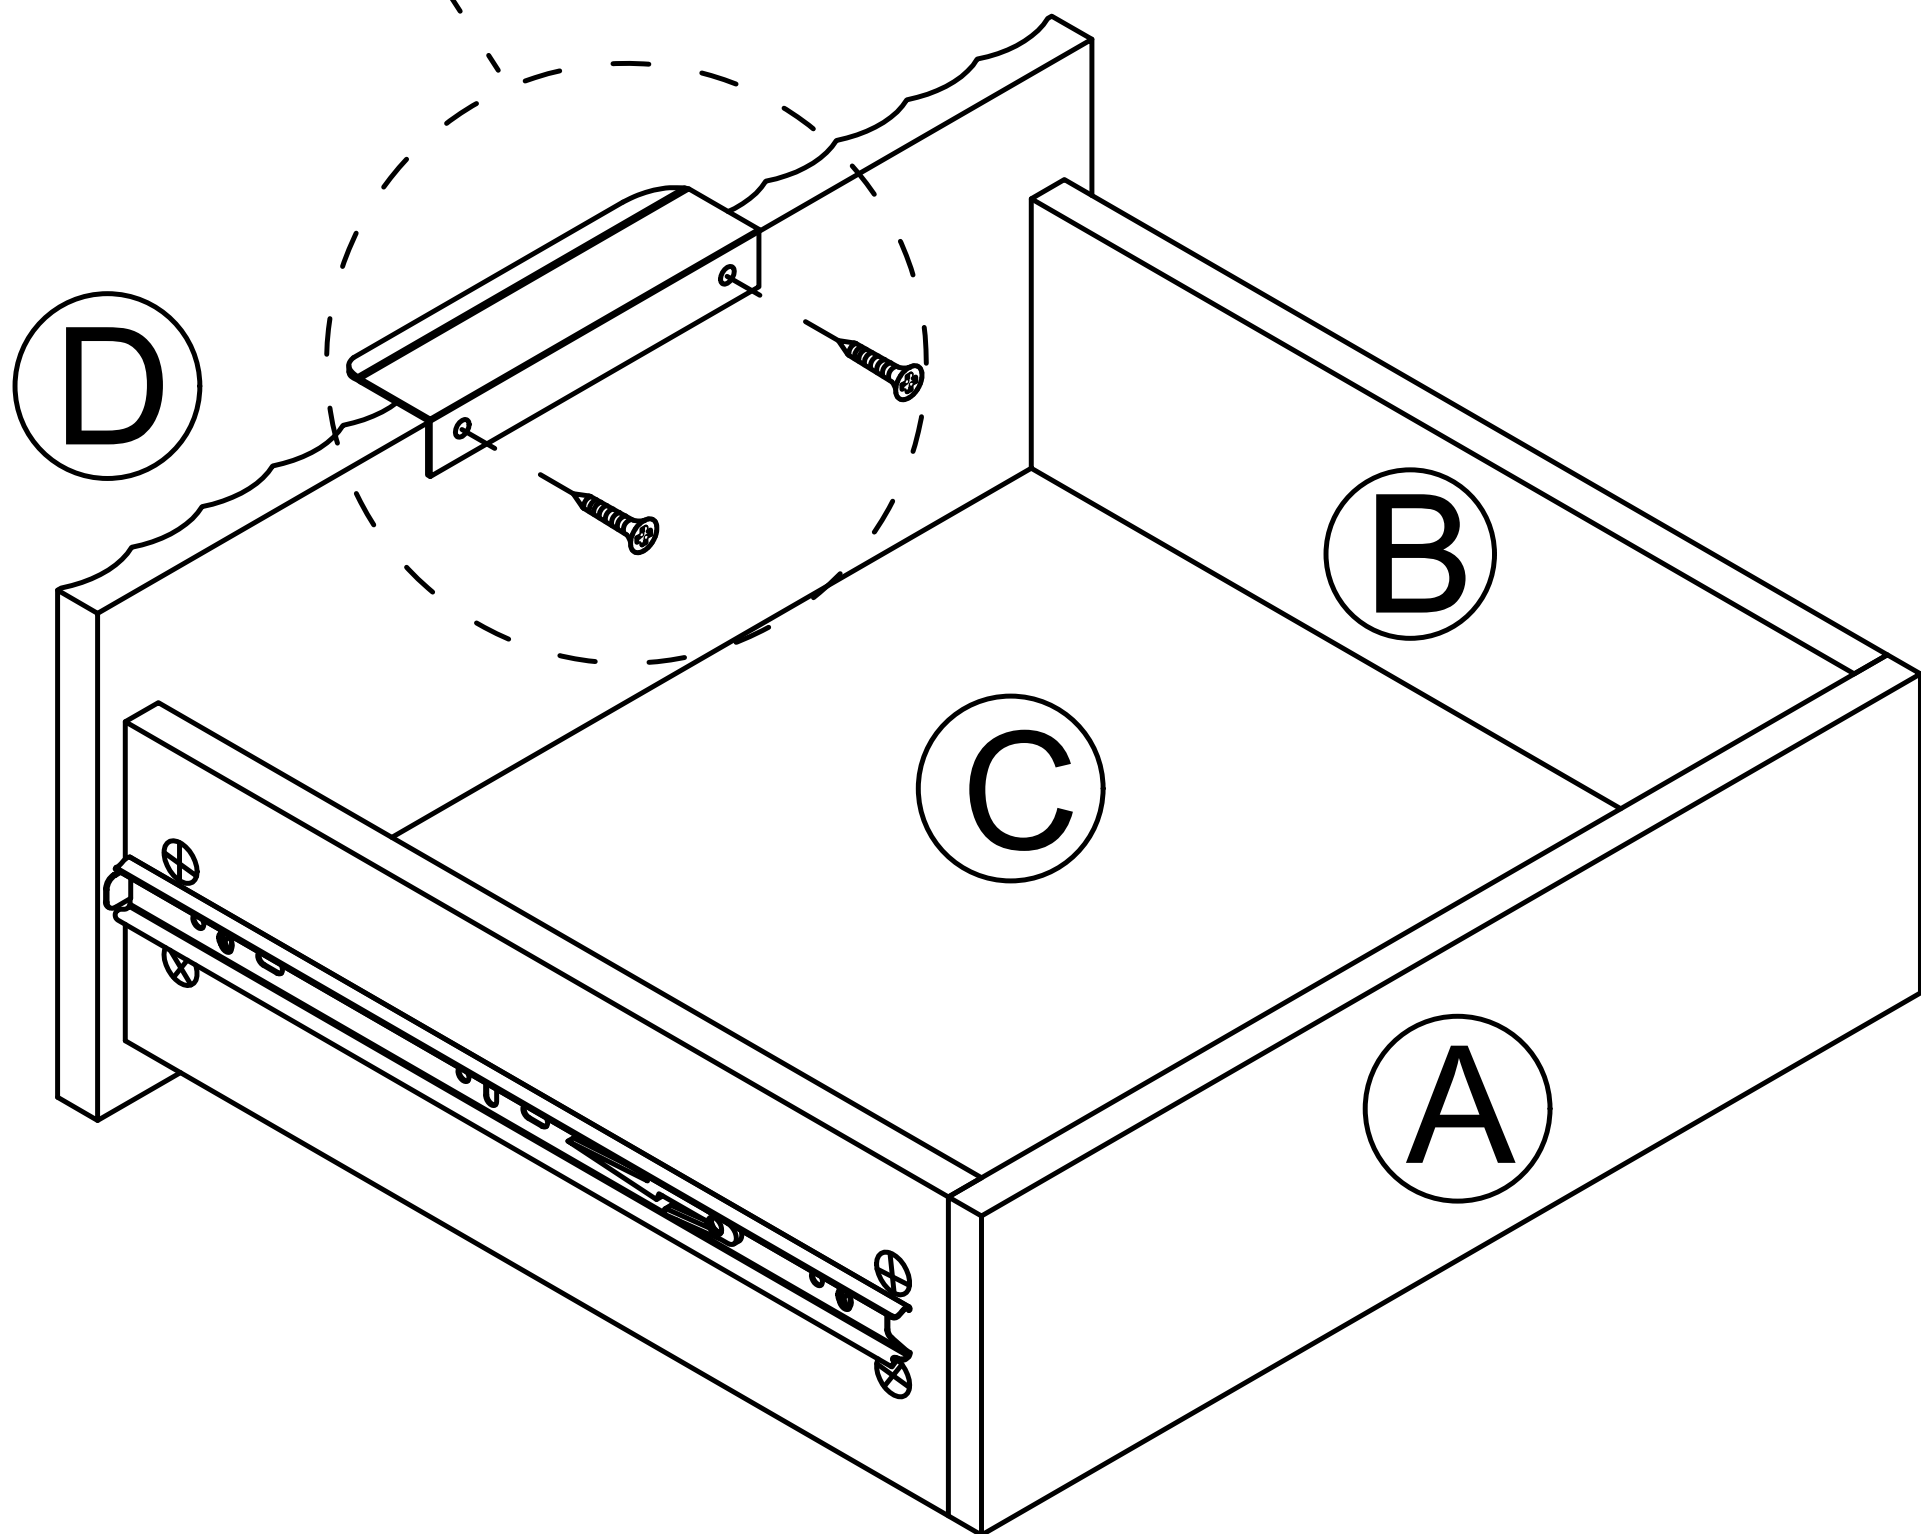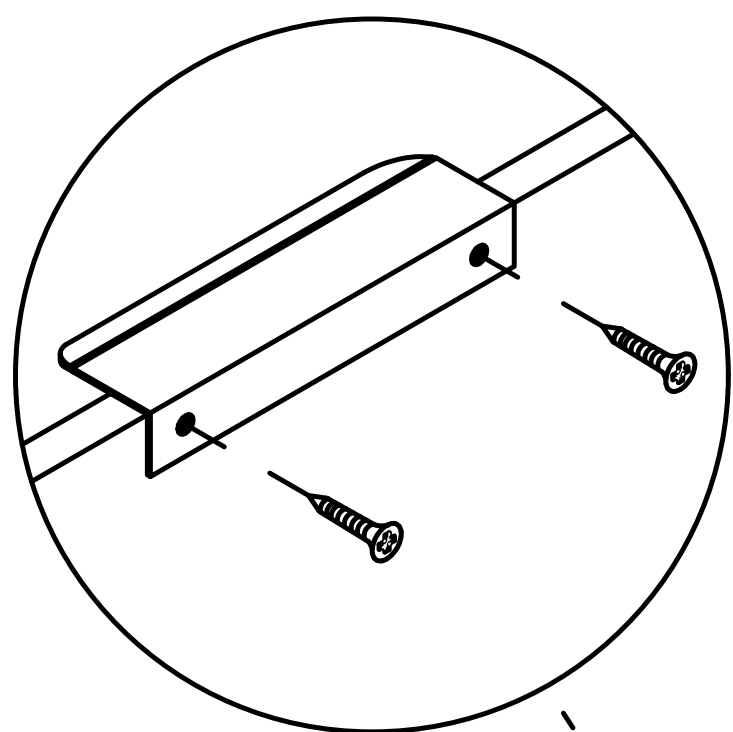



x1

x2

Step 8

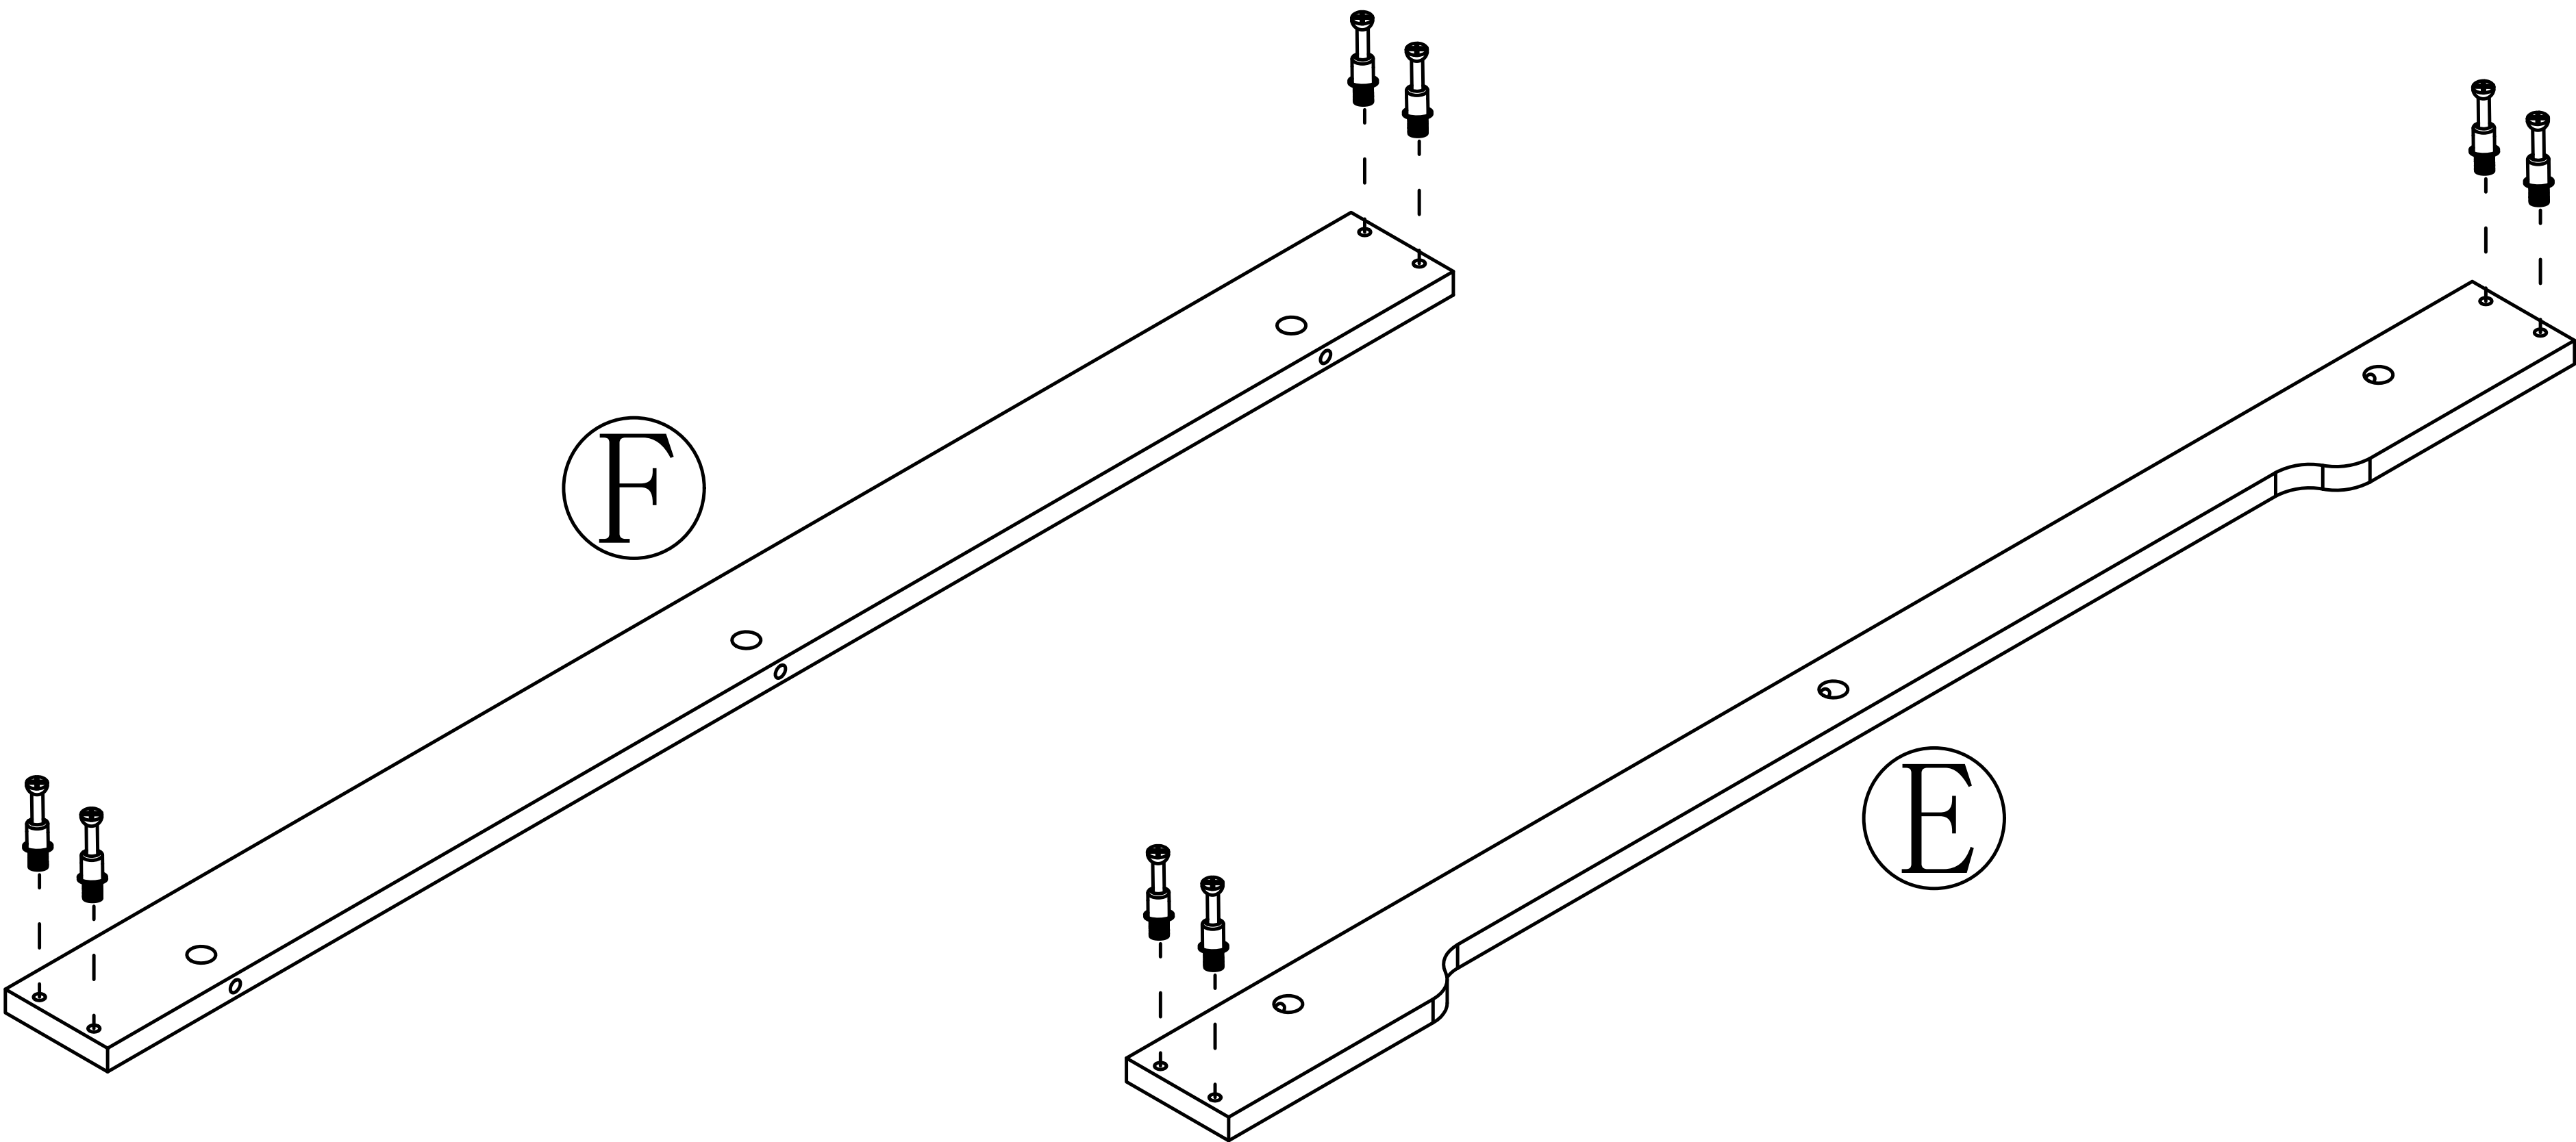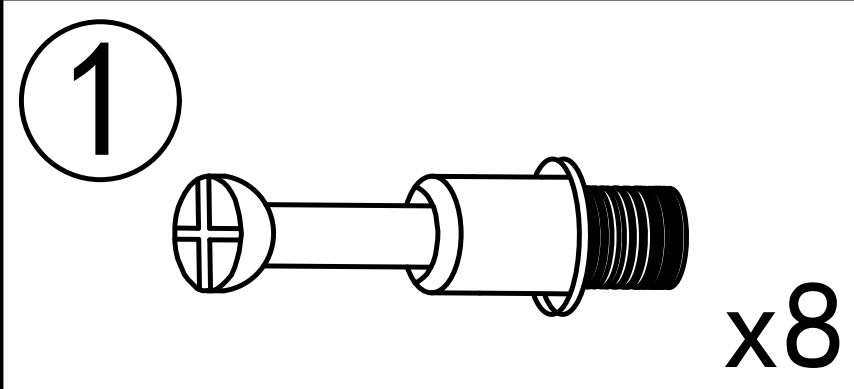



Step 9

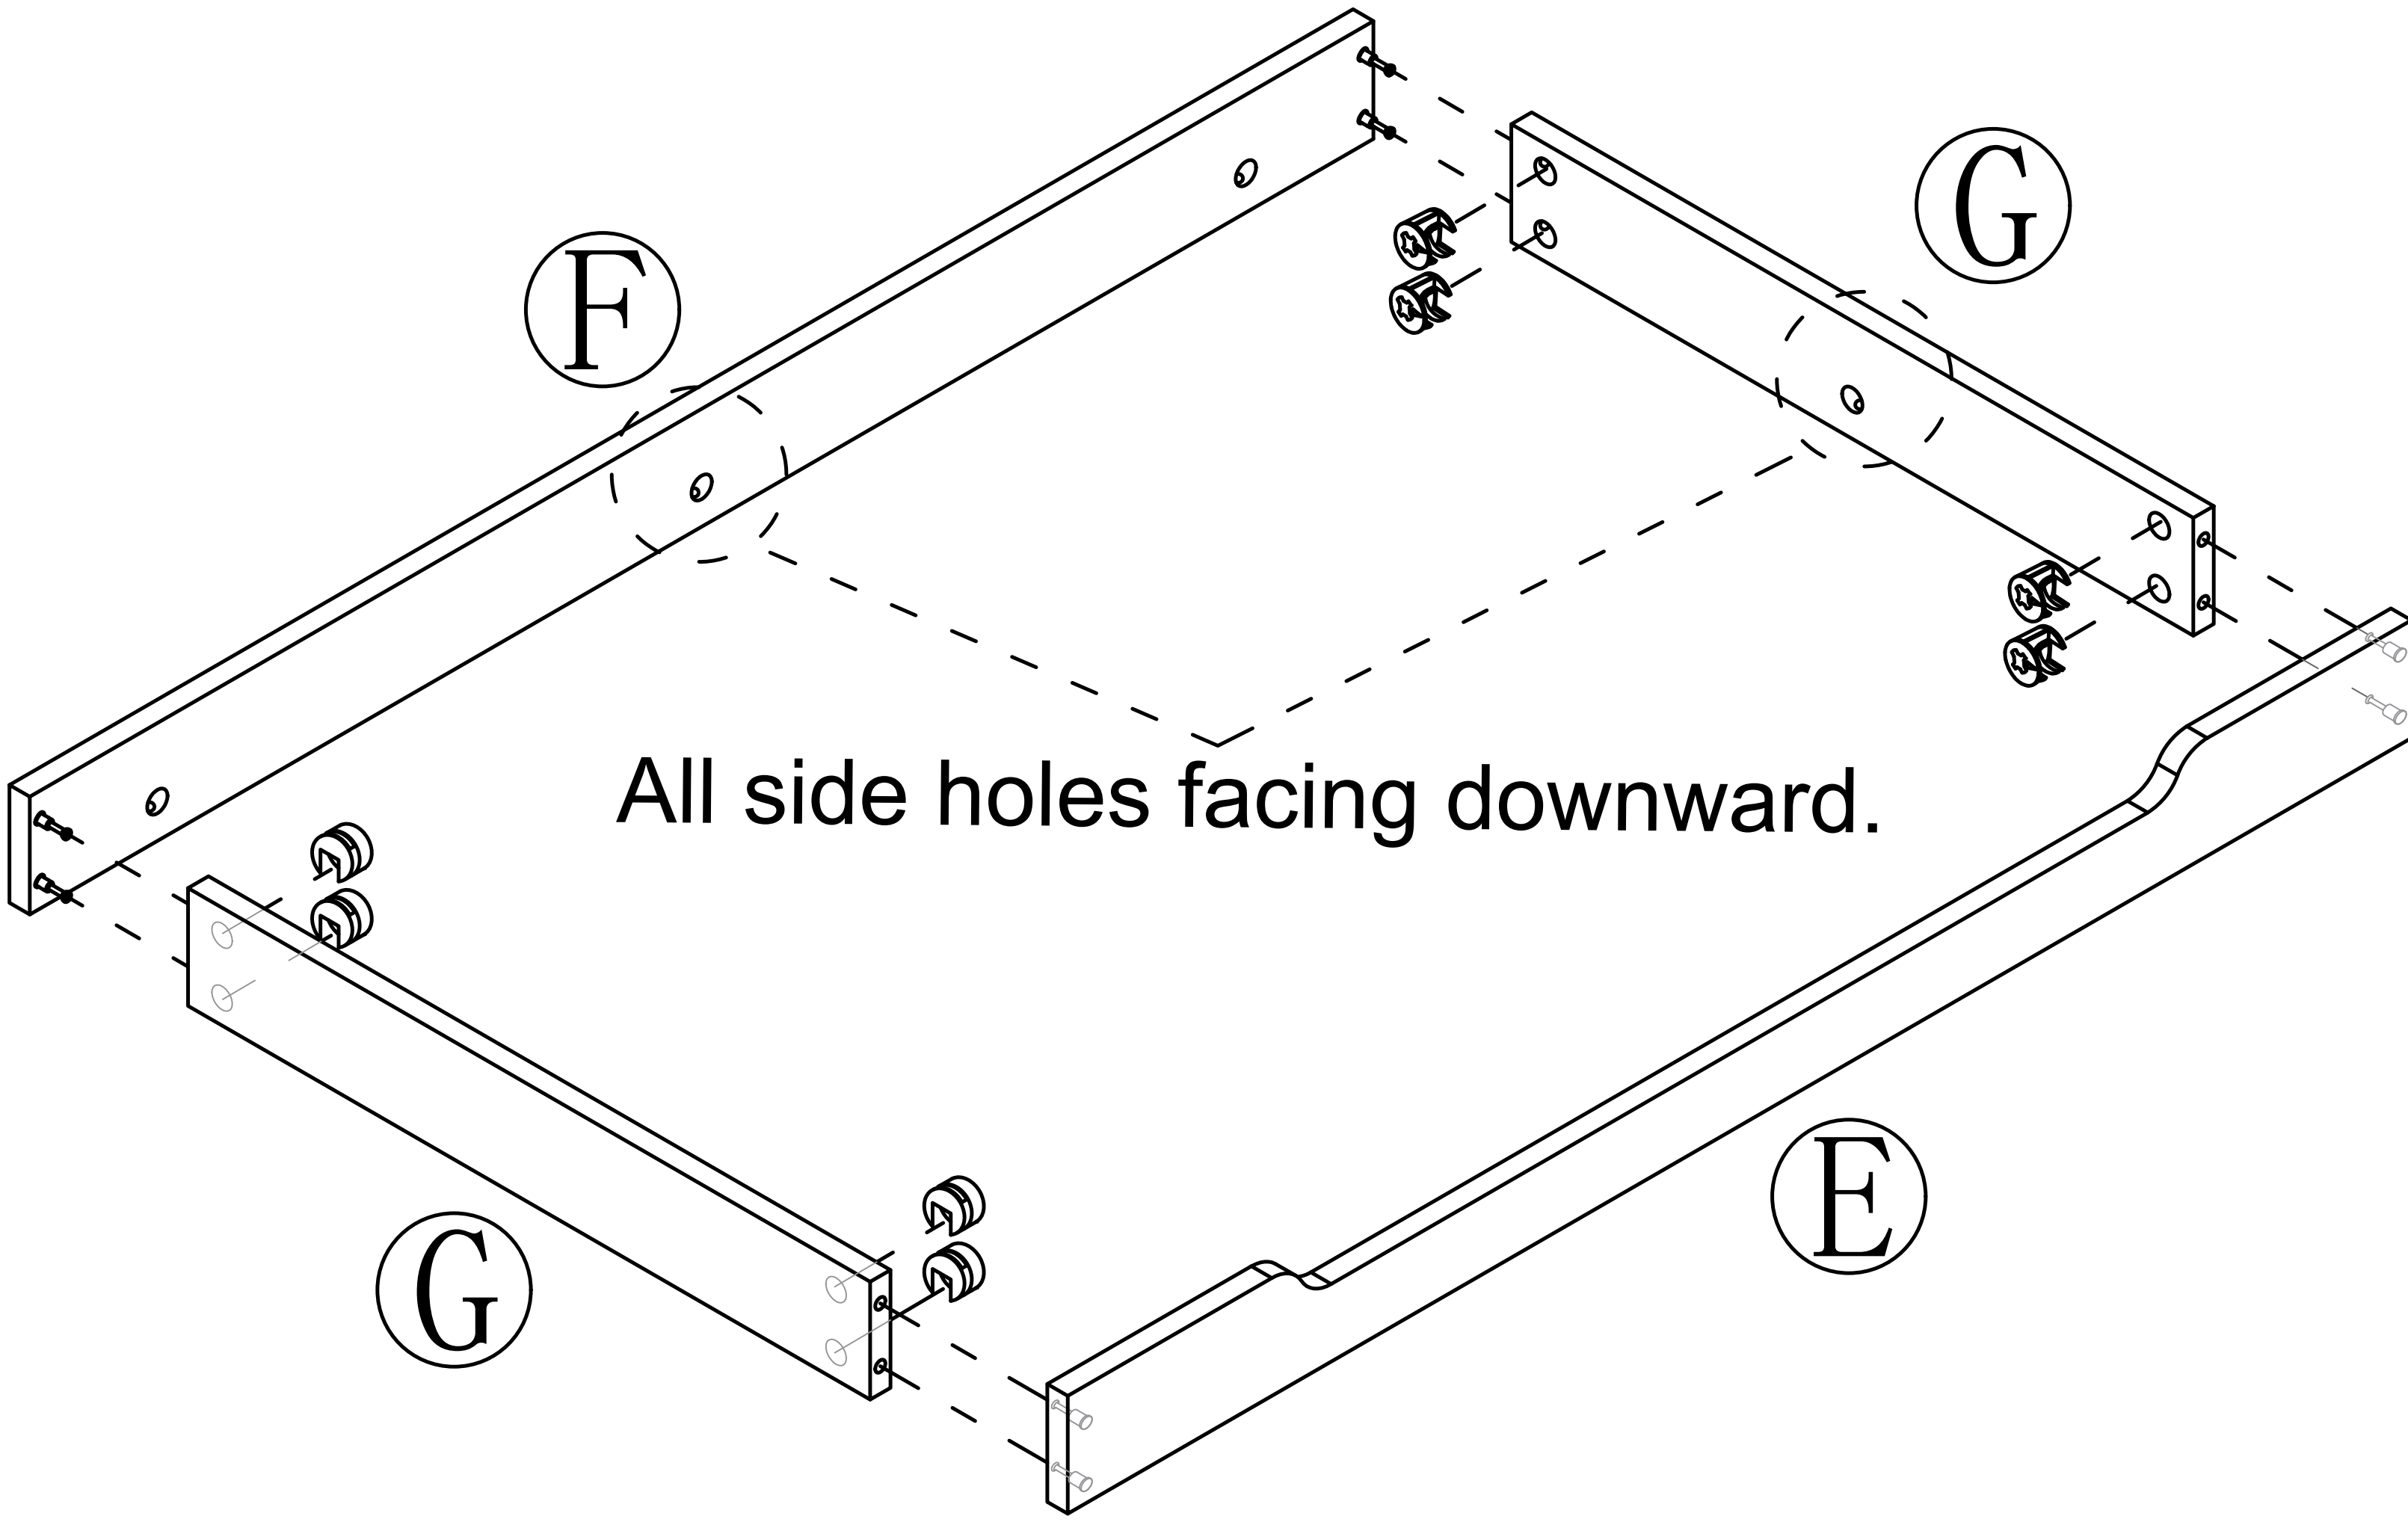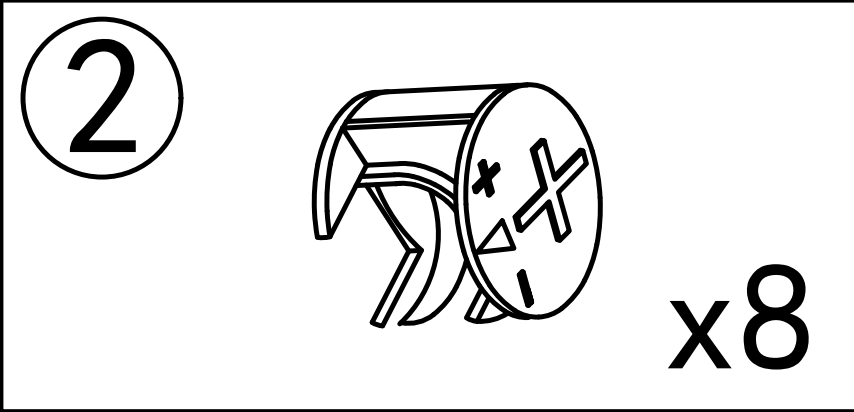

Step 10


1

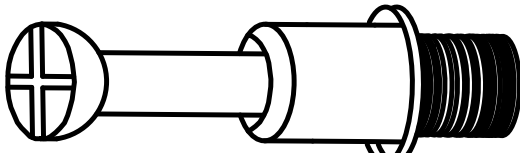
x8

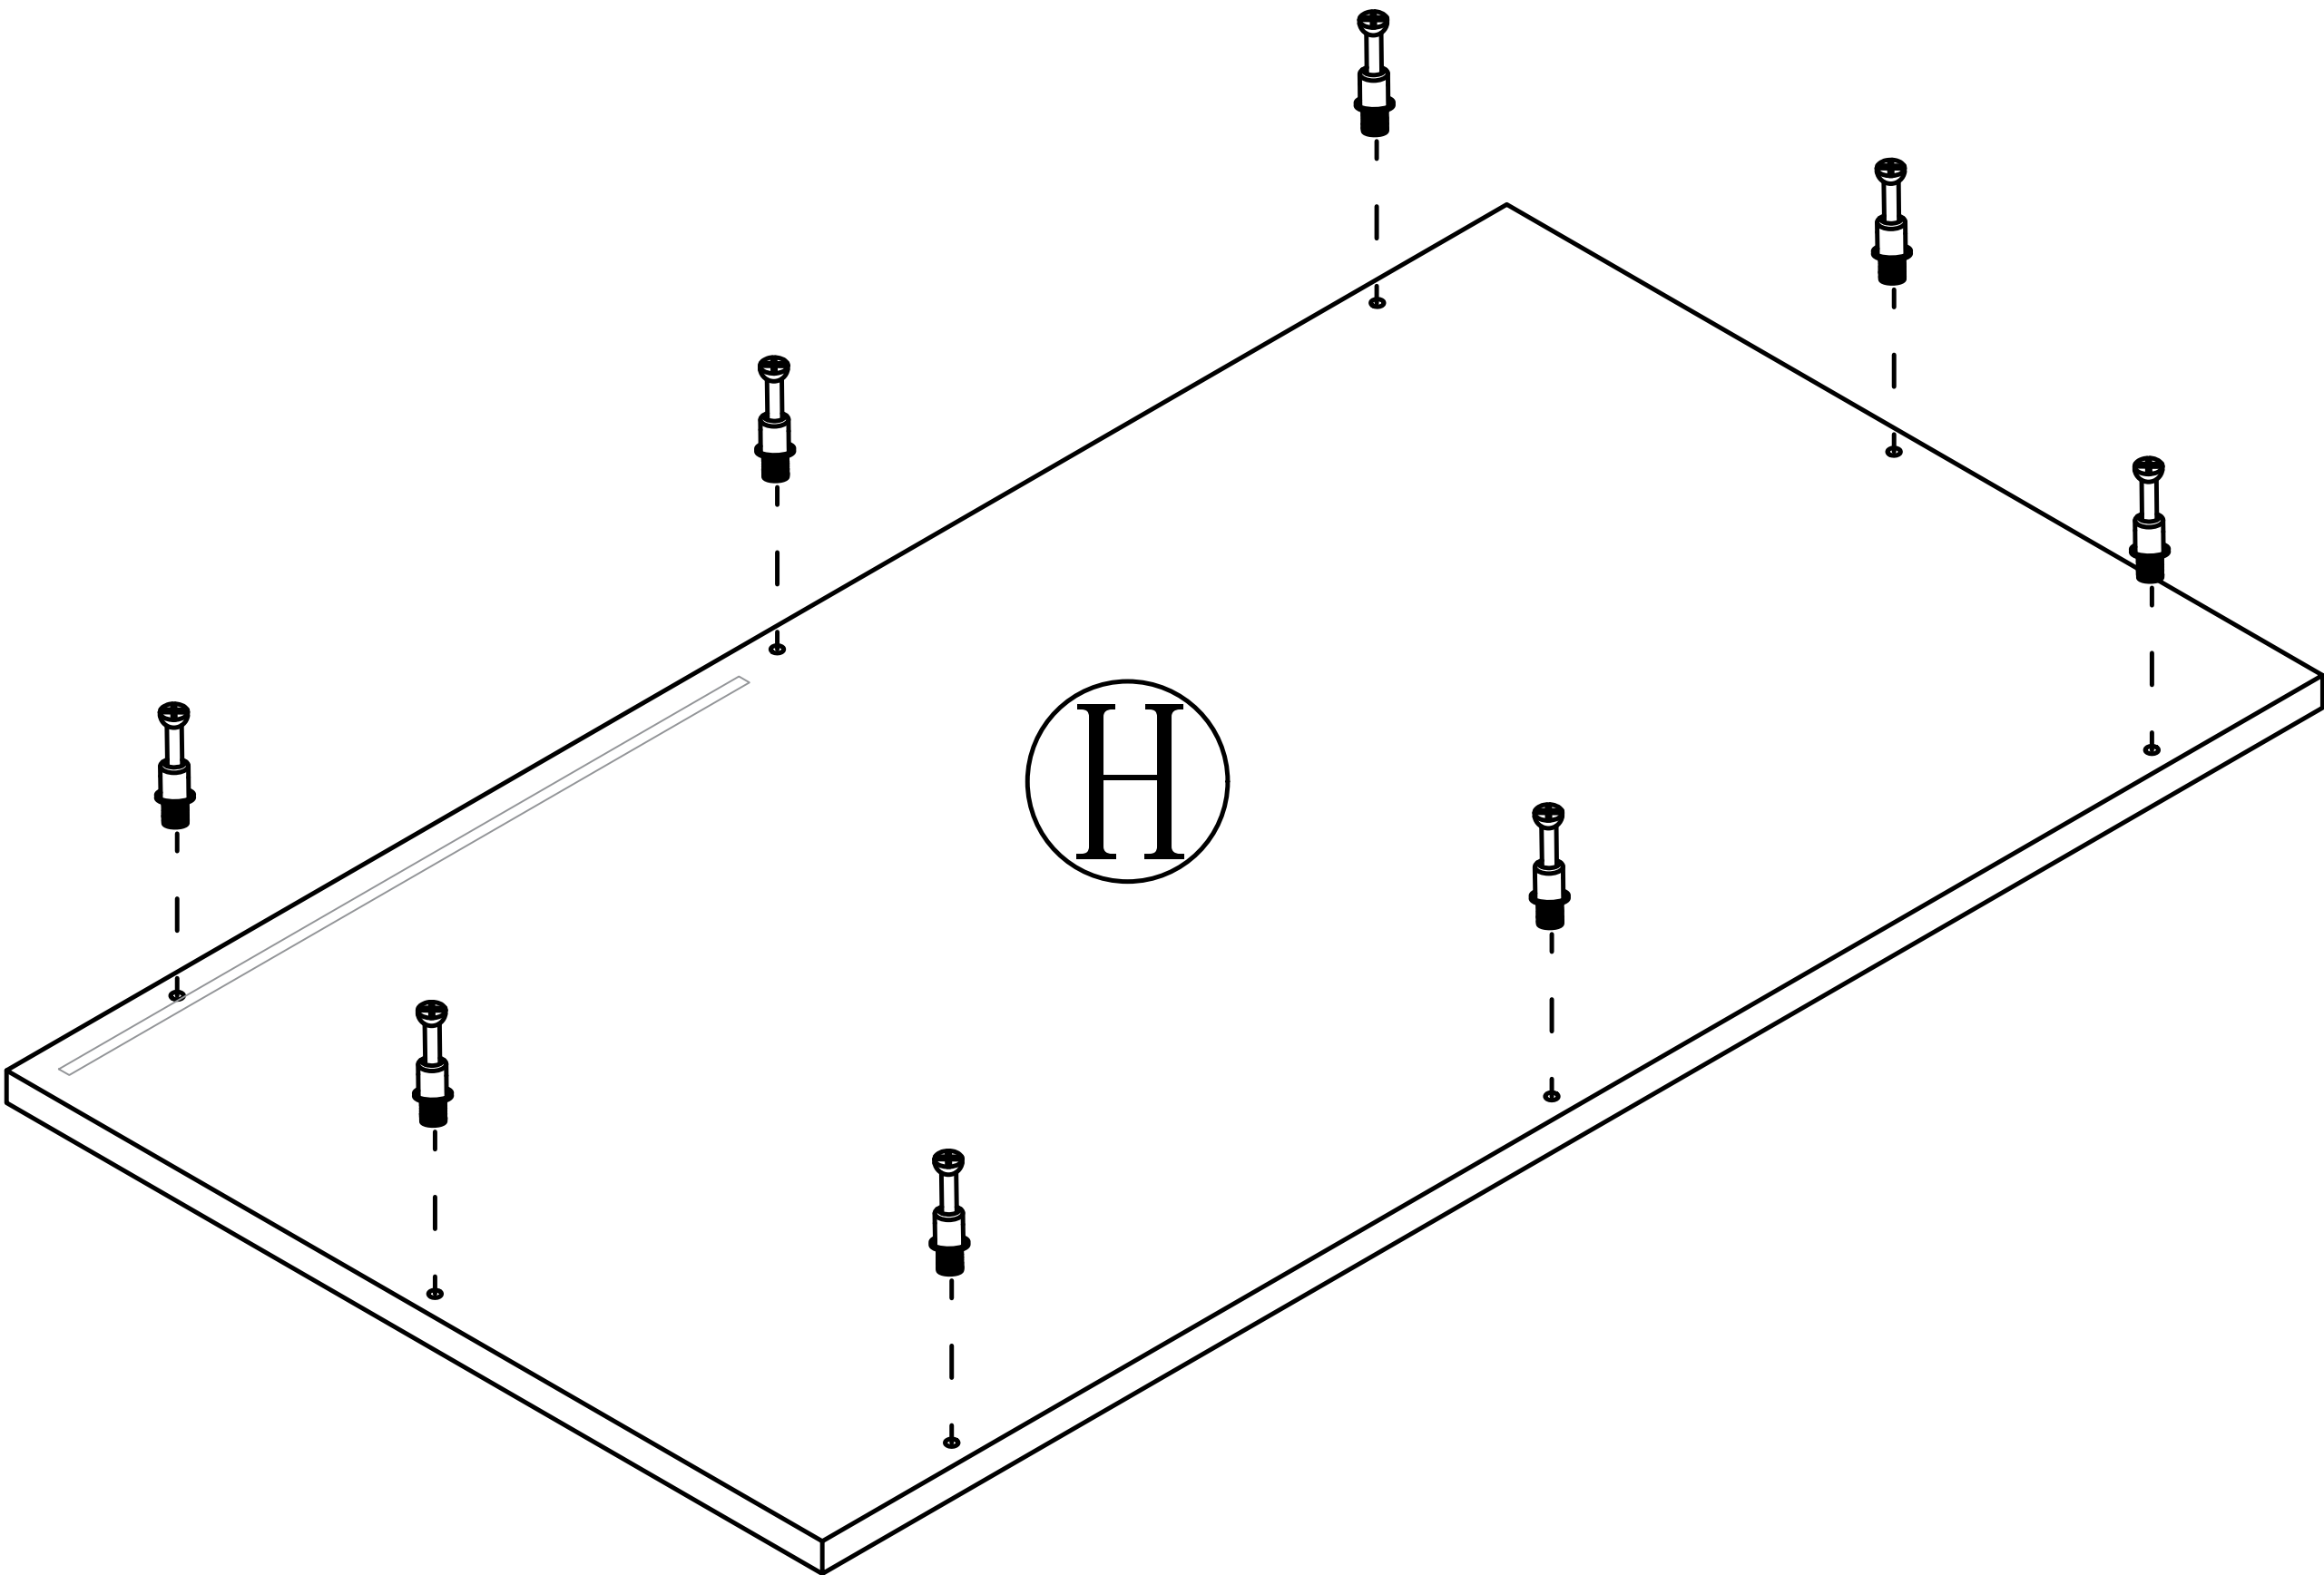

Step 11

2

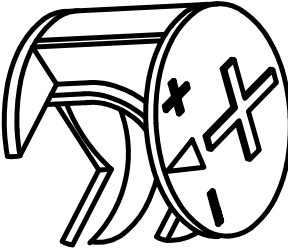
x8

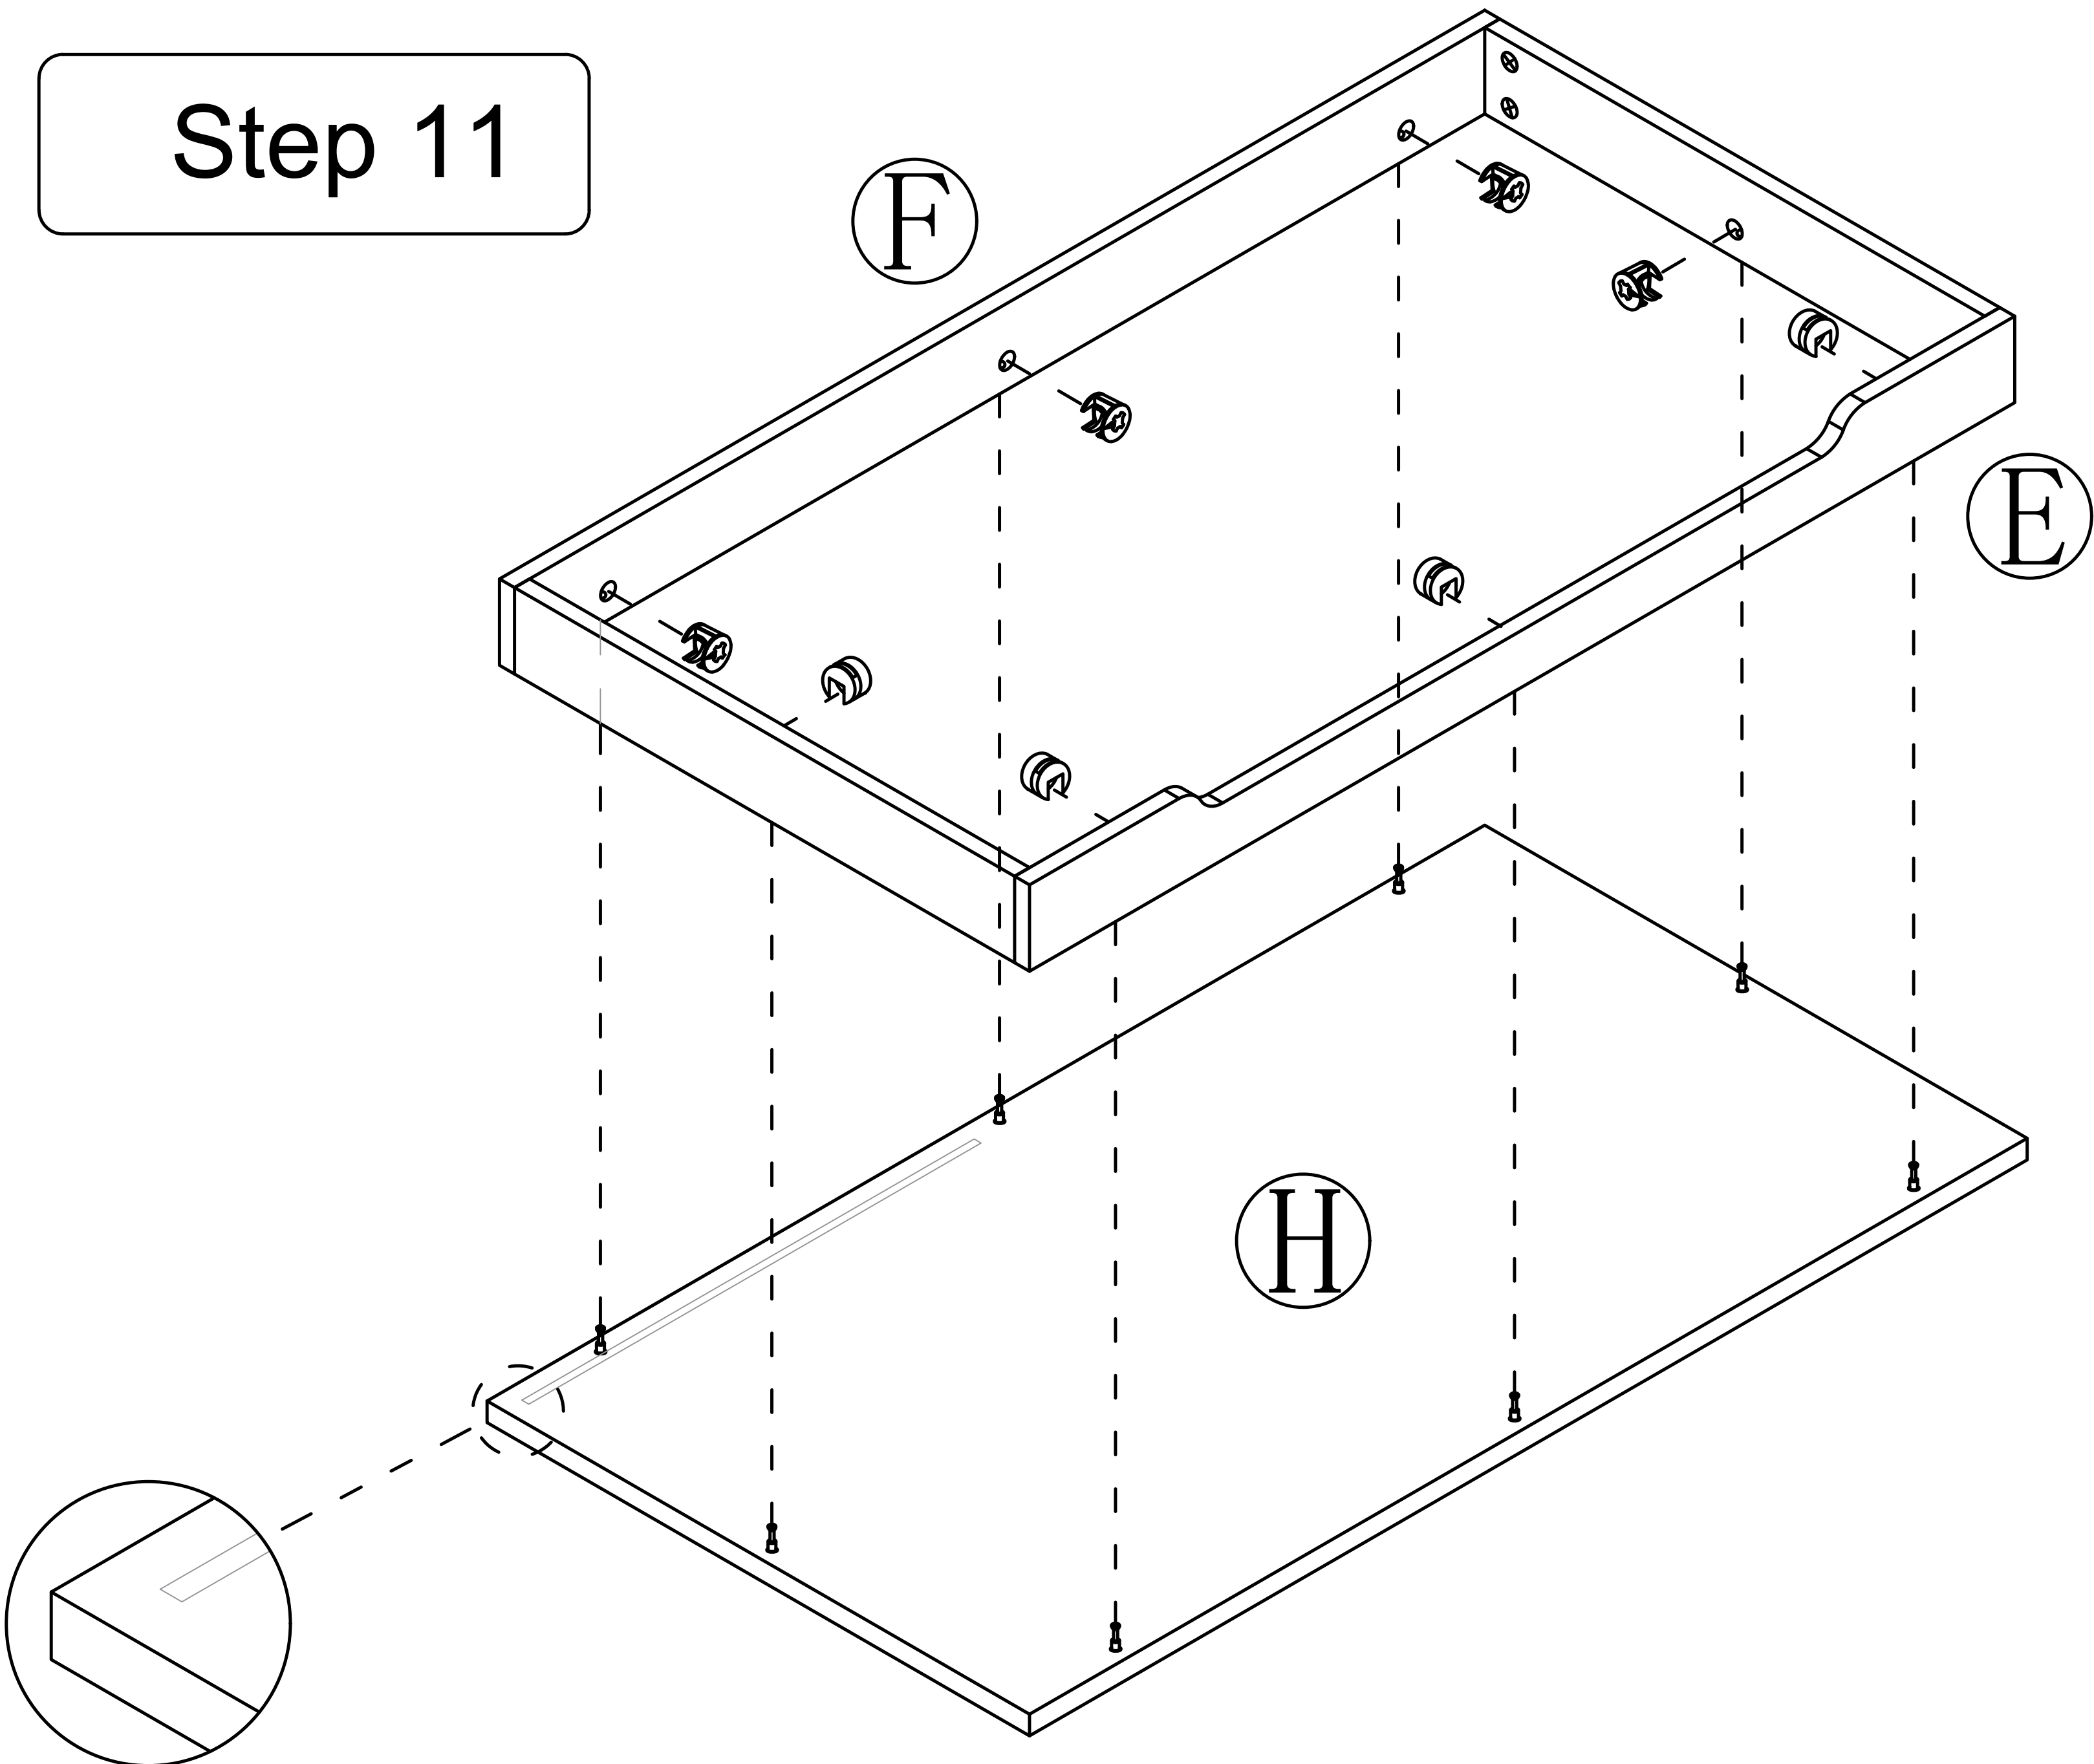

Pay attention to the position of the back slot.


Step 12

6

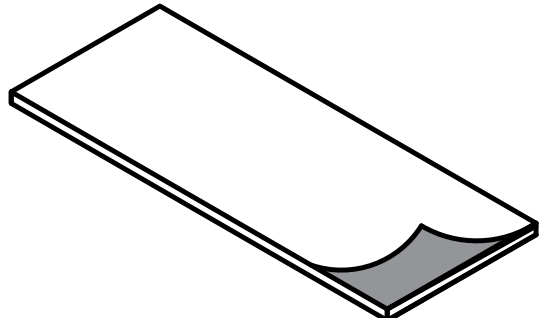


x5

Tear off release paper and stick the black foot pad on the board

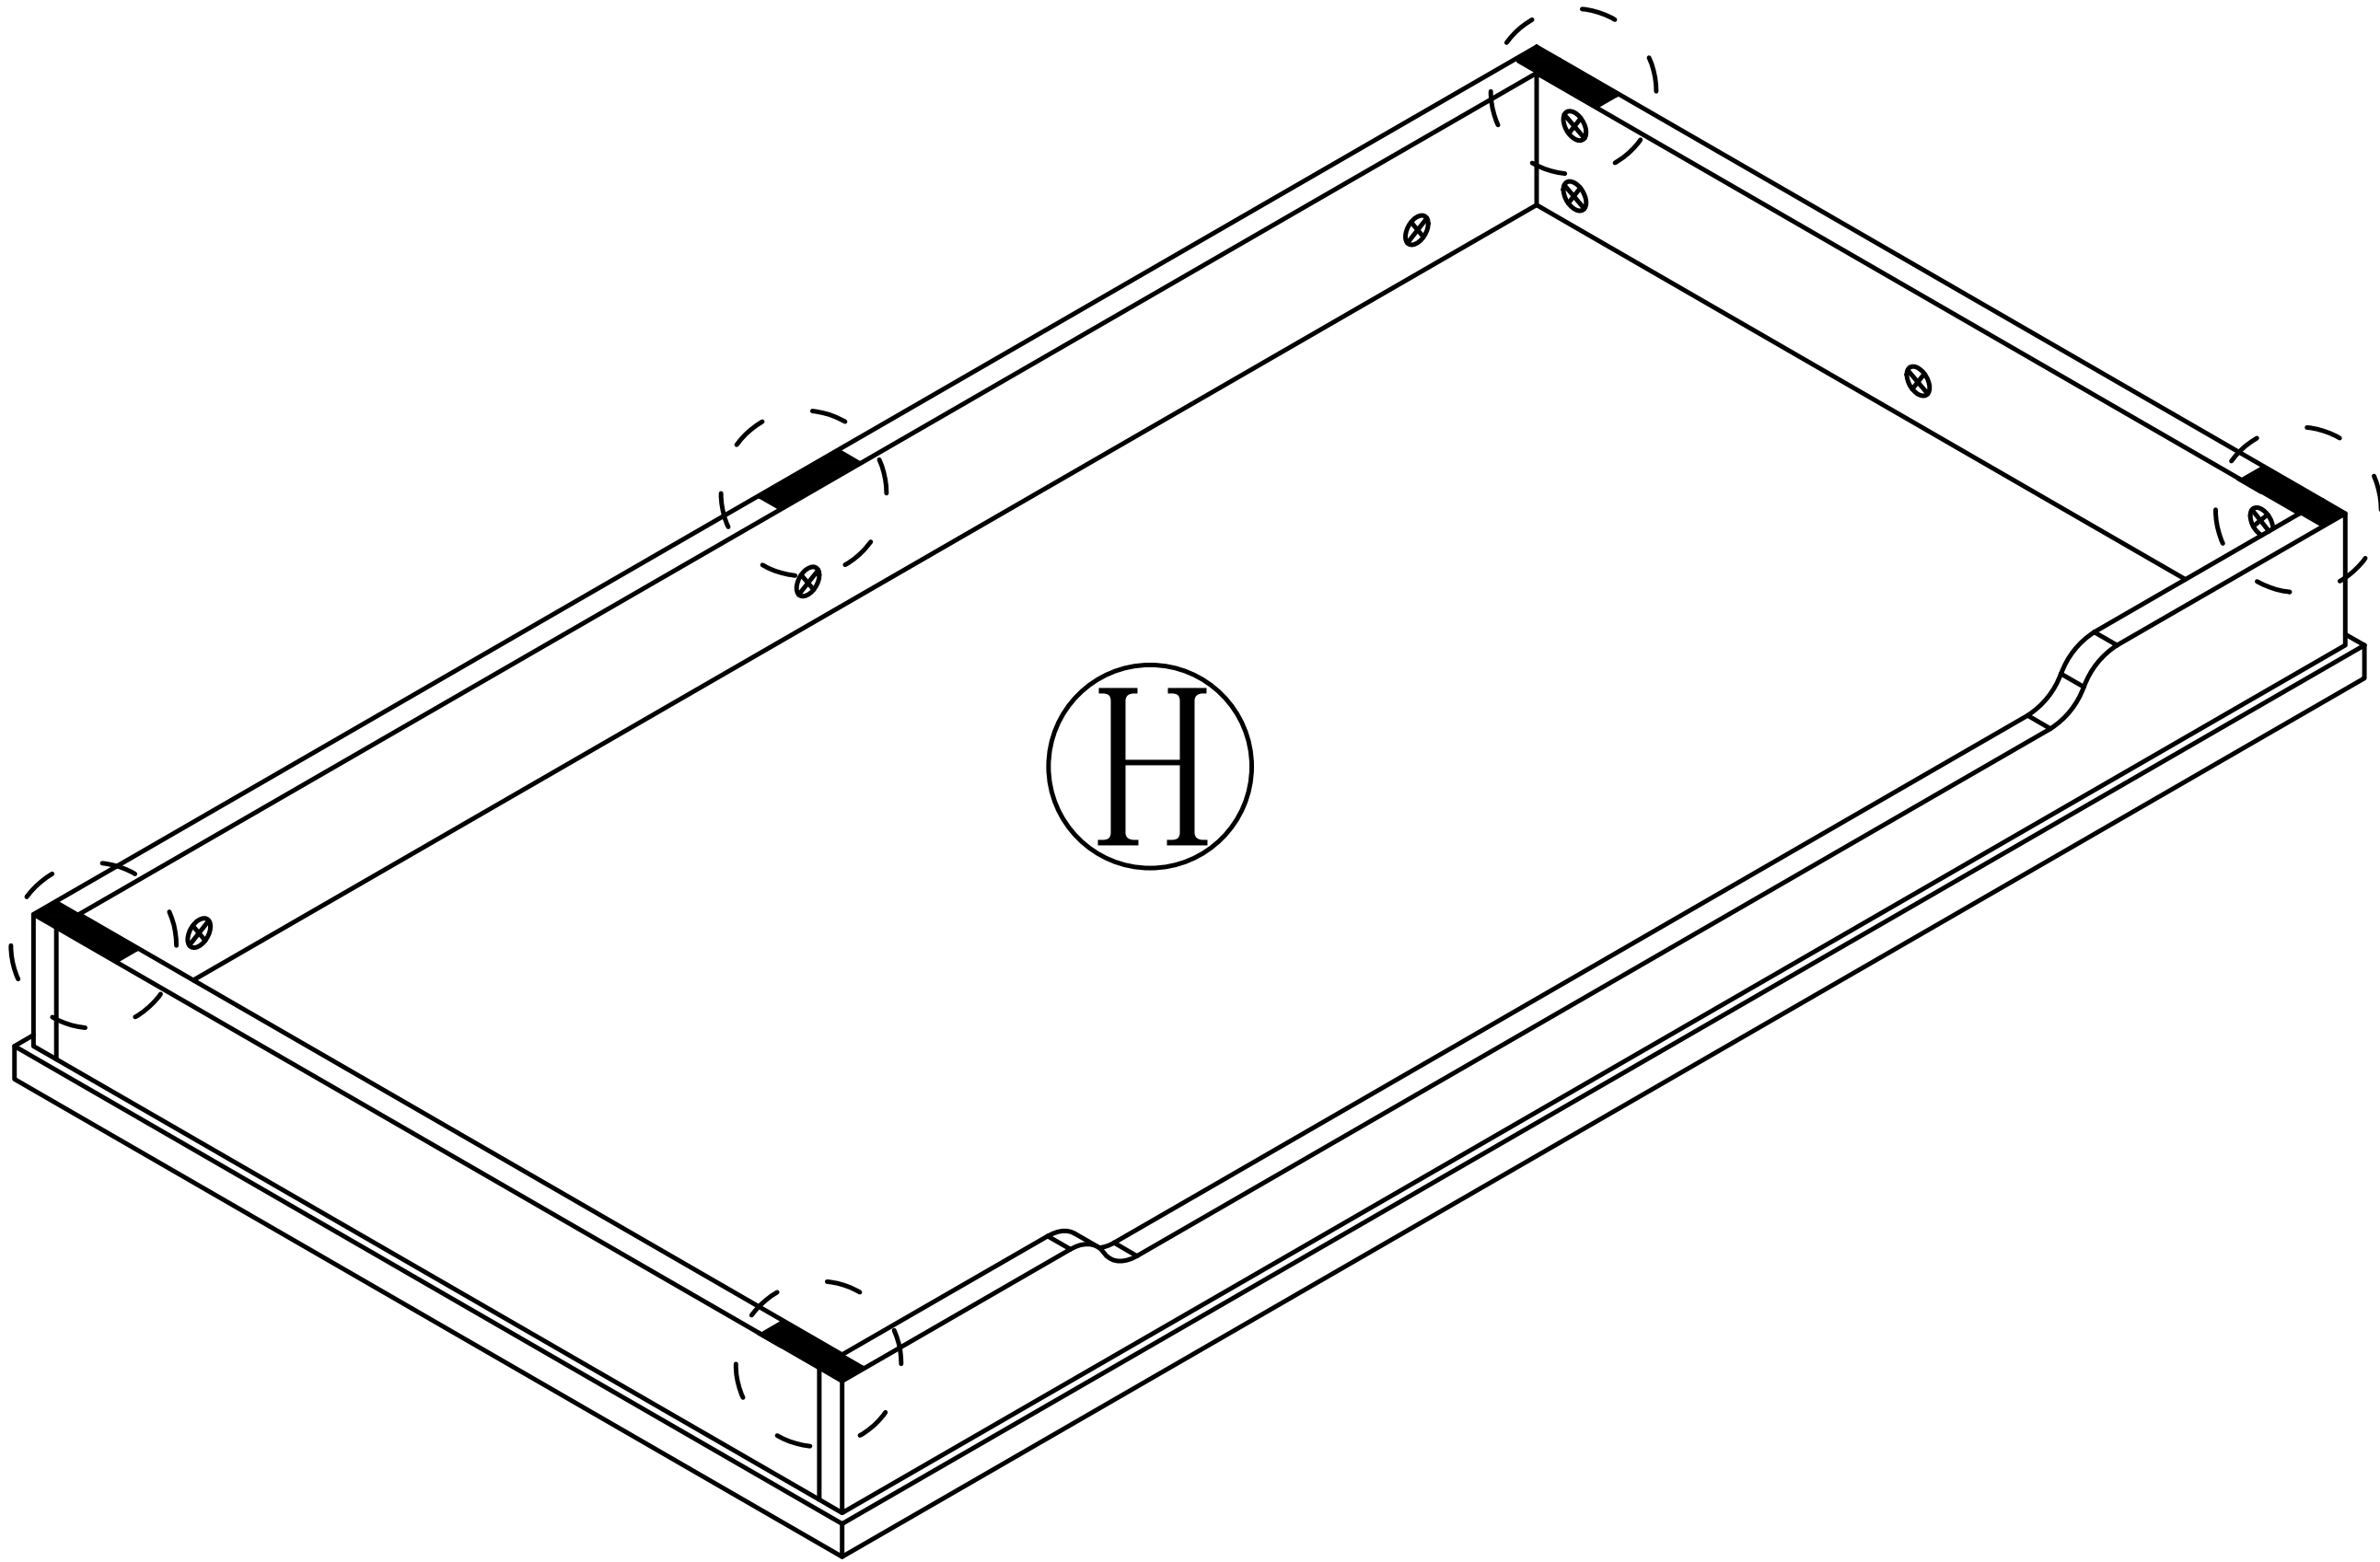


Step 13

1

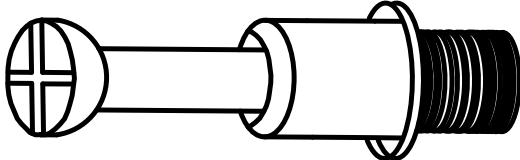


x6



3

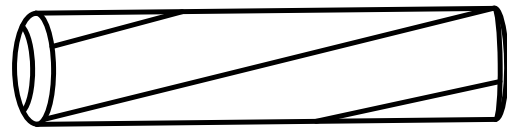



x6

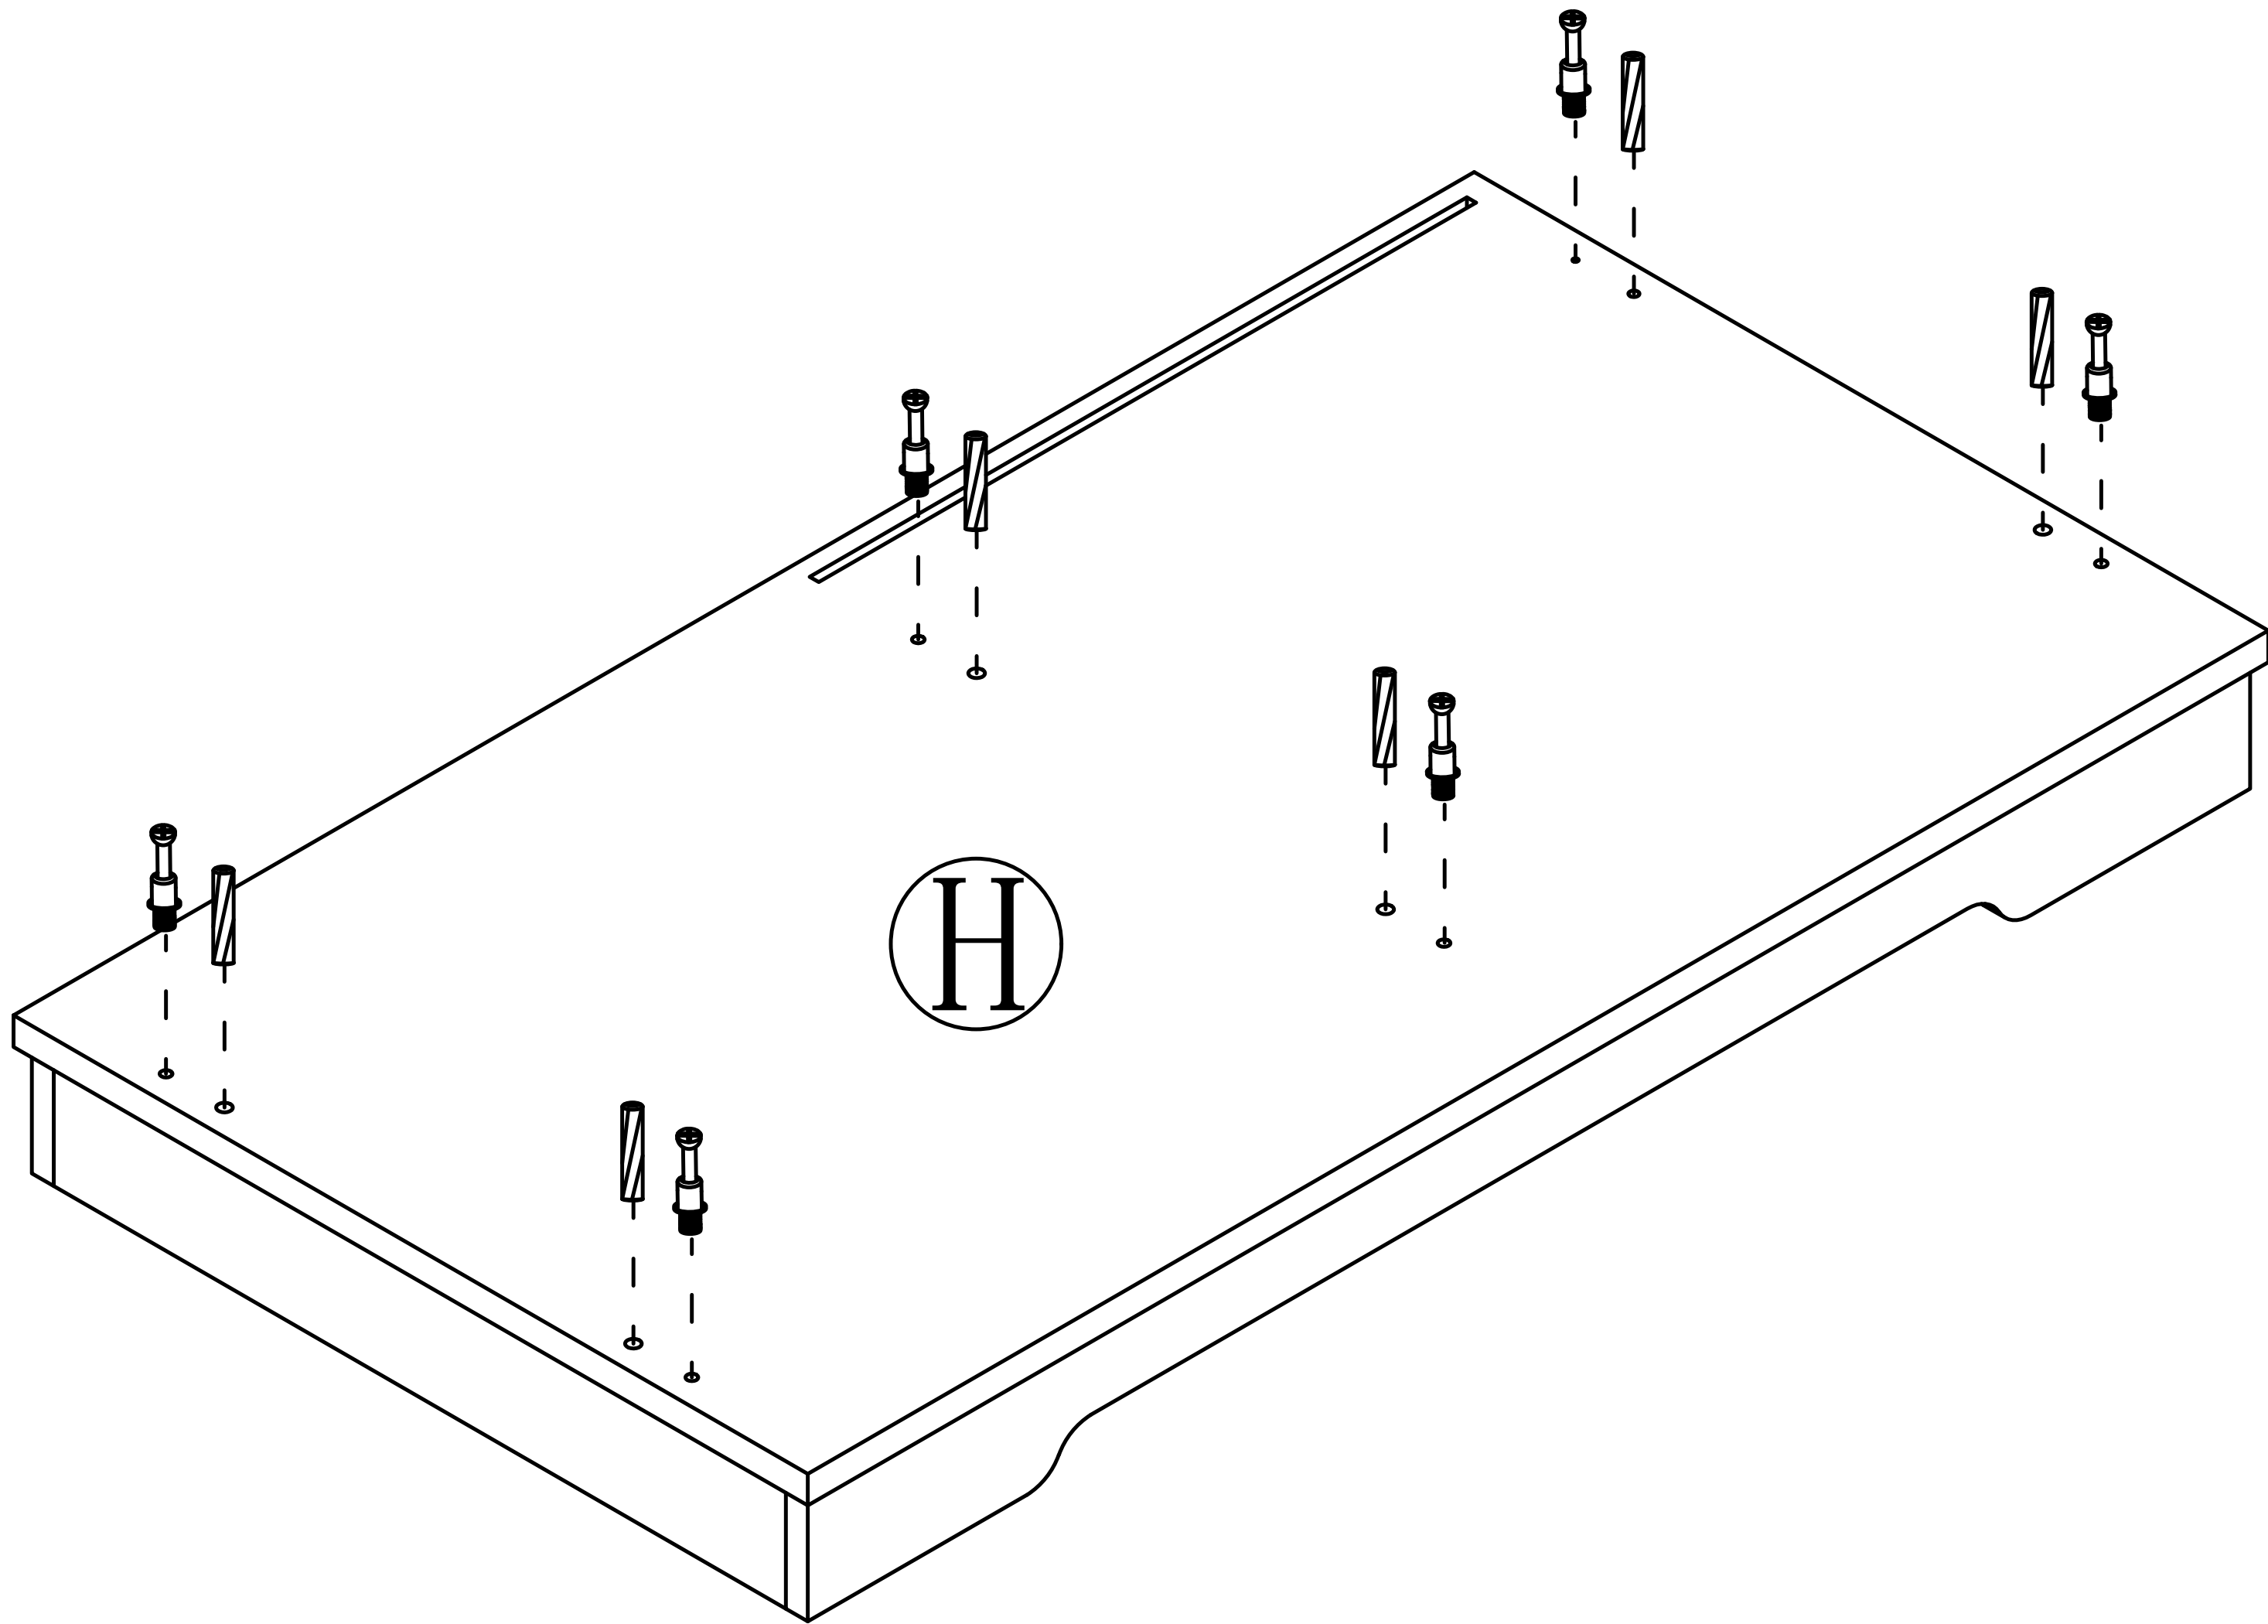



Step 14

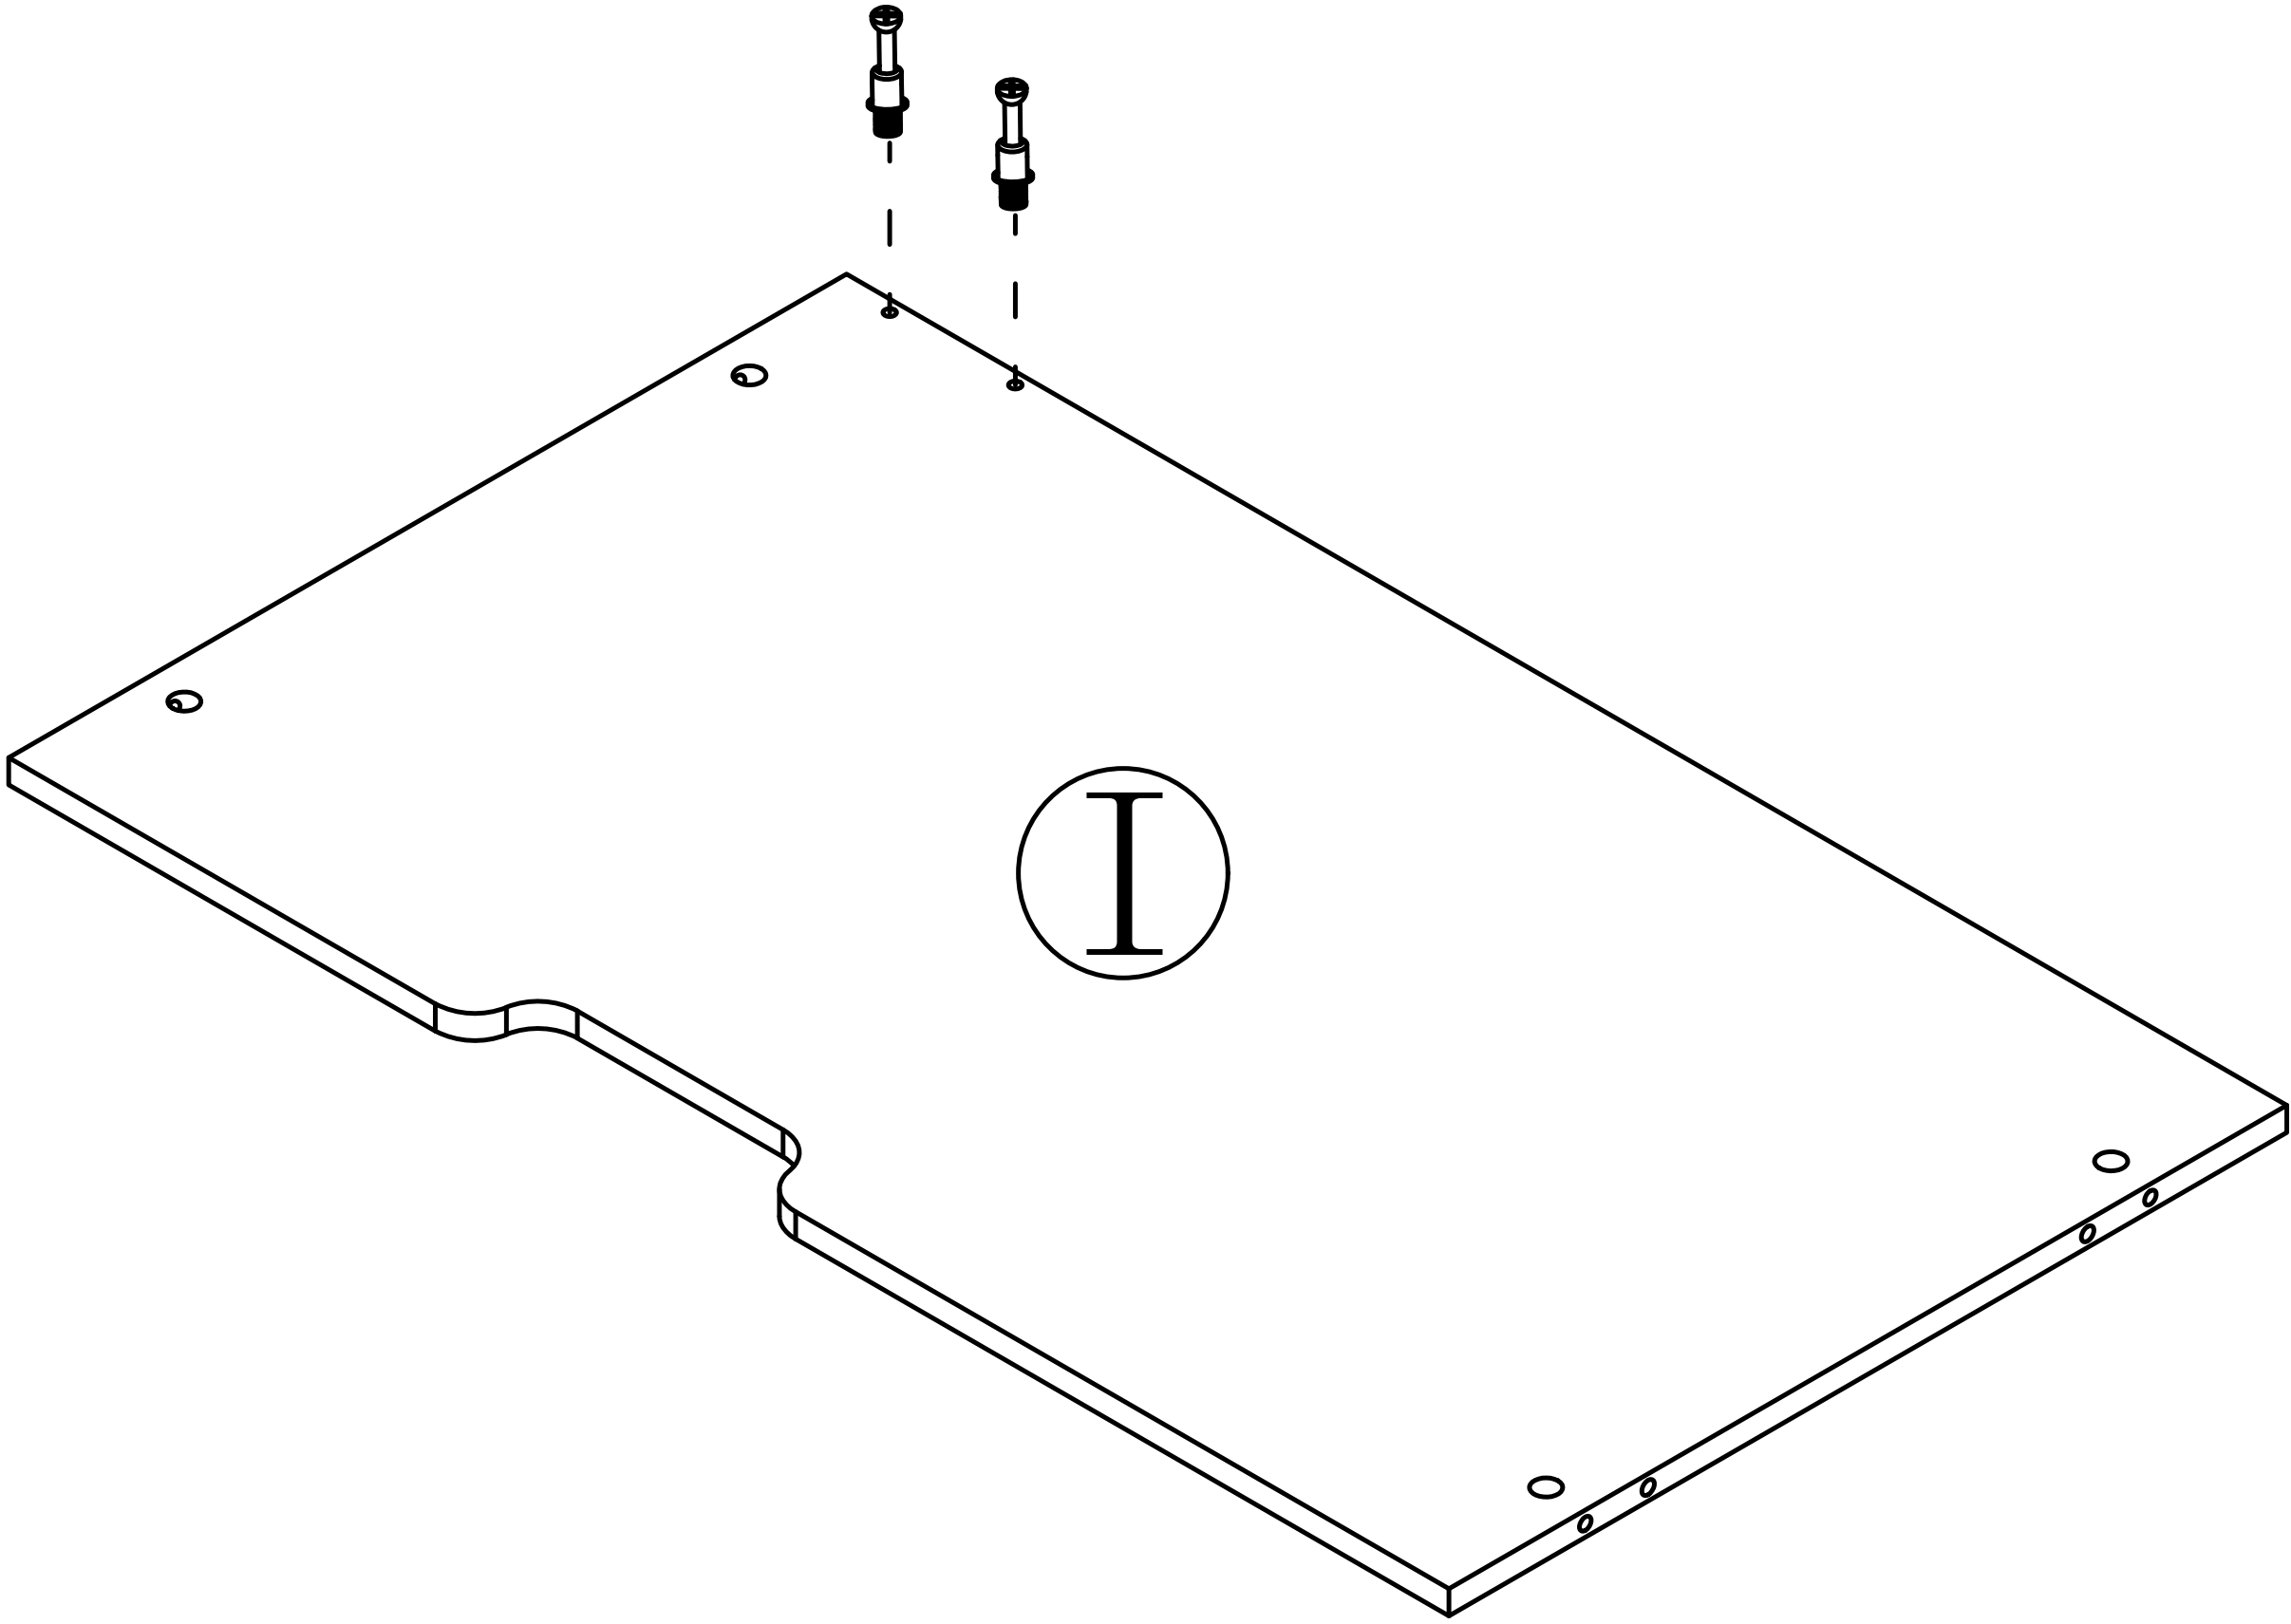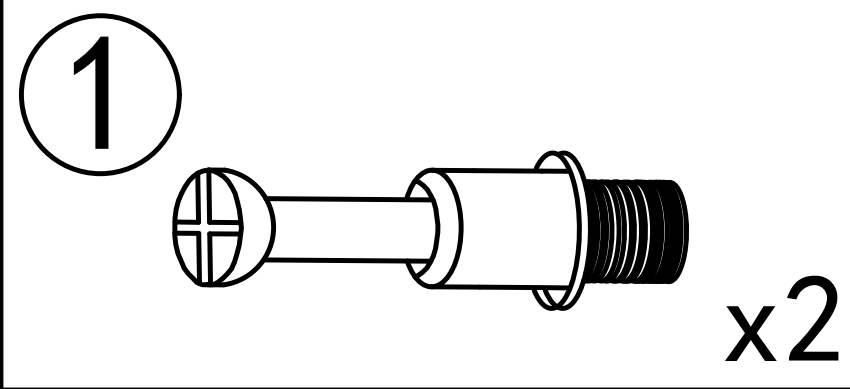

Step 15

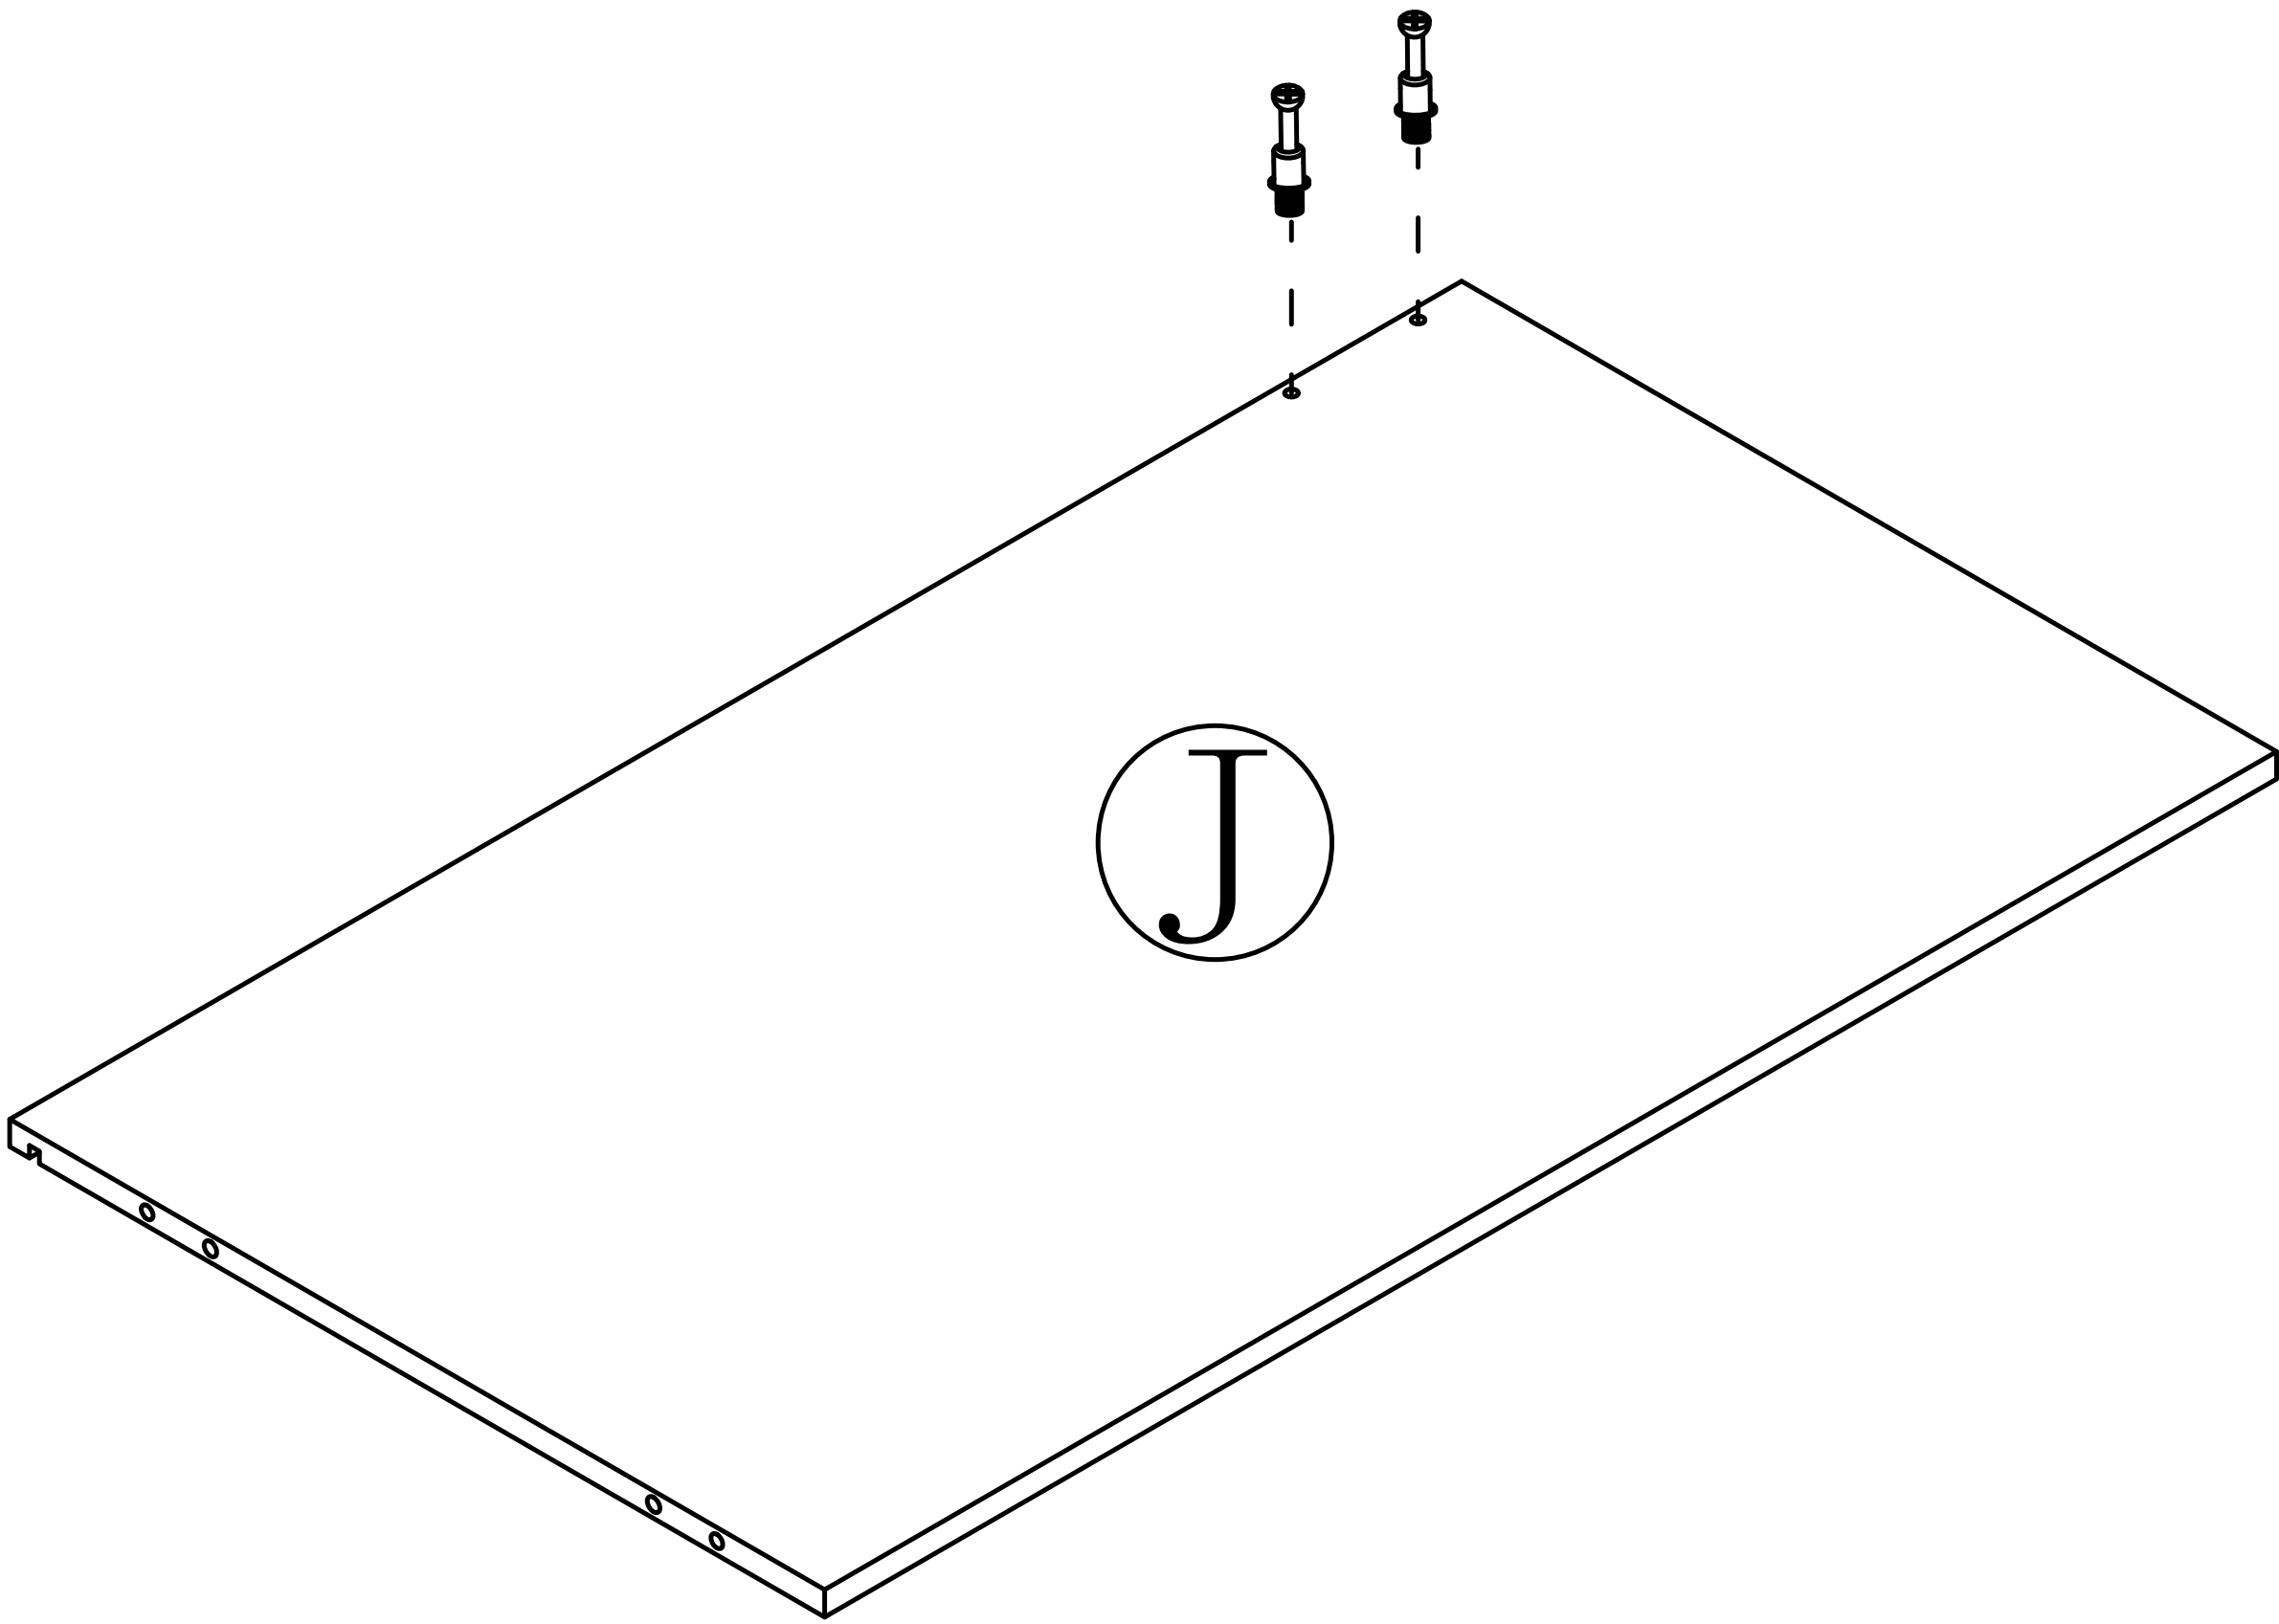
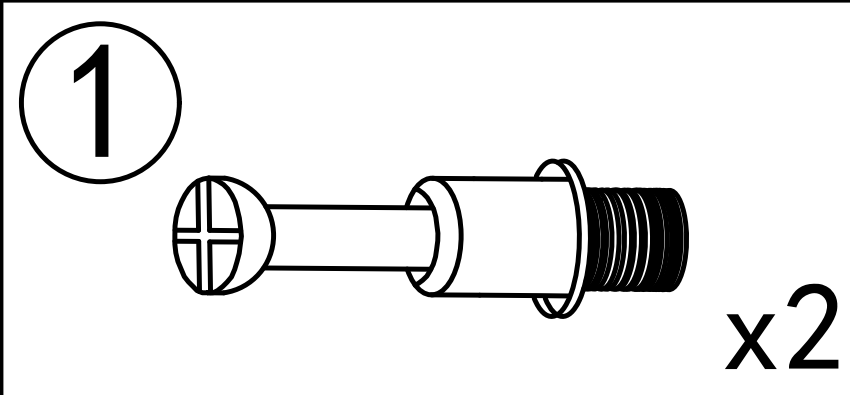


Step 16

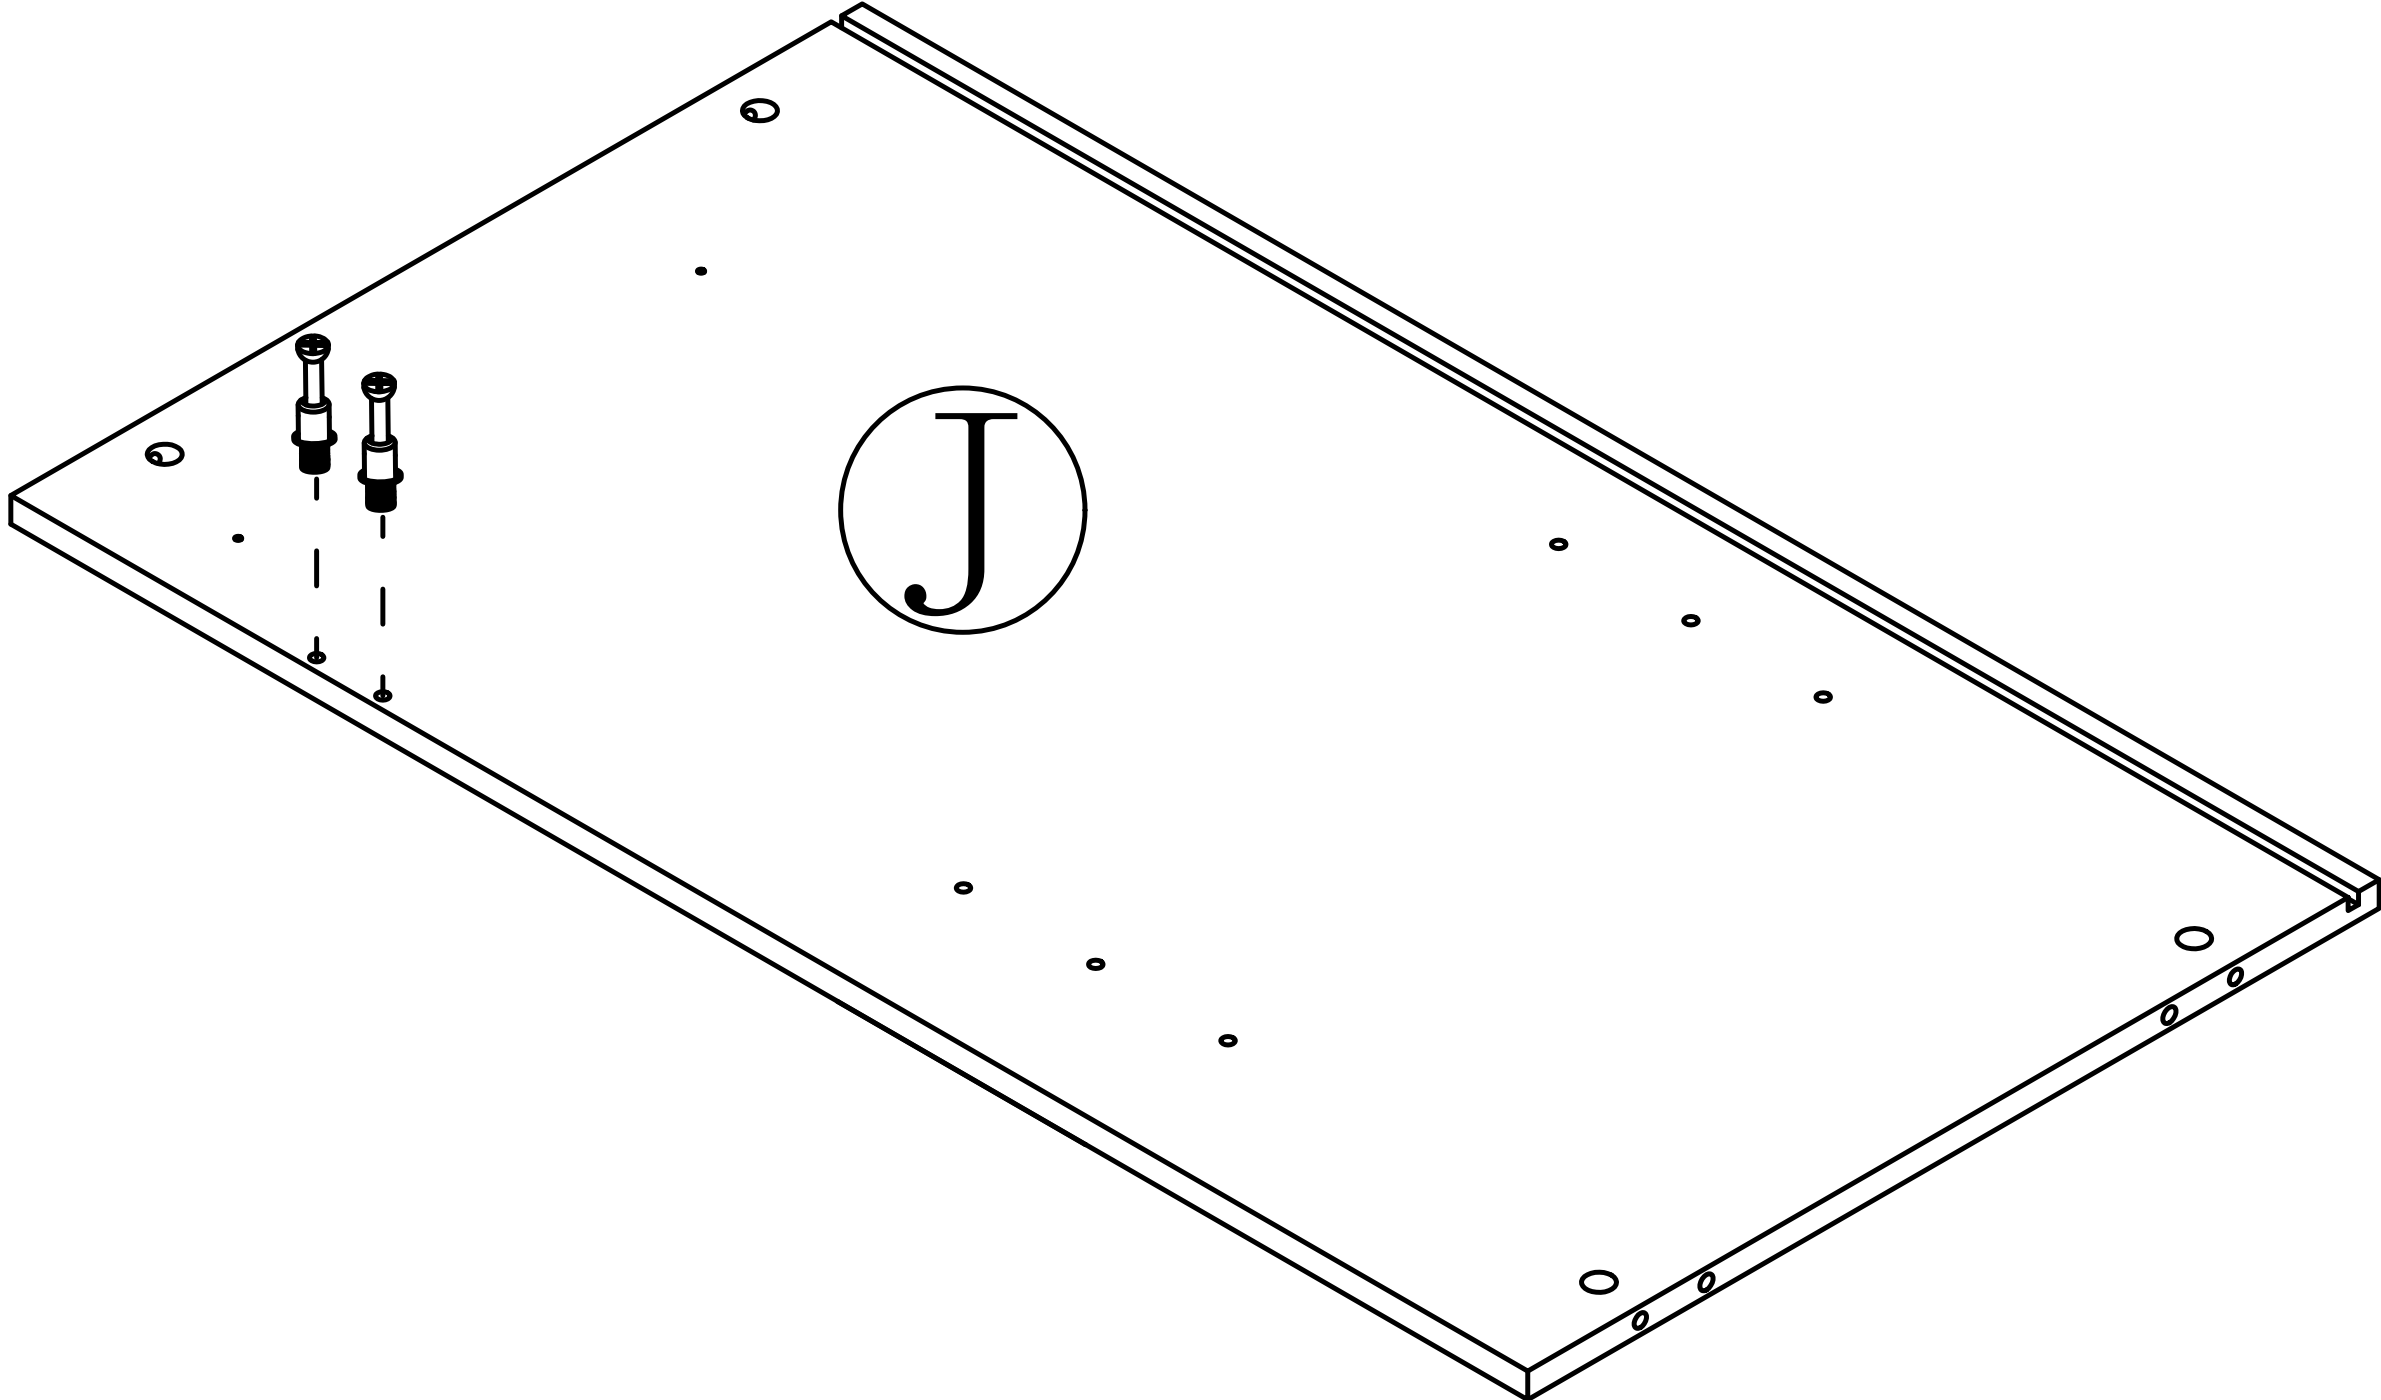
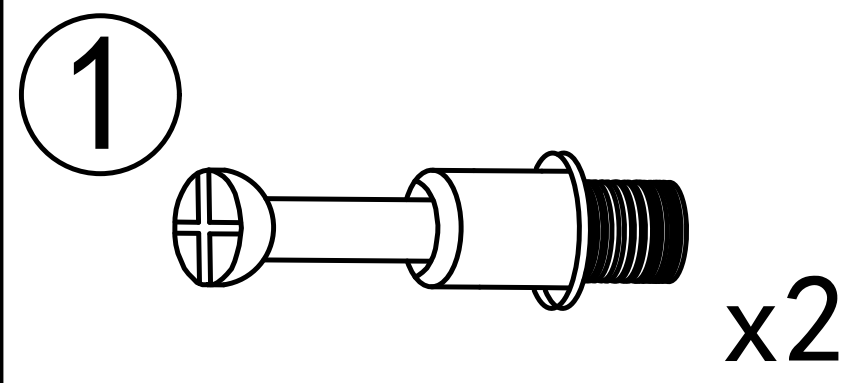


Step 17


This hole is a reinforced fixing hole which can be installed as required

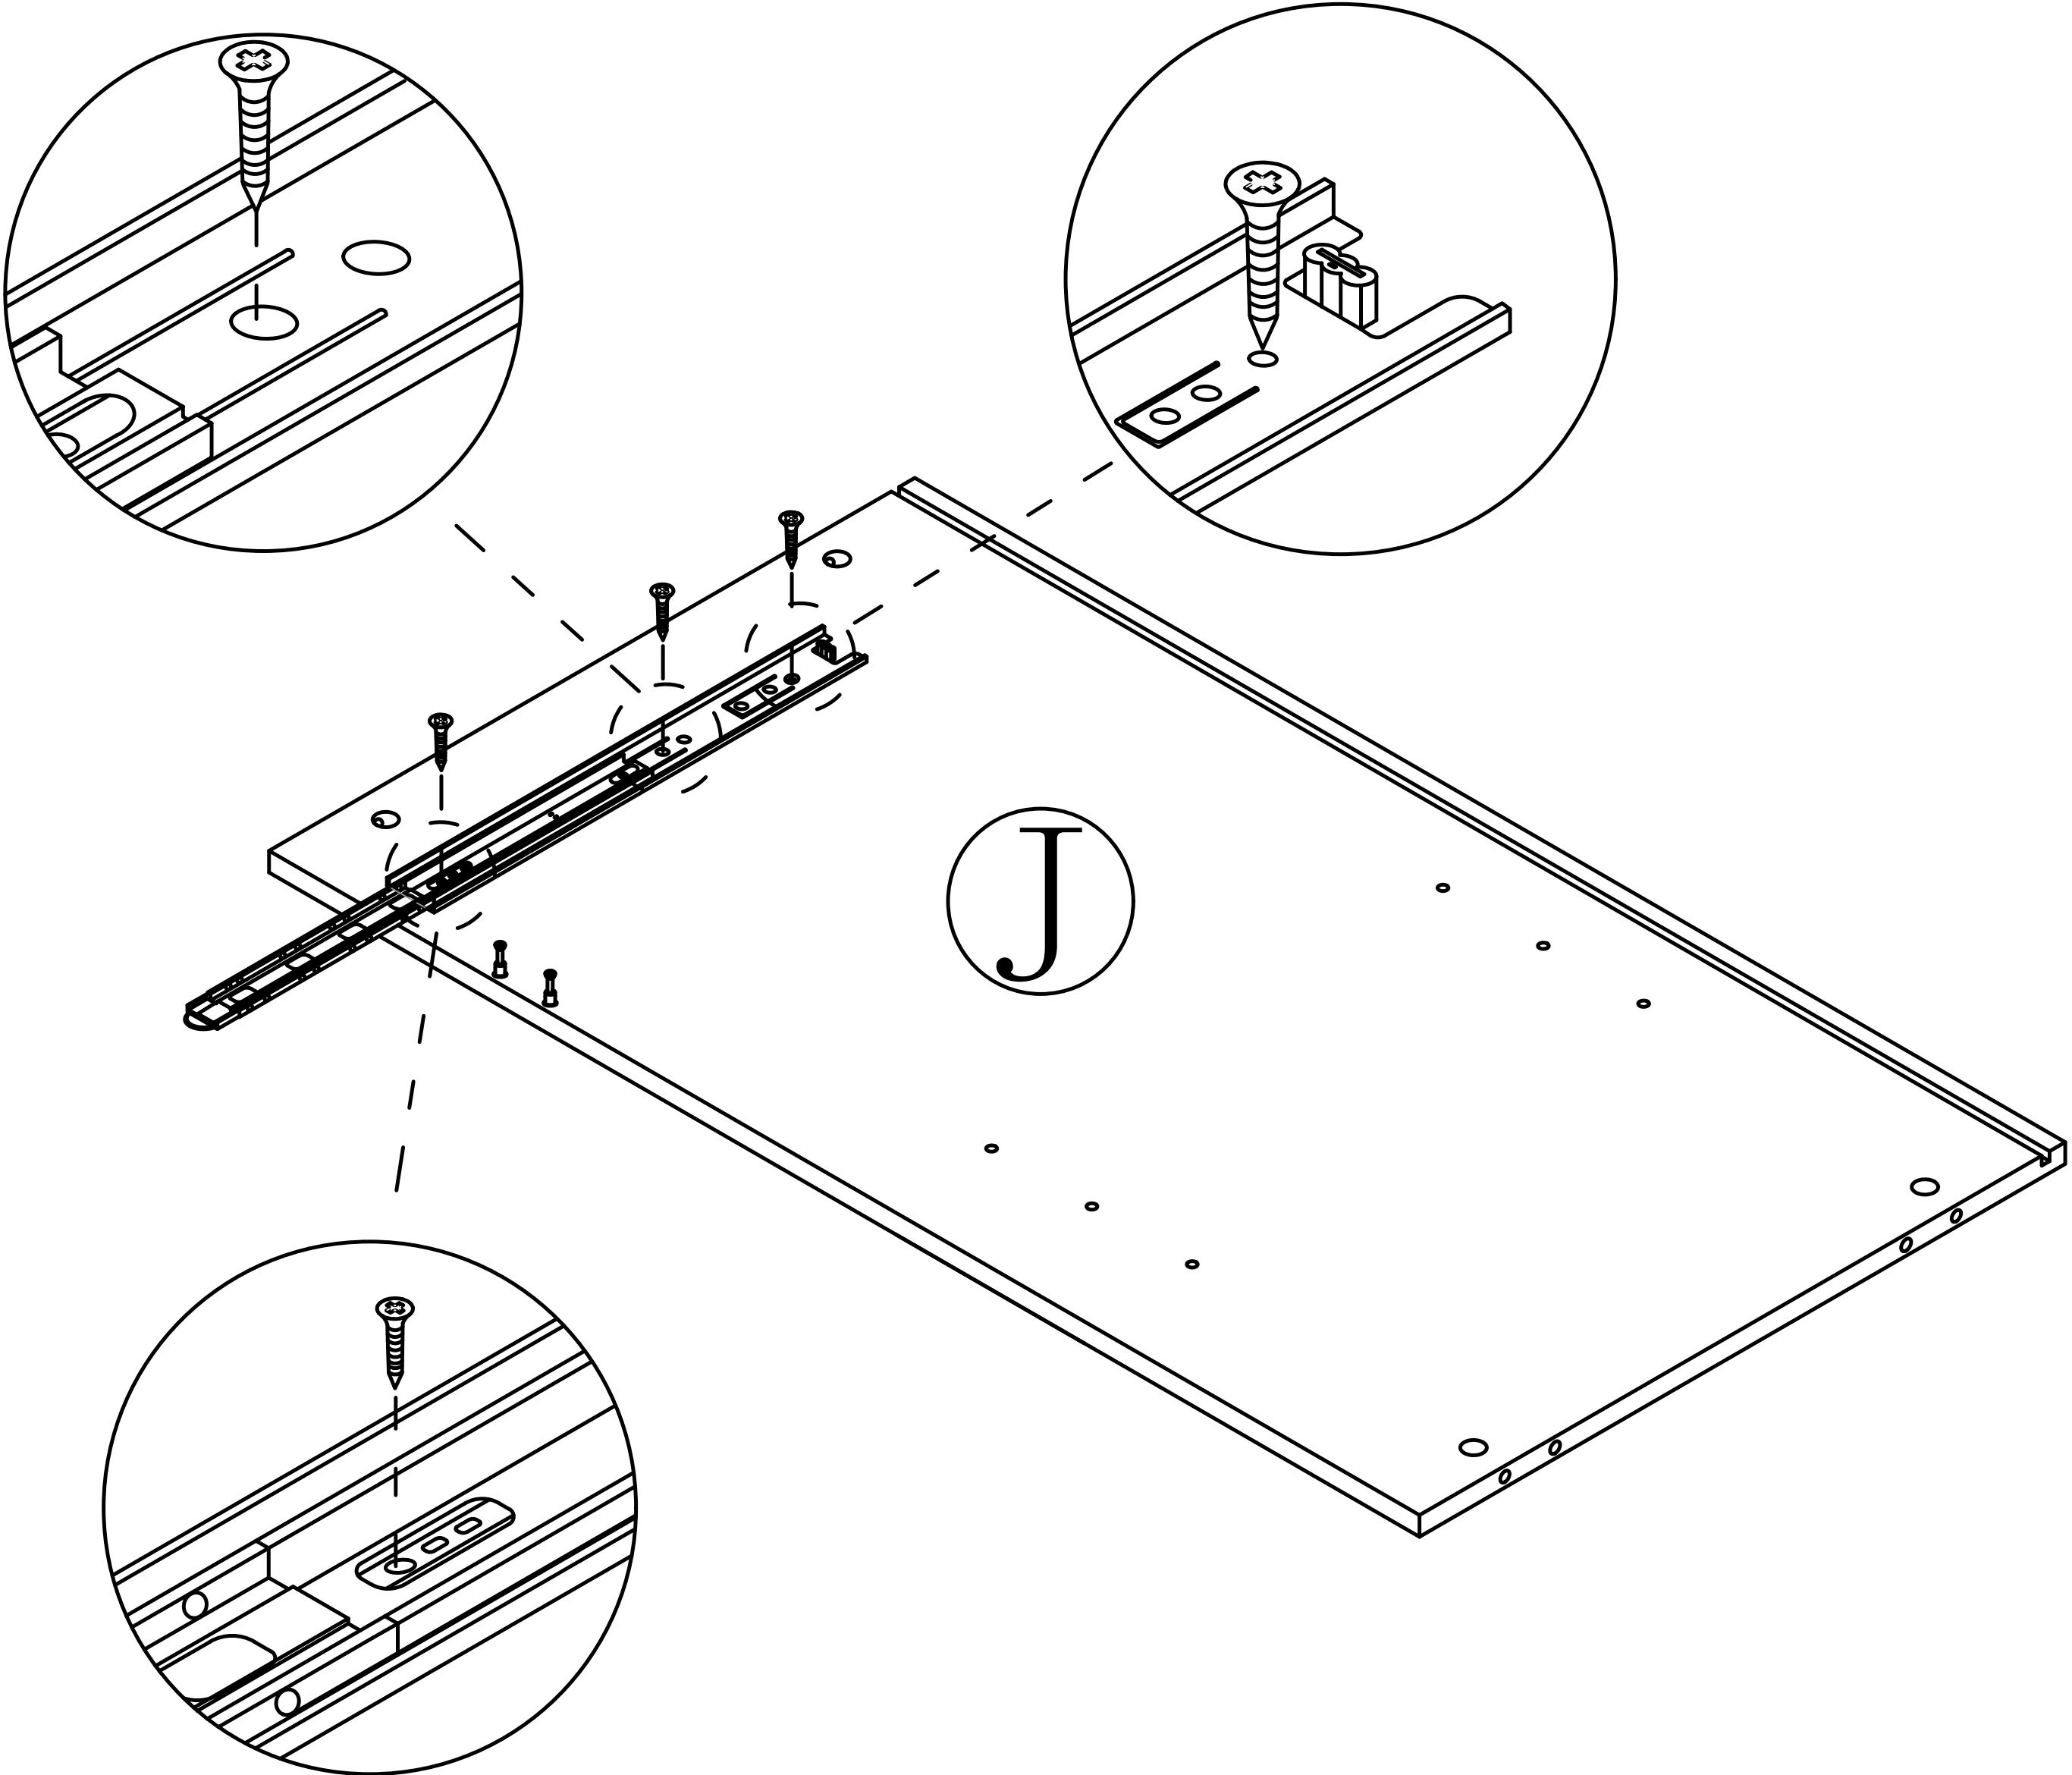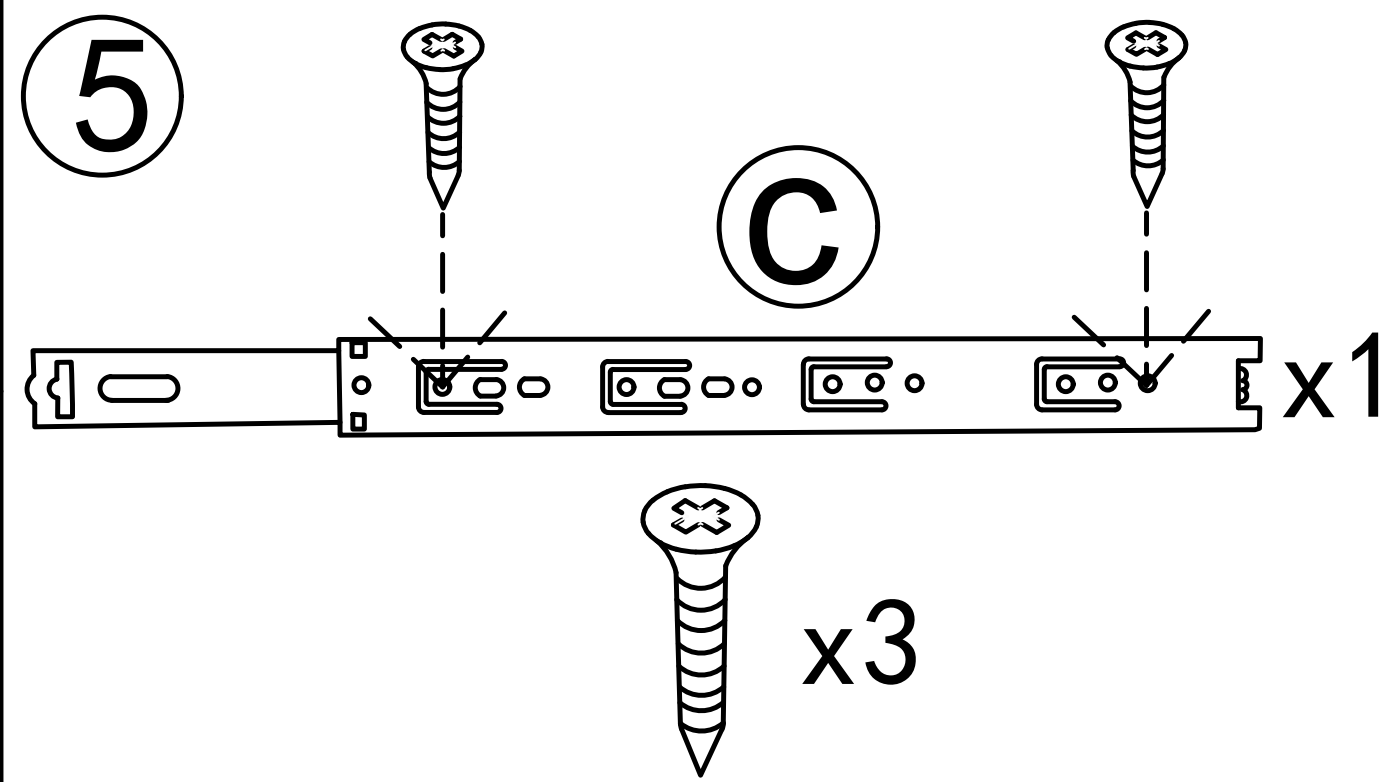


Step 18

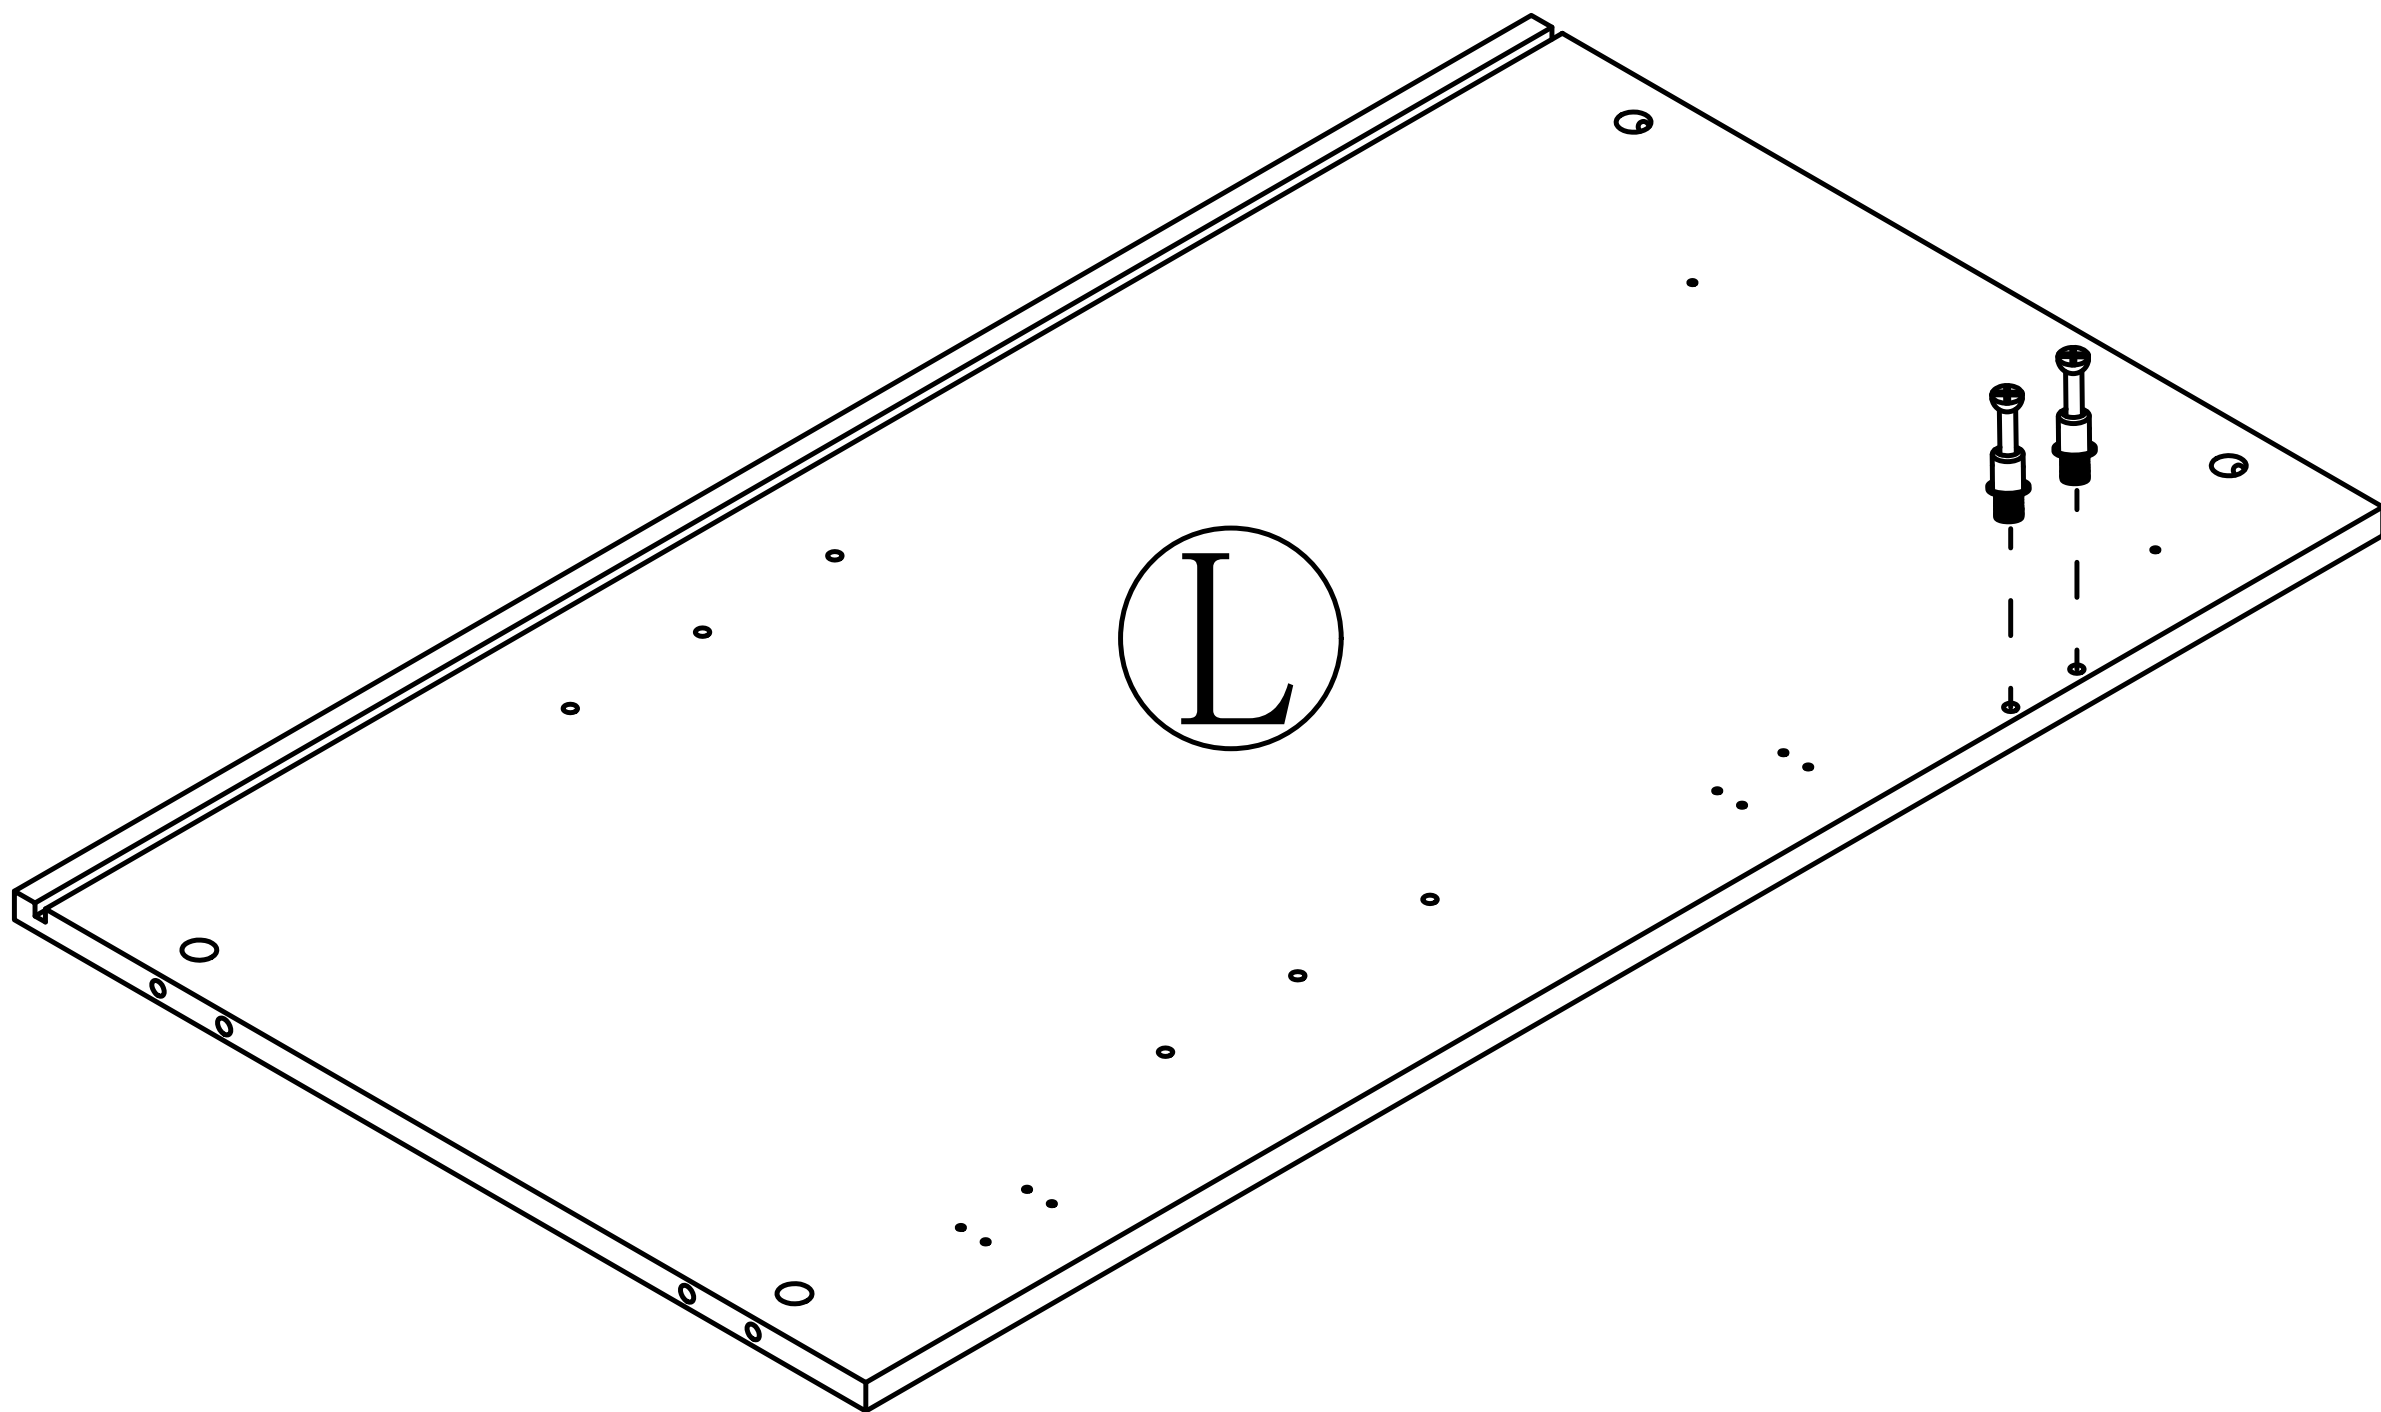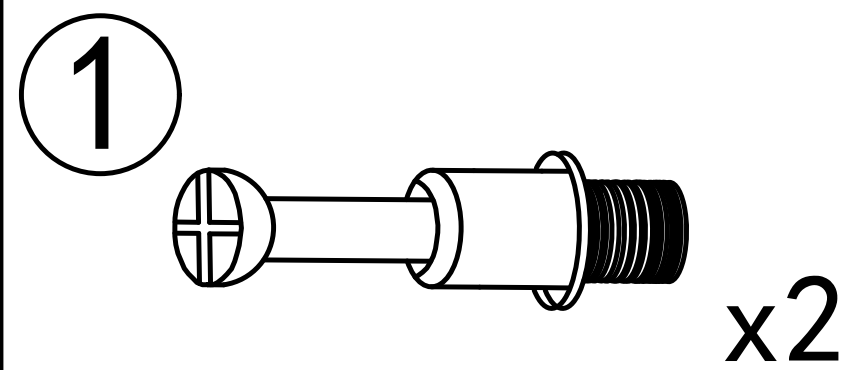

Step 19

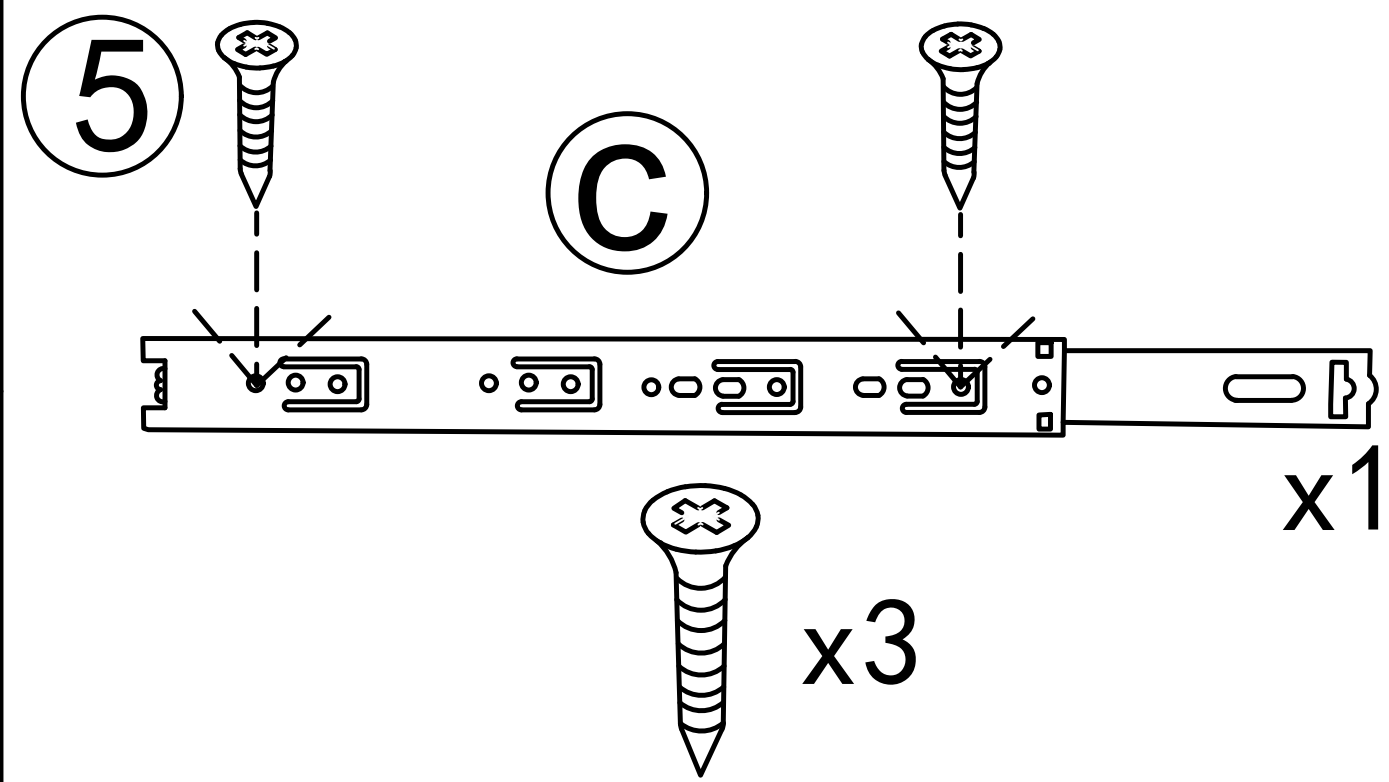



This hole is a reinforced fixing hole which can be installed as required

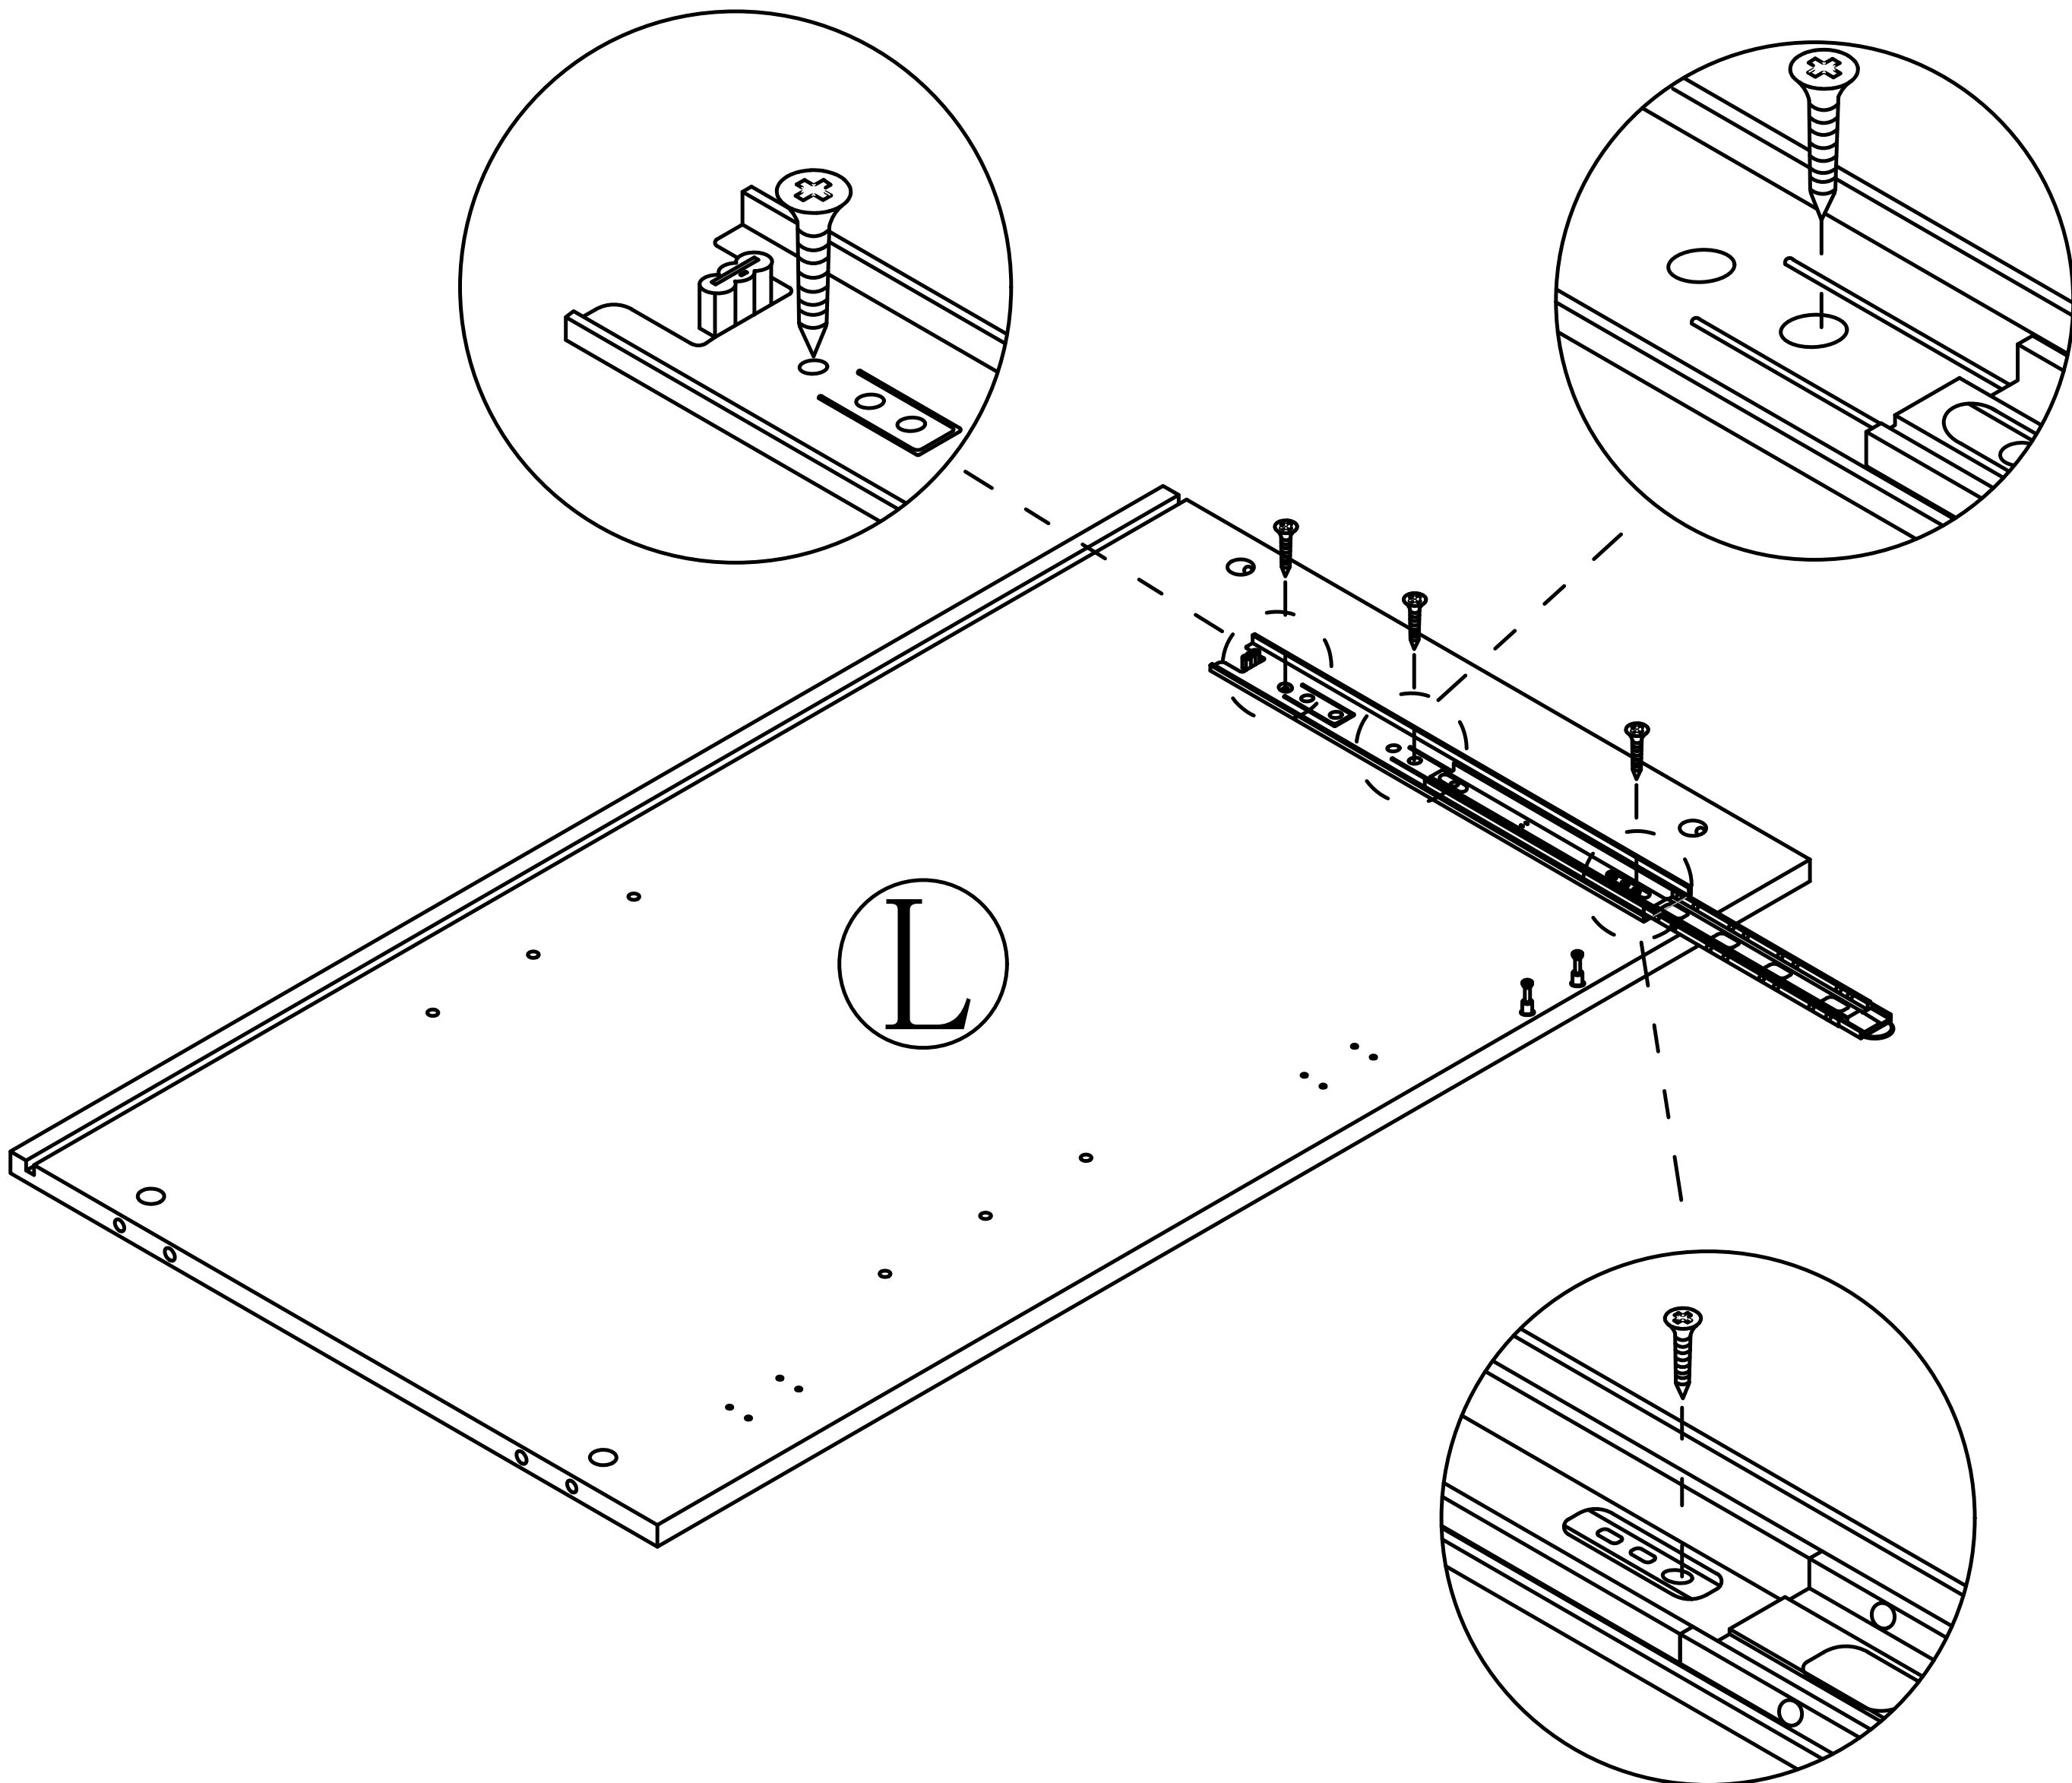

Step 20


2

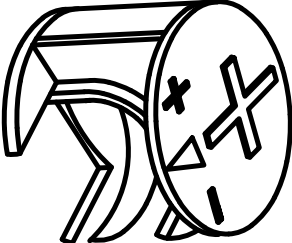 x2

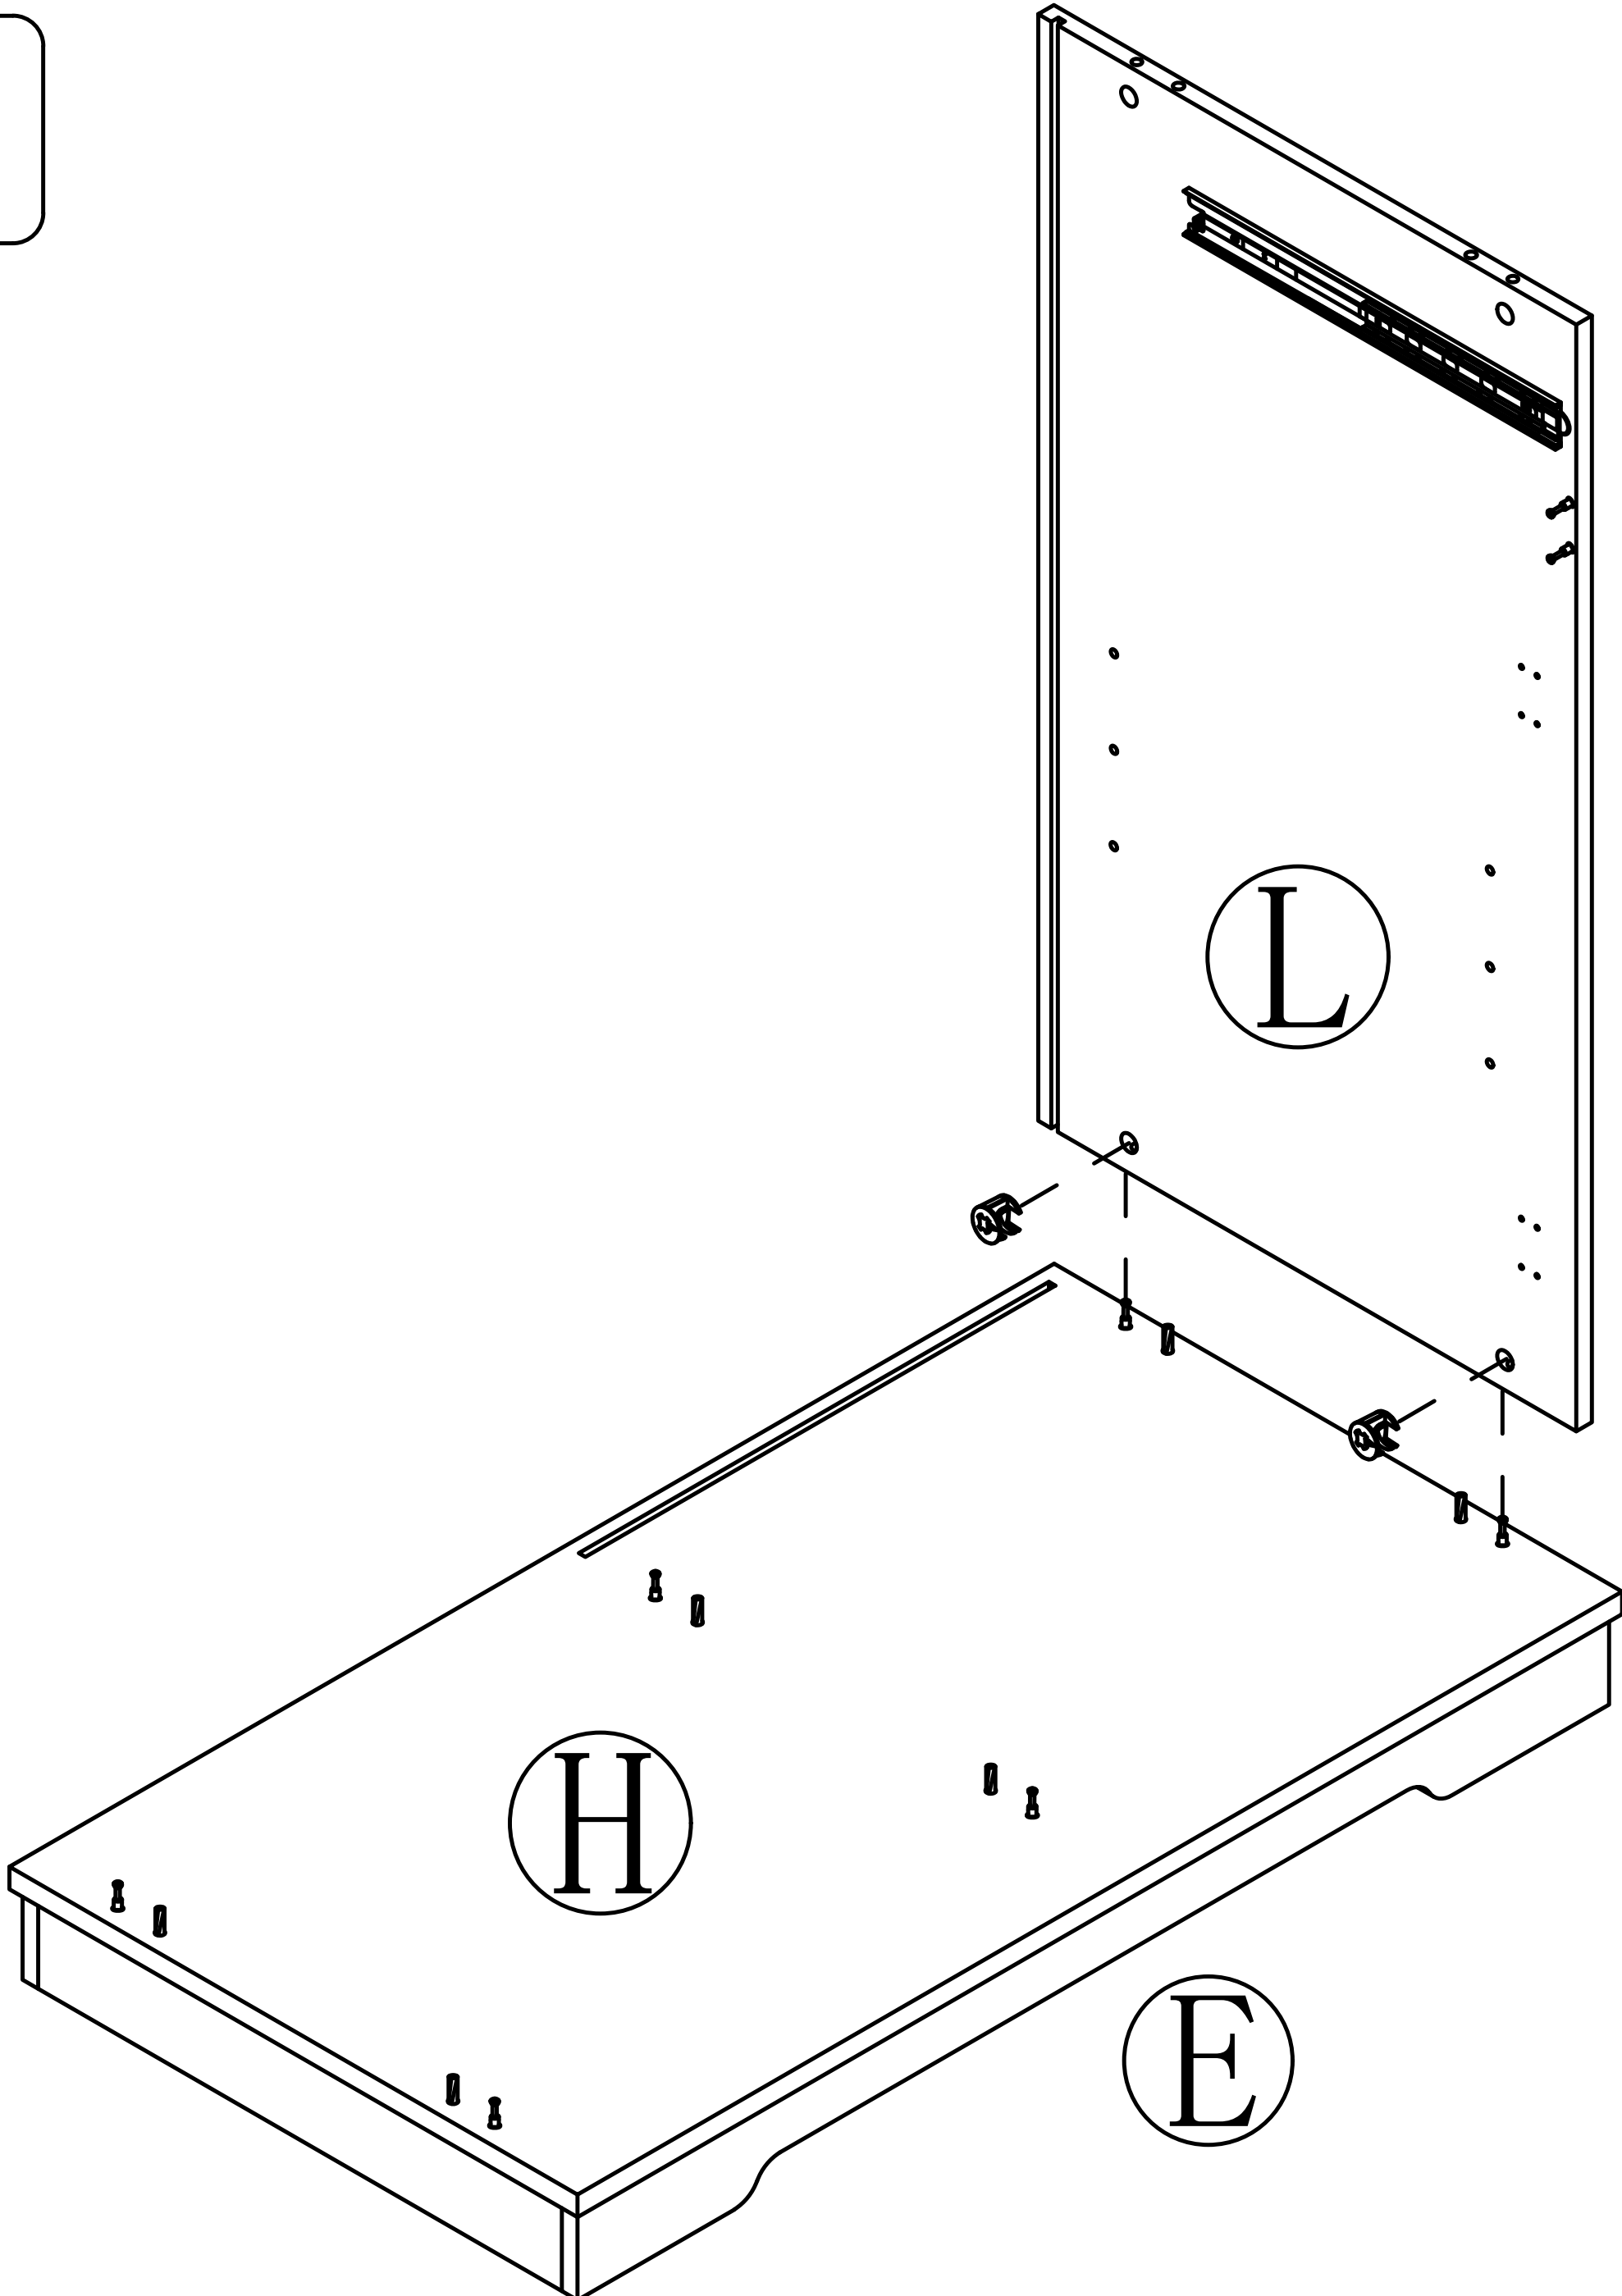


Step 21

2

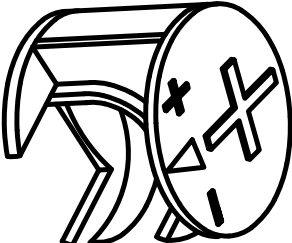
 x2

It is recommended to have two people assist with the installation.

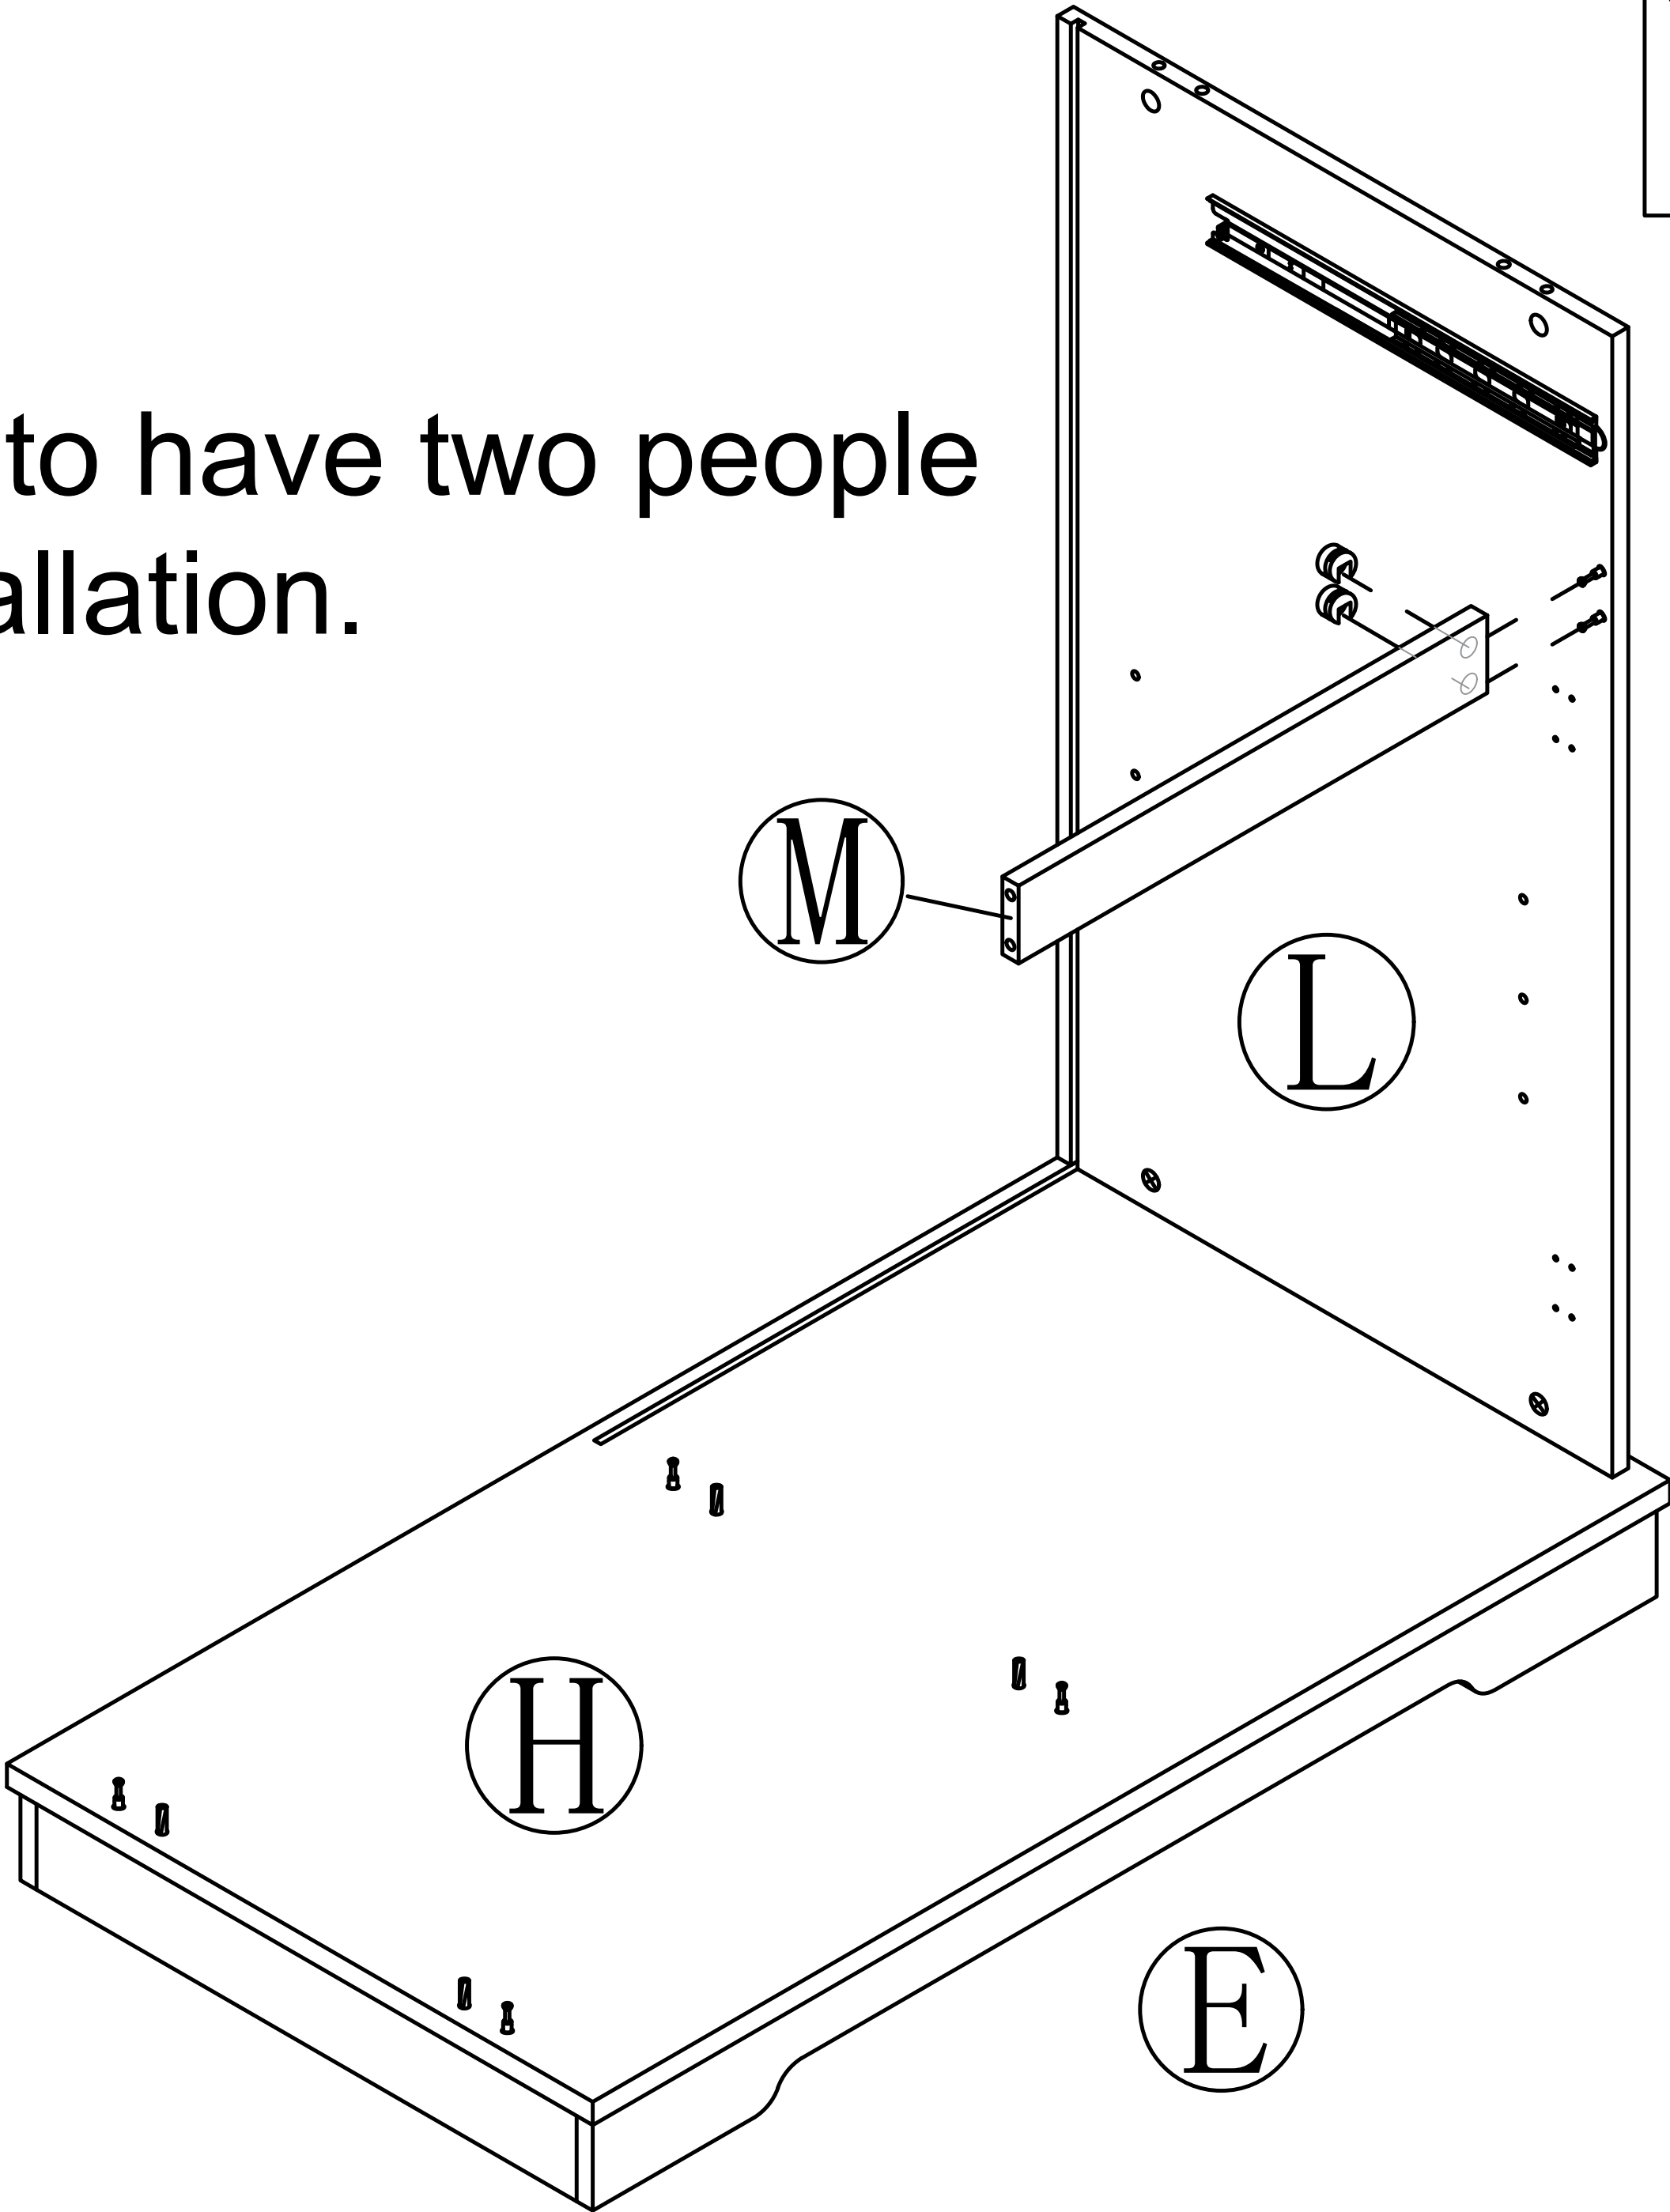



Step 22

Insert Panel J into Panel H, but do not tighten it to facilitate subsequent installation.

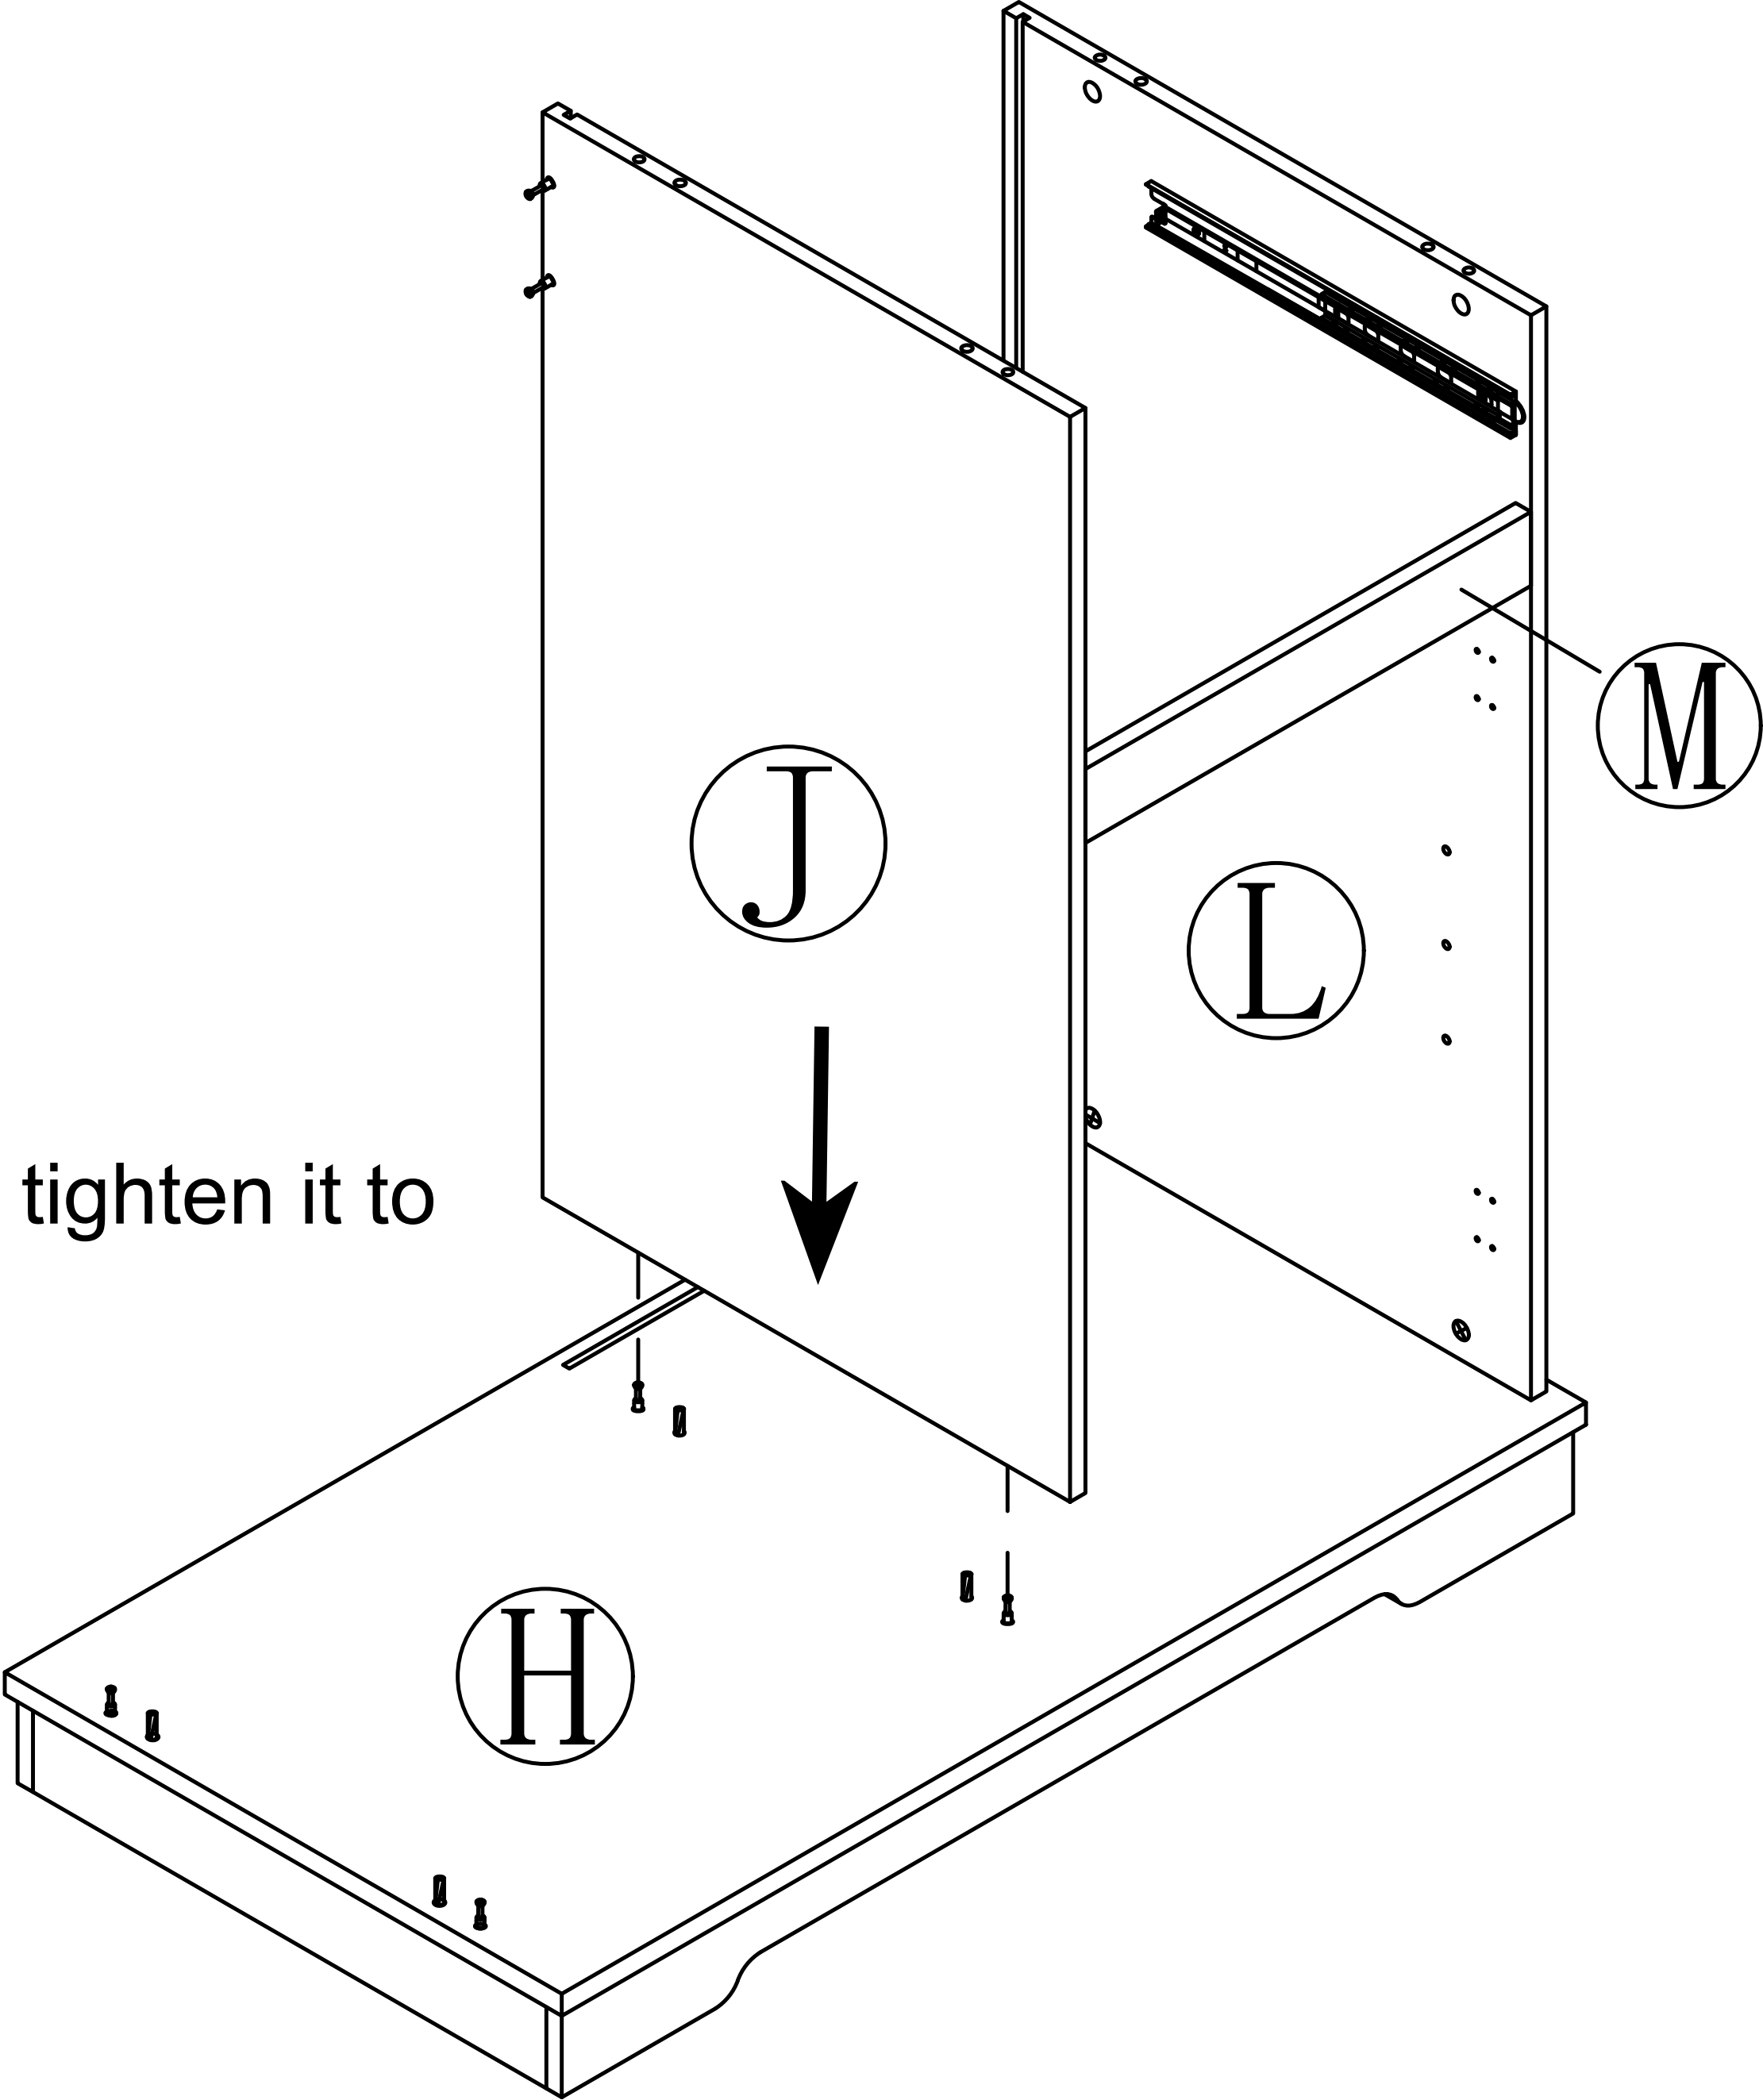

Step 23

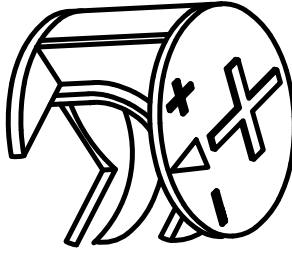
②  x2

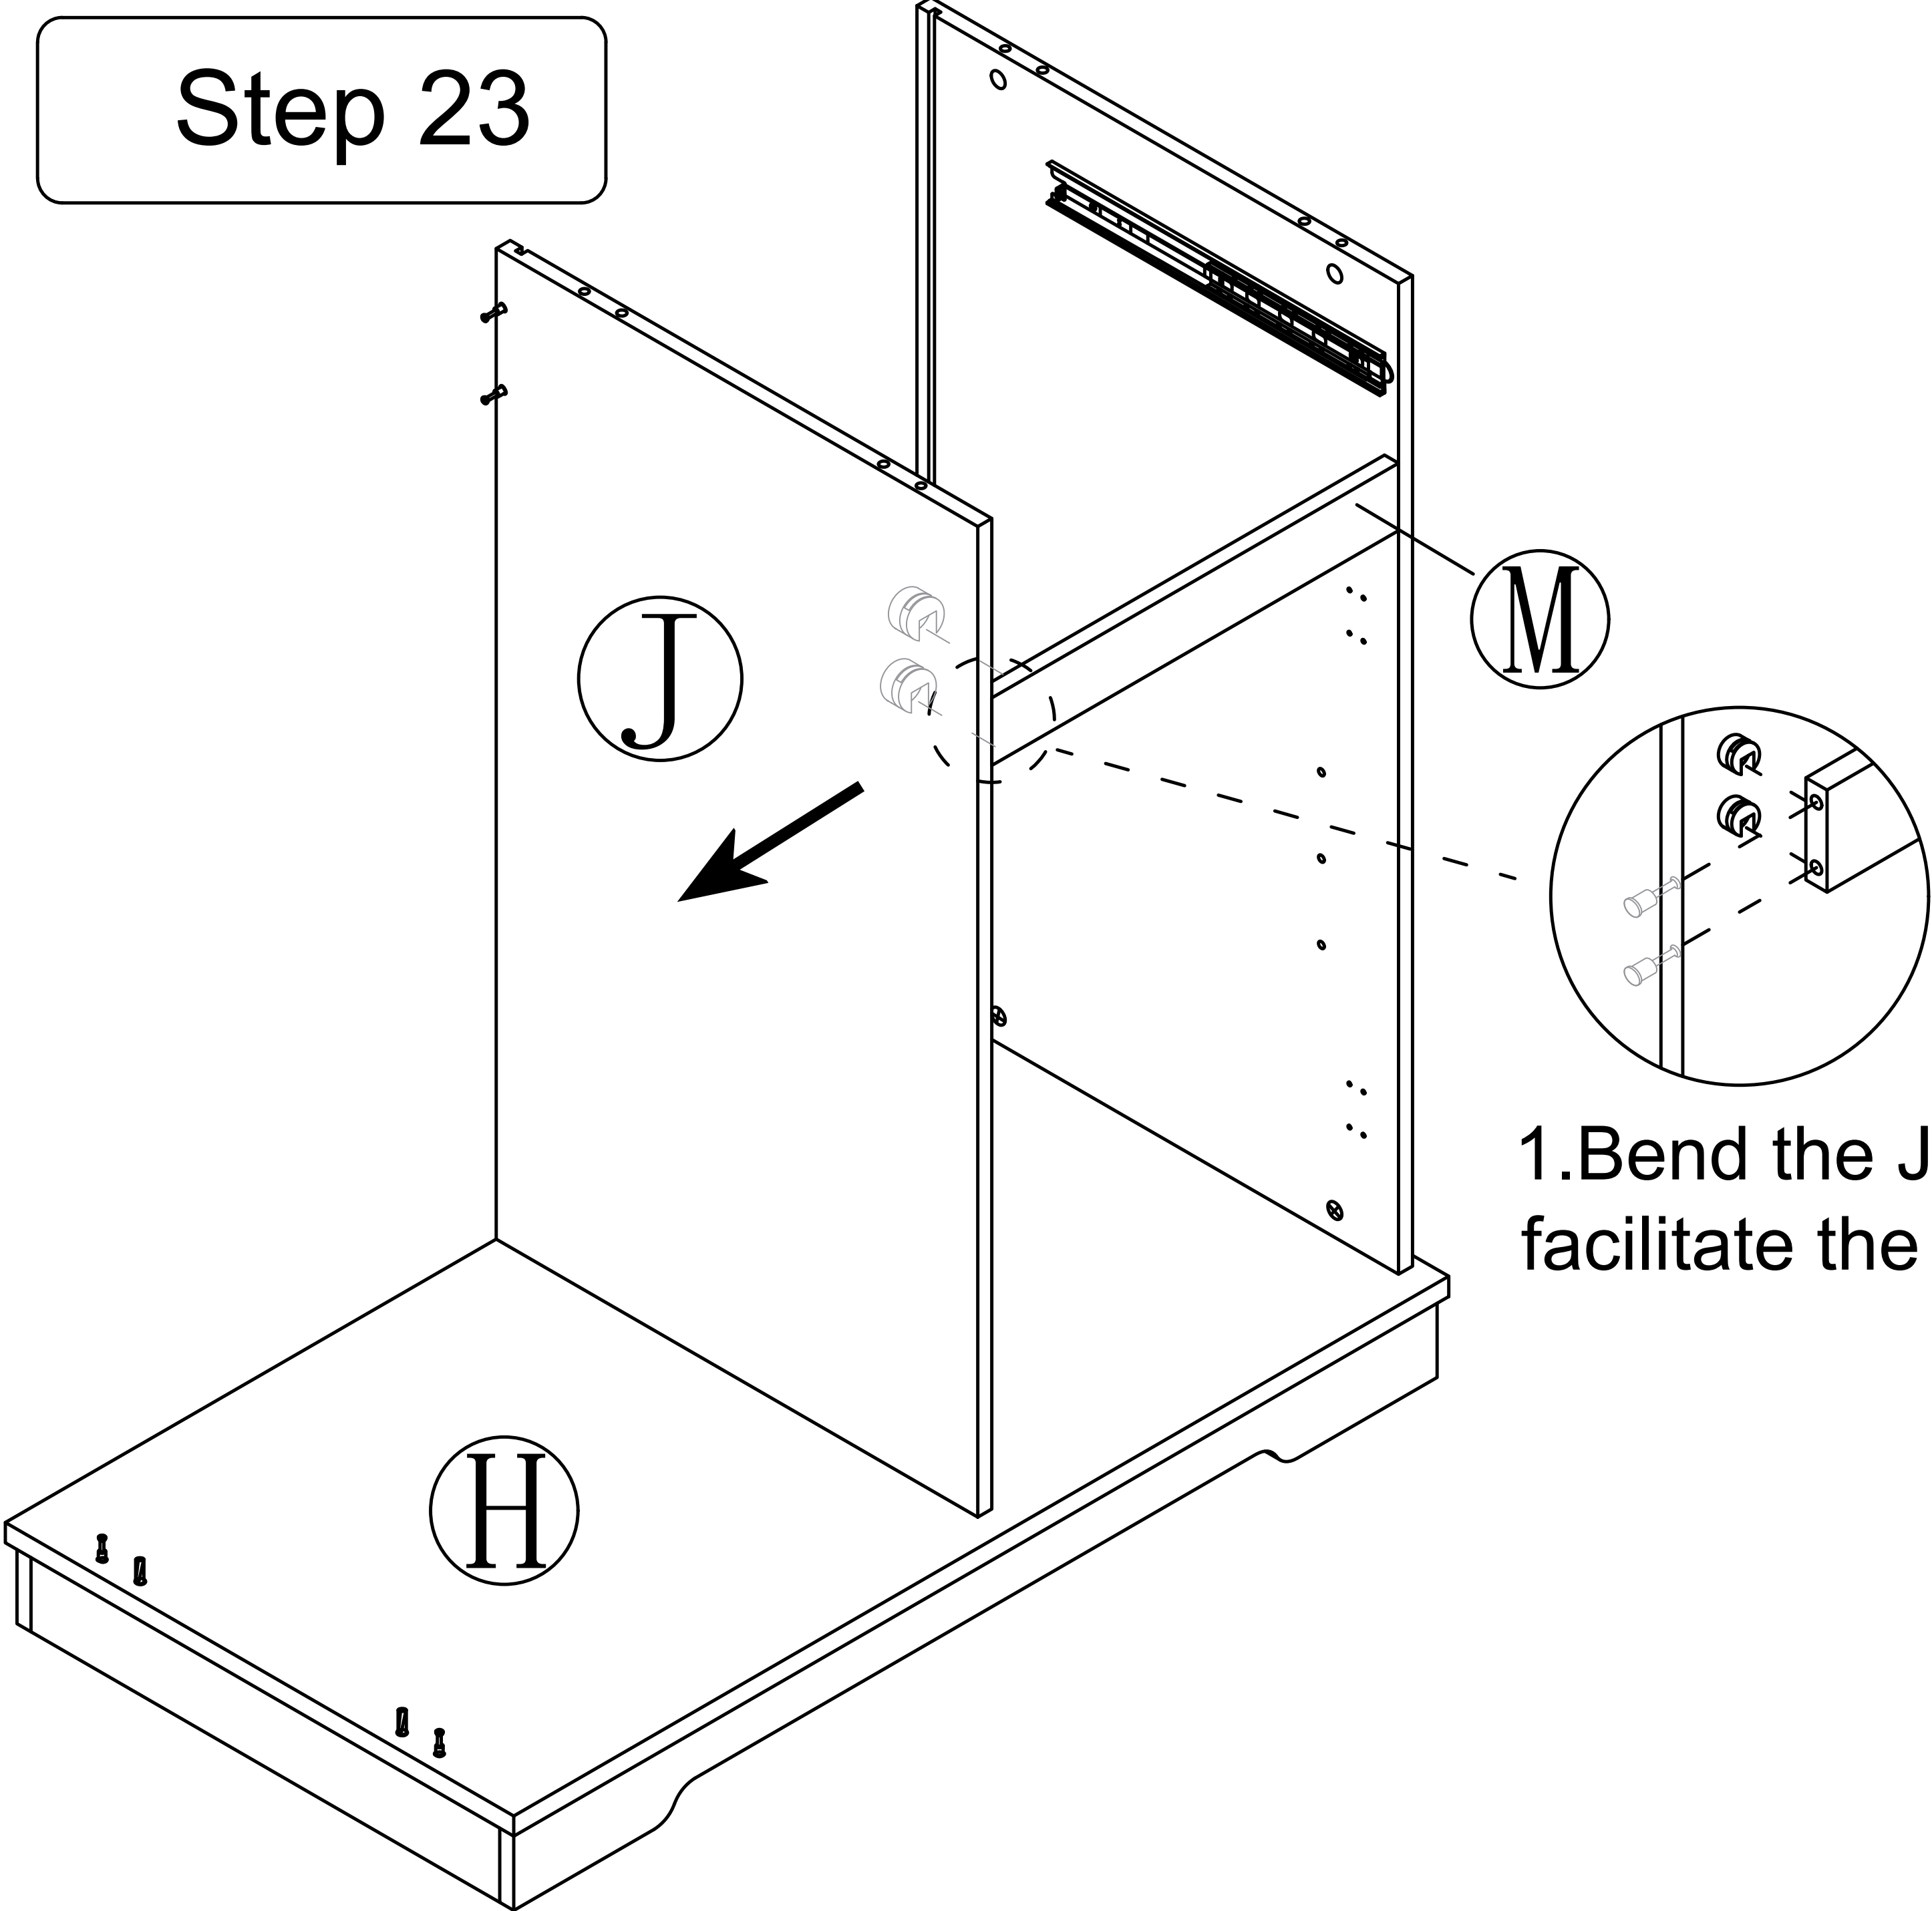


1. Bend the J plate a little outward to facilitate the installation of the M plate

Step 24


2

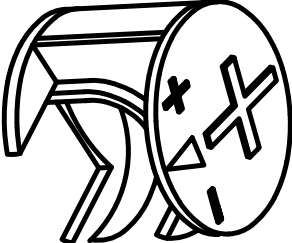
 x2

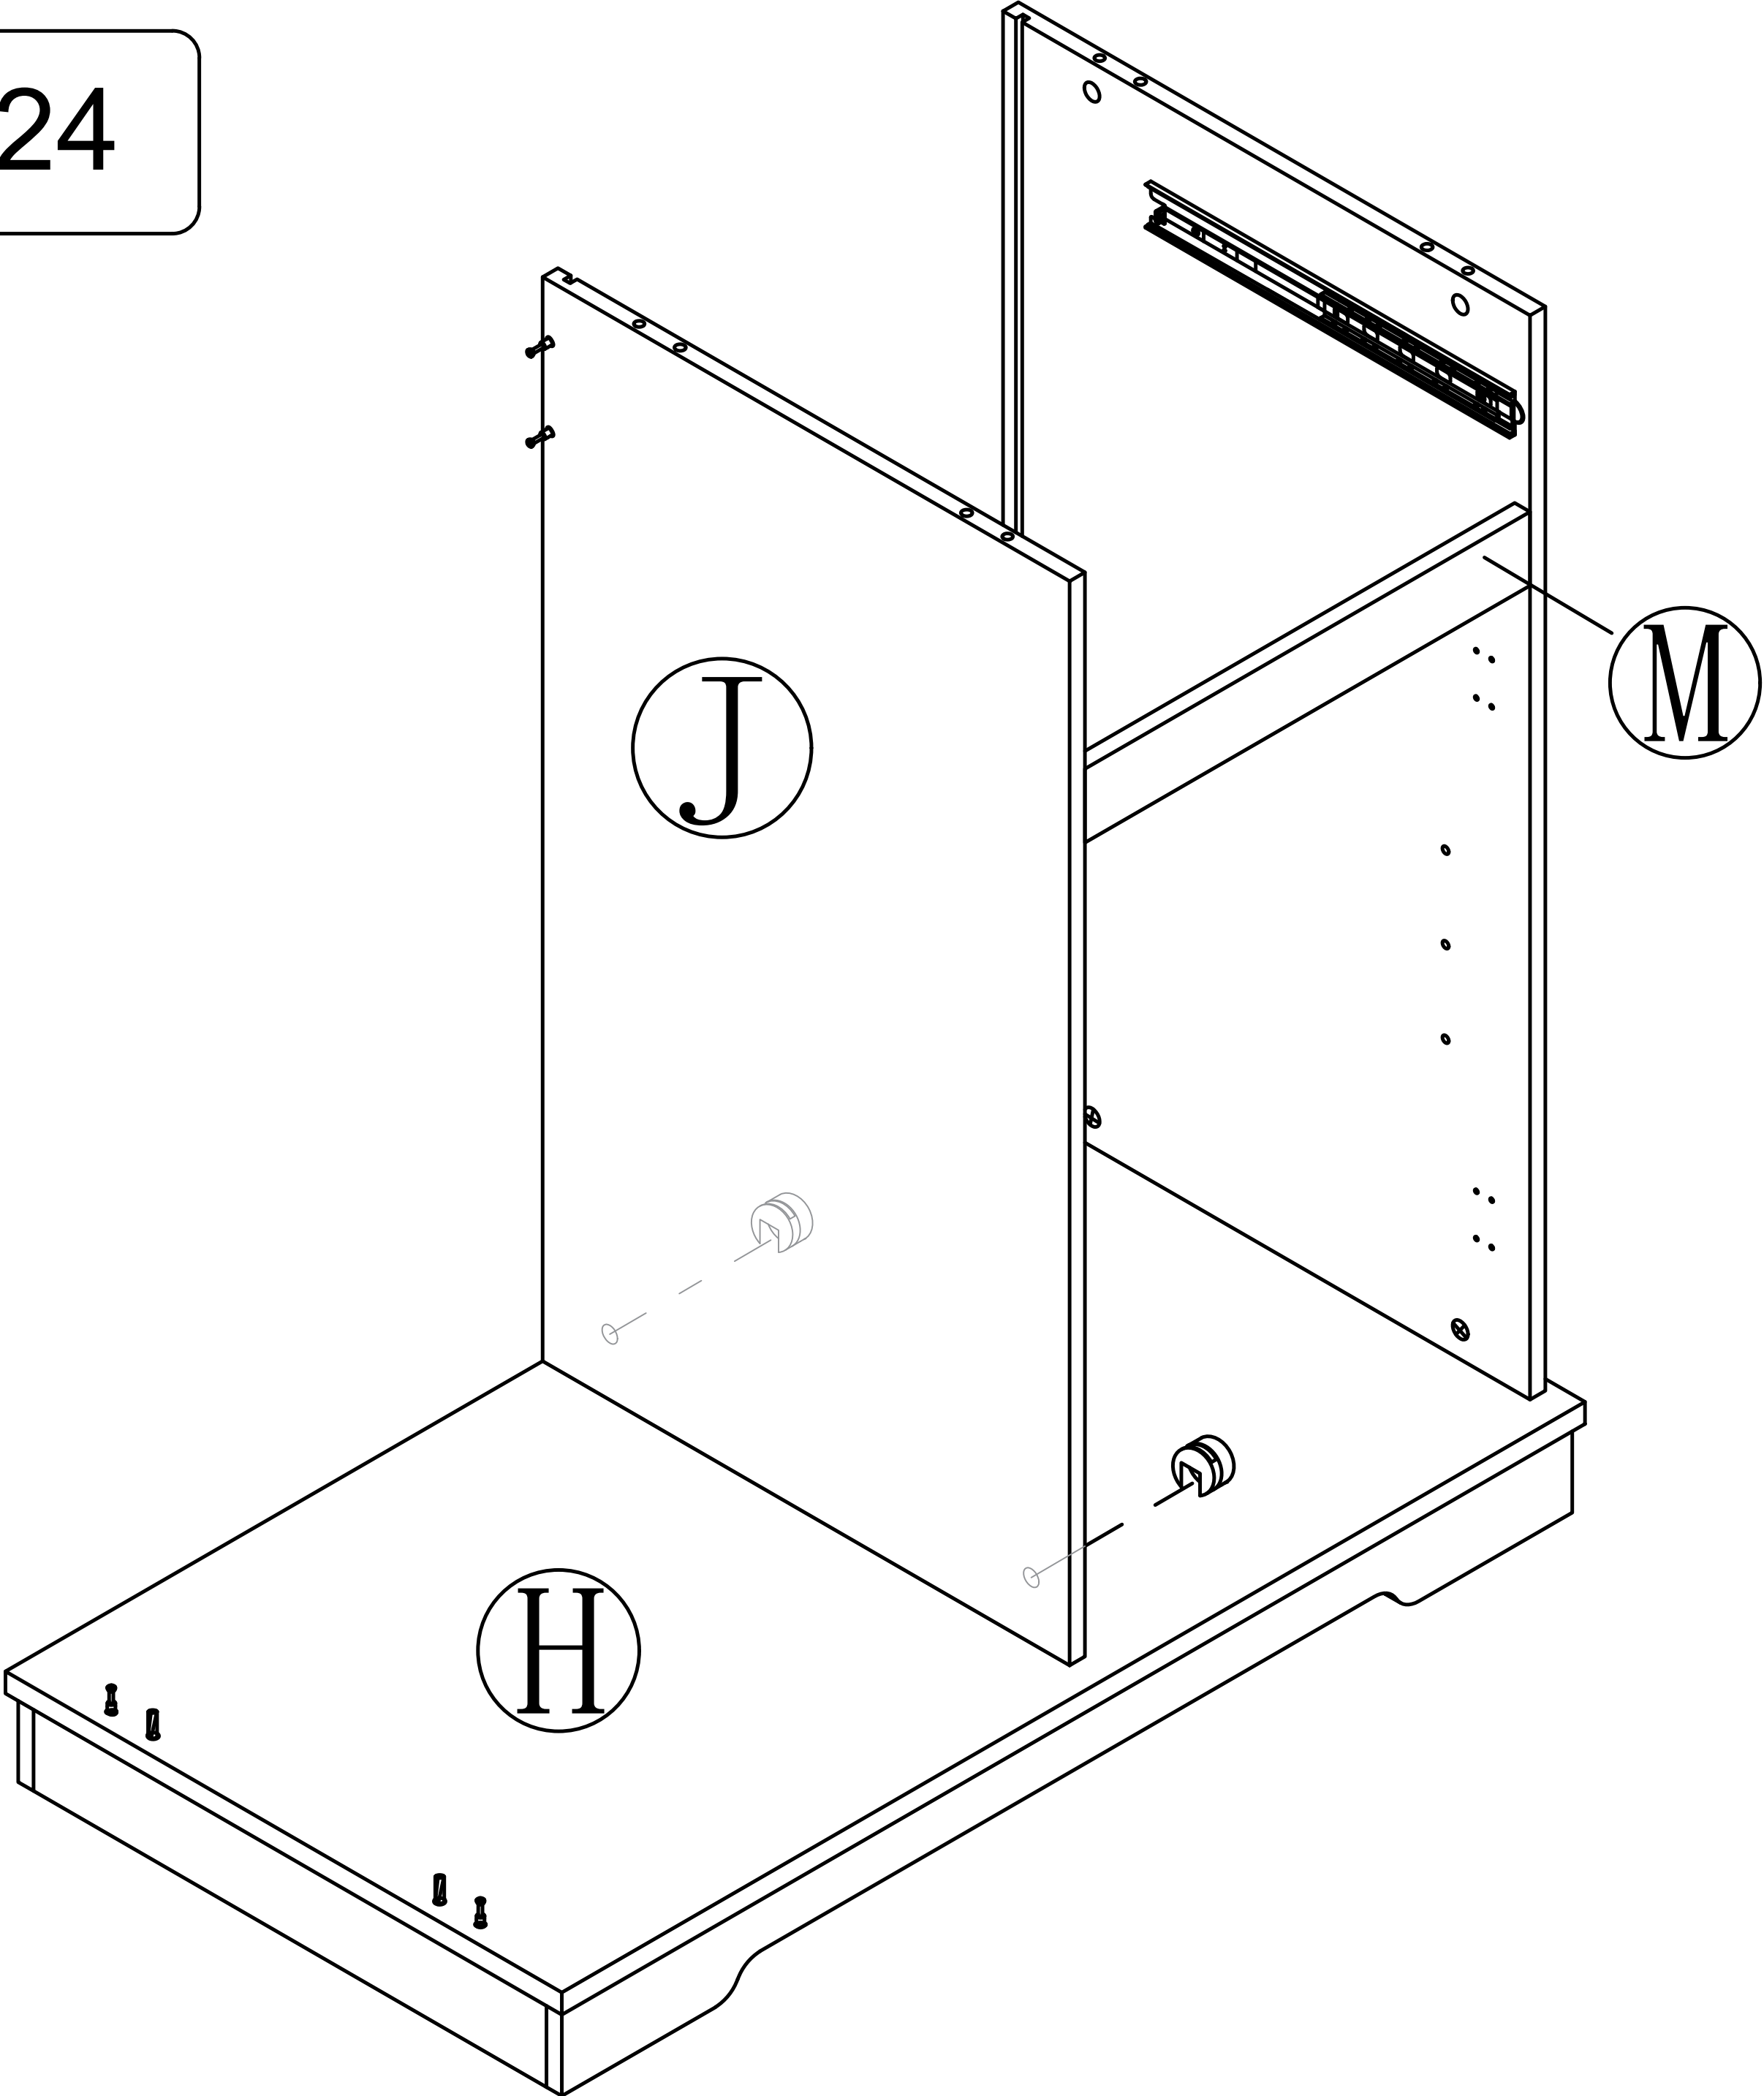


Step 25

2

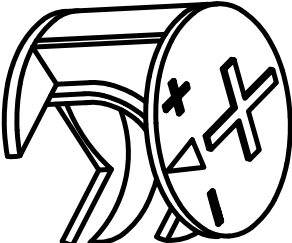 x2

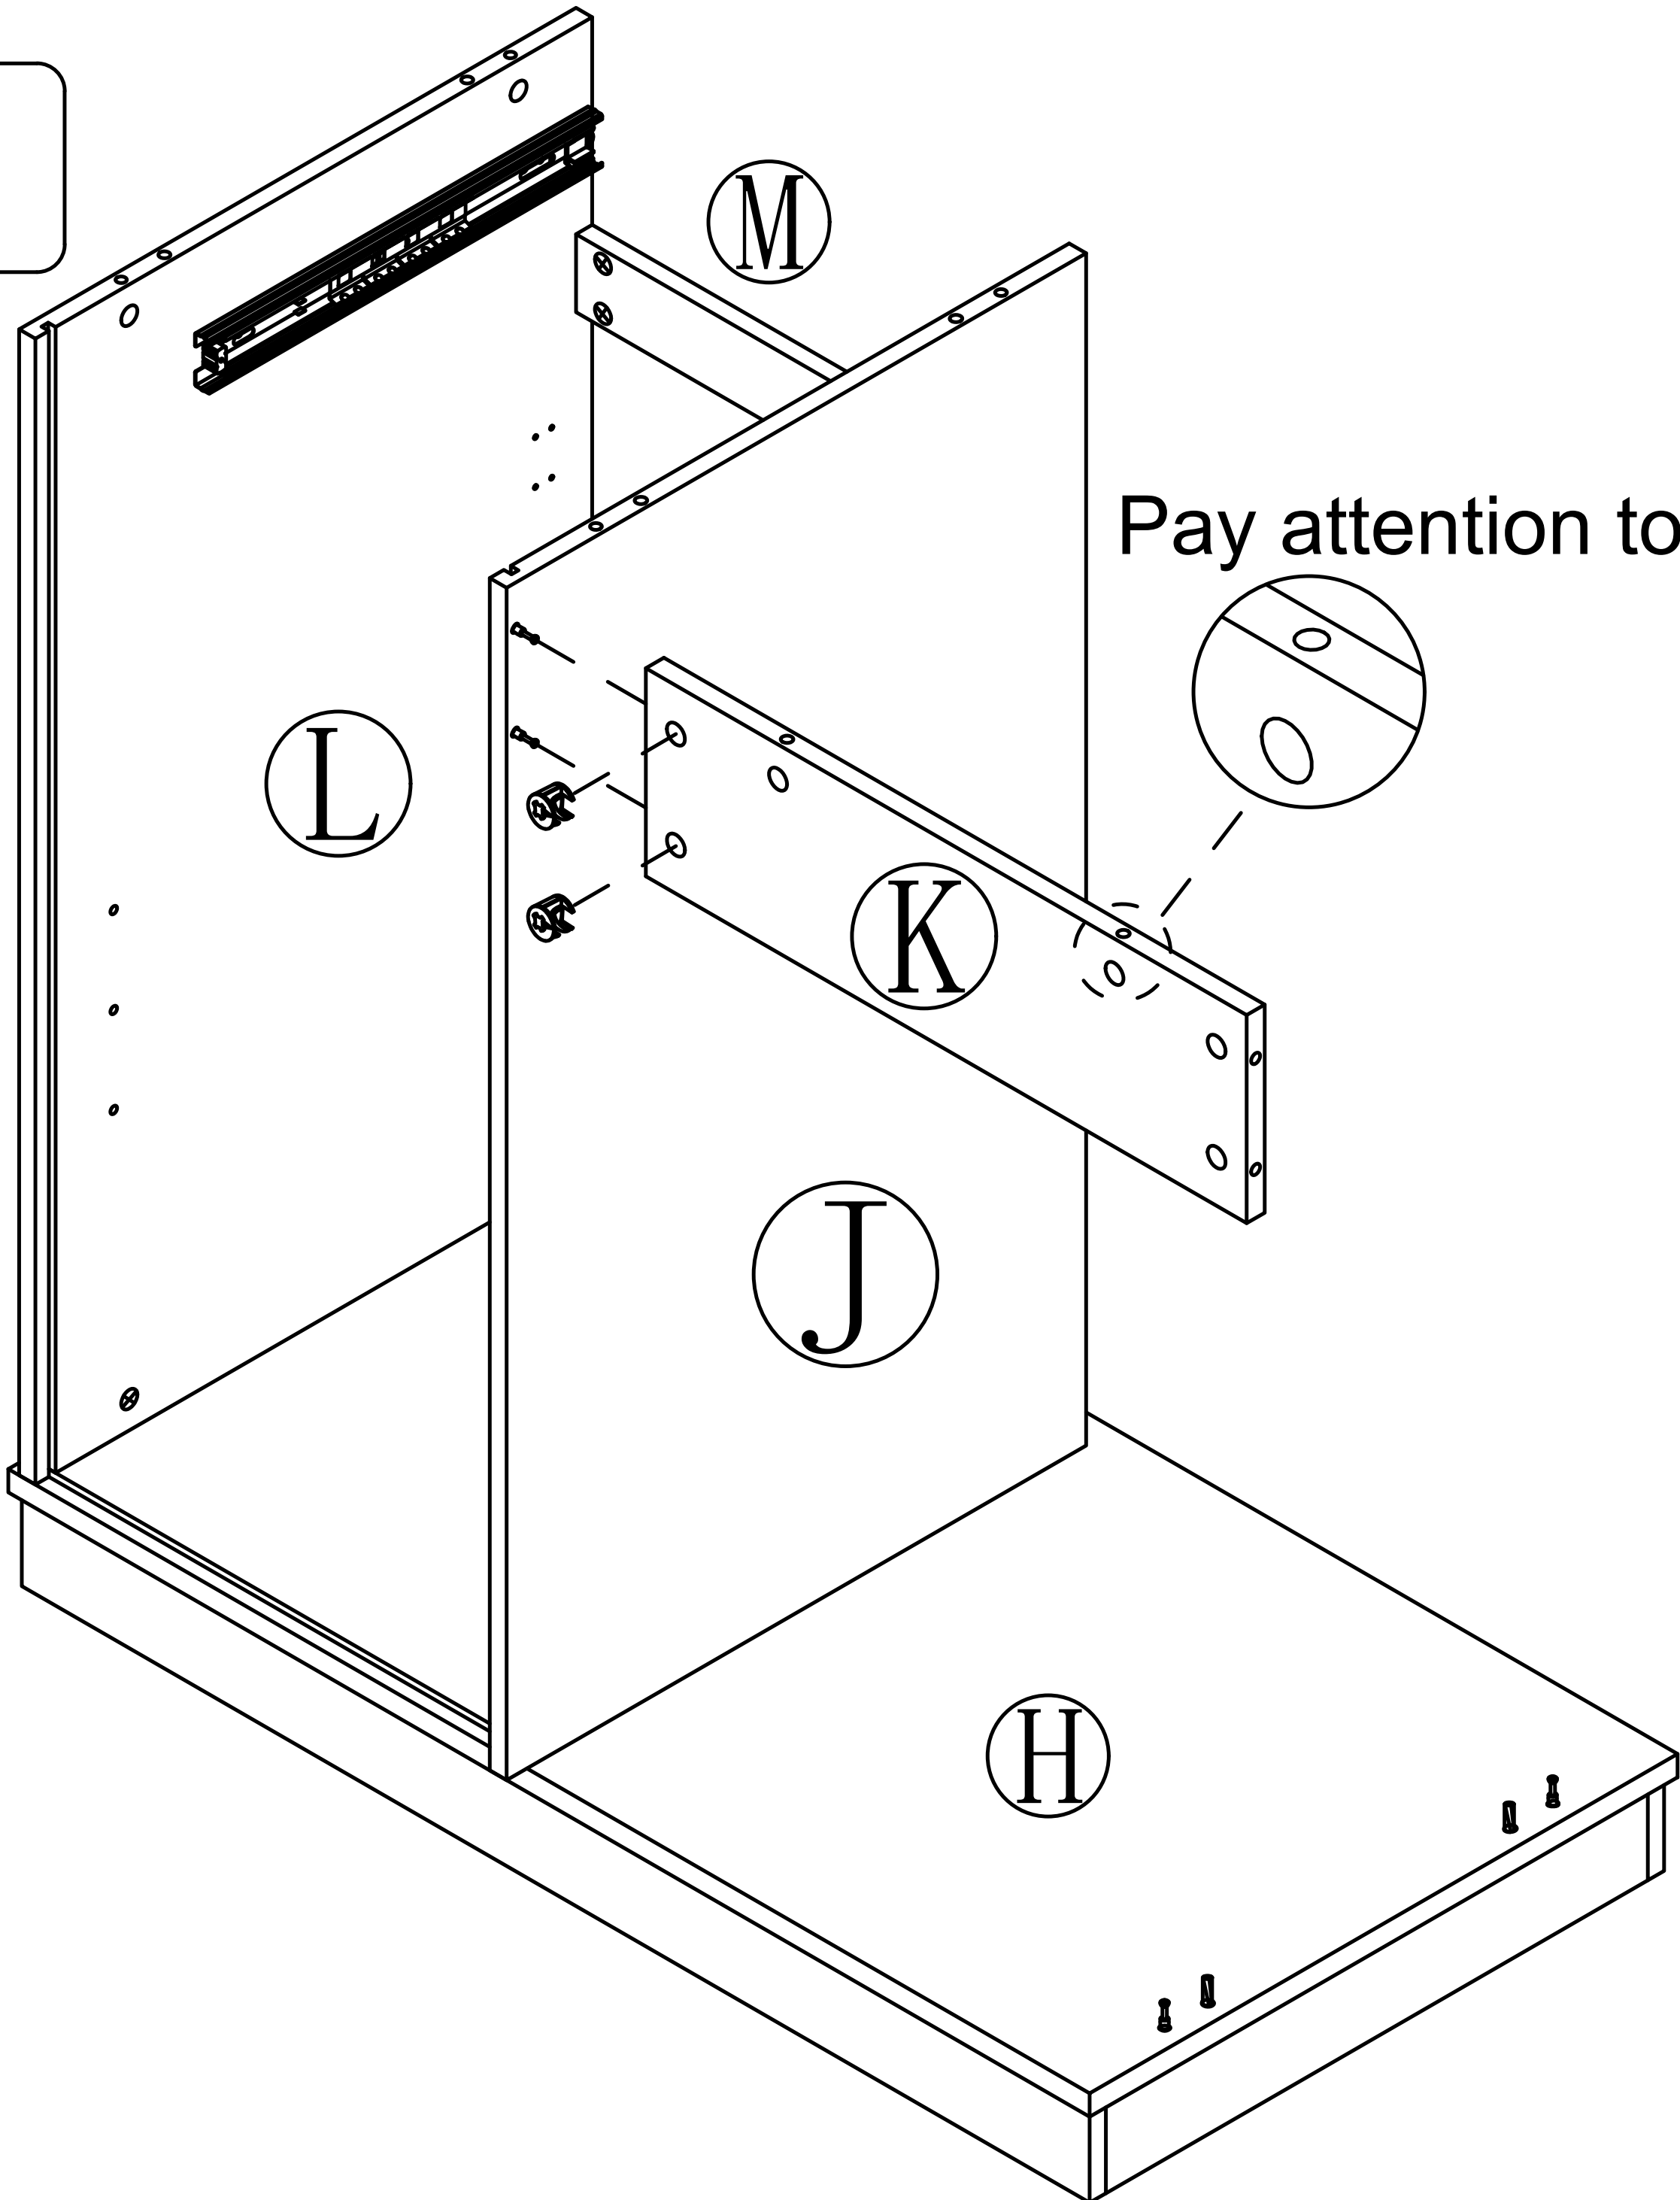


Step 26

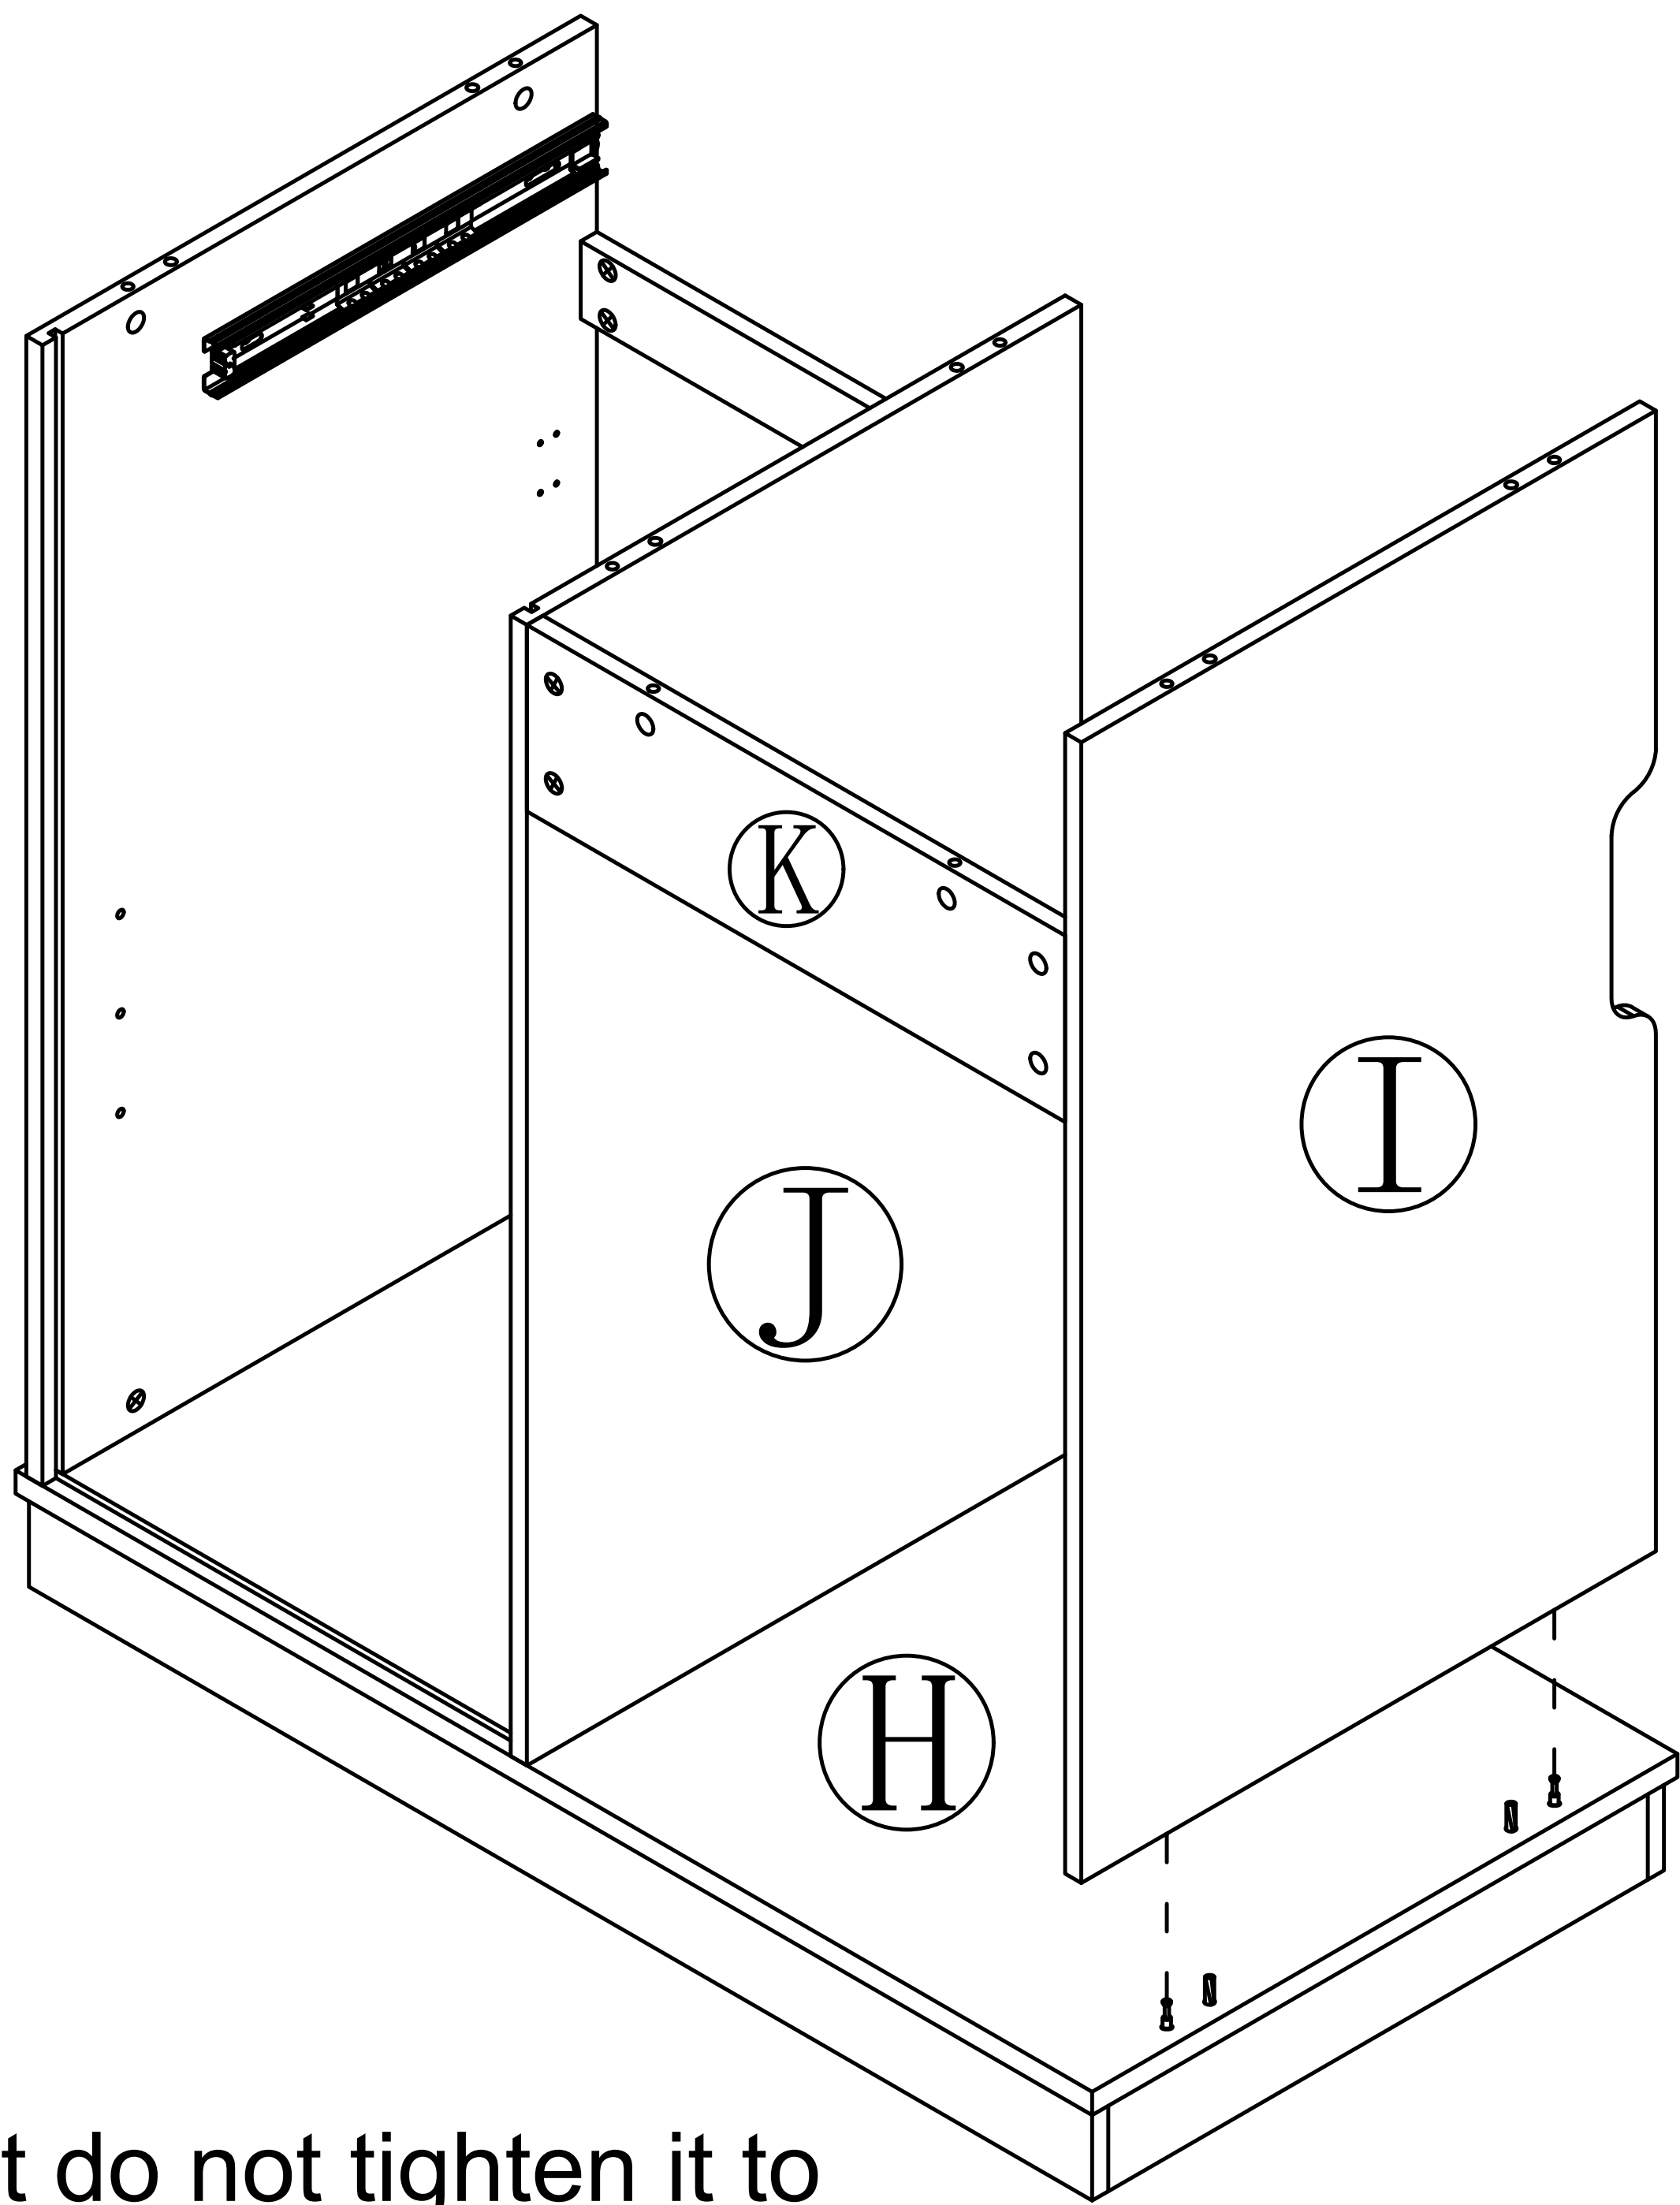


Insert Panel I into Panel H, but do not tighten it to facilitate subsequent installation.

Step 27


1.Bend the I plate a little outward to facilitate the installation of the K plate

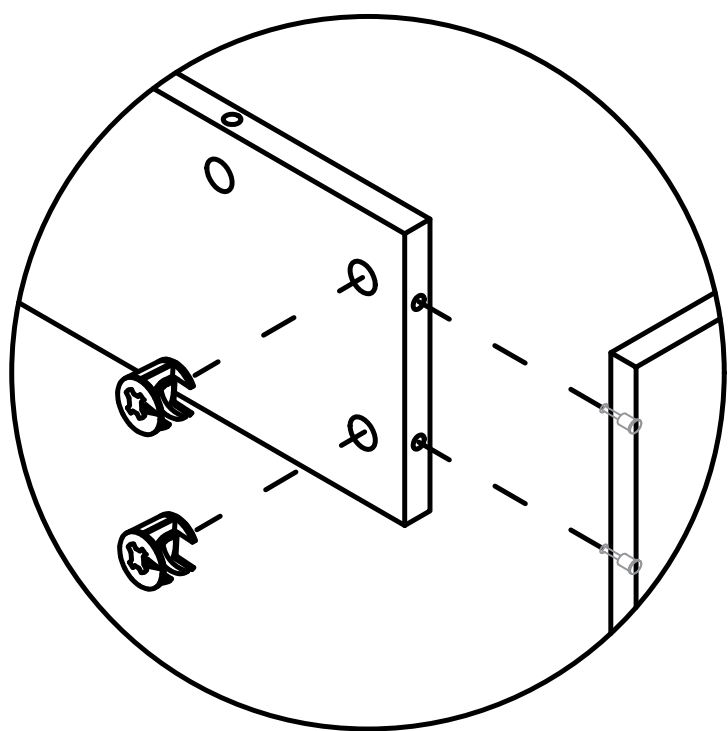

2.Lock nut

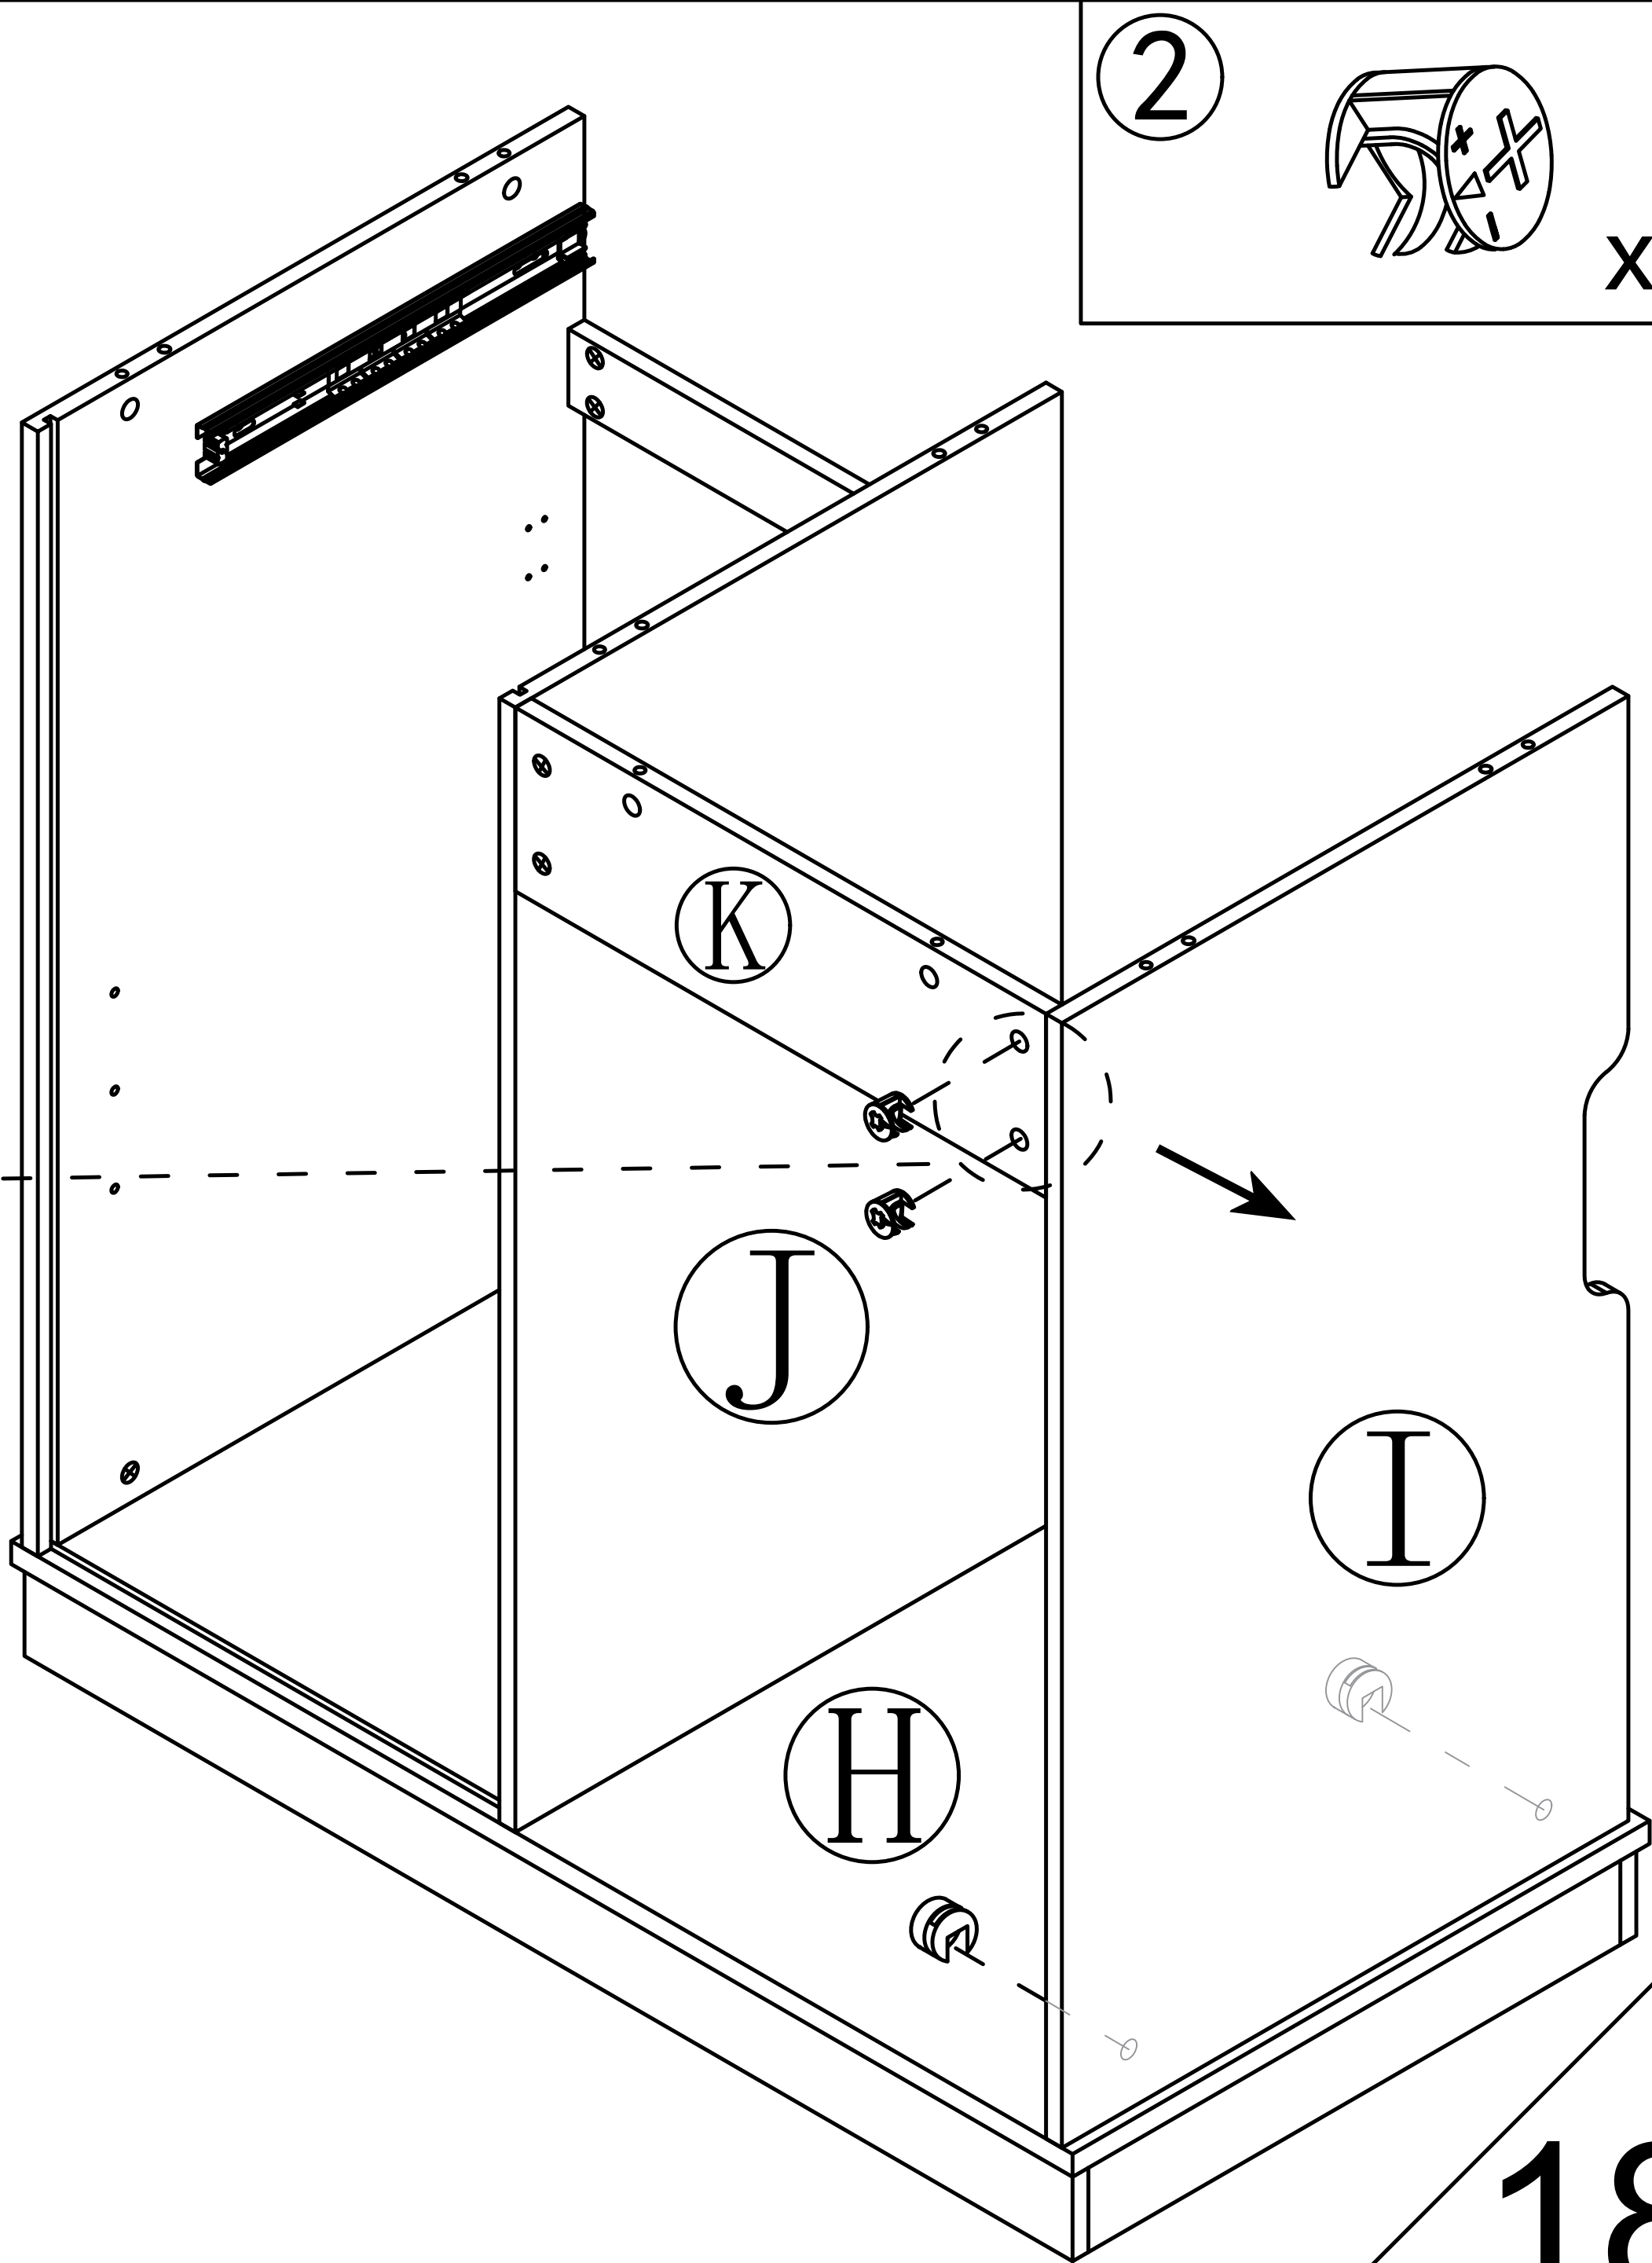


Step 28

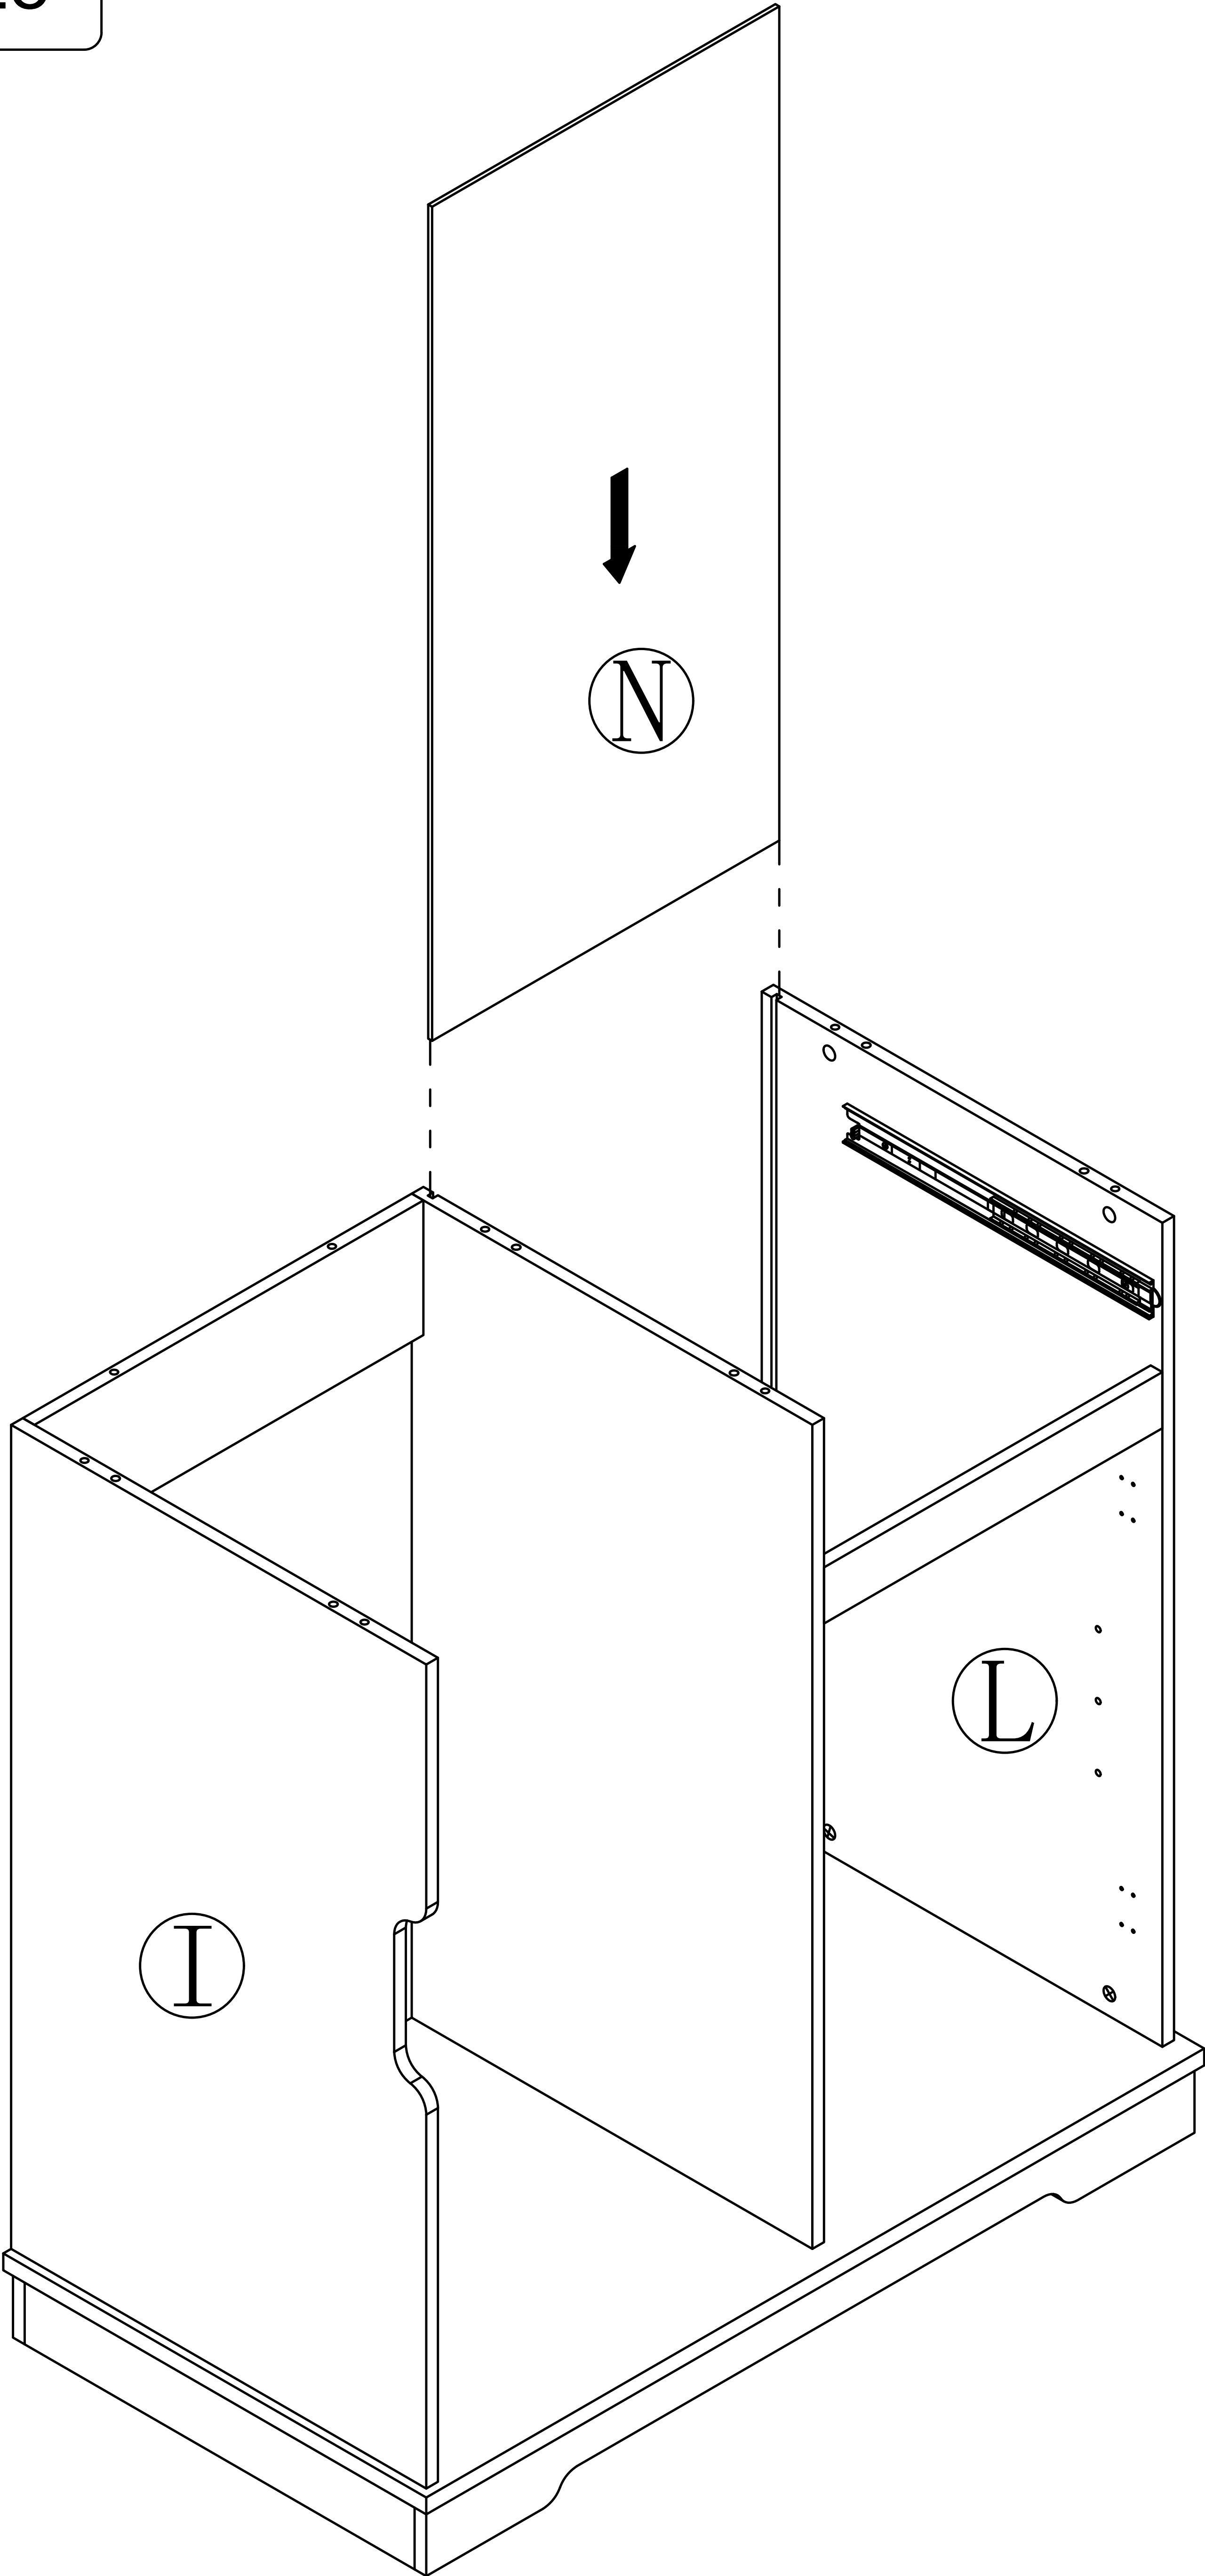


Step 29

3

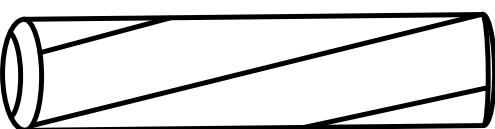


x6

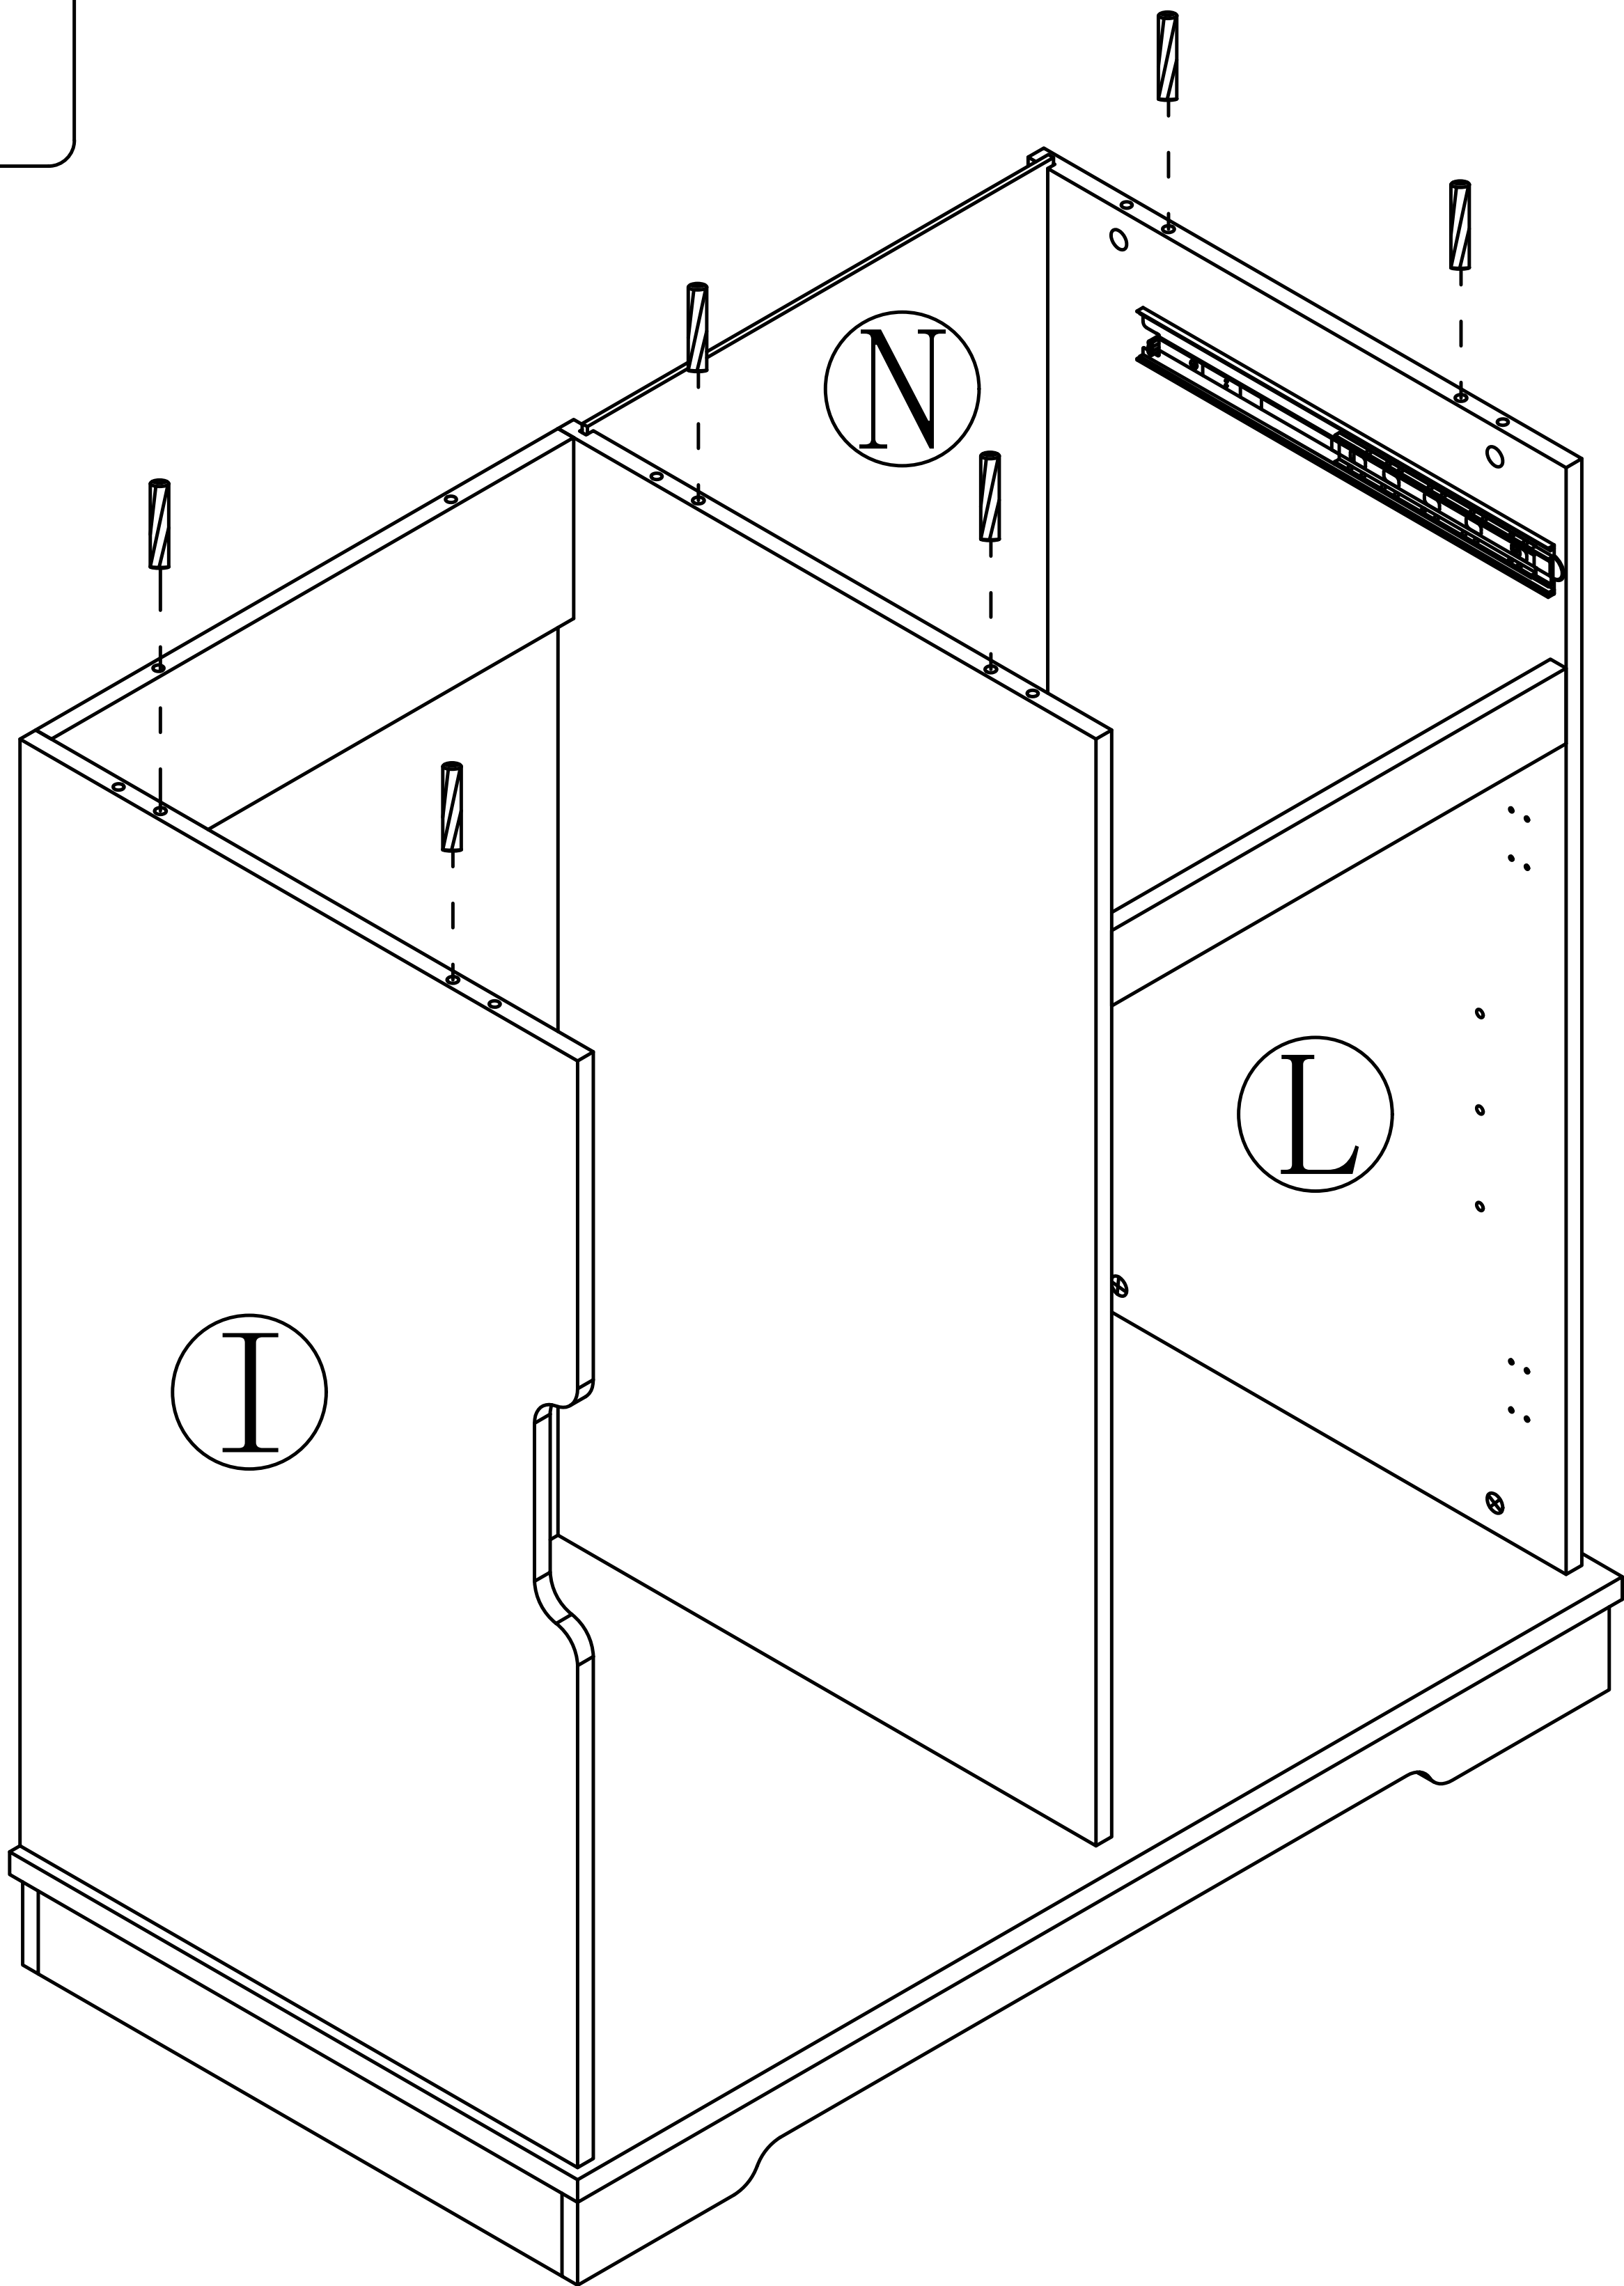


Step 30

1

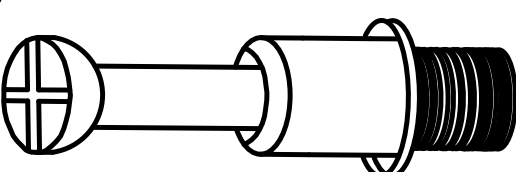


x8

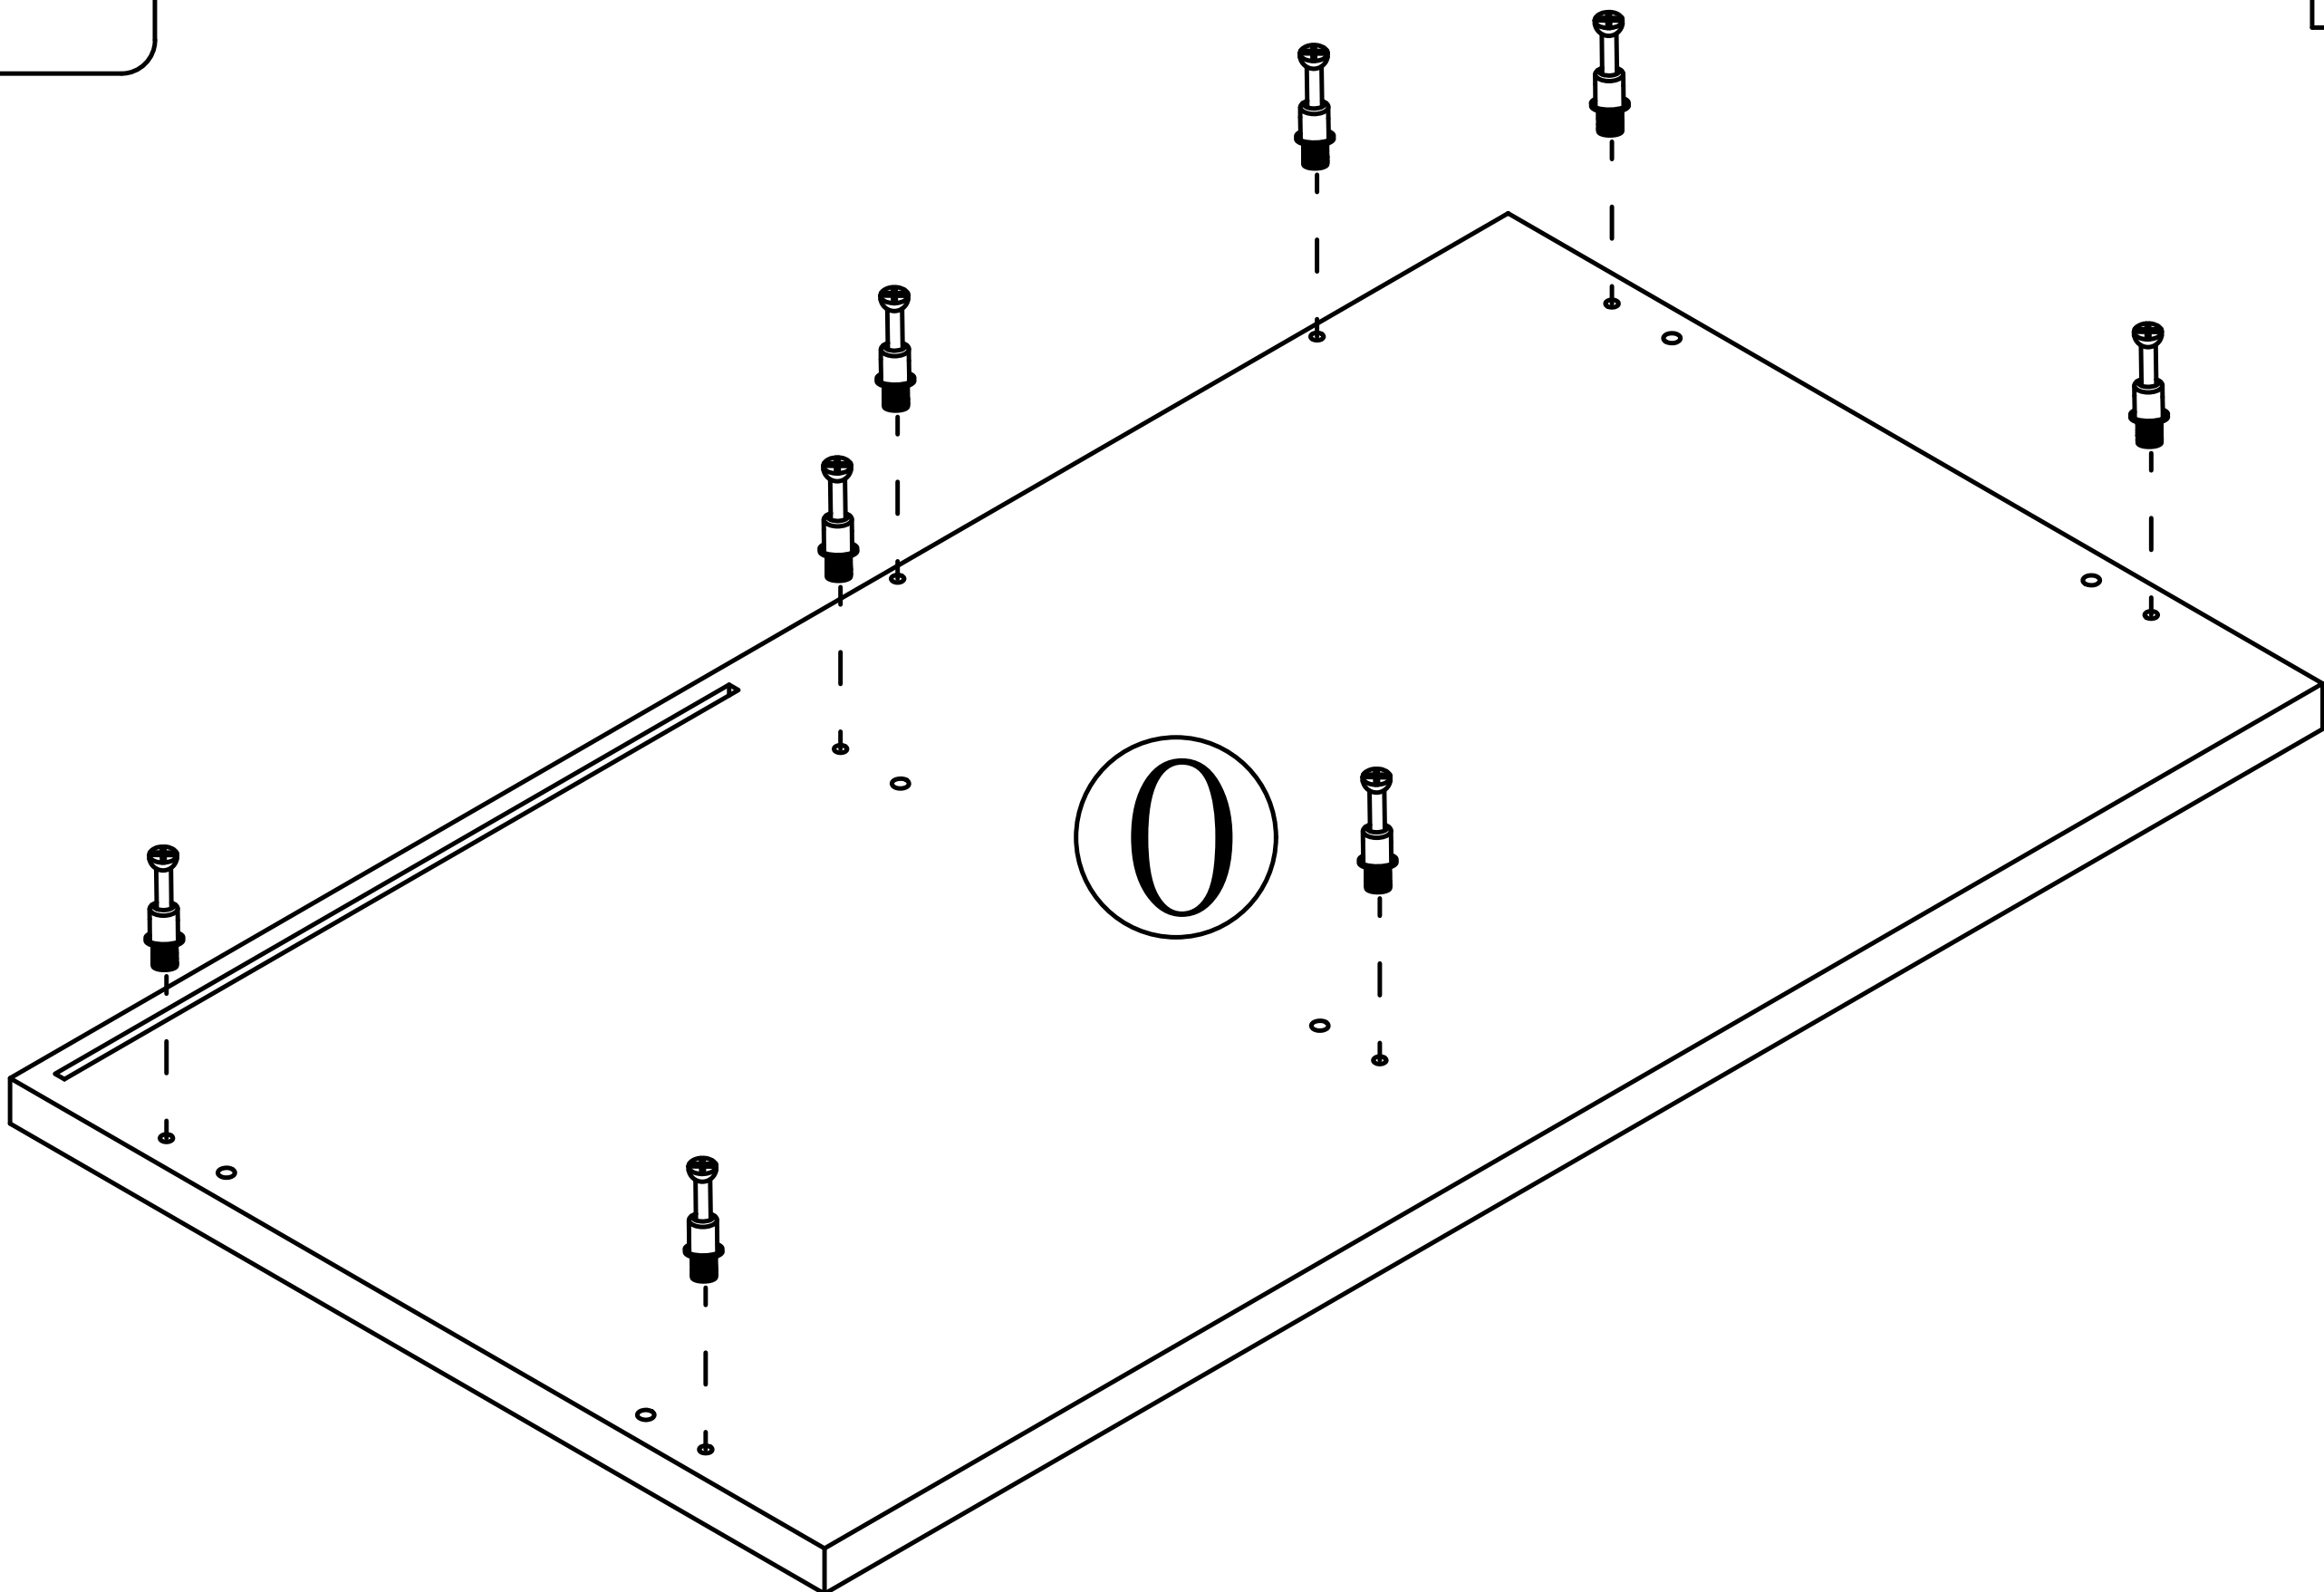


Step 31


2

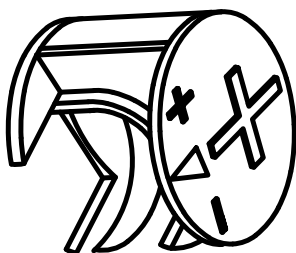


x8

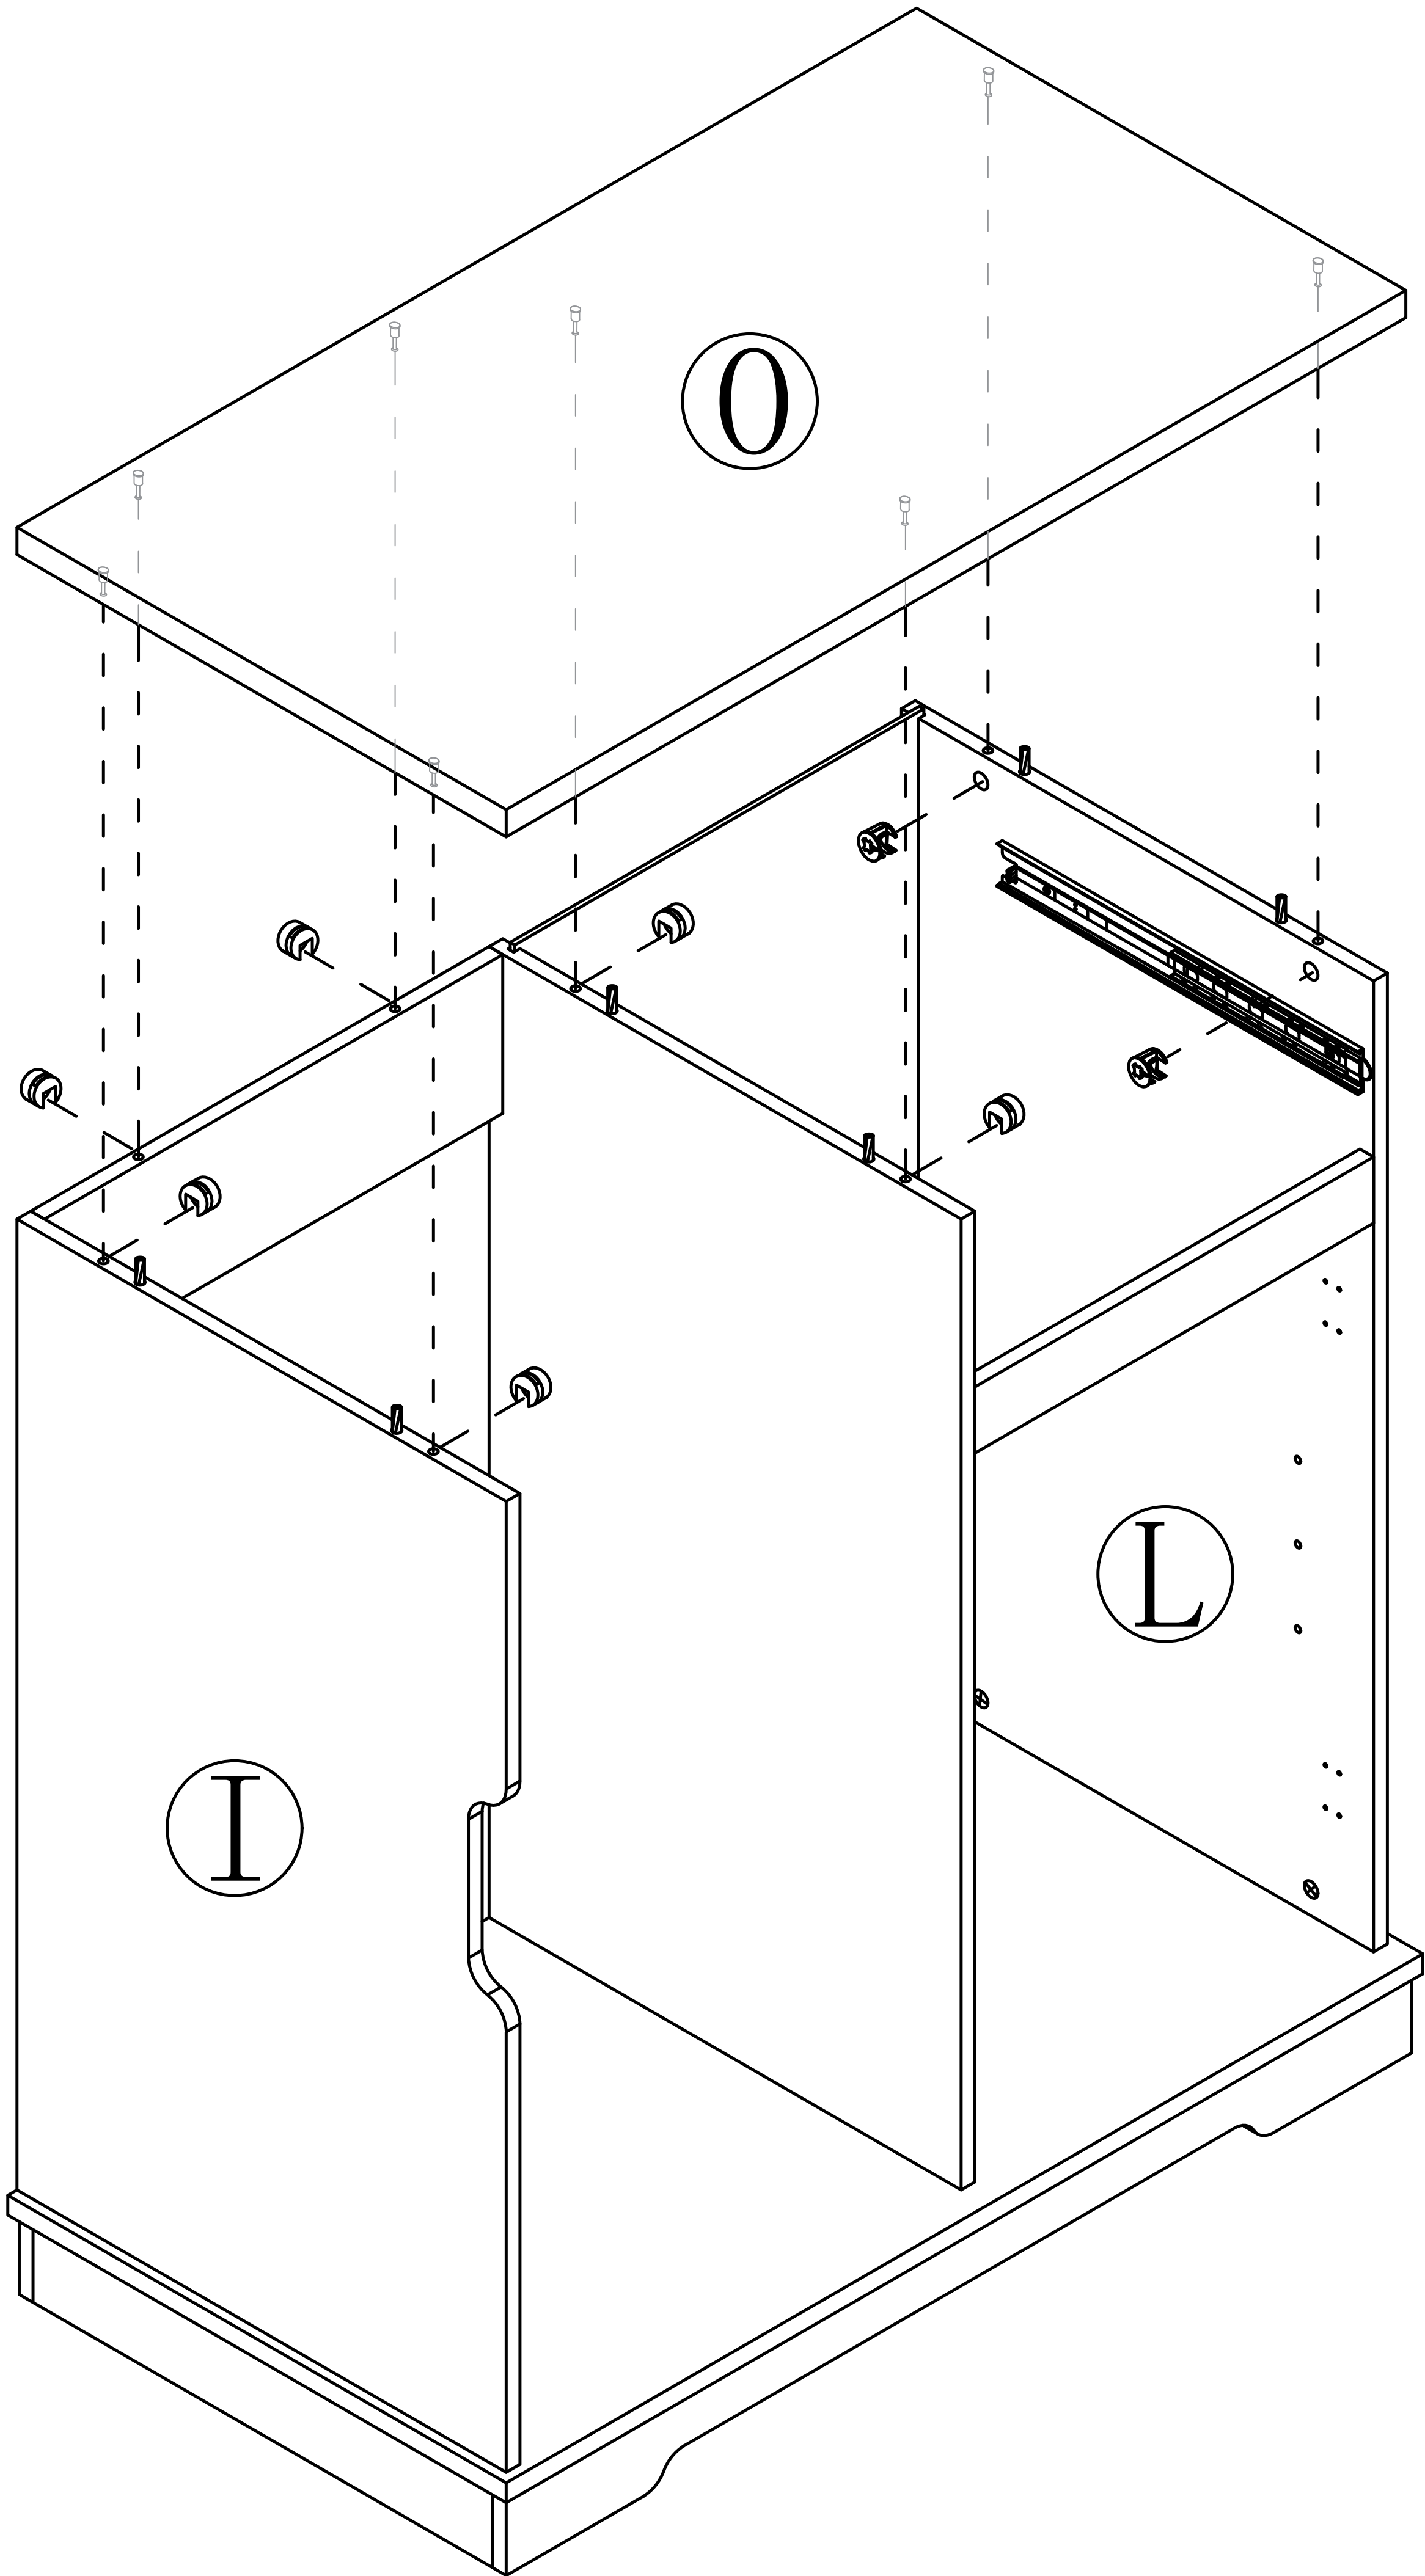


Step 32

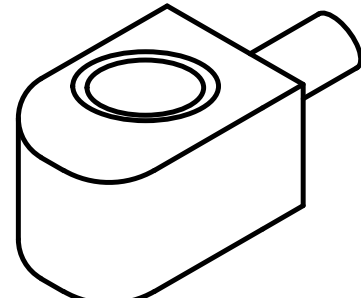7  x4

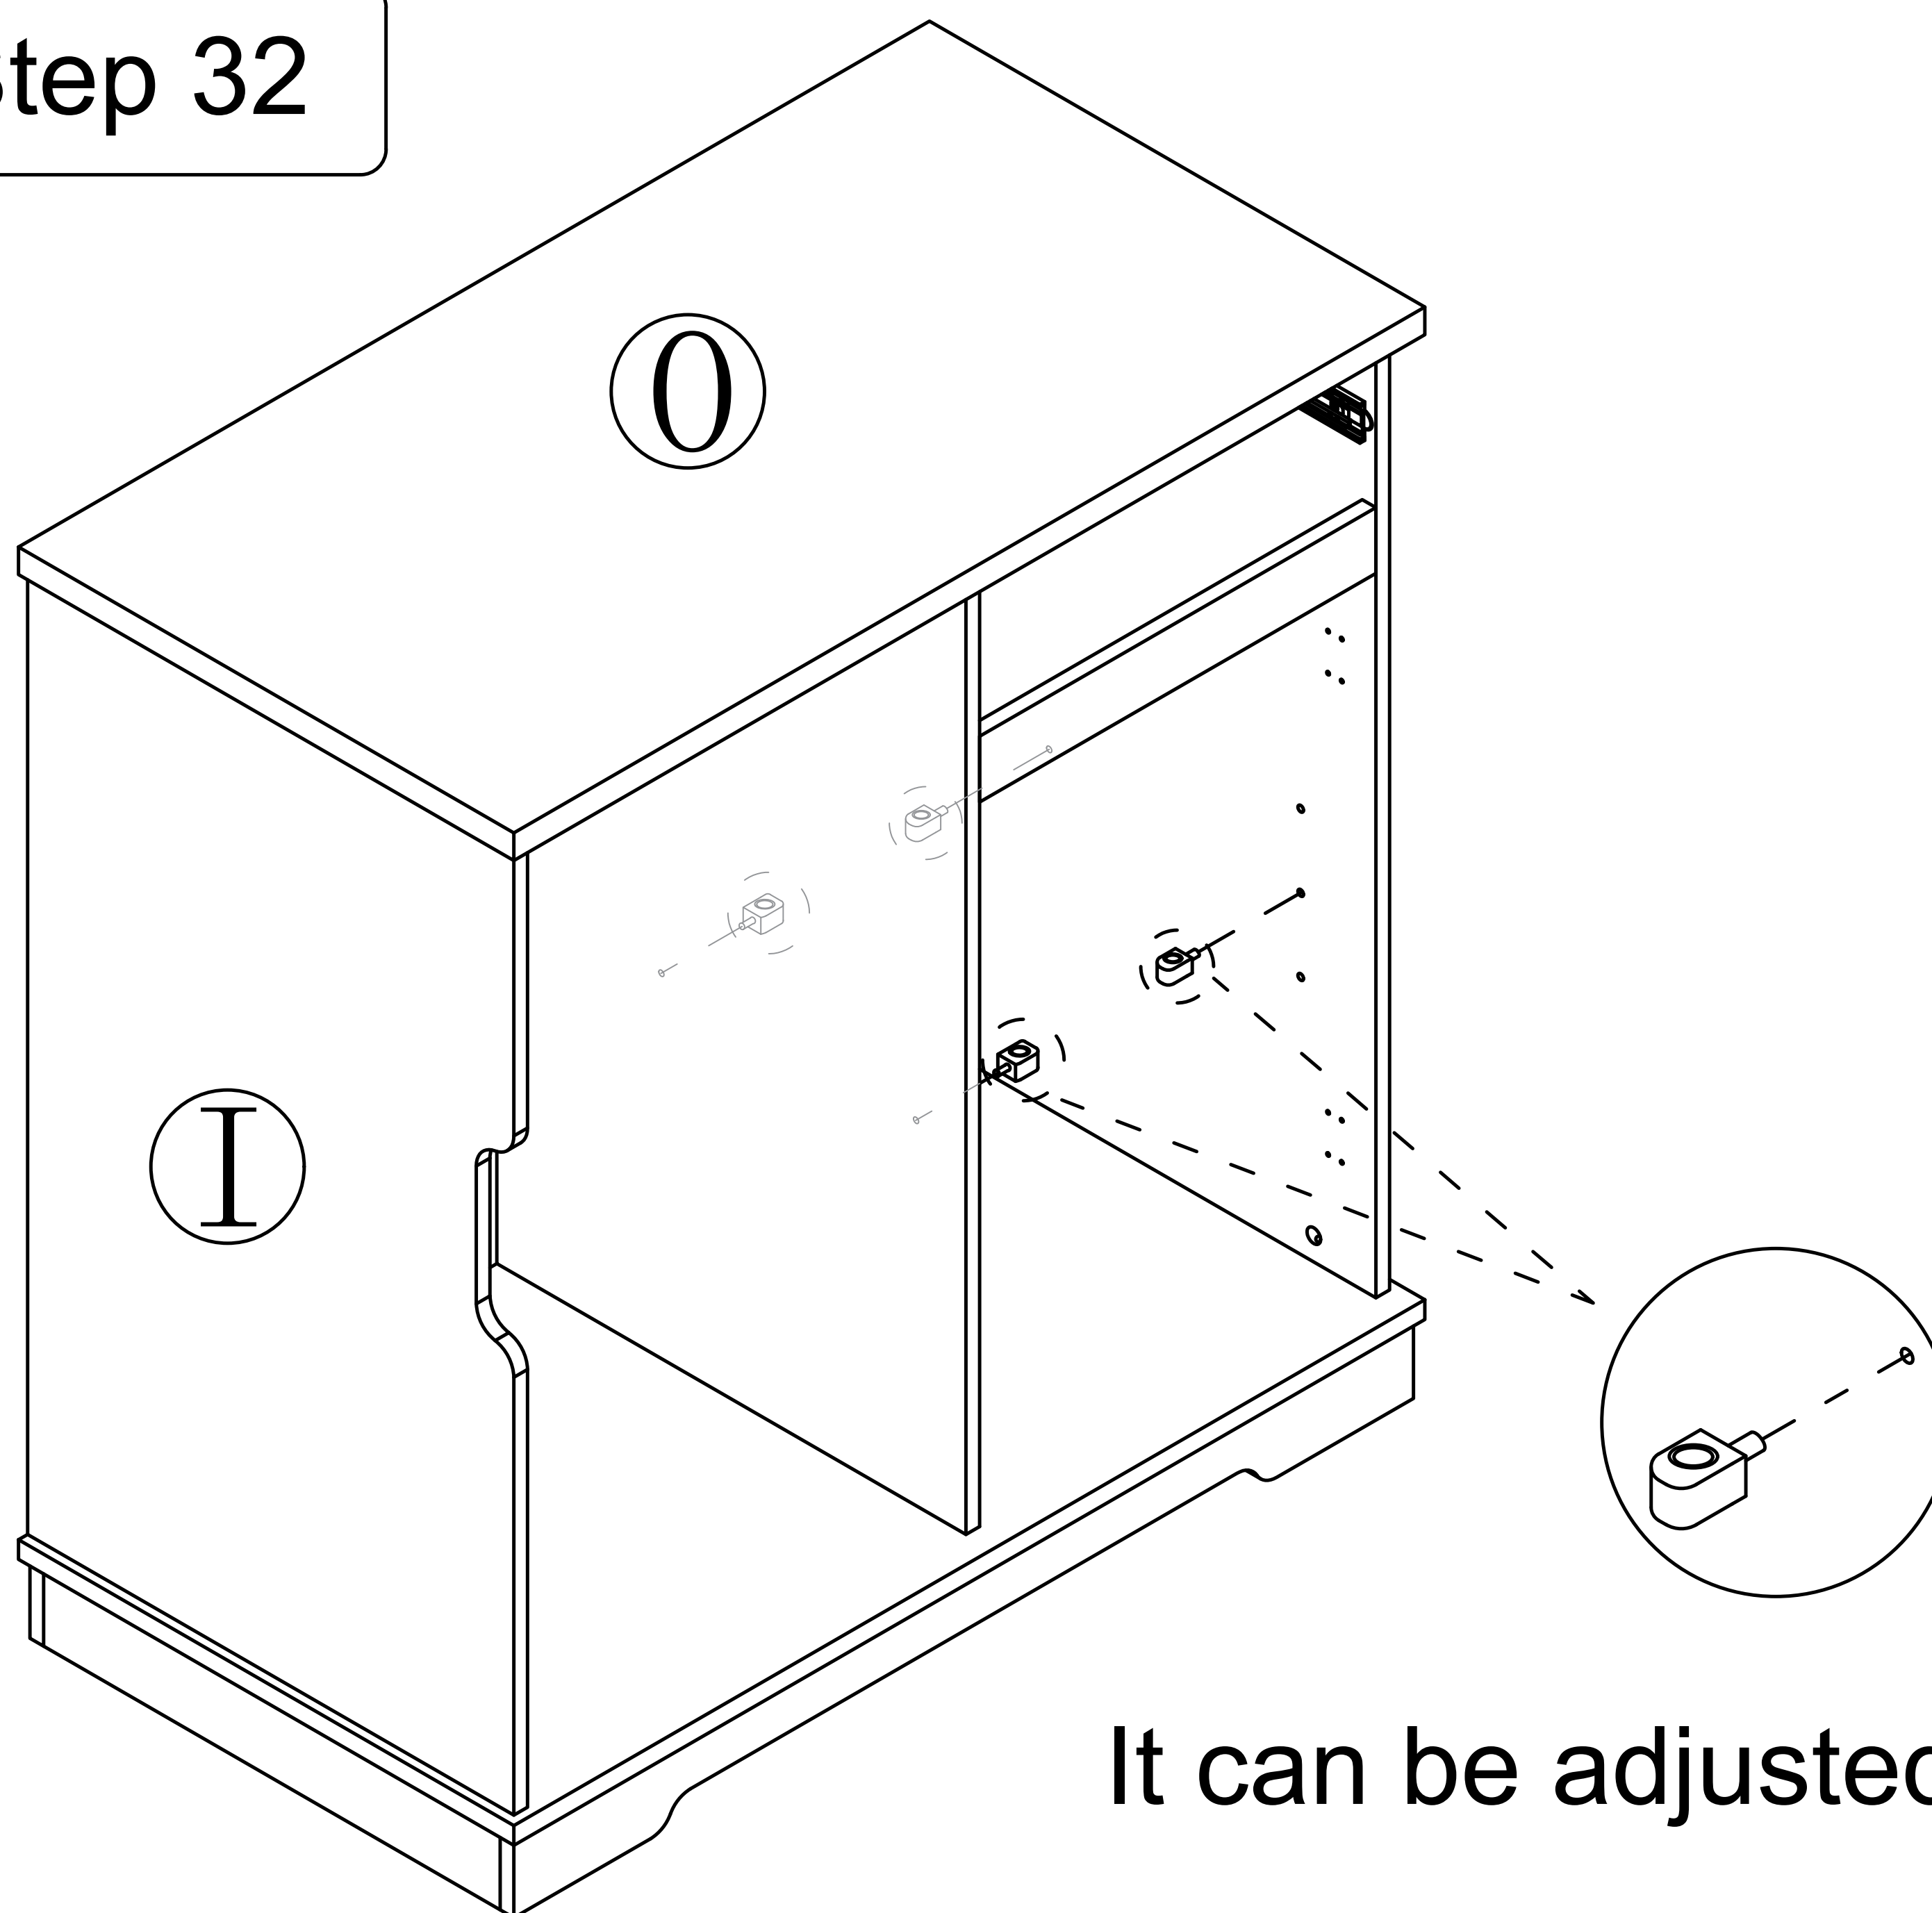


It can be adjusted up and down.

Step 33

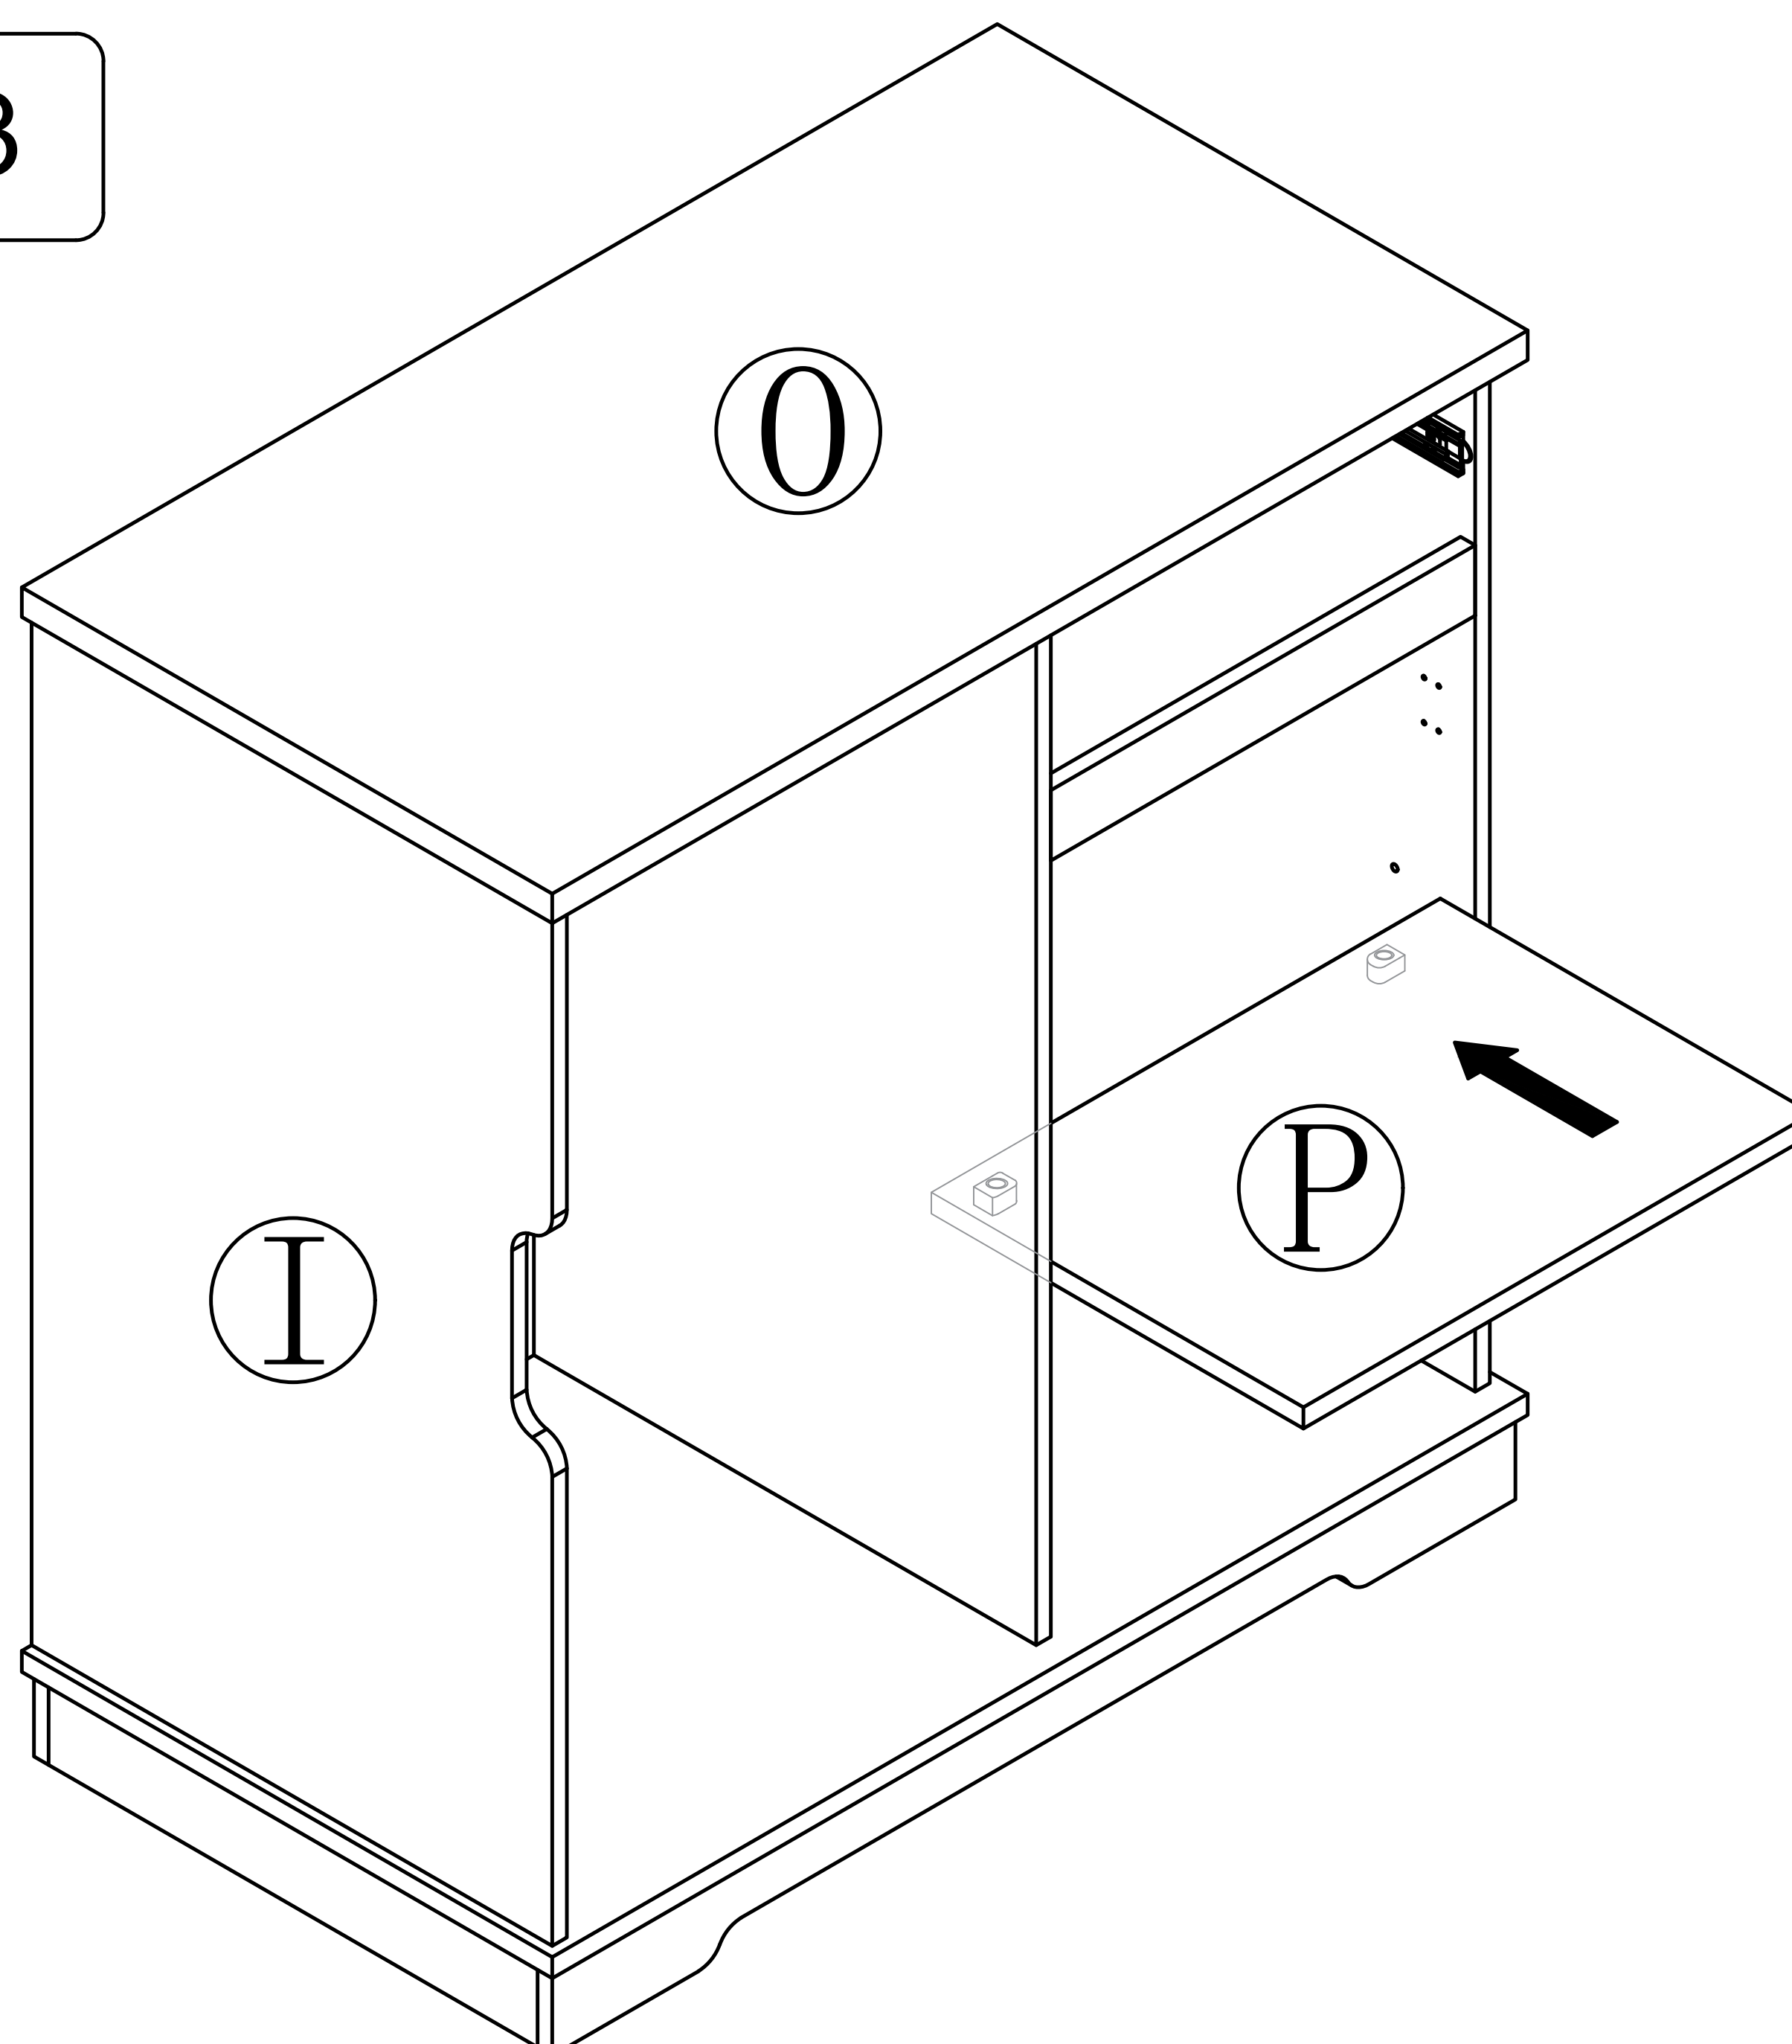


Turning this screw can effectively adjust the size of the door gap.

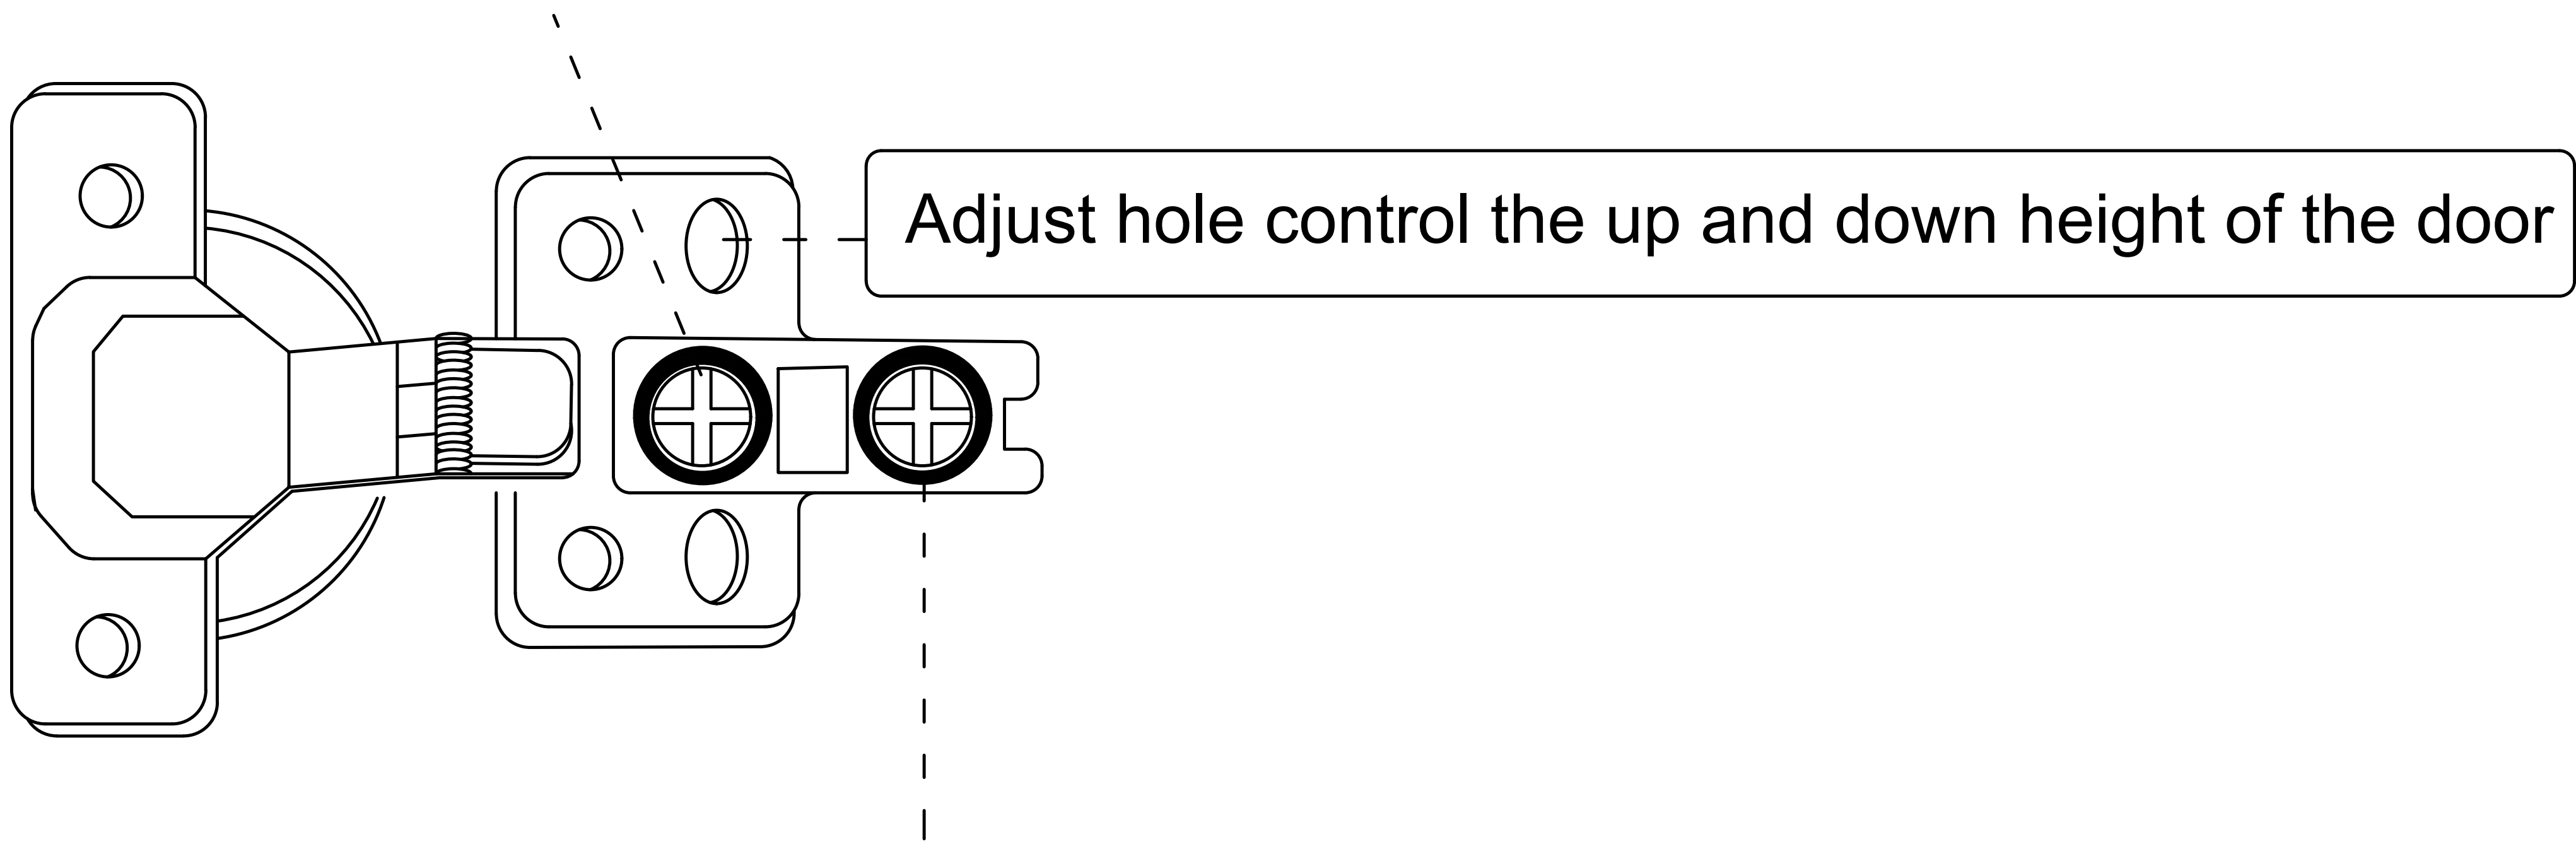


Turn this screw to adjust the door panel to be flat with the side panel.


Step 34

8 x2 x4

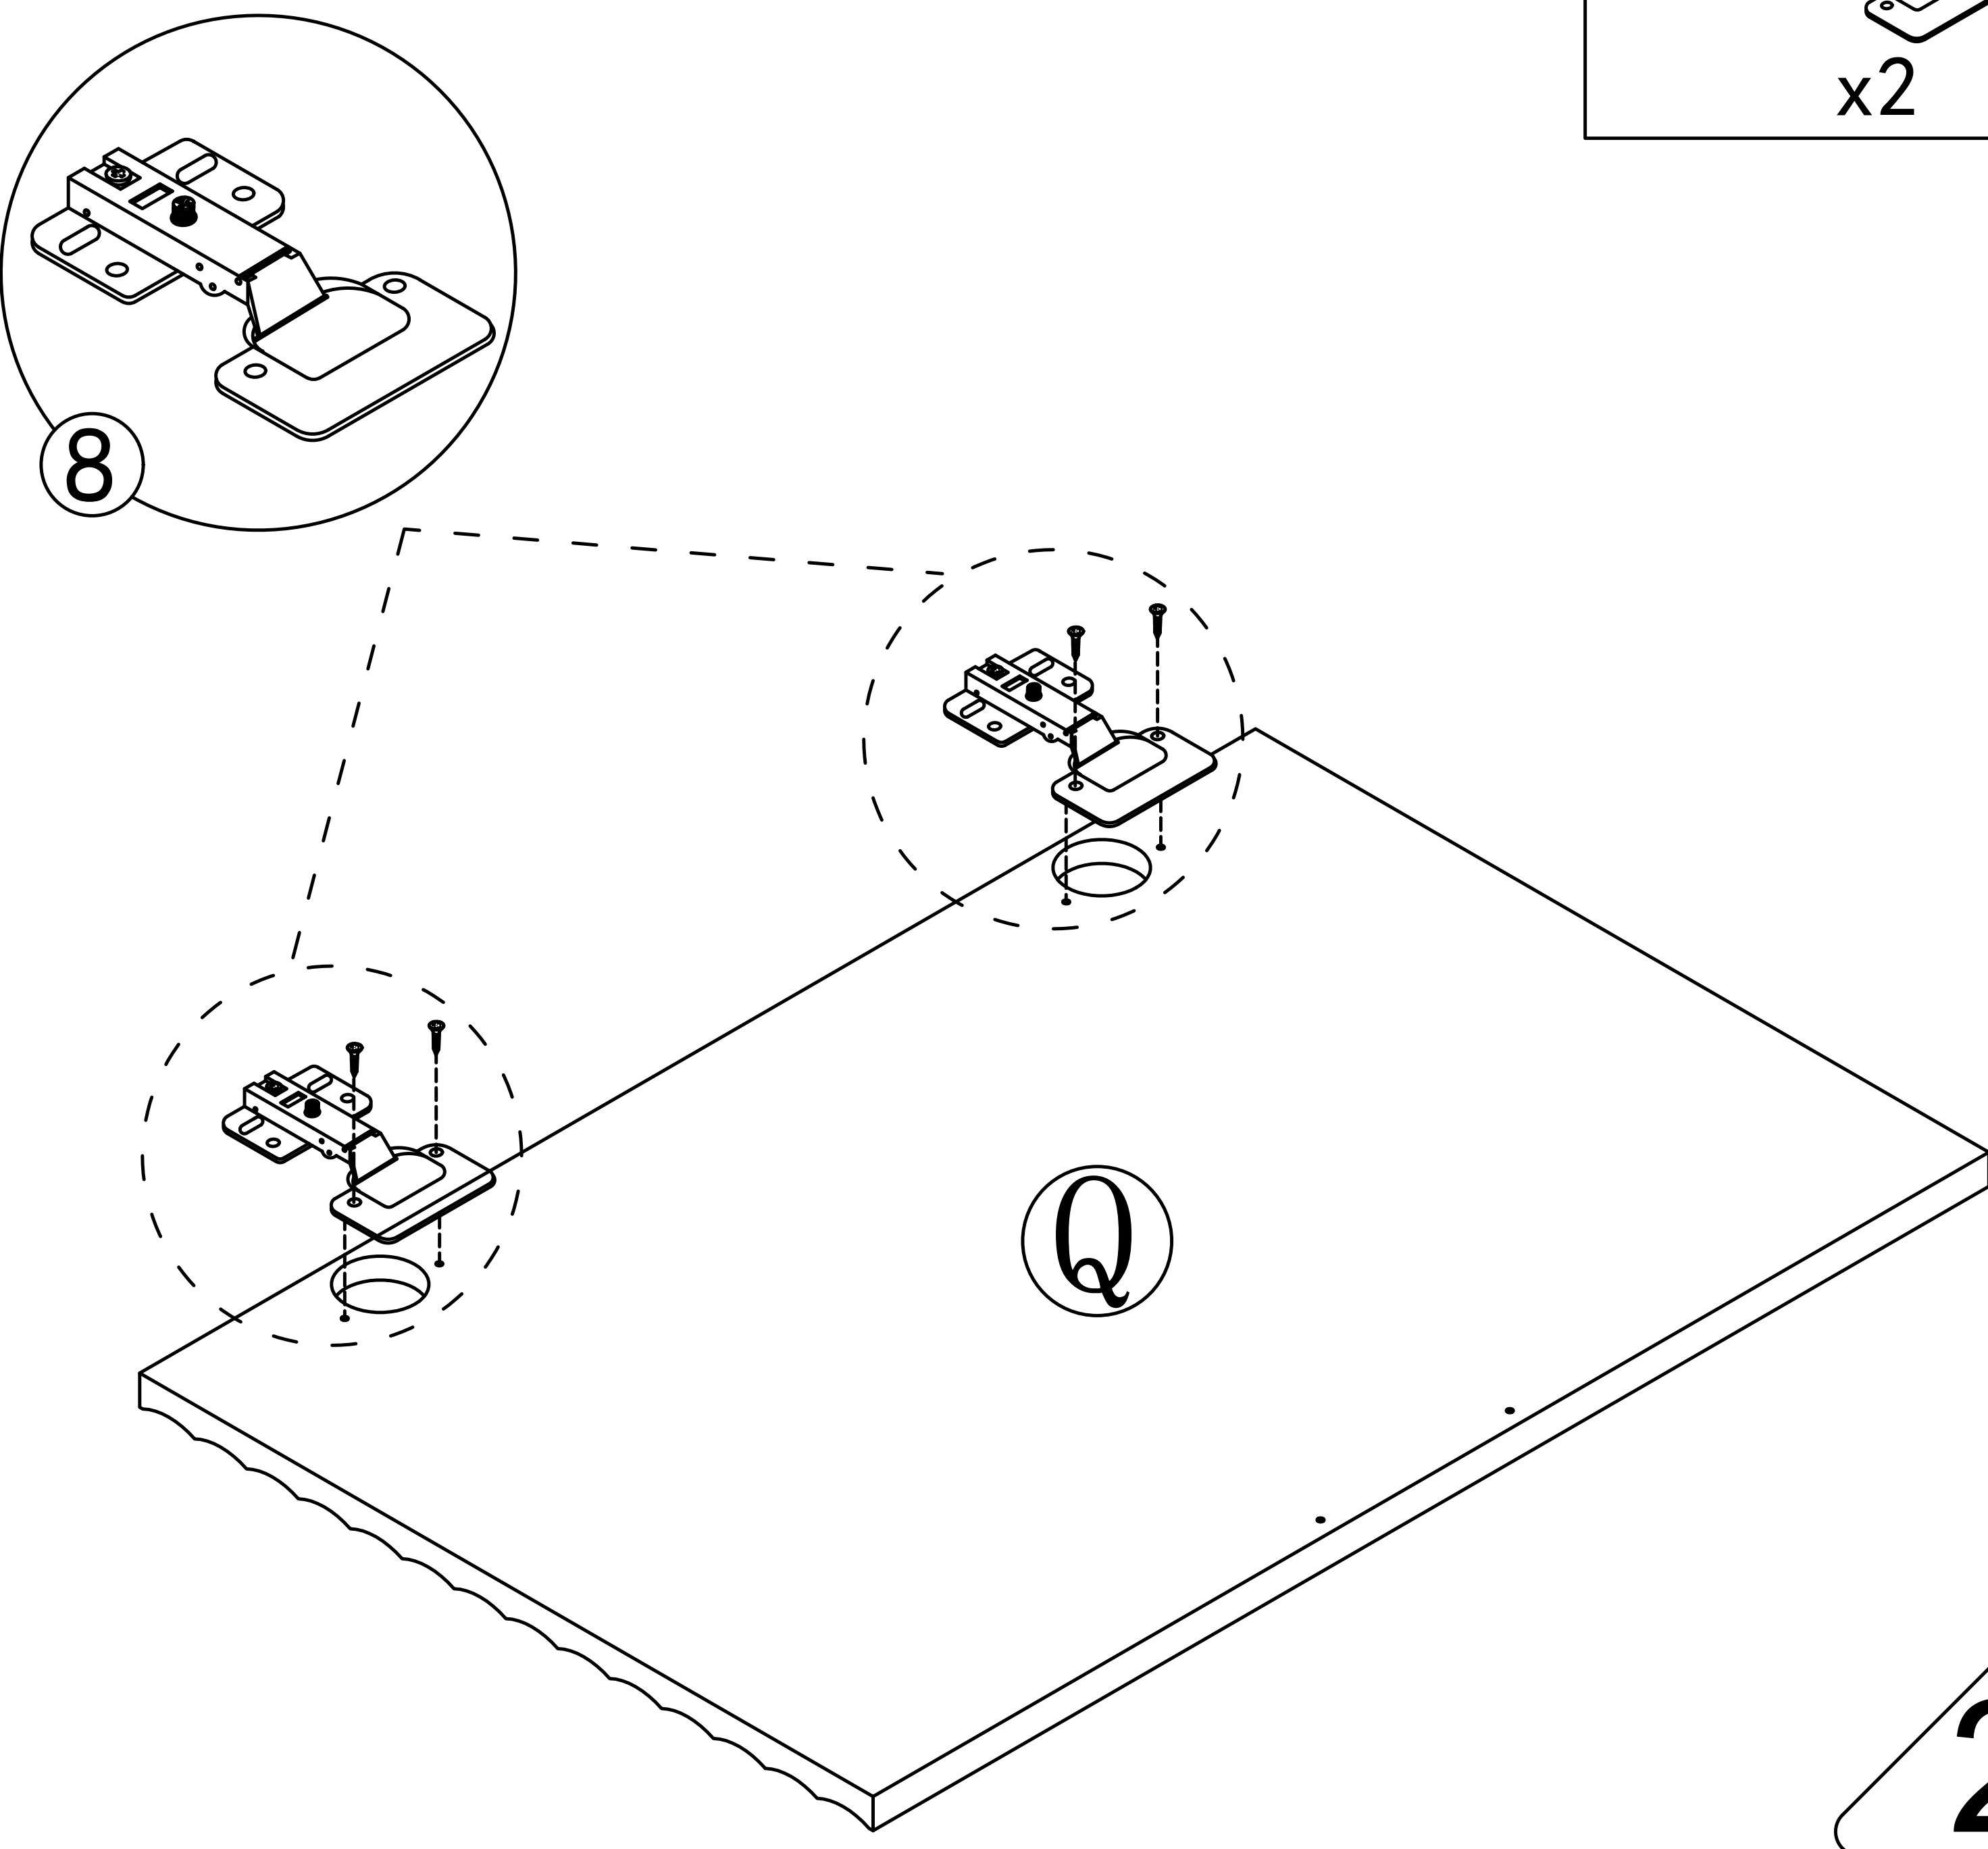

Step 35

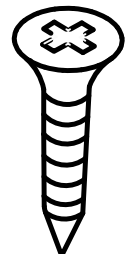
8  x8

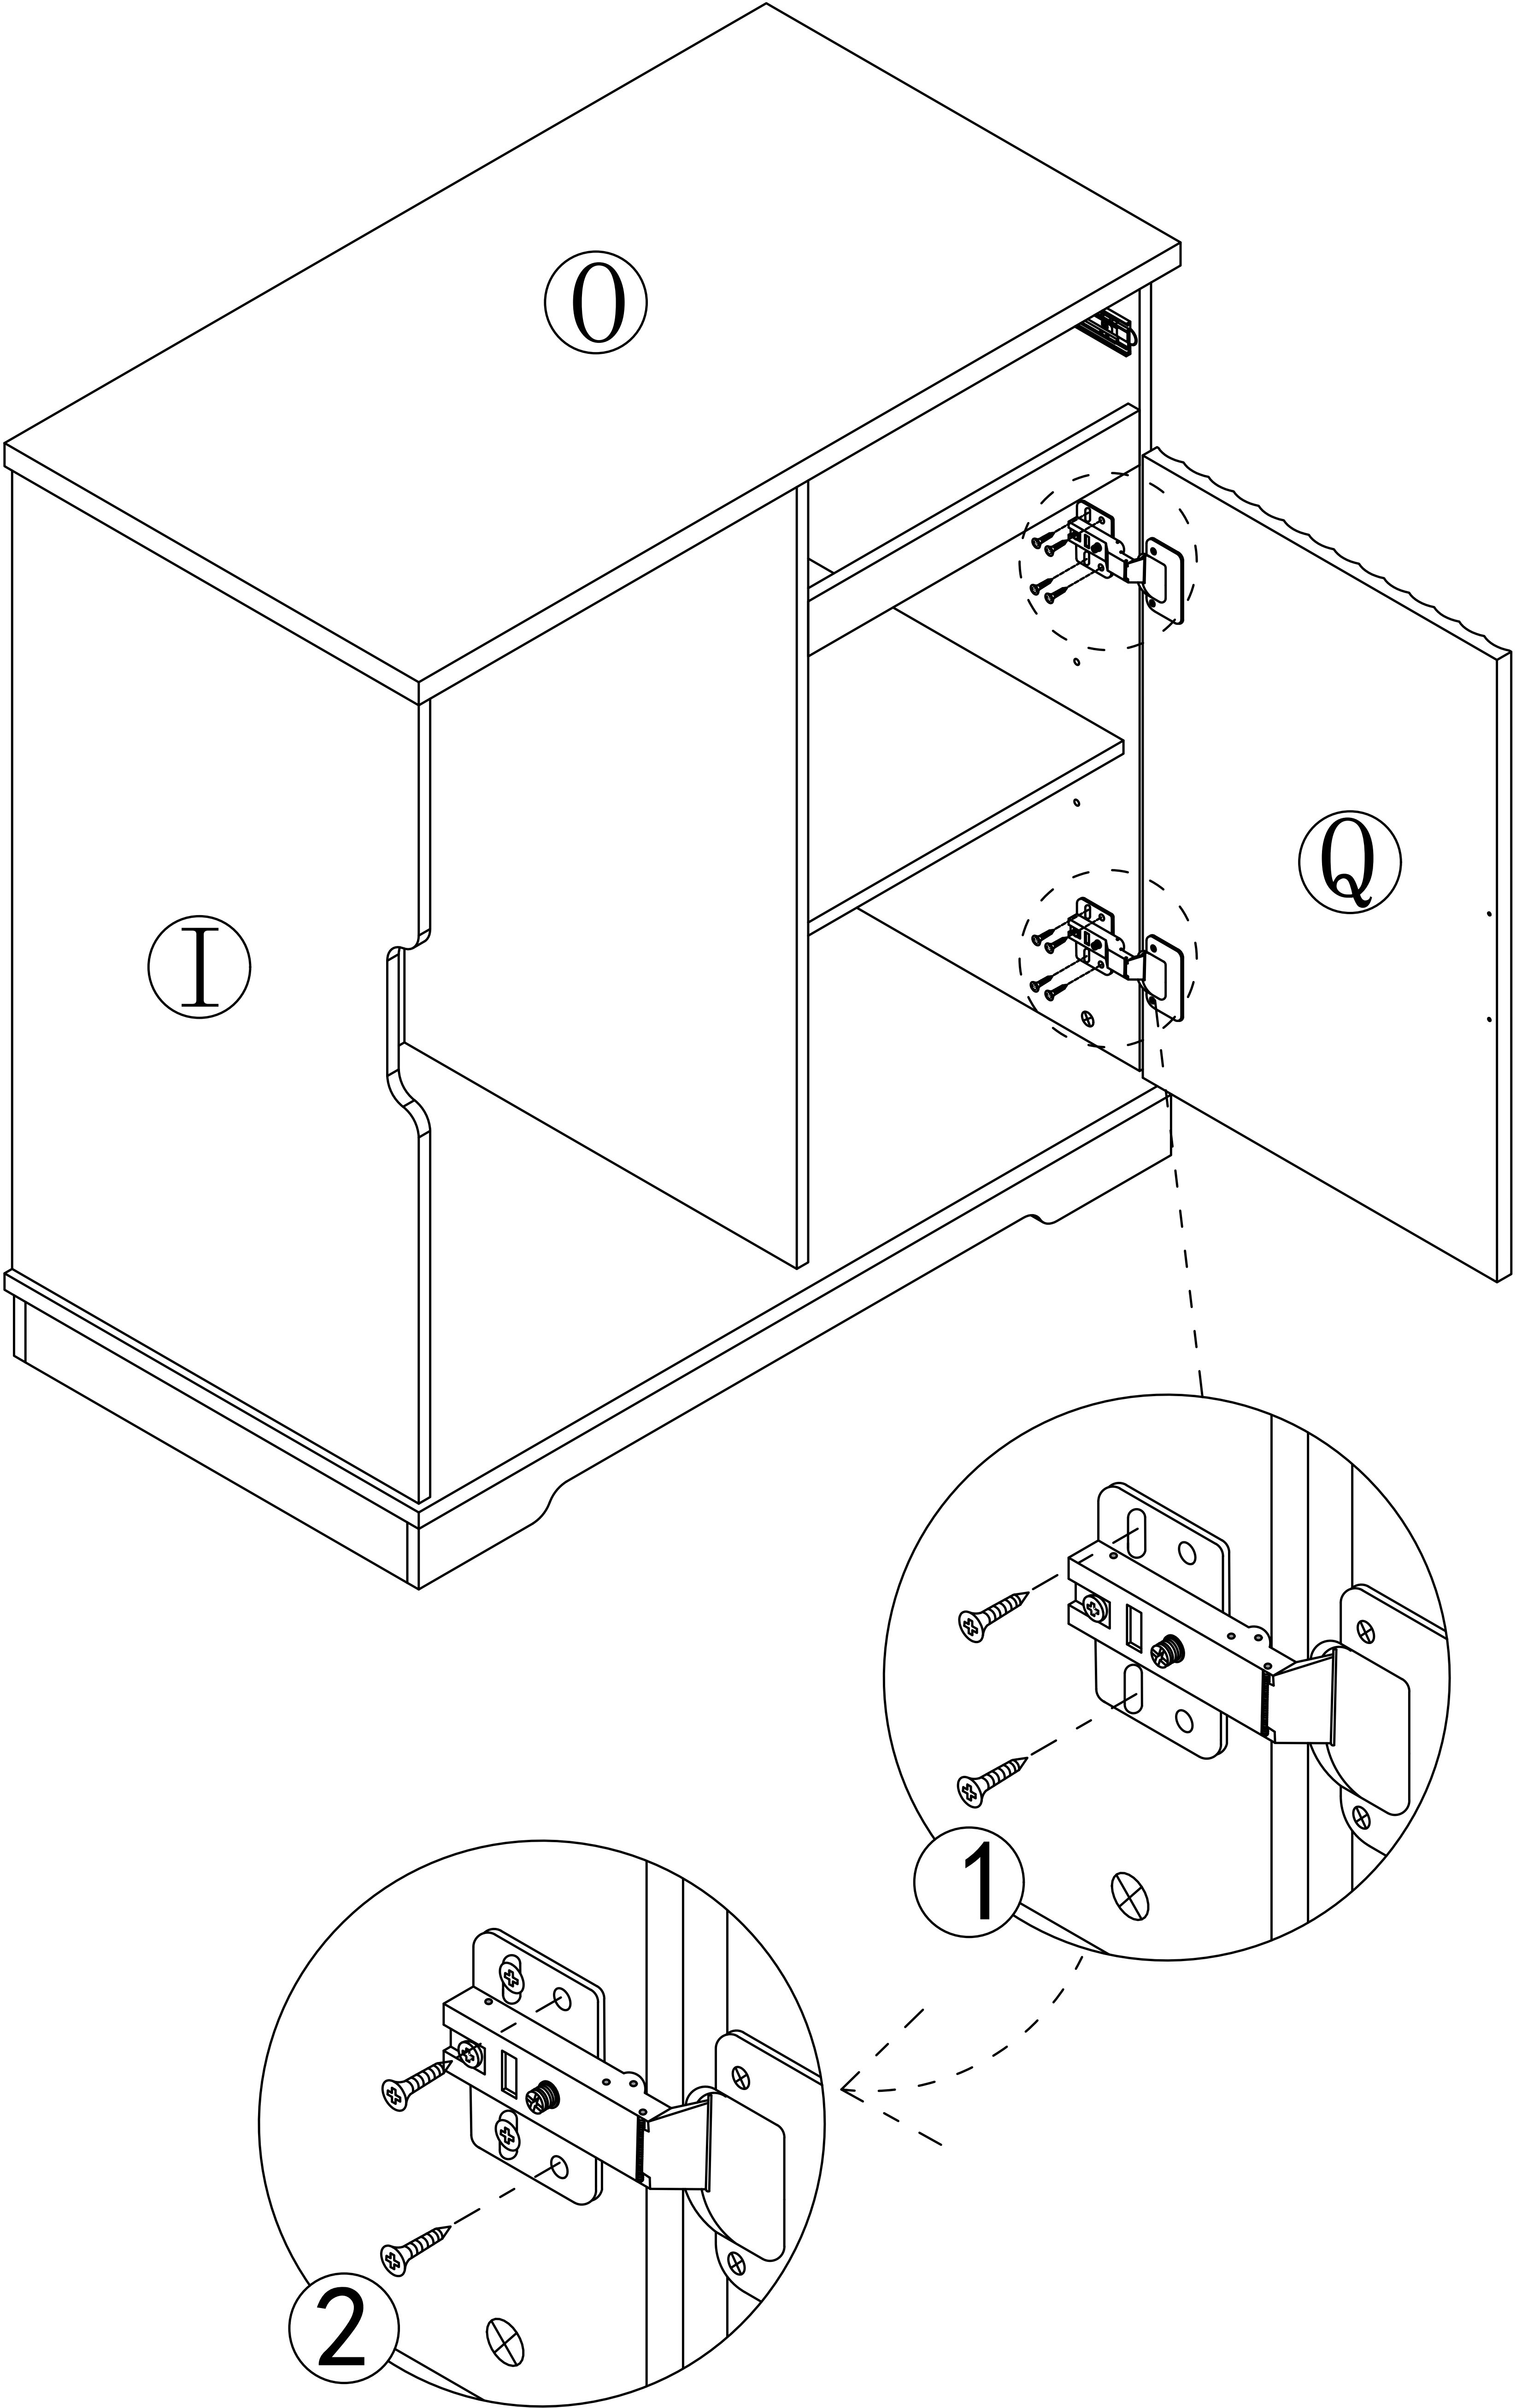


First lock the elliptical hole then lock the fixed hole

Step 36


4

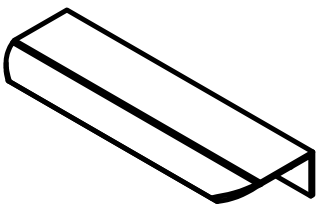



x1



x2

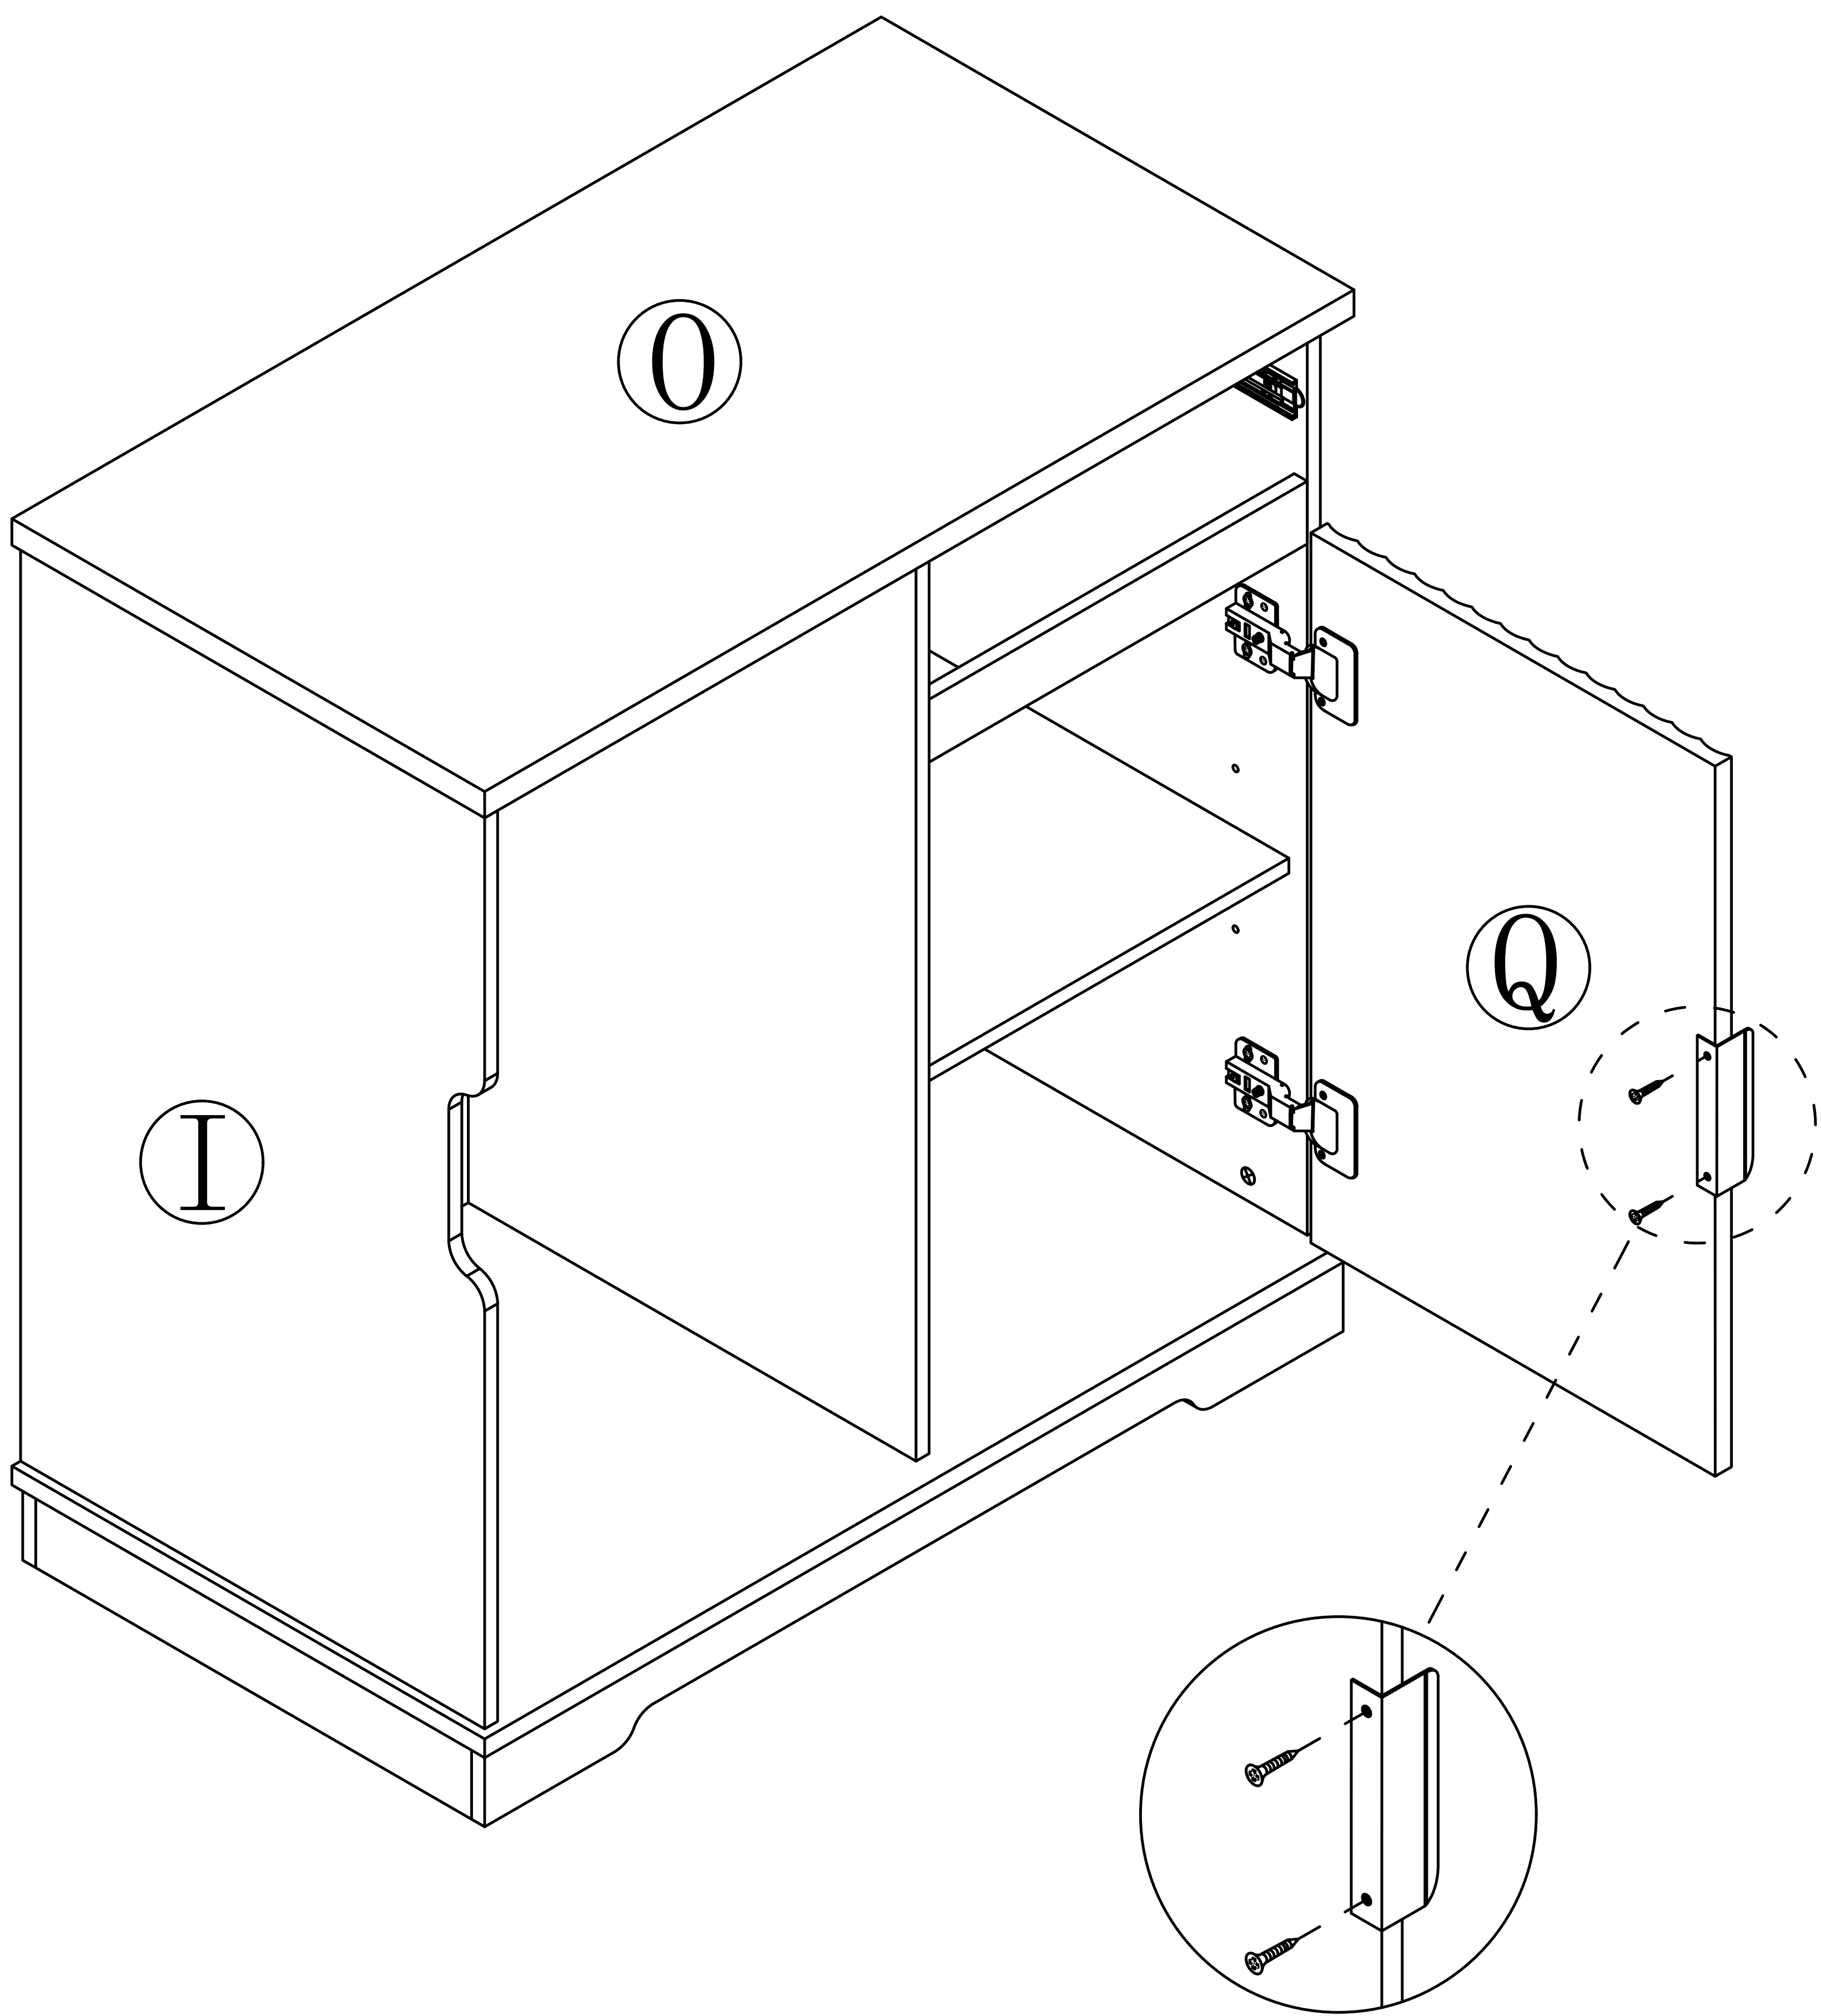


Step 37

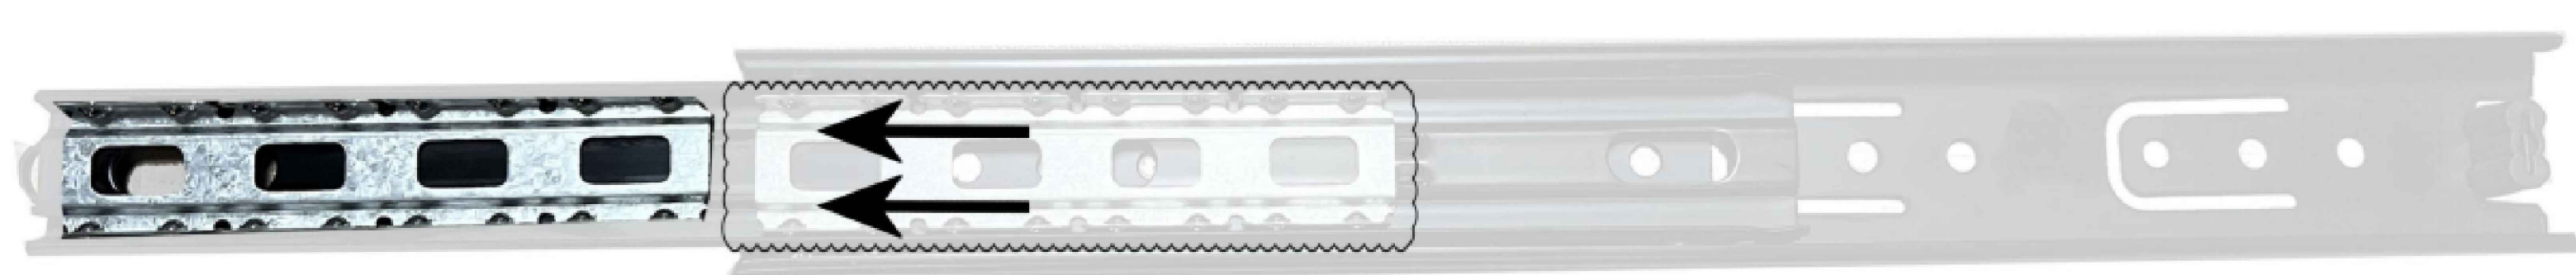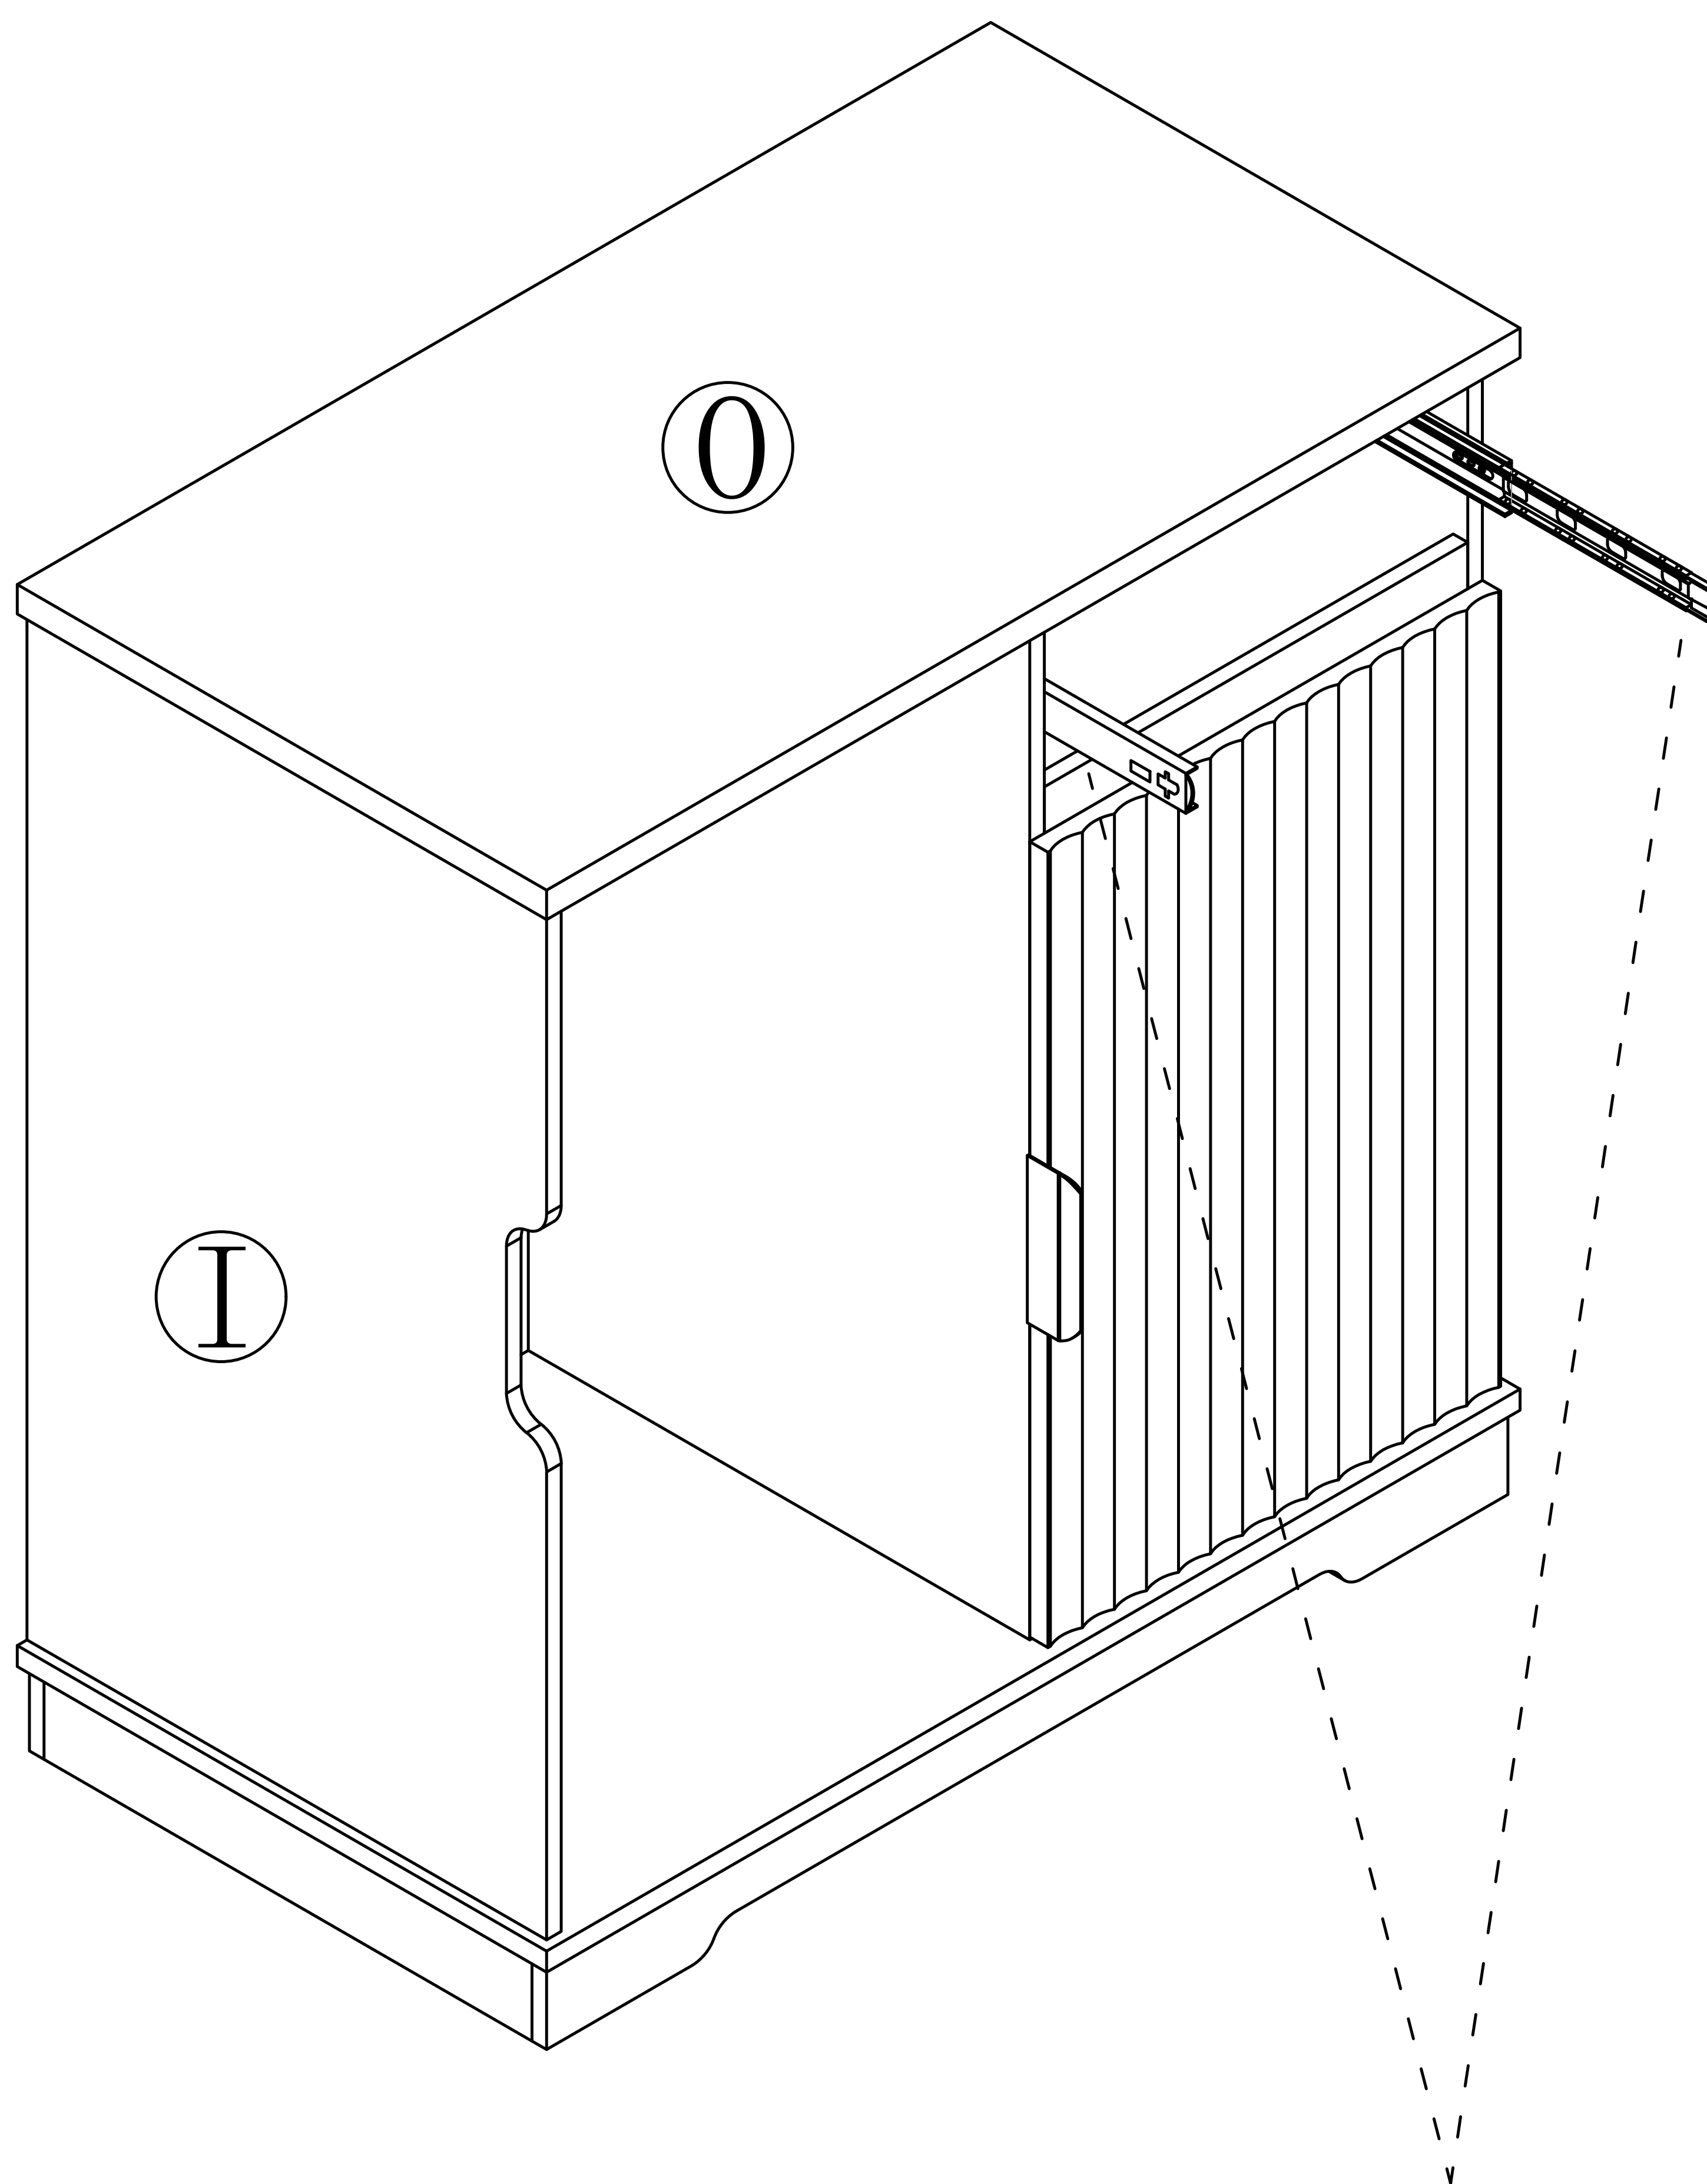


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 38

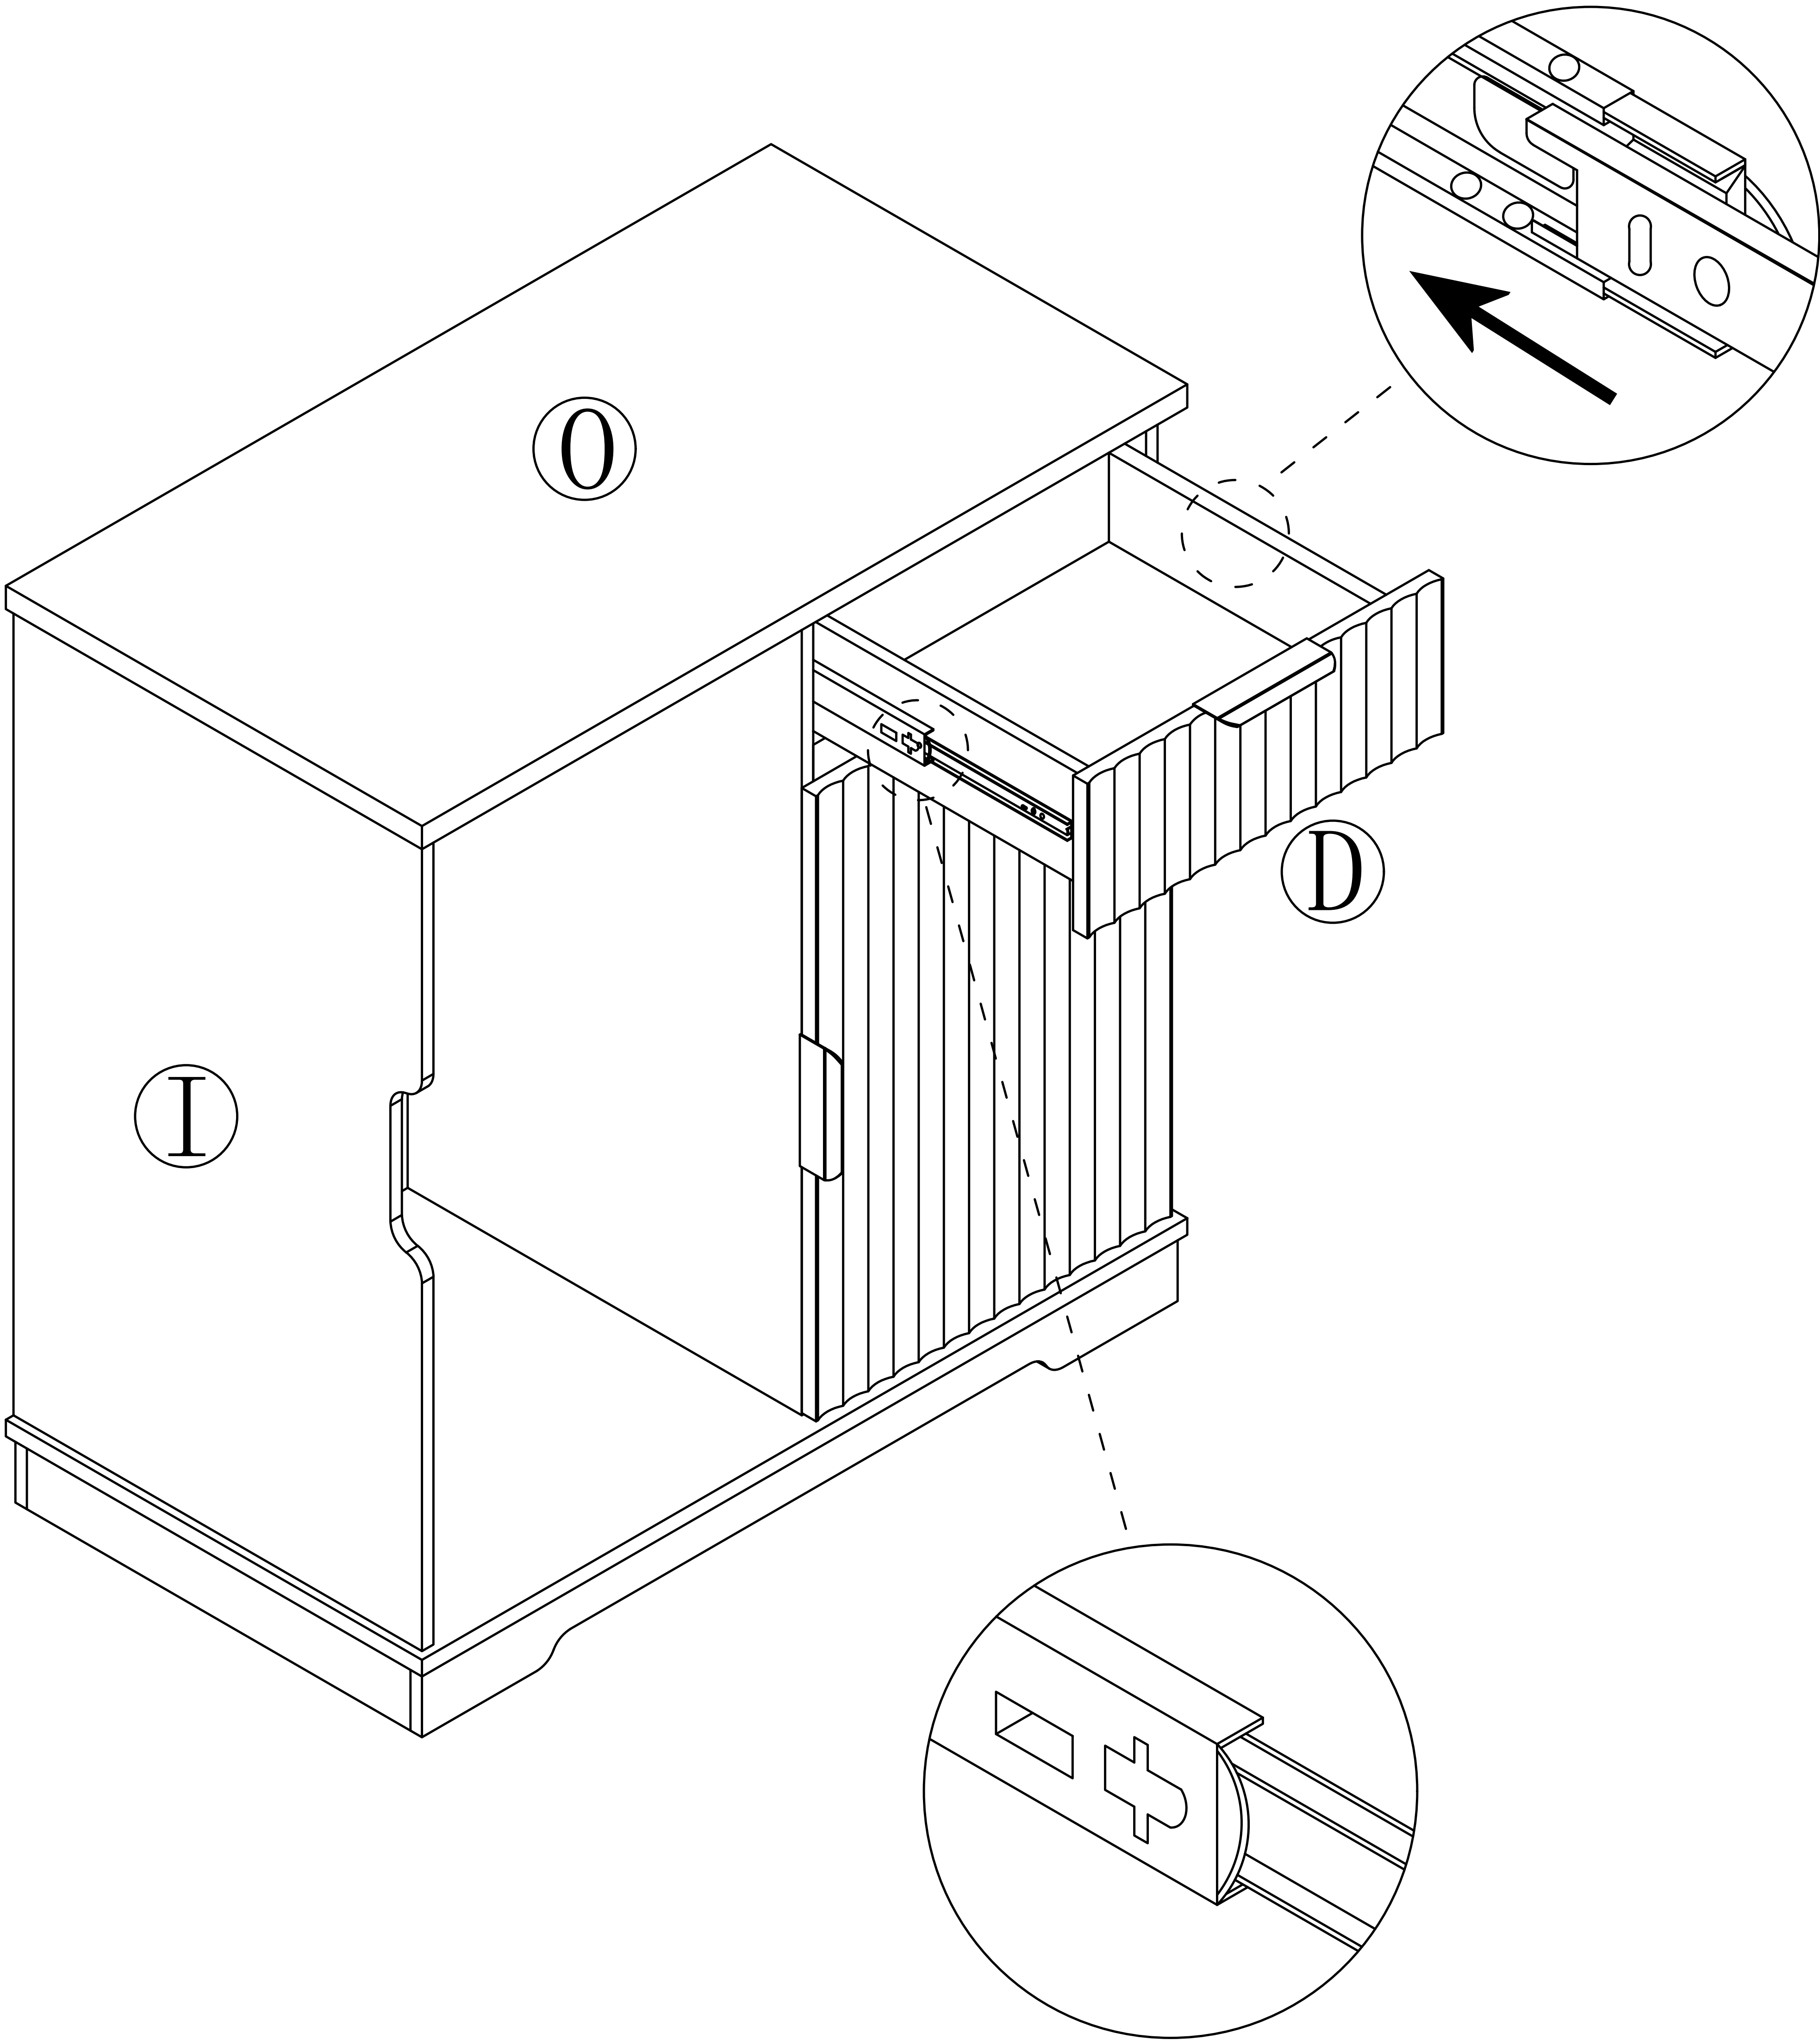


Step 39

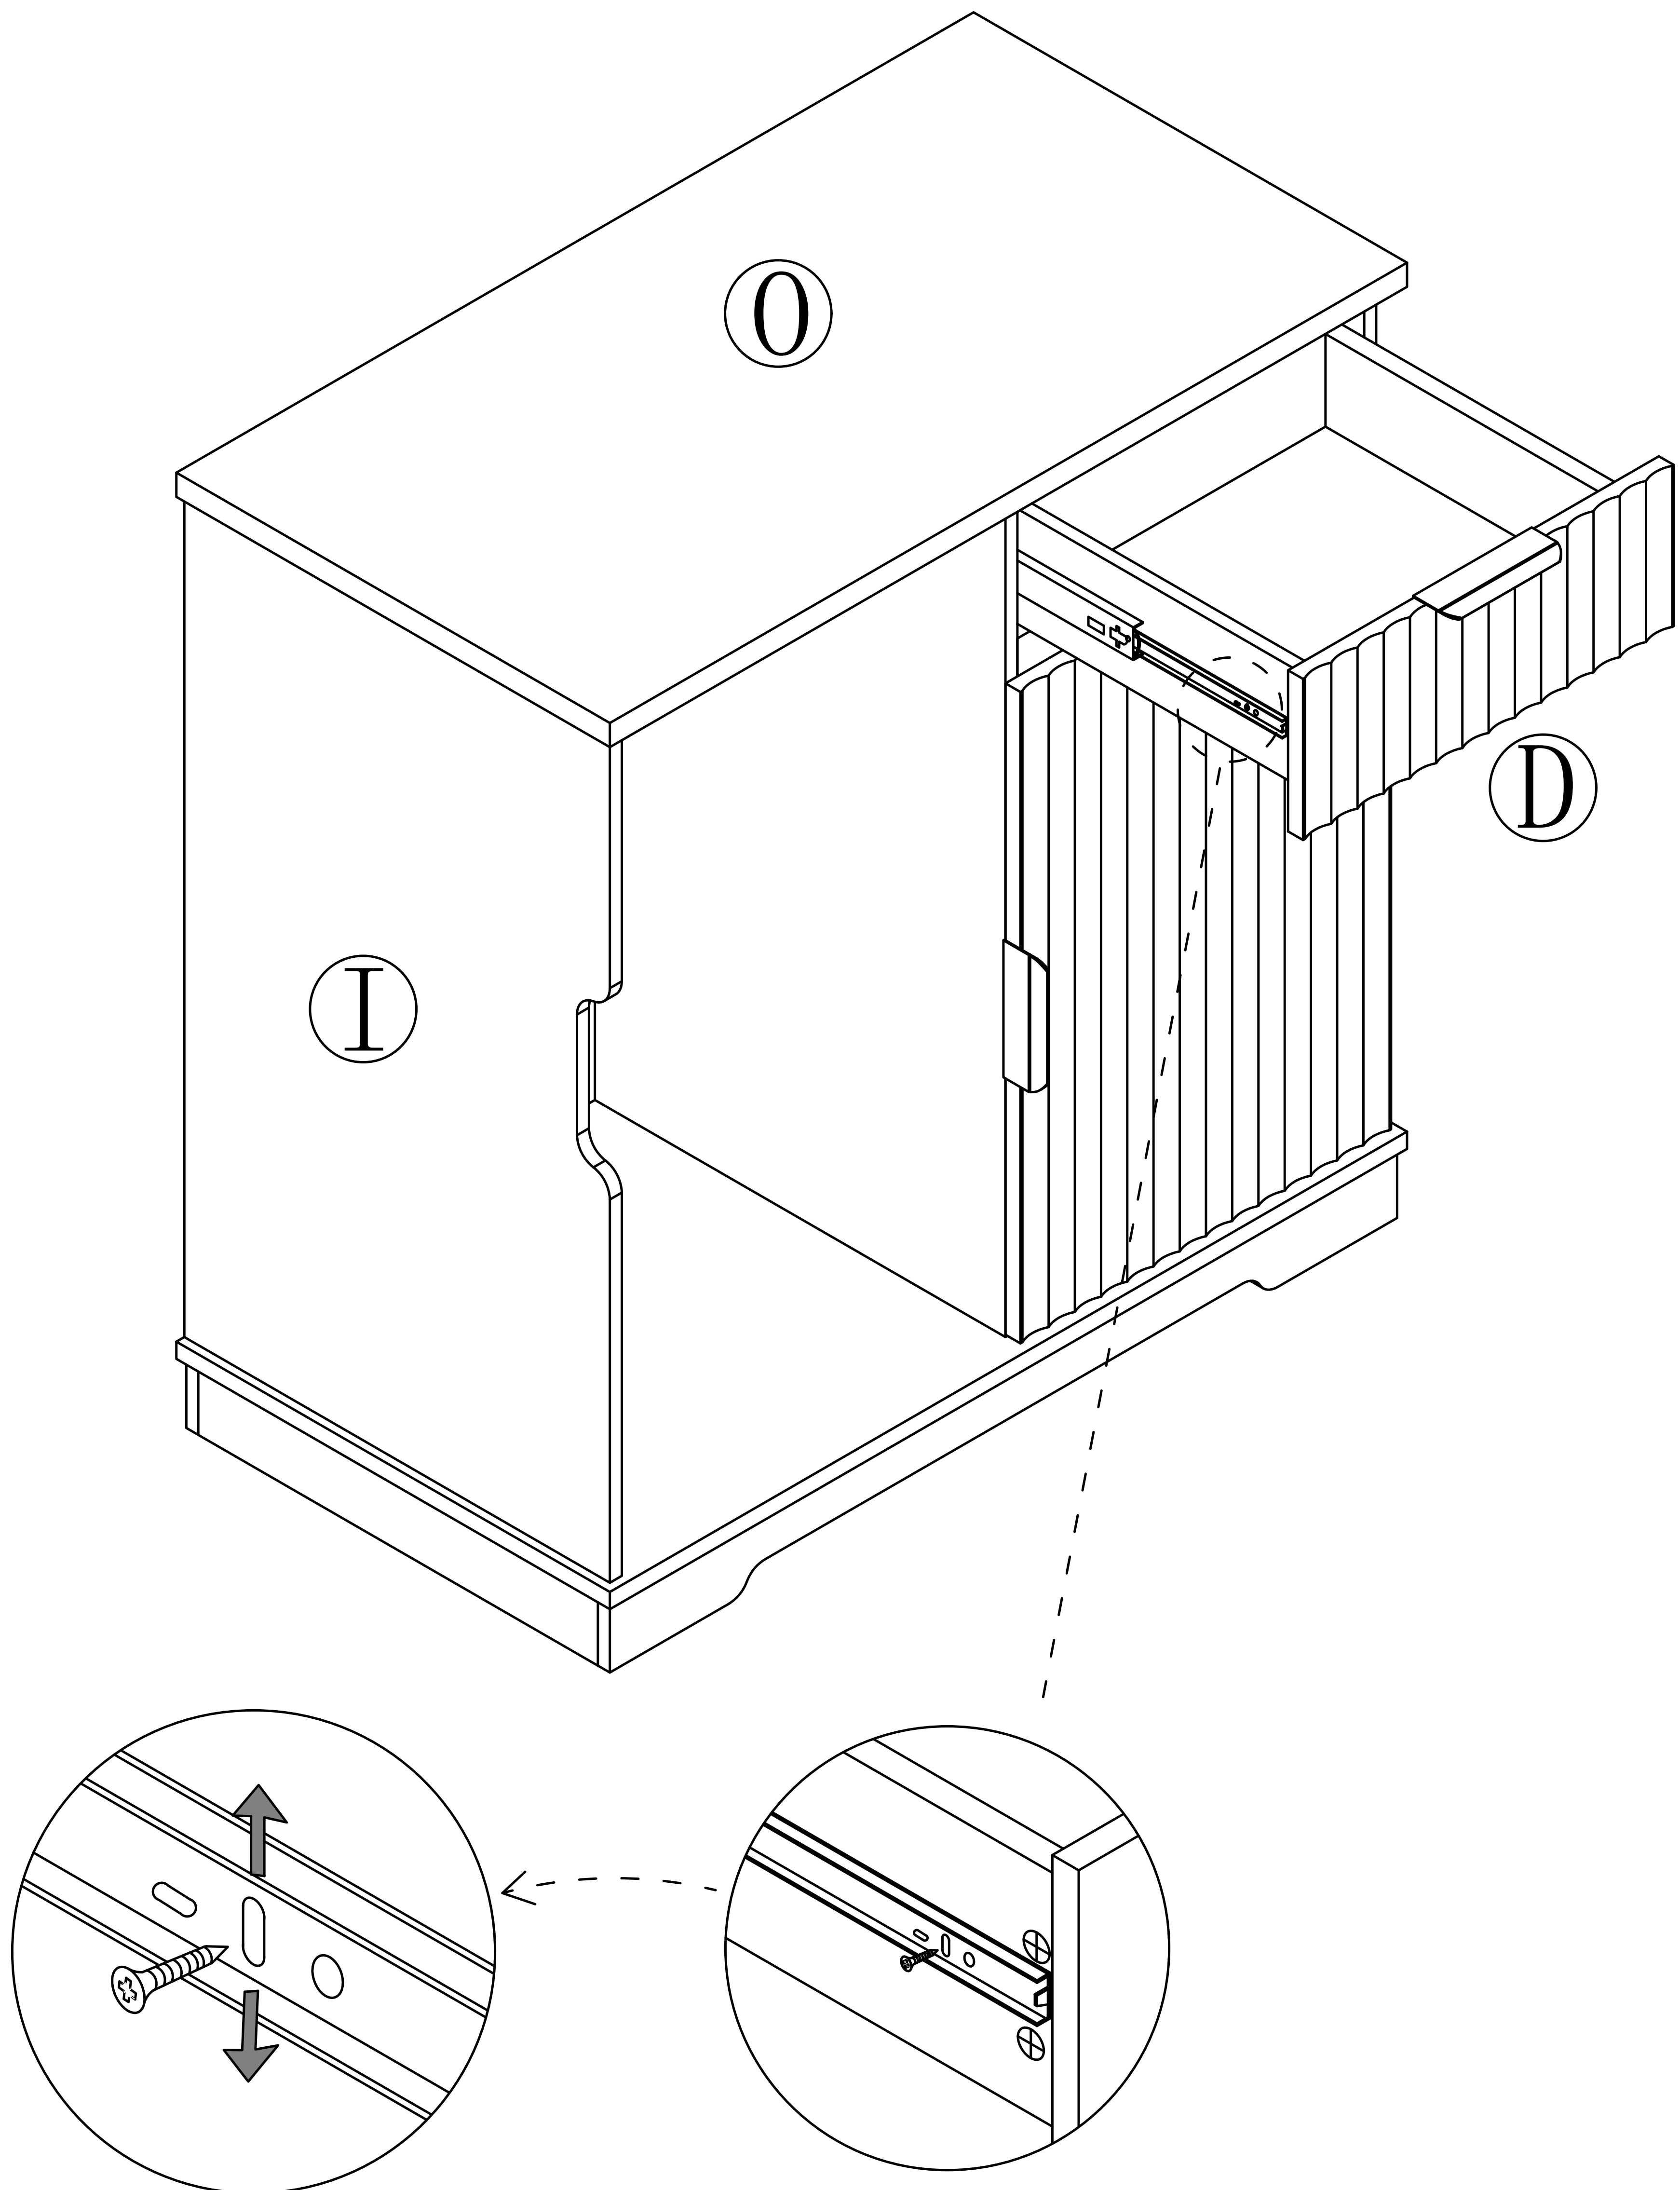

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 40

9

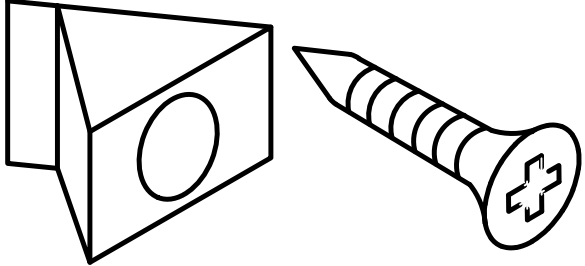

x6

