





UNI-GREEN CERAMICS NICHE INSTALL INSTRUCTION

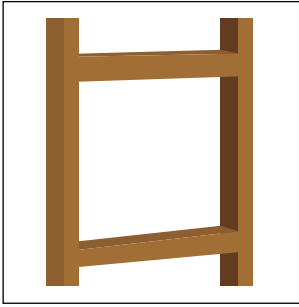

STEP 1

Determine the location of the niche between two vertical studs and mark the 2x4 inches accordingly with the help of a spirit level. Add horizontal blocking pieces to support the top and bottom of the niche **in advance, make sure the size exact and be careful not to break it when try the location of the niche.**

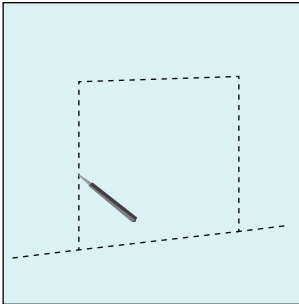

STEP 2

Cut an opening in the cement board to the exact inside size of the niche, and try to install it around the niche.



STEP 3


Apply a bead of polyurethane sealant on the total back of the ceramics niche.



STEP 4

Apply the cement mortar evenly to the outer perimeter and bottom of the pre-set wooden frame.

Ensure that the niche is horizontally level, and the interior of the niche is slightly higher than the opening, which is more conducive to the drainage of accumulated water in the niche.

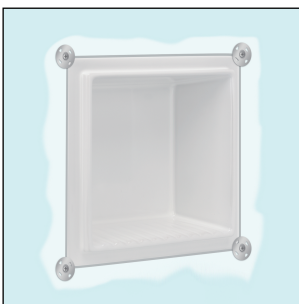

STEP 5

Make sure the cement board match the outside edges of the ceramics niche and fasten to the studs using the washer and screws after testing the water flow can smoothly flow from the bottom of niche



STEP 6

Apply the mortar and install surrounding tiles, make sure the tiles match the inside edges of the ceramics niche.