



Congratulations on your purchase!
We thank you for choosing Rayne Mirrors!

***THIS ITEM SHIPS IN MULTIPLE PACKAGES
AND MAY ARRIVE SEPARATELY***

*You may contact us with any questions by e-mail at:
ORDERS@RAYNEMIRRORS.COM*

OR
by telephone at:
(573)325-1344



Installation Manual

INSTALLATION HELP AVAILABLE AT: ORDERS@RAYNEMIRRORS.COM

(573)325-1344



PARTS LIST

1. **SLIDING TRACK**
2. **MIRROR ROLLER HANGER X 2**
3. **MIRROR ROLLER STOPPER X 2**
4. **MOUNTING BRACKET X5**
5. **ALLEN WRENCH X2**
6. **MOUNTING BRACKET SPACER X5**
7. **DRYWALL ANCHORS X 5**
8. **LAG BOLT X5**
9. **WRENCH**


TOOLS NEEDED (NOT INCLUDED)



- 1.) **TAPE MEASURE**
- 2.) **PENCIL**
- 3.) **DRILL**
- 4.) **LEVEL**
- 5.) **STUD FINDER**
- 6.) **PHILIPS HEAD BIT**



www.hangmymirror.info

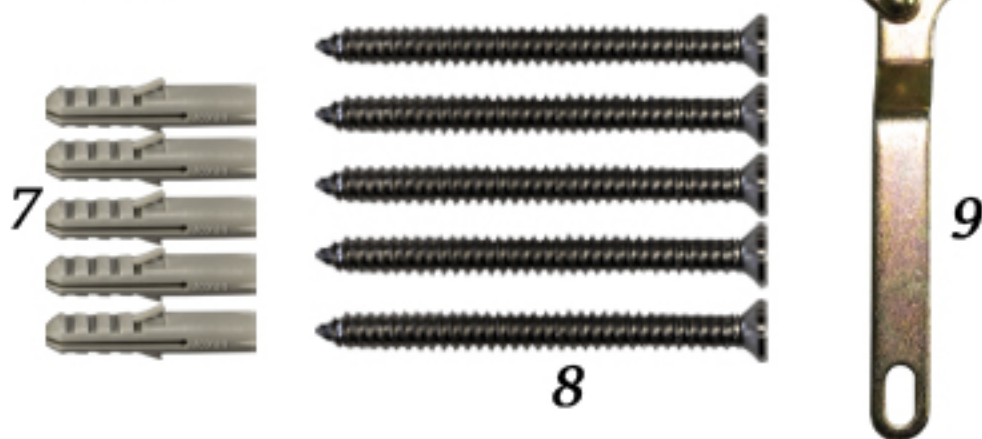

1. **TO BEGIN YOU WILL NEED TO LOCATE YOUR WALL STUDS WITH A STUDFINDER AND MARK THEIR LOCATION AT YOUR DESIRED HEIGHT.**



YOU WILL HAVE SOME

FLEXIBILITY MOUNTING THE SPACERS AS THE DISTANCE BETWEEN THEM CAN BE CUSTOMIZED TO YOUR APPLICATION AND STUD SPACING.

2. **USING A LEVEL, MARK THE LOCATIONS FOR THE LAG BOLT TO INSERT INTO YOUR STUD.**



3. **UNSCREW THE WALL SPACER INTO 3 PARTS.**



4. **USING A DRILL AND PHILLIPS BIT, MOUNT PART A WITH THE LAG BOLT ON YOUR LAYOUT MARK. (REPEAT THIS FOR ALL BRACKETS)**



5. **ASSEMBLE ALL PART B AND C'S, LEAVE THEM SLIGHTLY LOOSE AS YOU WILL FINISH TIGHTENING THEM ONCE THE BAR IS INSTALLED.**




6. REMOVE THE RUBBER STOPPER ARM FROM THE SIDE OF THE STOPPER TO ACCESS THE SET SCREW WITHIN. TIGHTEN SET SCREW ON BAR AT DESIRED LOCATION



YOU WILL NEED TO DETERMINE YOUR DESIRED LOCATION OF THE STOPPERS AND ATTACH THEM TO THE BAR. MAKE SURE THEY DO NOT INTERFERE WITH WALL SPACER LOCATION ON THE WALL



7. REASSEMBLE THE RUBBER STOPPER ARM AS SHOWN.

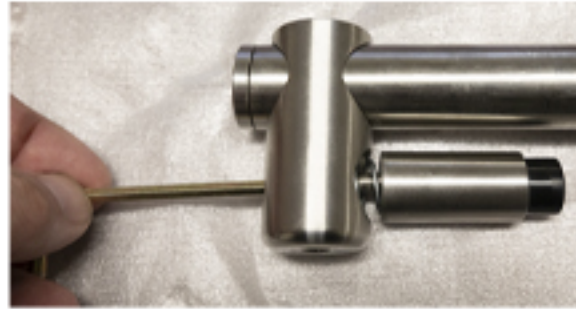

8. MOUNT THE BAR INTO THE WALL SPACERS. CONFIRM PLACEMENT AND TIGHTEN THE WALL SPACERS TO SECURE THE BAR.



9. MOUNT THE ROLLER HANGERS TO YOUR MIRROR. USING THE INCLUDED SPANNER WRENCH, ATTACH THE HANGERS AND TIGHTEN.



10. HANG THE MIRROR FROM THE BAR AND YOU ARE NOW FINISHED.

