


ASSEMBLY INSTRUCTIONS-PLEASE KEEP FOR FUTURE REFERENCE

HOME OFFICE FURNITURE

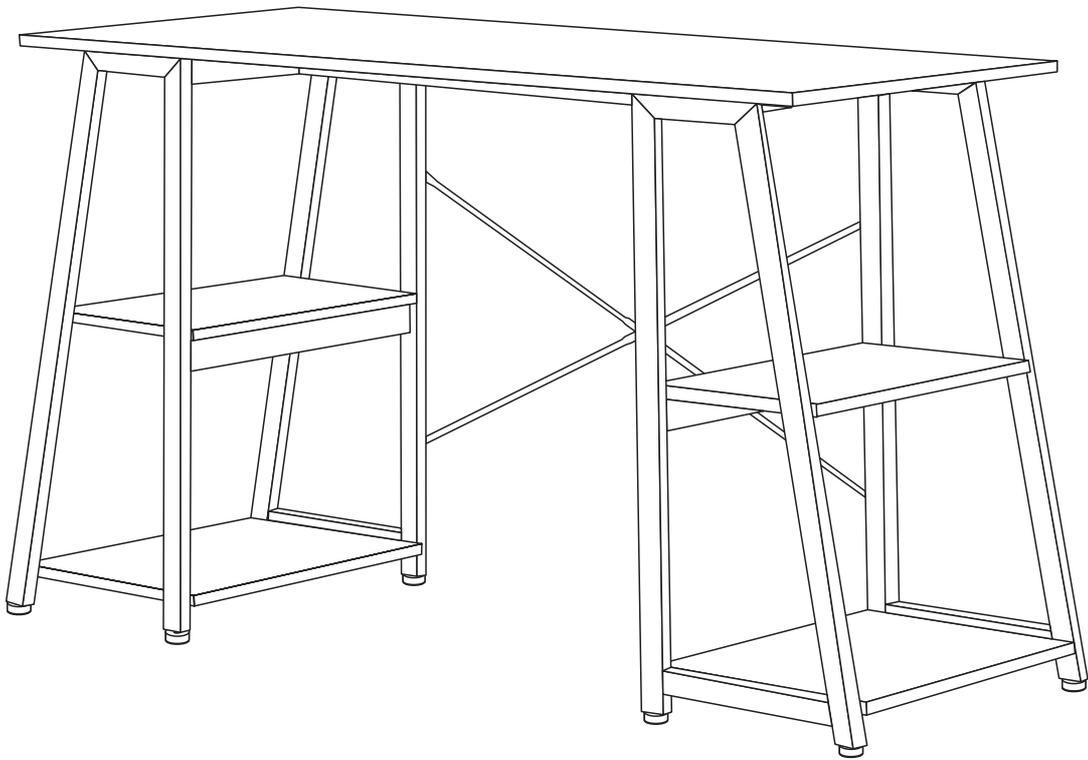

Dimensions

Length - 130cm^(overall)
120cm^(desktop)

Depth - 60cm

Height - 77cm

Weight - 19.7kg

Maximum Weight Tolerance

50kg

Important-please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product during assembly, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.

- Do not stand on the desk.
- Do not use this desk as a step ladder.
- This product should not be discarded with household


waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Components - Parts


Please check you have all the parts listed below

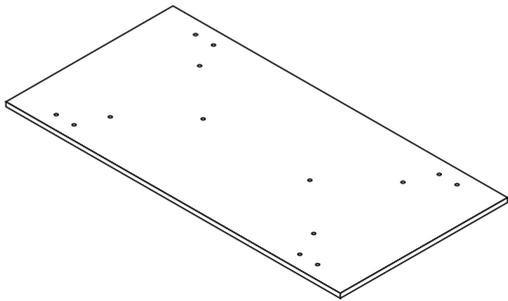


1 Desktop

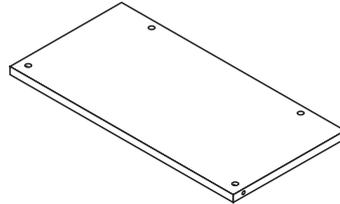


2 Middle board x 2

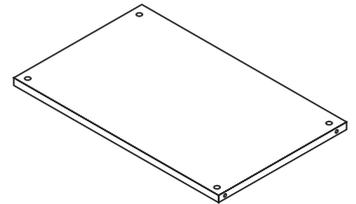


3 Bottom board x 2

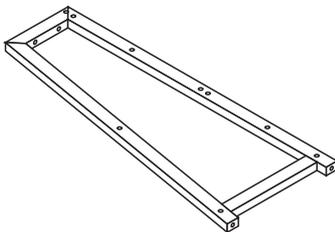


4 Rear frame x 2

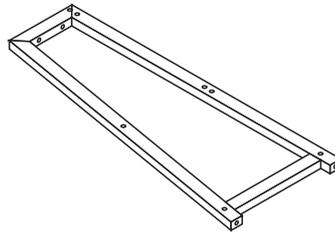


5 Front frame x 2

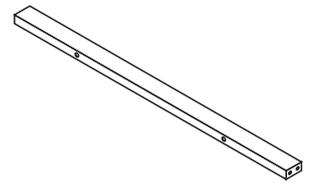


6 Beam

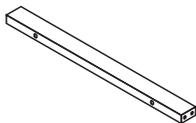

7 Middle bar x 2

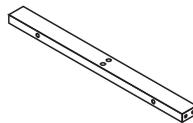

8 Top bar x 2



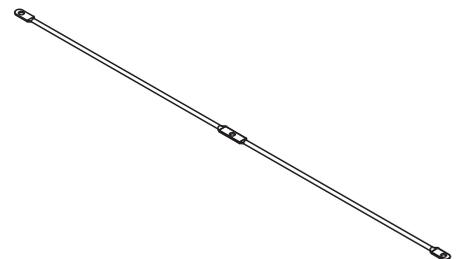


9 Connecting rod x 2

Components - Fittings

Please check you have all the fittings listed below.


Note: The quantities below are the correct amount to complete the assembly.
In some cases more fittings may be supplied than are required.

A  M6 50MM Bolt x 10	B  M6 40MM Bolt x 8	C  M6 30MM Bolt x 20
D  M6 15MM Bolt x 4	E  M6 12MM Bolt	F  ST5 50MM Bolt x 12
G  M6 Cap x 4	H  M6 Nut	I  Adjustable Feet x 8


Tools required



Phillips screwdriver

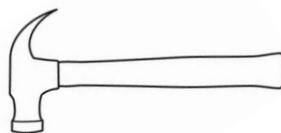

Small hammer

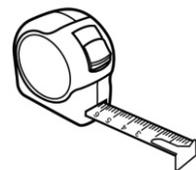


Tape measure

Assembly Instructions

Step 1

Carefully screw in adjustable feet **I** into the rear and front frames **4** and **5**.

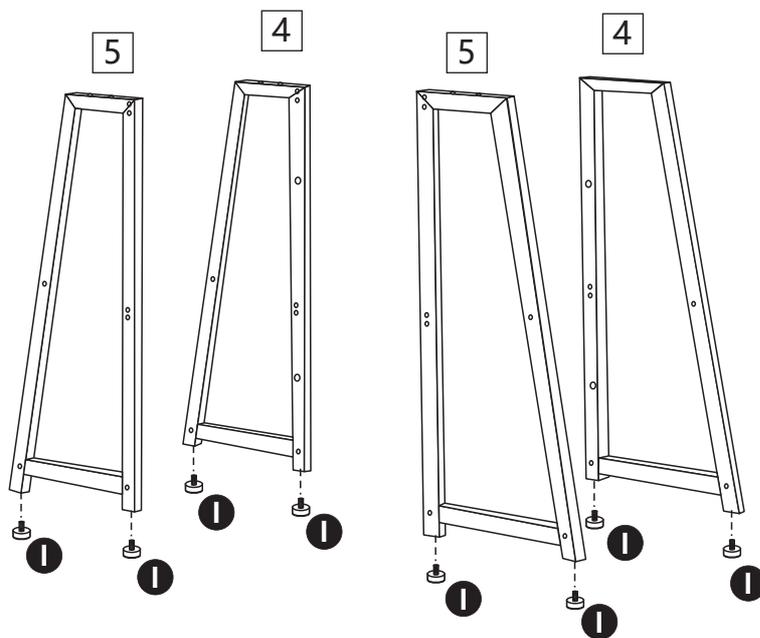


Step 2

Align the leg frame holes **4** and **5** with the top and middle bar **7** and **8** as shown in the assembly instruction image.

Once aligned, use the M6 x 30mm bolts **C** to fix the leg frames and bars together.

Please make sure all bolts are tight and no gapping is visible between the leg frames and bars.

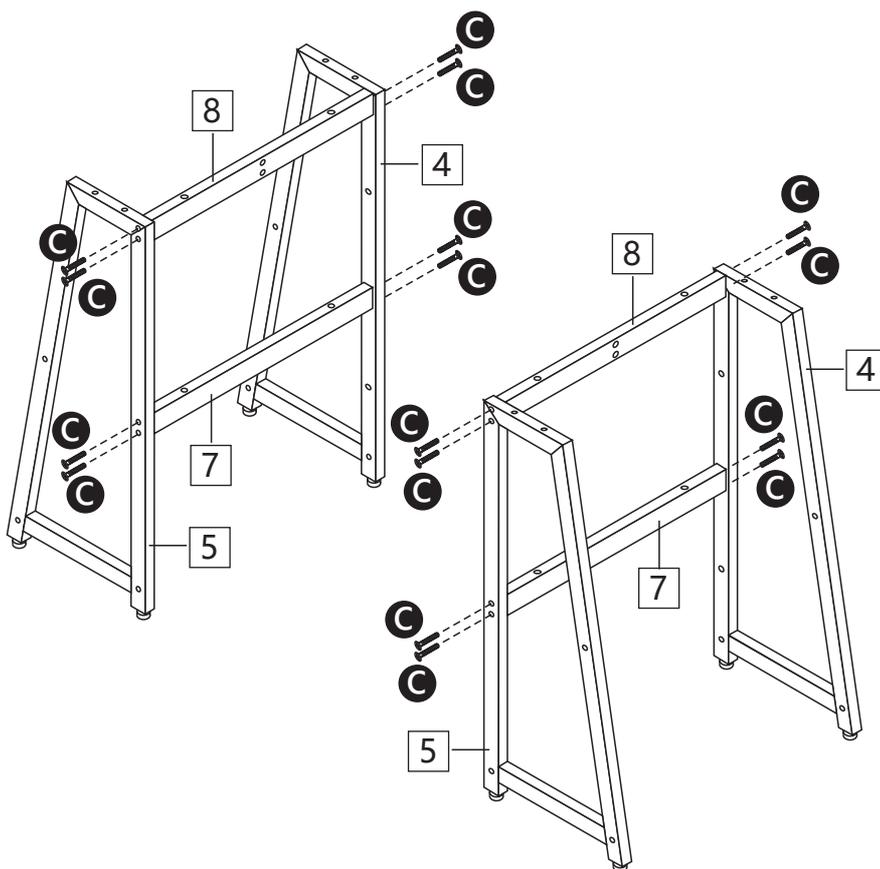

Assembly Instructions


Step 3

Align the middle and bottom board panels with the frame holes

Use frame **F** to fix the board panels to the frames.

Fix bolts **A** to the underside of the board panels **2** and **3**, through the top and middle bar **7** and **8**.

Please make sure all wood screws and bolts are tight and no gapping is visible.

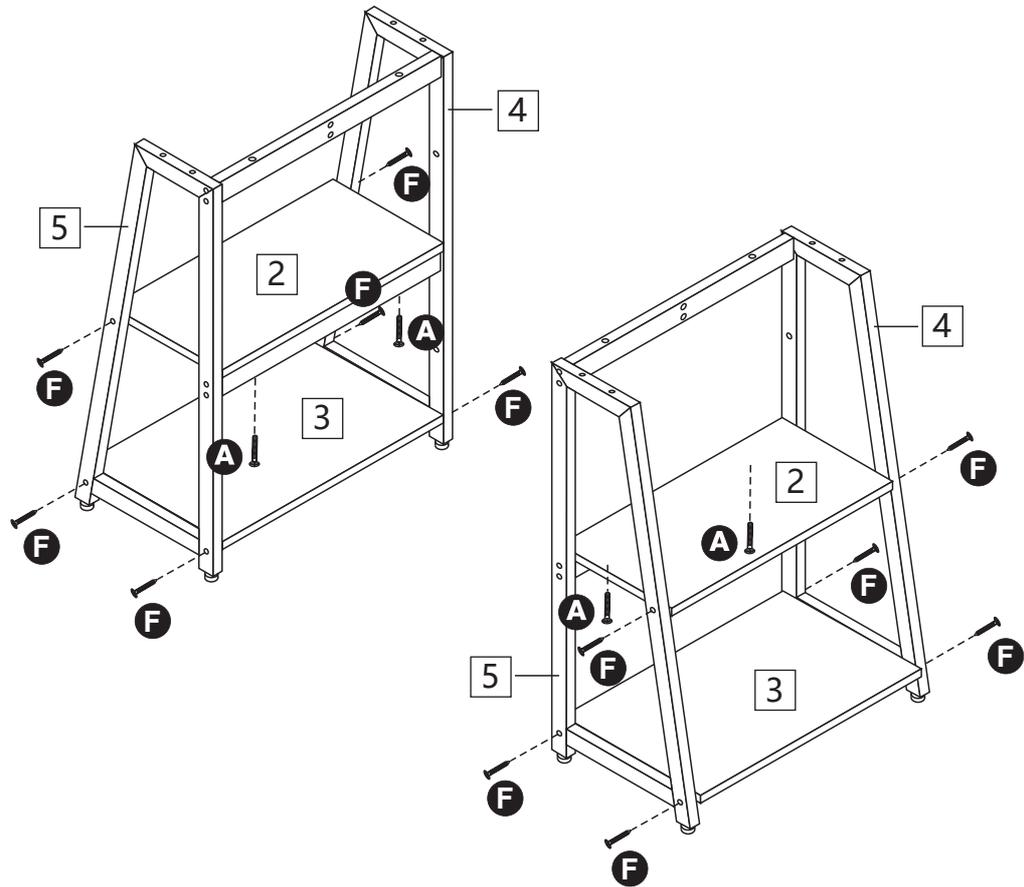


Step 4

Fix beam **6** between the left and right constructed frames. Making sure the beam **6** holes align with top bar **8** holes.

Use bolts **C** to fix all components together. Make sure all bolts are tight and no gapping is visible.

Repeat the same process using the connecting rods **9** and **E H G D**.

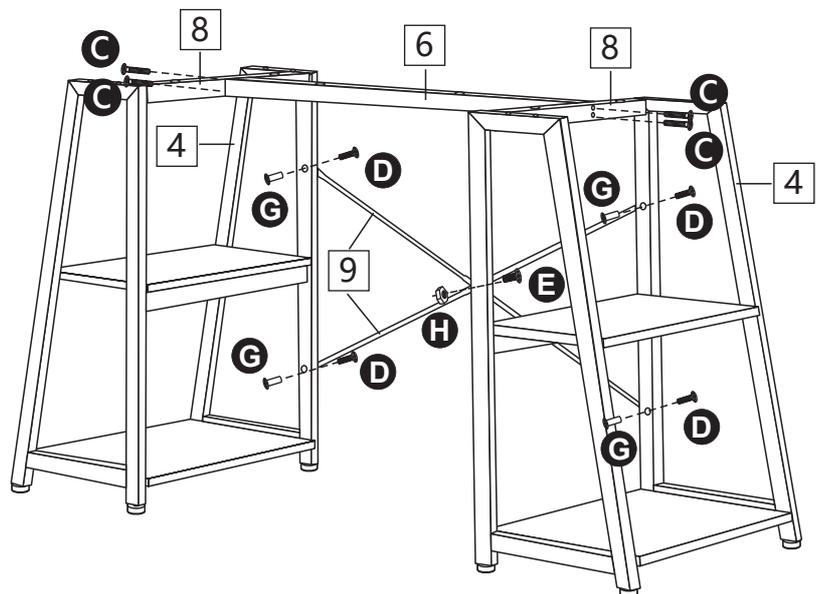

Assembly Instructions

Step 5

Carefully turn the desktop **1** upside down and place onto a soft surface. Once the desktop is upside down carefully repeat the process with the constructed frames as shown in the assembly instruction image.

Align the constructed frames with the pre-drilled and inserted holes in the desktop **1**. Once all holes are aligned, use the M6 x 50mm bolts **A** M6 x 40mm bolts **B** to fix the frames and wooden desktop together.

Please make sure all bolts are tight and no gapping is visible between the leg frames and desktop.

