


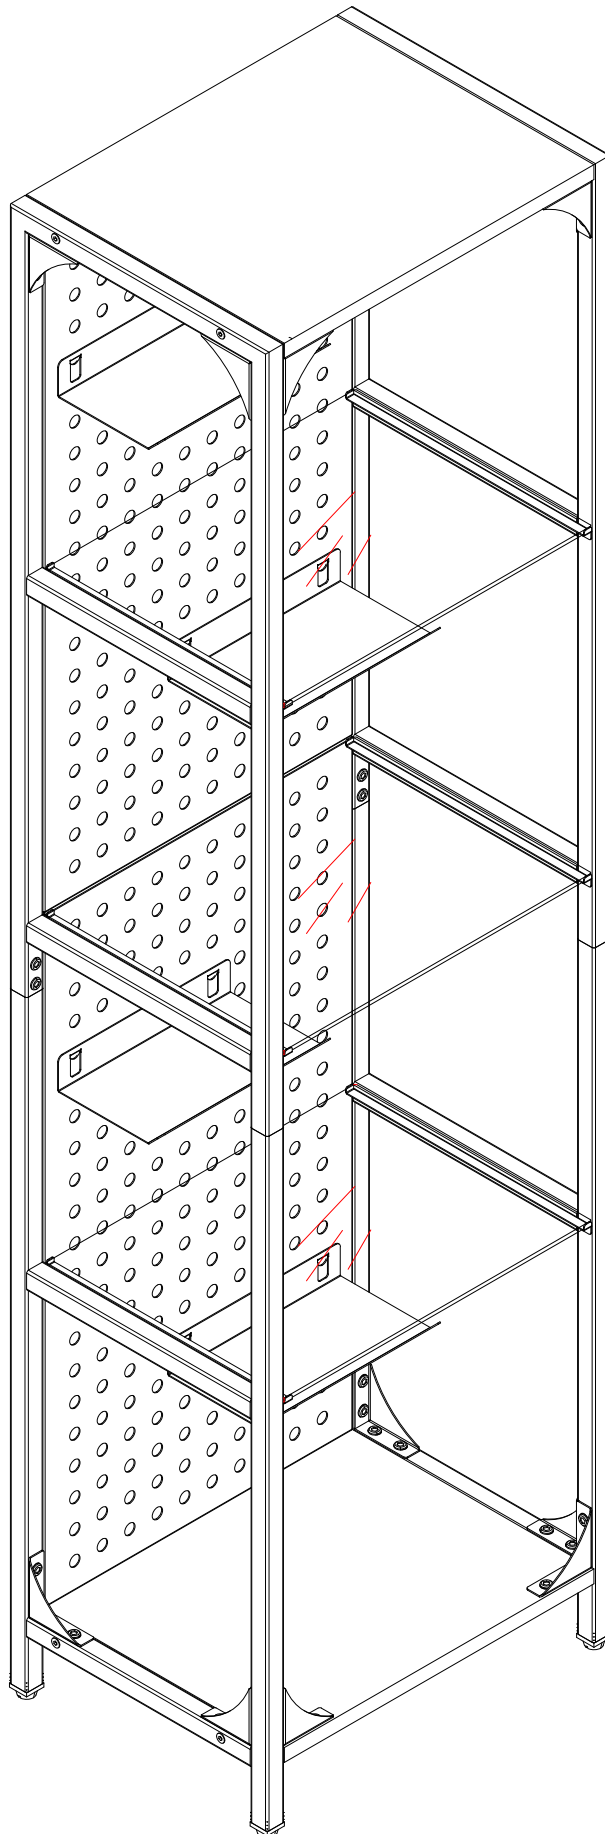
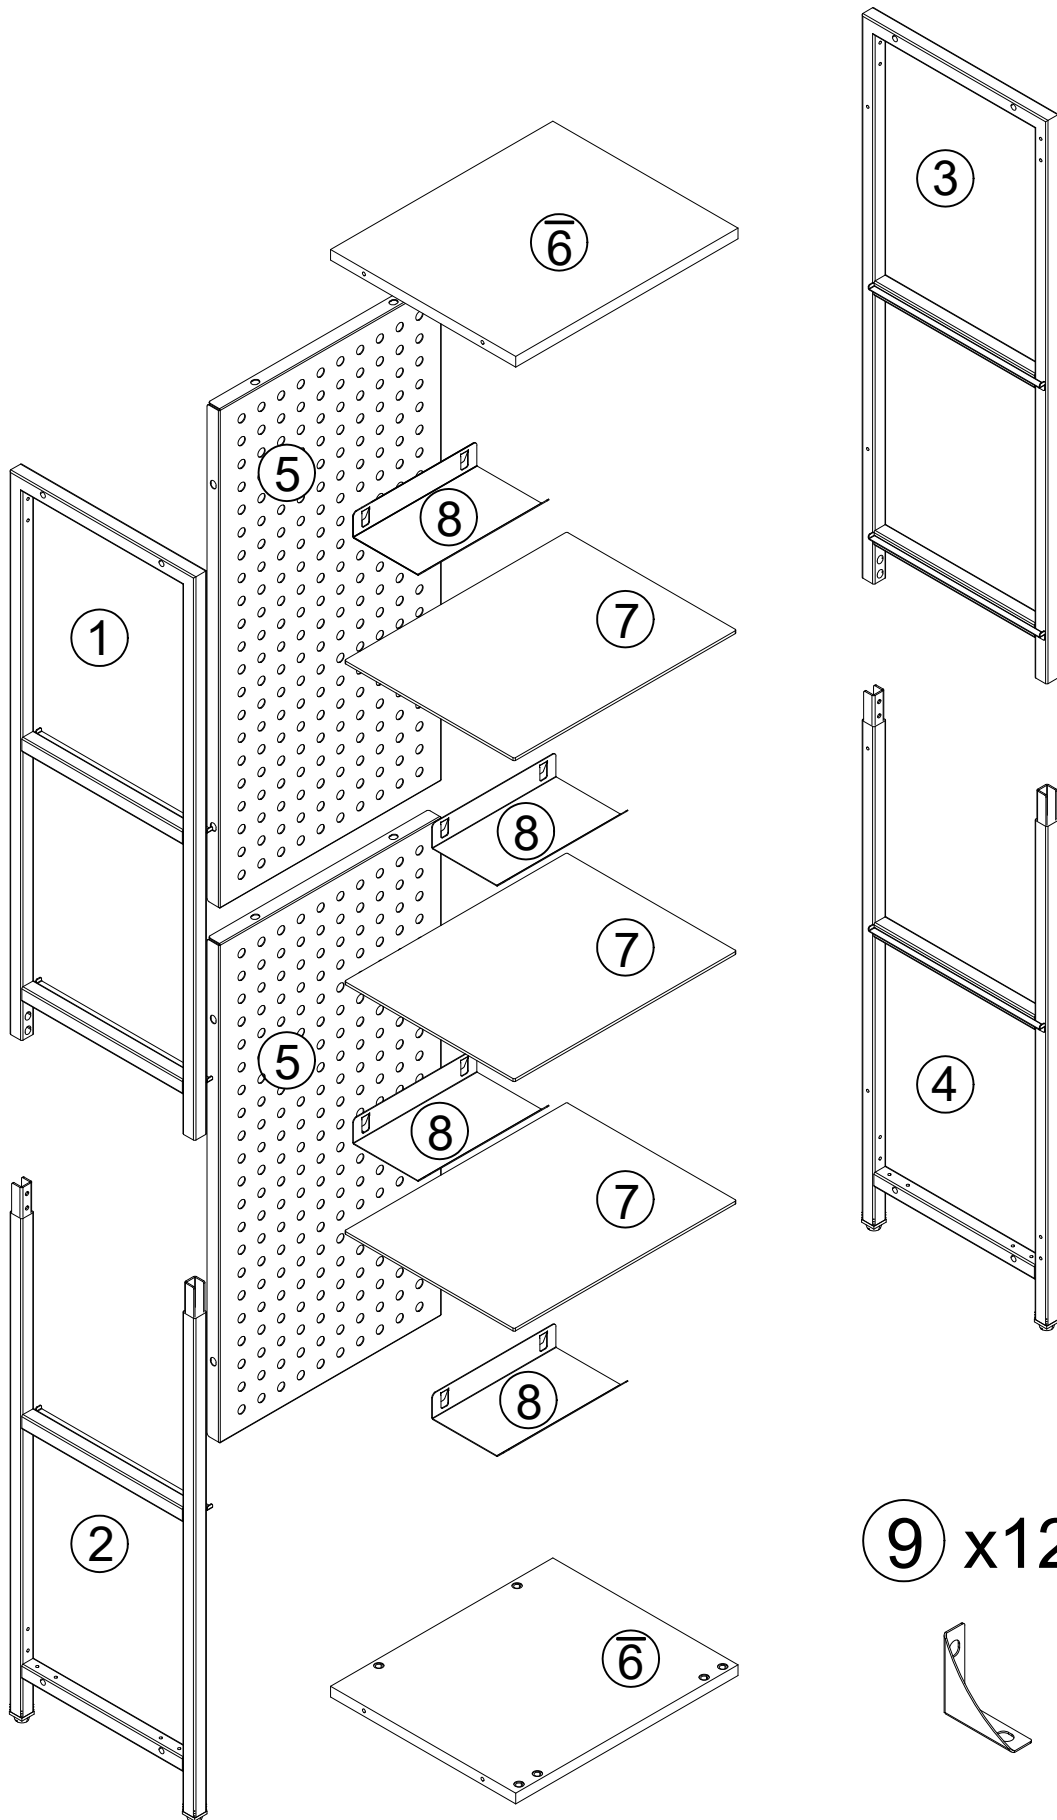
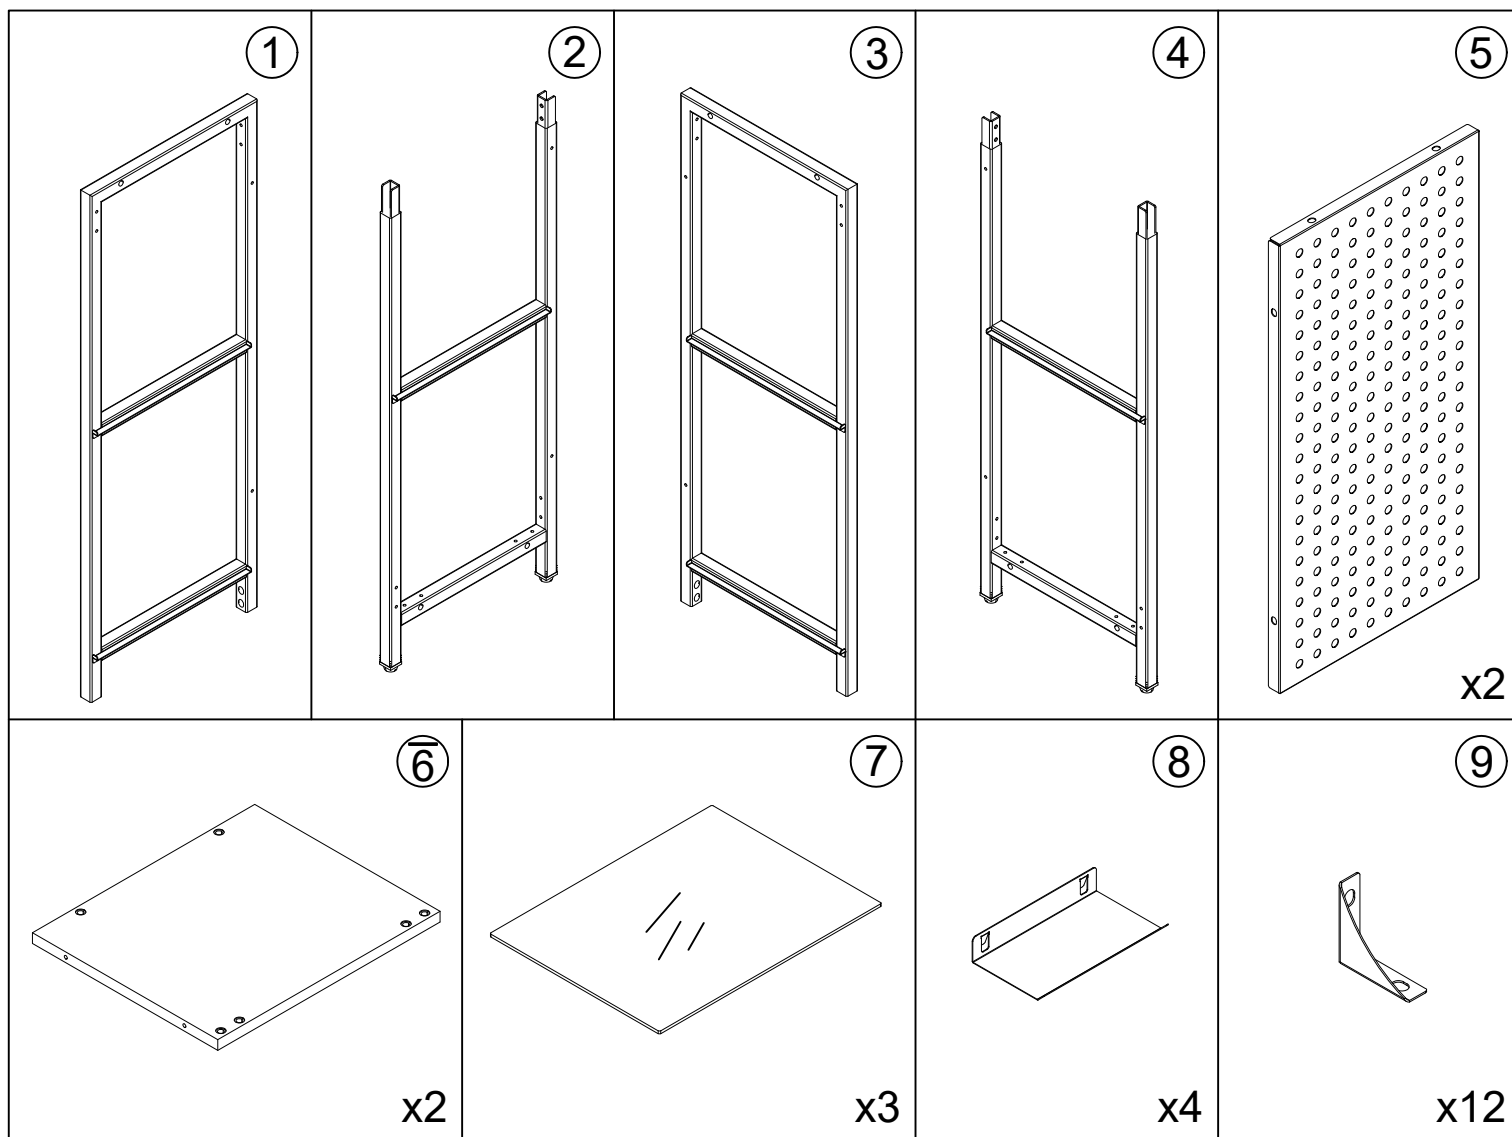


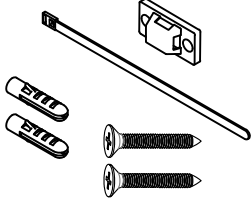



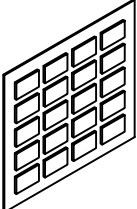

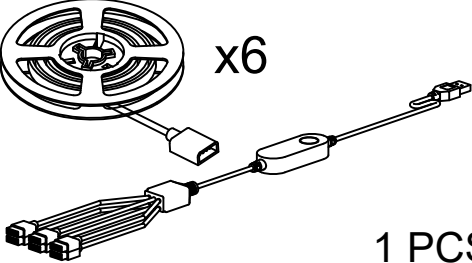

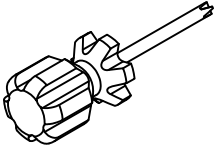


A M7x50	B M6X8	C M6	D	E
 8 PCS	 70 PCS	 2 PCS	 2 PCS	 14 PCS
F	G		4#	
 20 PCS	 x6 1 PCS		 1 PCS	 1 PCS

(B) M6X8



16 PCS

1

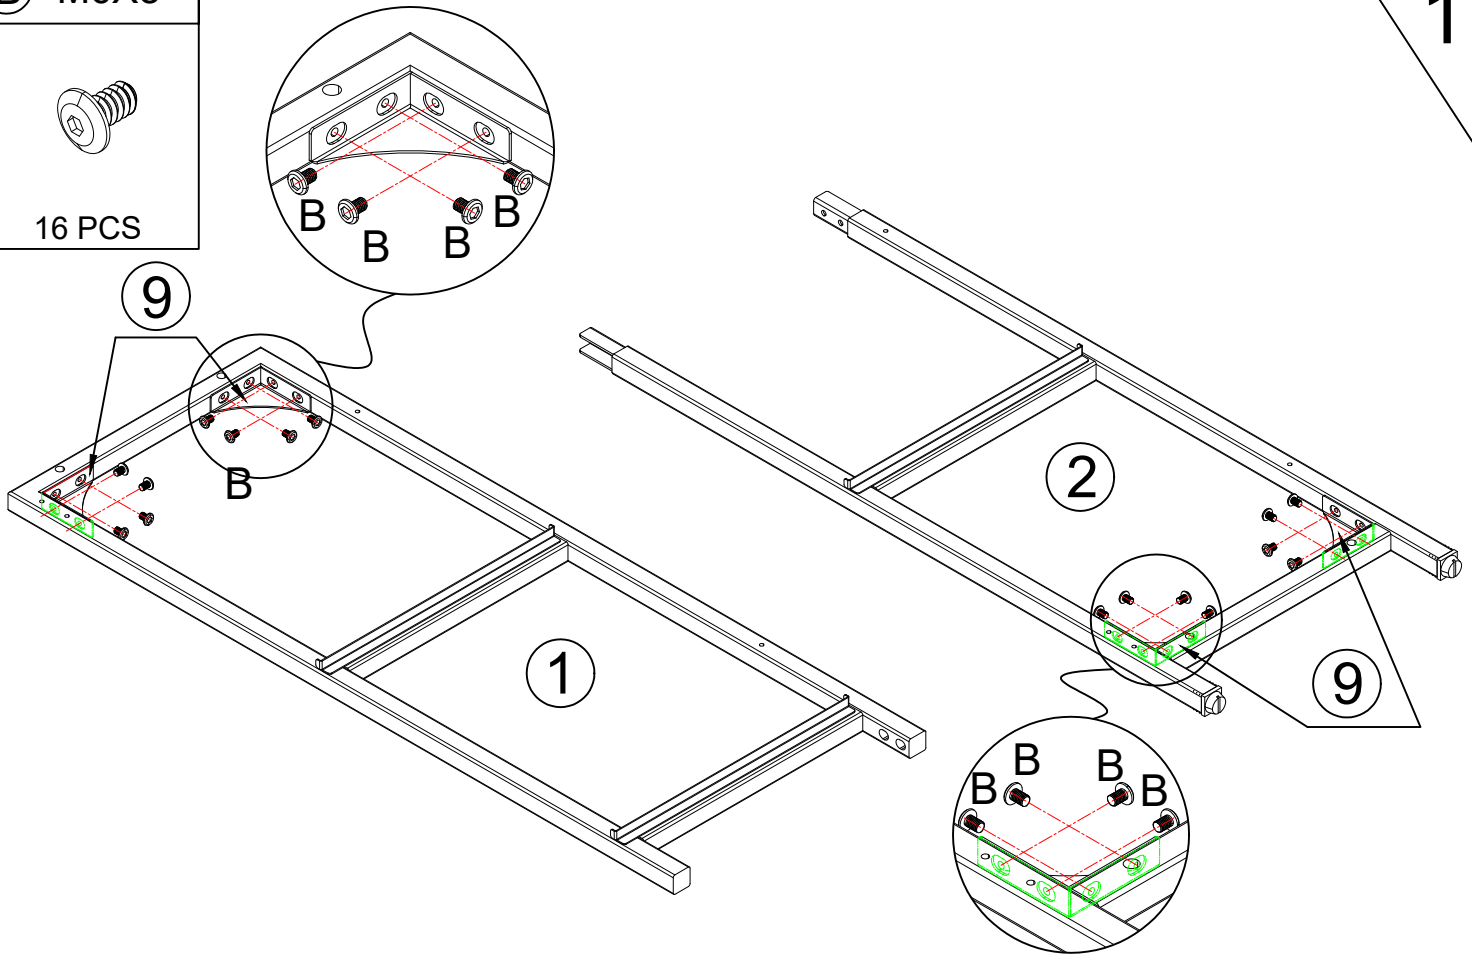


(B) M6X8



16 PCS

2

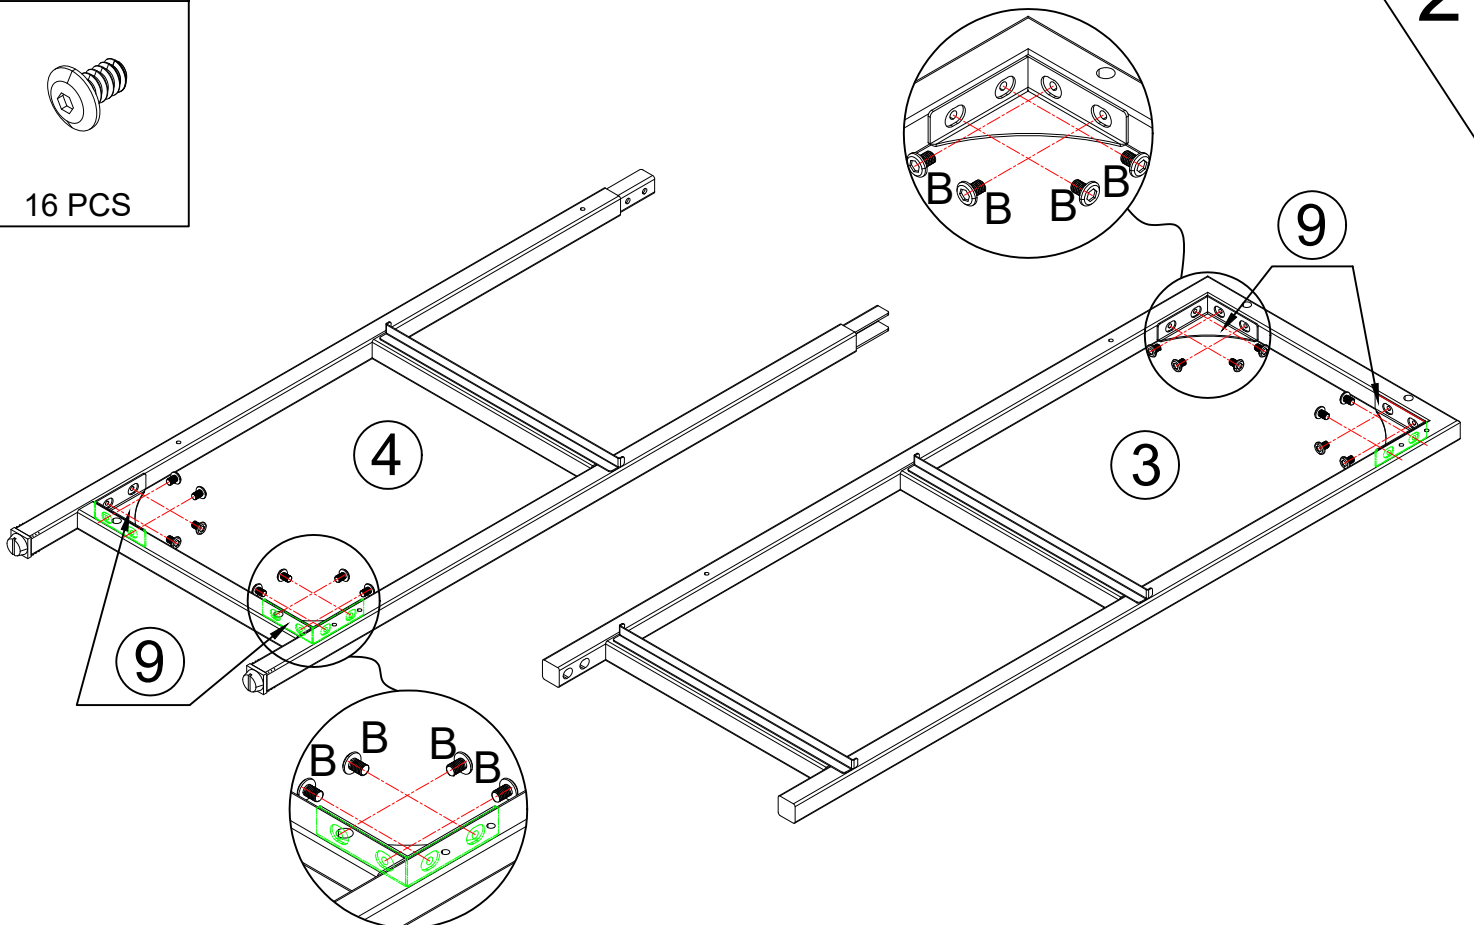


(B) M6X8



4 PCS

3

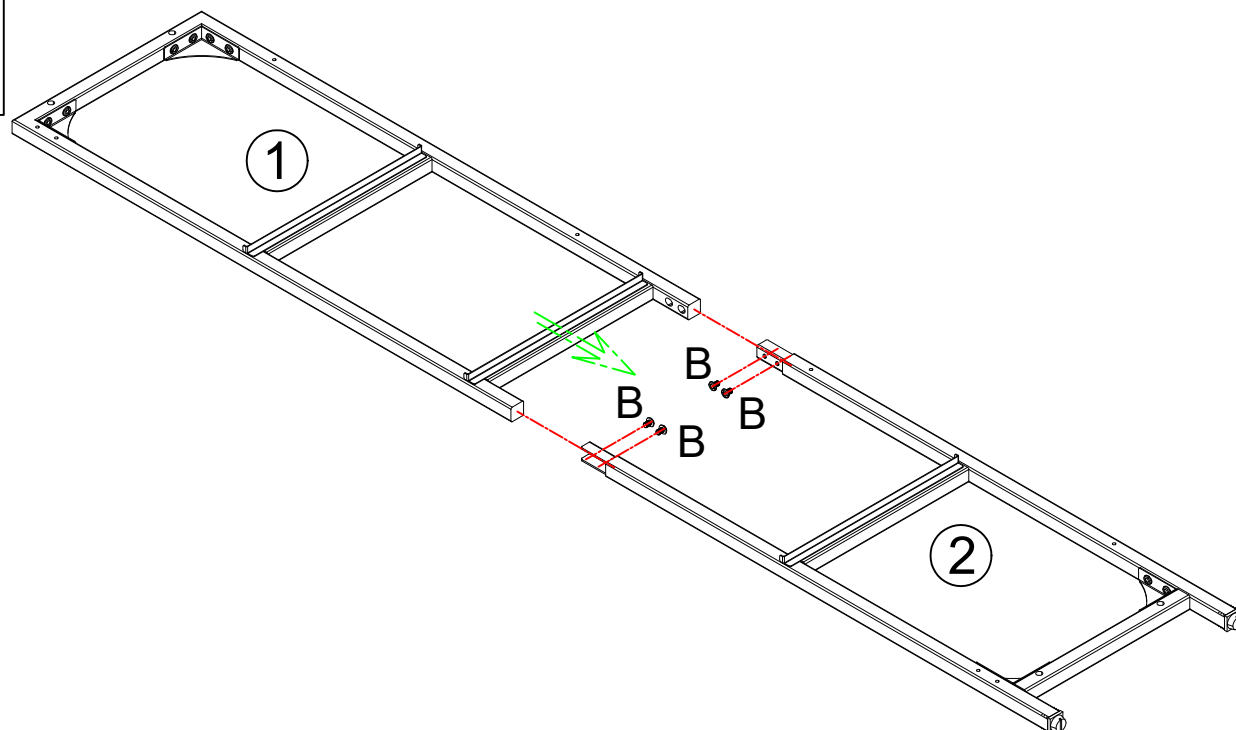


(B) M6X8



4 PCS

4

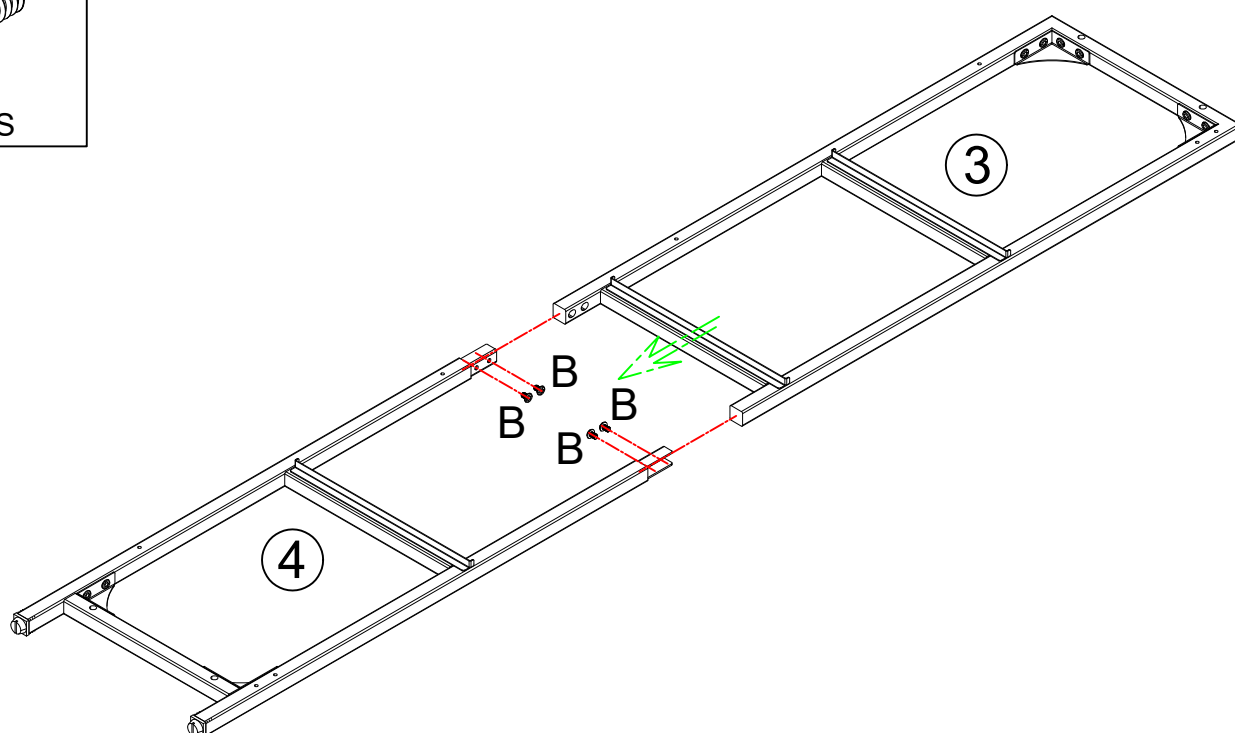


(B) M6X8



8 PCS

5

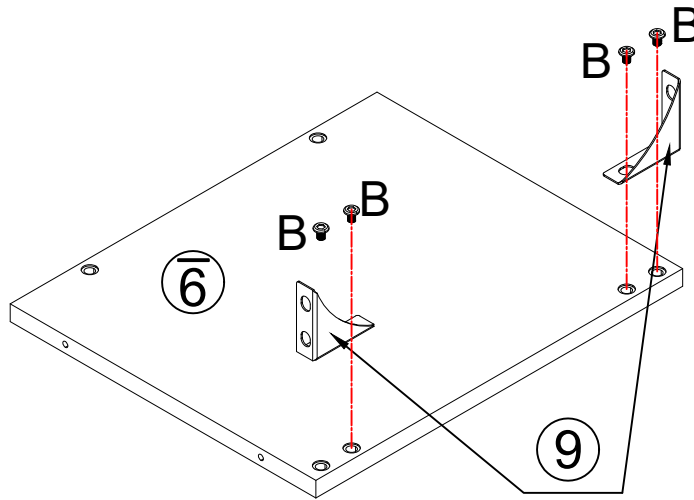

x2

(B) M6X8

(C) M6




2 PCS



2 PCS


6

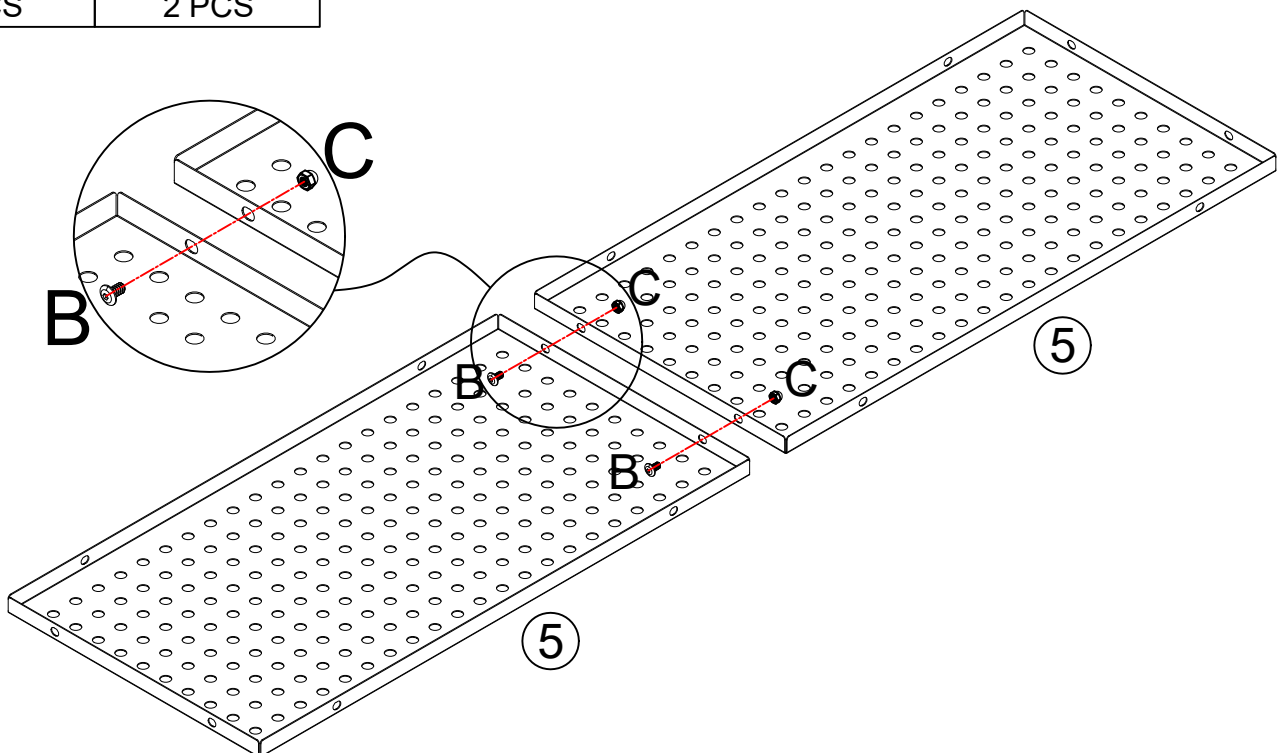

(B) M6X8



4 PCS

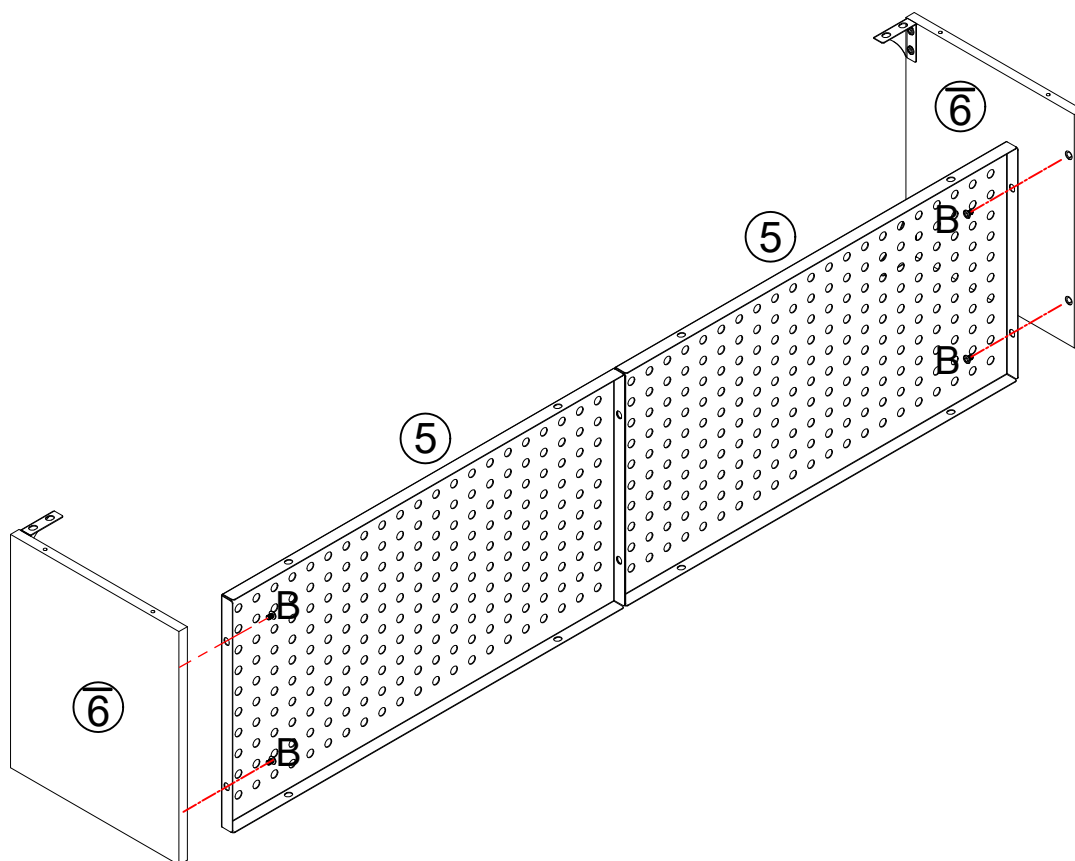


(B) M6X8




4 PCS


(A) M7x50



4 PCS

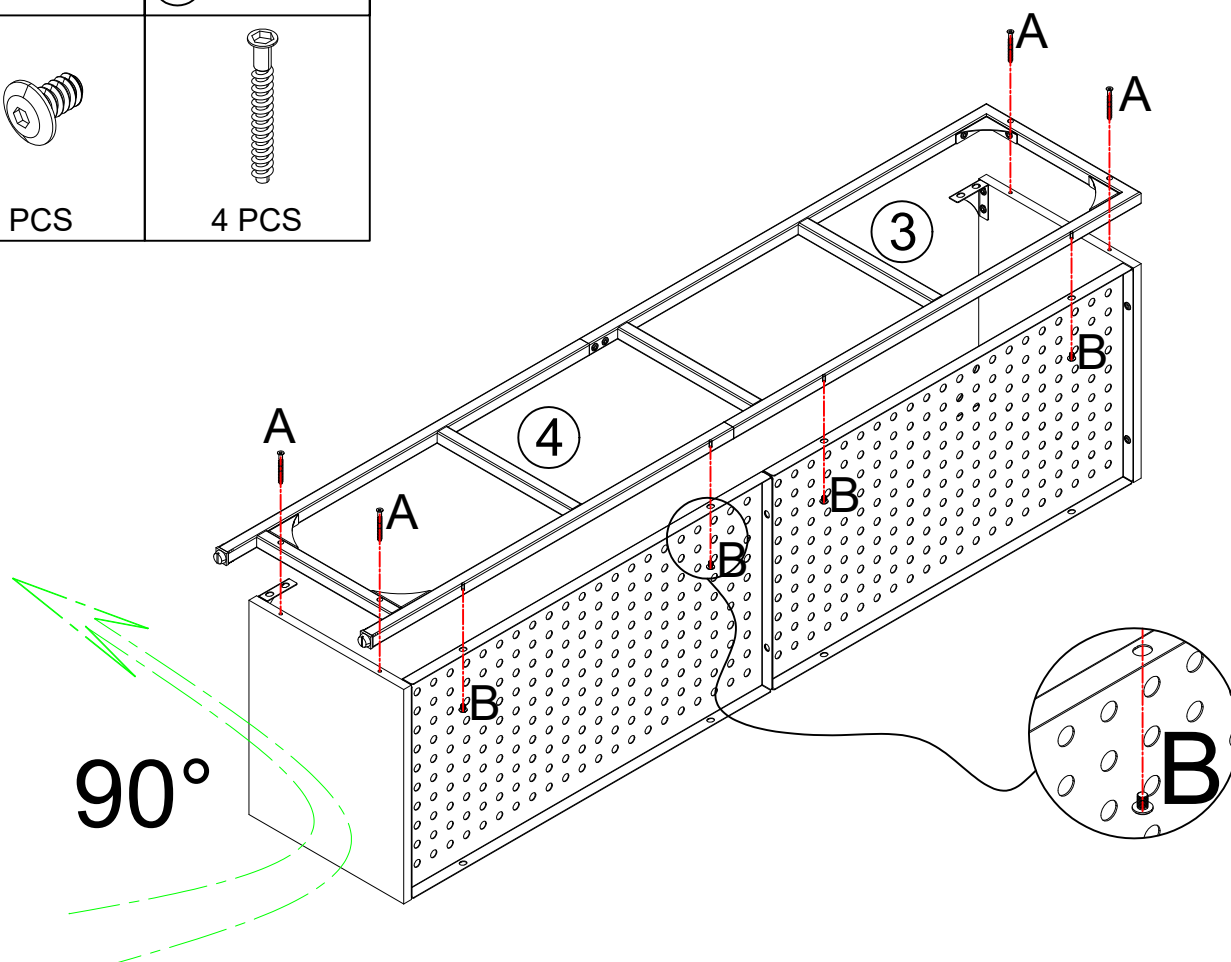

(B) M6X8	(A) M7x50
	
4 PCS	4 PCS

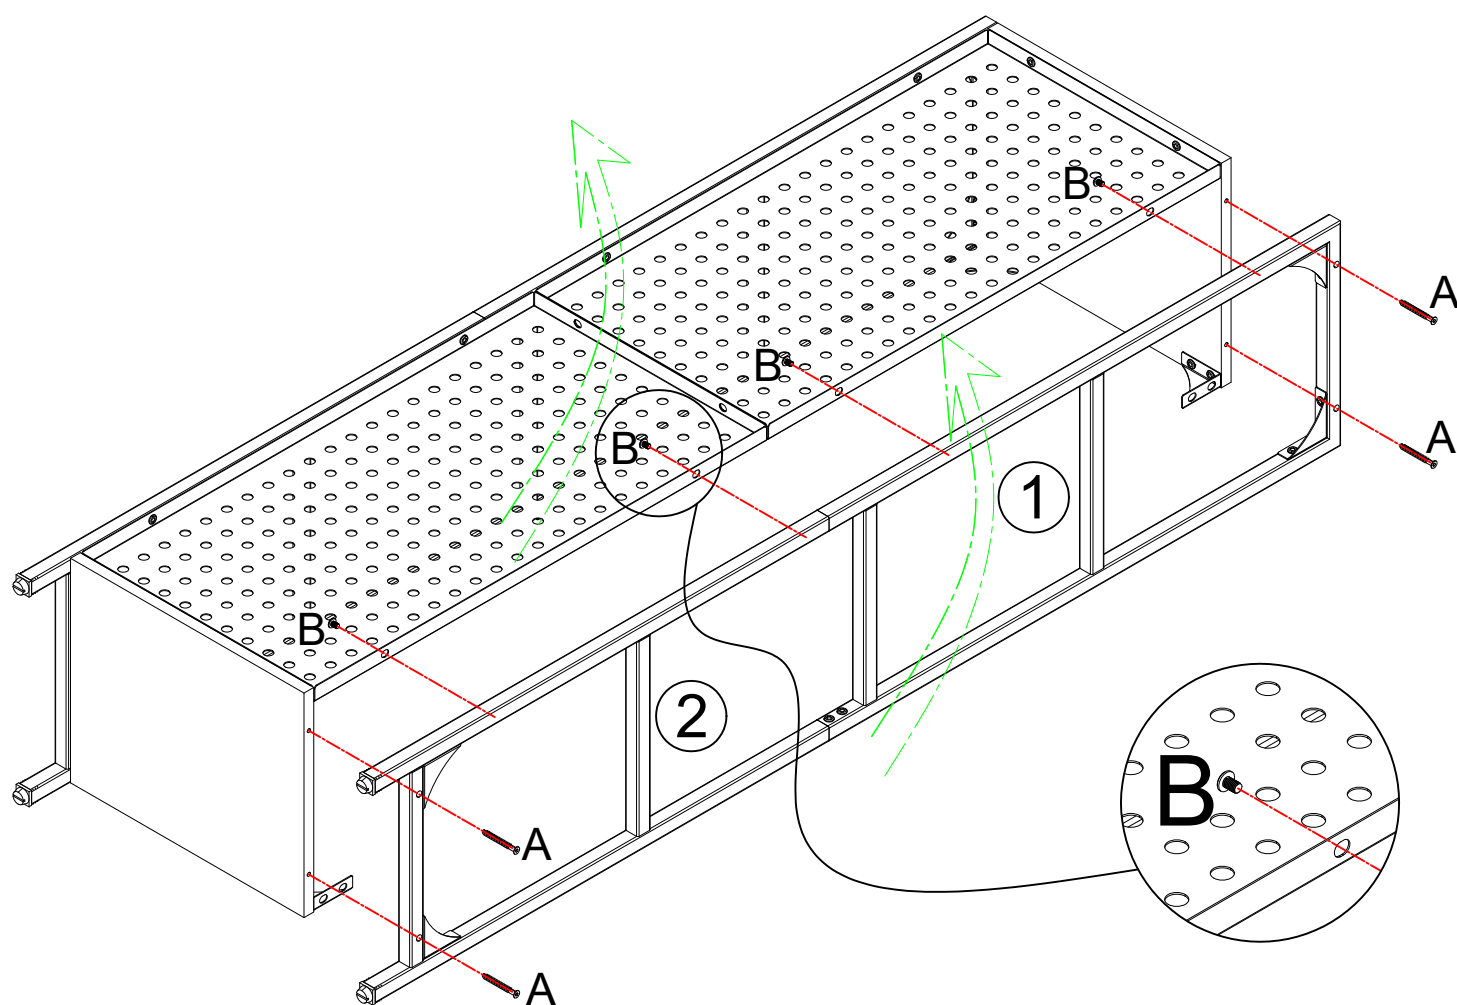


(B) M6X8

(F)








8 PCS




20 PCS


F

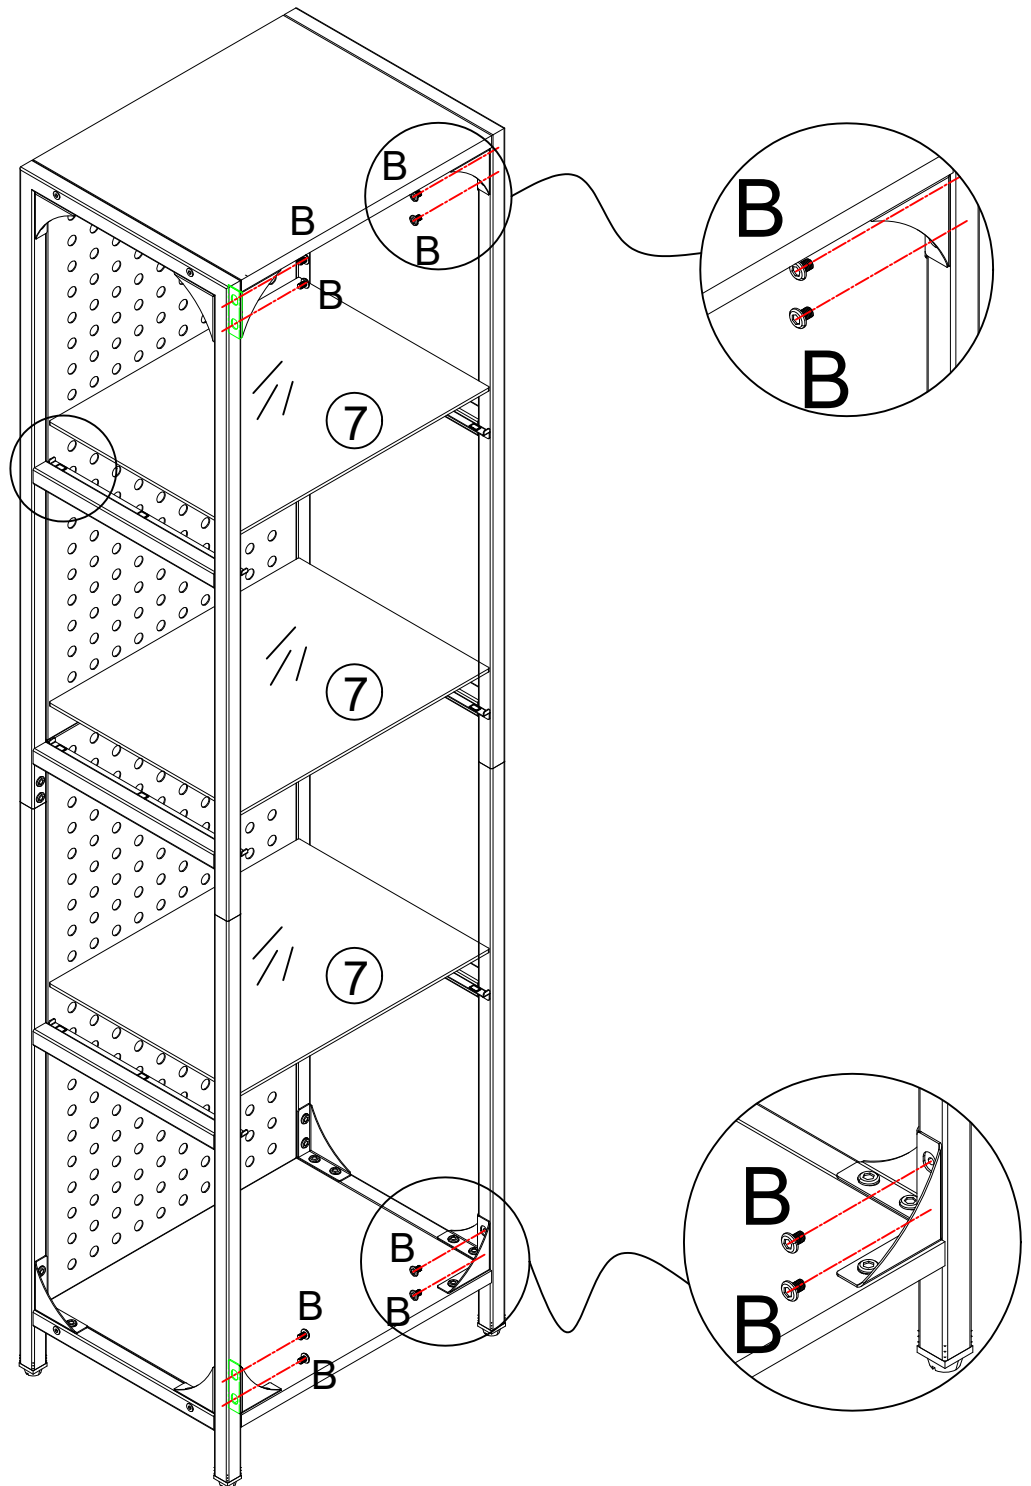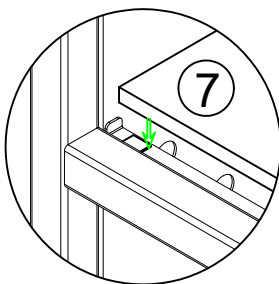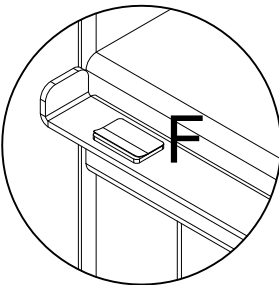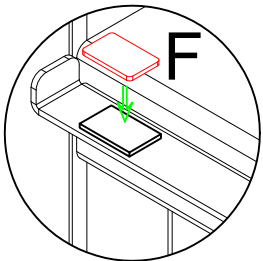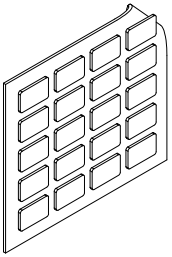

G

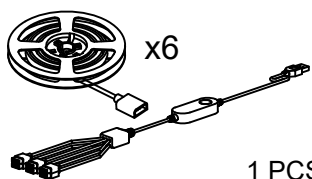

E



1 PCS

14 PCS

Tear off the tape and apply it to the plate, Then press it firmly with your hand










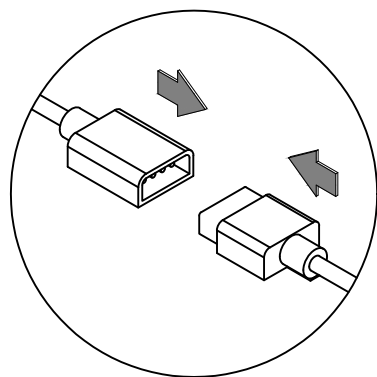


Diagram of Back Interface Connection

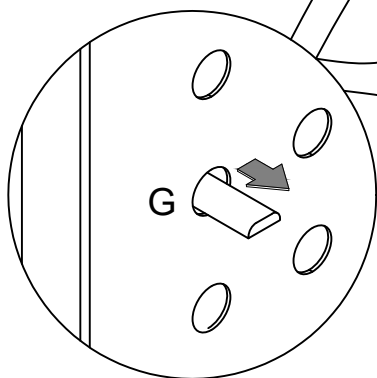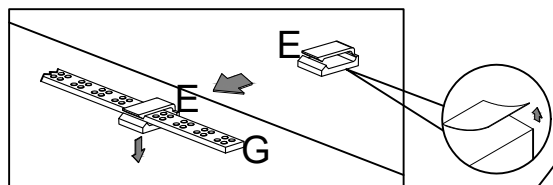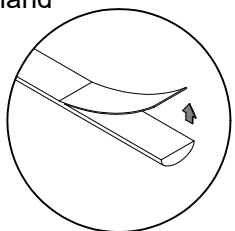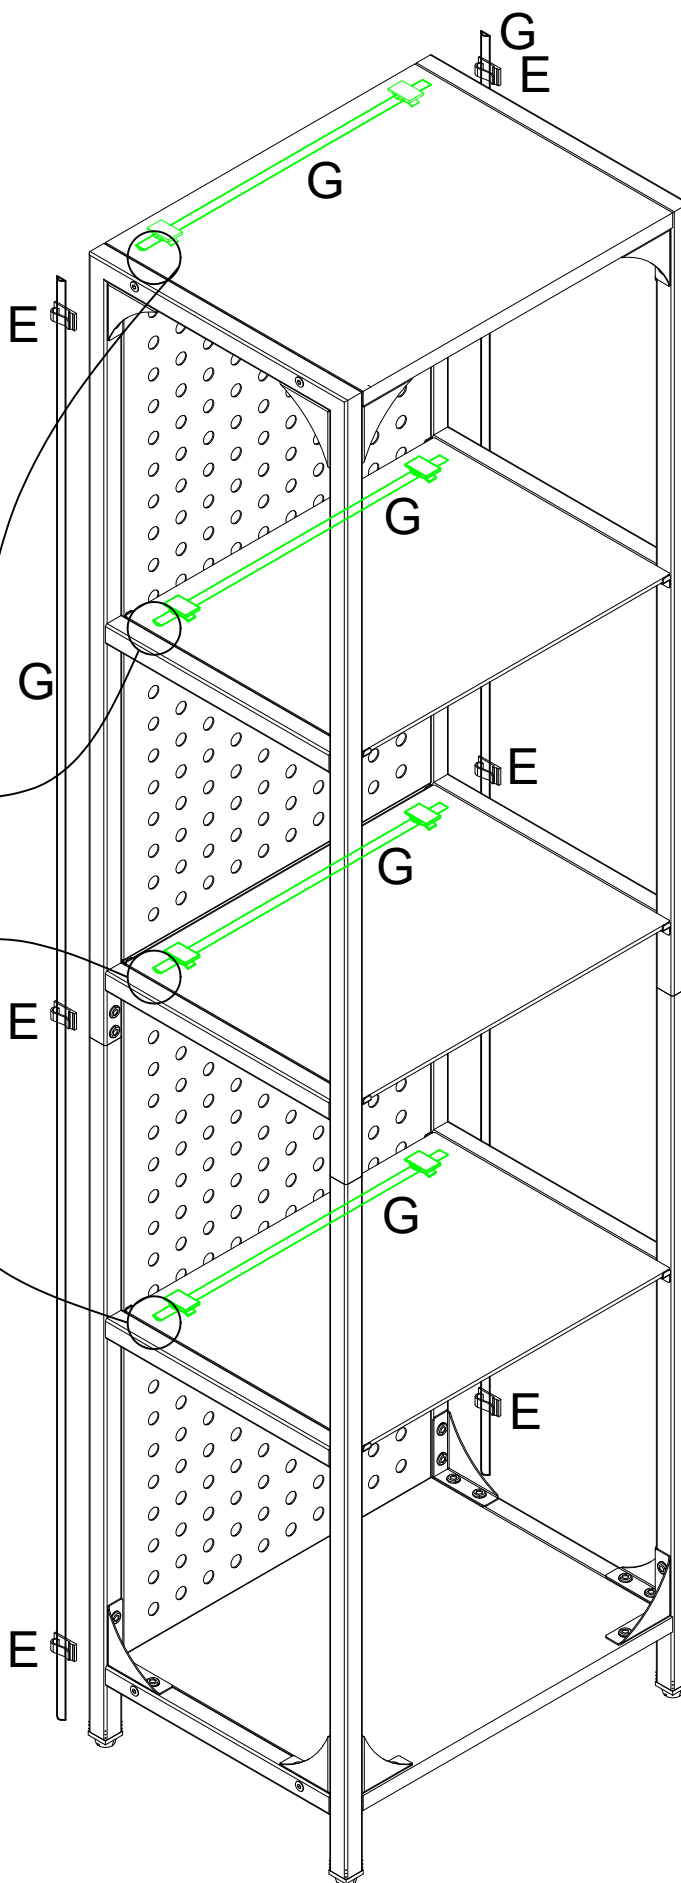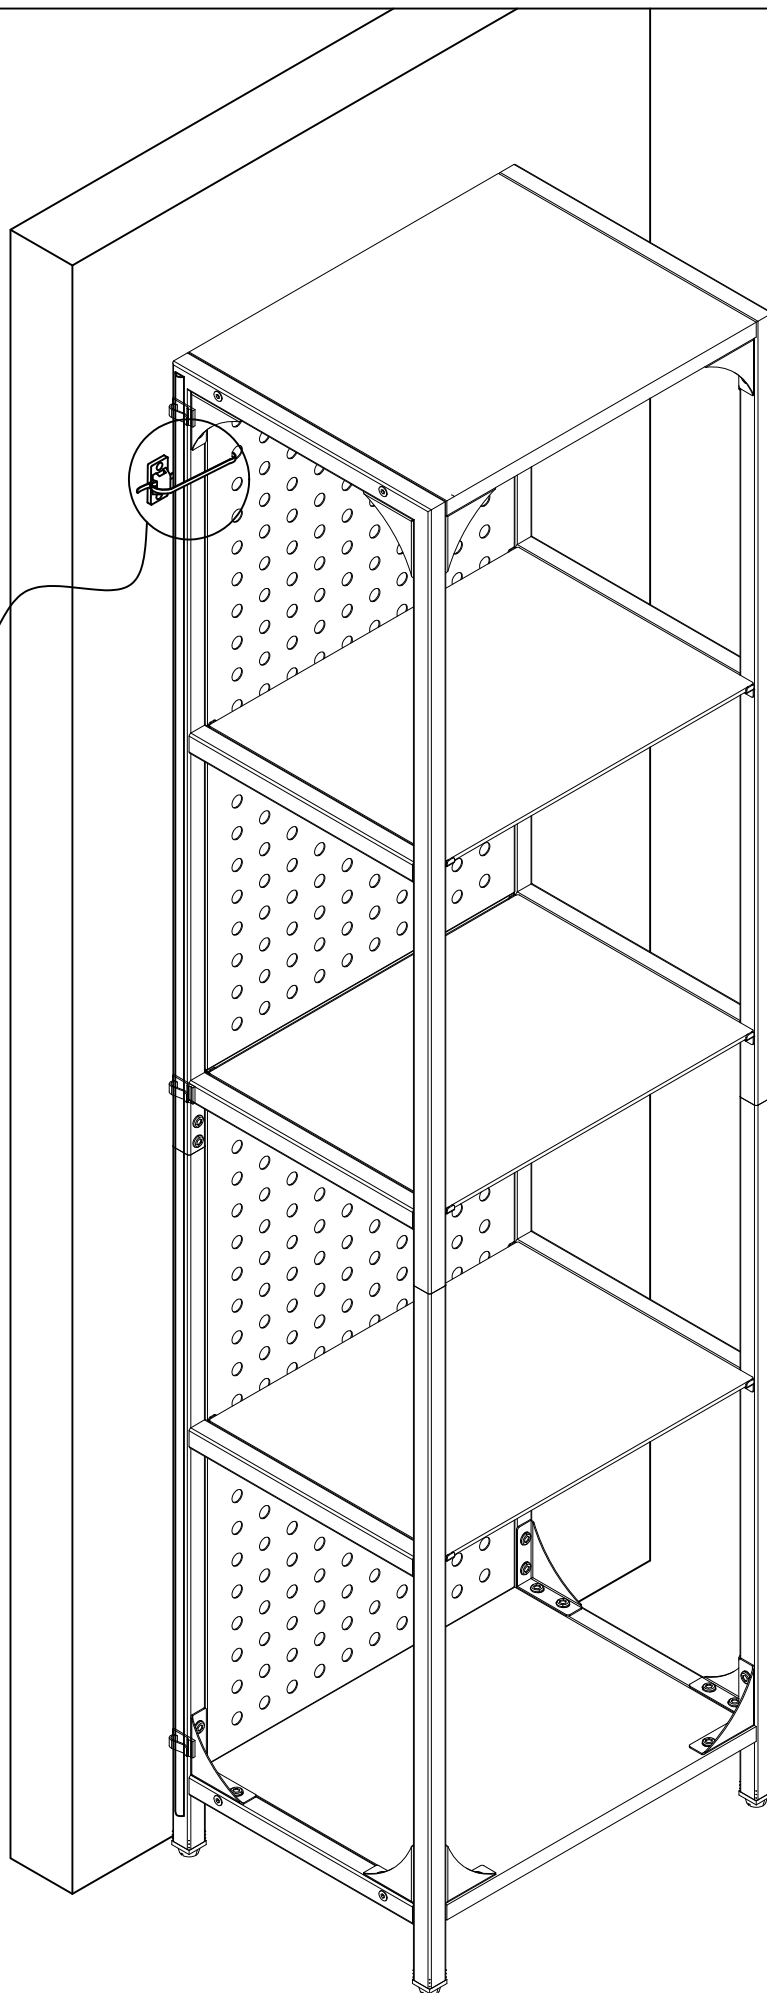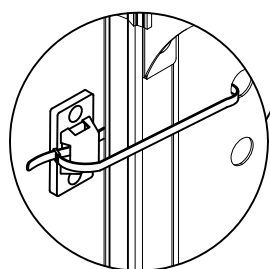


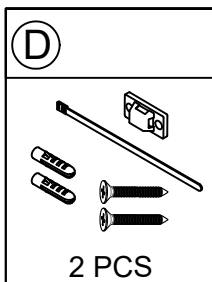


Step 1

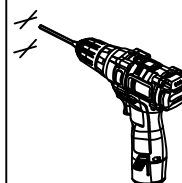


Step 2



Step 3

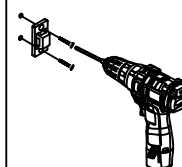

Step 4

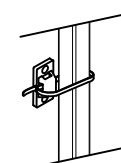

Step 5

