

Installation Instruction

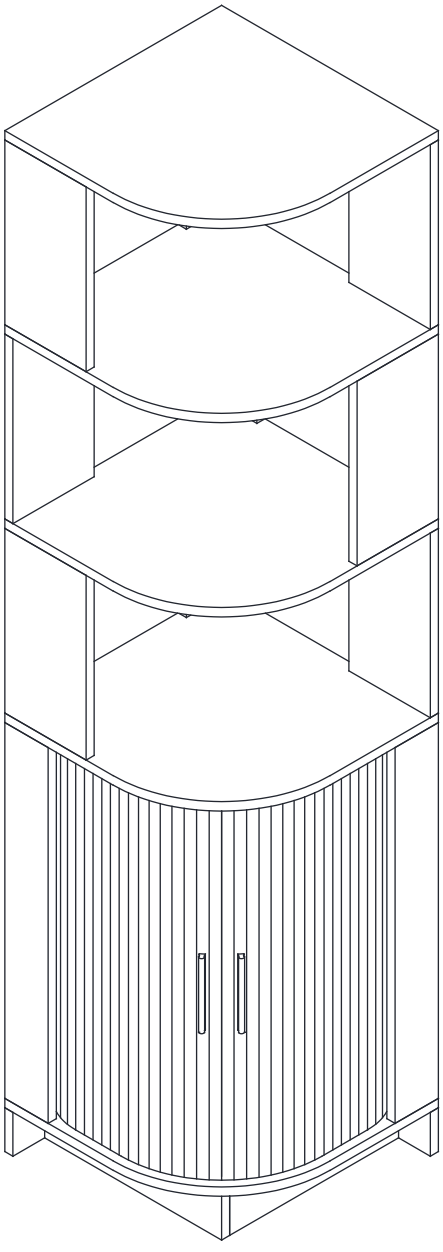


If you have any questions, please contact us

We will help you within 24 hours

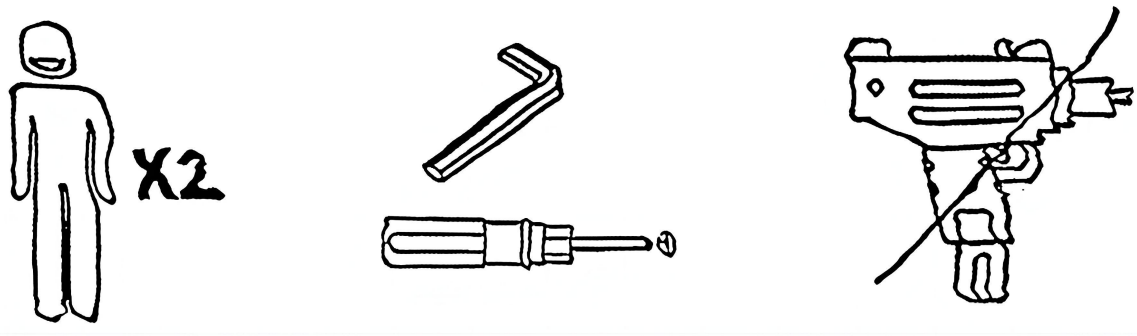


We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

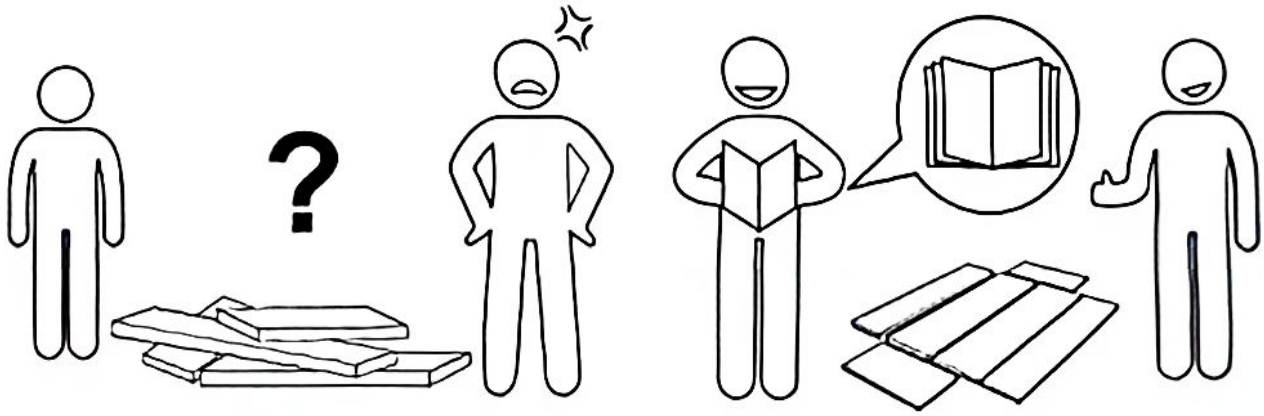

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

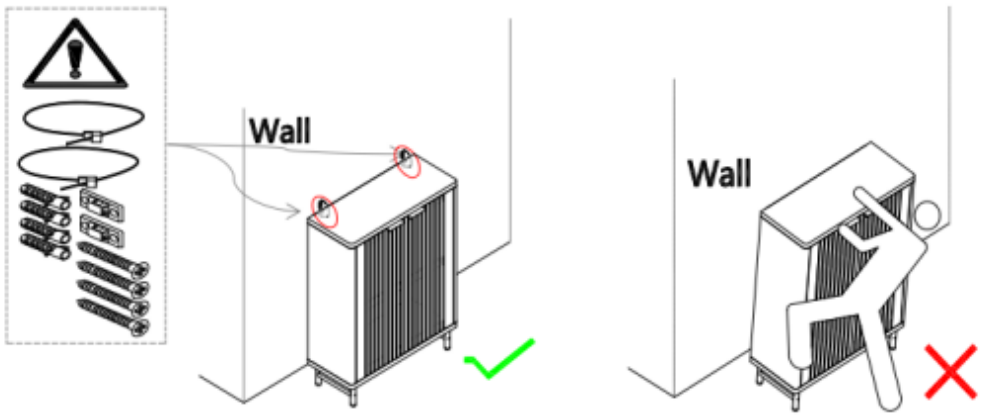

Instructions For Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

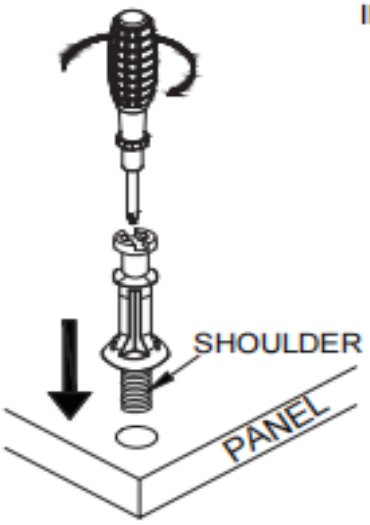

Place Cam-bolt on pre-drilled hole and screw in vertically

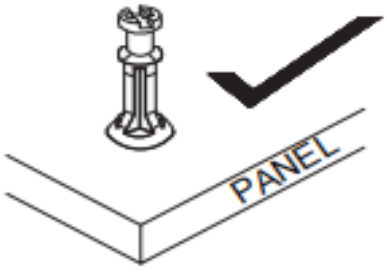


Shoulder is flushed (on the same level) with the panel.

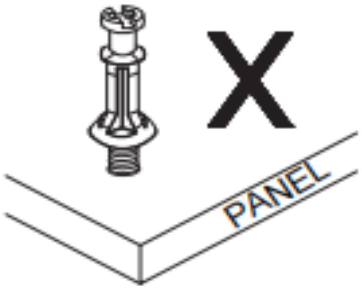

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

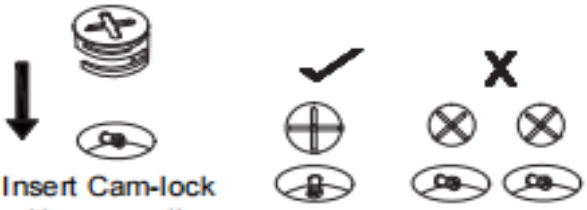

Insert Cam-lock with arrow align to Cam-bolt head

CORRECT


WRONG







Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.





TIGHTENING CAM-LOCK





Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

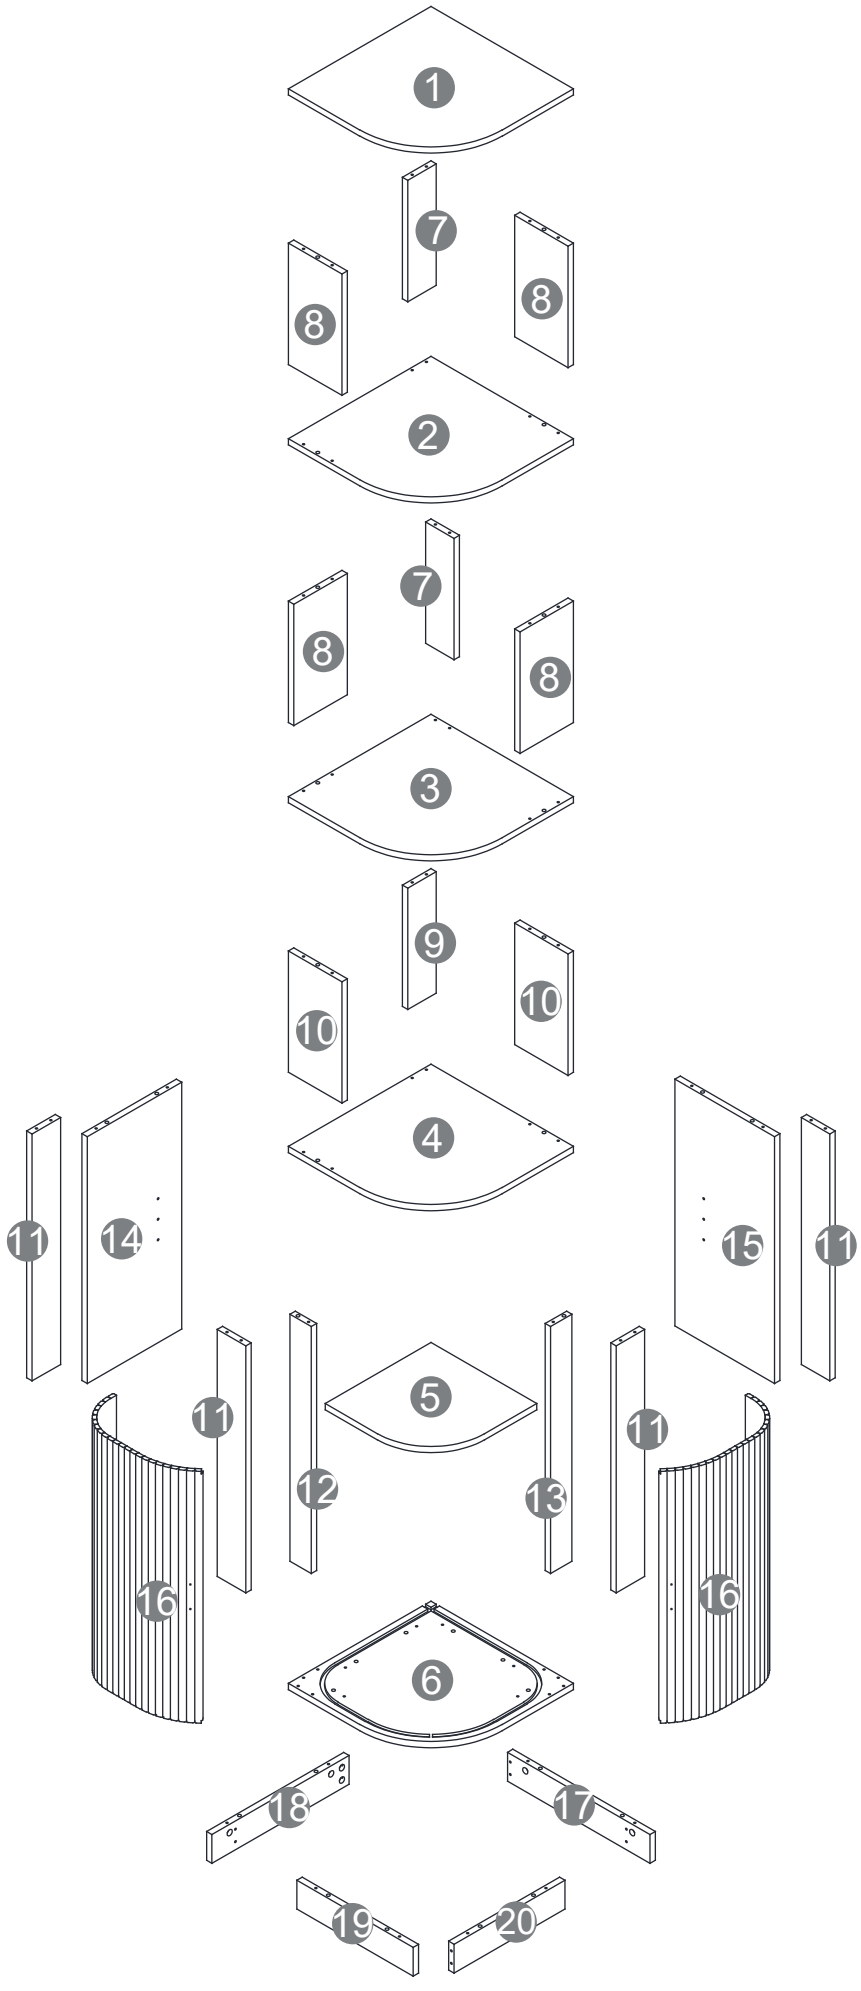
1
7
8
8
2
7
8
8
3
9
10
10
4
11
14
15
11
5
11
11
12
13
16
16
6
18
17
19
20

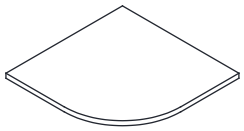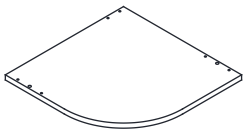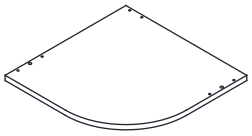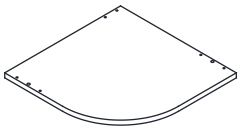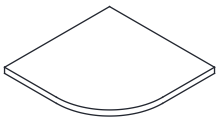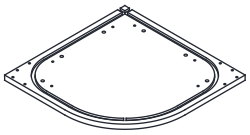Item no.	Reference Image	Qty.
1		X1
2		X1
3		X1
4		X1
5		X1
6		X1
7		X2
8		X4
9		X1

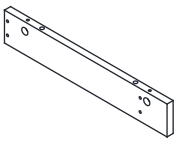
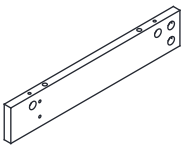
Item no.	Reference Image	Qty.
10		X2
11		X4
12		X1
13		X1
14		X1
15		X1
16		X2
17		X1
18		X1

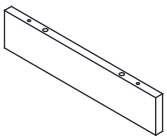Item no.	Reference Image	Qty.
19		X1

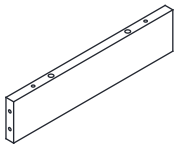Item no.	Reference Image	Qty.
20		X1



Notice:




1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

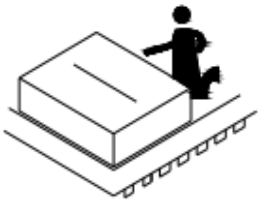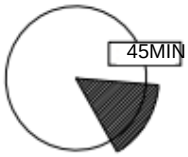 **Recommended installers:2**	 **Put a carpet on the floor before unpacking**	 **Estimate installation time: 45minutes**

Caution!!!


Make sure all parts are included.Most board parts are labeled or stamped on the raw edge.Contact us for free replacement if having damaged or missing parts.


Item no.	Reference Image	Qty.
A	 M6*35mm	X54
B	 φ15*10mm	X54
C	 φ8*30mm	X40
D	 M4*25mm	X28
E		X1
F	 M4*10mm	X4

Item no.	Reference Image	Qty.
G		X2
H		X4
I	 M4*10mm	X4
J		X2
K		X2


Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process

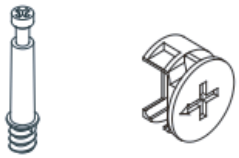

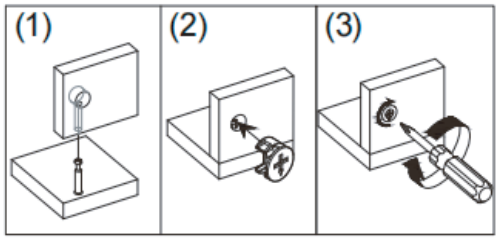


step1:

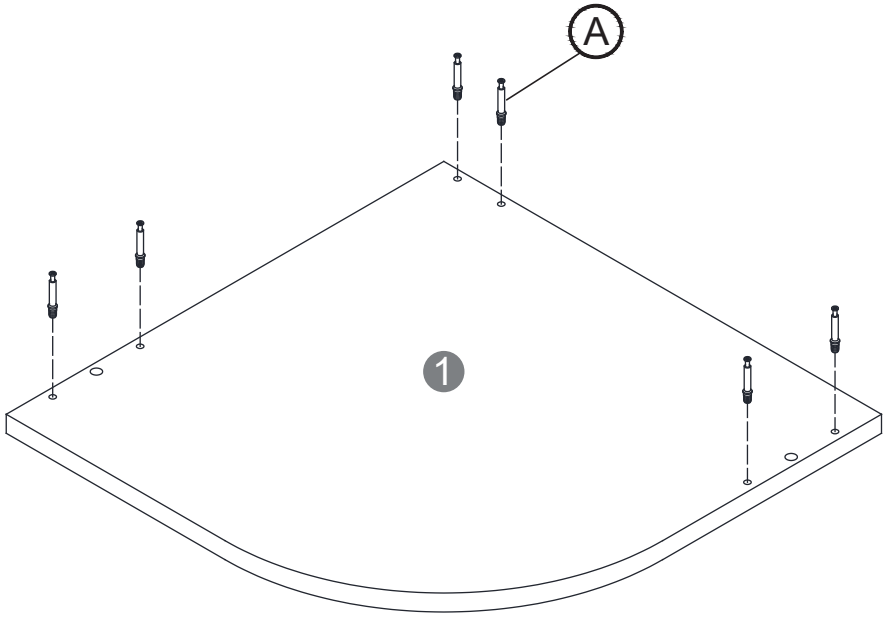


A		X 6

step2:

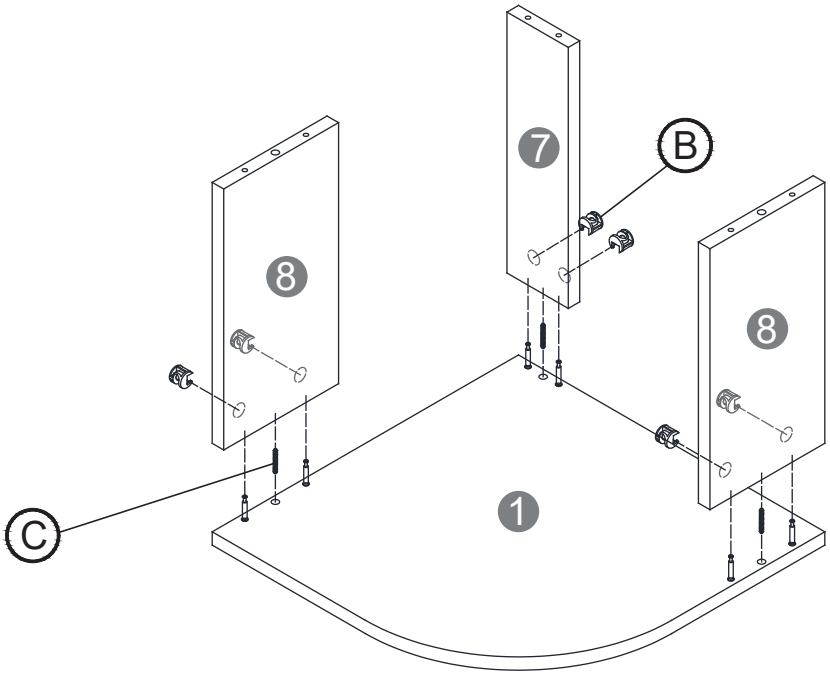


B		X 6
C		X 3


step3:

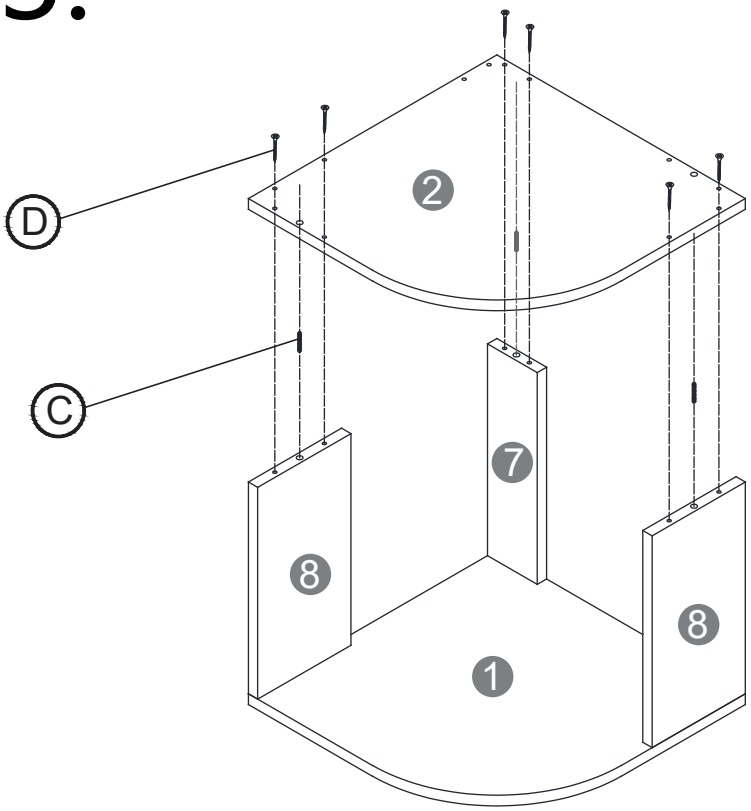


C		X 3
D		X 6

step4:

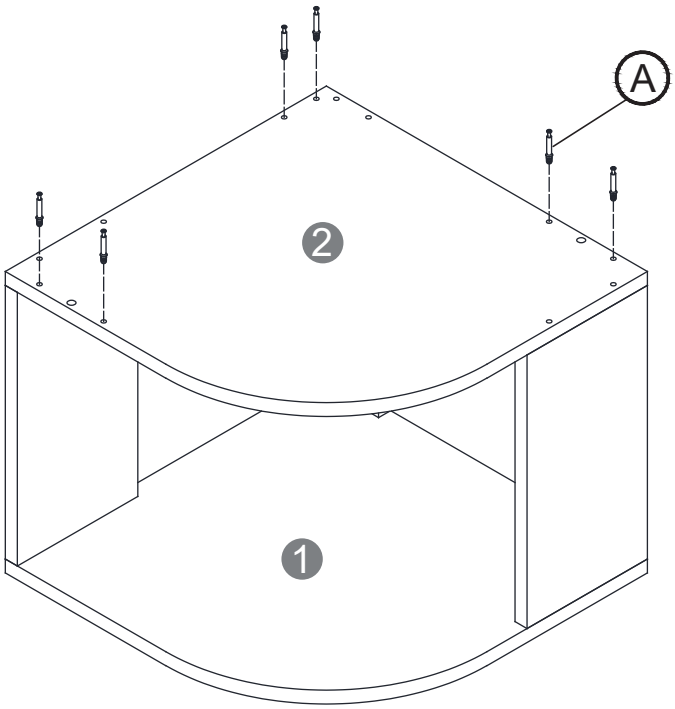


A		X 6

step5:

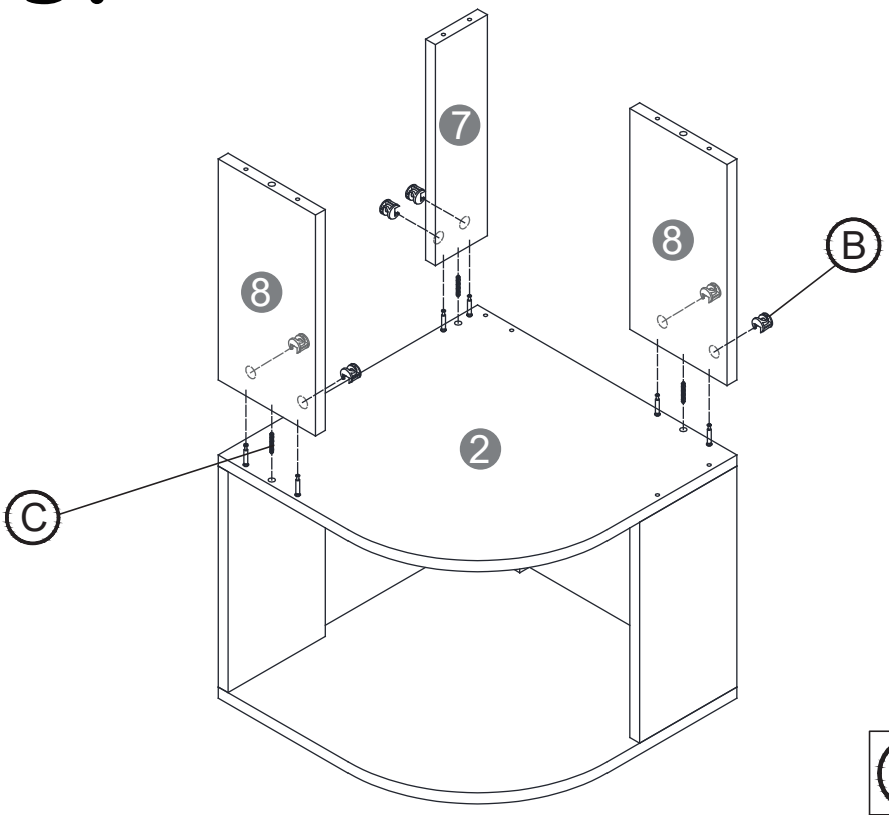


B		X 6
C		X 3

step6:

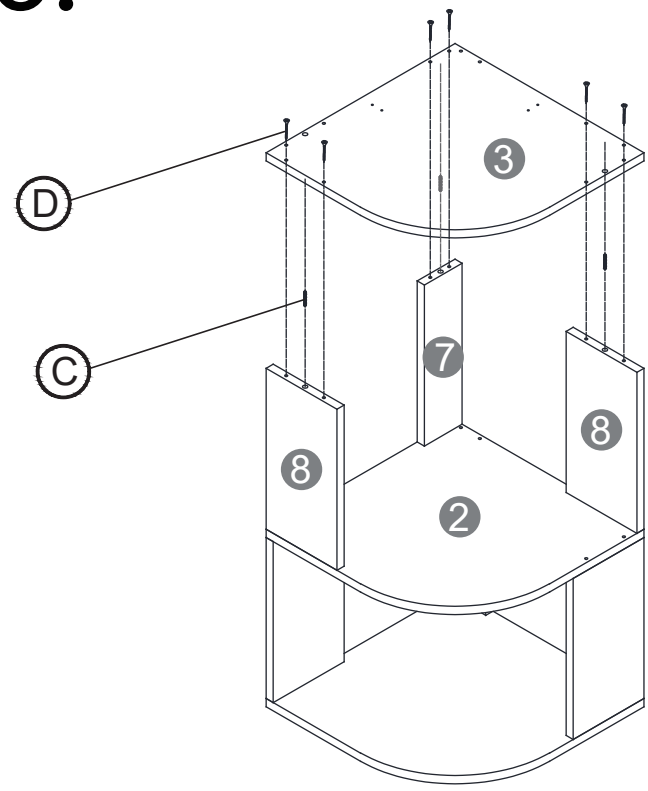


C		X 3
D		X 6

step7:

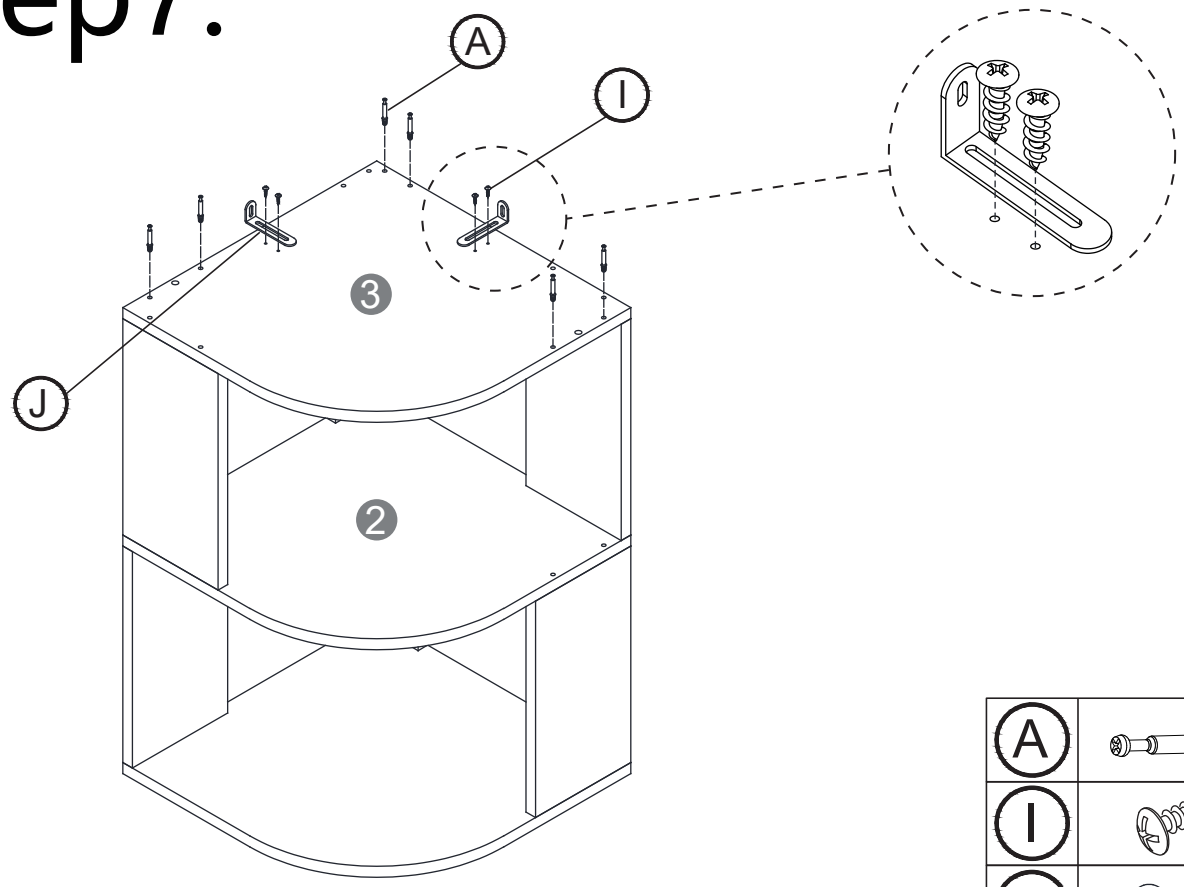


A		X 6
I		X 4
J		X 2


step8:

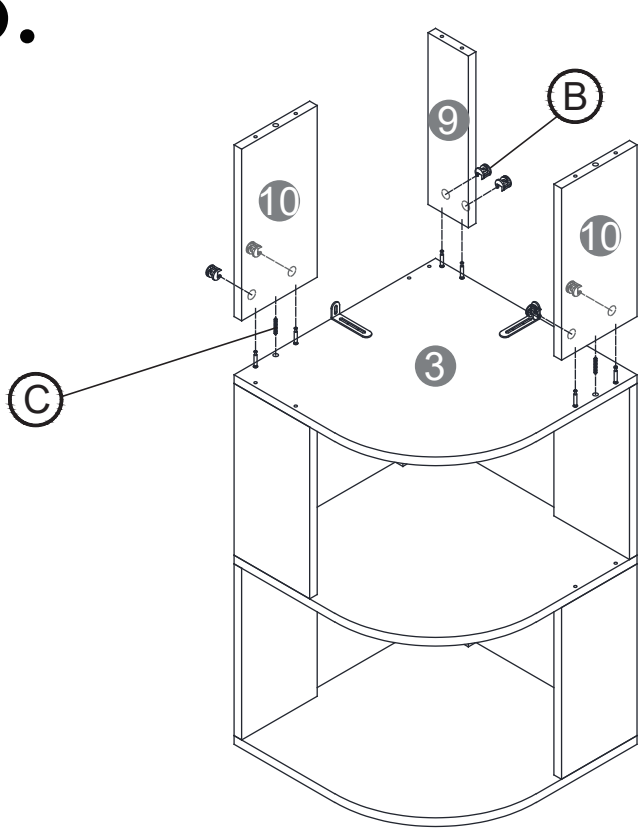


B		X 6
C		X 2

step9:

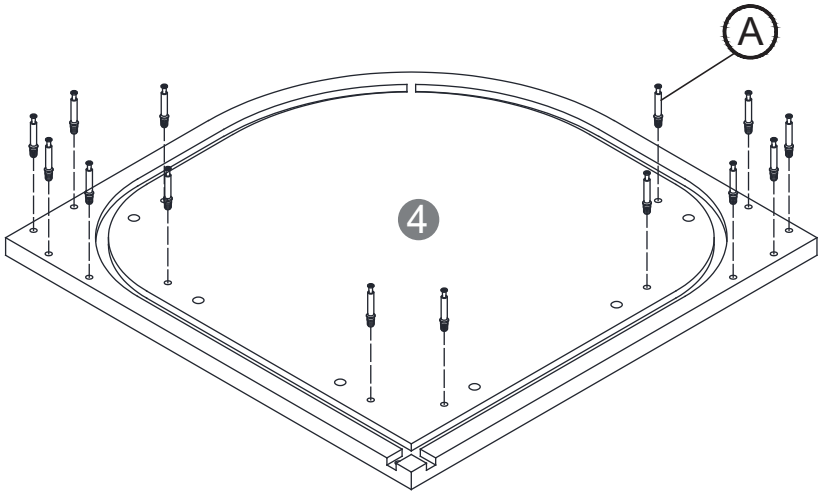


A		X 14

step10:

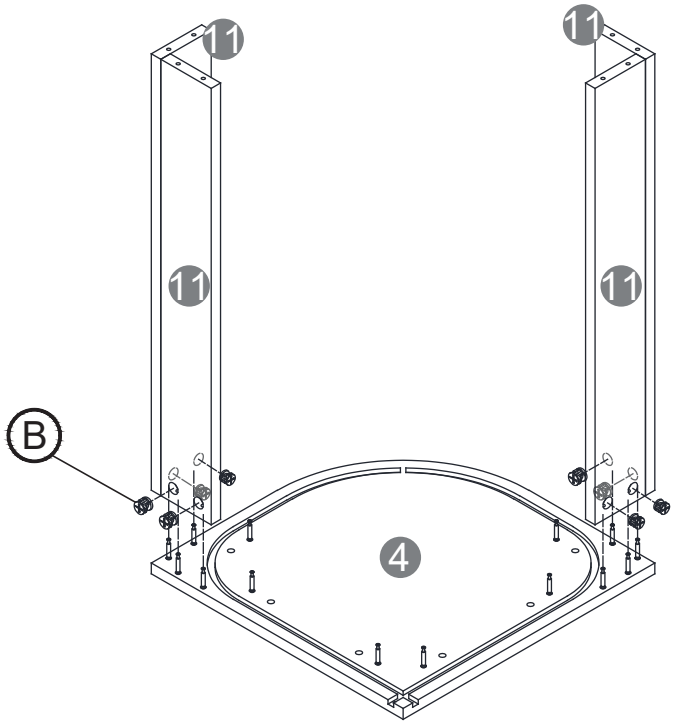


B		X 8

step11:

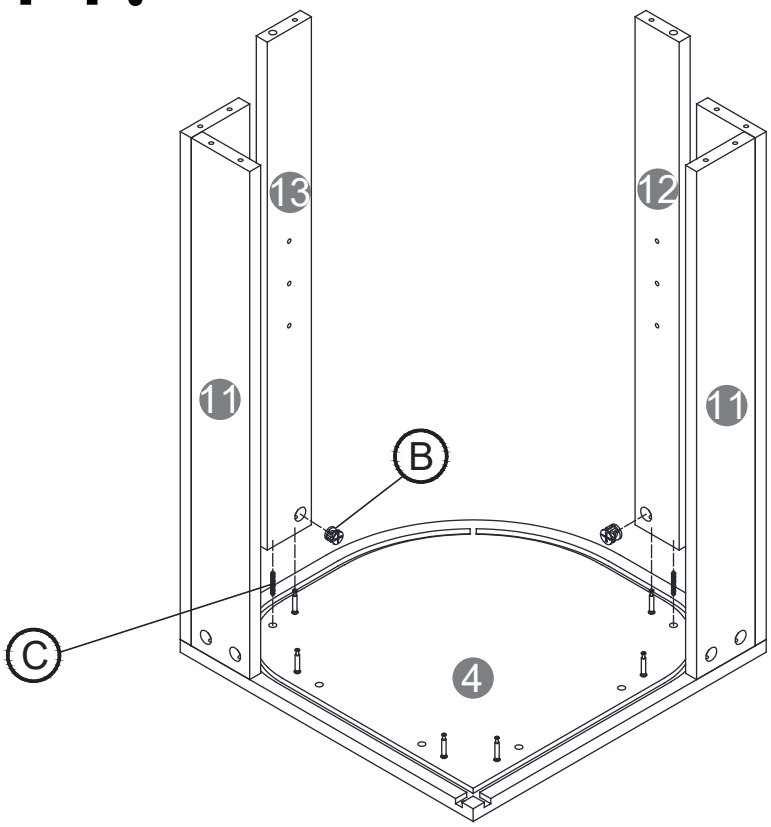


B		X 2
C		X 2

step12:

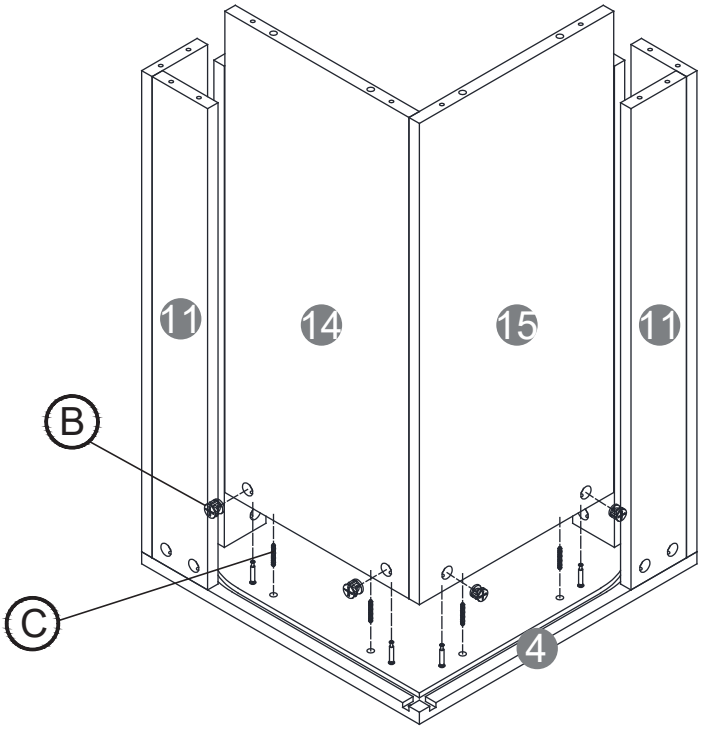


B		X 4
C		X 4


step13:

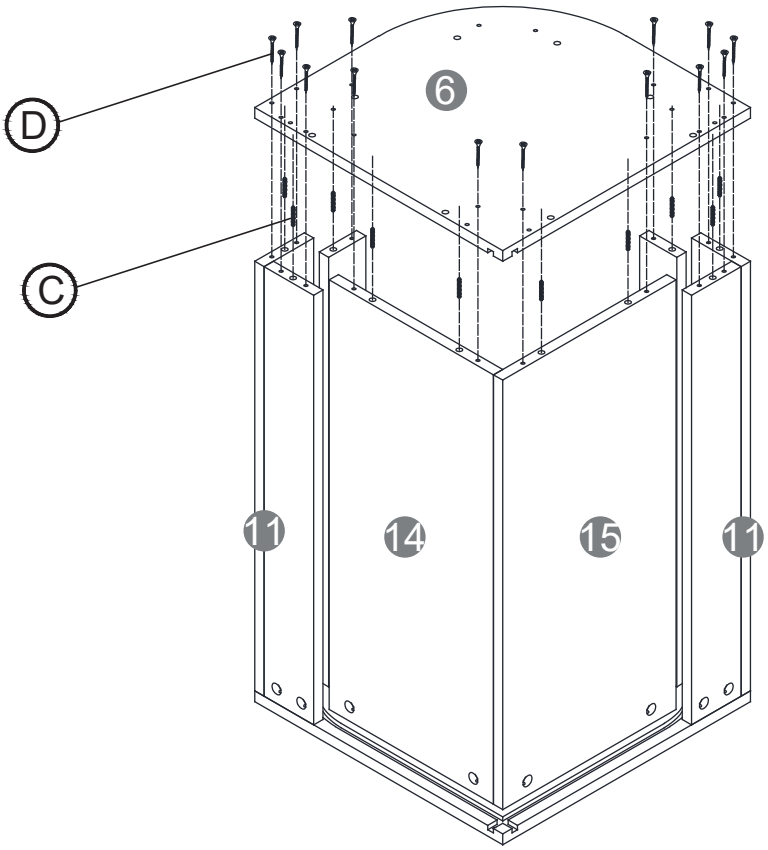


C		X 10
D		X 14

step14:

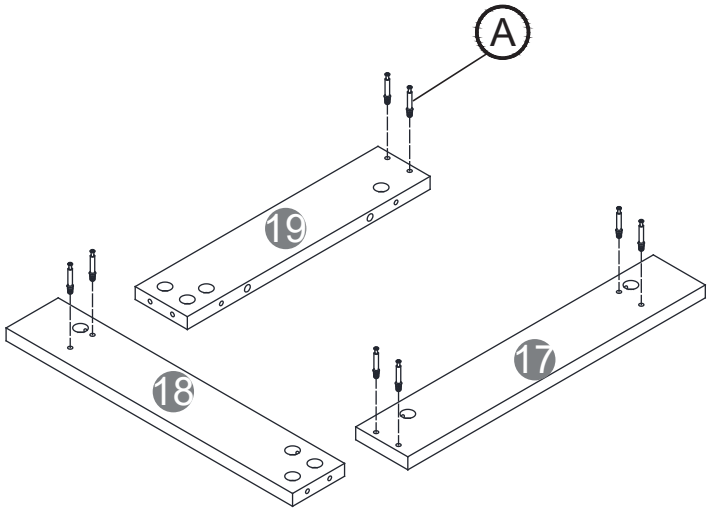


A		X 8

step15:

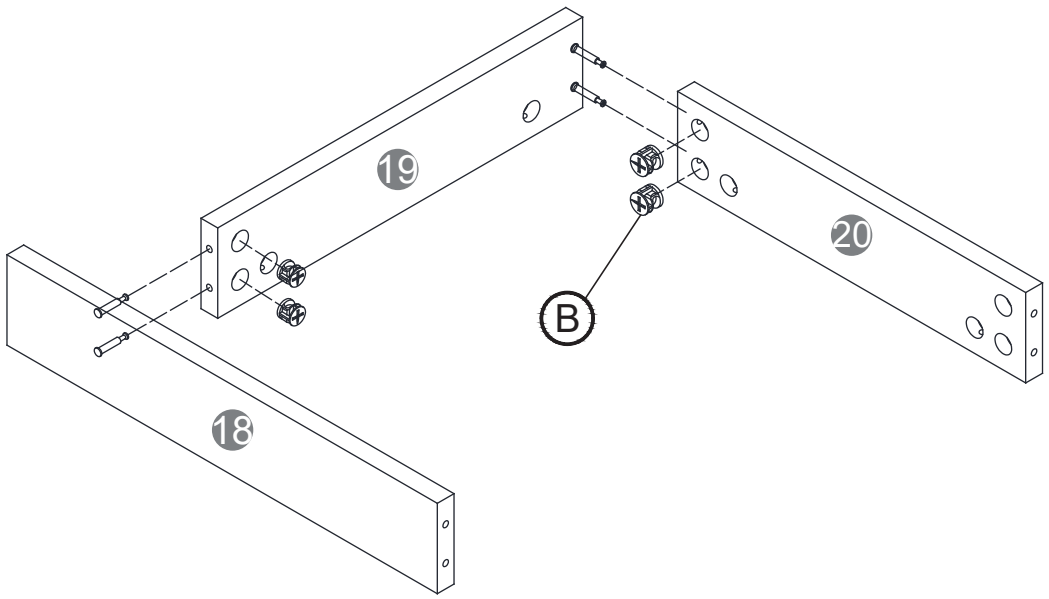


B		X 4


step16:

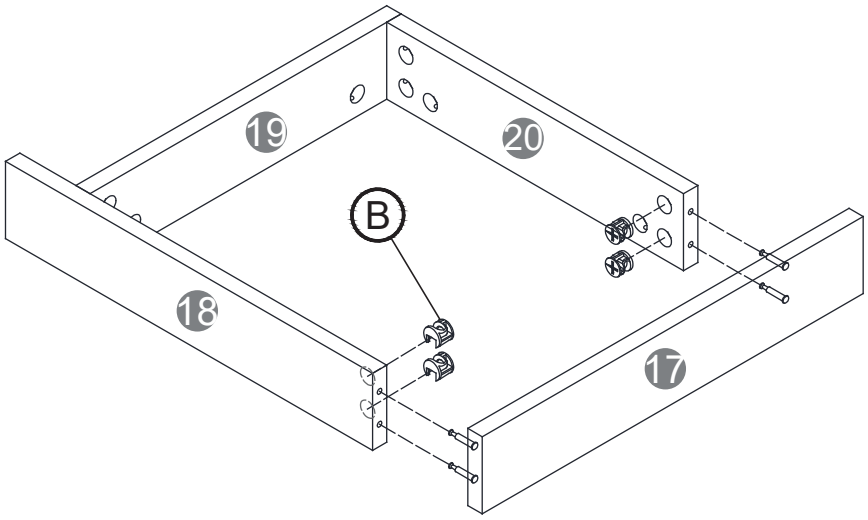


B		X 4

step17:

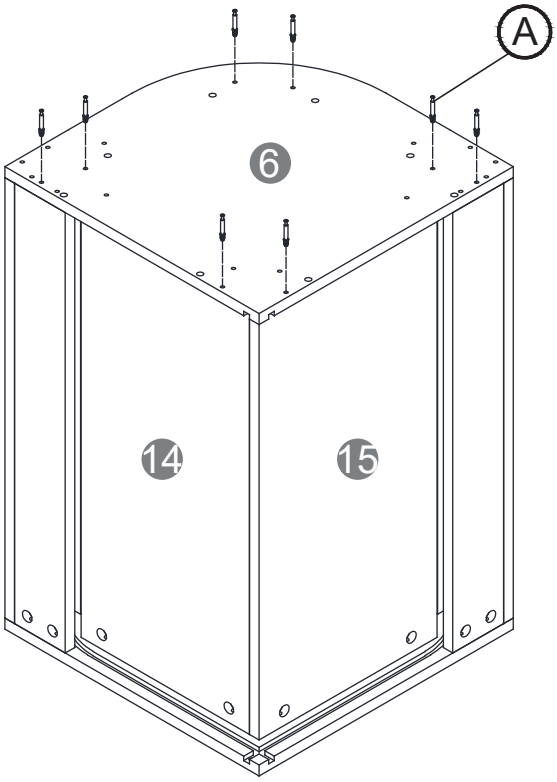


A		X 8


step18:

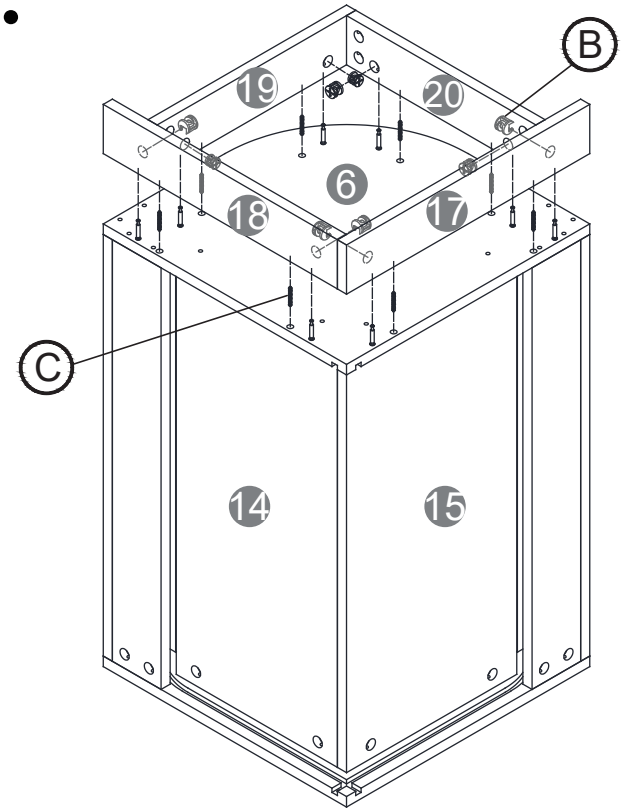


B		X 8
C		X 8

step19:

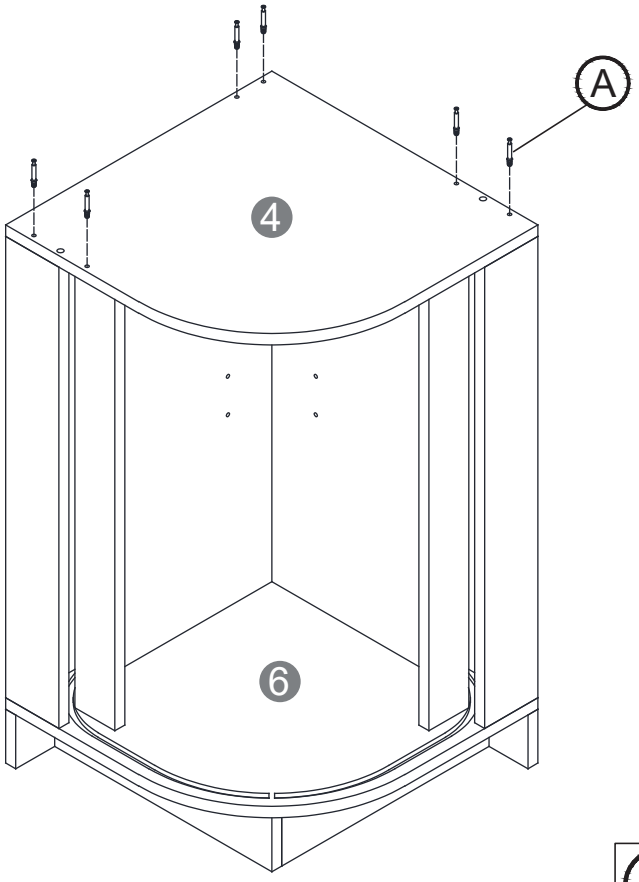

A		X 6


step20:

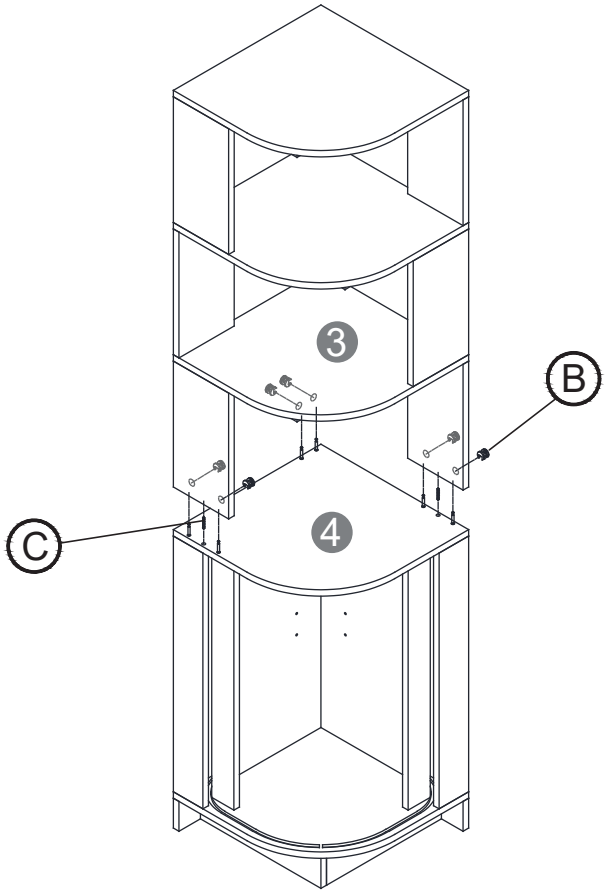


B		X 6
C		X 2

step21:

(1)

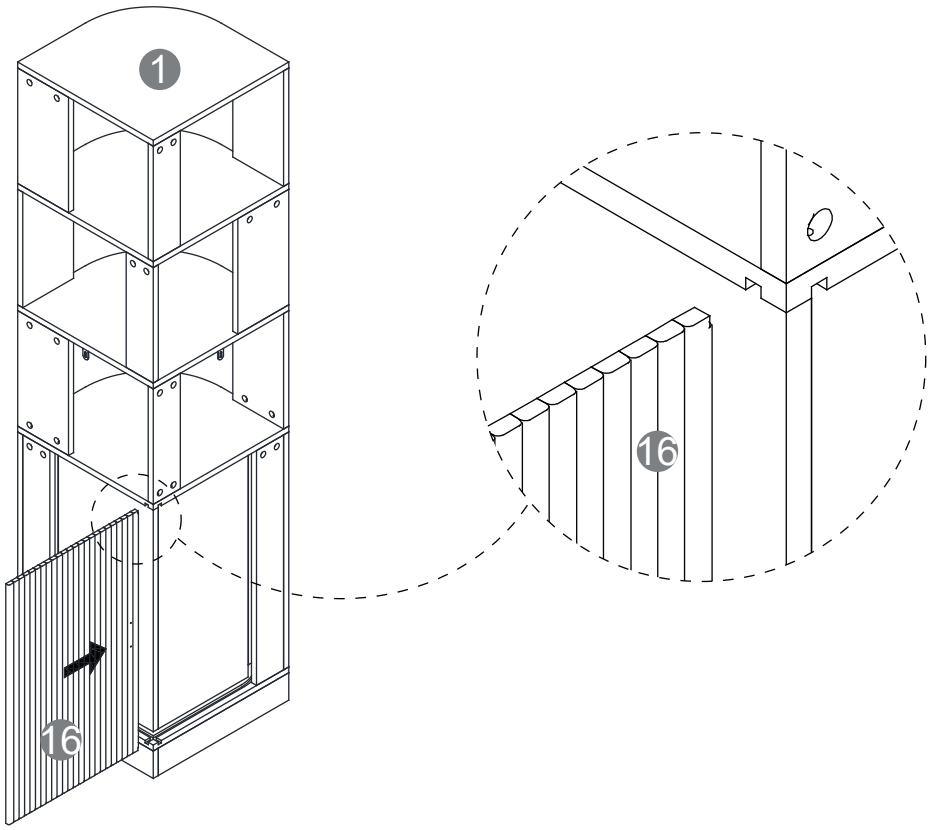


(2)

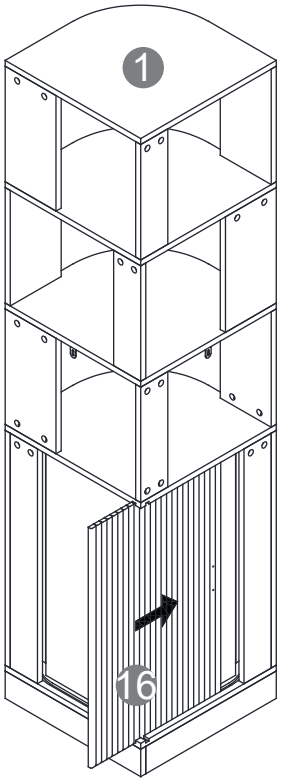


step22:


(1)

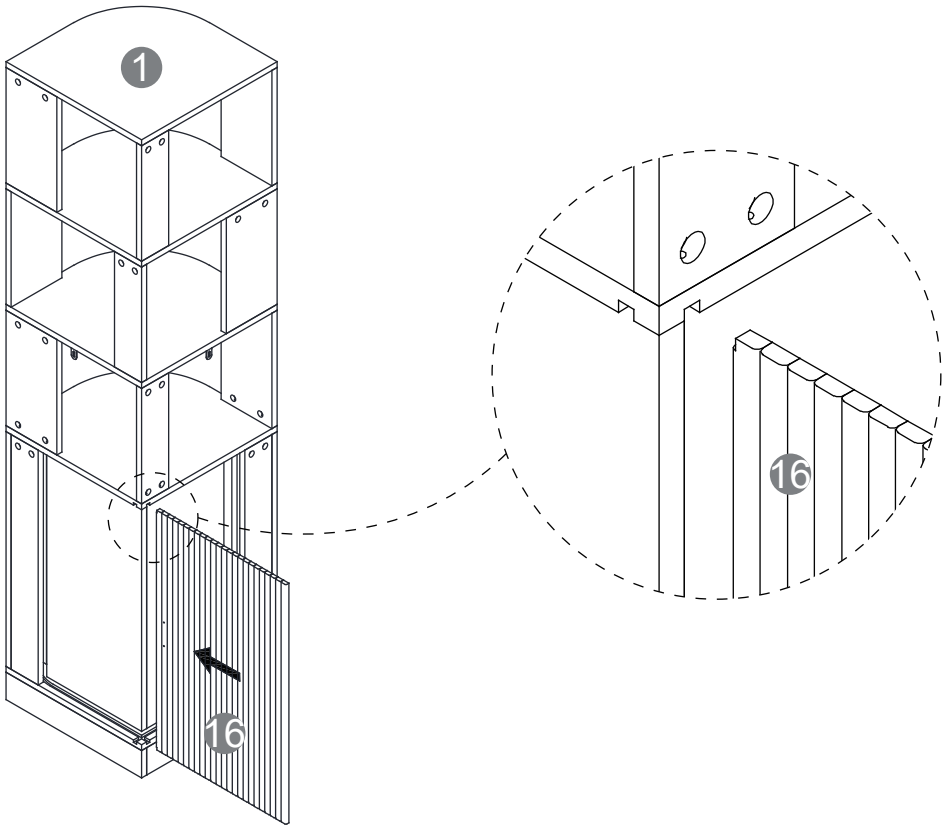

(2)

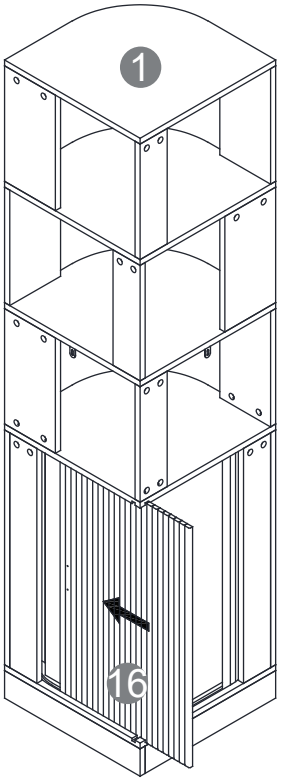


step23:

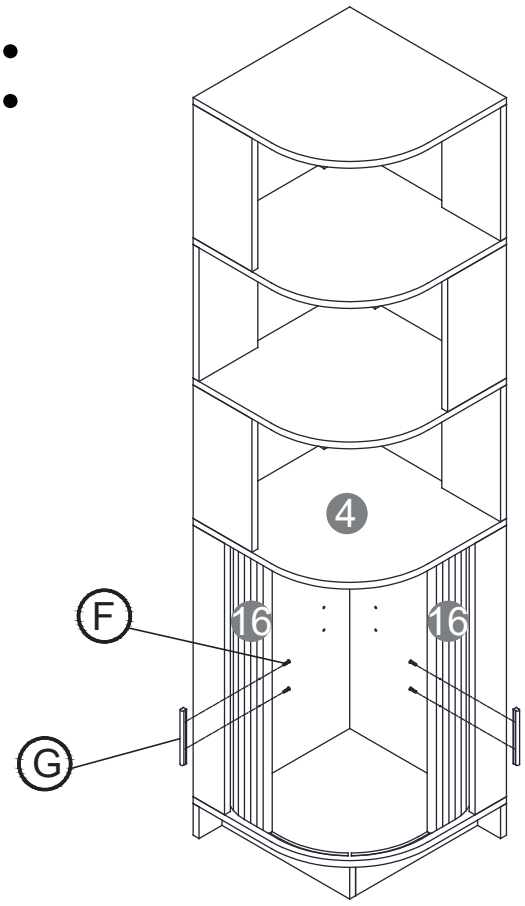


F	X 4
G	X 2

step24:

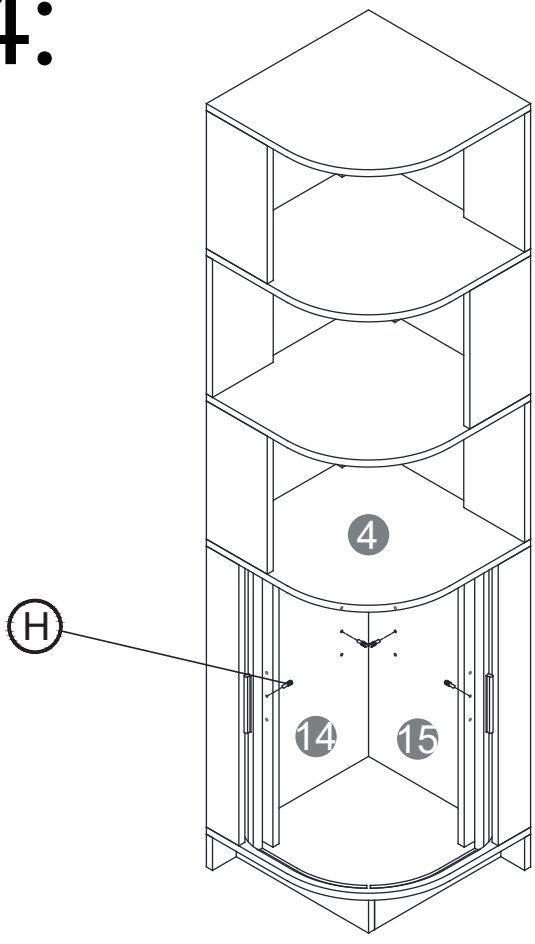



H	X 4

step25:

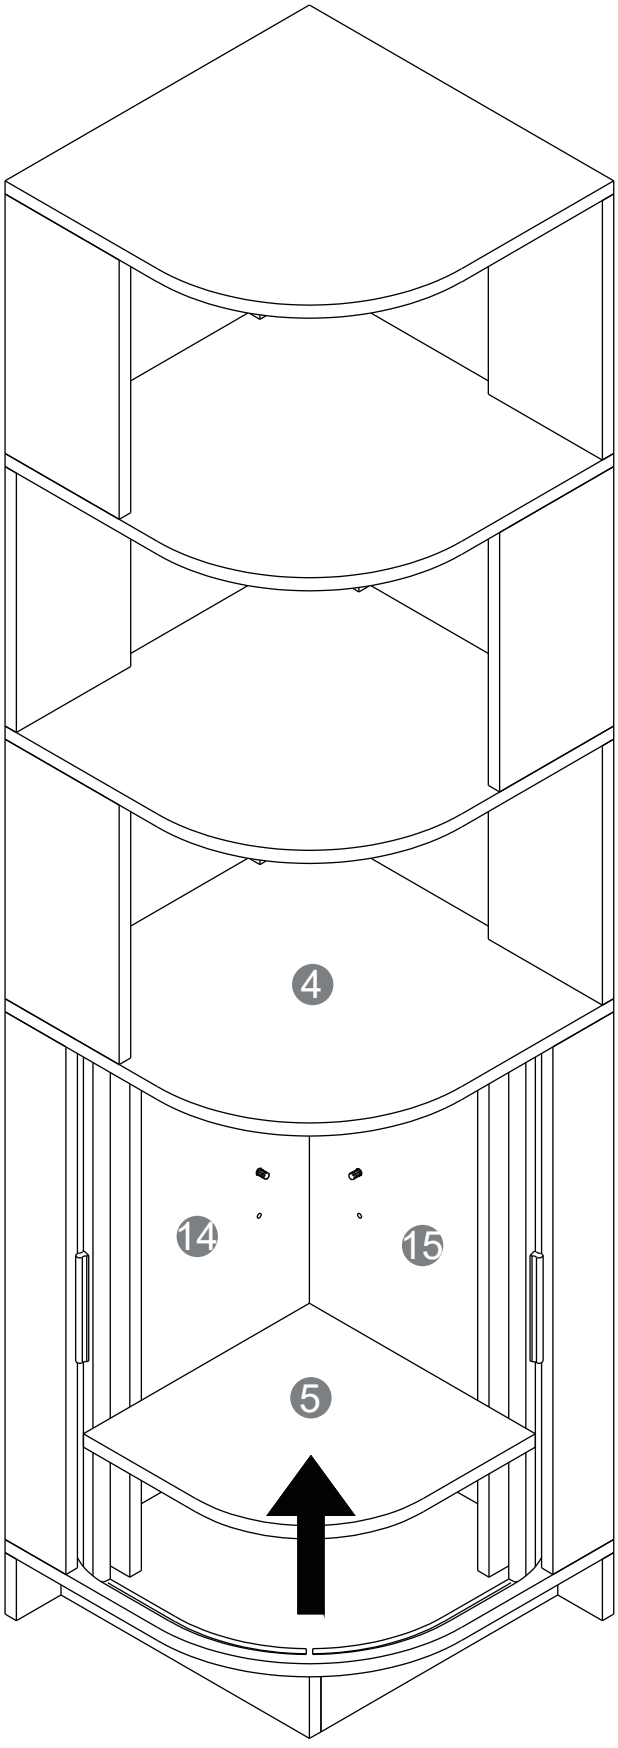

step26:

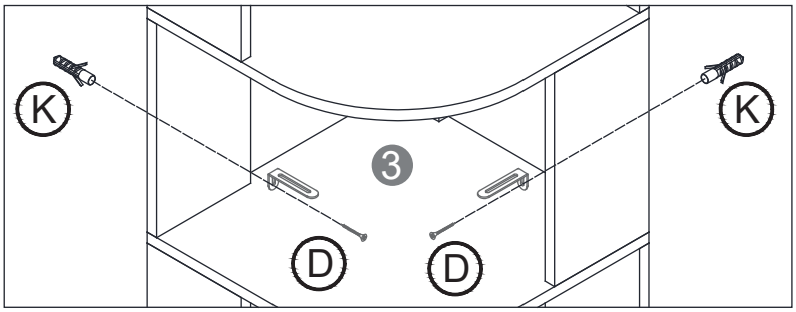

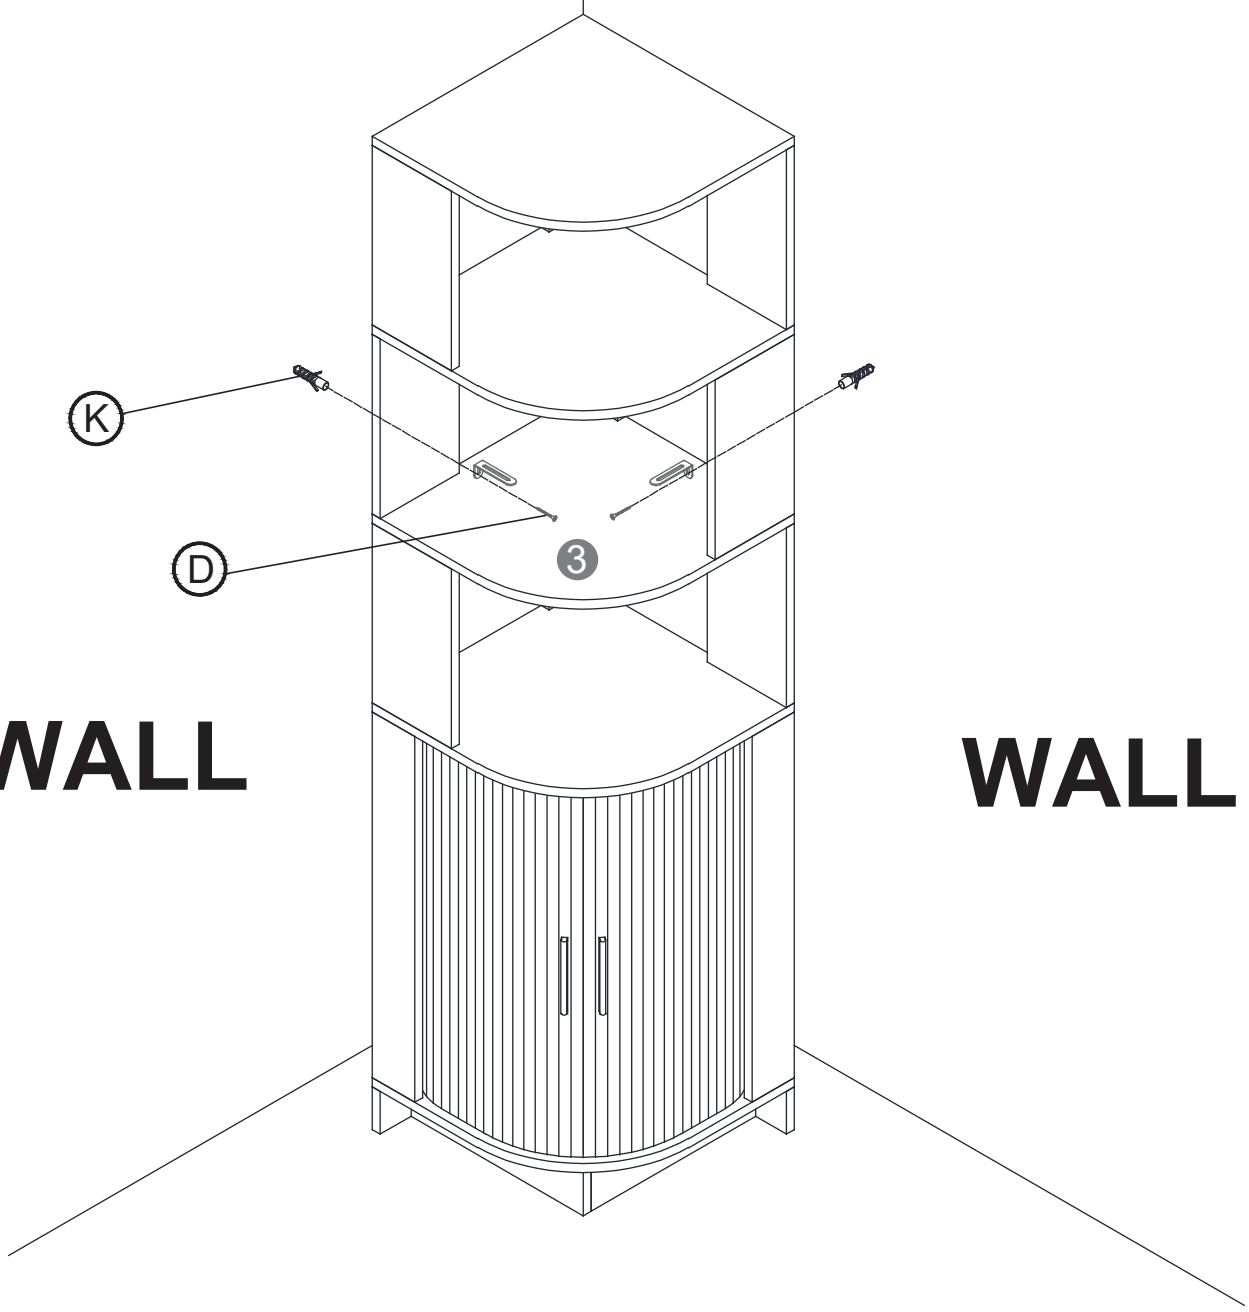

D	X 2
K	X 2