

## series installation schematic

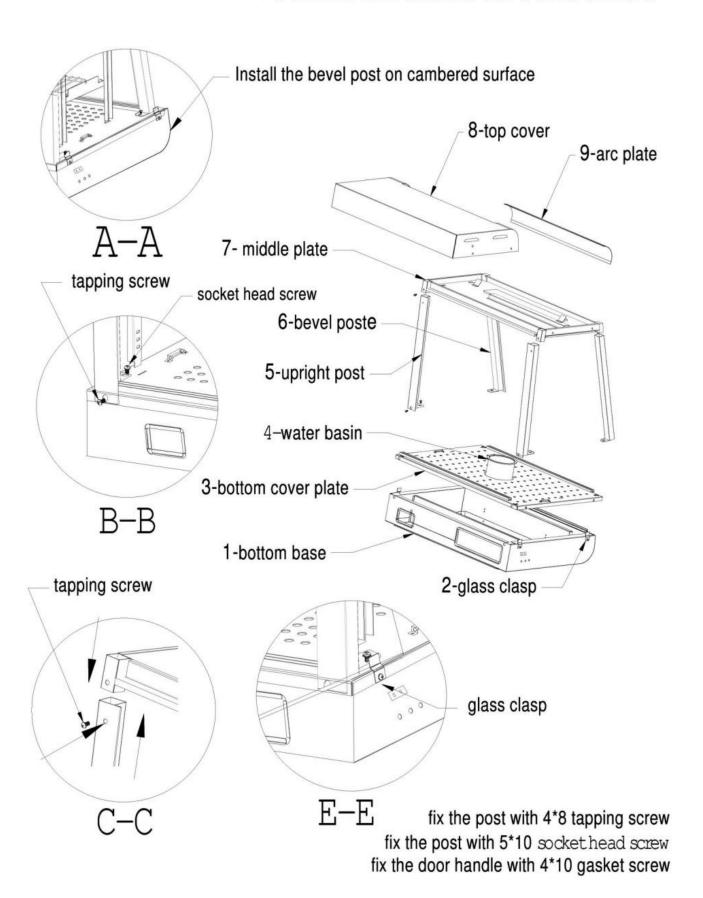

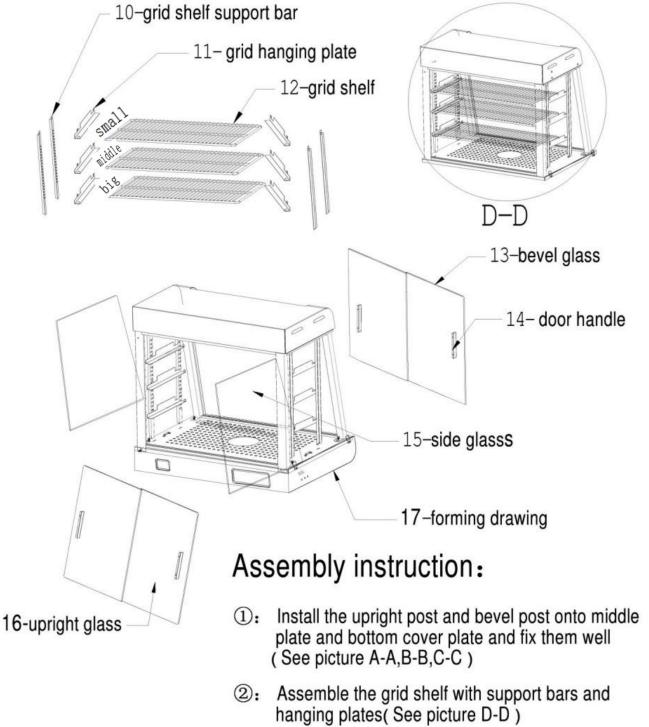

- ③: Install the side glass, twsit the glass clasp, unscrew the screw, put glass inside and lock with screw tightly. (See picture E-E)
- 4: Install the door handle, then install the upright glass door and bevel glass from up to down, inside to outside. (Notice: bevel glass is taller than upright glass)