


FIREPLACE MANTEL


ASSEMBLY INSTRUCTIONS

MT379D

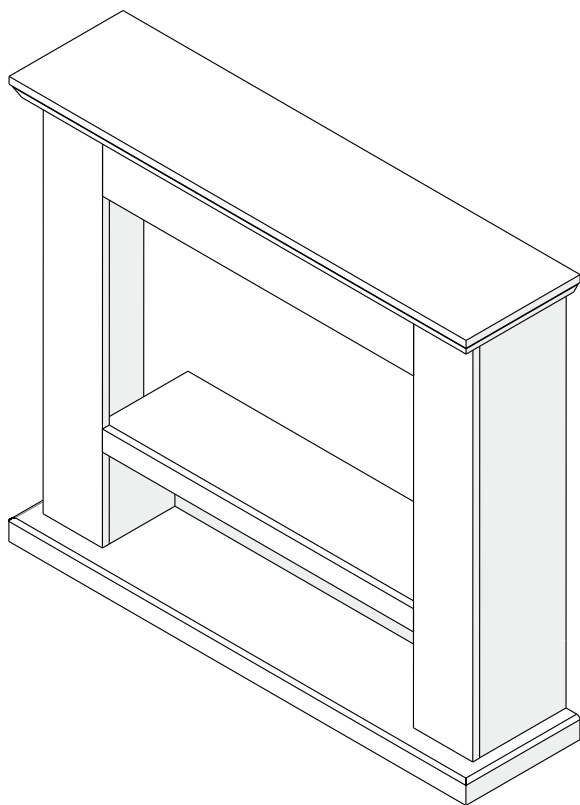


If you have a problem with this product, DO NOT RETURN
Call our customer service: 949-385-6588
or email: service5@fireandfireplaceservice.com

PARTS LIST





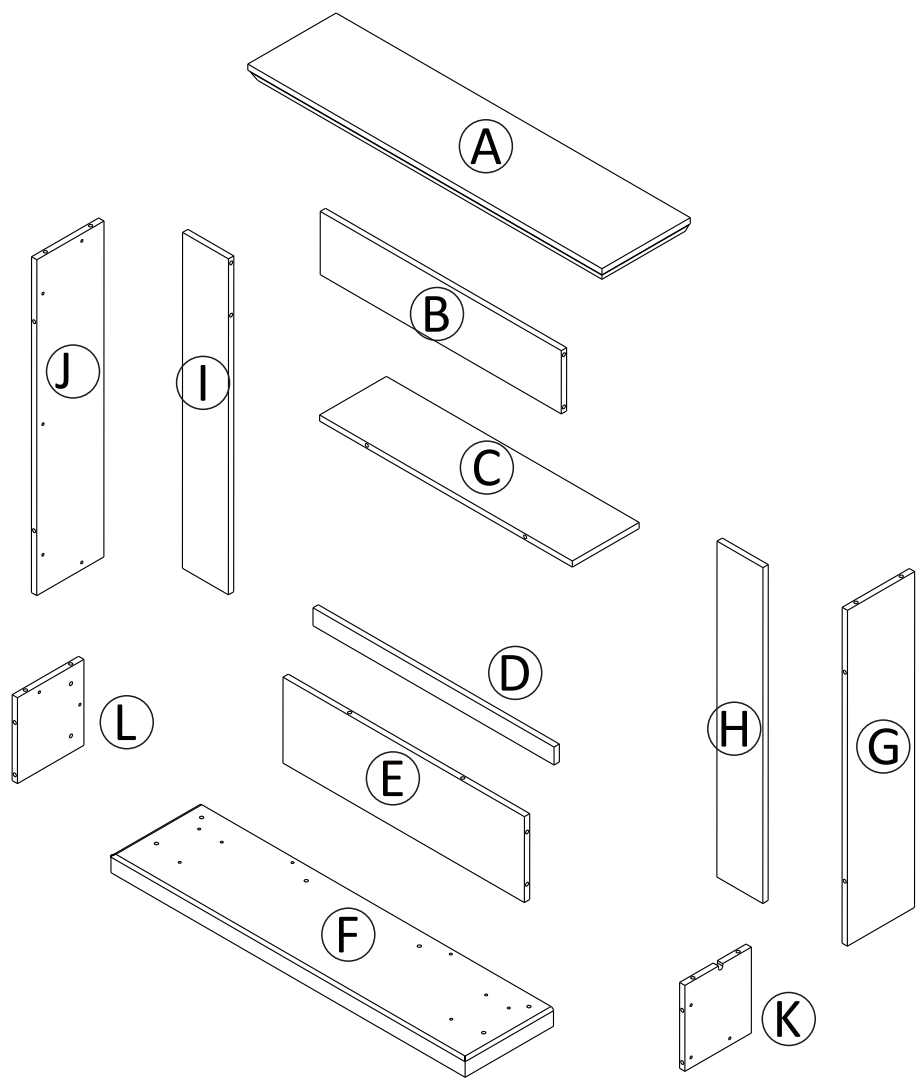


TOOLS REQUIRED

A screwdriver will be needed


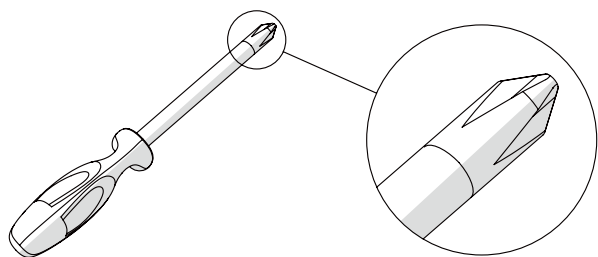


ACCESSORIES

 Screw M6x12mm X70+1	 Screw ST4x12mm X8+1	 L Bracket X33+1
 Flat Bracket X2+1	 Plug ø8x30mm X34+1	 Clamp X4
 Foam X4	 Screwdriver X1	 Moodlight Strip X1
 Connect Wire X1	 Pad X6+2	

ASSEMBLY INSTRUCTIONS

STEP 1

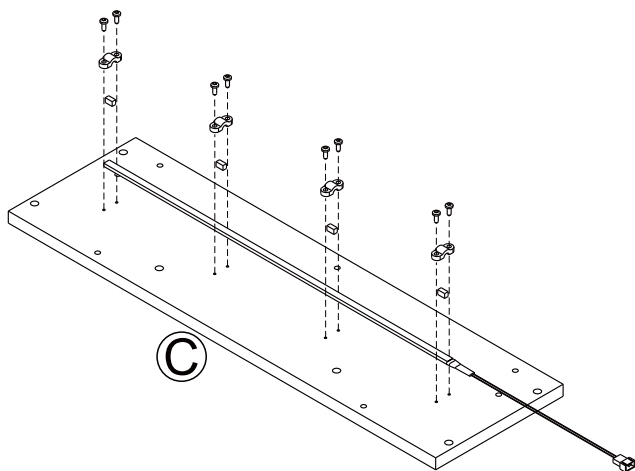

x4

Fixer



x4

Foam



x8

Screw ST4x12mm





x1

Moodlight Strip

Uncover the paper on the foams and stick them on the moodlight strip evenly, use the fixers and screws to fix the moodlight strip on the panel.

Make sure the strip is fixed as above otherwise it will influence the mood light effect.


STEP 2

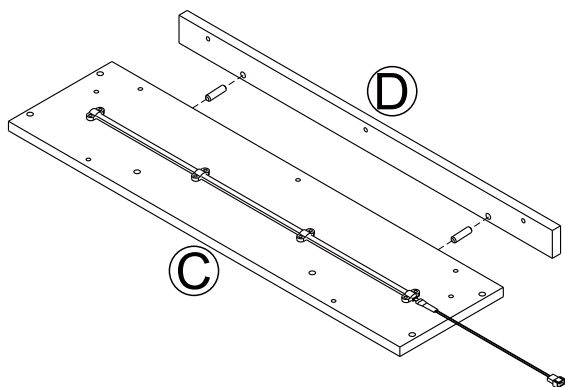

x2

Plug $\phi 8 \times 30 \text{ mm}$

STEP 3

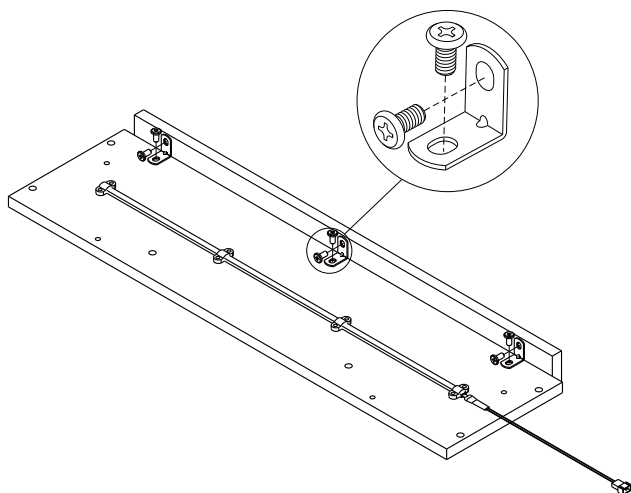

x6



Screw M6x12mm



x3

L Bracket


STEP 4

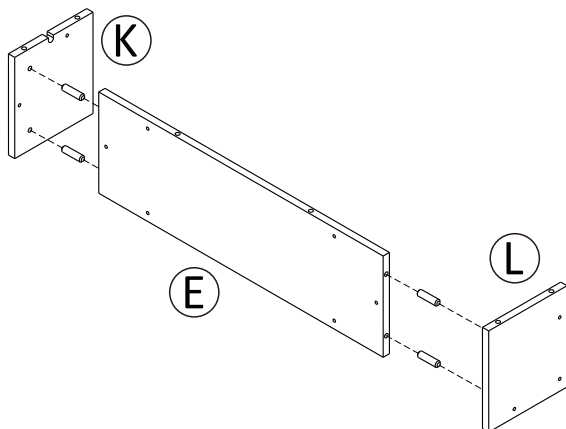

x4


Plug $\phi 8 \times 30 \text{mm}$

STEP 5

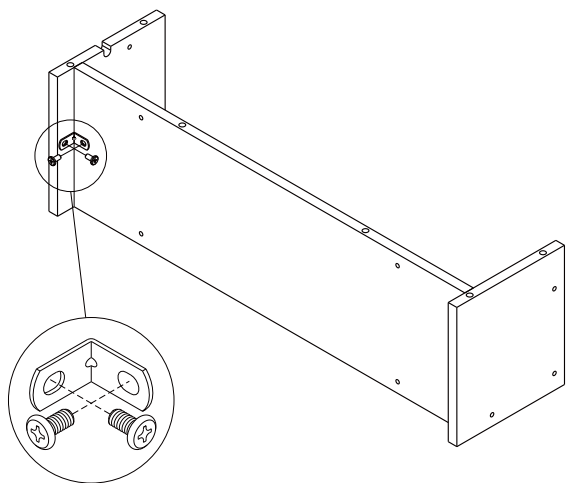

x4

Screw M6x12mm





x2

L Bracket

Carry out these assembly steps on both sides.


STEP 6

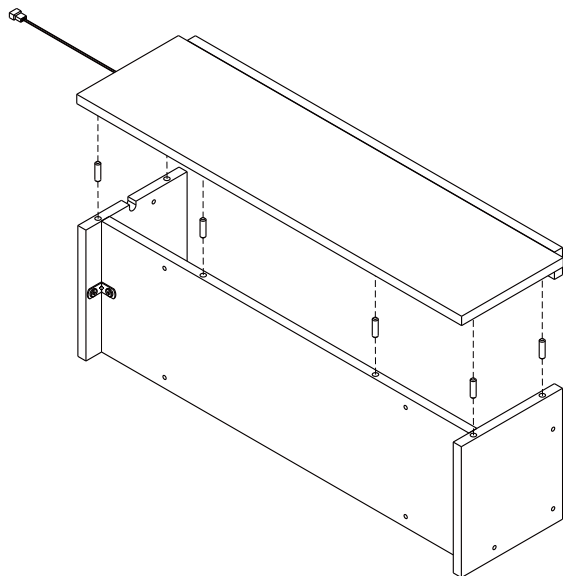

x6


Plug $\phi 8 \times 30 \text{ mm}$

STEP 7

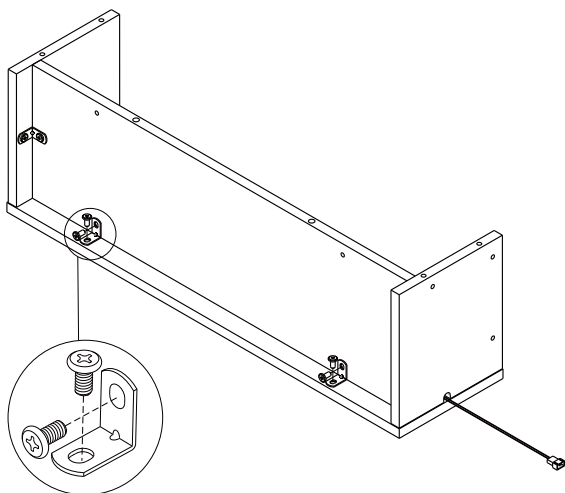

x4


Screw M6x12mm



x2


L Bracket

STEP 8

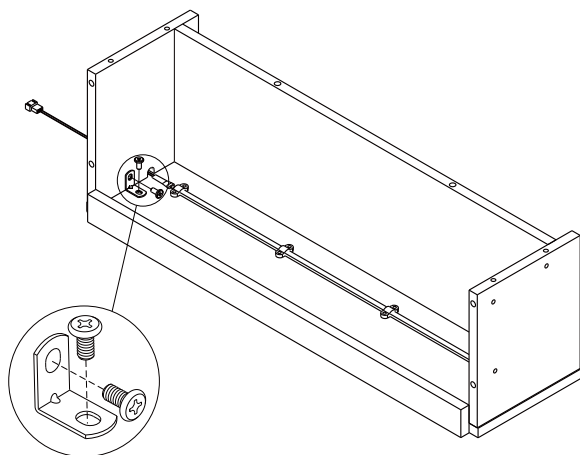

x4

Screw M6x12mm





x2

L Bracket

Carry out these assembly steps on both sides.

STEP 9

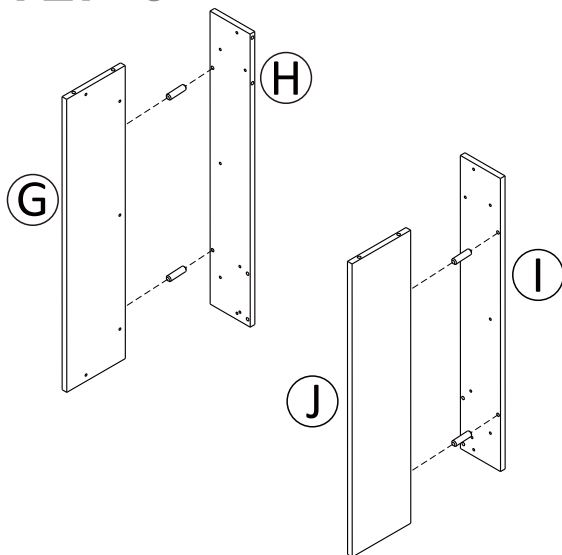


x4

Plug $\phi 8 \times 30$ mm


Carry out these assembly steps on both sides.

STEP 10

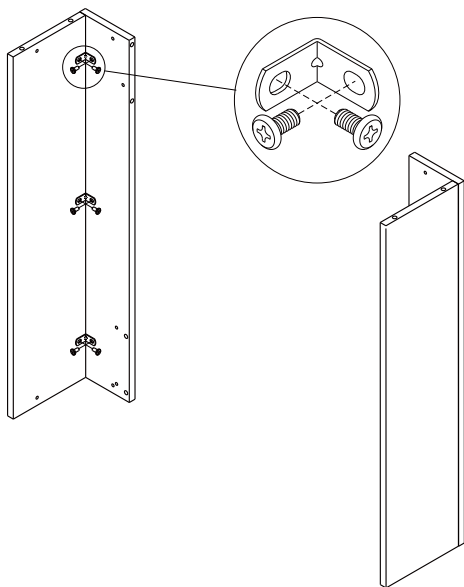

x12

Screw M6x12mm





x6

L Bracket

Carry out these assembly steps on both sides.


STEP 11

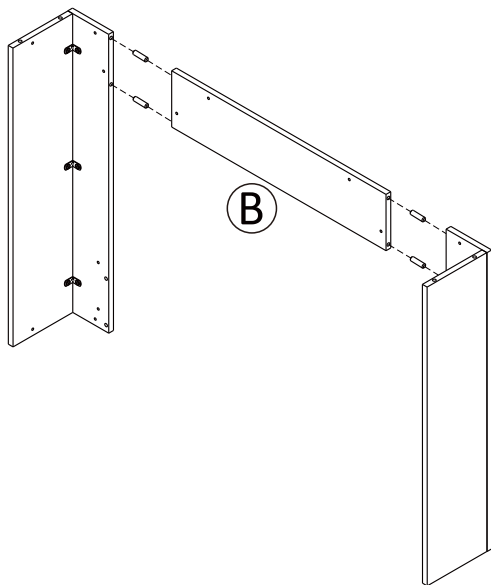

x4


Plug $\phi 8 \times 30 \text{ mm}$

STEP 12

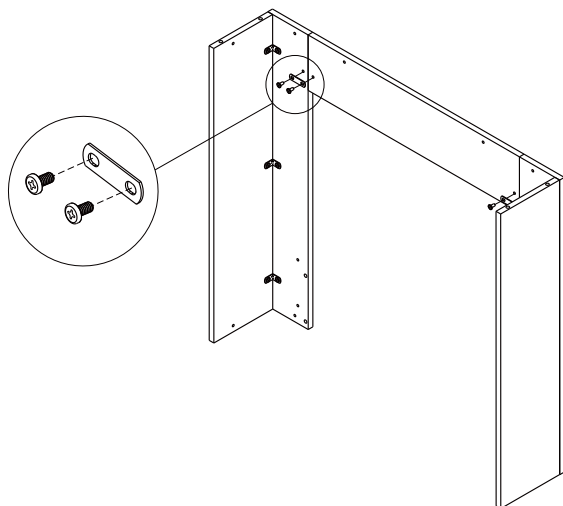

x4

Screw M6x12mm





x2

Flat Bracket

Carry out these assembly steps on both sides.


STEP 13

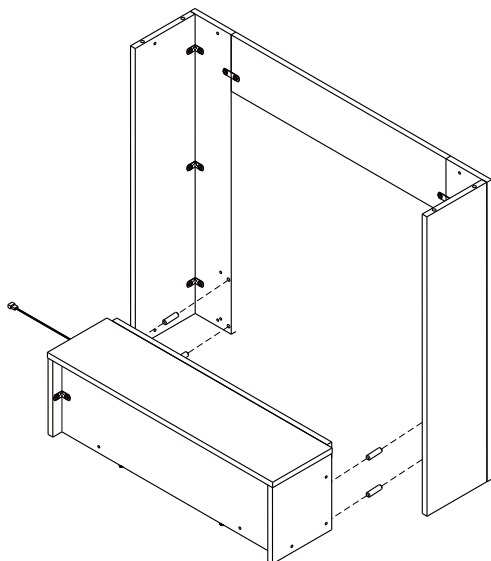

x4


Plug $\phi 8 \times 30 \text{mm}$

STEP 14

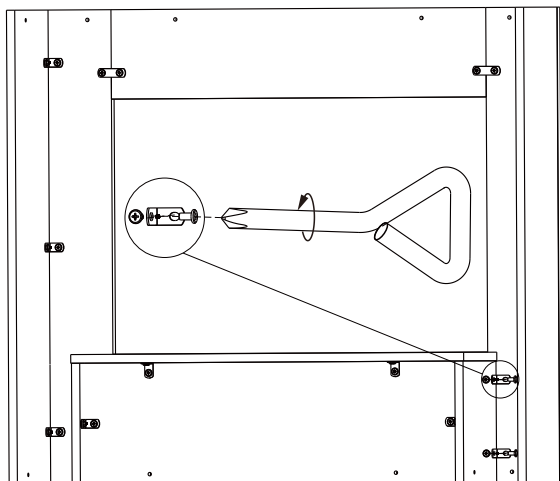


x8

Screw M6x12mm



x4

L Bracket




x1

Screwdriver

Carry out these assembly steps on both sides.



STEP 15

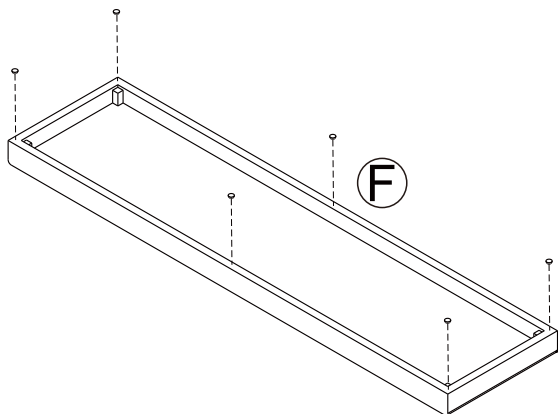

x6

Pad


STEP 16

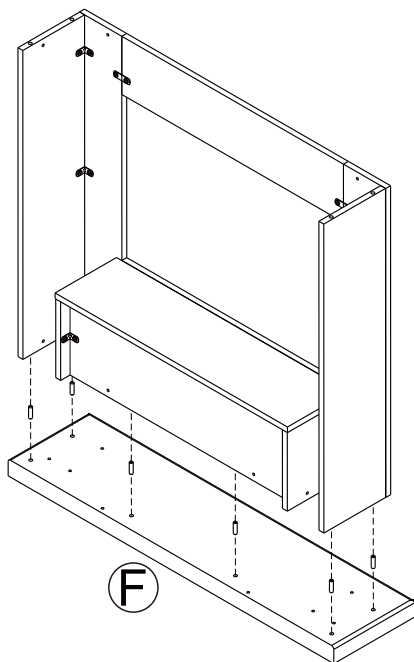

x6

Plug $\varnothing 8 \times 30 \text{ mm}$

STEP 17

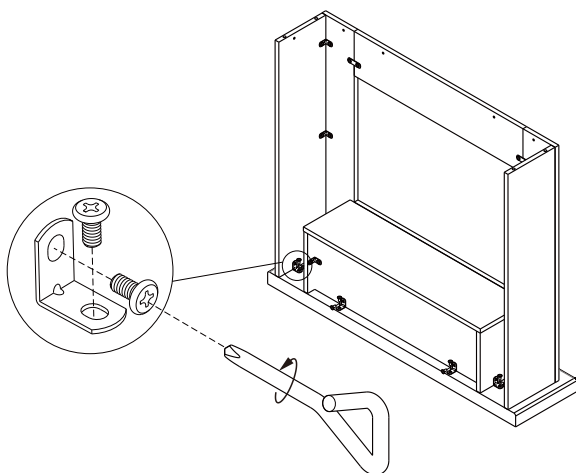


x16

Screw M6x12mm



x8

L Bracket





x1

Screwdriver

Carry out these assembly steps on both sides.


STEP 18

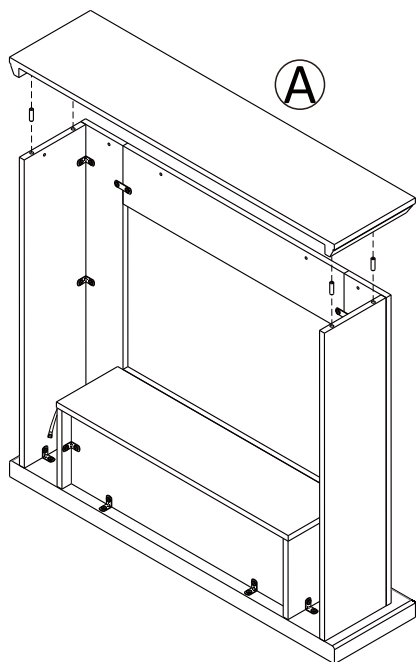

x4

Plug $\phi 8 \times 30 \text{ mm}$

STEP 19

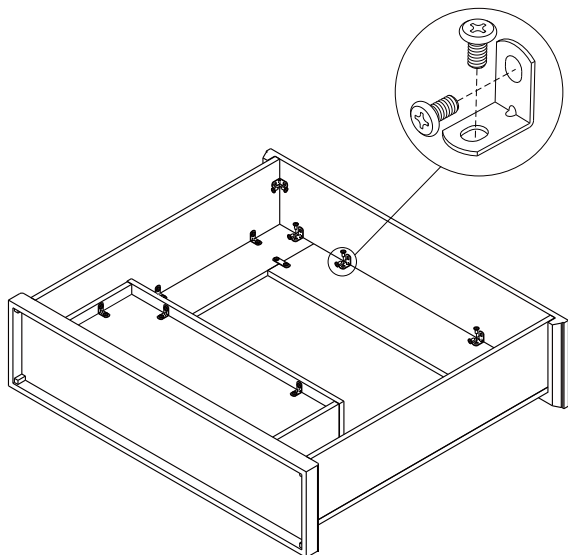

x12

Screw M6x12mm




x6

L Bracket


Carry out these assembly steps on both sides.

STEP 20

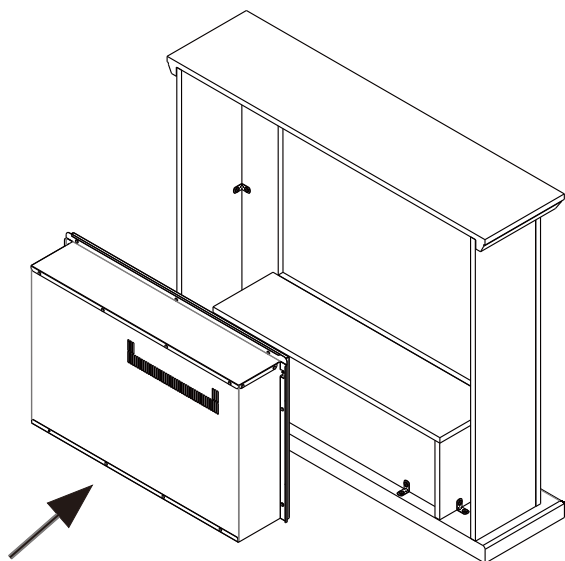


Rear side of the panel

STEP 21

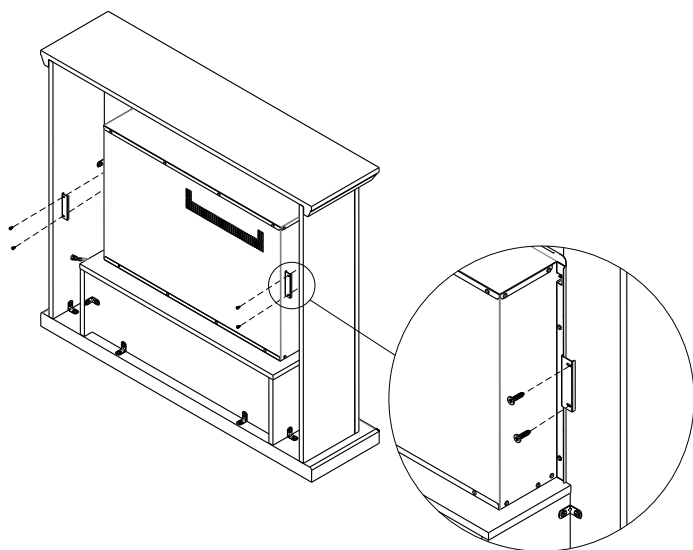


4pcs ST3.5x20mm Screw

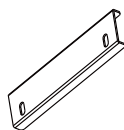

x2



Packed with firebox



x4


Packed with firebox

STEP 22

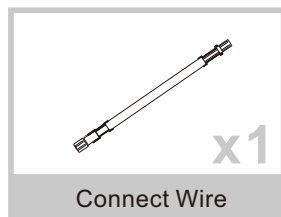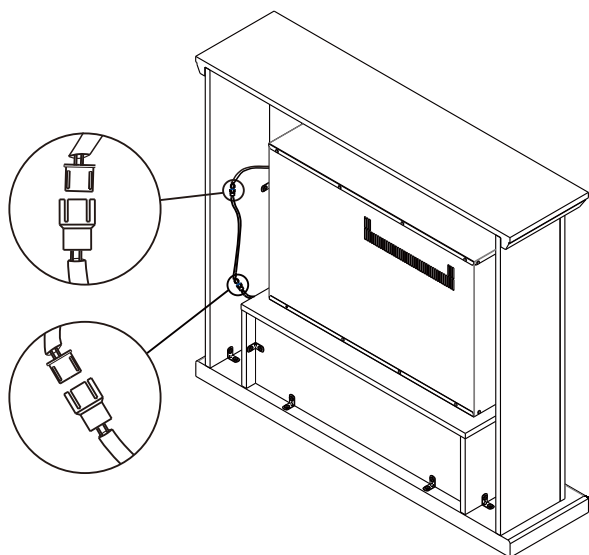

Connect mood light cable

STEP 23

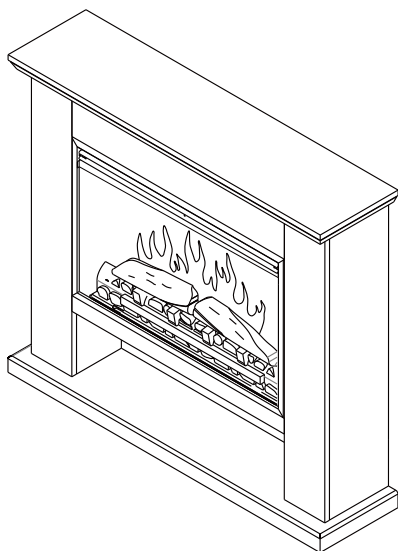

Legend Flame Group LLC
Address: 92 Corporate Park, Ste. C655 Irvine, CA 92606, United States
Tell: 949-385-6588
Email: service5@fireandfireplaceservice.com