



DHW060BN086C

5-Piece Round Sectional Set


Assembly tip: Do not tighten the screws fully until each of them is aligned.

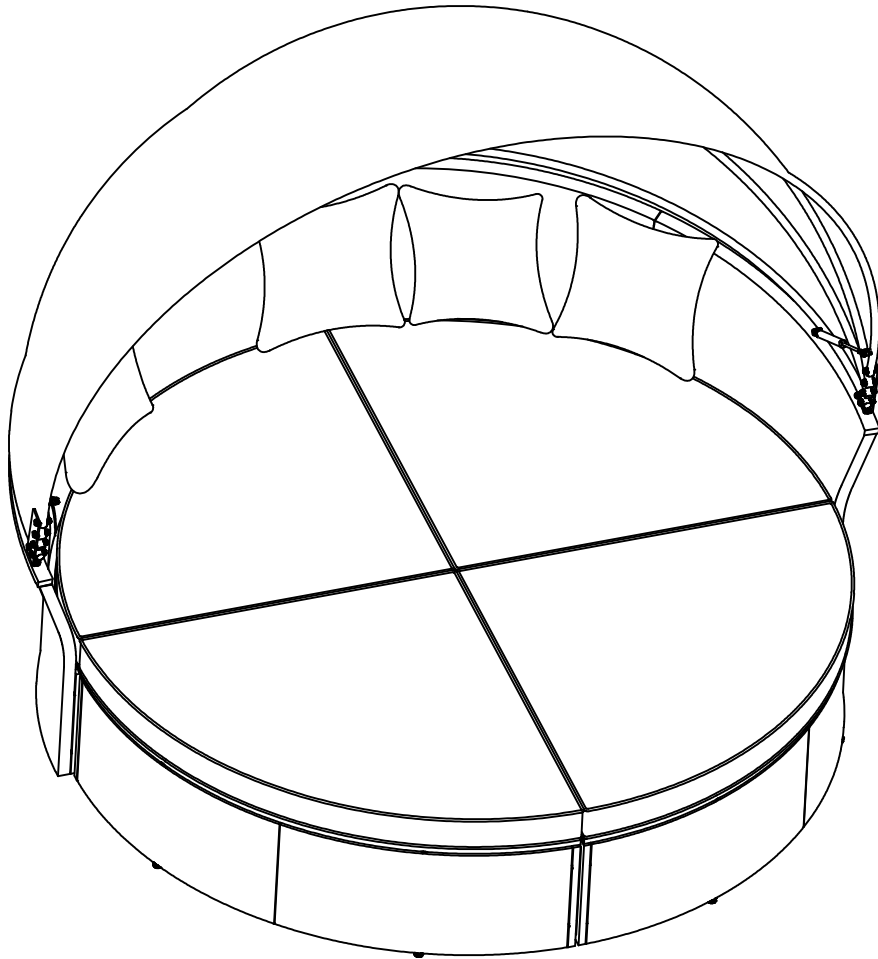

DHW060BN086C
5-Piece Round Sectional Set
Assembly tip:Do not tighten the screws fully until each of them is aligned.

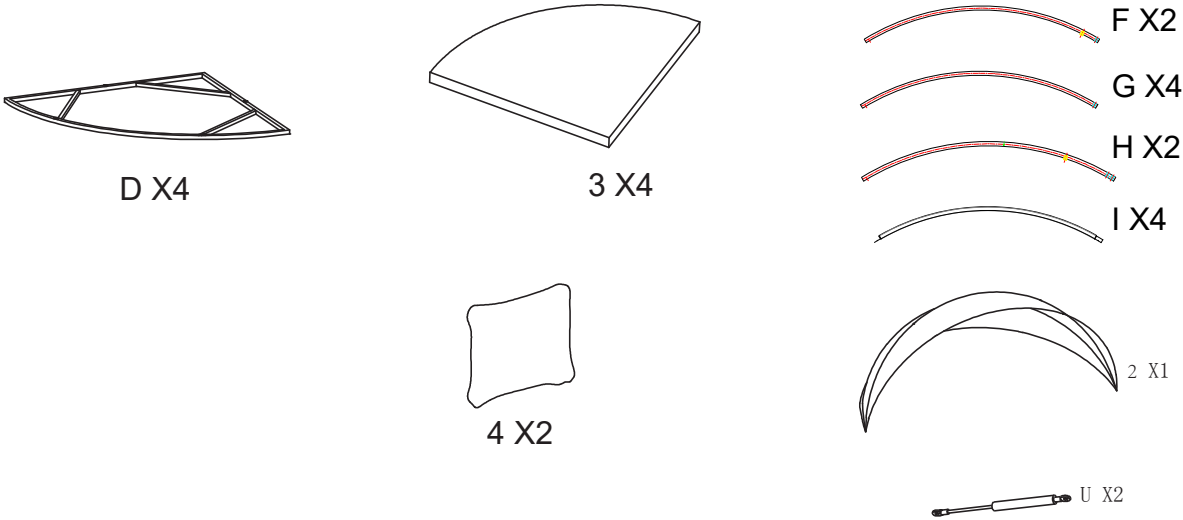

CARTON 1/2

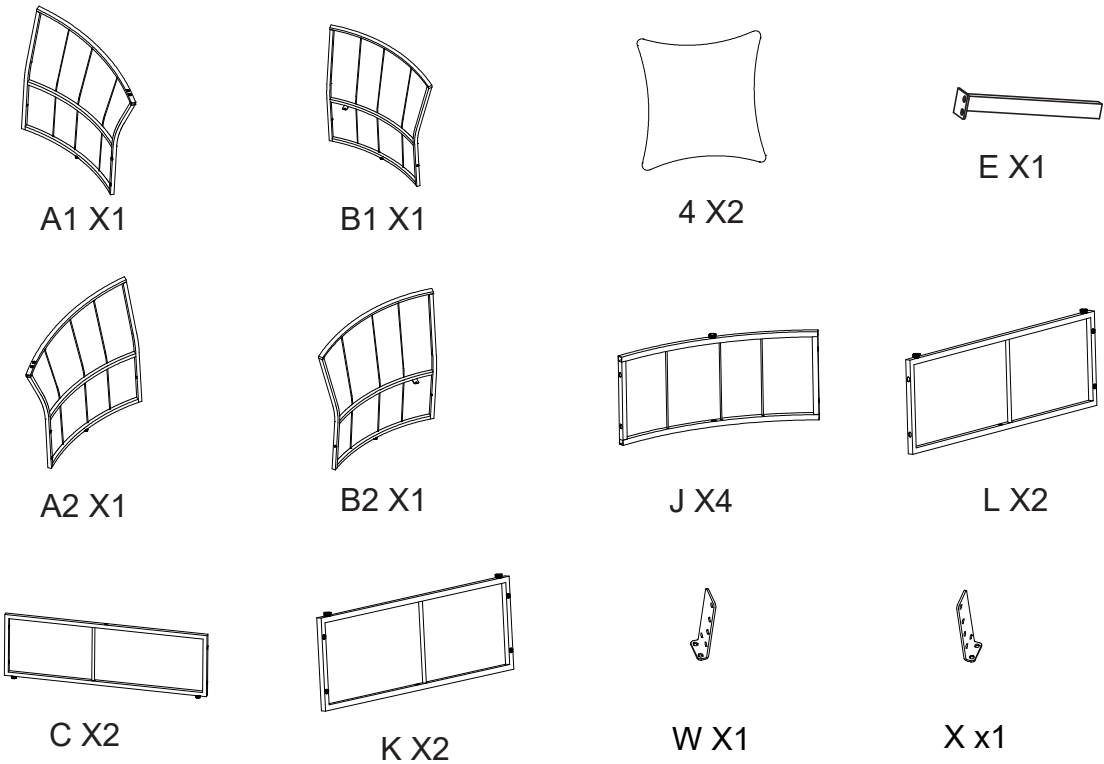


CARTON 2/2

DHW060BN086C


5-Piece Round Sectional Set

Assembly tip:Do not tighten the screws fully until each of them is aligned.


Item no.	Reference Image	Description	Qty.
A1		Far Left Back	1
A2		Far Right Back	1
B1		Left Middle Back	1
B2		Right Middle Back	1
C		Side Panel	2
D		Seat Panel	2
E		Support	1
M	 M6*15	M6*15 Socket Head Cap Screw	20
O	 M6*32	M6*32 Socket Head Cap Screw	6
P	 M6*50	M6*50 Socket Head Cap Screw	5
Q		Flat Washers	36
R		M6 Nut	5
S		Fasteners	3
T		Fasteners	4
W		L-shaped ear piece	1
X		L-shaped ear piece	1

Step 1: Arrange the positions (A1), (B1), (B2), and (A2) in order.


Secure the parts together using fasteners (S), the shortest screw (M), and the top hole washer (Q). Tighten with the Allen key. Divide it into three places.

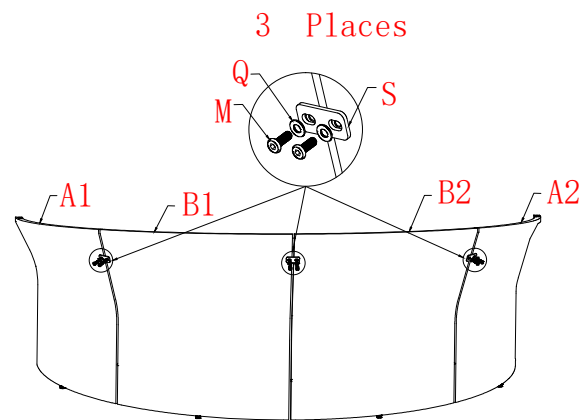

Step 2: Fix the parts together using socket head cap screws (P) with washers (Q) through the holes, and then secure them with washers (Q) and nuts (R). Use a wrench and a wrench to tighten. Do this in three different places.

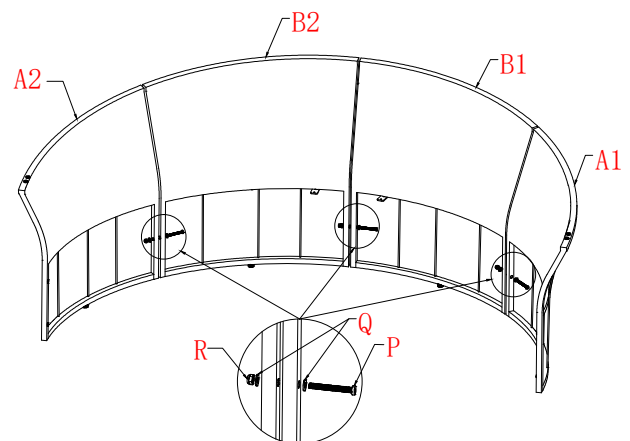

Step 3: Connect the two side panels (C) together. Fix the parts together by using an Allen head screw (P) and a washer (Q) through the lower hole, and then secure them with a washer (Q) and nut (R). Use an Allen wrench and wrench to tighten. Conducted in two locations. Connect the two side panels (C) to the rear panels (A1 and A2). Use socket head cover screws (O) and flat washer (Q). Conducted in four locations.

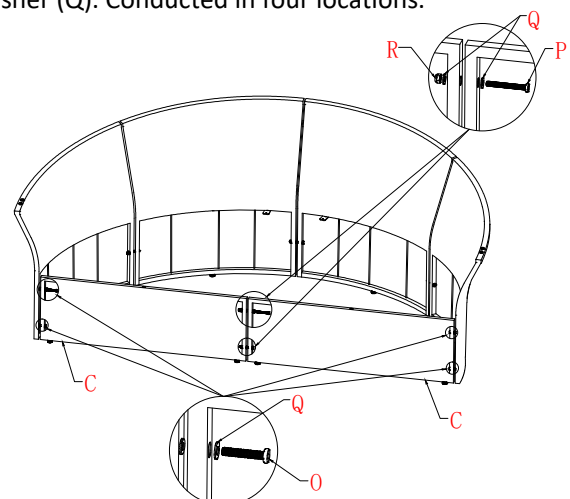

DHW060BN086C


5-Piece Round Sectional Set

Assembly tip: Do not tighten the screws fully until each of them is aligned.


Step 4: Flip the components over and use four fasteners (T), the shortest screw (M), and washers (Q) to attach the seat base (D) to the panel Connect (A1) (B1) and (A2) (B2) together. Use an Allen wrench to tighten. Conducted in four locations.

Connect the support rod (E) to the seat plate (D) using the shortest screw (M) and washer (Q).

Use screws (O) with washers (Q) to secure the base to the side panel (C) through the side holes. Tighten with a wrench key. Do it in two places.

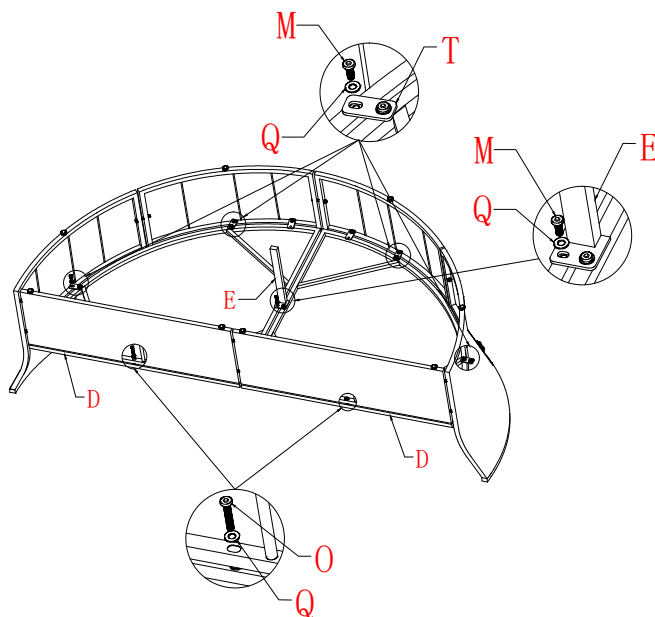

Step 5: Fix the L-shaped earpiece (right) (X) onto (A2), and then use M6 * 15 hex head set screws (M) and flat washers (Q) to secure the parts together in two places. Put on the two seat plates (D) again.

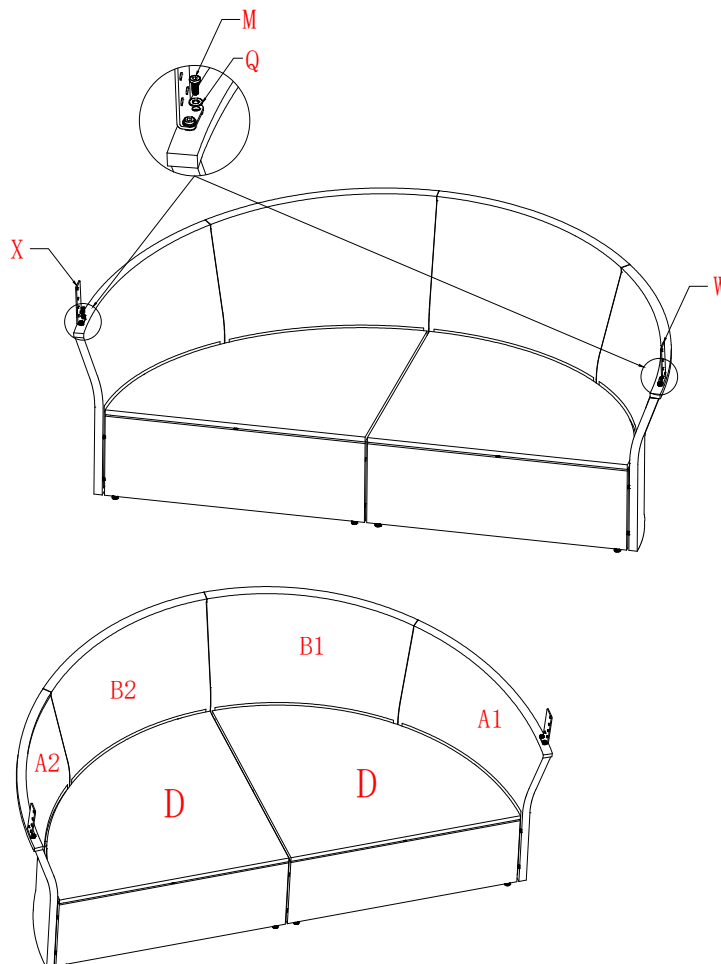


DHW060BN086C

5-Piece Round Sectional Set


Assembly tip:Do not tighten the screws fully until each of them is aligned.

Item no.	Reference Image	Description	Qty.
F		Longest Higher Bar	2
G		2 nd Shortest 2 nd Lower Bar	4
H		Shorter Lowest Bar	2
I		Middle Bar	4
N	 M6*20	M6*20 Socket Head Cap Screw	4
O	 M6*32	M6*32 Socket Head Cap Screw	10
Q		Flat Washers	24
R		M6 Nut	10
U		Extender	2
V1	 5mm	5mm Plastic Spacer	4
V2	 2mm	2mm Plastic Spacer	10
1		Nut Cover	10
2		Canopy	1


Step 1: F and H have two, and G has four. Put them together and you can identify them based on their length. F is the longest, G is the second longest, and H is the shortest. Place an I between them to connect two H. Do the same to other poles.

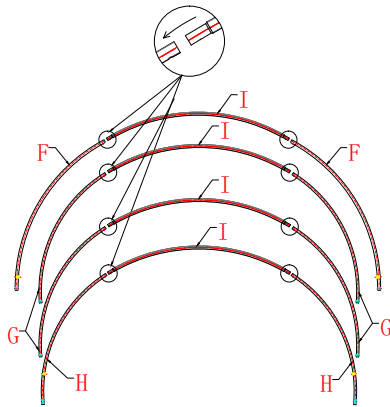

Step 2: Insert rod H into the hole with a tie on the top of the canopy. When the canopy is fully extended, this pole will rest against the back of the sun platform. The pole G is closest to the pole H. Insert rod F into another hole on the roof.

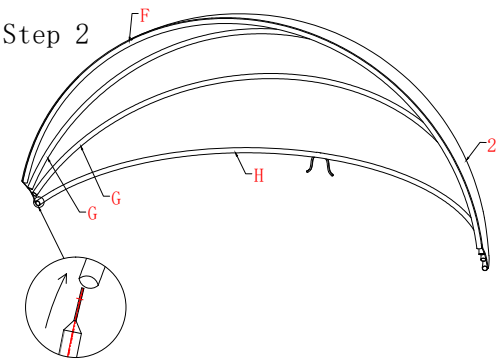



Step 3: Fix rods F, G, and H into the three holes of the L-shaped earpiece. Use M6 * 32 hex head screws (O) and washers (Q), 2mm plastic film (V2), then fix the parts together with washers (Q), M6 nuts (R), and nut caps (1), and do the same on the other side.

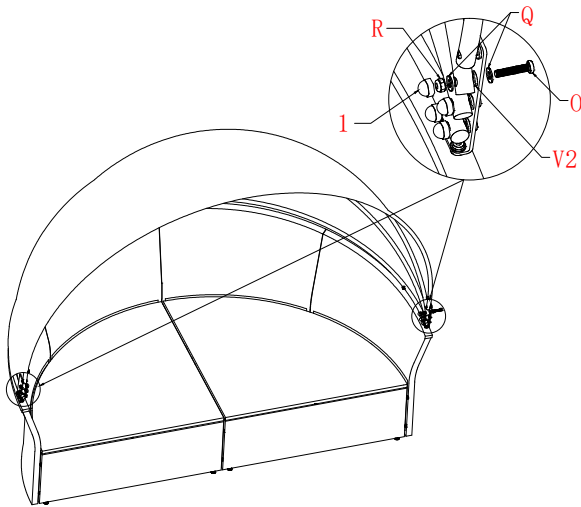


DHW060BN086C

5-Piece Round Sectional Set



Assembly tip:Do not tighten the screws fully until each of them is aligned.

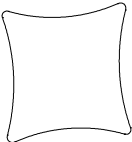Item no.	Reference Image	Description	Qty.
3		Cushion	2
4		Pillow	4

Step 4: Connect the expander (U) to the daytime bed, with the thicker end of the expander close to the bottom of the daytime bed. Connect the M6 * 15 socket head cover screw (N) to the washer (Q), insert the extender (U), and then connect the 5mm plastic film (V1). Connect it to the outer holes on rod (F) and rod (H). Do this on both sides.

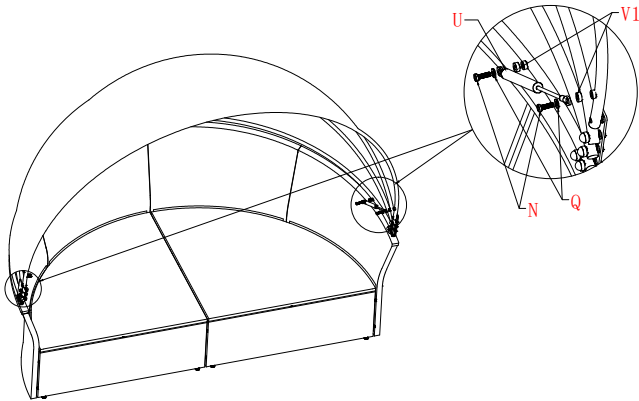






Step 5: Secure rod F in the hole of the L-shaped earpiece. Use M6 * 32 hex head screws (O) and washers (Q), then fix the parts together with 2mm plastic film (V2), washers (Q), M6 nuts (R), and nut caps (1), and do the same on the other side. Place 2 cushions (3) and 4 pillows (4) on top

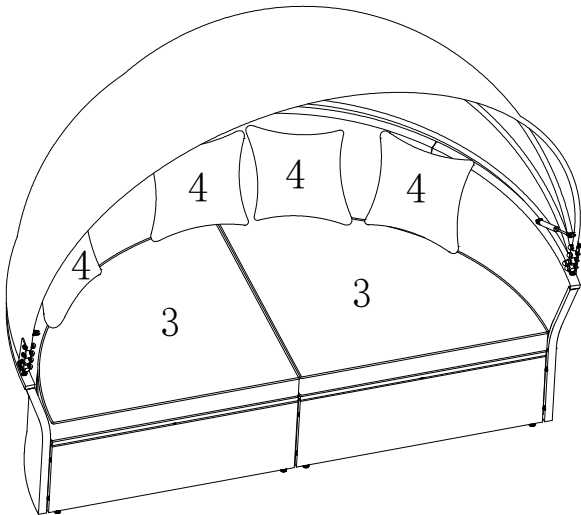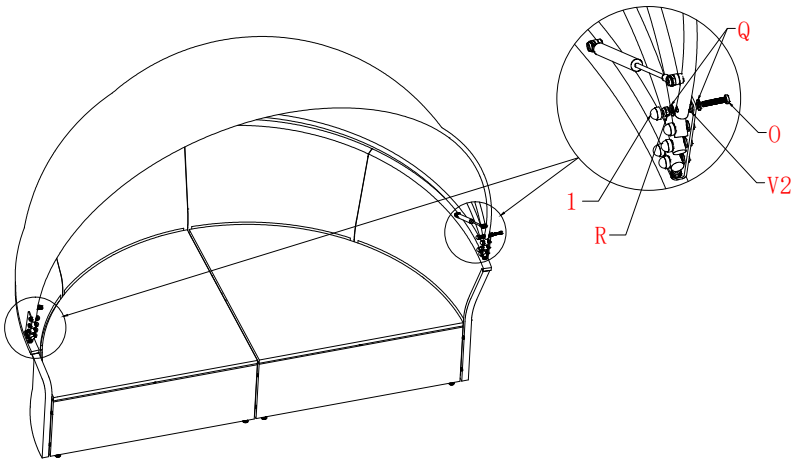


DHW060BN086C

5-Piece Round Sectional Set


Assembly tip:Do not tighten the screws fully until each of them is aligned.

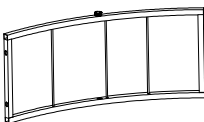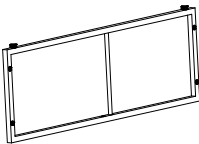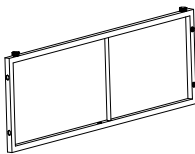Item no.	Reference Image	Description	Qty.
D		Seat Panel	2
J		Outside Panel	4
K		Side Panel	2
L		Inside Panel	2
O	 M6*32	M6*32 Socket Head Cap Screw	20
P	 M6*50	M6*50 Socket Head Cap Screw	4
Q		Flat Washers	28
R		M6 Nut	4
3		Cushion	2
Y		4mm Allen Key	1
Z		Wrench	1


Step 1: Connect two outer panels (L), use M6 * 50 hex screws (P) with flat washers (Q) and nuts (R) with flat washers (Q), and tighten with hex keys and a wrench. Perform this operation in two locations Make it. Connect the two base plates (D) to the two outer panels (J) using M8 * 32 hex screws (O) and flat washers (Q). Perform this operation in two locations..

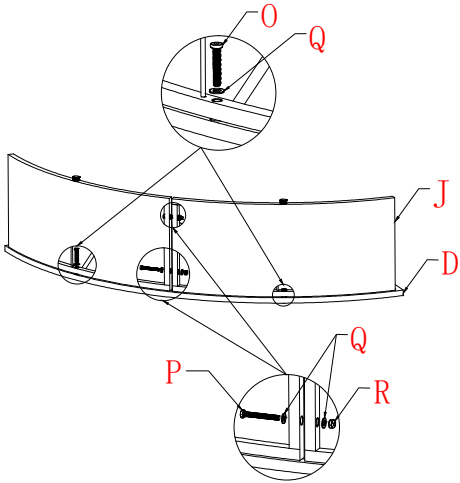

Step 2: Use M6 * 32 socket head cover screws (O) and flat pad (Q) to connect the outer panel (J) to the panel (K/L). Divided into four locations.

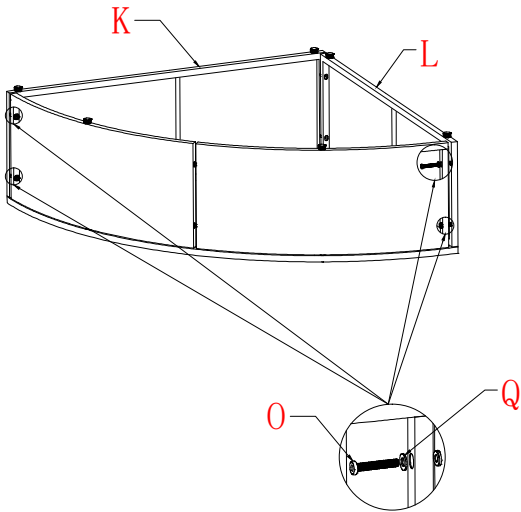

Step 3: Use M6 * 32 socket head cover screws (Q) and flat pads (S) to connect the internal panel (L) to the panel (K/D). Perform this operation in five locations. Put the seat cushion (6) on again

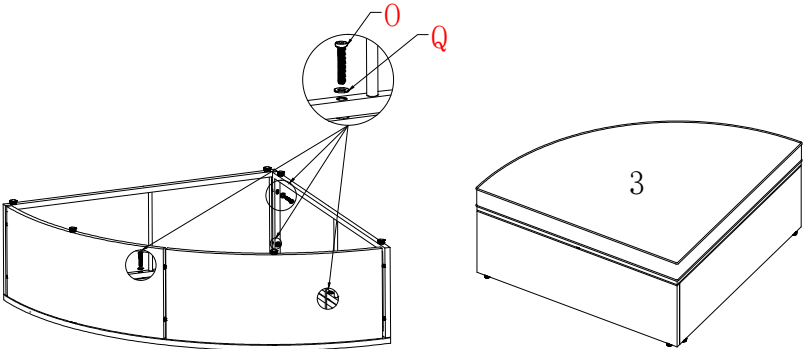

DHW060BN086C

5-Piece Round Sectional Set

Assembly tip: Do not tighten the screws fully until each of them is aligned.

