

DRAPERY ROD SET INSTALLATION INSTRUCTIONS

1" Diameter, Rod Length 36"-72"

Parts provided:

- ① Finales X2
- ② Outer rod (larger diameter) X1
- ③ Inner Rod (smaller diameter) X1
- ④ Brackets X2
- ⑤ Screw-in anchors X4
- ⑥ Screws X4

Before installing:

- Always check there are no hidden wires or pipes.
- Finales shown are for illustration purposes only. It may not represent the style of finial purchased.
- For larger width windows, two people may be required for easier installation.

Cleaning and care:

To remove dust, use a vacuum cleaner with a brush attachment end or gently rub the rod using a water-dampened cloth with a mild detergent only.

Disclaimer:

Product failure due to using incorrect fixings is responsibility of the installer.

BRACKET INSTALLATION

STEP 1.

Unscrew projection screw and remove front bracket. Place base bracket at desired location and mark screw holes. Use tape measure and level to ensure marked screw holes are horizontal between brackets.

STEP 2A, MOUNTING TO DRYWALL OR PANELING:

Pre-drill two pilot holes per bracket base using 1/4" bit. Drill horizontally without forcing drill or enlarging hole. For bracket base installation, SCREW anchors into pilot holes, and then fasten screws into anchors.

STEP 2B, MOUNTING DIRECTLY TO WOOD OR STUDS:

Pre-drill two pilot holes per bracket base using 3/32" bit. Drill horizontally without forcing drill or enlarging hole. To install bracket base, fasten screws provided into pilot holes.

STEP 3.

Slide front bracket on bracket base to determine desired projection and tighten projection screw. Repeat for each bracket.

ROD INSTALLATION

STEP 4.

Pull inner rod out of outer rod.

STEP 5.

Slit one drapery panel onto each rod. Insert inner rod back into outer rod.


STEP 6.

Extend telescopic rod to desired width and place it into brackets. Adjust draperies to desired positions, and rotate finials for proper alignment.


FINAL ADJUSTMENT

STEP 7.

Secure each rod by tightening screws on brackets. This prevents rod from moving.

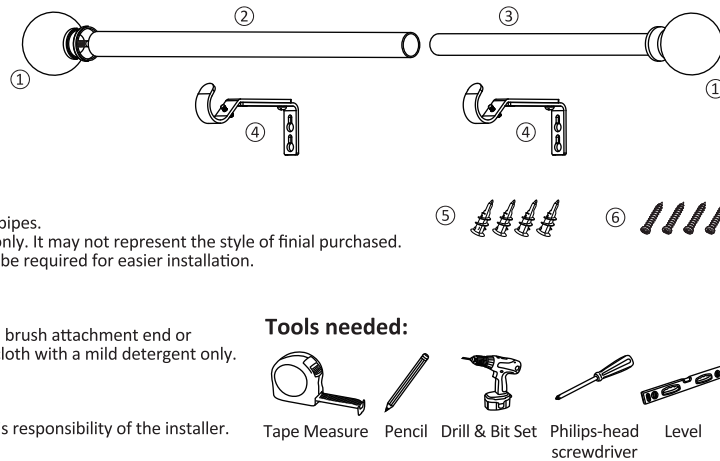

Tools needed:

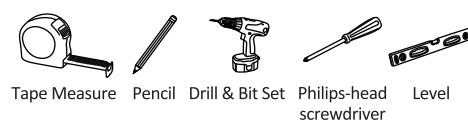

DRAPERY ROD SET INSTALLATION INSTRUCTIONS

1" Diameter, Rod Length 50"-144"

Parts provided:

- ① Finales X2
- ② Outer rod (larger diameter) X2
- ③ Inner Rod (smaller diameter) X1
- ④ Brackets X3
- ⑤ Screw-in anchors X6
- ⑥ Screws X6

Before installing:

- Always check there are no hidden wires or pipes.
- Finales shown are for illustration purposes only. It may not represent the style of finial purchased.
- For larger width windows, two people may be required for easier installation.

Cleaning and care:

To remove dust, use a vacuum cleaner with a brush attachment end or gently rub the rod using a water-dampened cloth with a mild detergent only.

Disclaimer:

Product failure due to using incorrect fixings is responsibility of the installer.

BRACKET INSTALLATION

STEP 1.

Unscrew projection screw and remove front bracket. Place base bracket at desired location and mark screw holes. Use tape measure and level to ensure marked screw holes are horizontal between brackets.

STEP 2A, MOUNTING TO DRYWALL OR PANELING:

Pre-drill two pilot holes per bracket base using 1/4" bit. Drill horizontally without forcing drill or enlarging hole. For bracket base installation, SCREW anchors into pilot holes, and then fasten screws into anchors.

STEP 2B, MOUNTING DIRECTLY TO WOOD OR STUDS:

Pre-drill two pilot holes per bracket base using 3/32" bit. Drill horizontally without forcing drill or enlarging hole. To install bracket base, fasten screws provided into pilot holes.

STEP 3.

Slide front bracket on bracket base to determine desired projection and tighten projection screw. Repeat for each bracket.

ROD INSTALLATION

STEP 4A, Total desired rod length < 97"

For desired total rod length less than 97", only a 2-piece telescopic rod is needed; the extra outer rod provided can be discarded. Unfasten finial out of inner rod, feed drapery panels onto telescopic rod, and fasten finial back into inner rod.

STEP 4B, Total desired rod length ≥ 97"

For desired total rod length more than 97", the extra outer rod provided is required. Unfasten finial out of inner rod. Remove disposable caps from extra outer rod and fasten finial on its end. Feed one drapery panel onto 2-piece telescopic rod and a second drapery panel onto extra outer rod. Insert extra outer rod onto inner rod to form a 3-piece telescopic rod that can extend up to 144".


STEP 5.

Extend telescopic rod to desired width, leaving space in between drapery panels for center bracket. Place rod into brackets. Adjust draperies to desired positions, and rotate finials for proper alignment.

FINAL ADJUSTMENT

STEP 6.

Secure each rod by tightening screws on bracket. This will prevent the rod from moving.

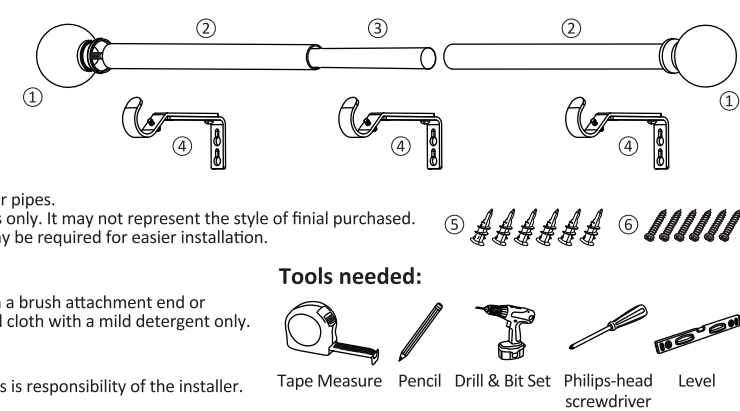

Tools needed:

