

INSTALLATION MANUAL

RY-DE2609



Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



Before You Start



-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.





Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?
If you have any questions just email us at
ryhome_service@163.com

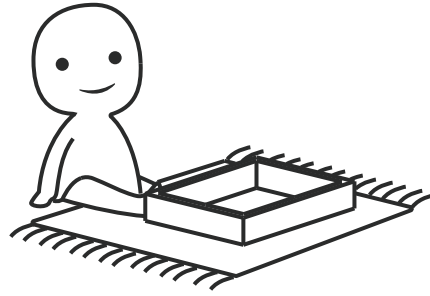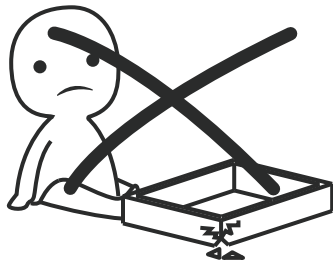

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

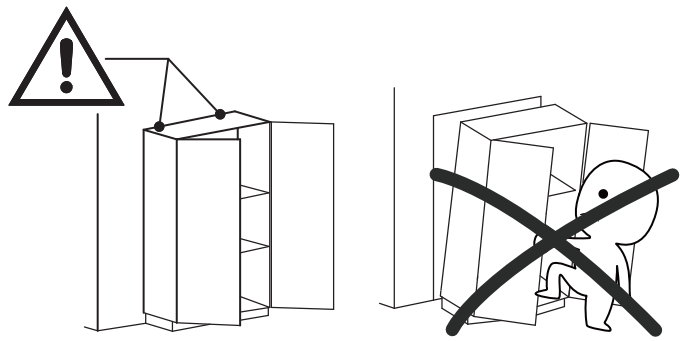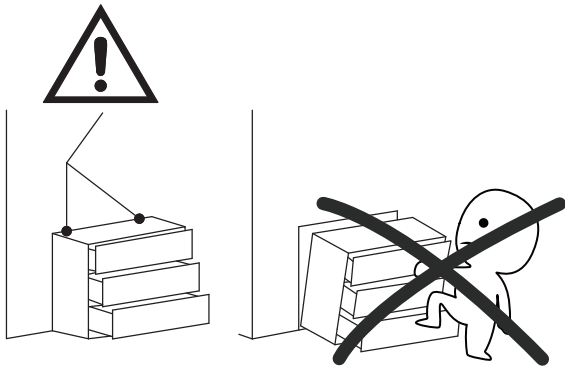

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.






For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Completed Assembly

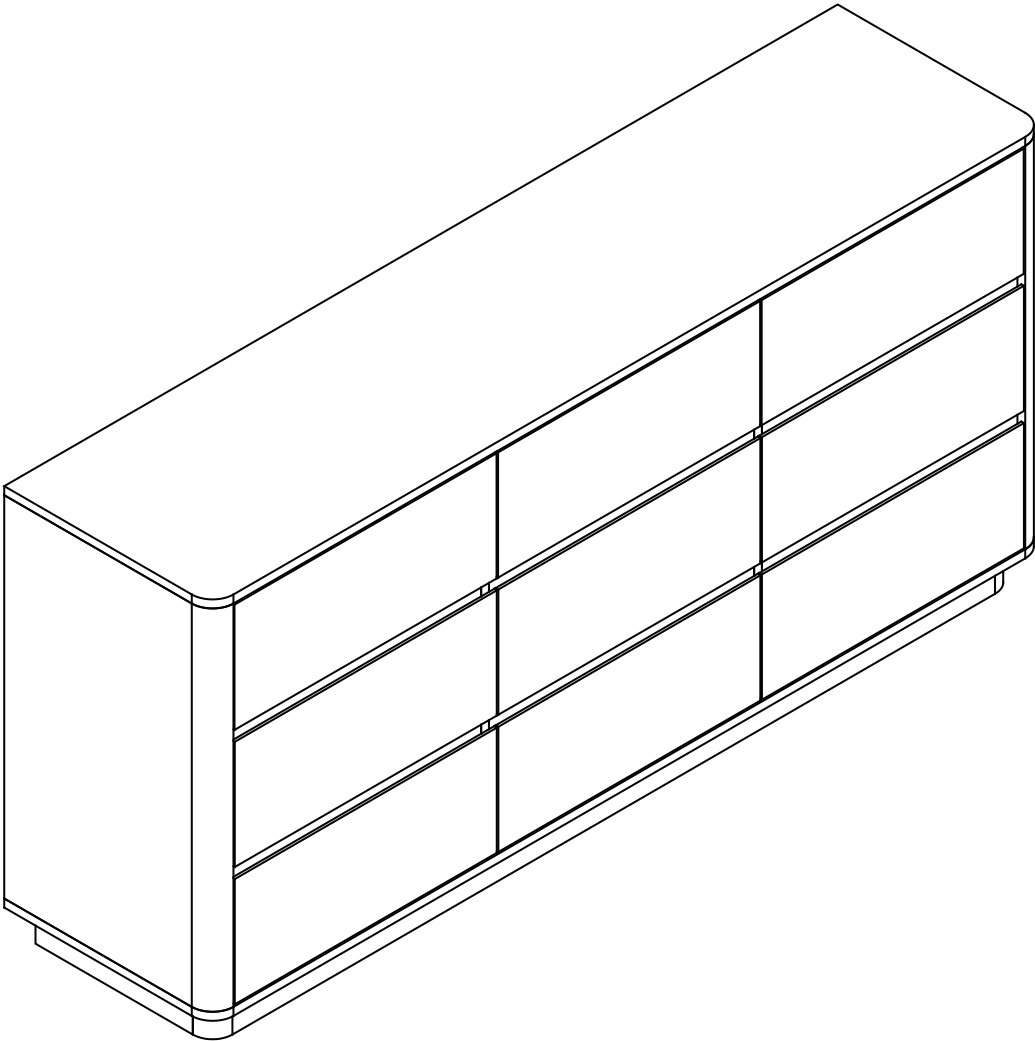


Parts Description

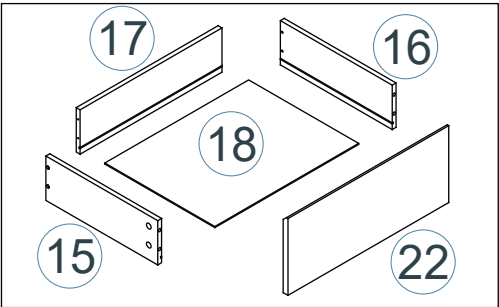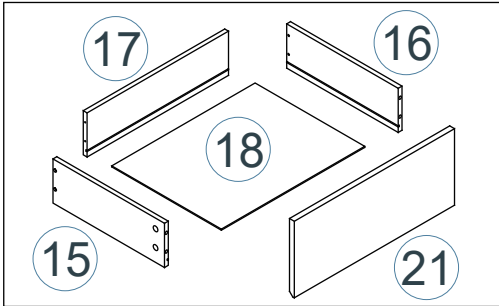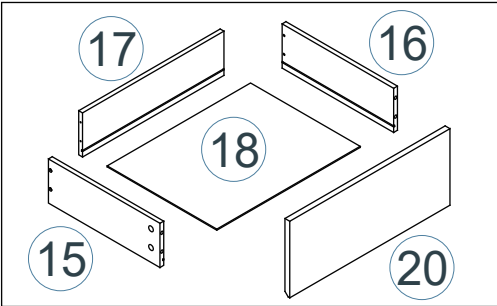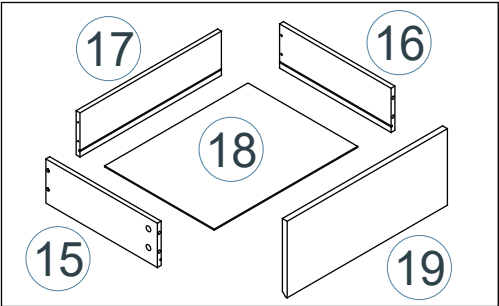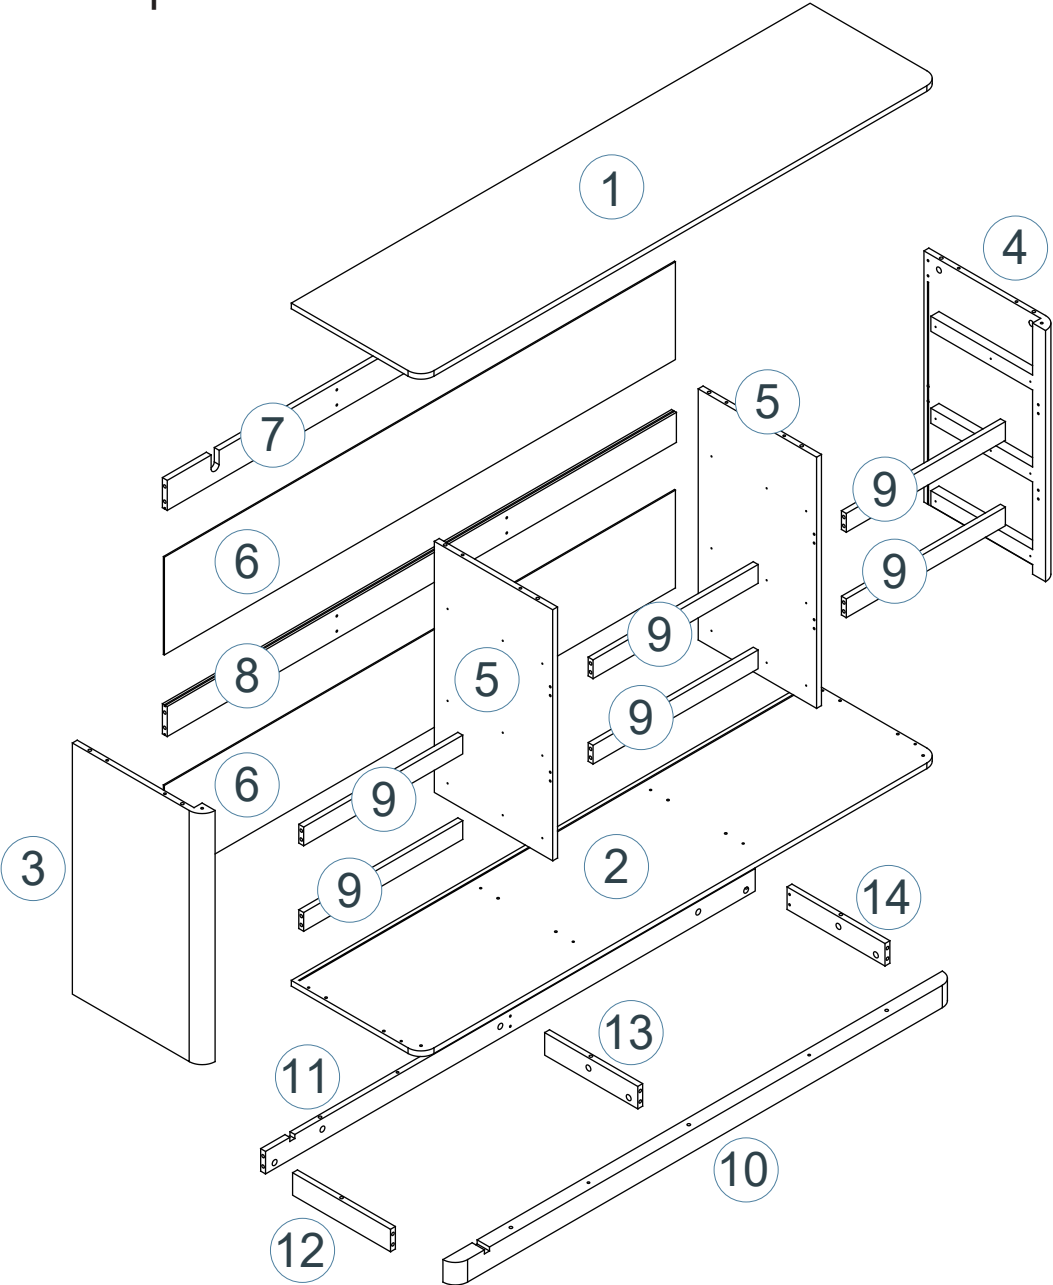


x2

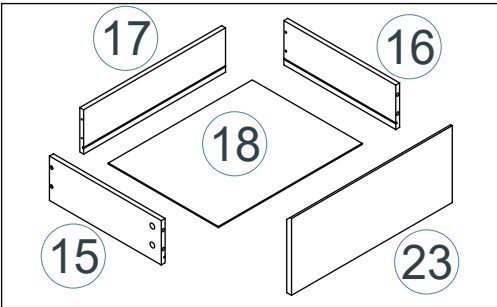


x2

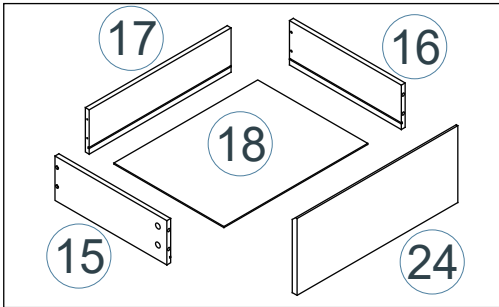


x2

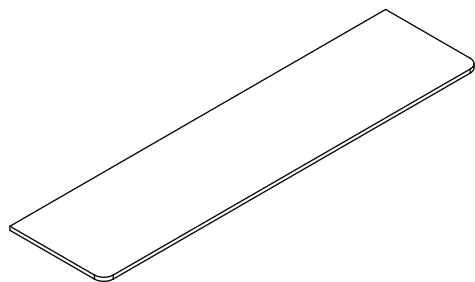


1

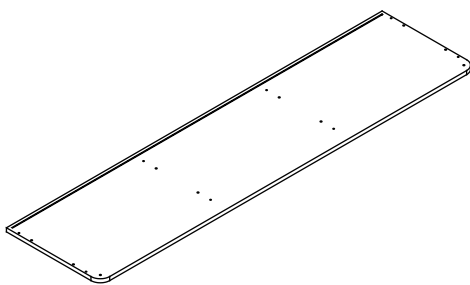


2

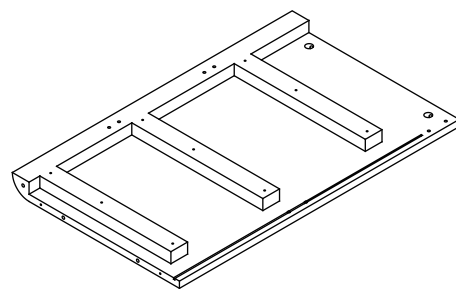


3

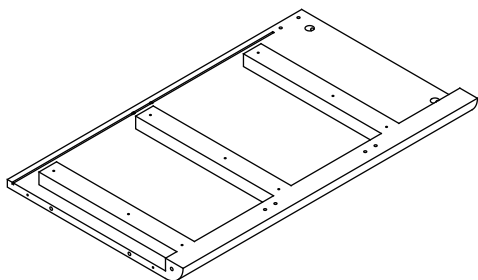


4

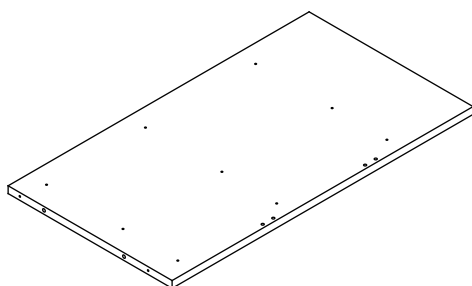


5 x2

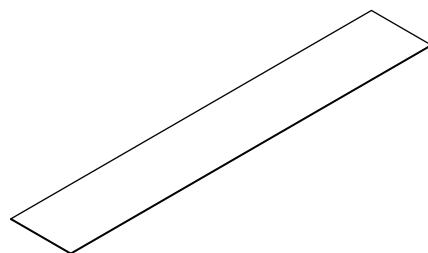


6 x2

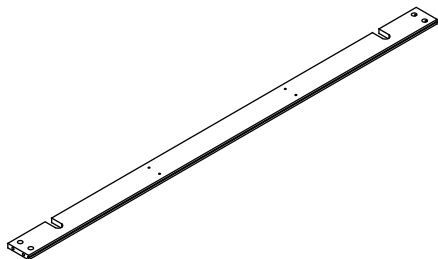


7

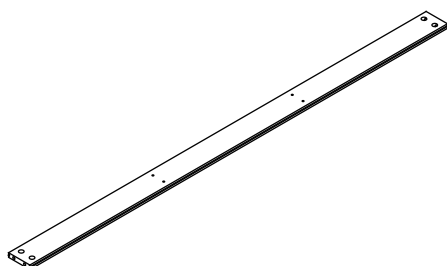


8

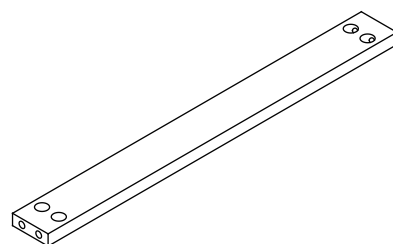


9 x6

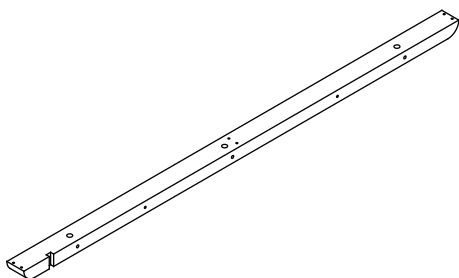


10

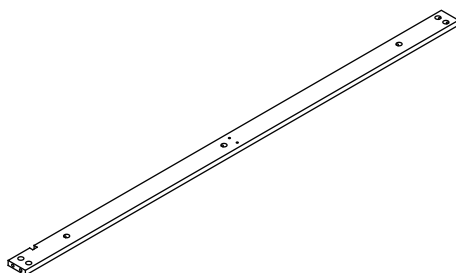


11

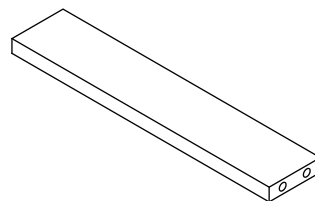


12

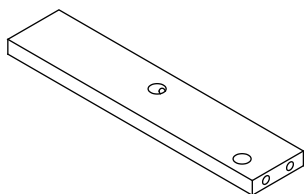


13

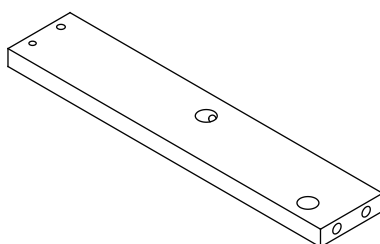


14

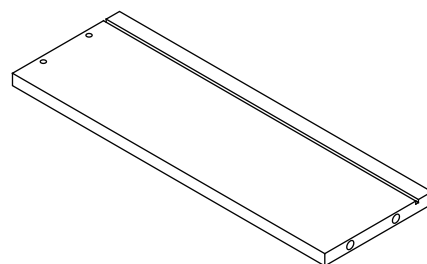


15 x9

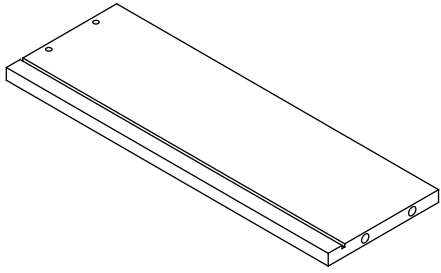


16 x9

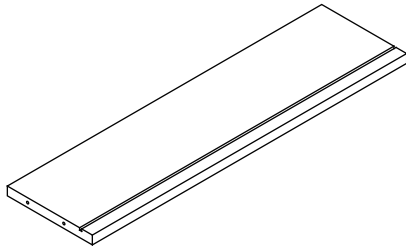


17 x9

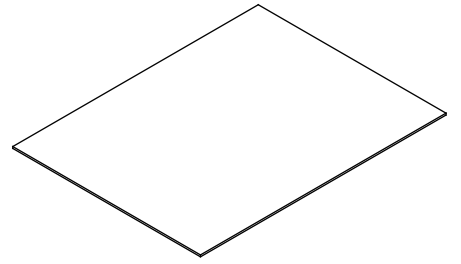


18 x9

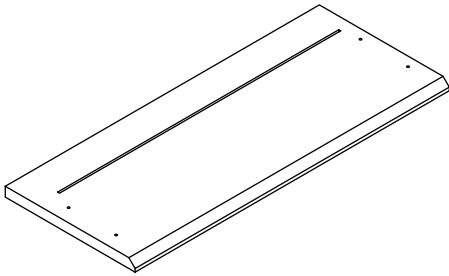


19

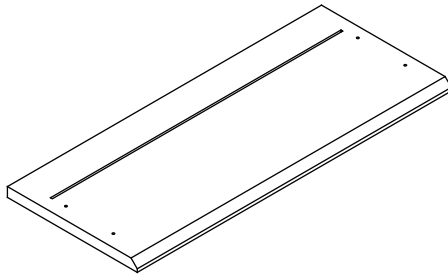


20

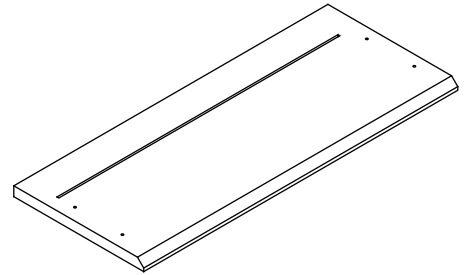


21

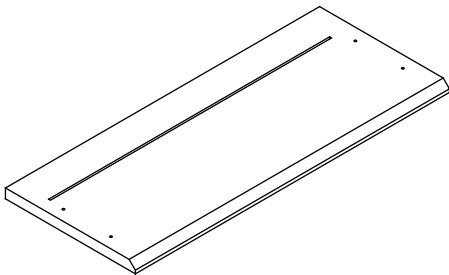














22 x2

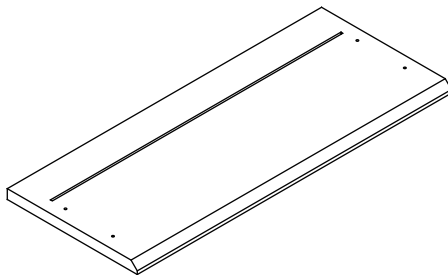


23 x2

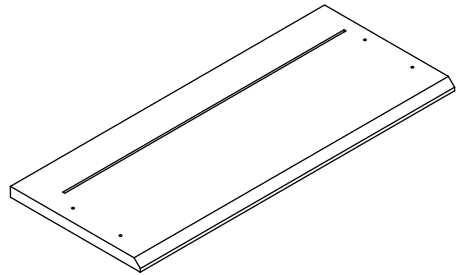

24 x2

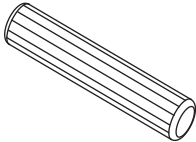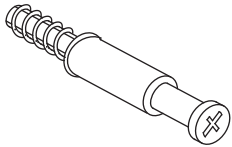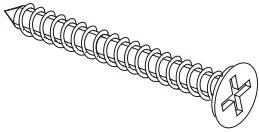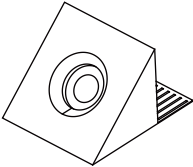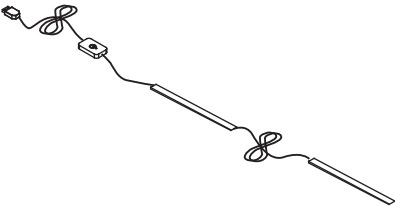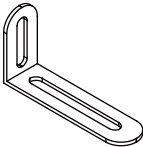
A  8x30mm Dowel 33pcs	B  4 x 40mm Long Screws 18pcs	C  Cam Bolts 78pcs
D  Cam Nuts 78pcs	E  3 x 12mm Screw 93pcs	F  4 x 30mm Screws 36pcs
G  Wedges 8pcs	H  3 x 16mm Wedge Screw 8pcs	I  Plastic Glides 10pcs
J  LED Belt 1pc	K  Brackets 3pcs	L  Wall Anchor 2pcs
M  4 x 40mm Wall Screw 2pcs	N  8 x 50mm Long Dowel 4pcs	O  Bracket 2pcs

P

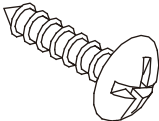


4 x 14mm Screw

2pcs

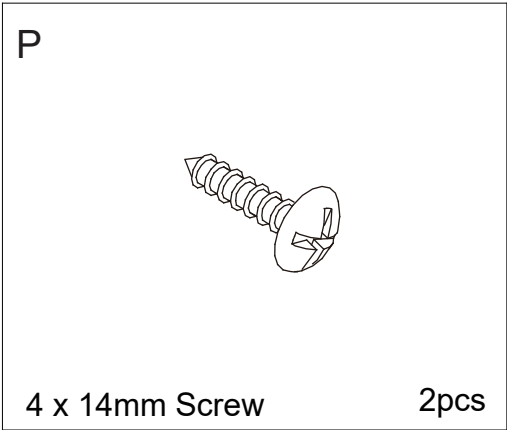


P

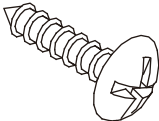

4 x 14mm Screw

2pcs

P

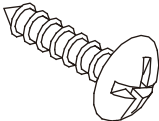


4 x 14mm Screw

2pcs

CL

300mm Slide Rail

9pcs

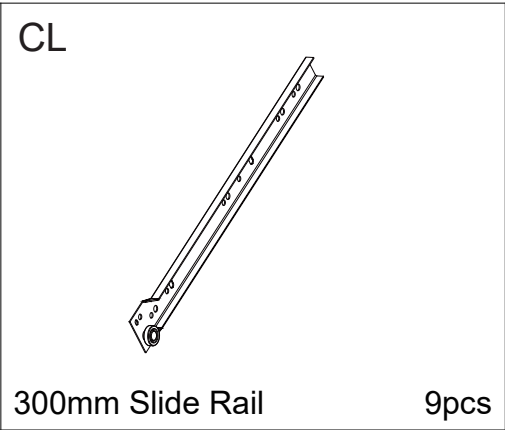

CL

300mm Slide Rail

9pcs

CL

300mm Slide Rail


9pcs

CR




300mm Slide Rail

9pcs

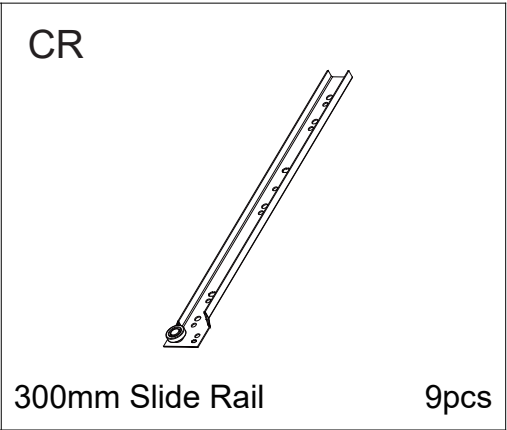


CR

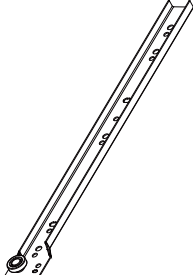

300mm Slide Rail

9pcs


CR

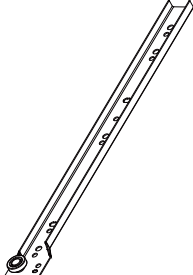

300mm Slide Rail


9pcs

DL

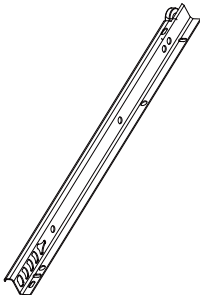


300mm Slide Rail

9pcs

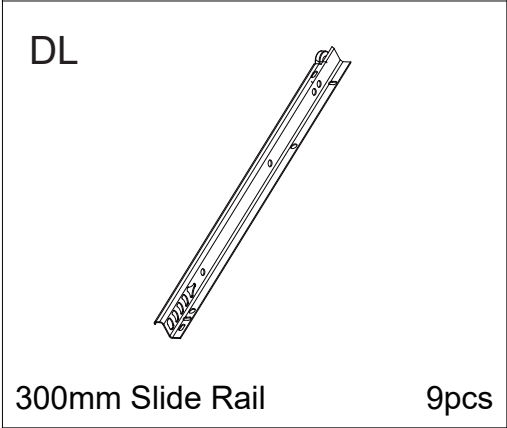


DL

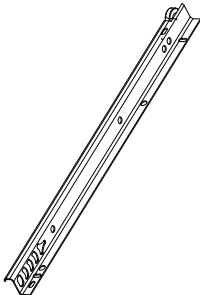

300mm Slide Rail

9pcs


DL

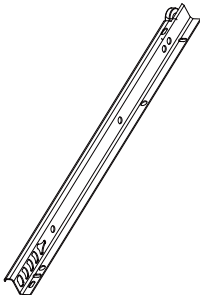

300mm Slide Rail


9pcs

DR

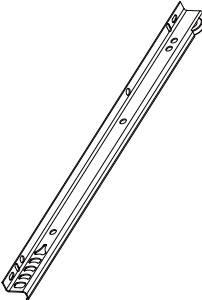


300mm Slide Rail

9pcs

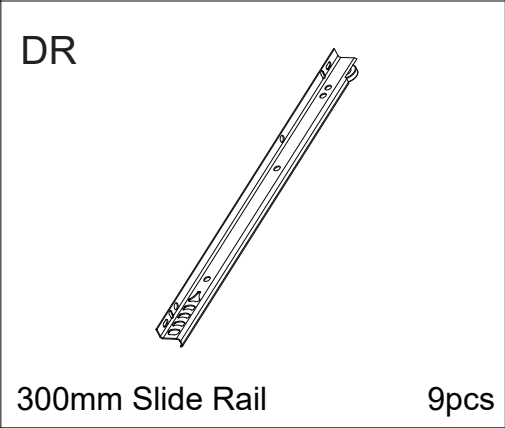


DR

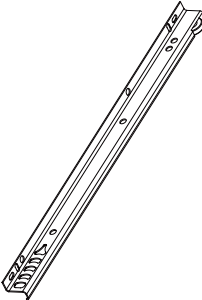

300mm Slide Rail

9pcs

DR

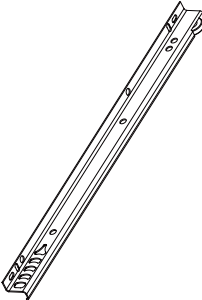

300mm Slide Rail

9pcs



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

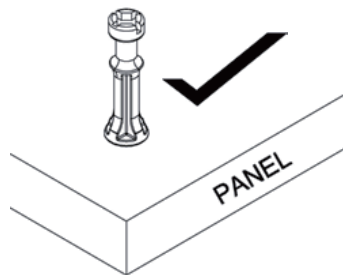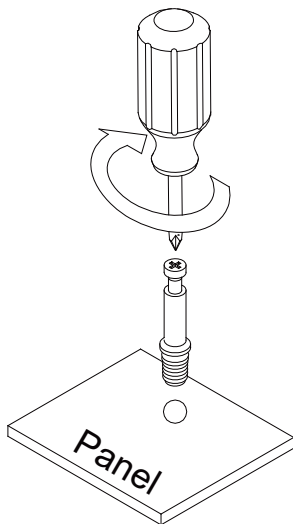



Shoulder is flushed
(on the same level)
with the panel.

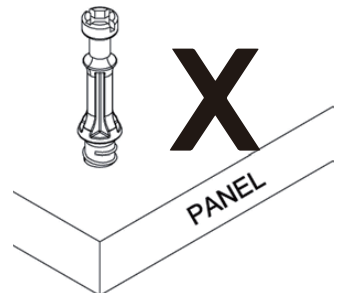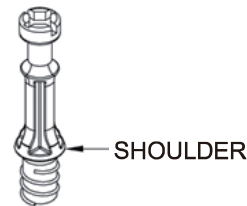

Shoulder is
above the panel.


CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

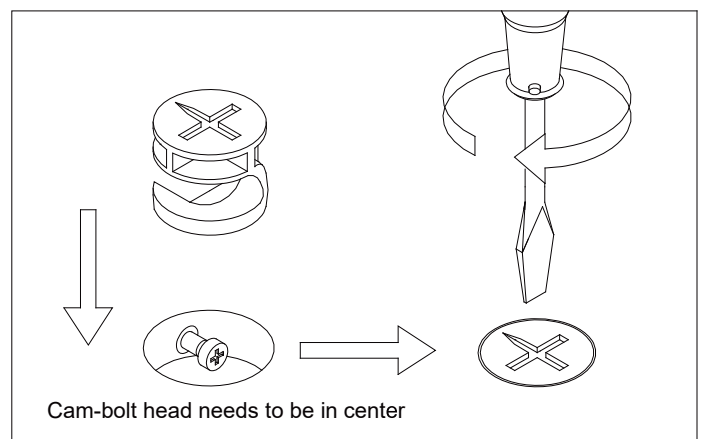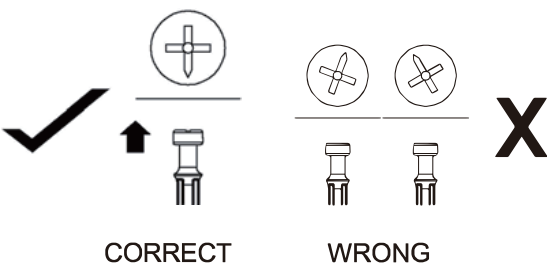


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.



Step 1

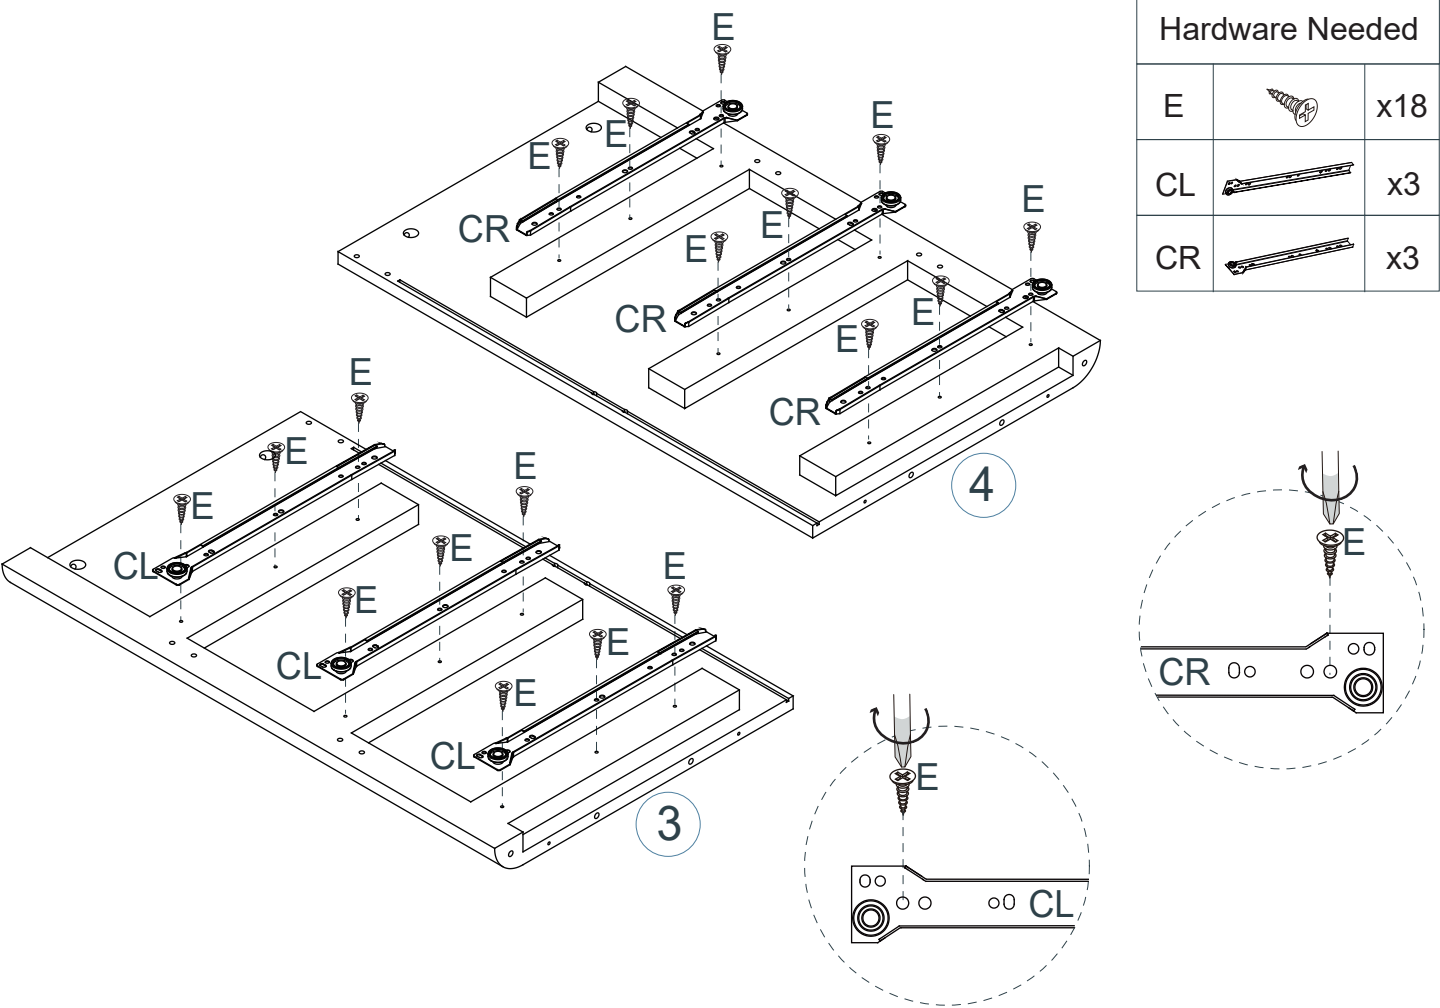


Step 2

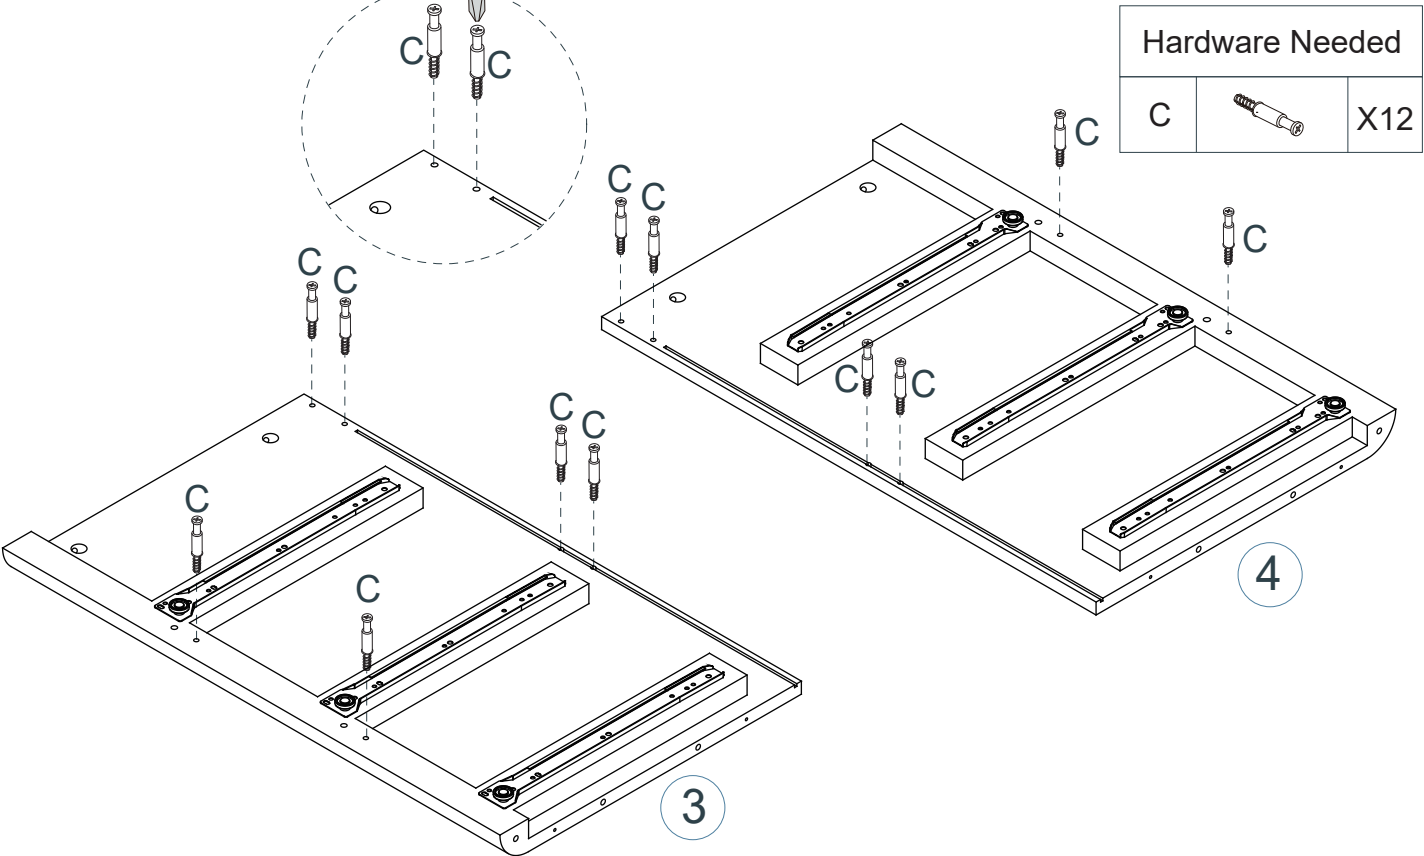

Step 3

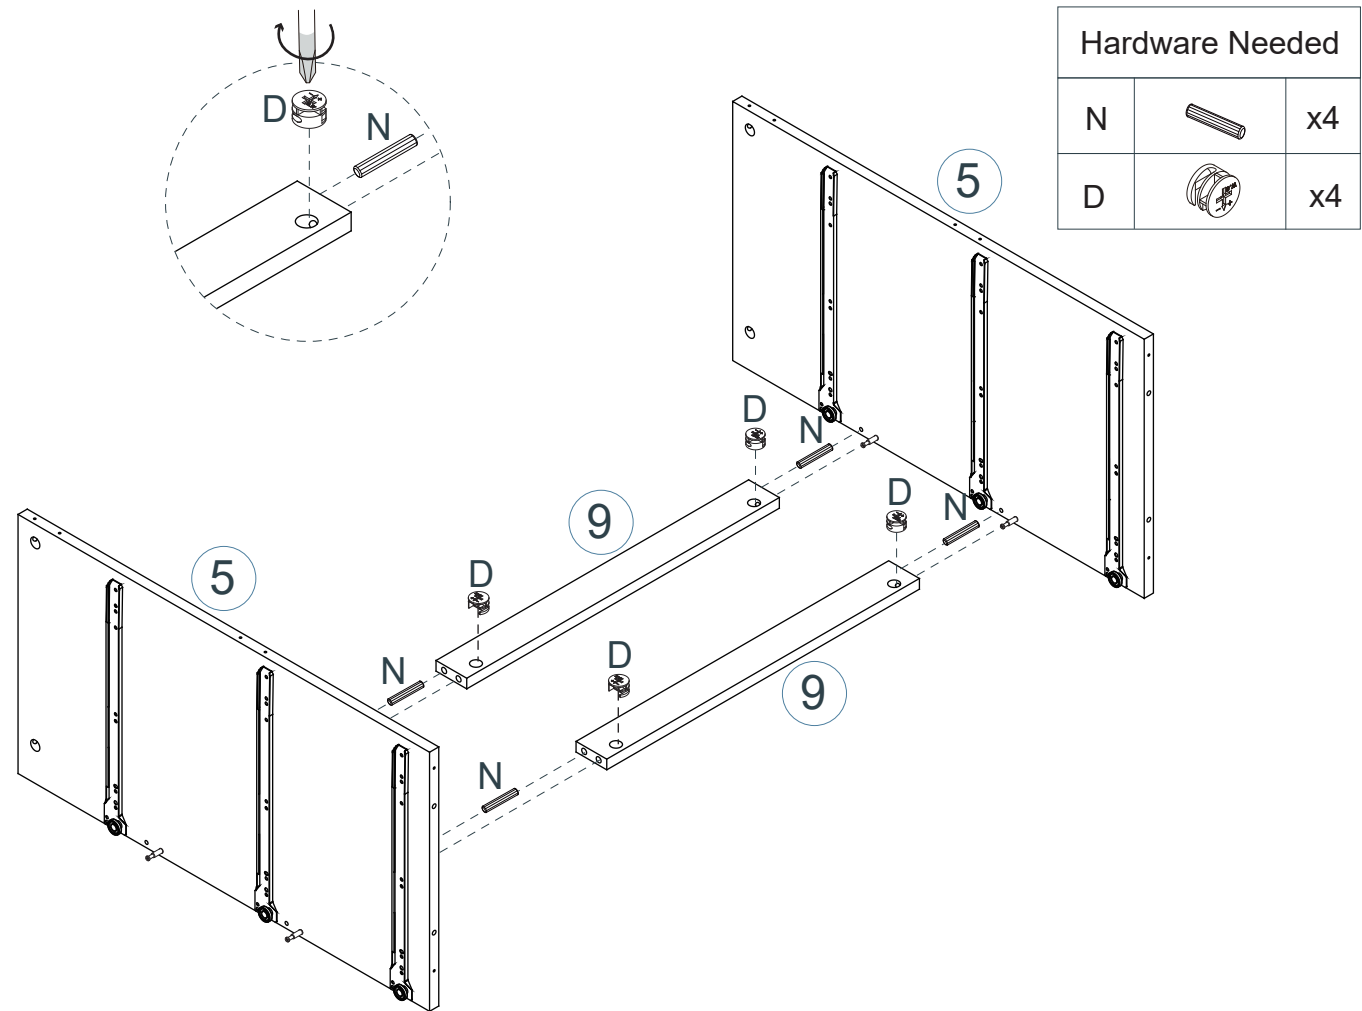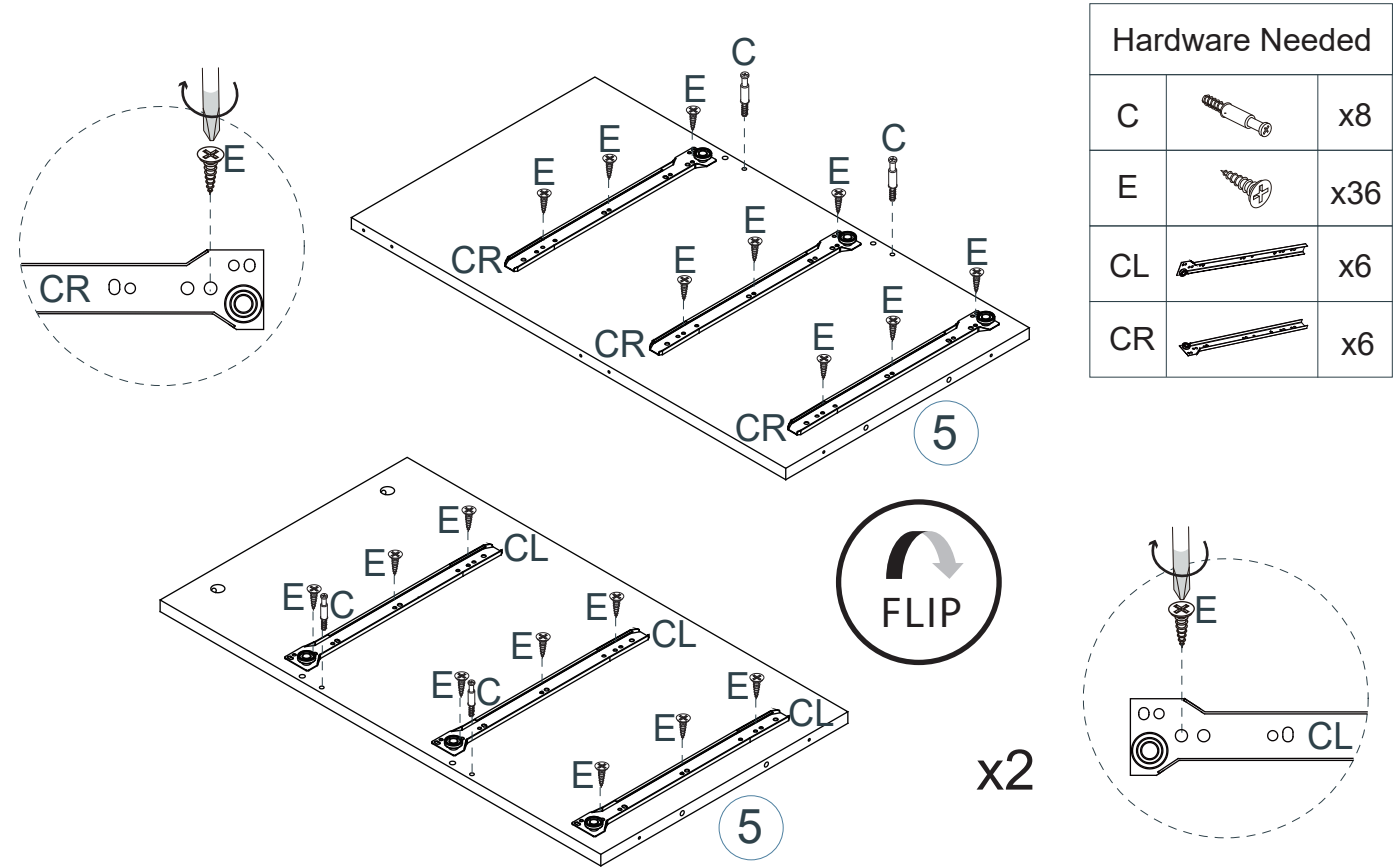


Step 5

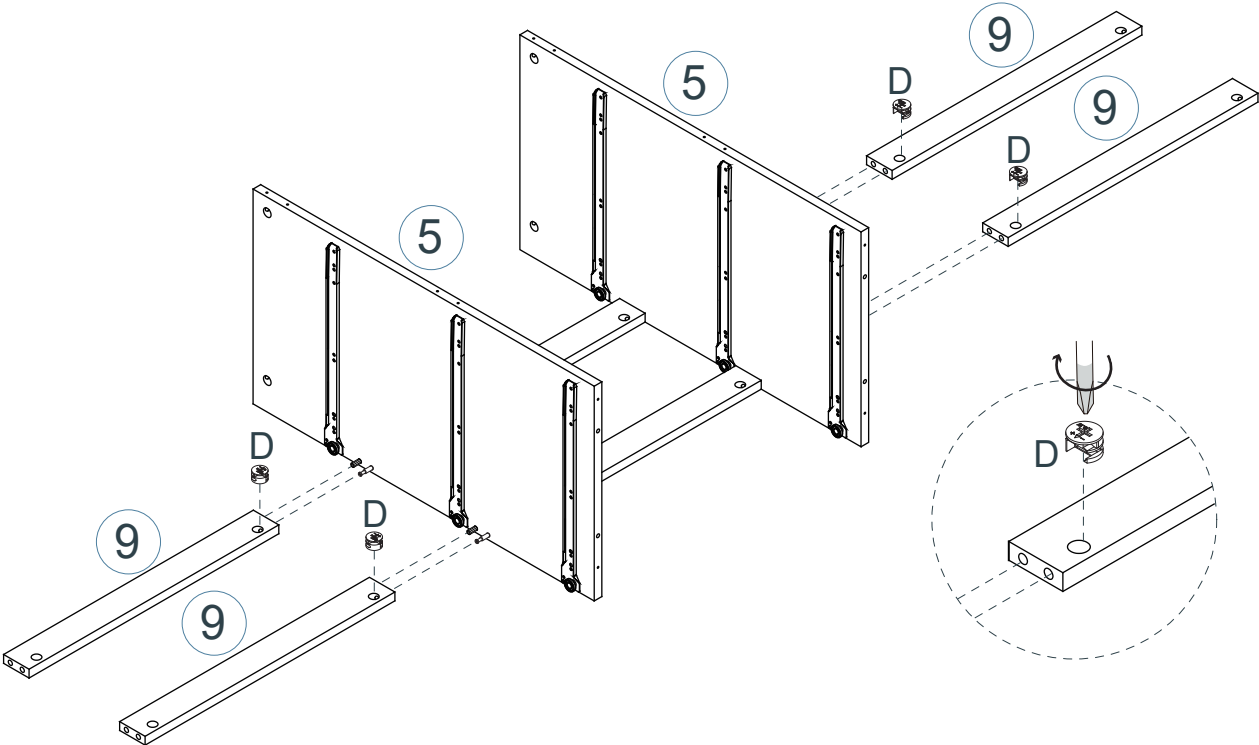


Hardware Needed		
D		X4

Step 6

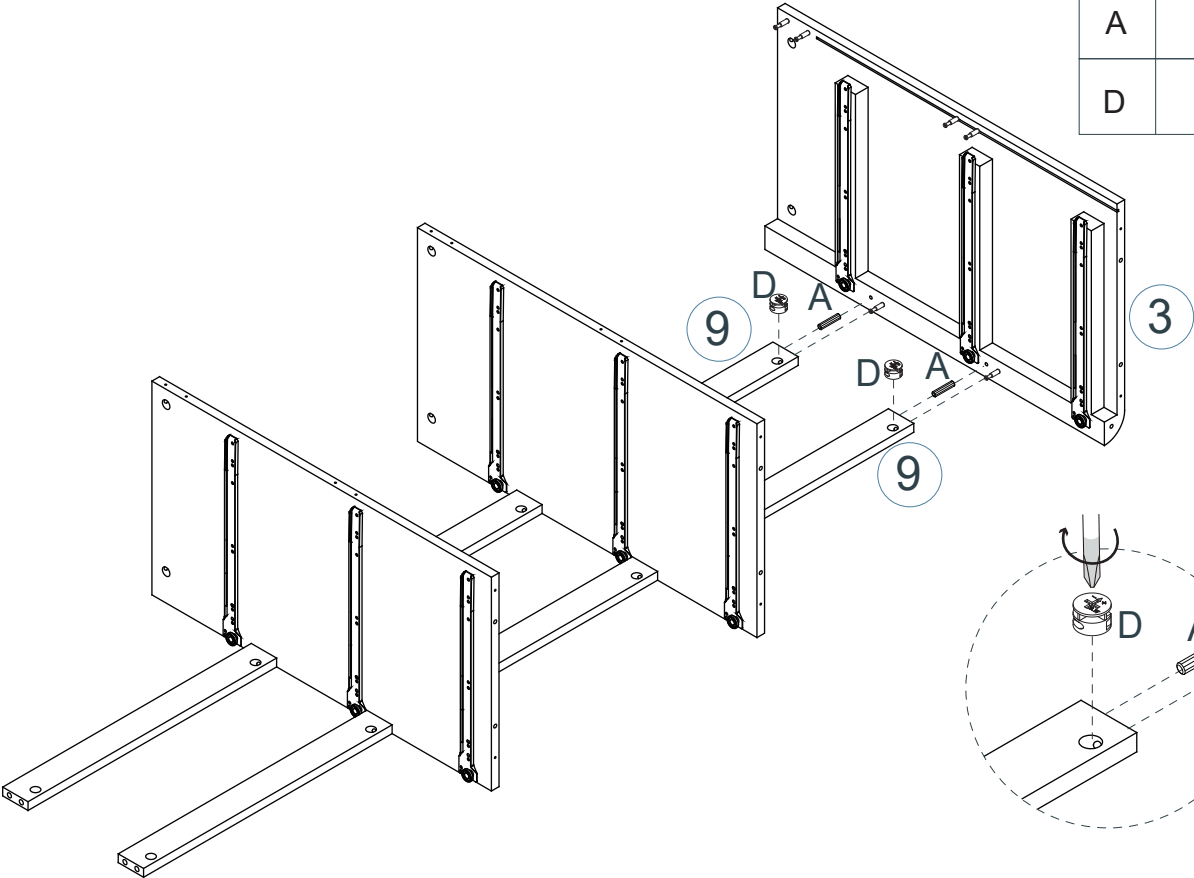


Hardware Needed		
A		X2
D		X2


Step 7

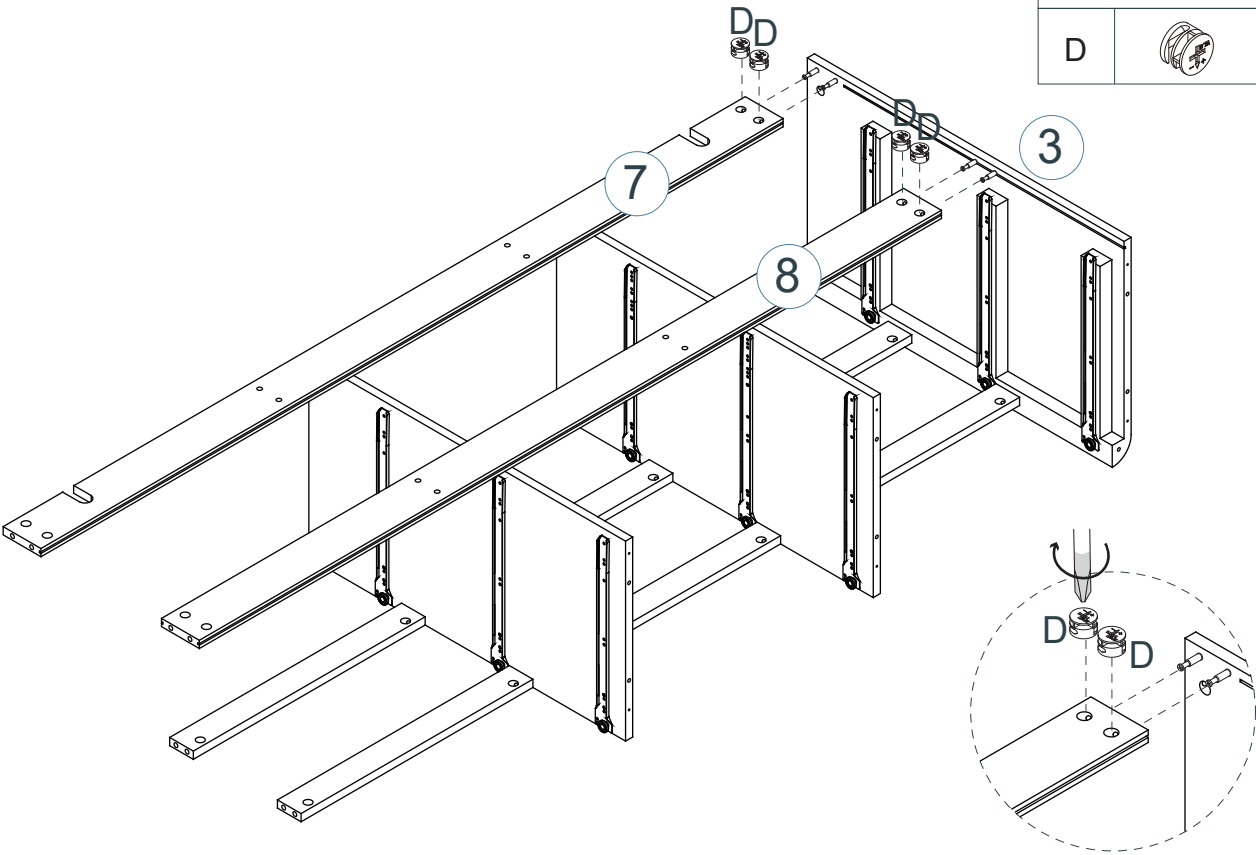


Step 8

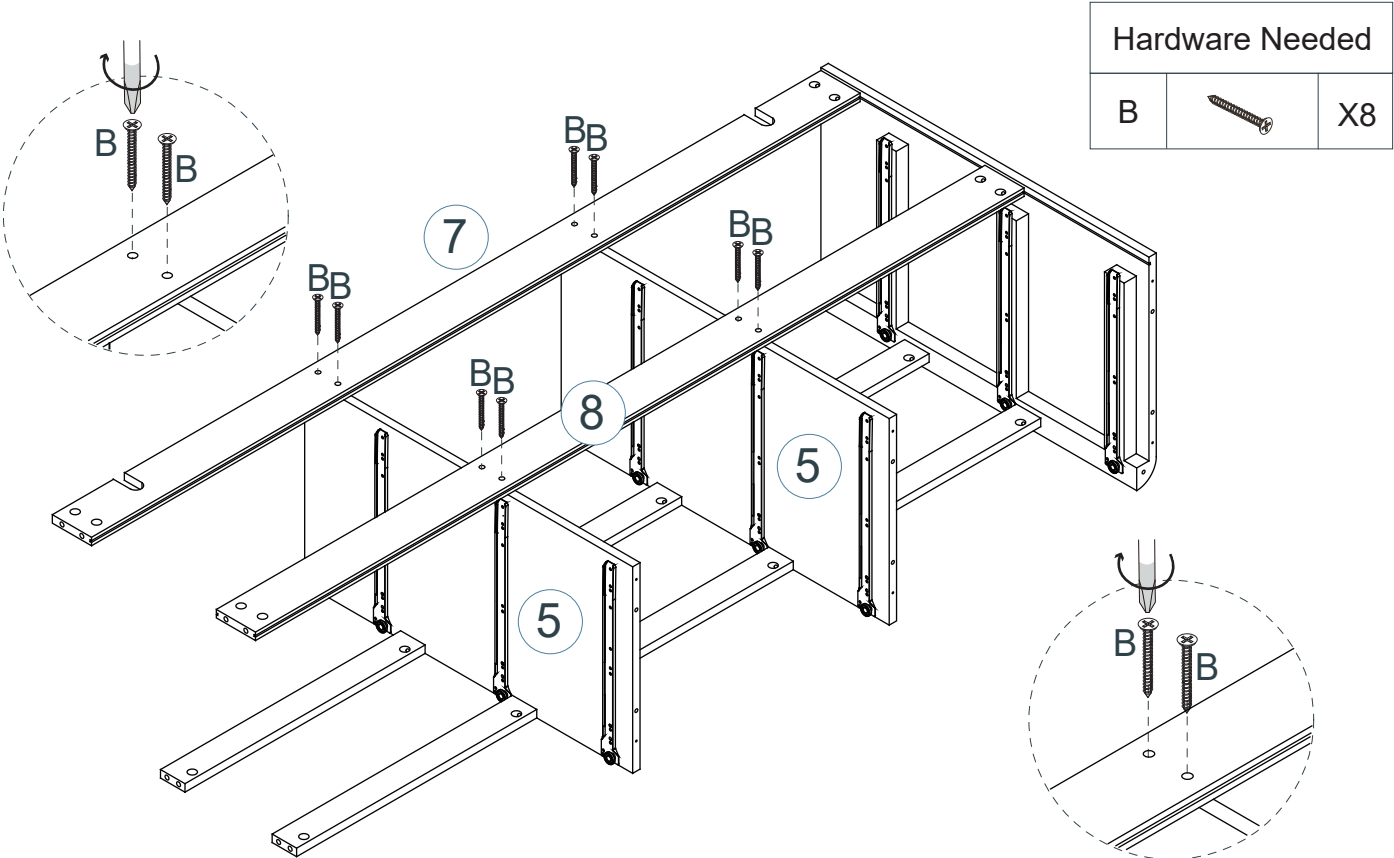


Step 9

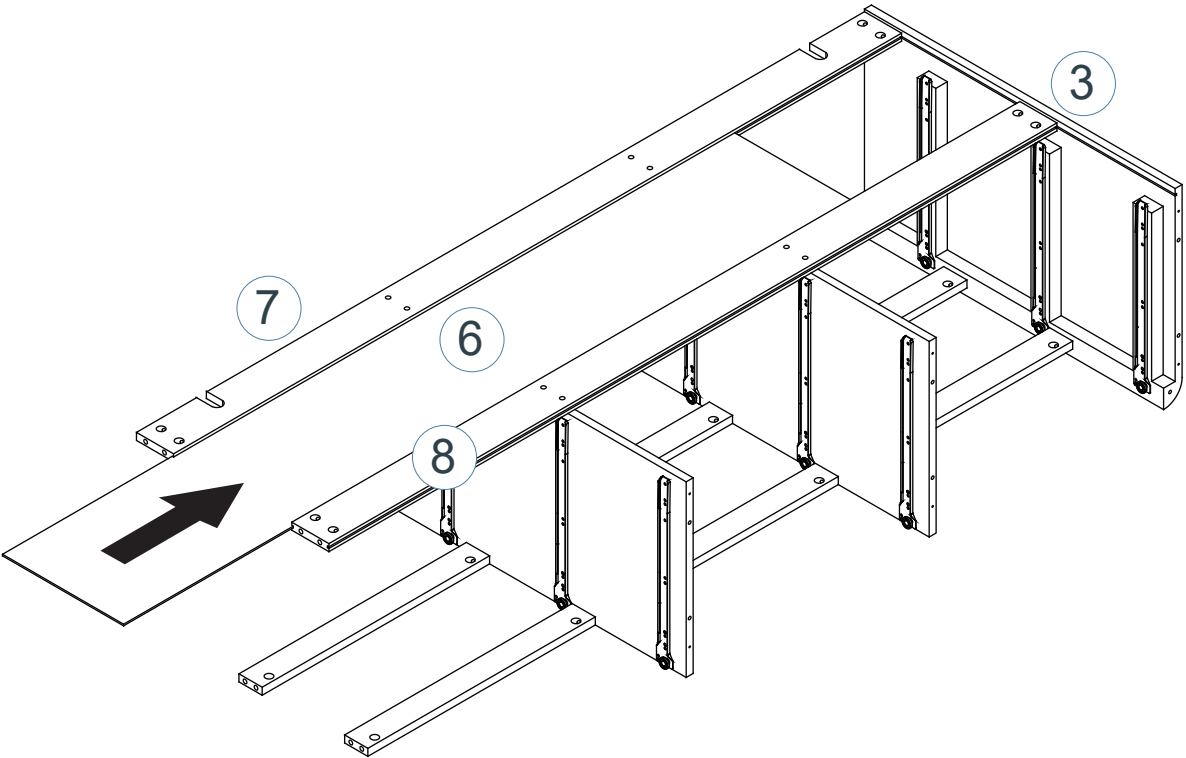


Step 10

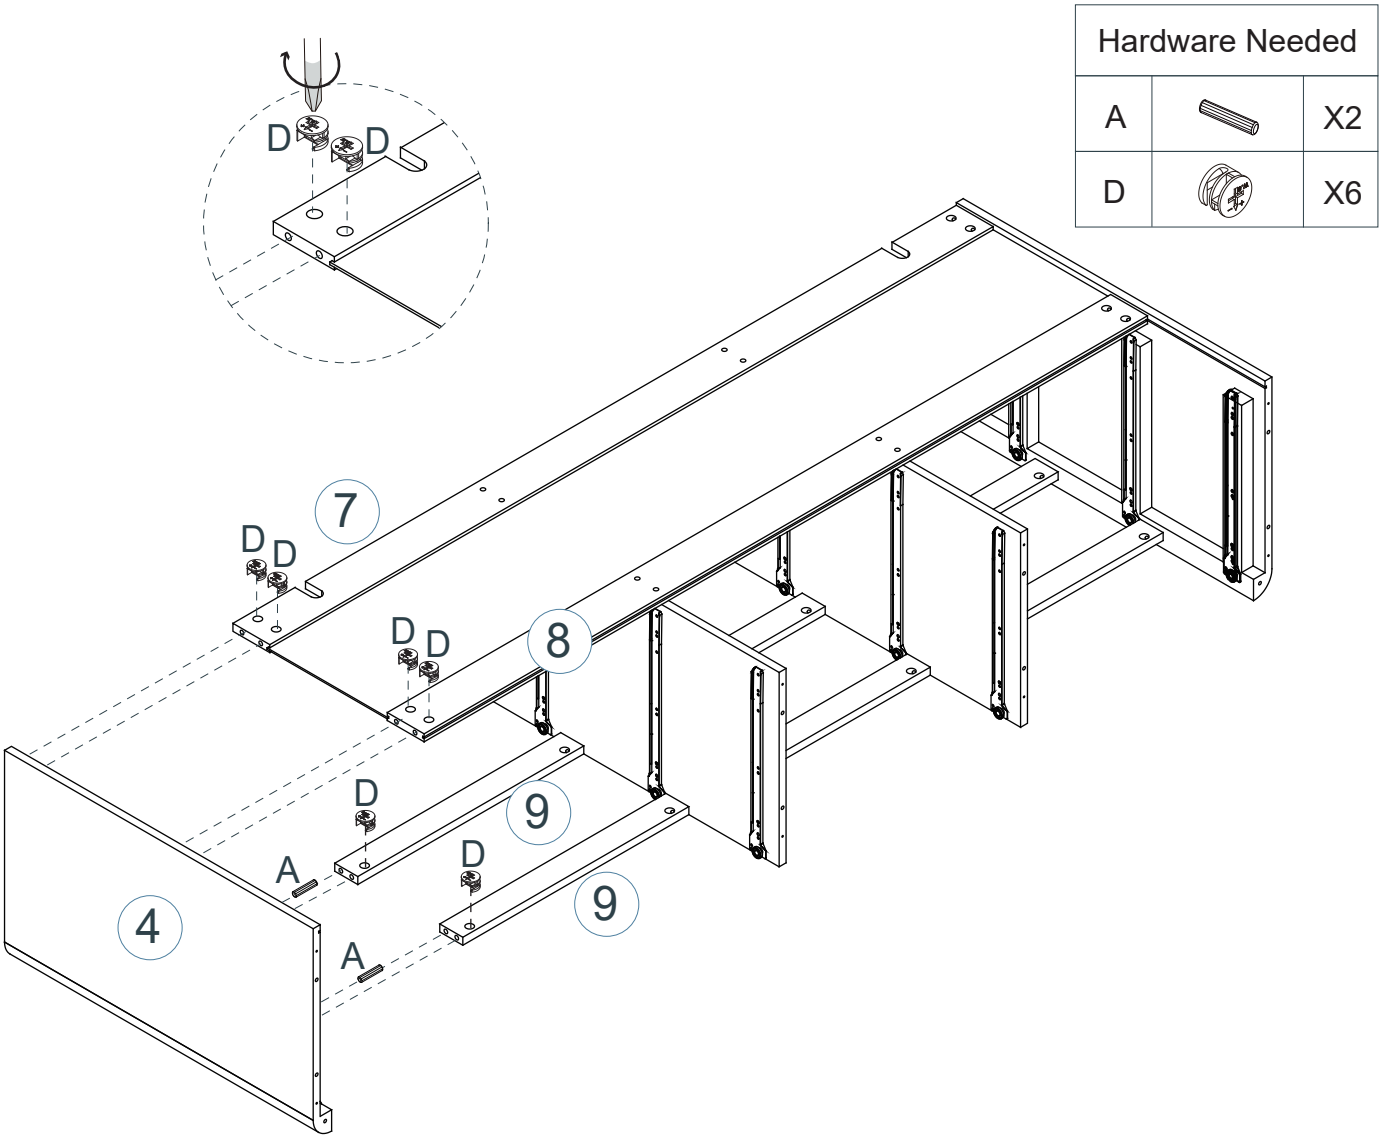


Step 11

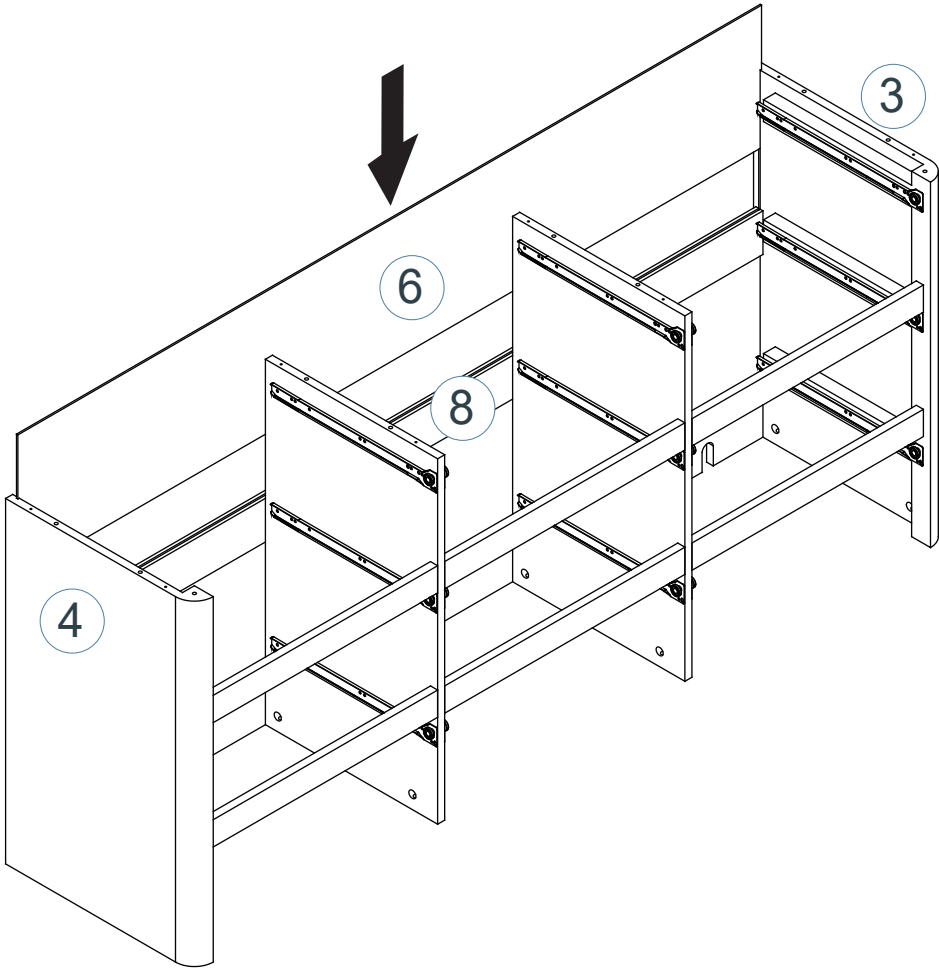


Step 12

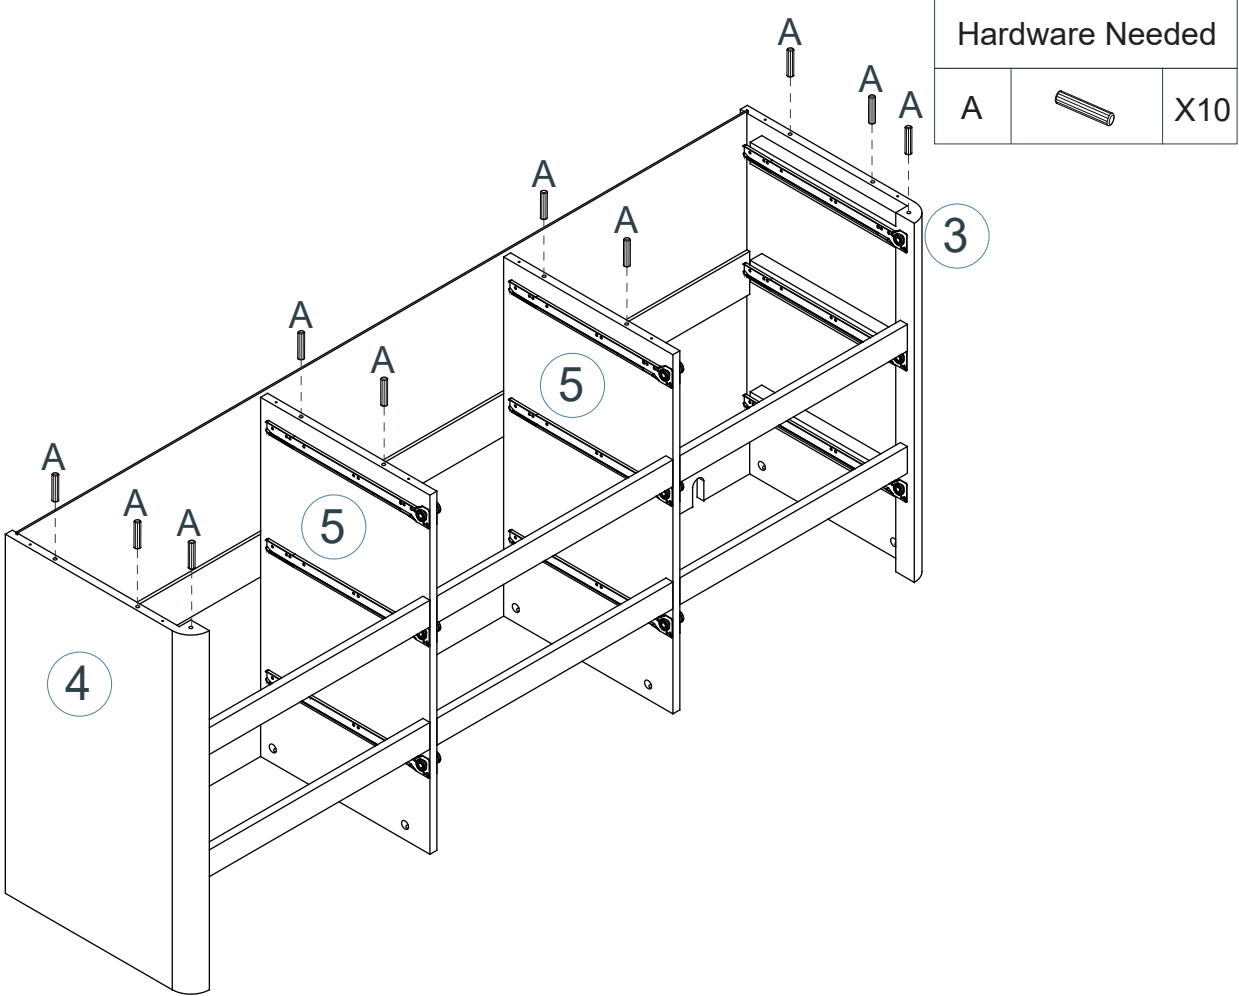


Step 13

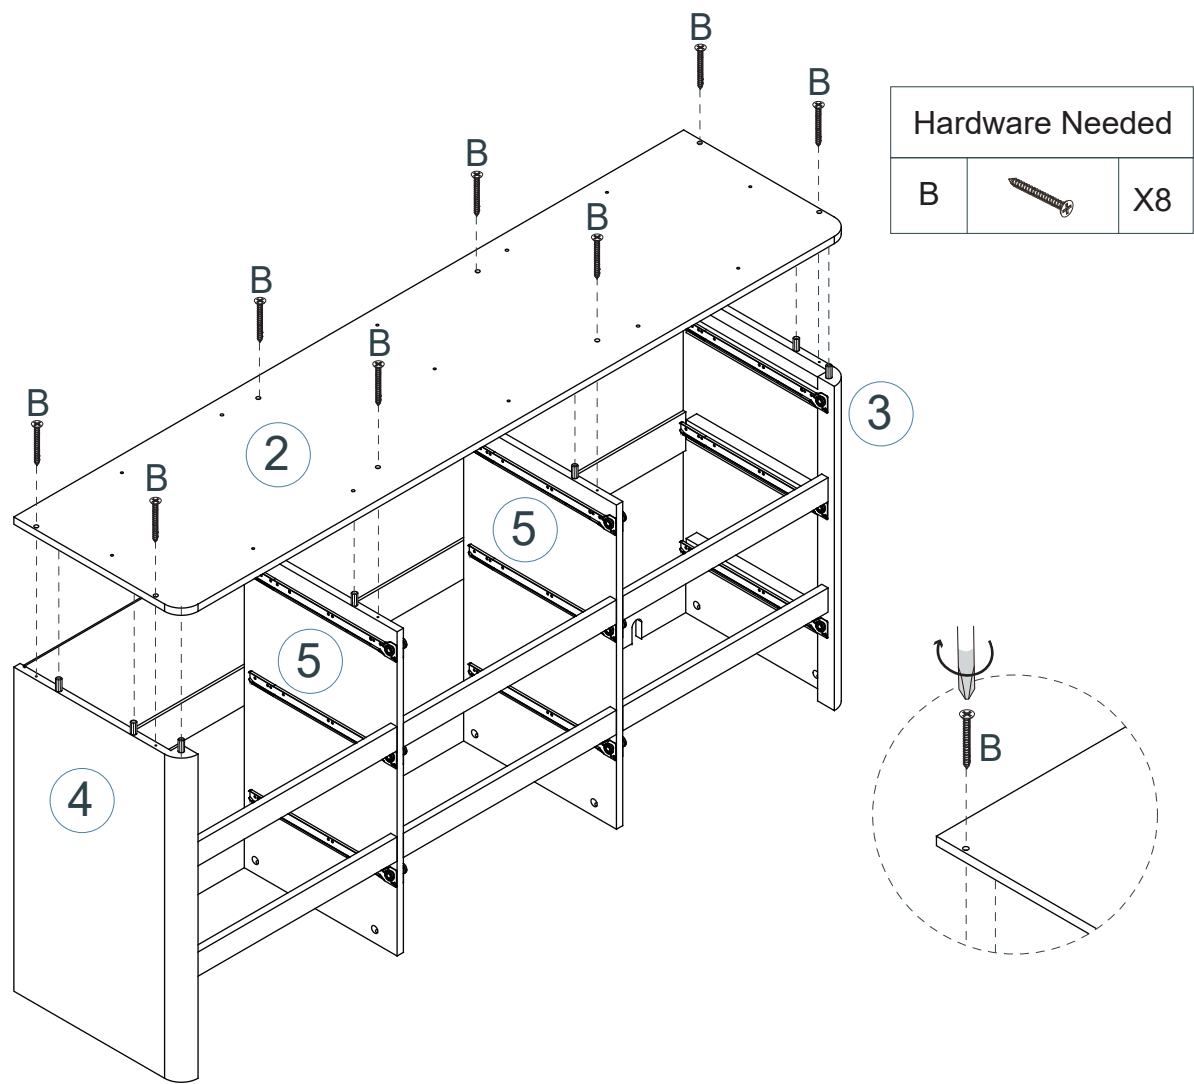


Step 14

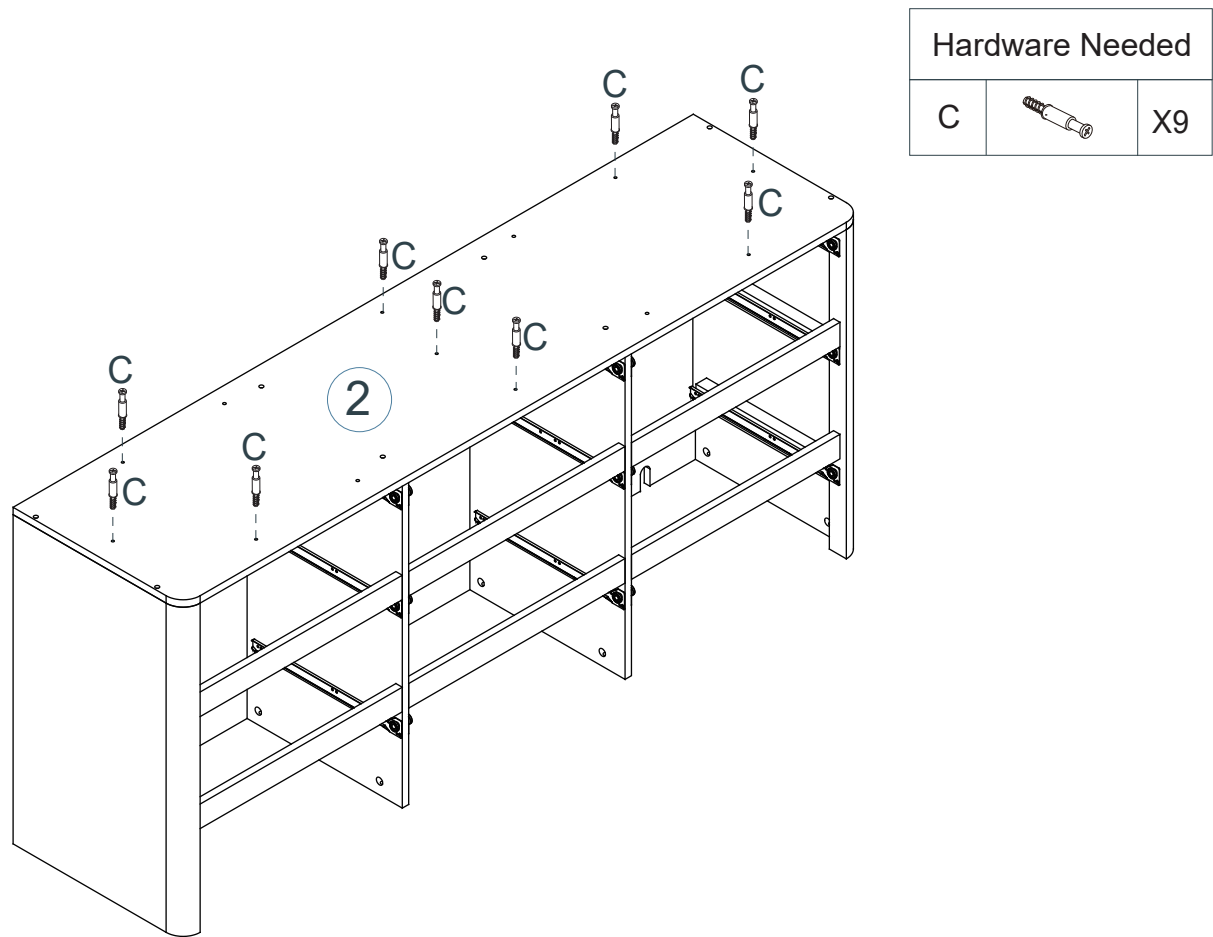


Step 15

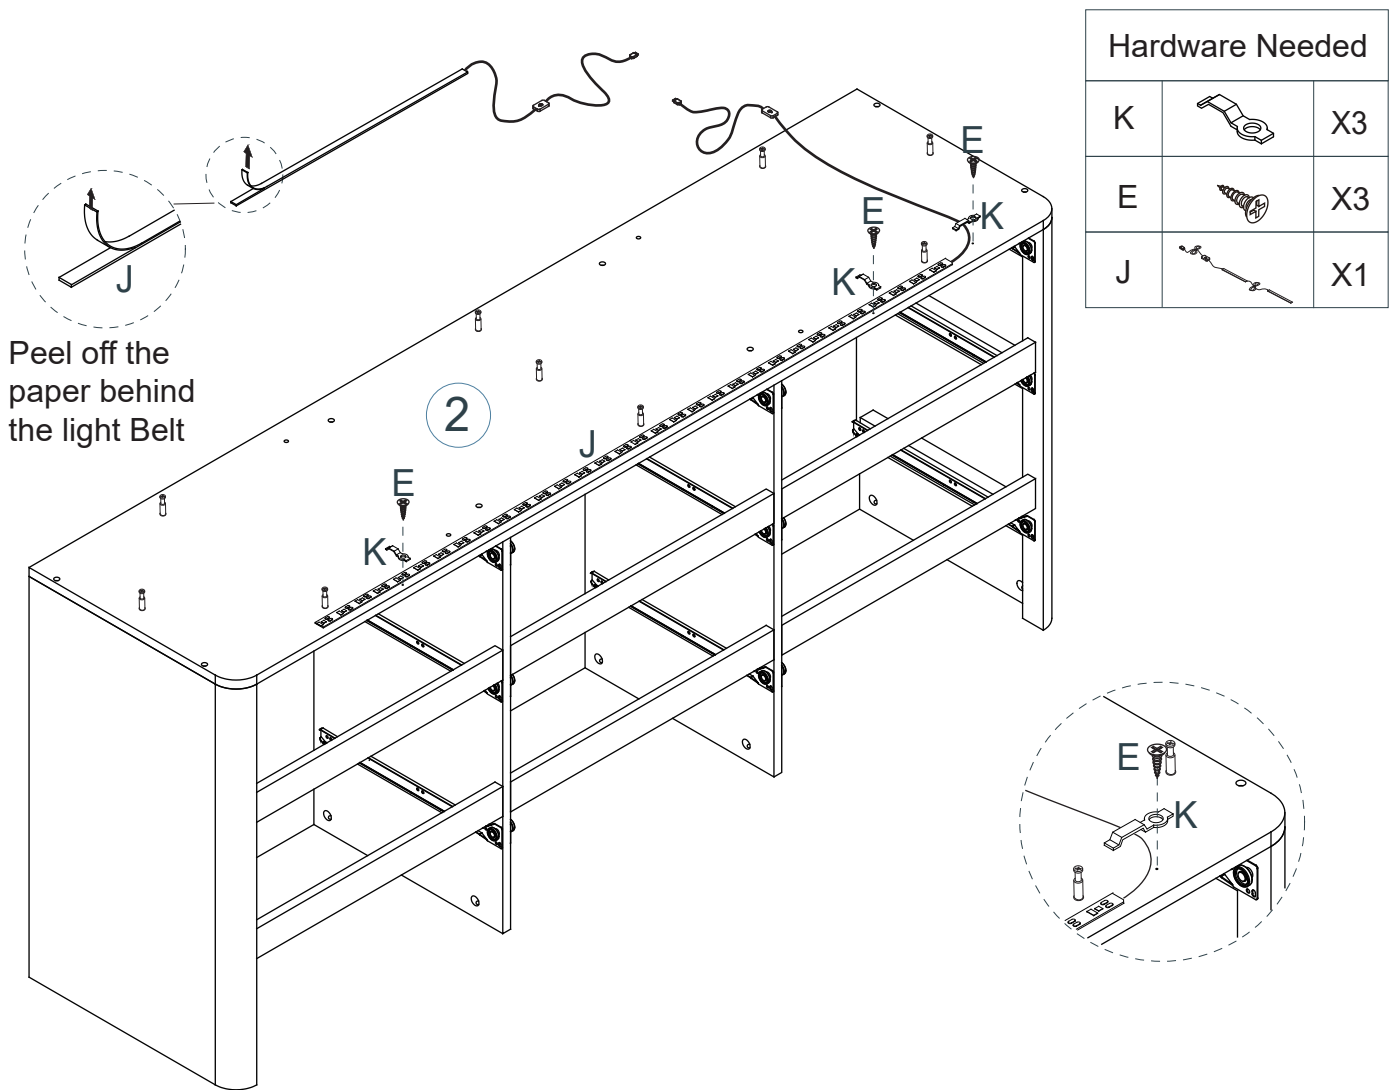

Step 16

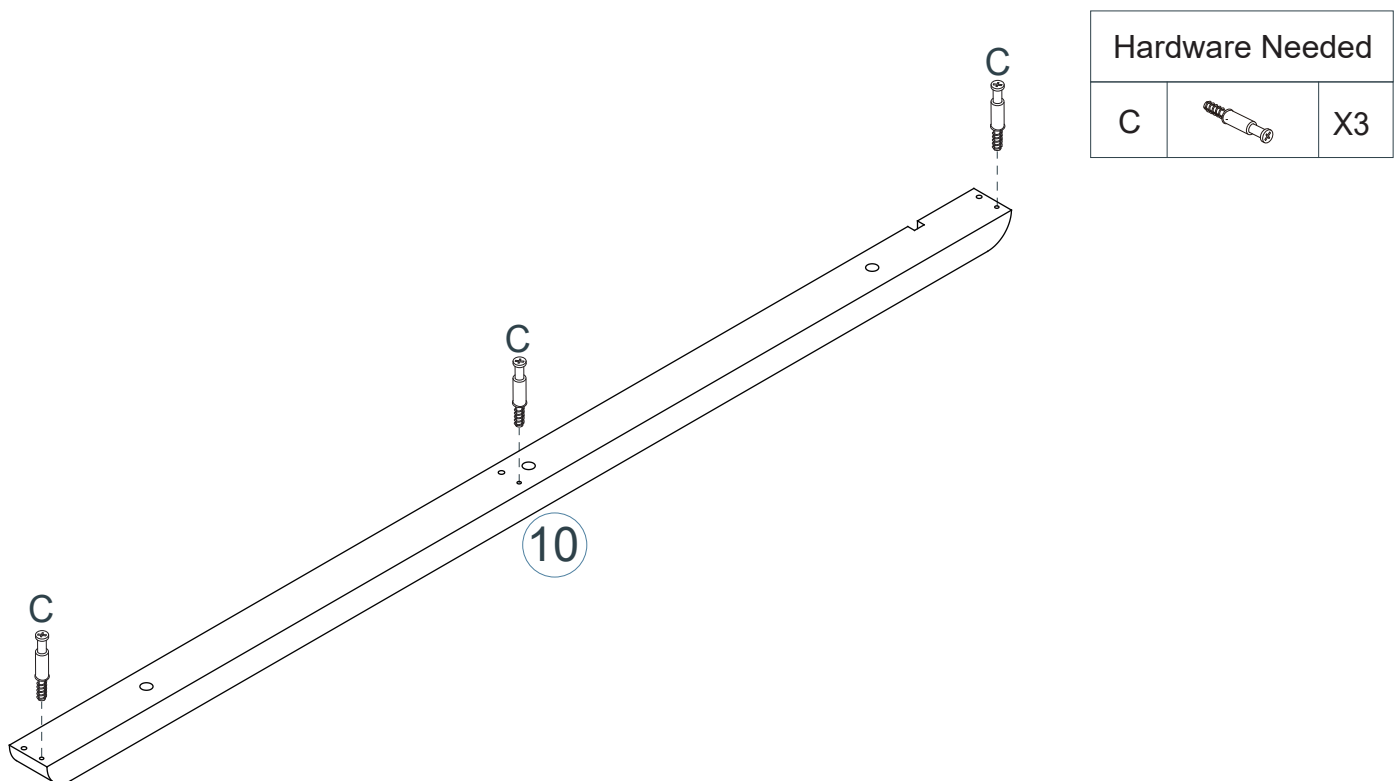


Step 17

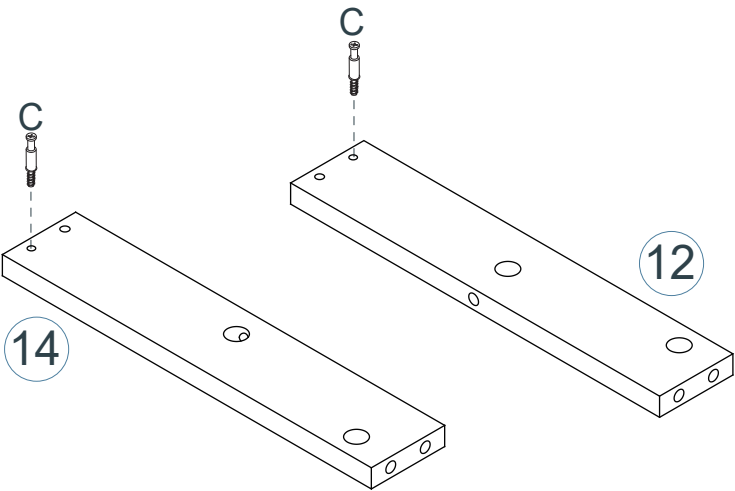

Hardware Needed		
C		X2


Step 18

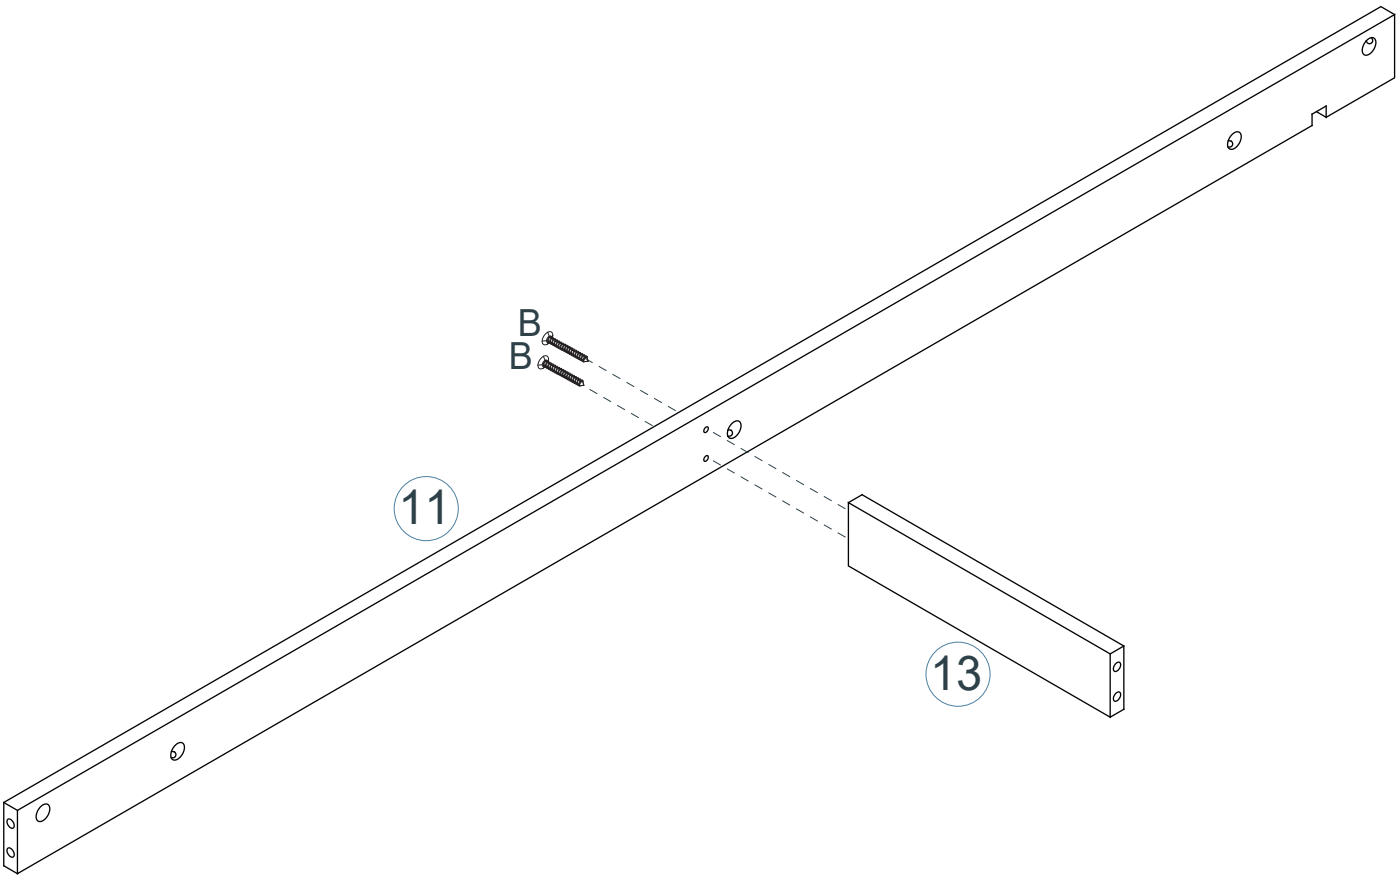

Hardware Needed		
B		X2


Step 19

Hardware Needed		
D		X2
A		X2

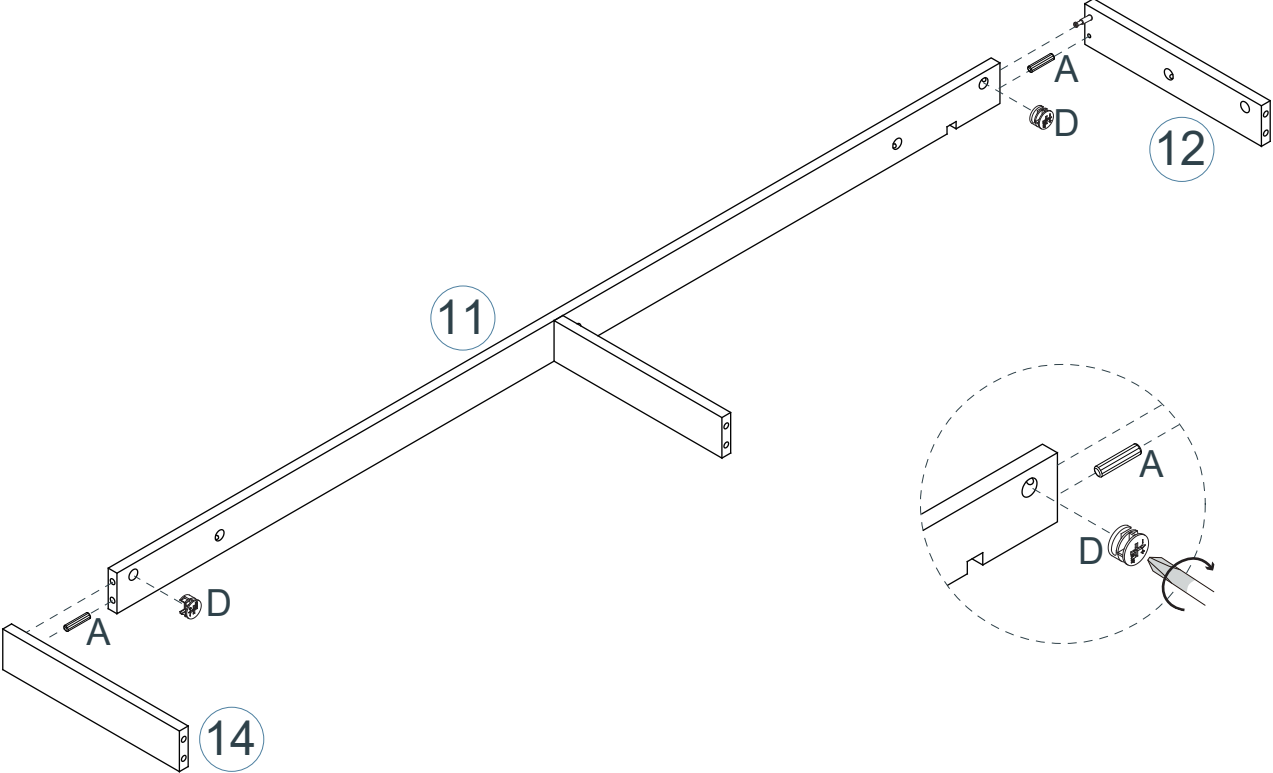


Step 20


Hardware Needed		
A		X3
D		X3

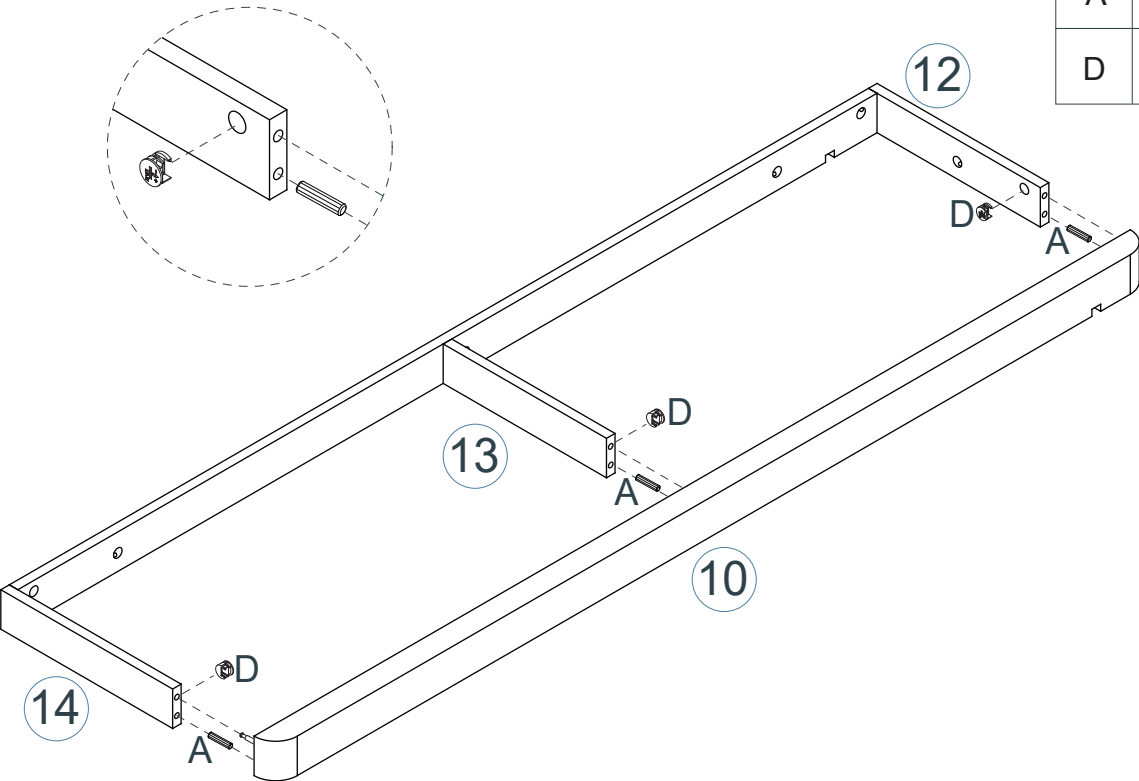


Step 21

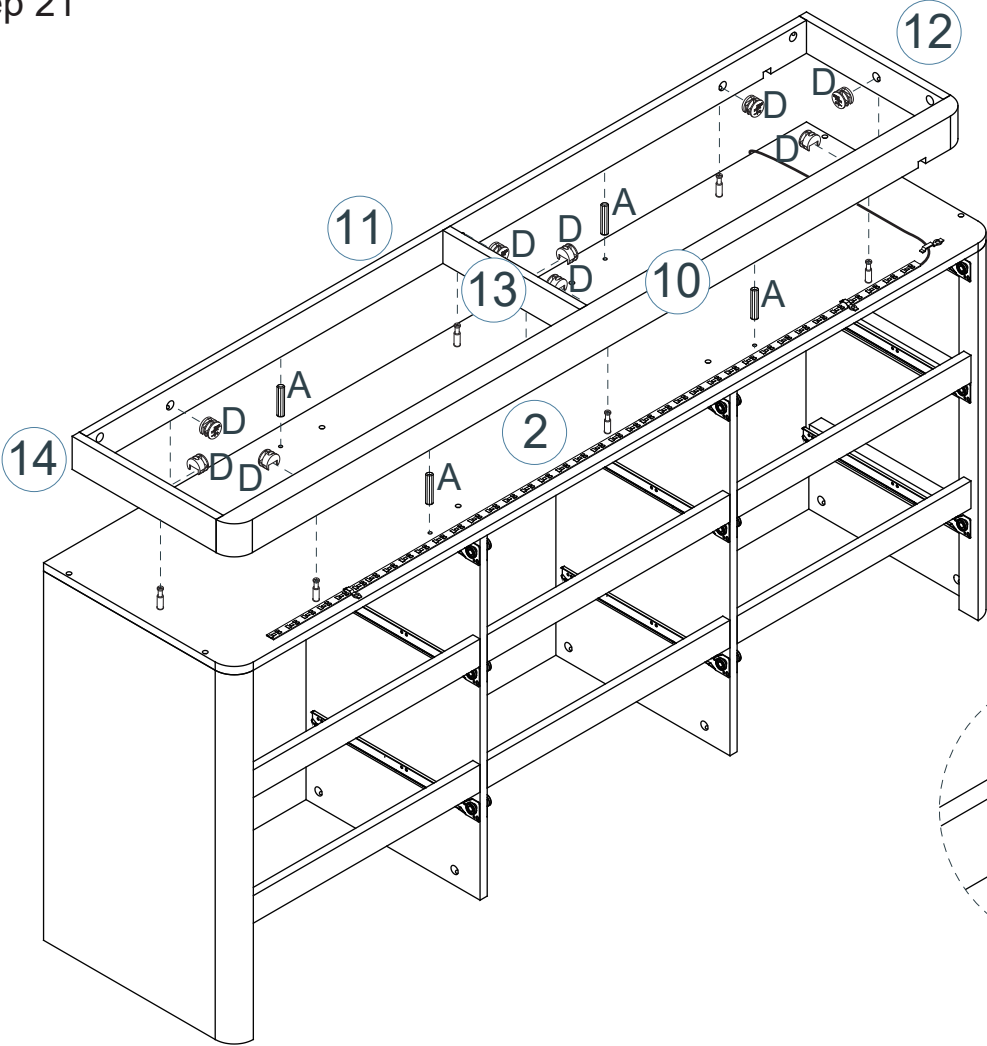


Hardware Needed		
D		X9
A		X4

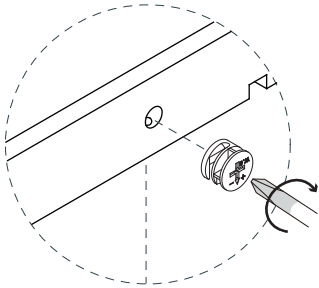


Step 22

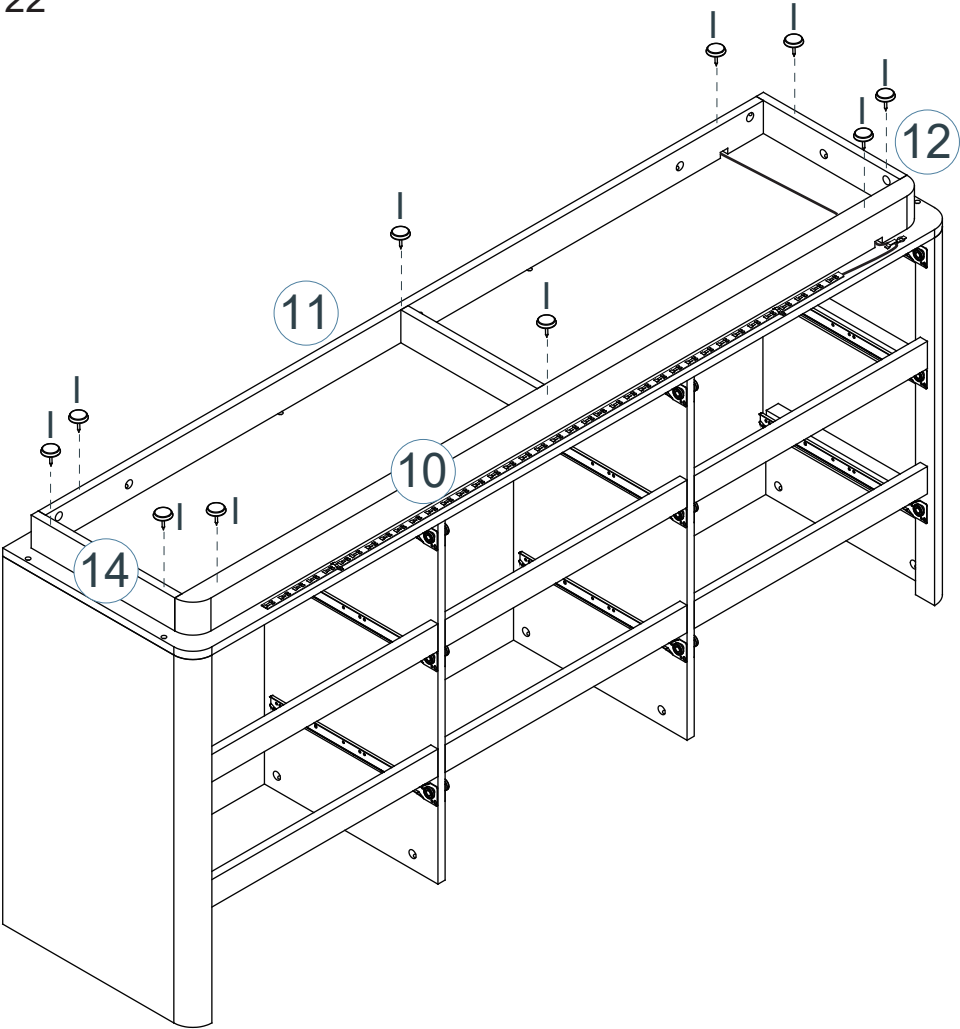


Hardware Needed		
I		X10

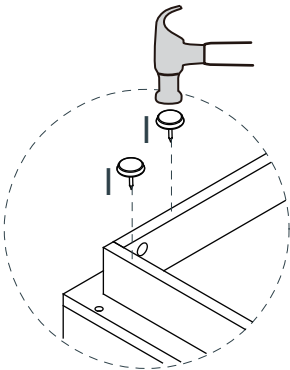


Step 23

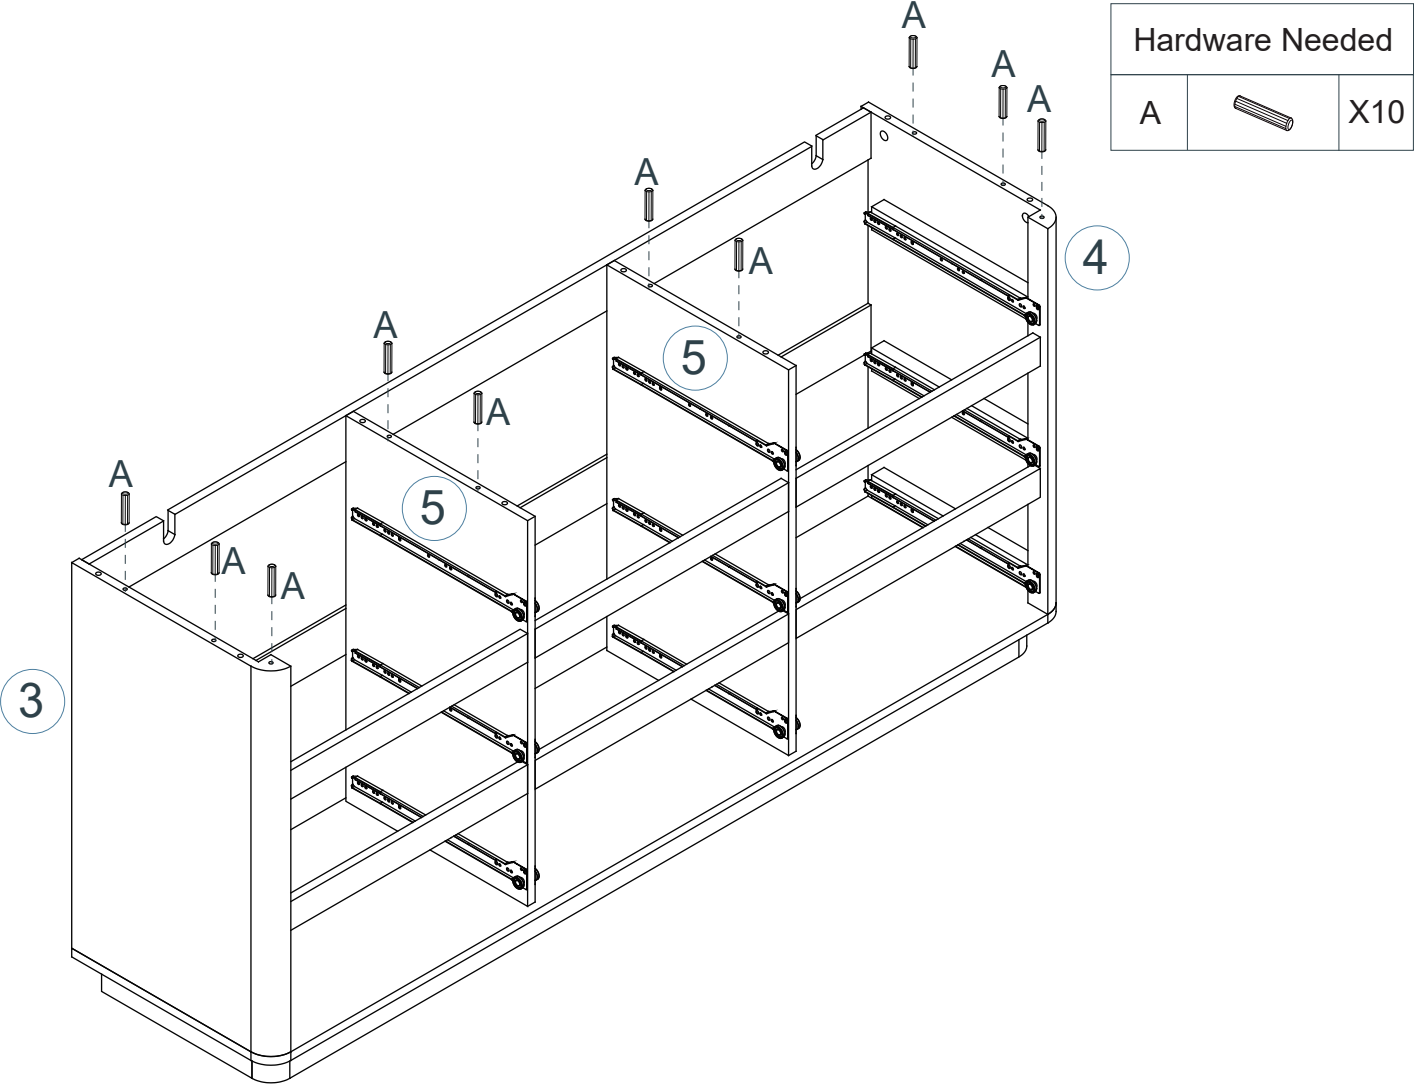

Step 24

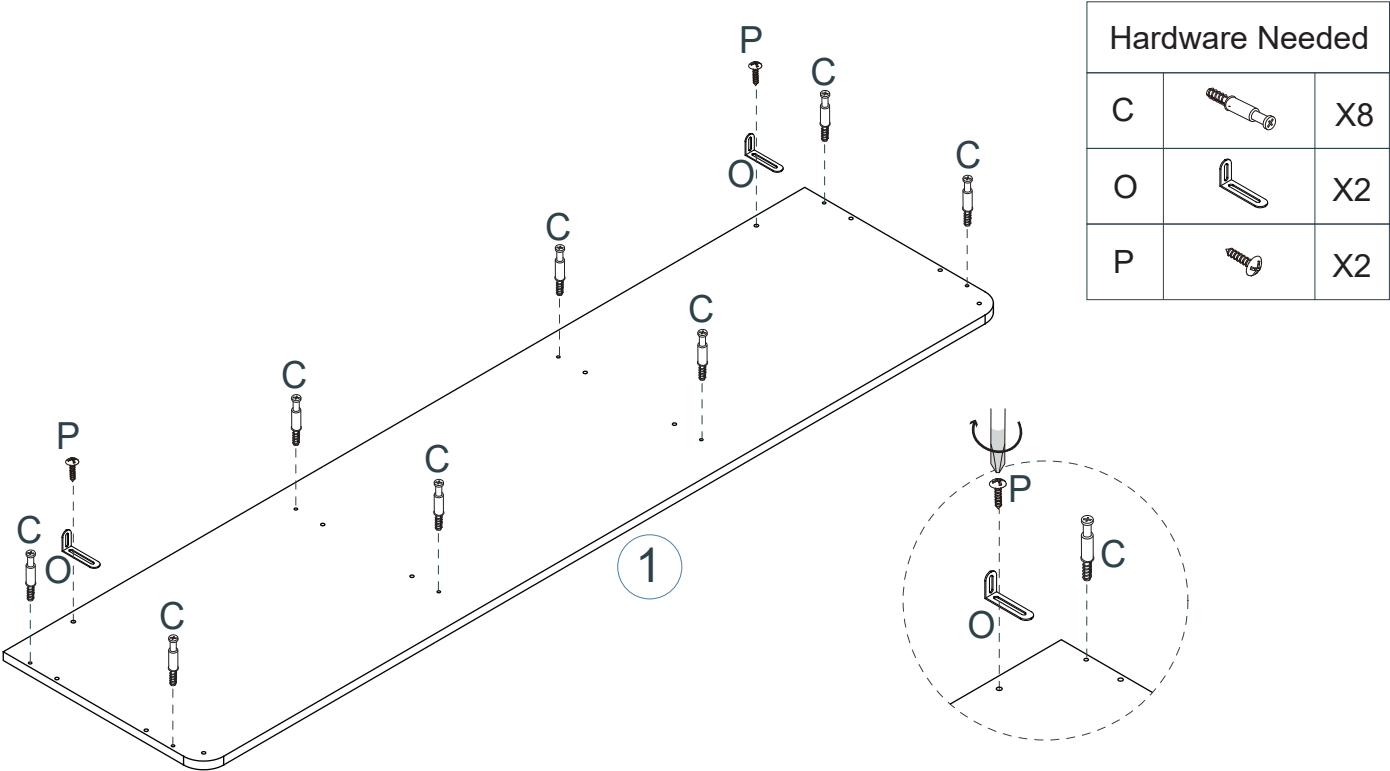


Step 25

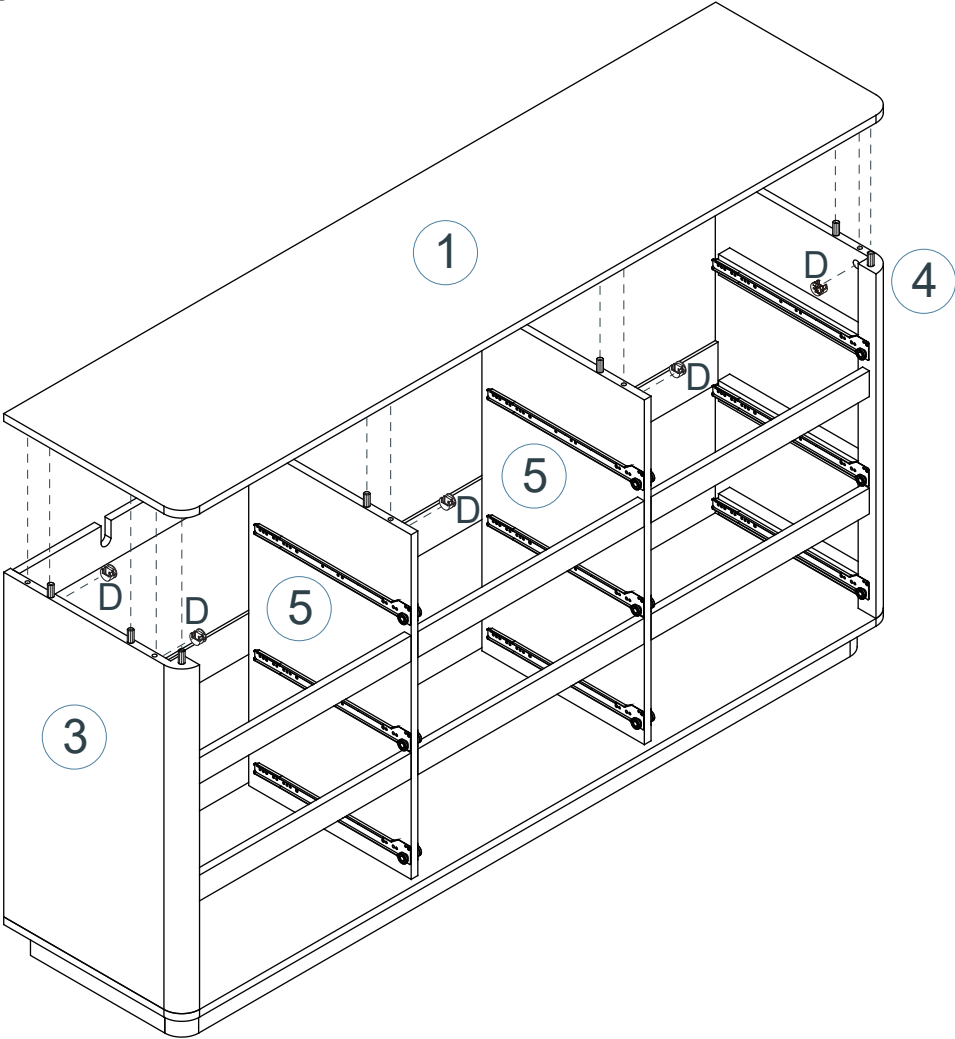


Hardware Needed		
D		X8


Step 26

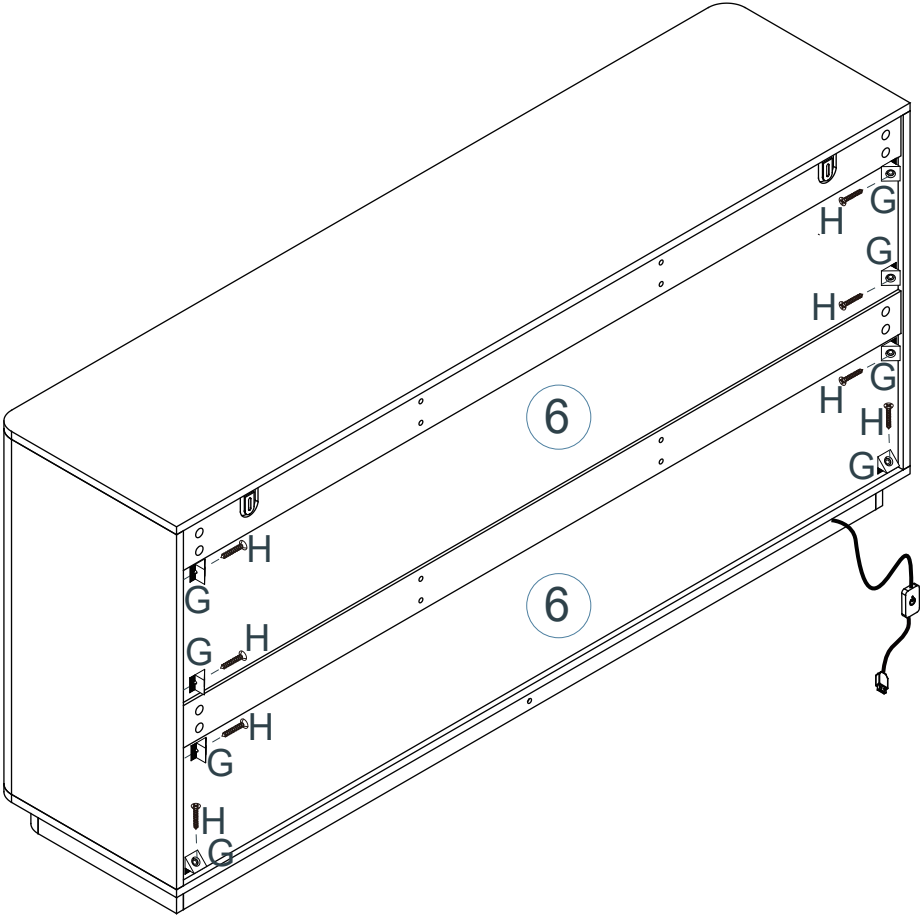


Hardware Needed		
G		X8
H		X8

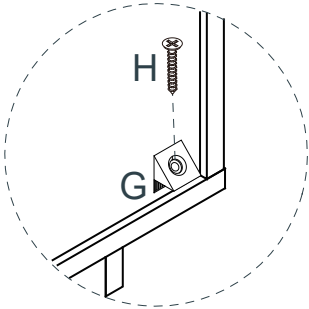


Step 27

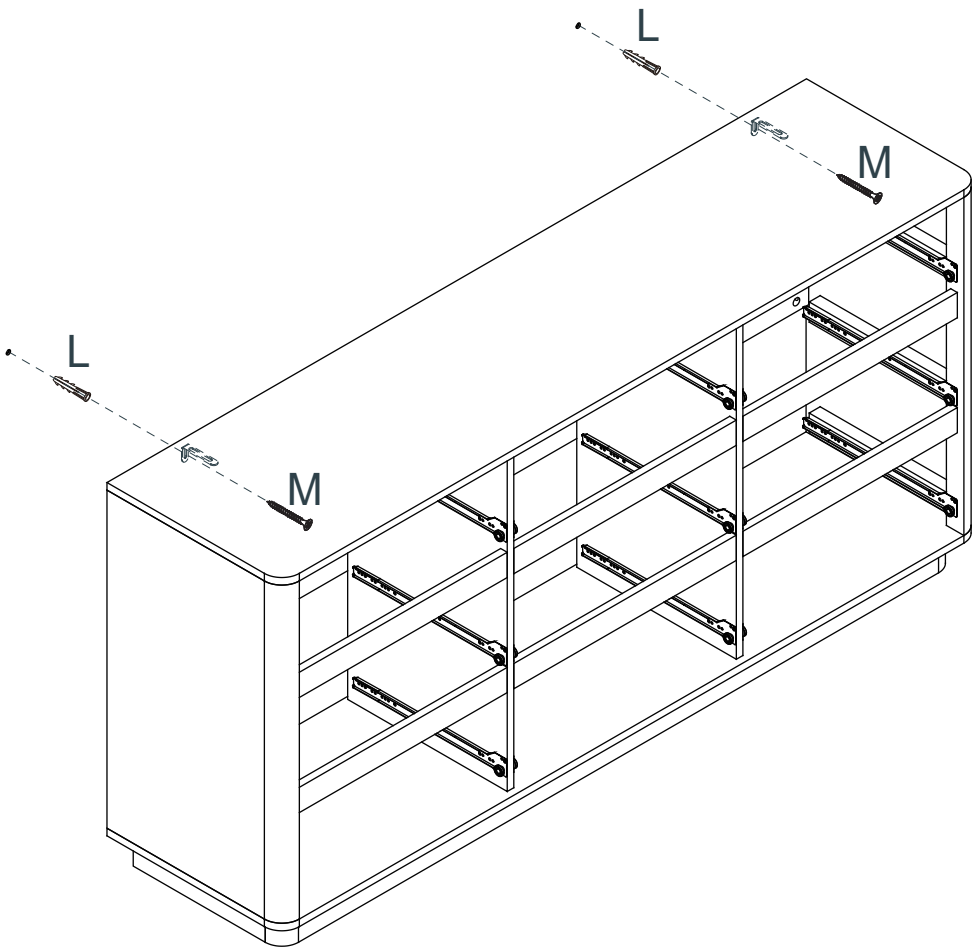

Hardware Needed		
M		X2
L		X2

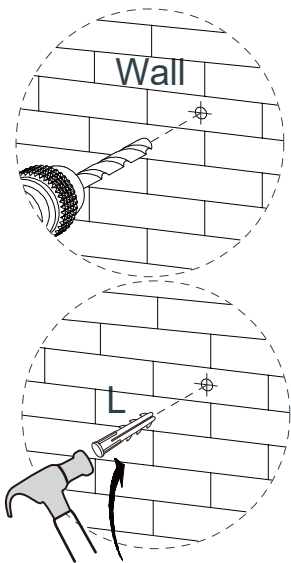


Step 28

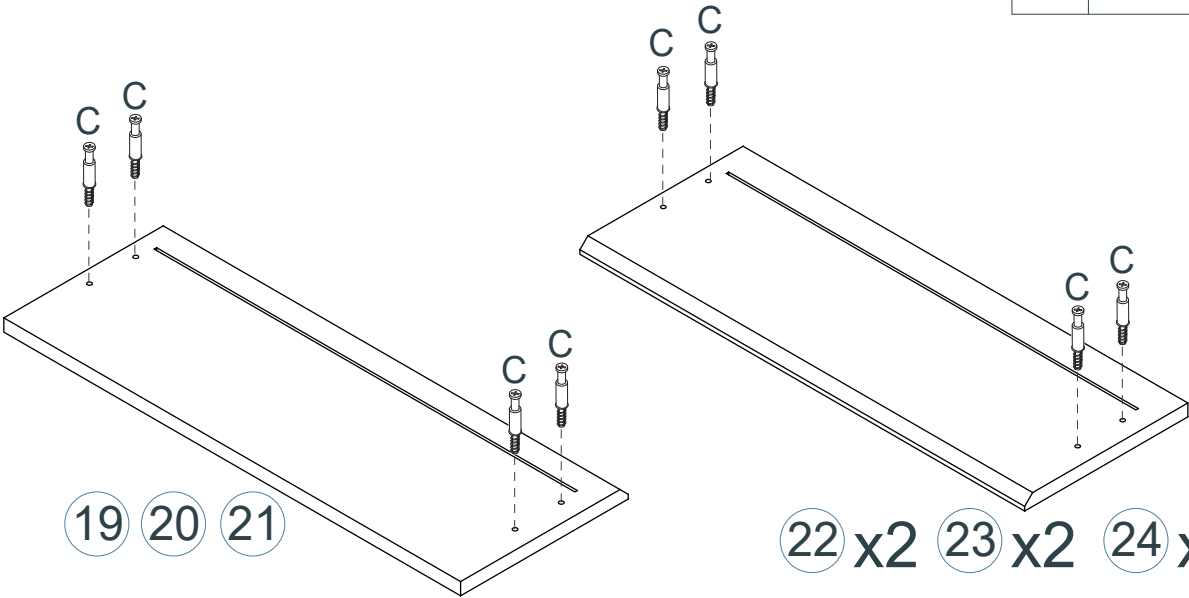


Hardware Needed		
C		X36


Step 29

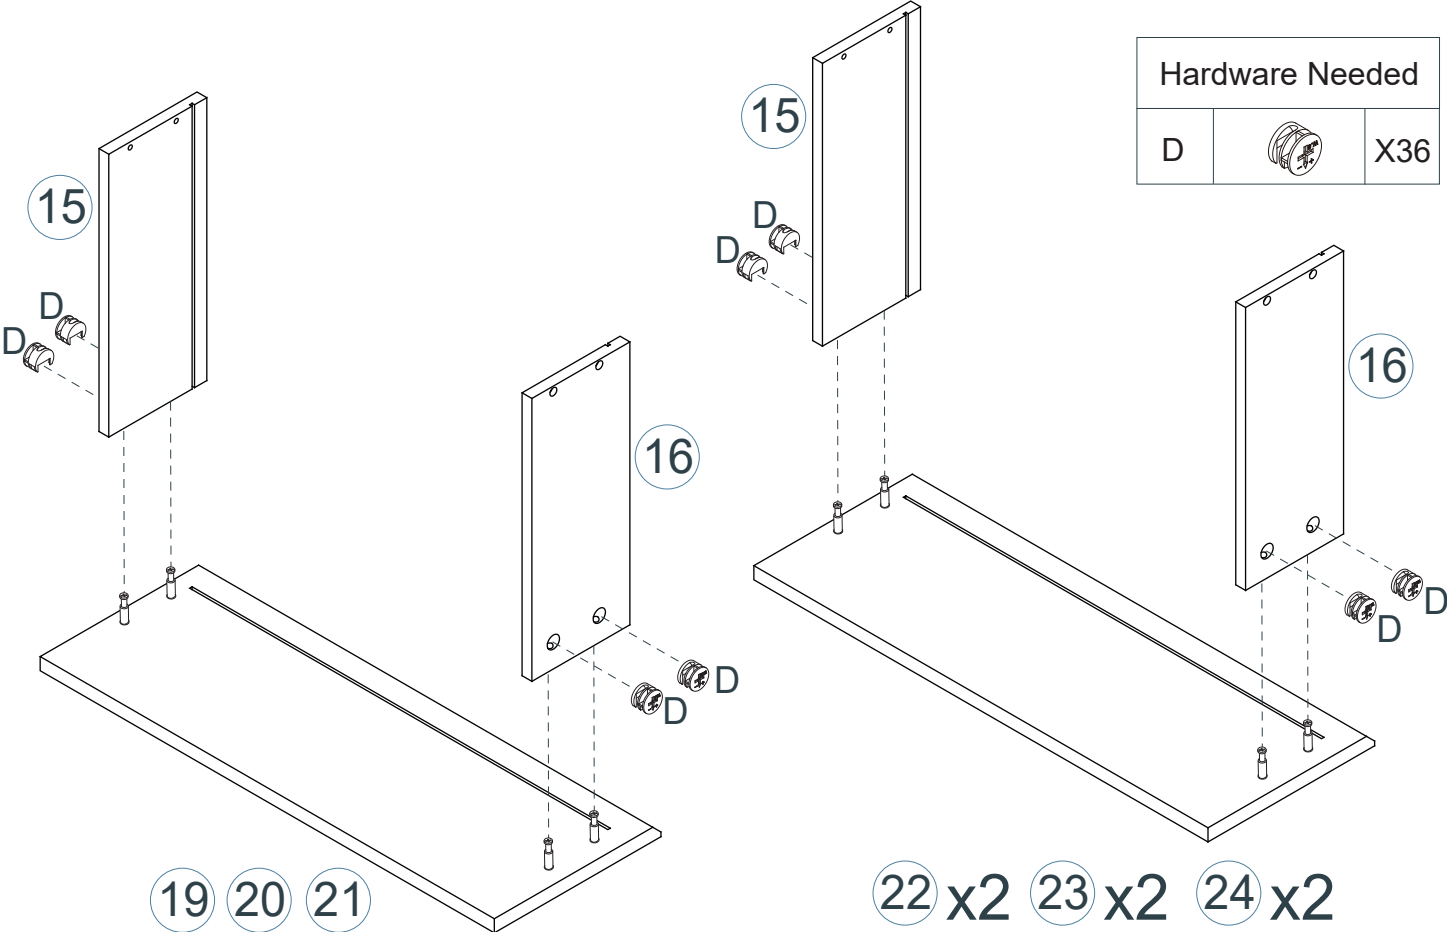


Step 30

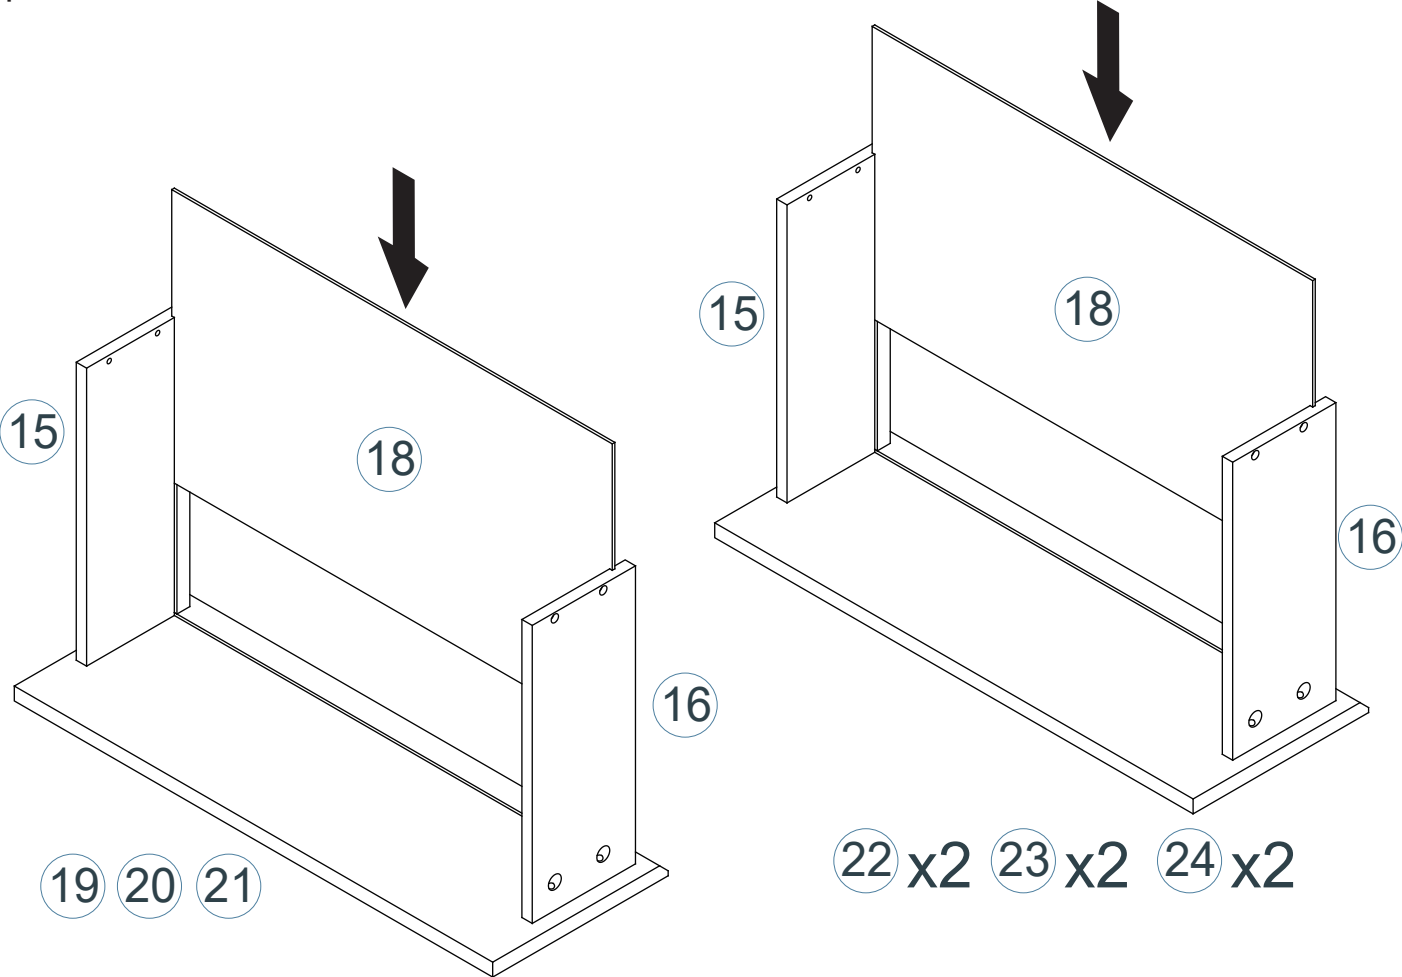


Step 31

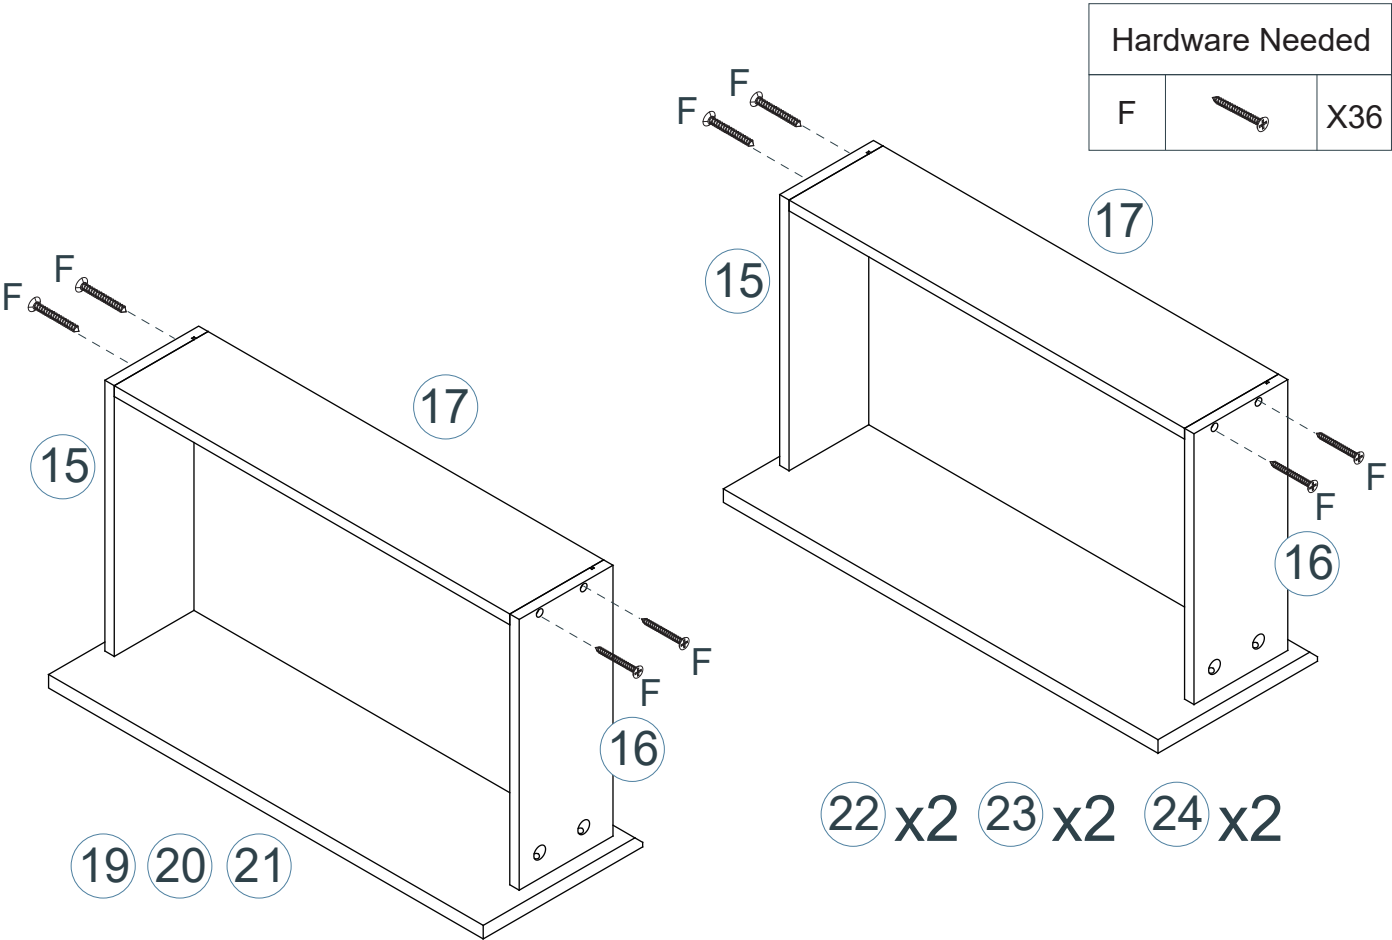

Step 32

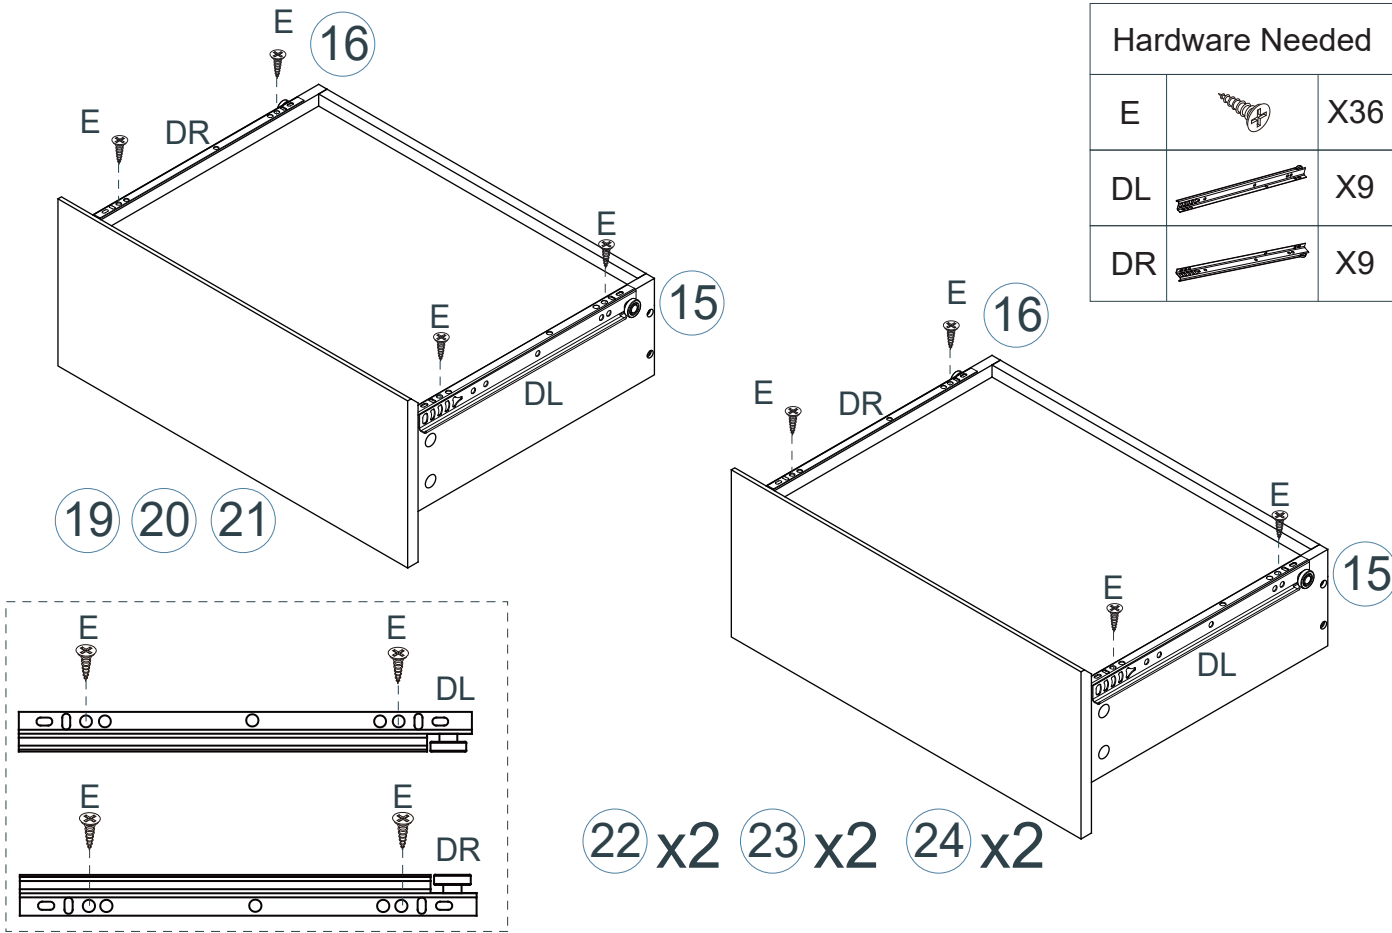

Step 33

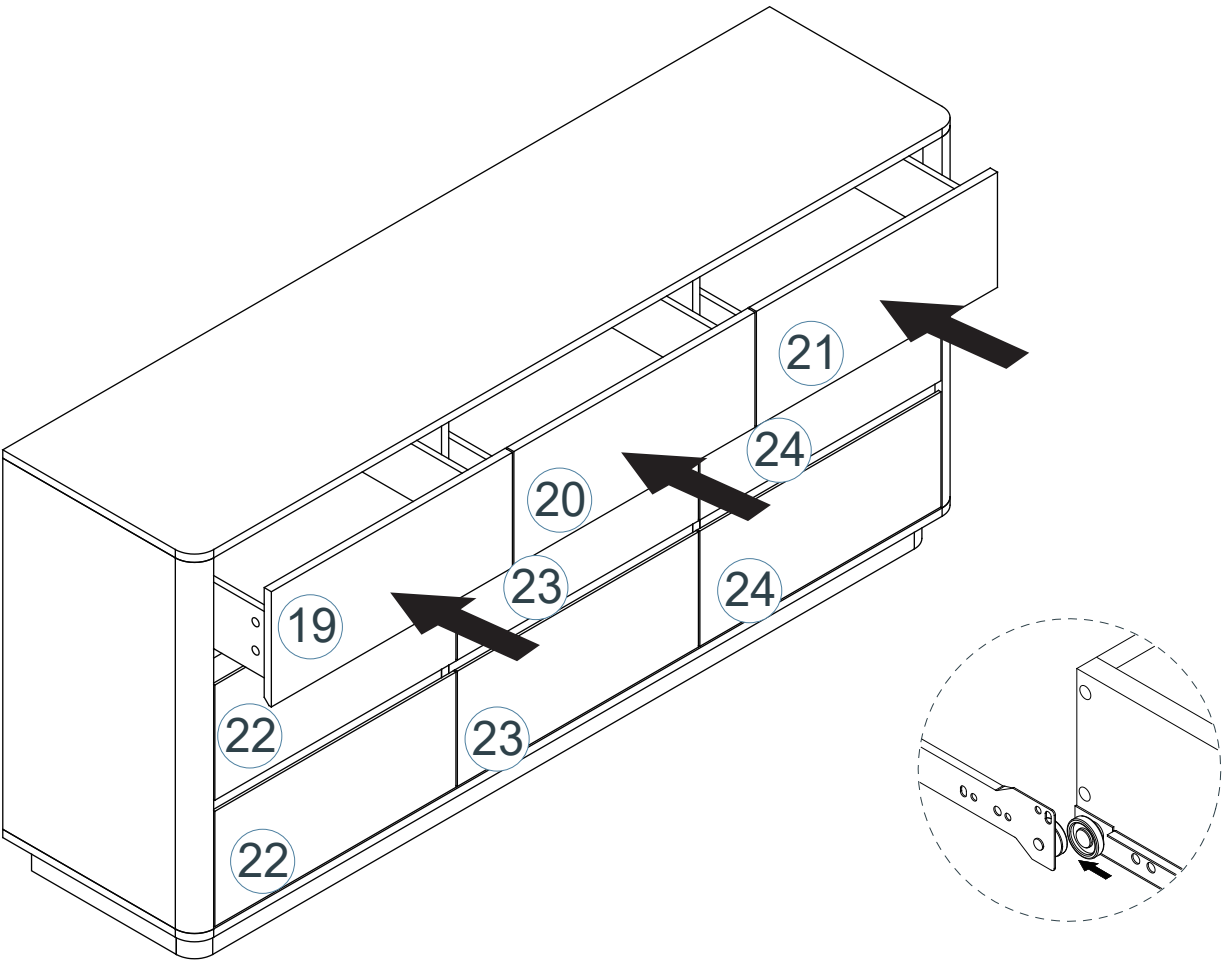

Step 34

