


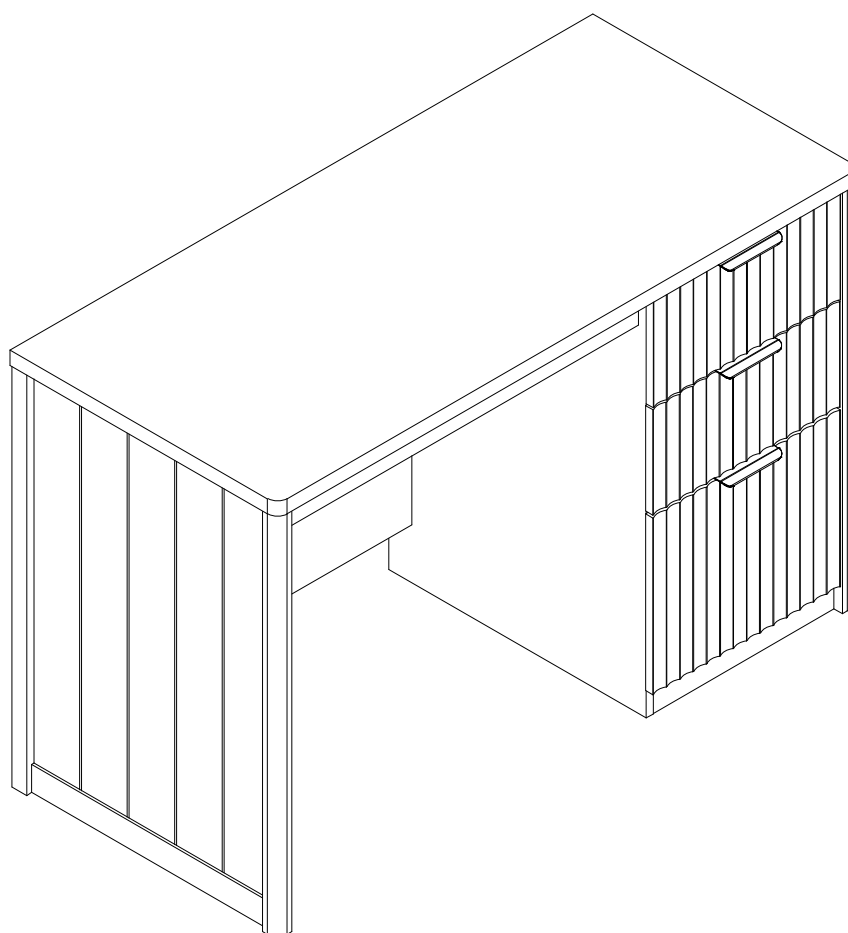

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



BEFORE STARTING

Before Using Product


- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

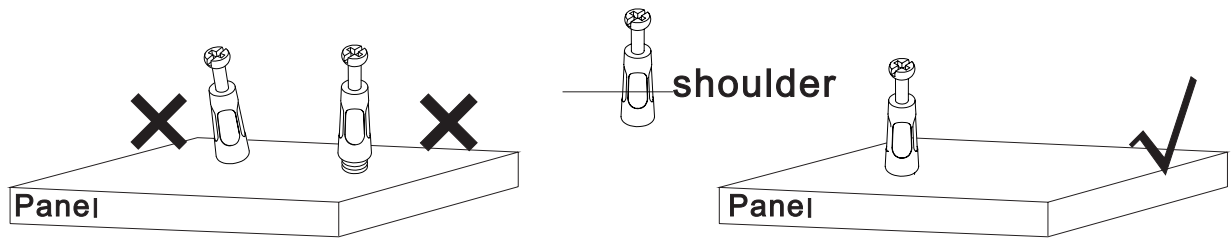


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

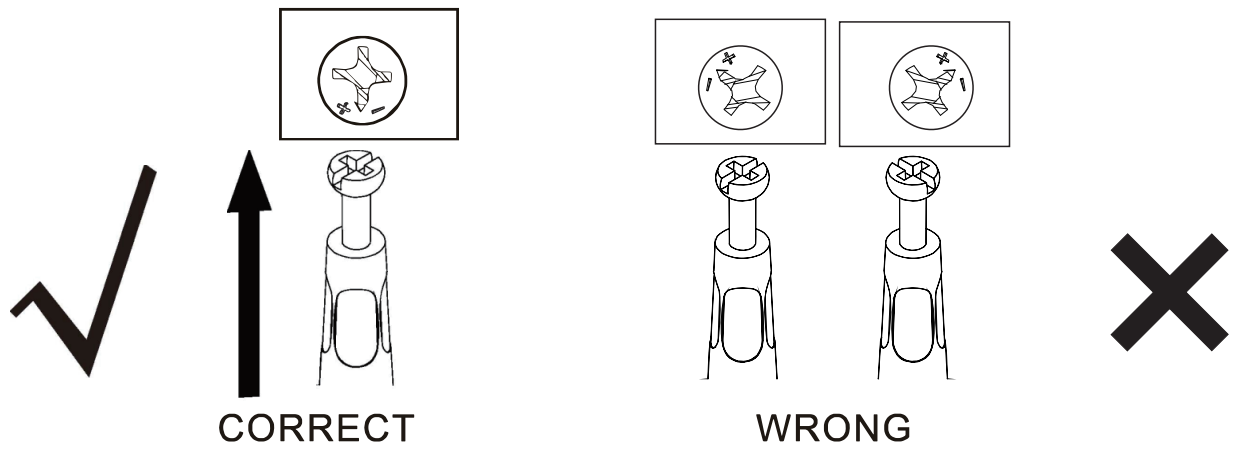

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

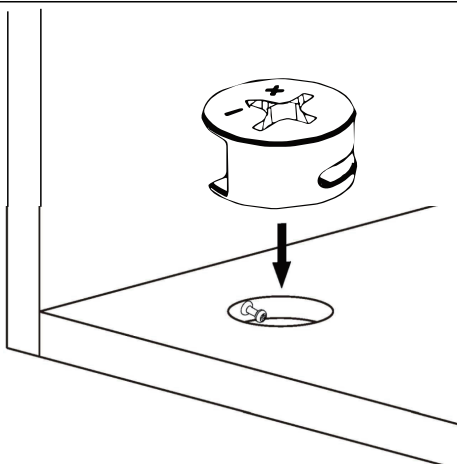


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

















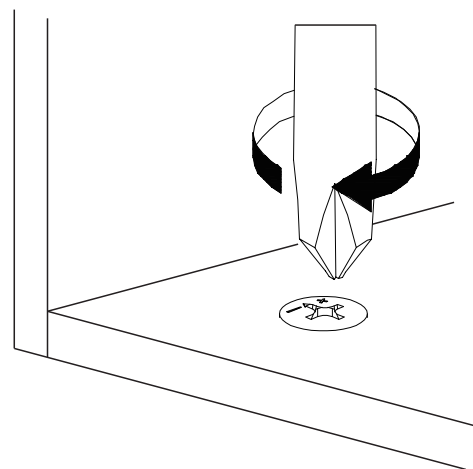


Turn cam lock clockwise to tighten.









PART LIST

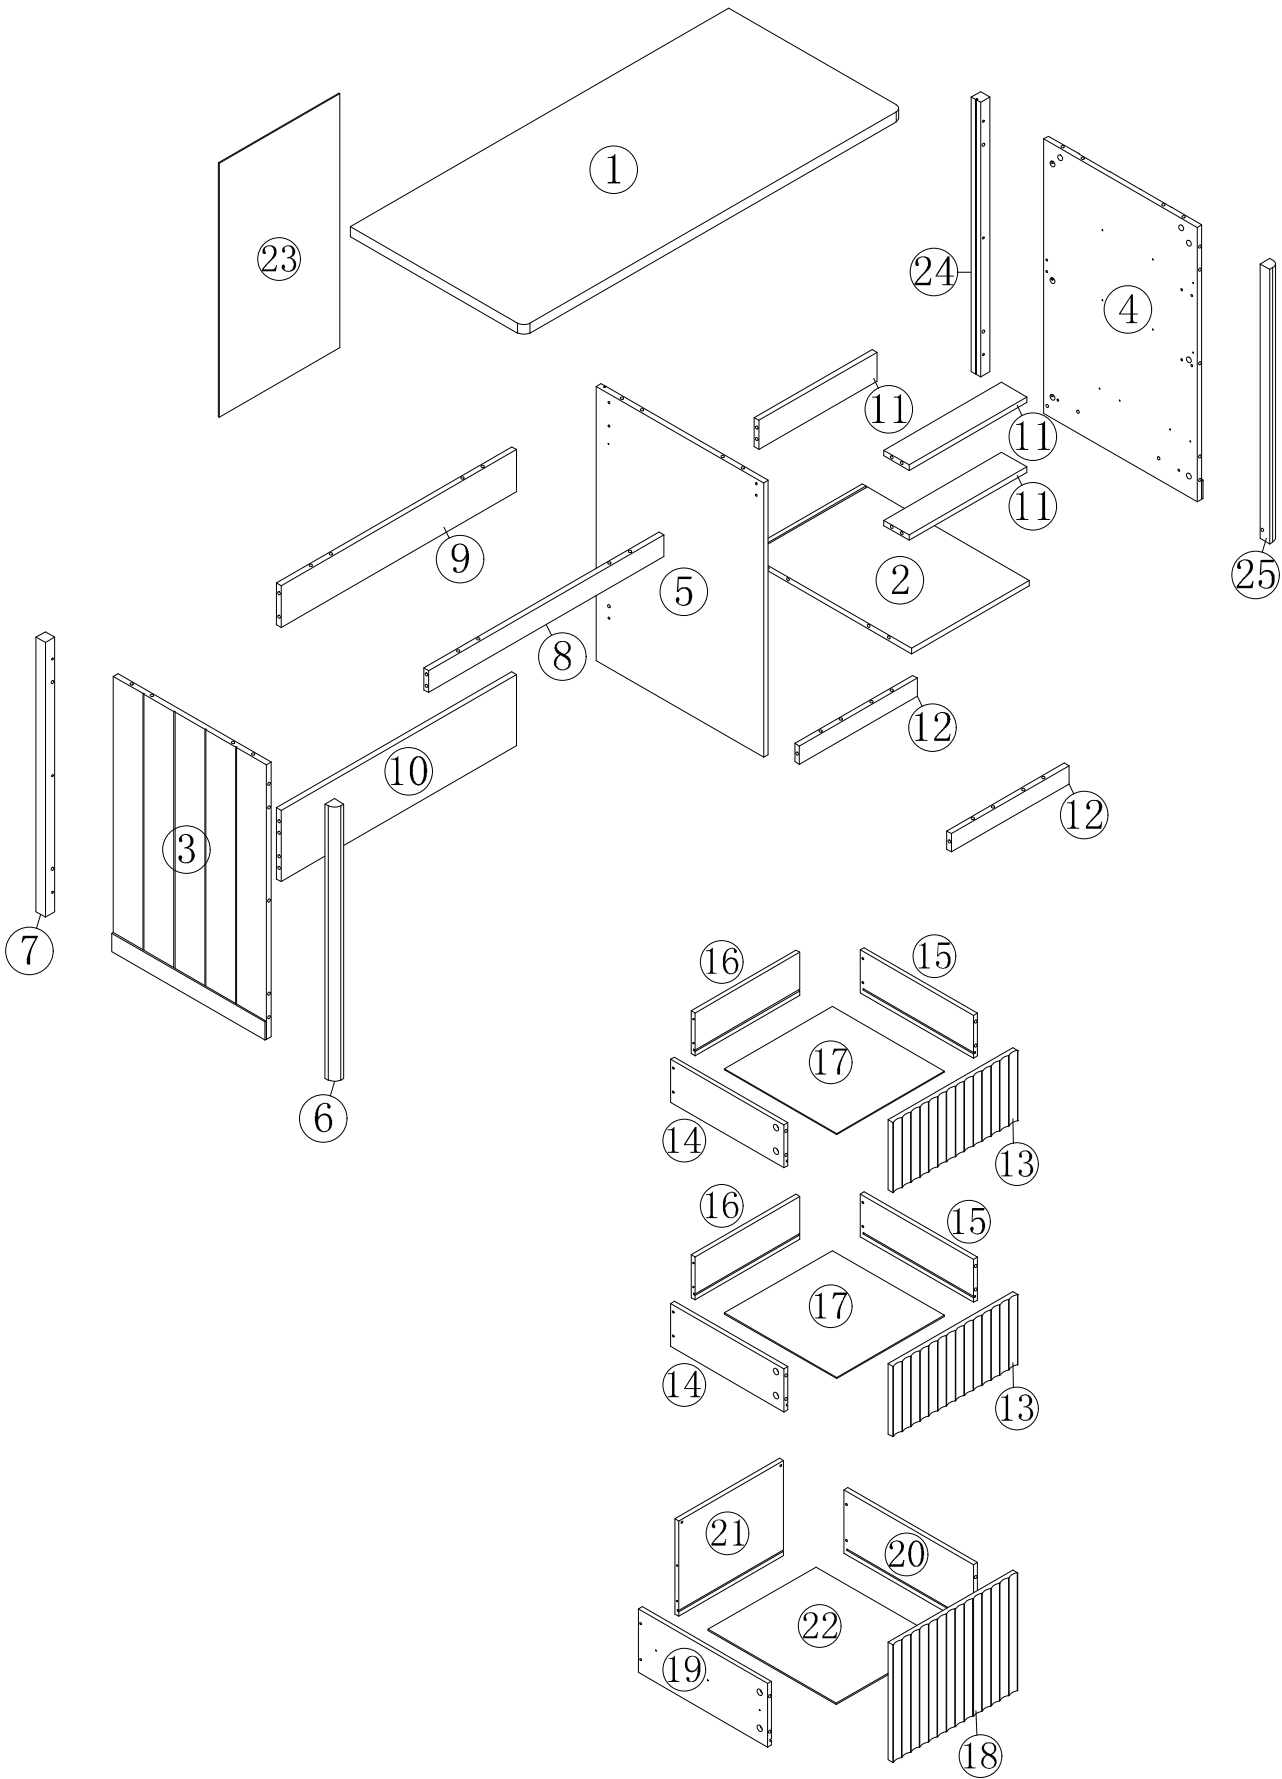










PART LIST

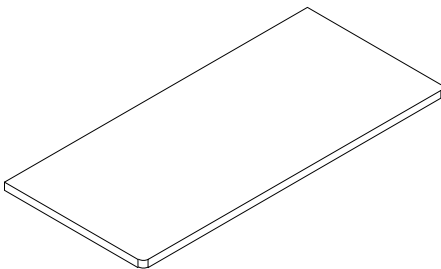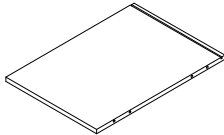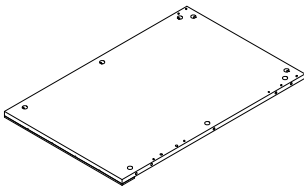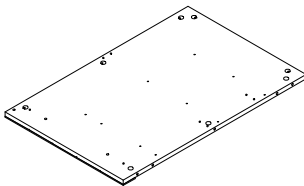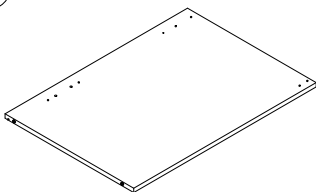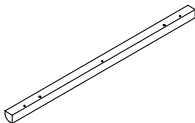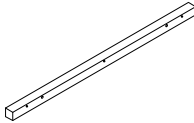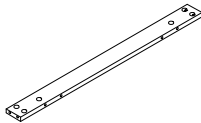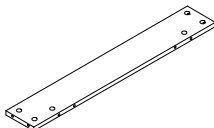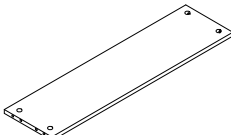①  1PC	②  1PC	
③  1PC	④  1PC	⑤  1PC
⑥  1PC	⑦  1PC	⑧  1PC
⑨  1PC	⑩  1PC	⑪  3PCS
⑫  2PCS	⑬  2PCS	⑭  2PCS
⑮  2PCS	⑯  2PCS	⑰  2PCS

PART LIST

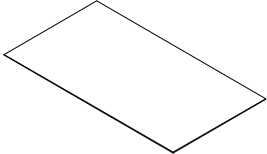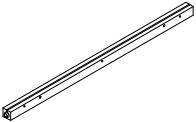
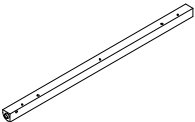
18  1PC	19  1PC	20  1PC
21  1PC	22  1PC	23  1PC
24  1PC	25  1PC	

HARDWARE LIST

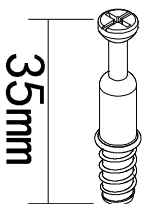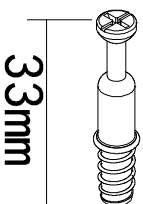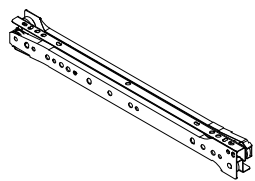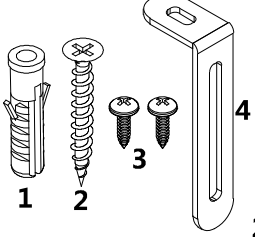
A  35mm Ø6X35 (54+3)PCS	B  Ø15X9.5 (66+3)PCS	C  33mm Ø6X32 (12+1)PCS
D  Ø8X30 (34+2)PCS	E  Ø5X40 (12+1)PCS	F  3PCS
G  1SET	H  (6+1)PCS	I  Ø3X15 (6+1)PCS
J  2SET	K  Ø3X12 (44+3)PCS	L  Ø4X398 2PCS
M  1 2 3 4 2SET	 1PC	 1PC




J X 2SET

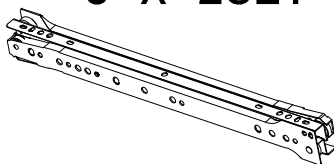


CL




CR



DL




DR

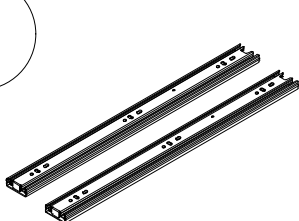


G


=

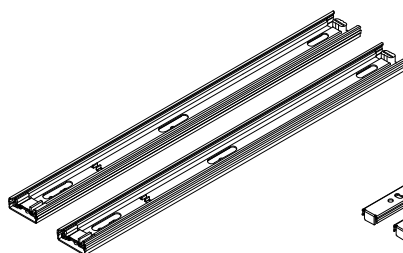


1

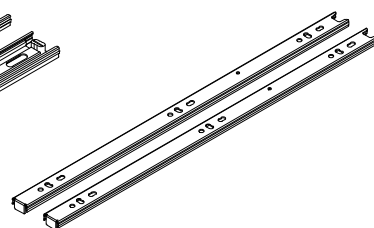

2

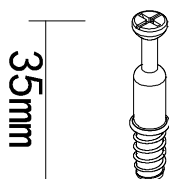


A

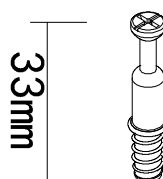


C




M =




1



2






3

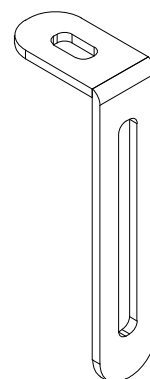


4

STEP 1

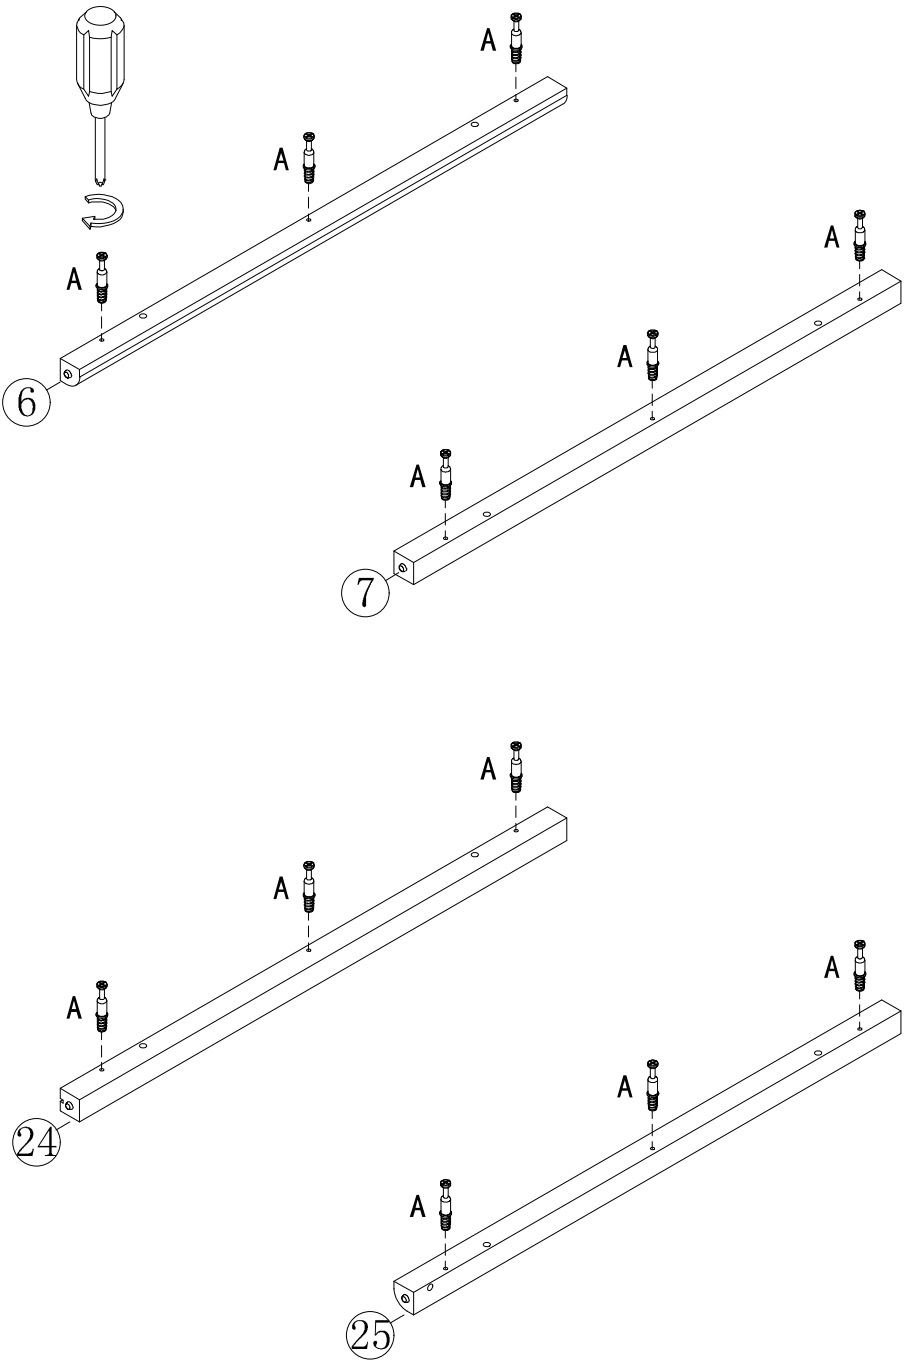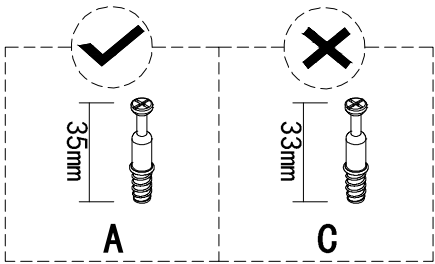

A X 12PCS




STEP 2

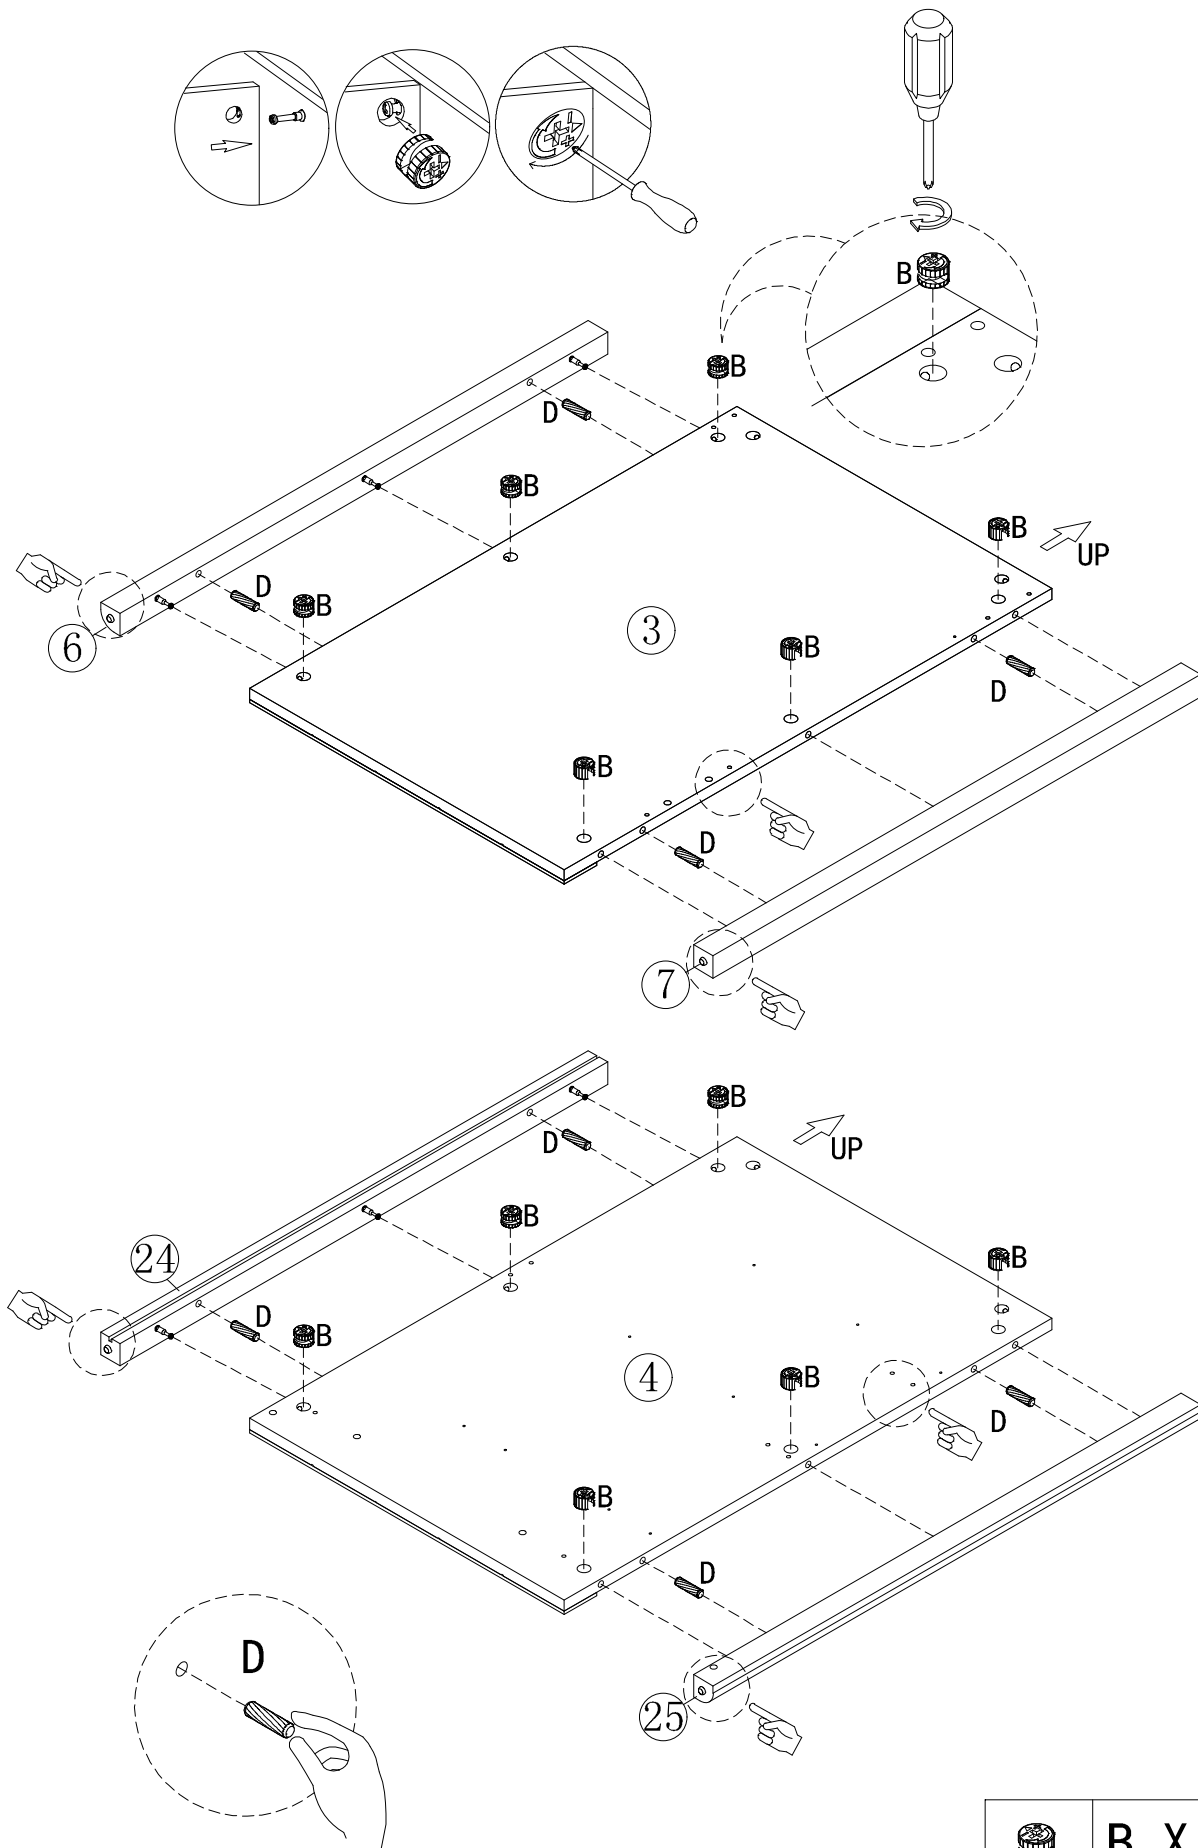

	B X 12PCS
	D X 8PCS


STEP 3

! G1

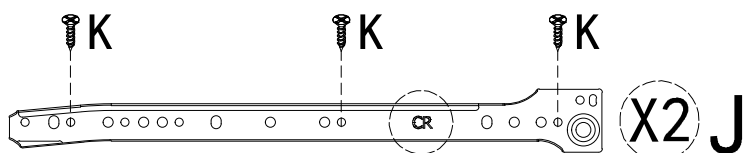


G2





Move here to remove the slide rail G2

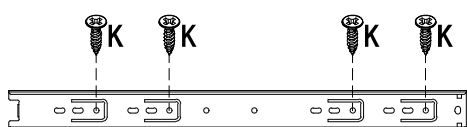


G1

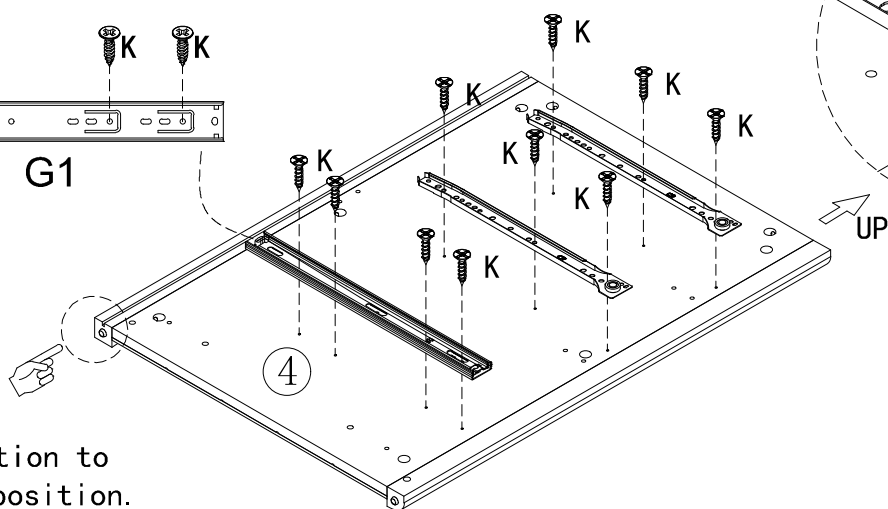

Pay attention to the hole position.

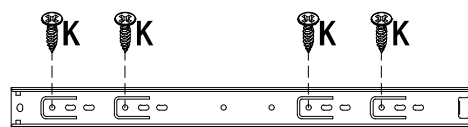
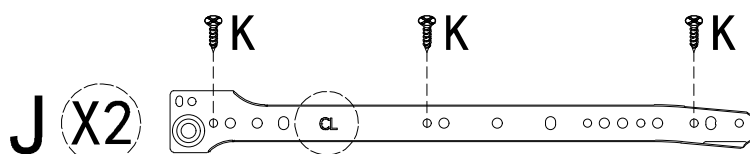
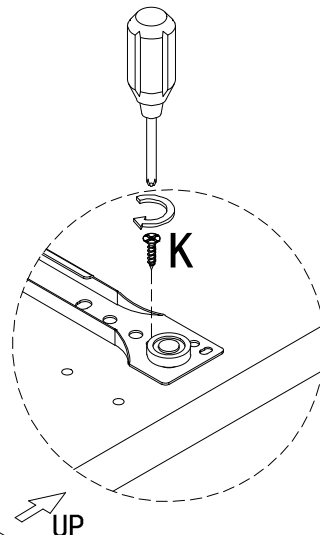


G1

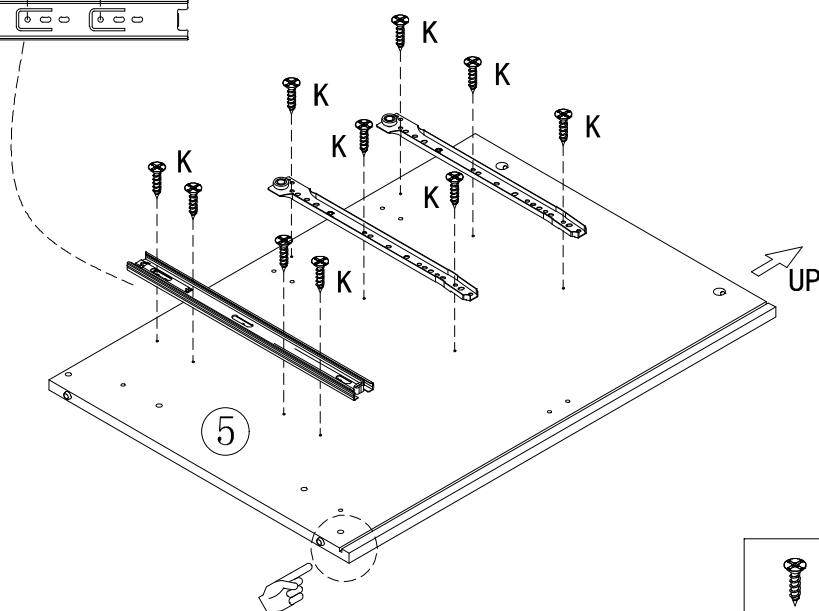



K X 20PCS

STEP 4

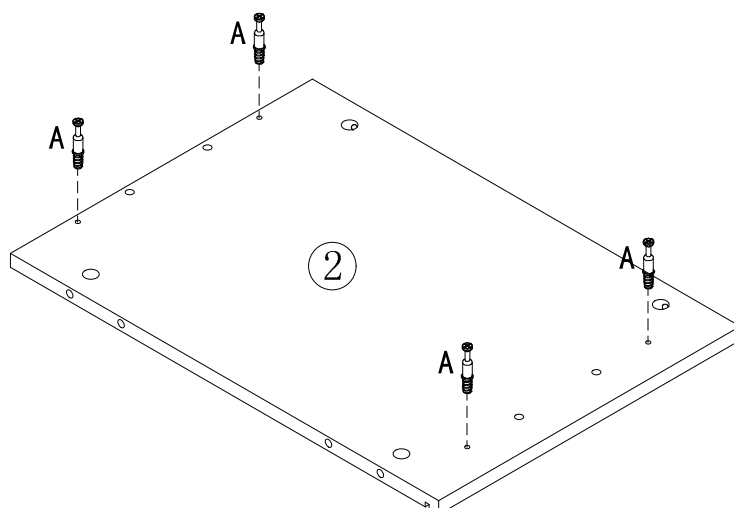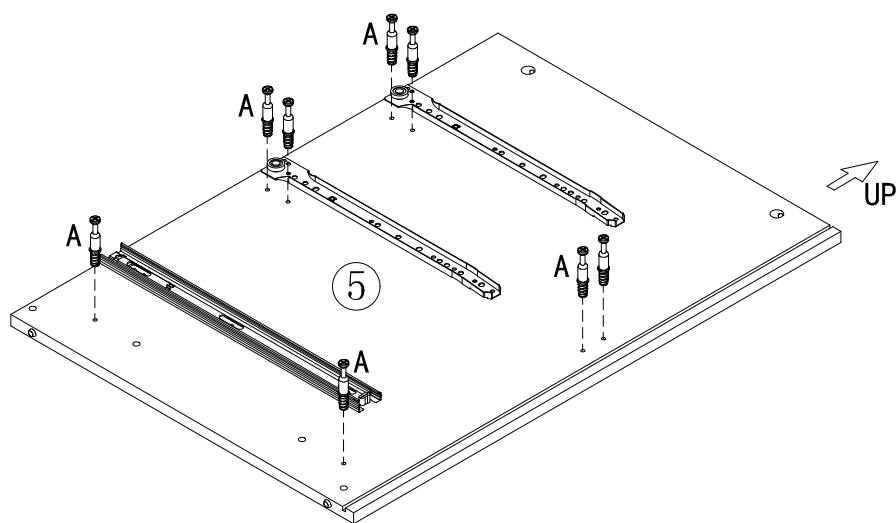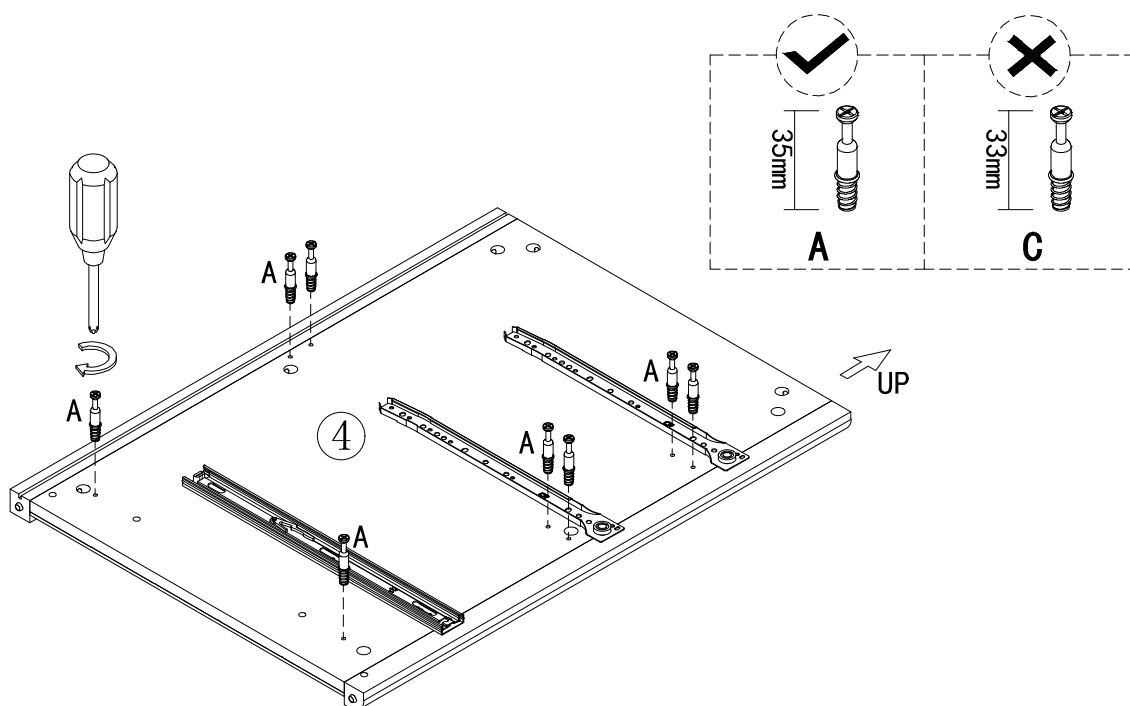




 35mm
A X 20PCS

STEP 5

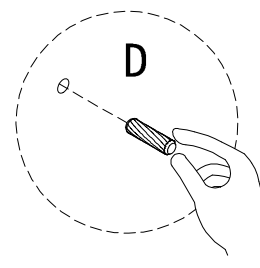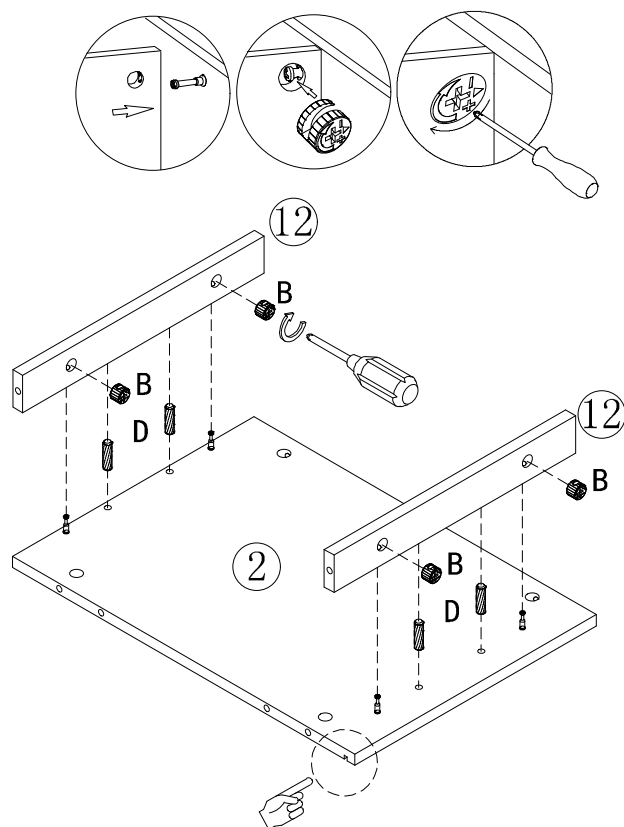



	B X 4PCS
	D X 4PCS

STEP 6

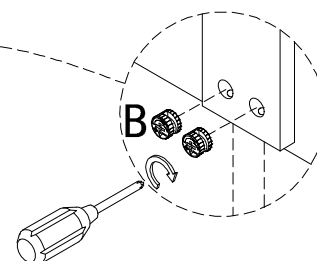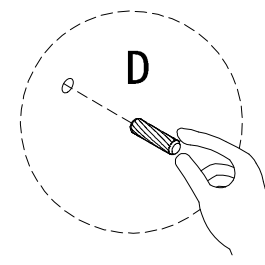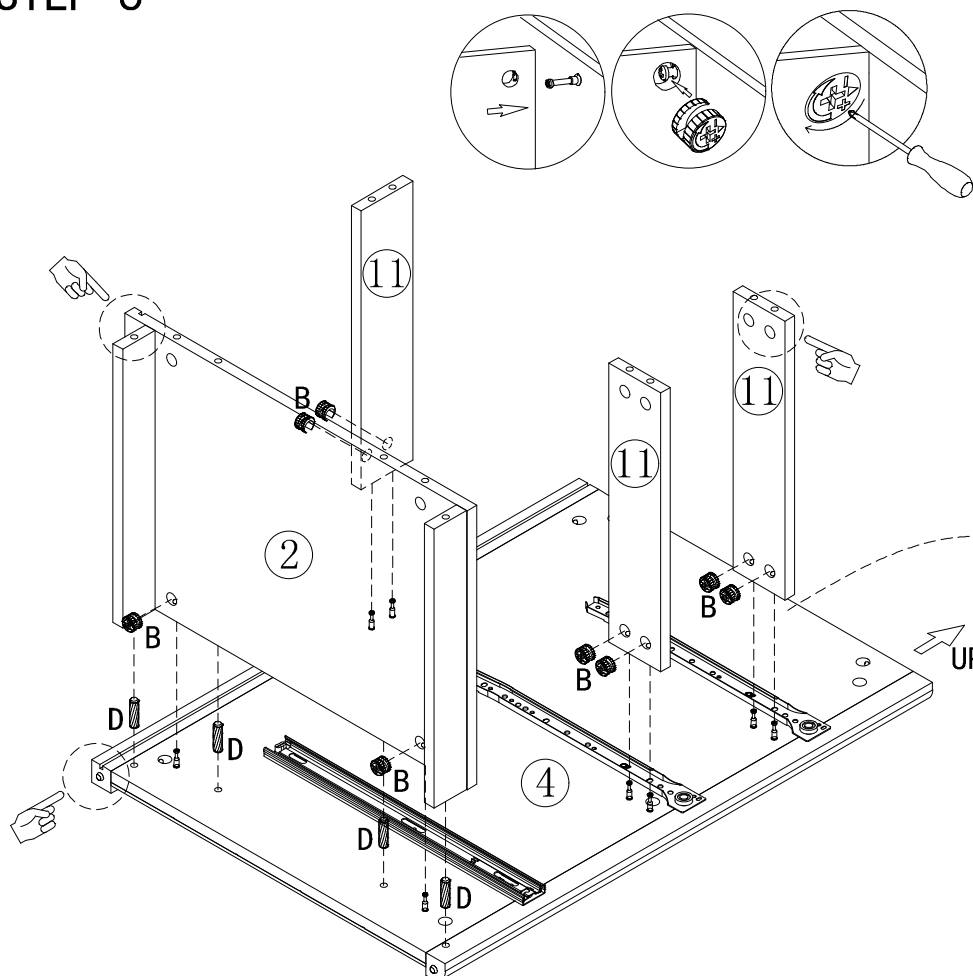






	B X 8PCS
	D X 4PCS

STEP 7

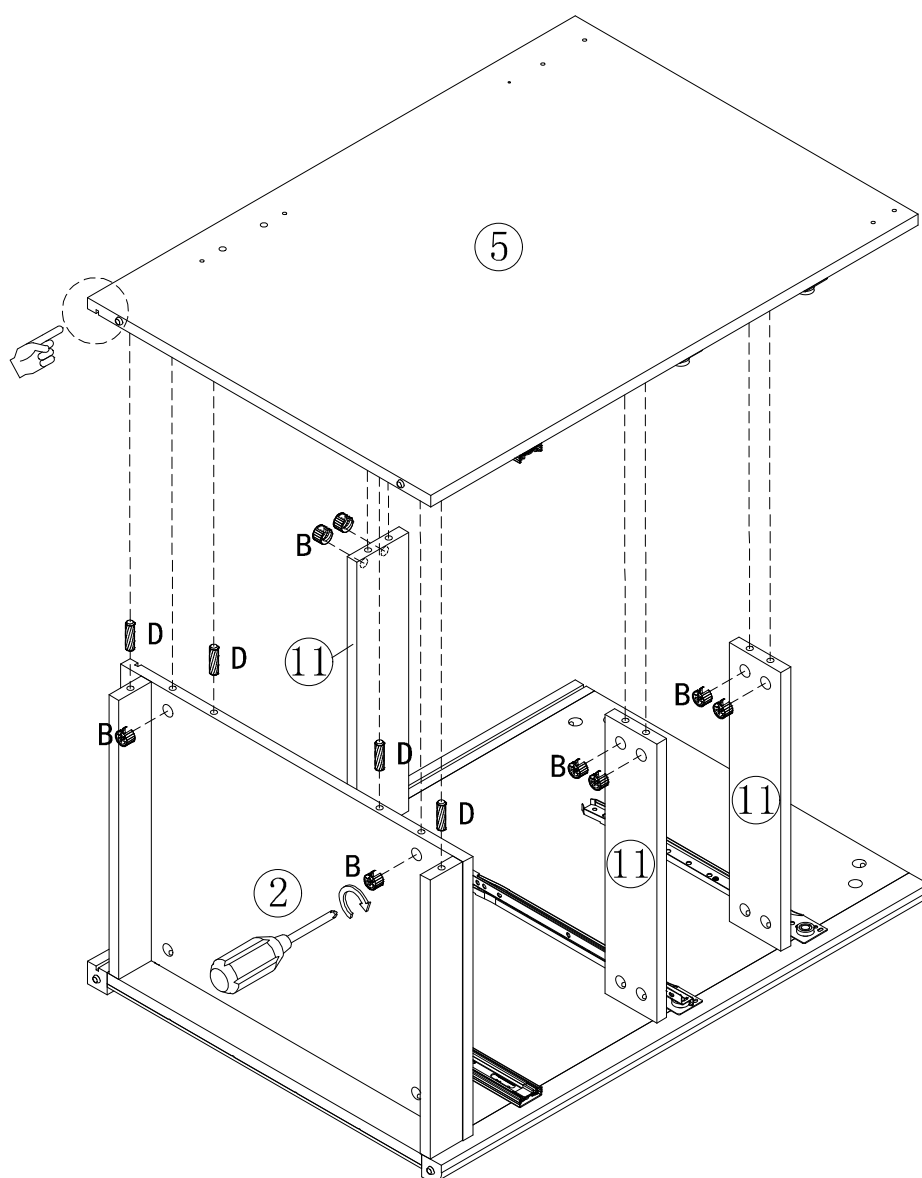
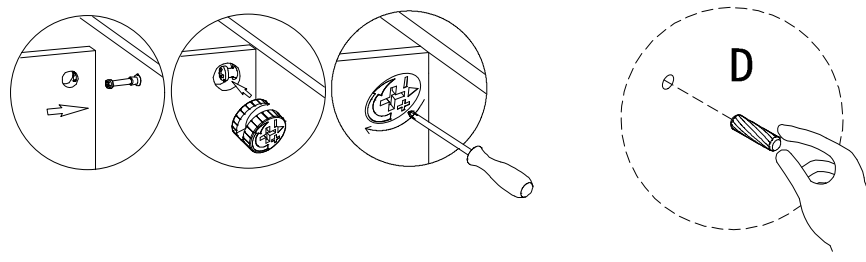


	B X 8PCS
	D X 4PCS

STEP 8

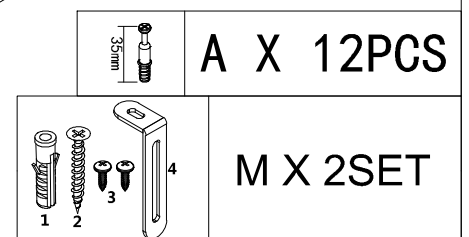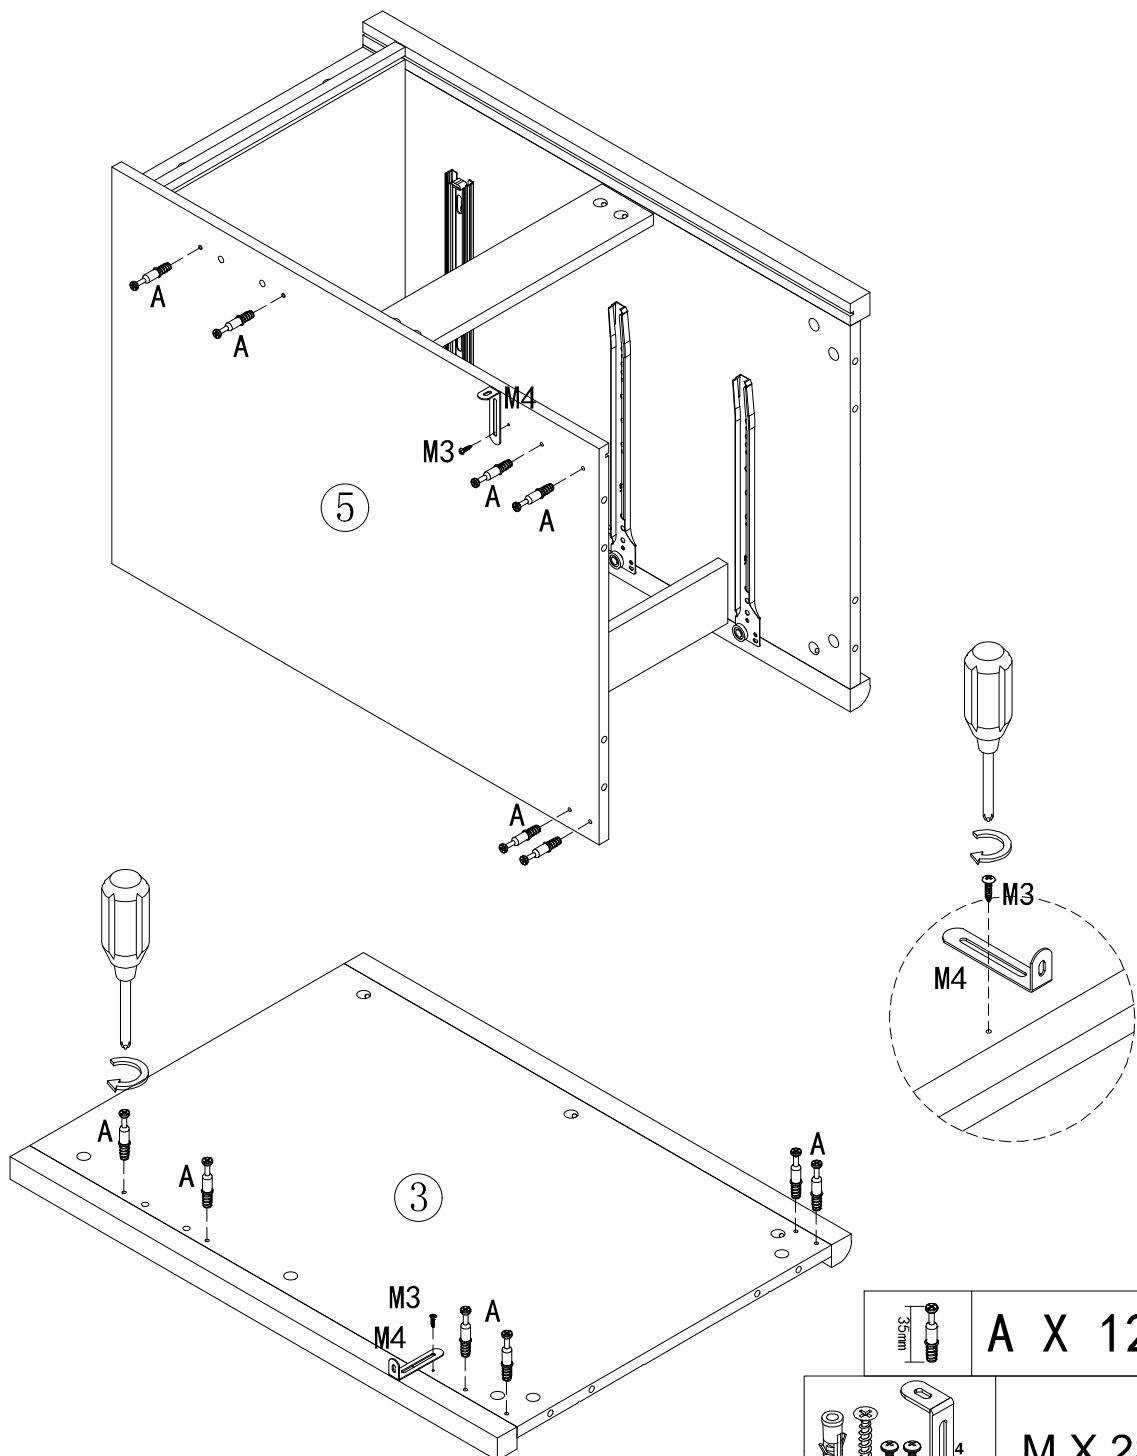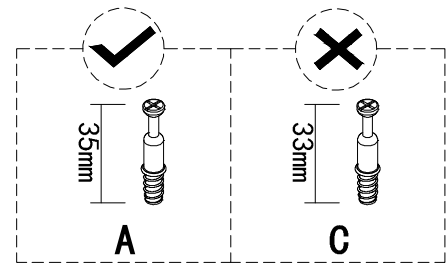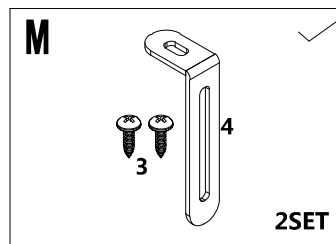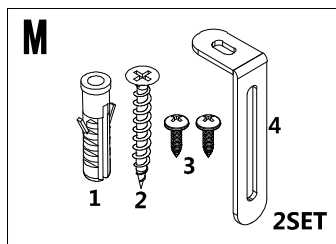


STEP 9

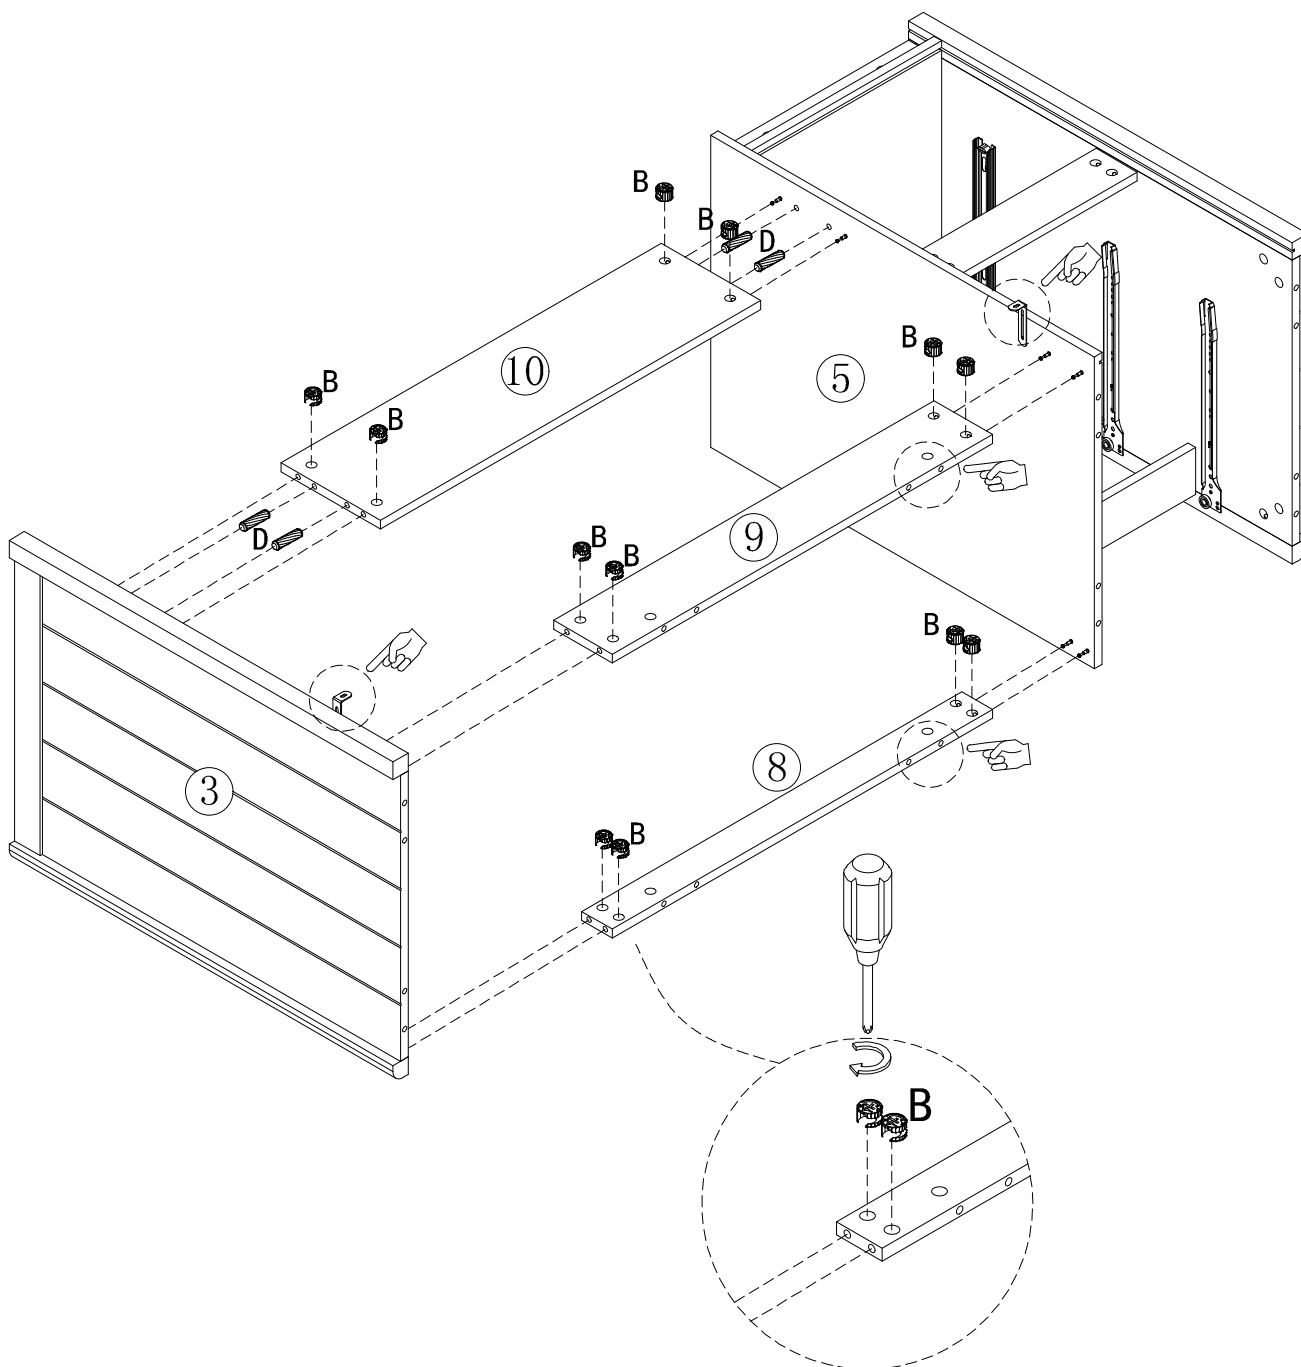
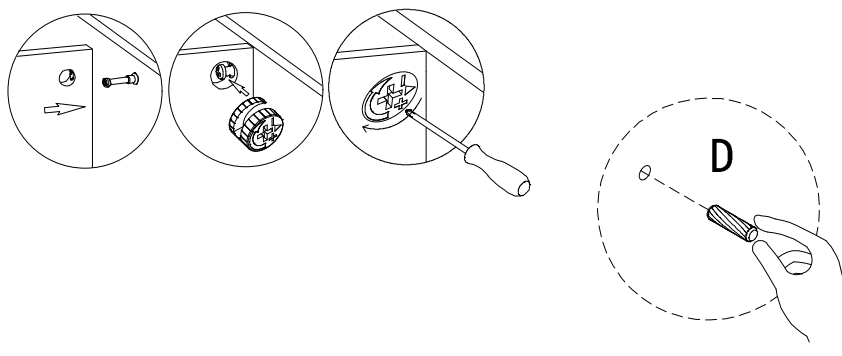


	B X 12PCS
	D X 4PCS

STEP 10

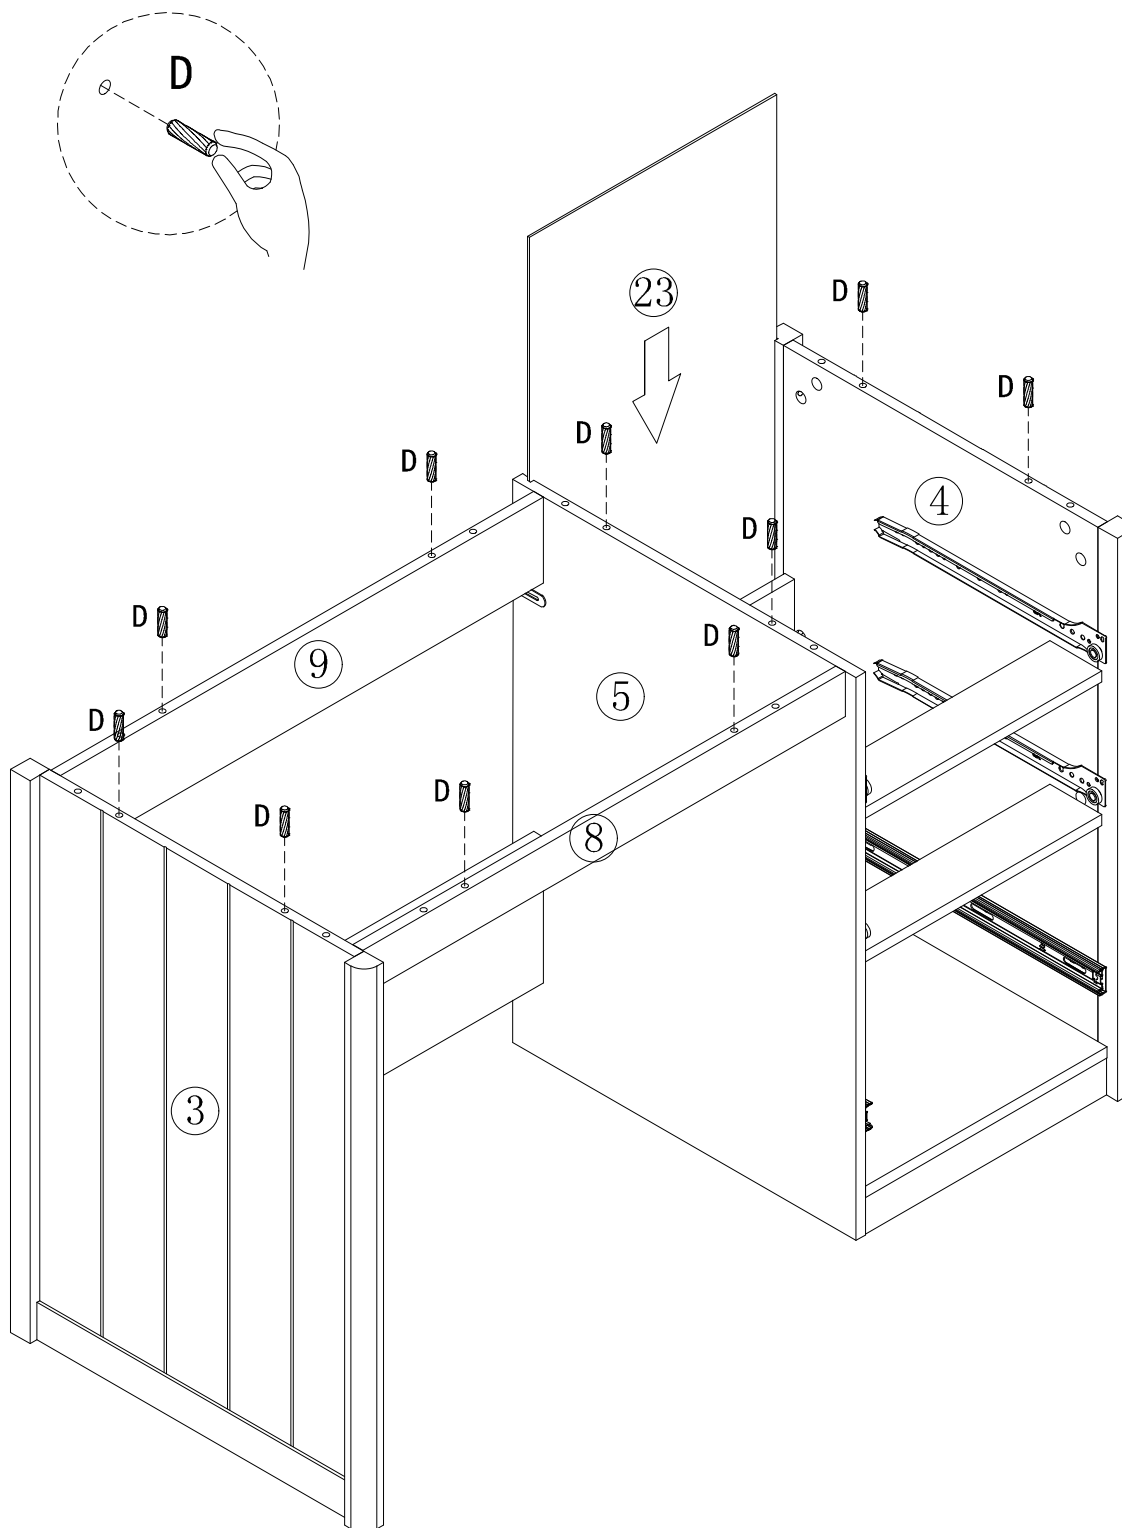


STEP 11

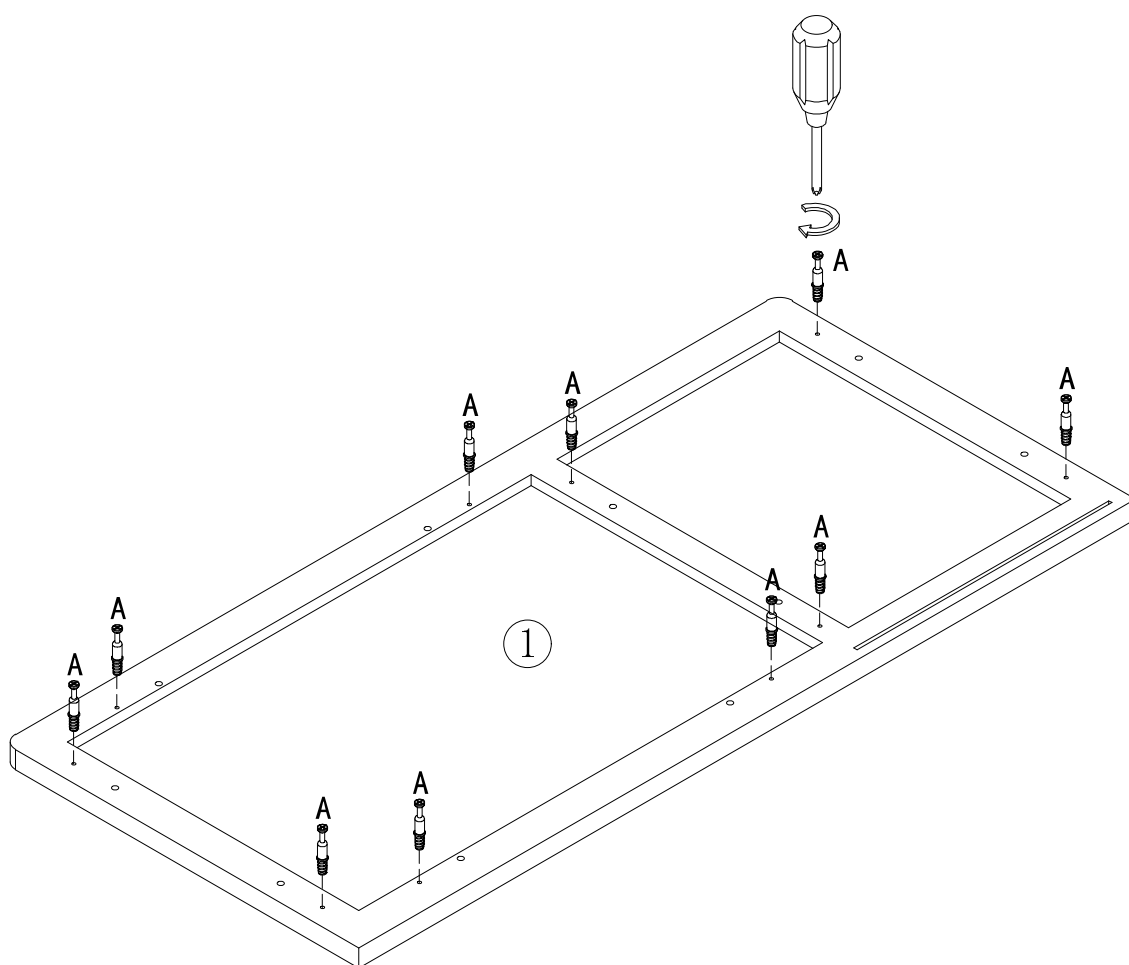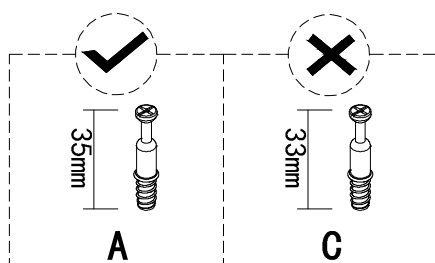


A X 10PCS

STEP 12

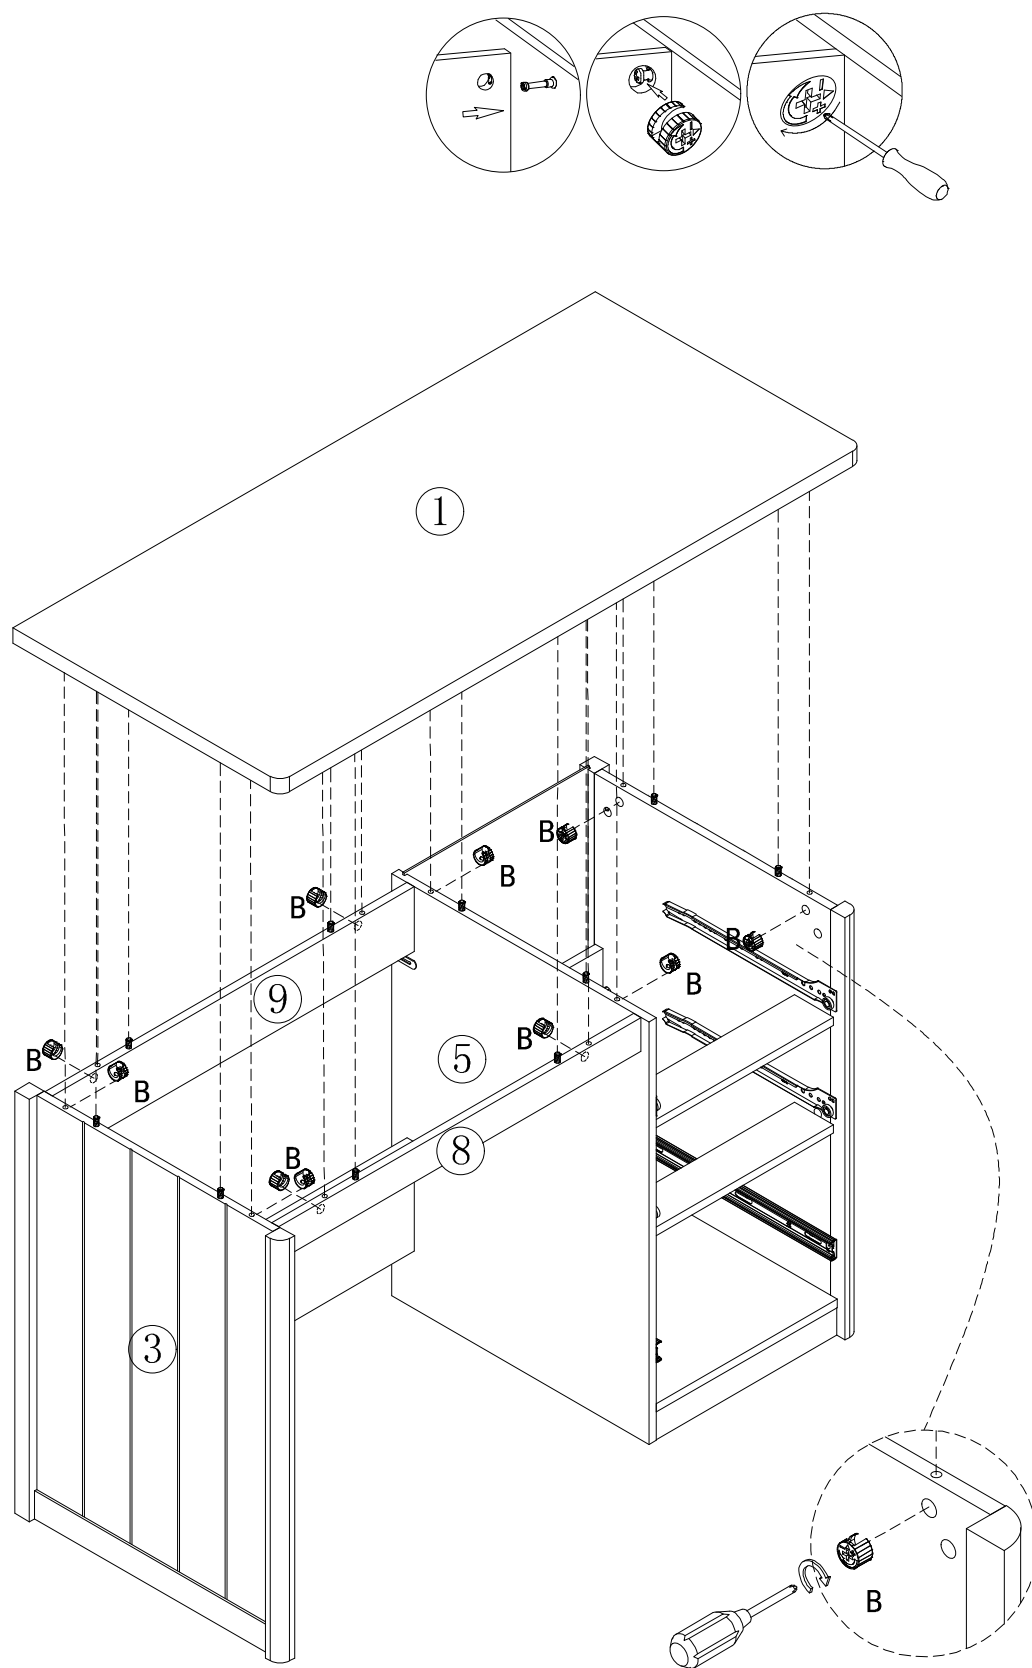


B X 10PCS

STEP 13

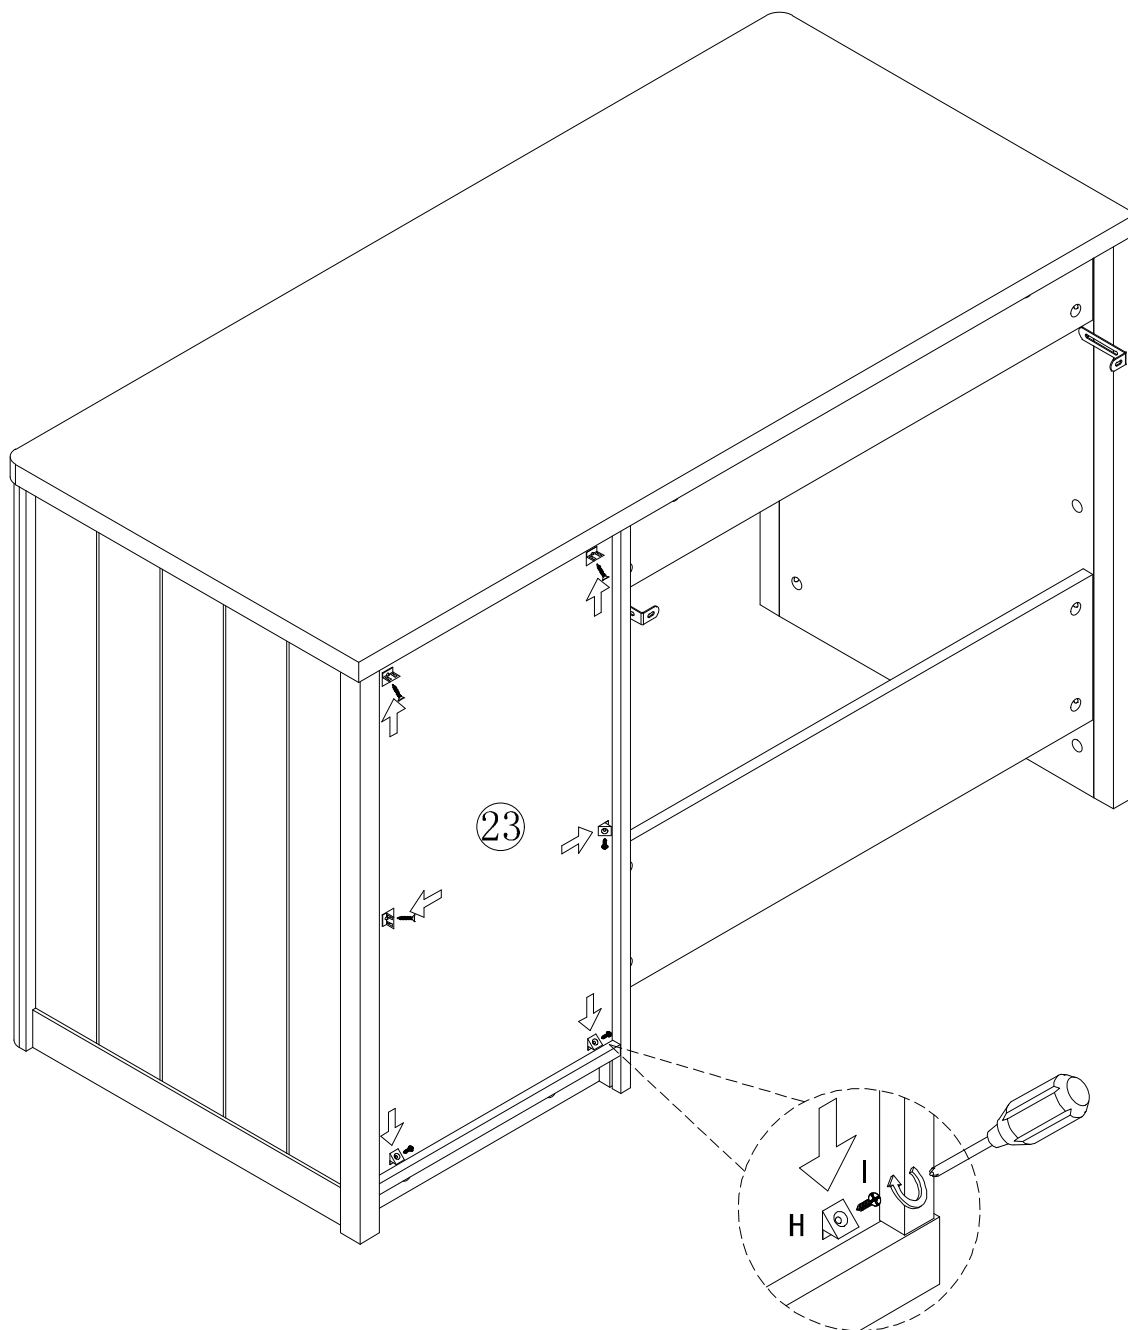




	H X 6PCS
	I X 6PCS

STEP 14


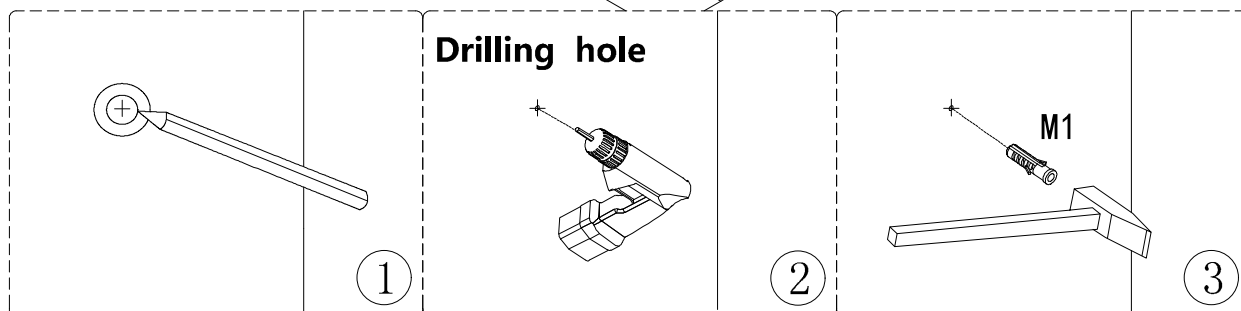


Drill a hole in the wall, then hammer the M1 into the wall with a hammer

Note: Follow step
Link M4 and M1 with a M2
using a screwdriver, and
assembly it tightly.

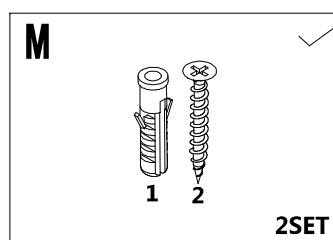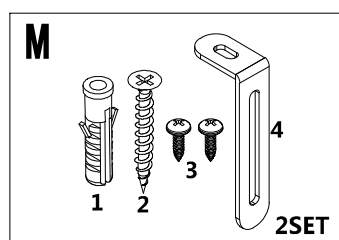
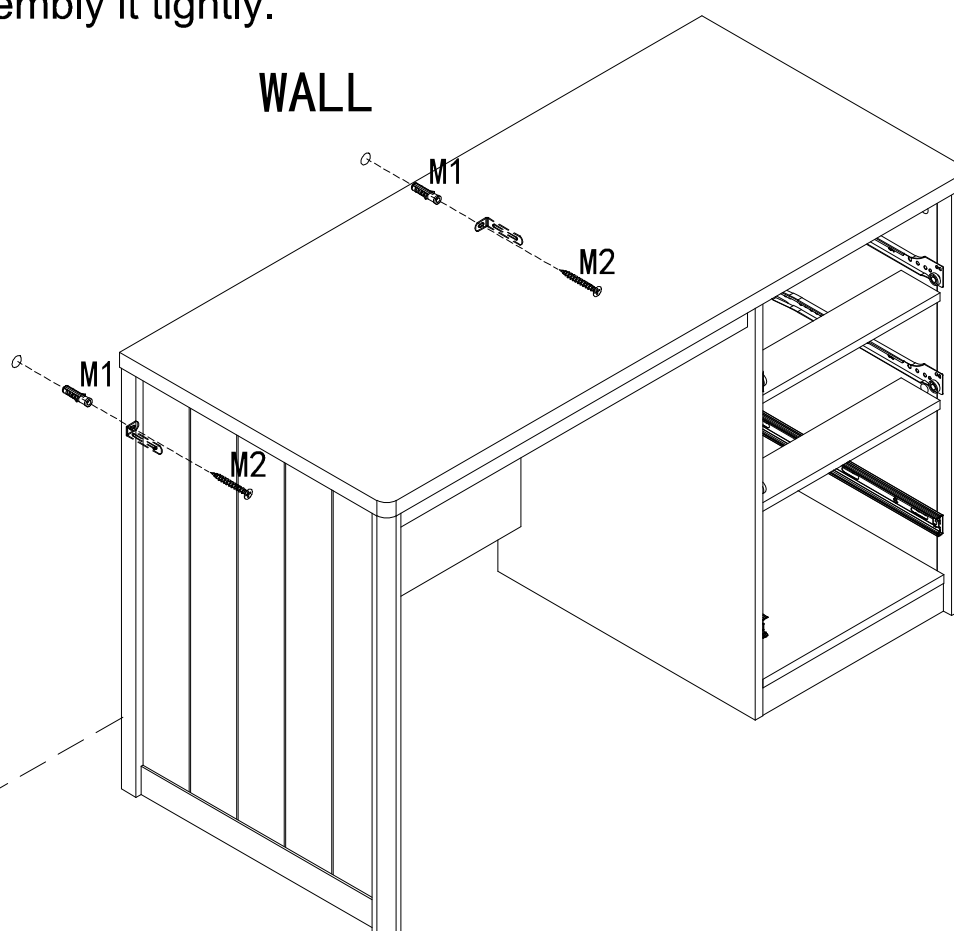


STEP 15


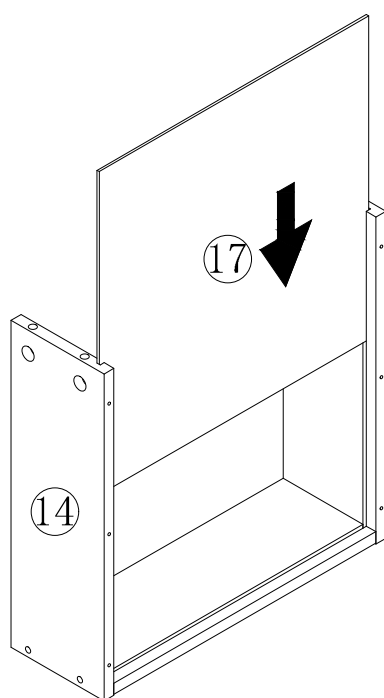
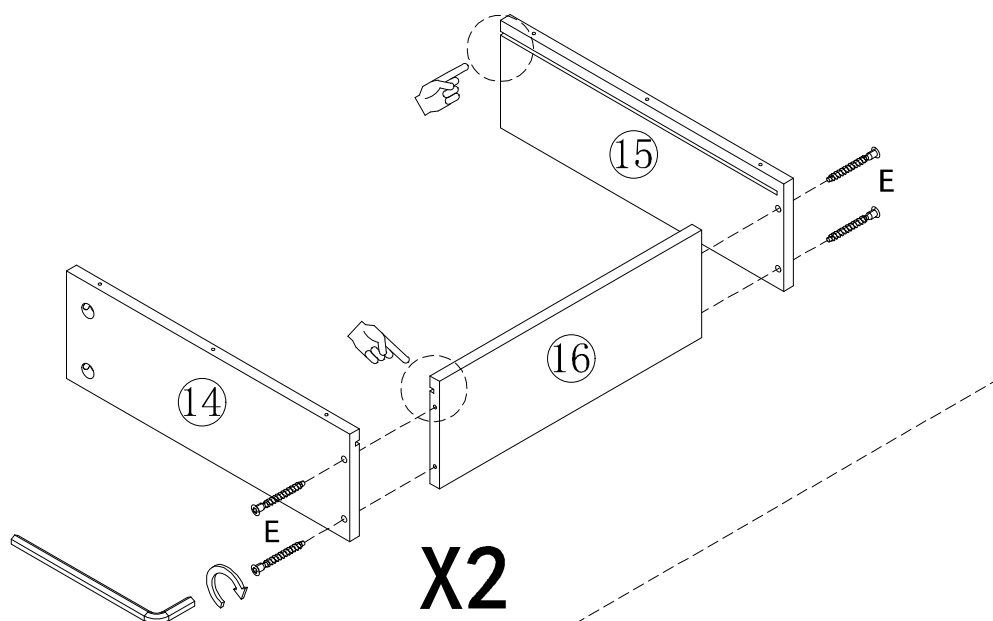


E X 8PCS

STEP 16

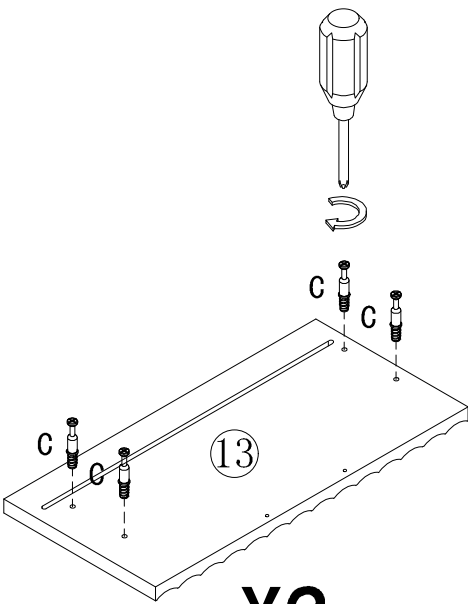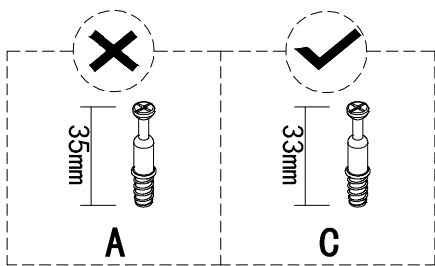


X2

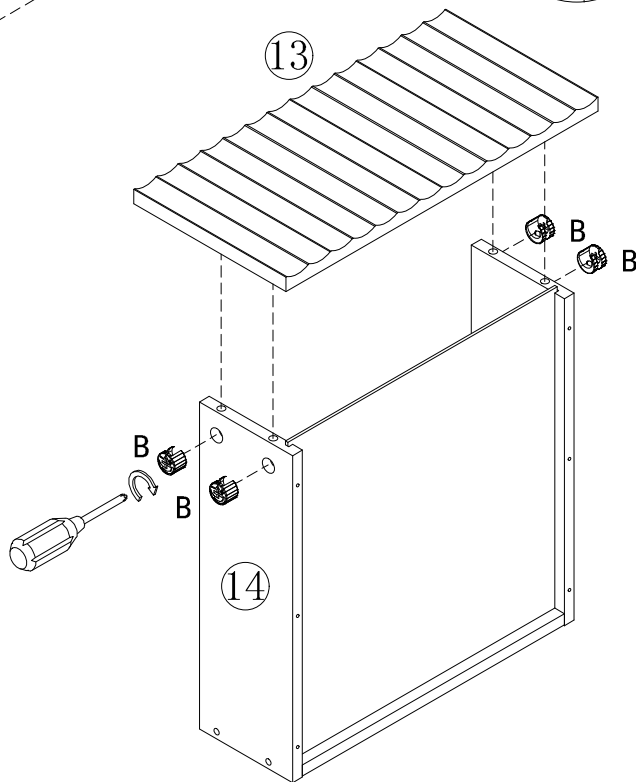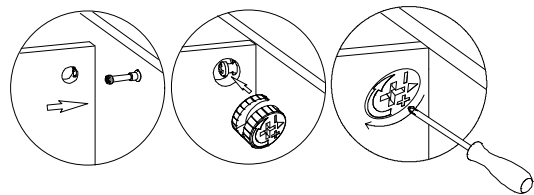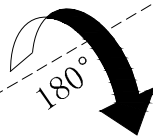

X2


	C X 8PCS
	B X 8PCS

STEP 17

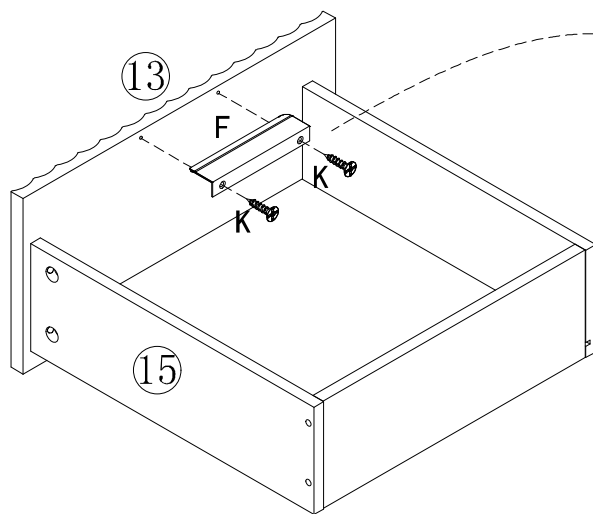

X2



Pay attention to the hole position.

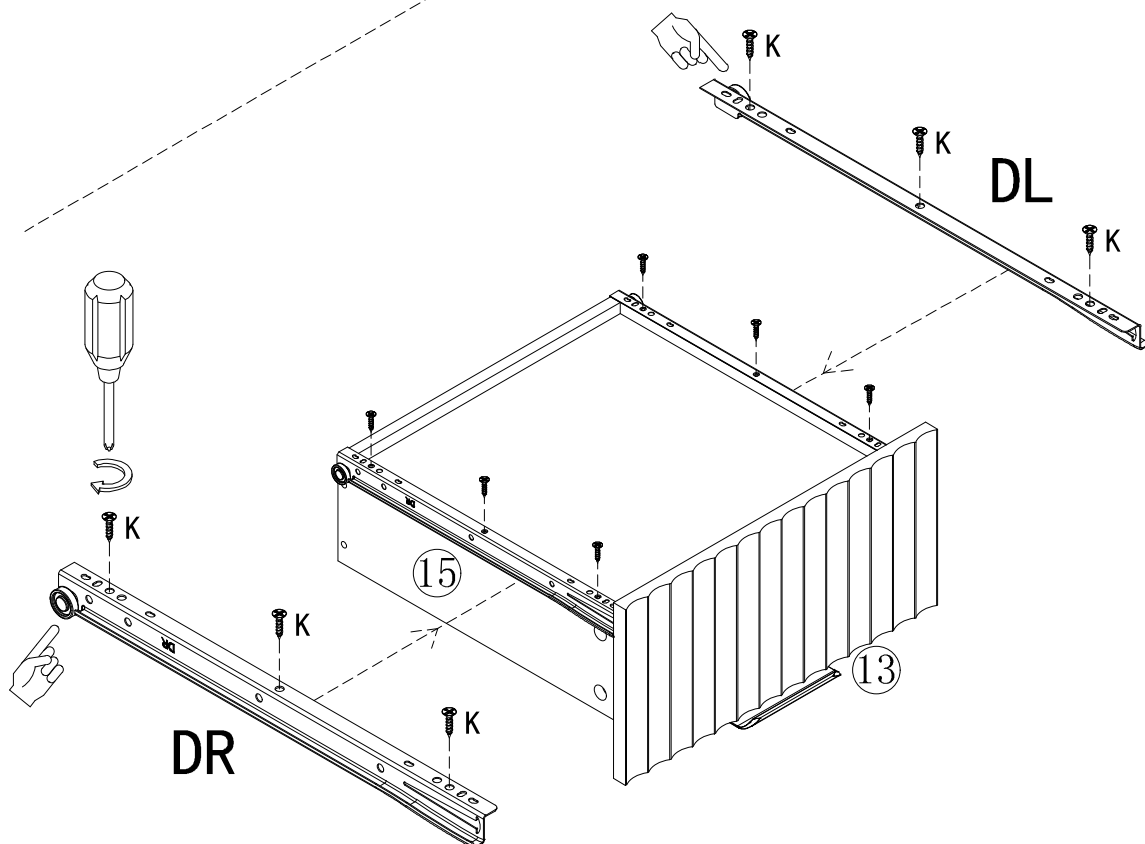


X2

	F X 2PCS
	K X 16PCS

STEP 18



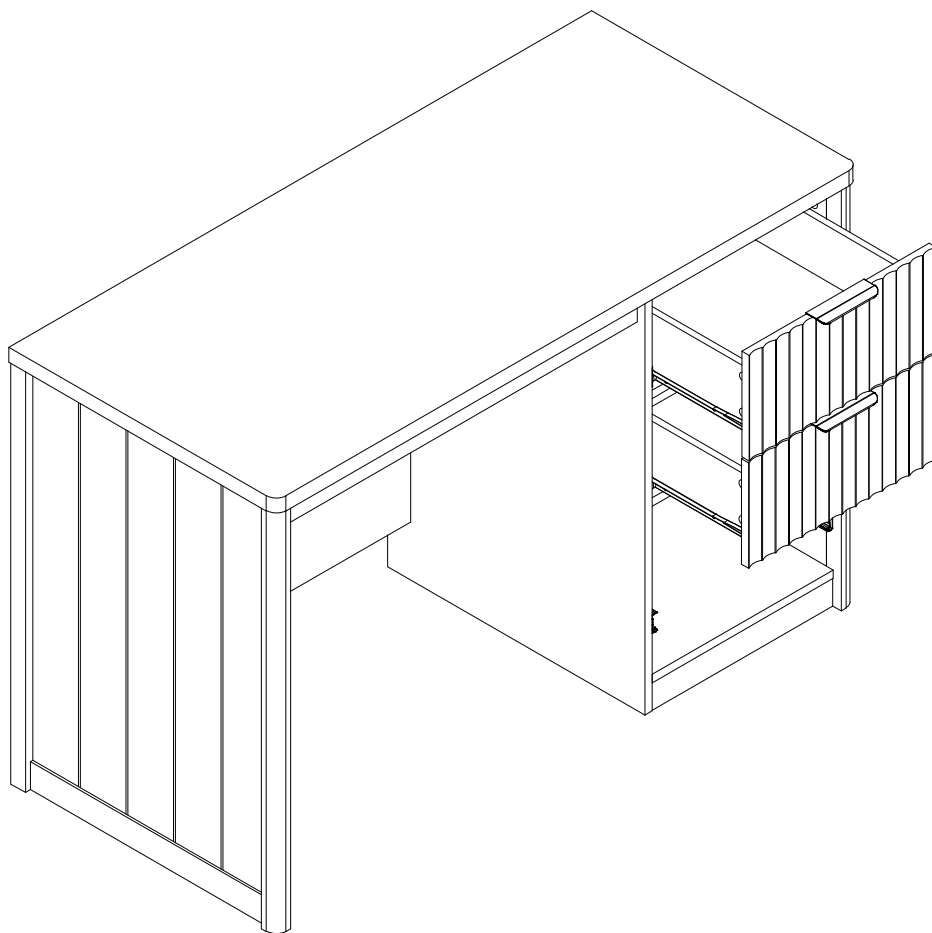
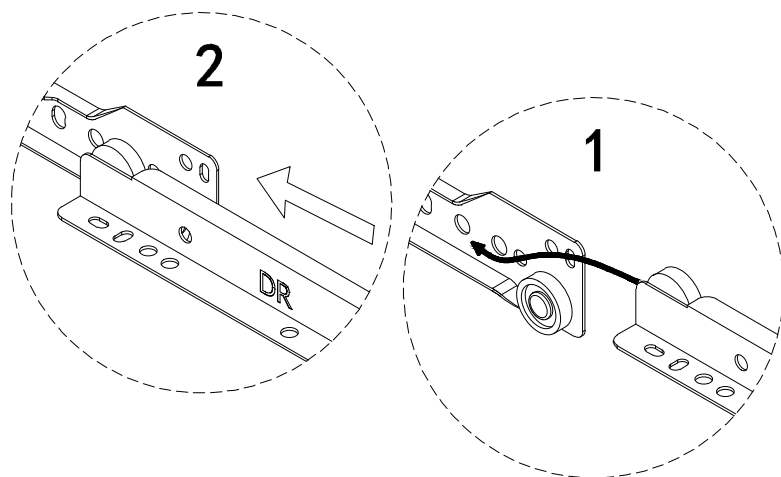


STEP 19

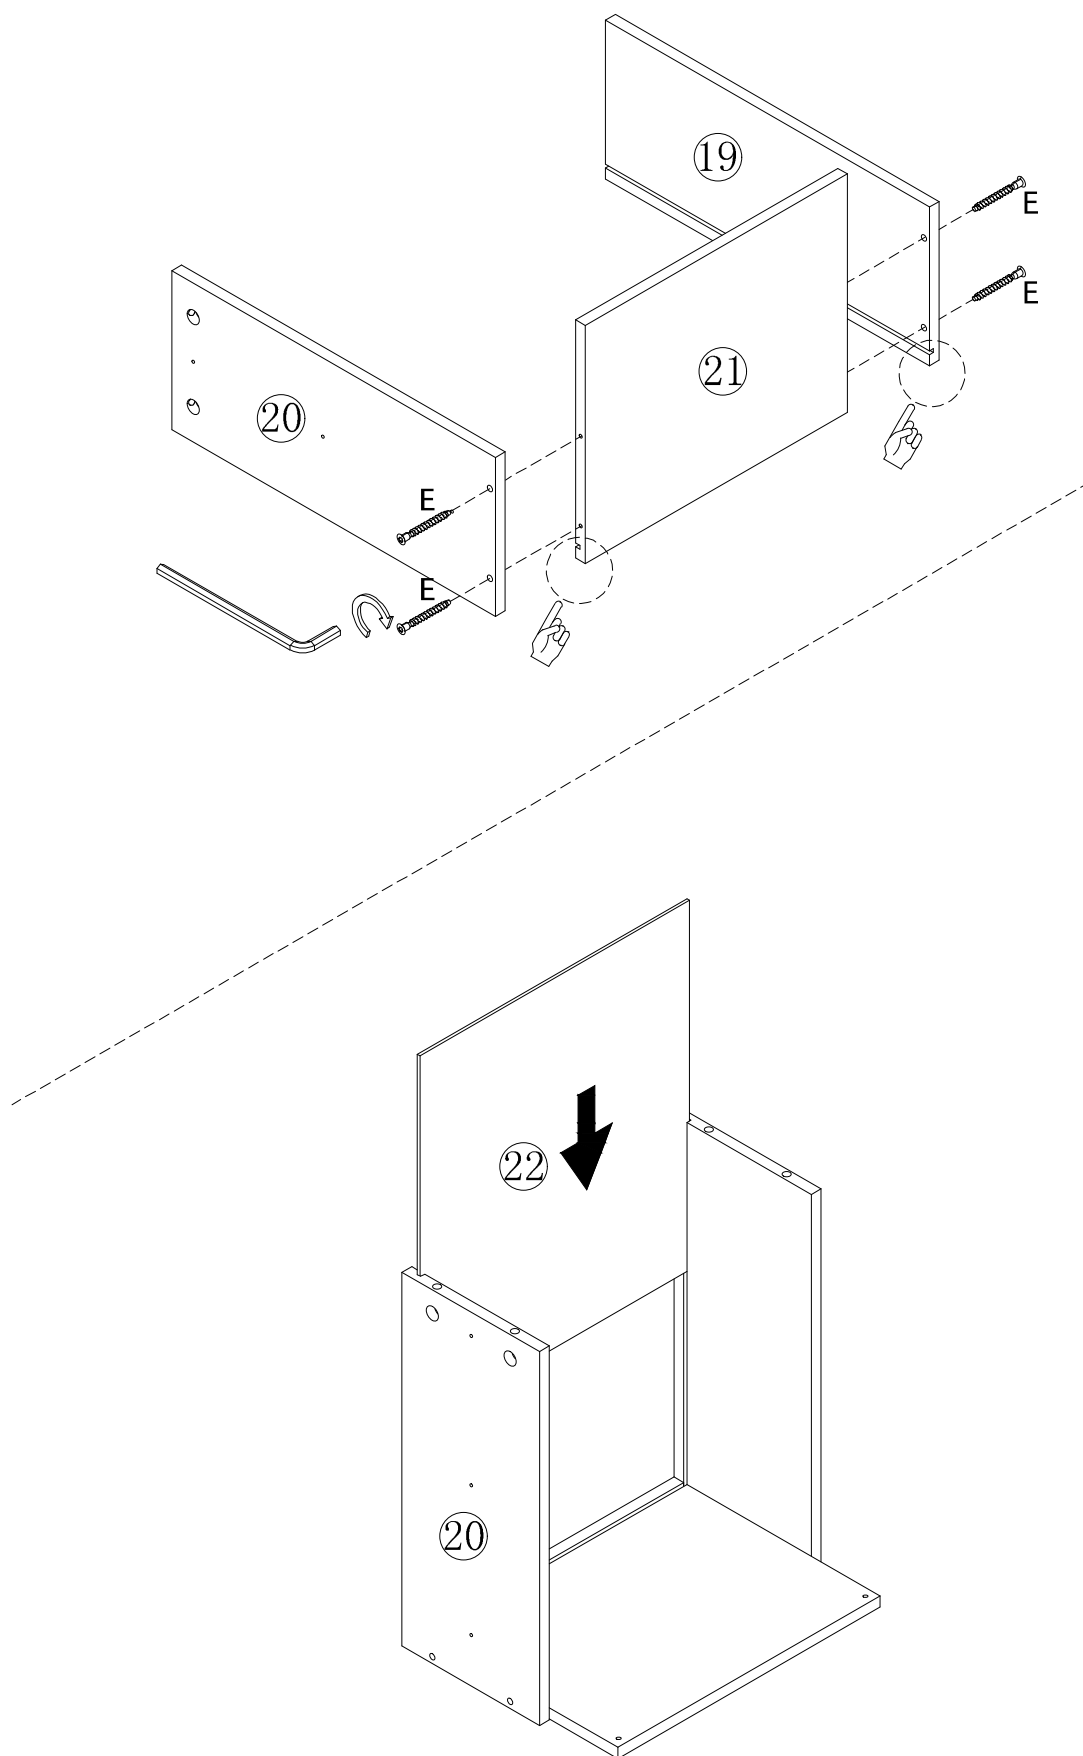



E X 4PCS

STEP 20

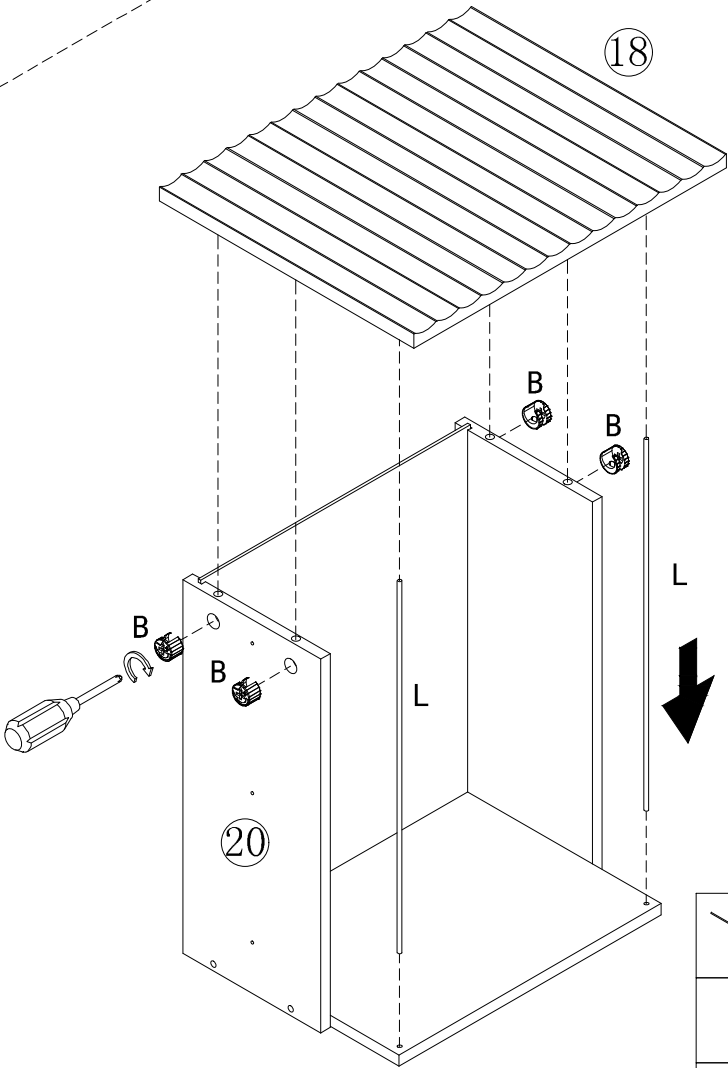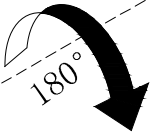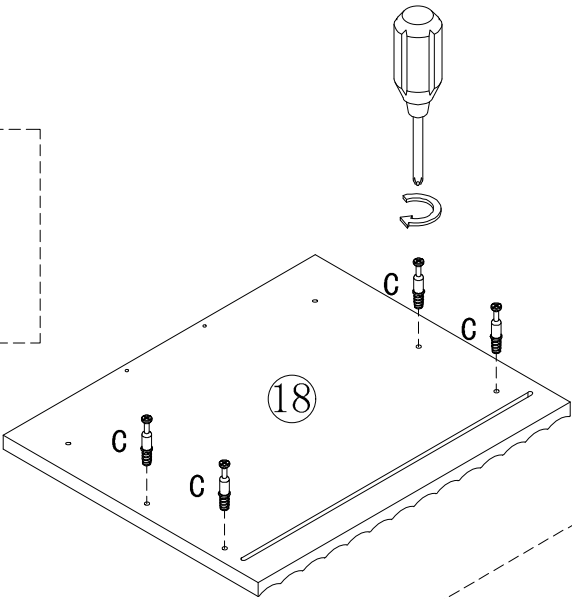
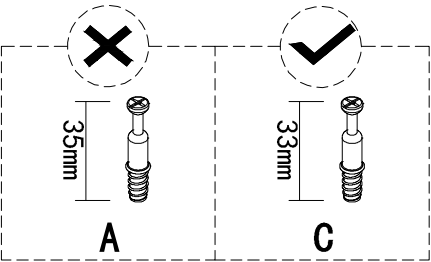


	L X 2PCS
	C X 4PCS
	B X 4PCS

STEP 21

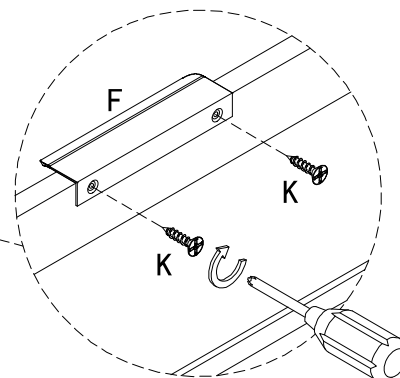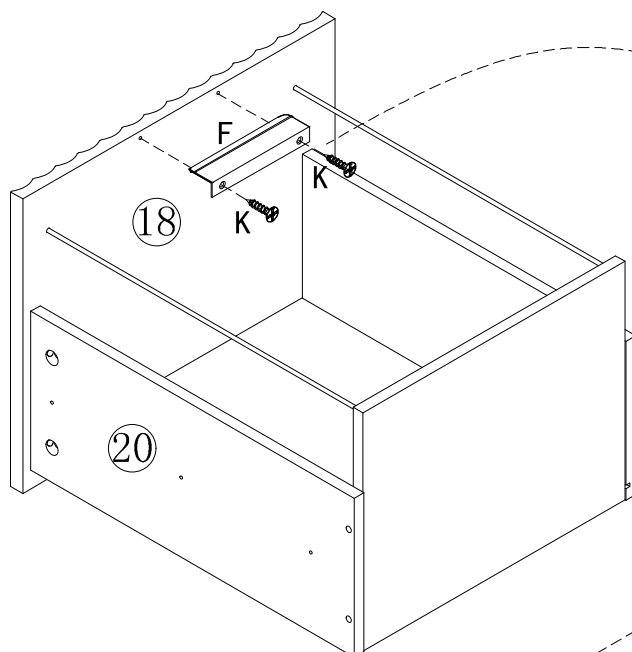

G2

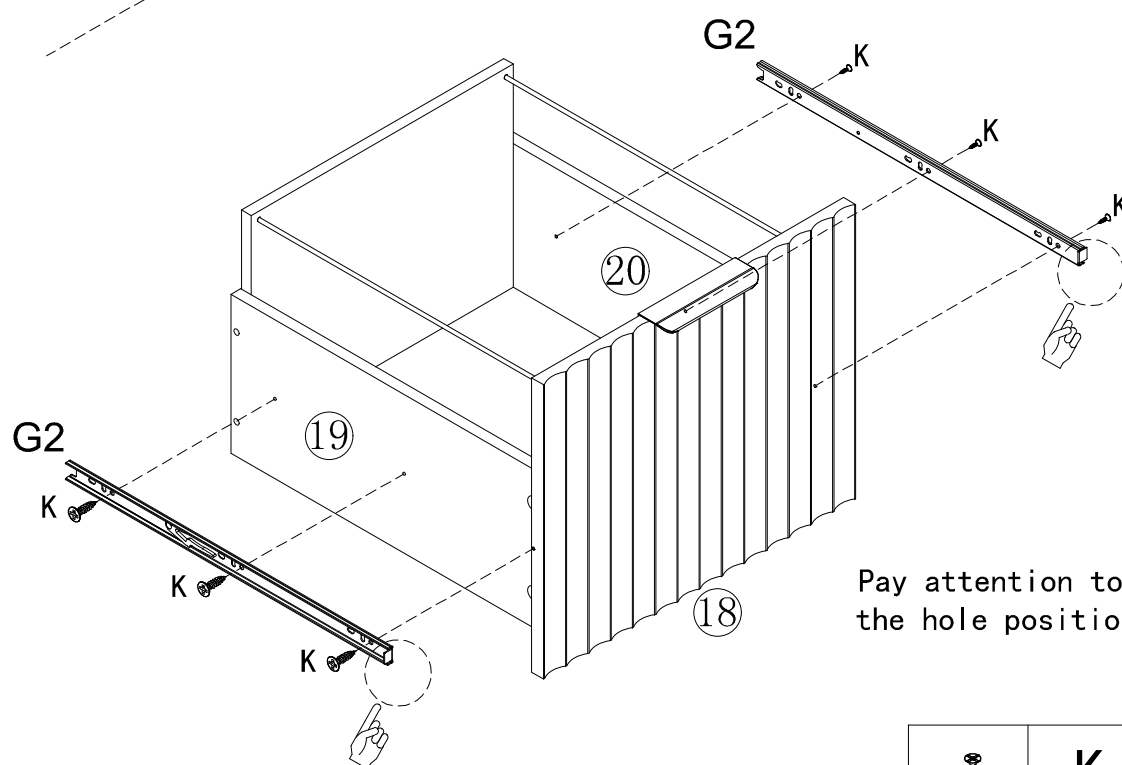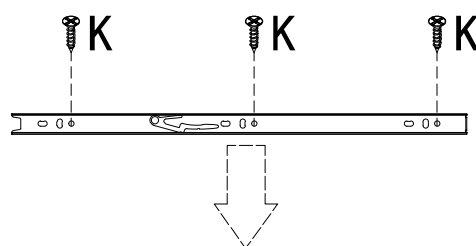

Pay attention to the hole position.

	K X8PCS
	F X1PCS

STEP 22

