



















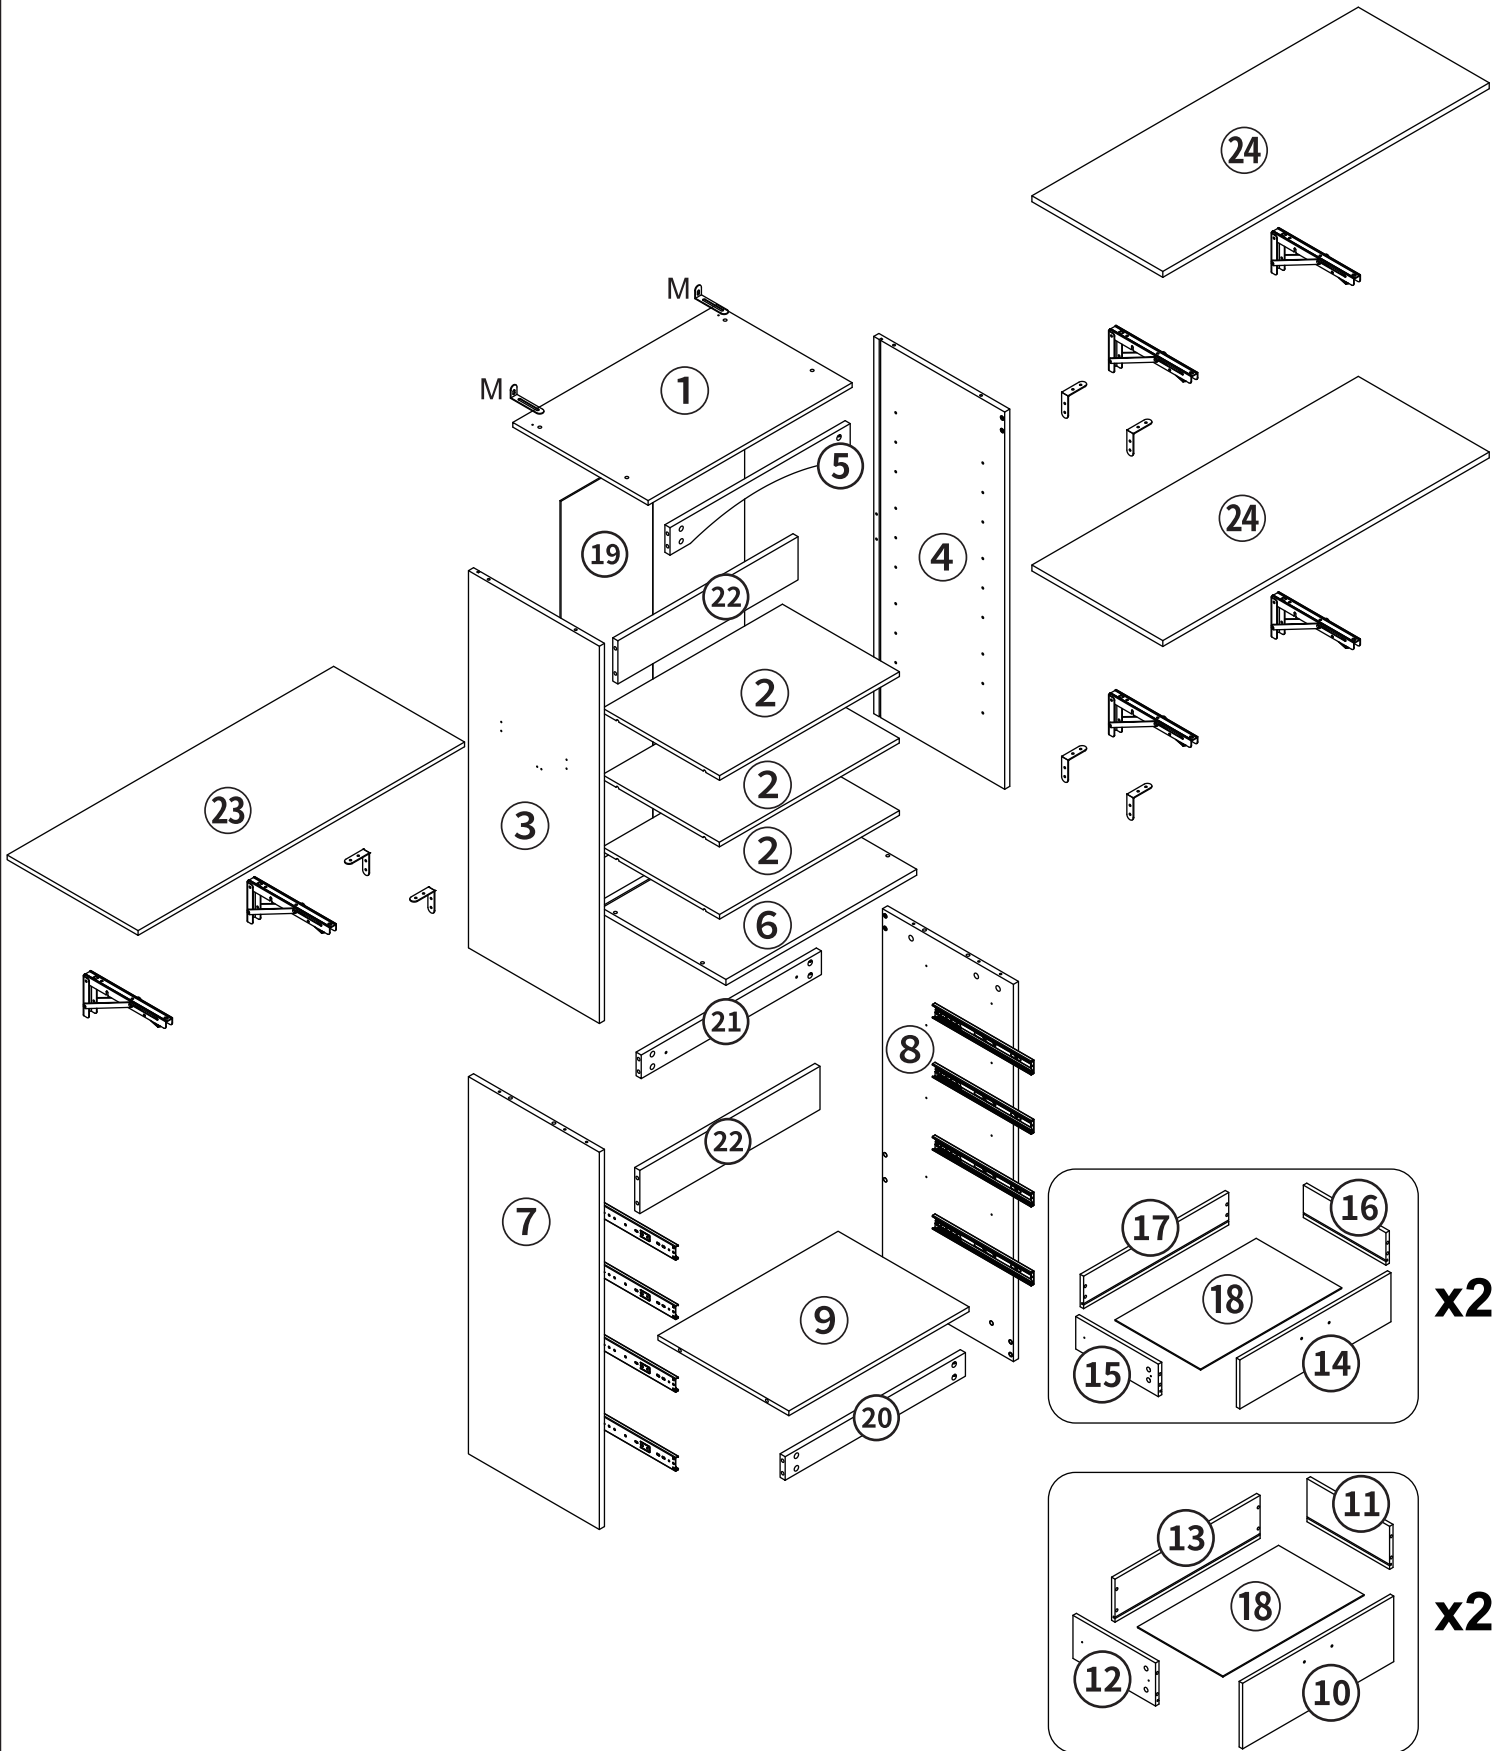


If there are any questions during the assembly process, please contact us
A video and description about the step you were stucked will help us to understand the problem quickly.

Package Contents: Parts

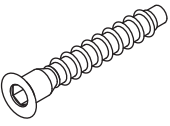


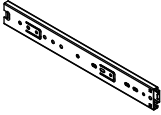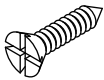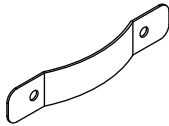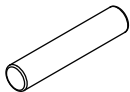Package Contents: Hardware

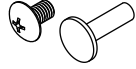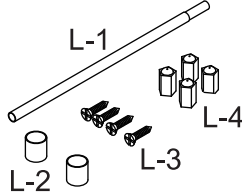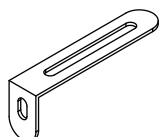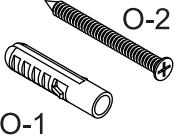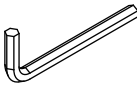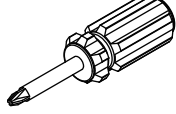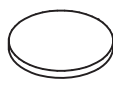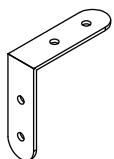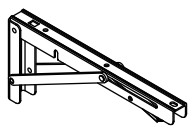
A x 24+3	B x 46+5	C x 46+5	D x 8	E x 32+4	F x 4
					
M6.3x45				ST3.5X12	
G x 4+1	H x 12+2	I x 12+2	J x 12+2	K x 12	L x 3
					
M8	ST3x12				L-1 L-2 L-3 L-4
M x 2	N x 38+3	O x 16+2	P x 2	Q x 1	R x 50+6
					
	ST4x12	O-1 O-2			dot stickers
S x 6	T x 6				
					

Installation Of Bracket






• The way of bracket deployment.

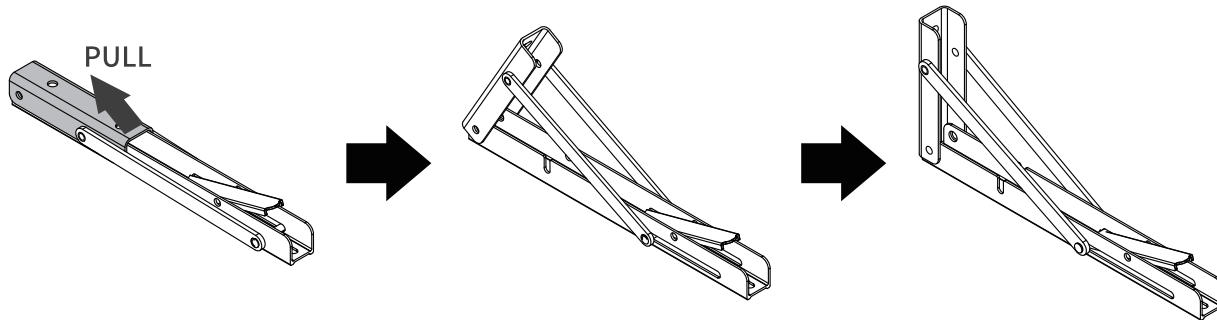


• The way of folding the bracket.

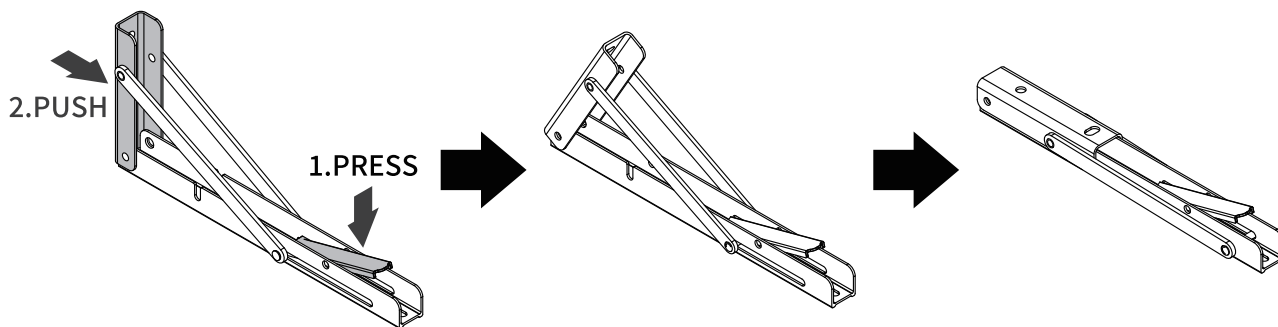

Installation Of Eccentric Unit

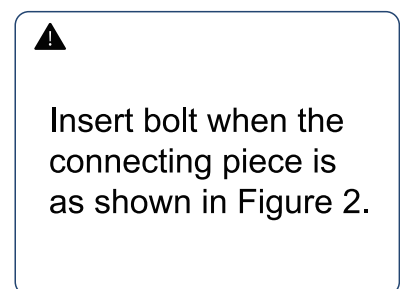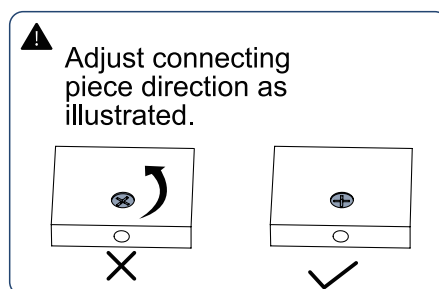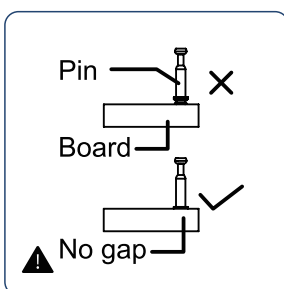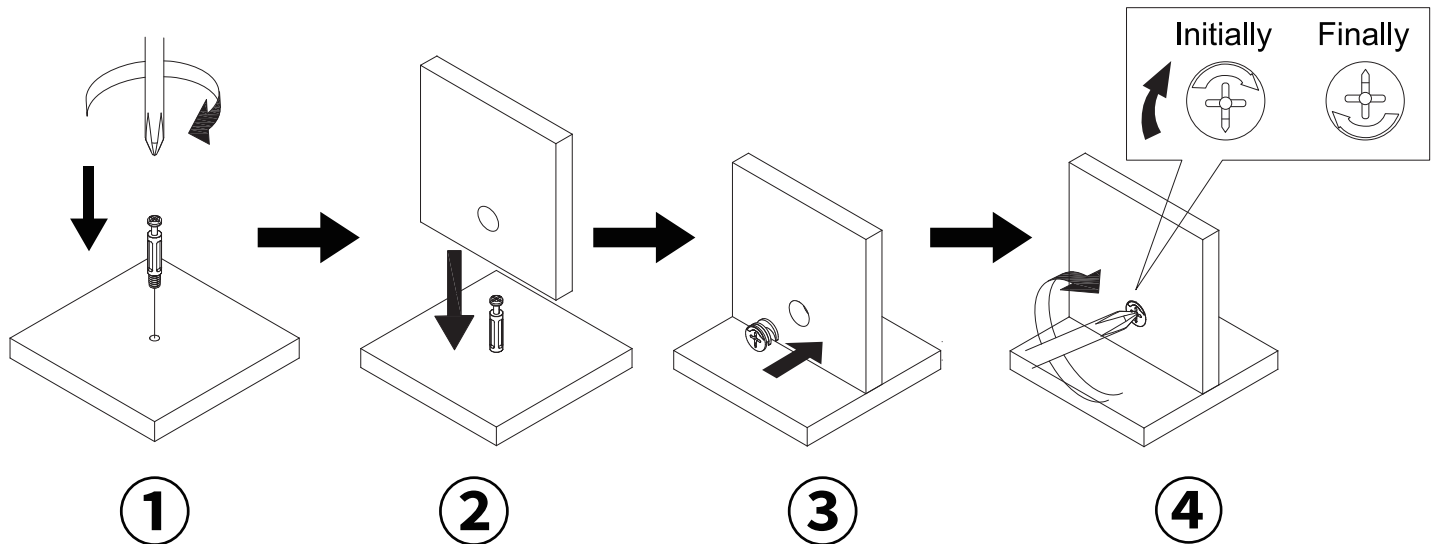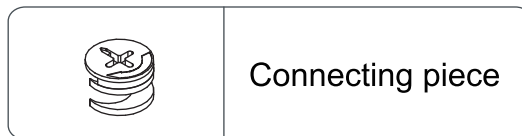

1

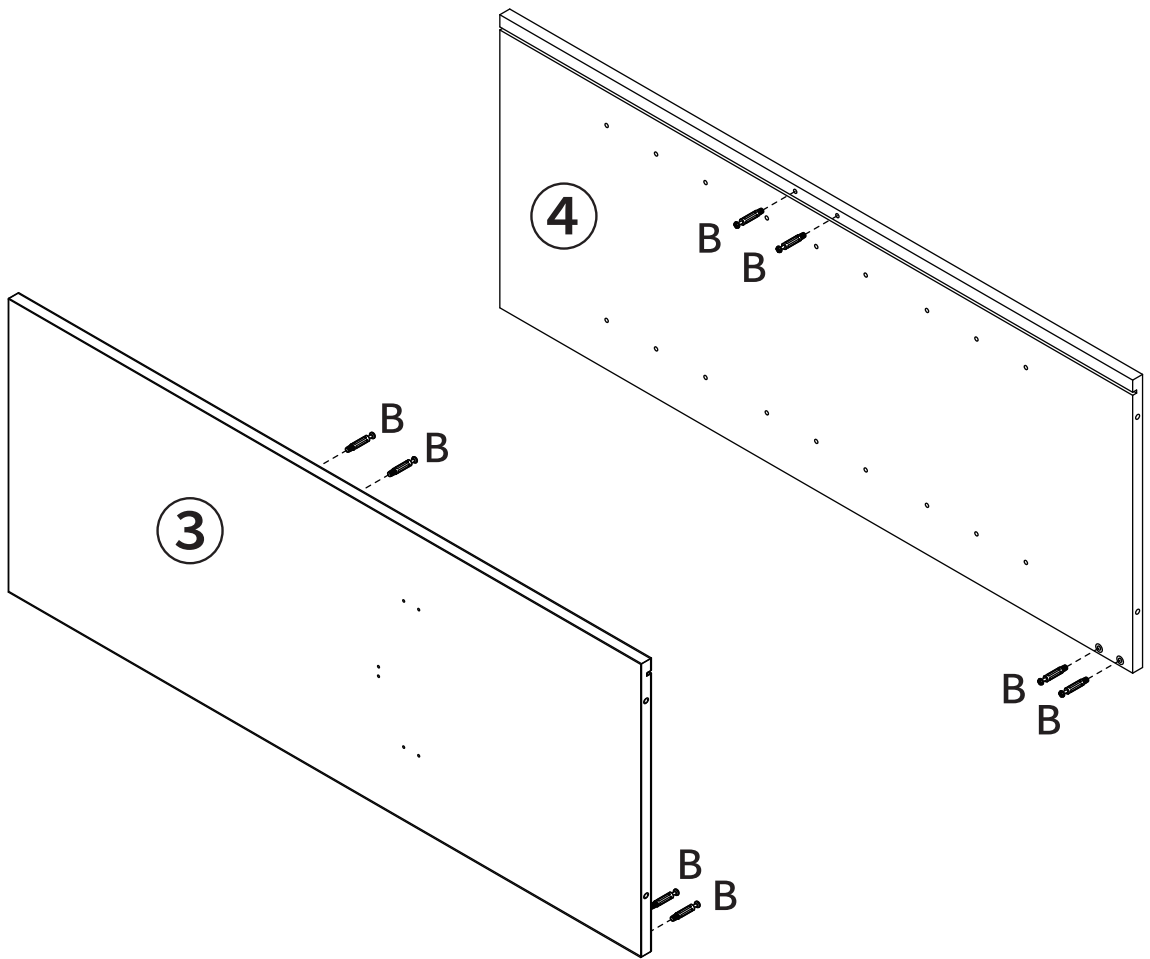


B×8



Twist (B) into the holes on (3)(4) as displayed.

2

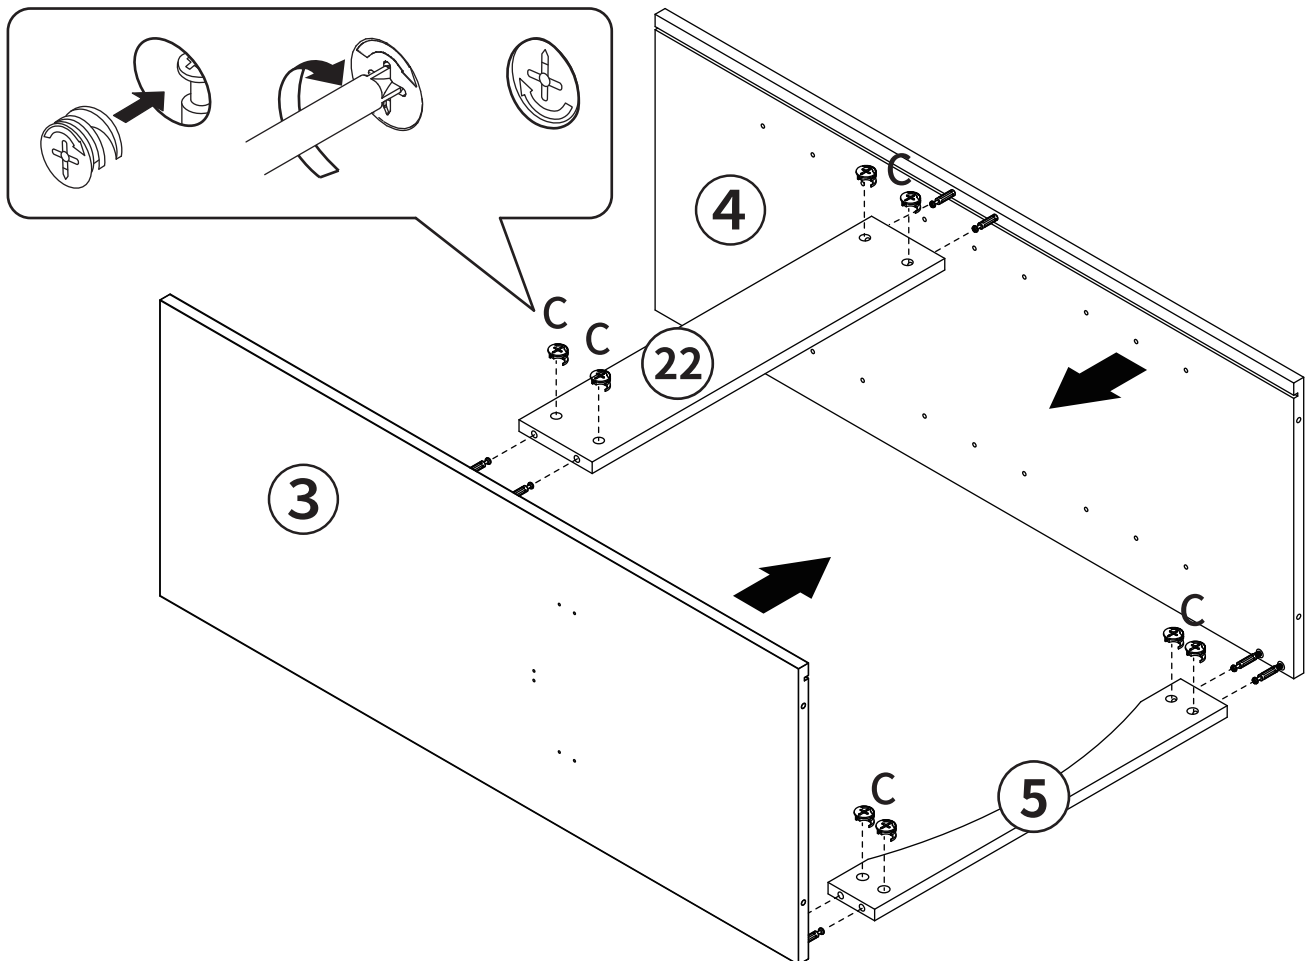


C×8




Connect (5)(22) with (3)(4), securing with (C).

3

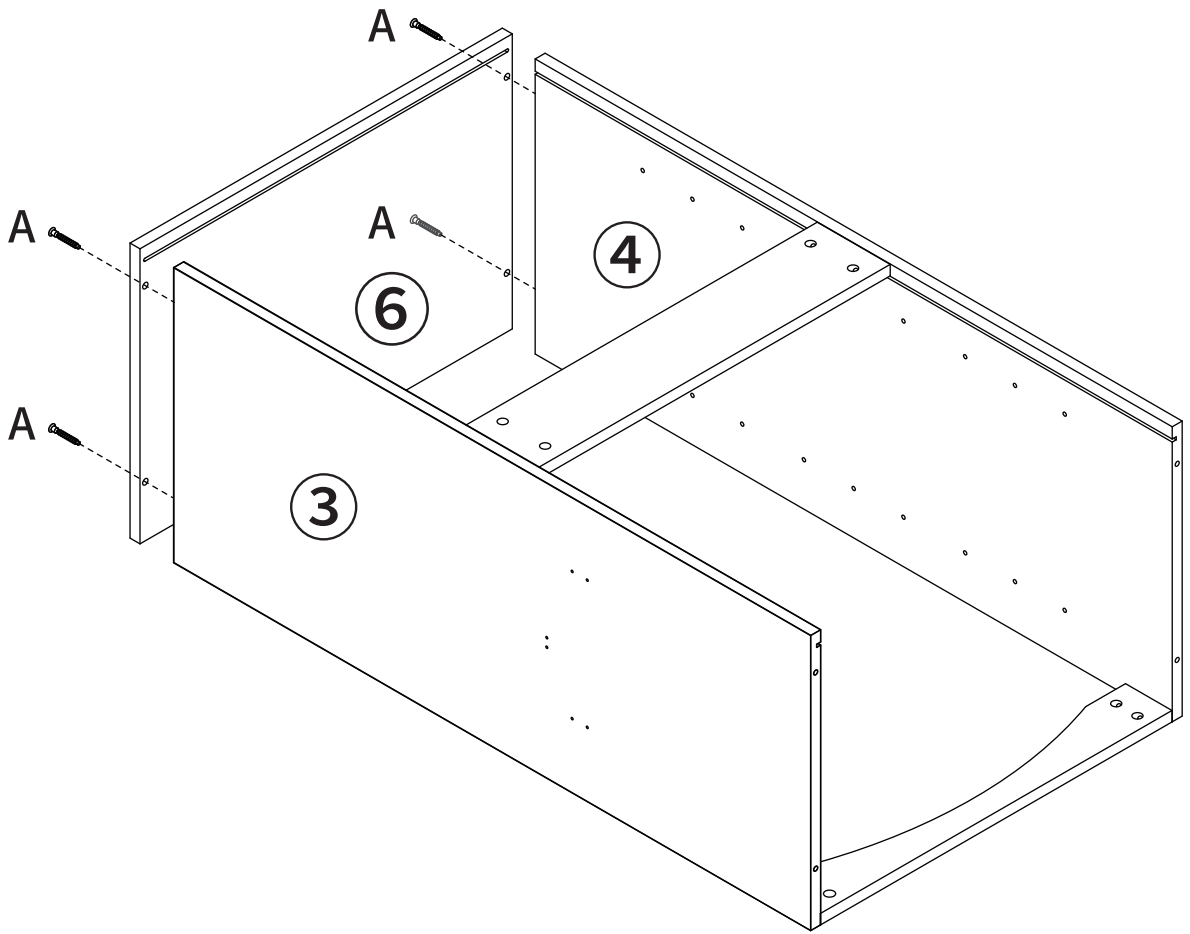


A×4

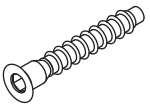


Twist (A) to connect (6) with (3)(4).

4

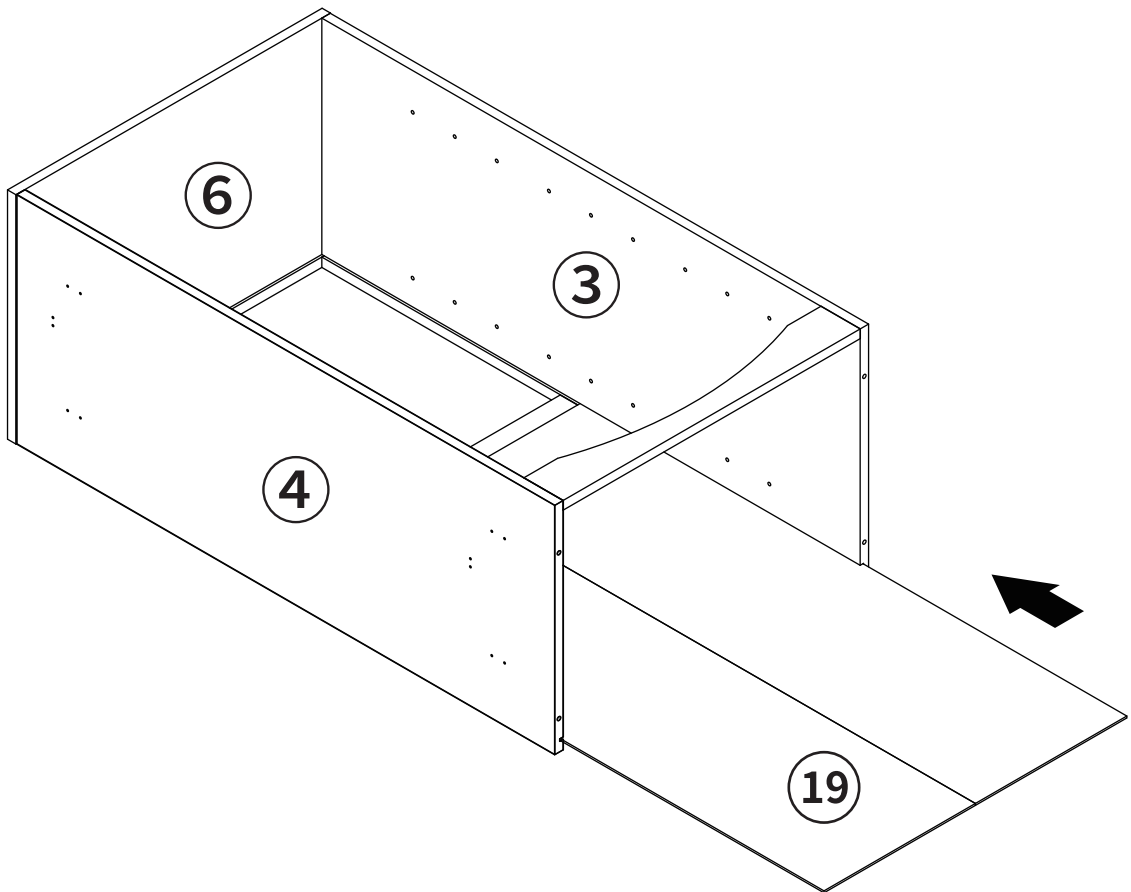


Insert (19) into the grooves on Board(3)(4)(6).

5

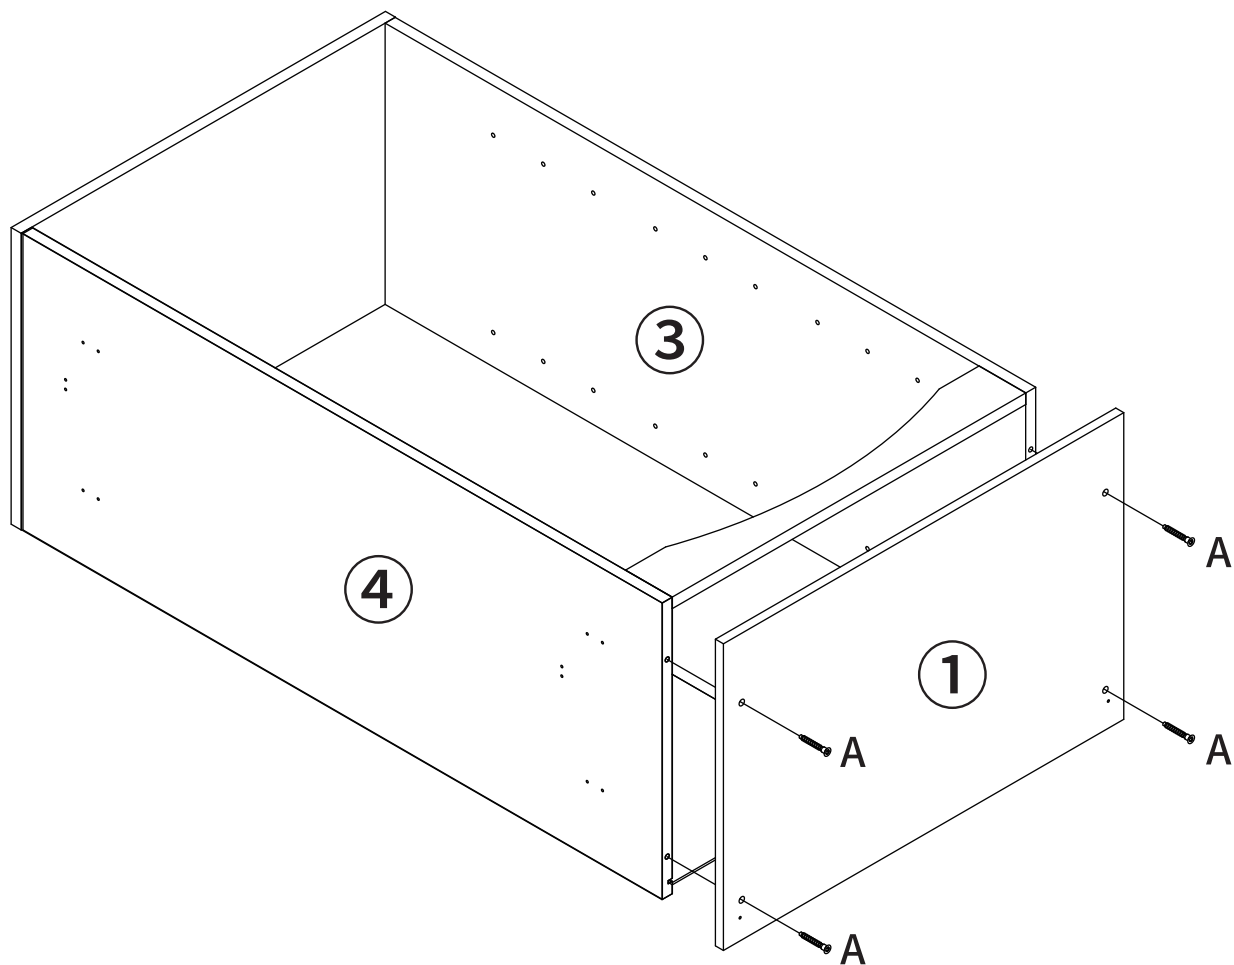


A×4

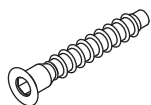

Twist (A) to connect (1) with (3)(4).

6

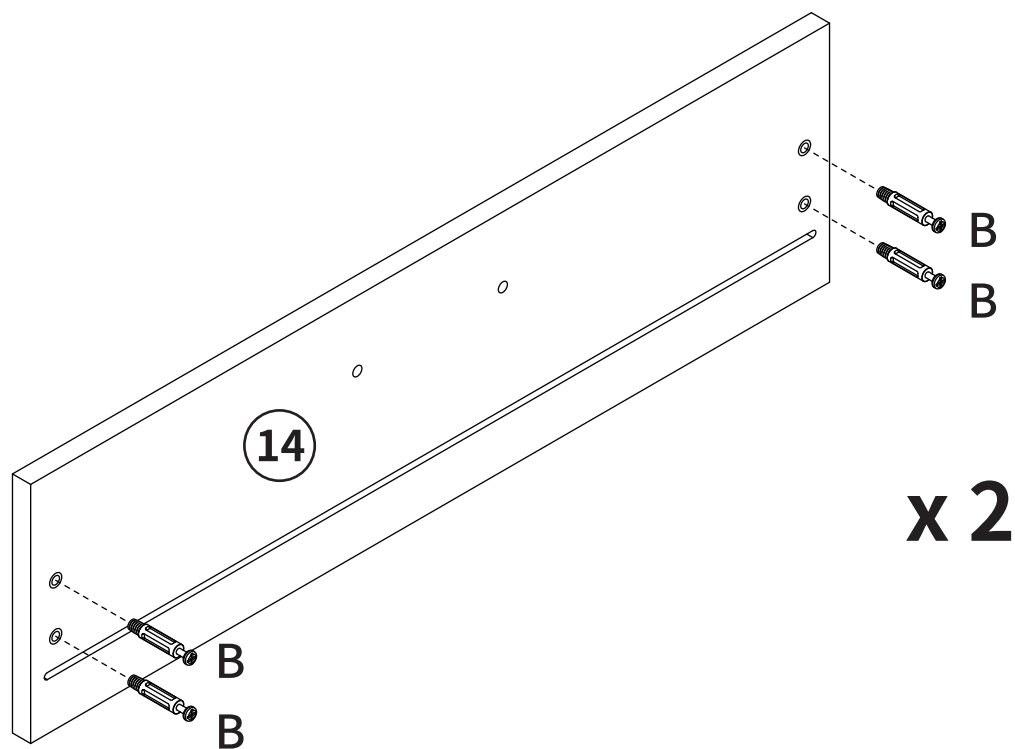


B×8



Twist (B) into (14).

7

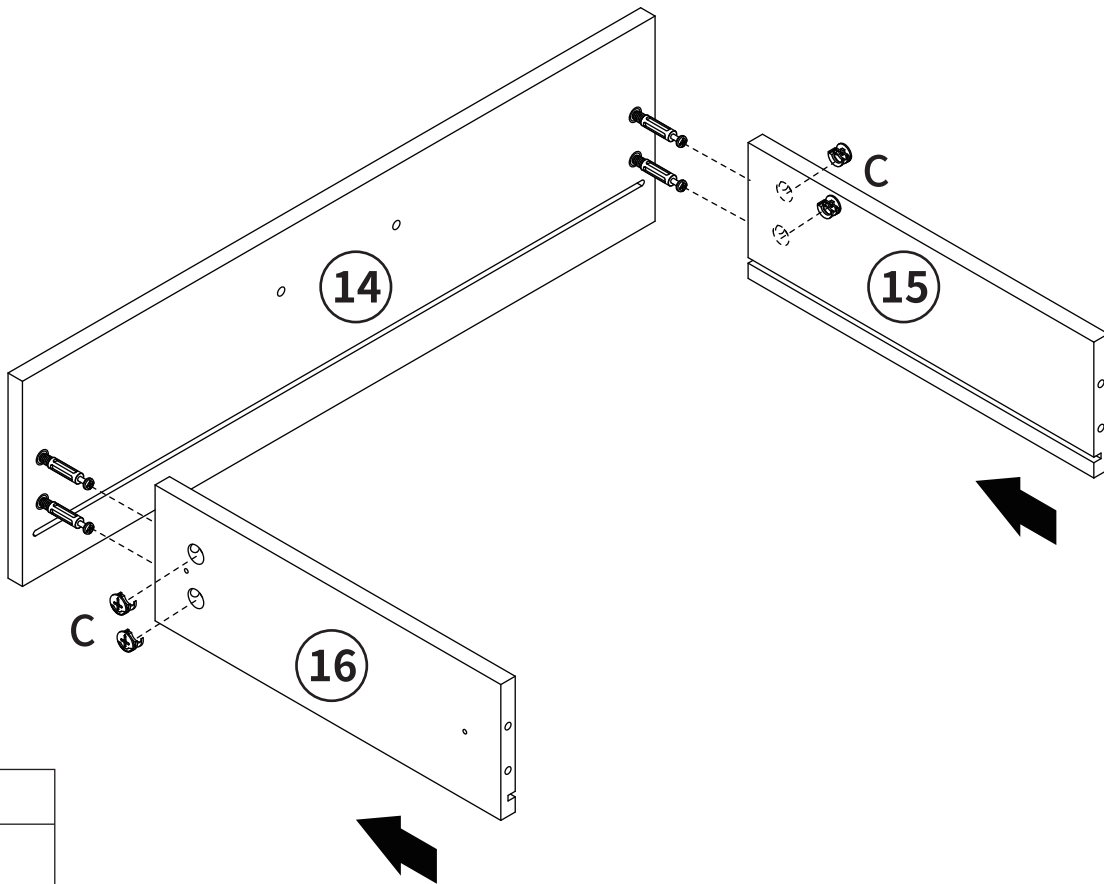


x 2

Cx8



Connect (14) with (15)(16), securing with (C).


8

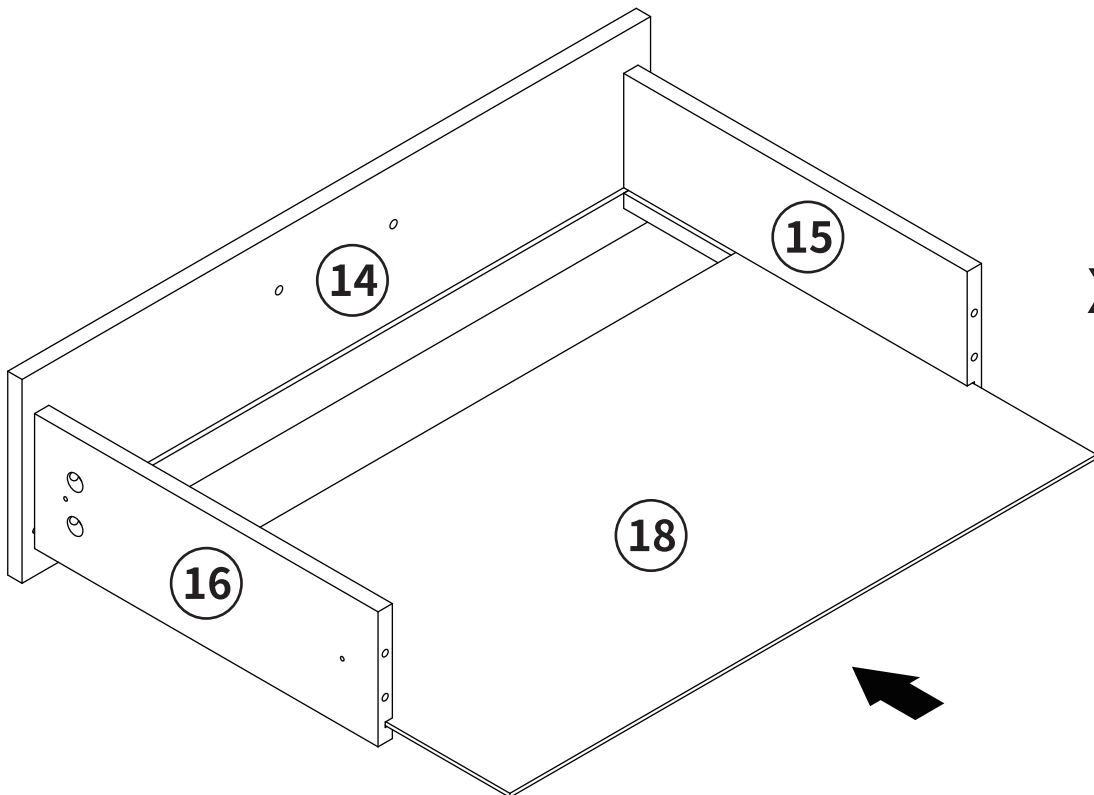


x 2

Insert (18) into the grooves on Board(14)(15)(16).

9

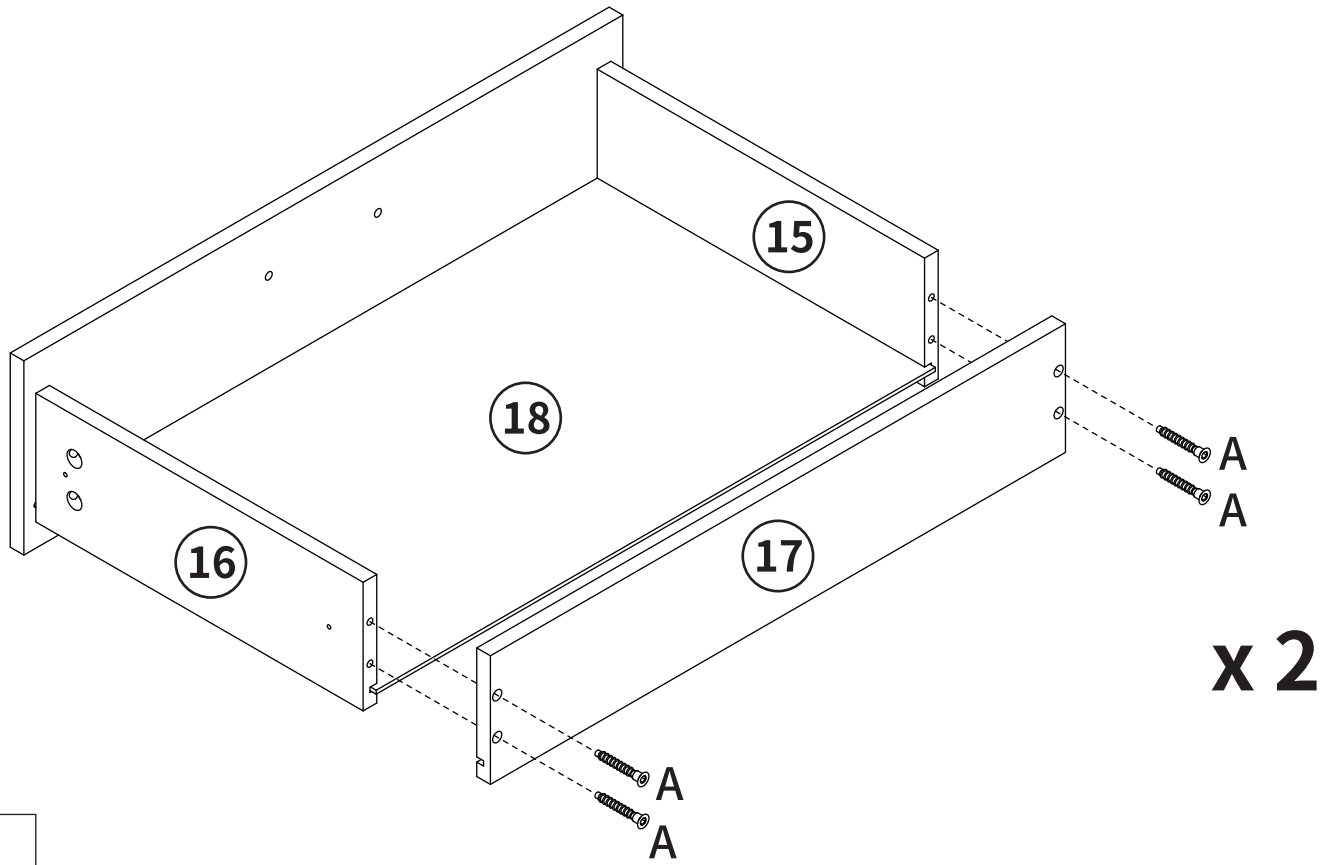


A×8

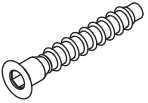


Twist (A) to connect (17) with (15)(16).

10

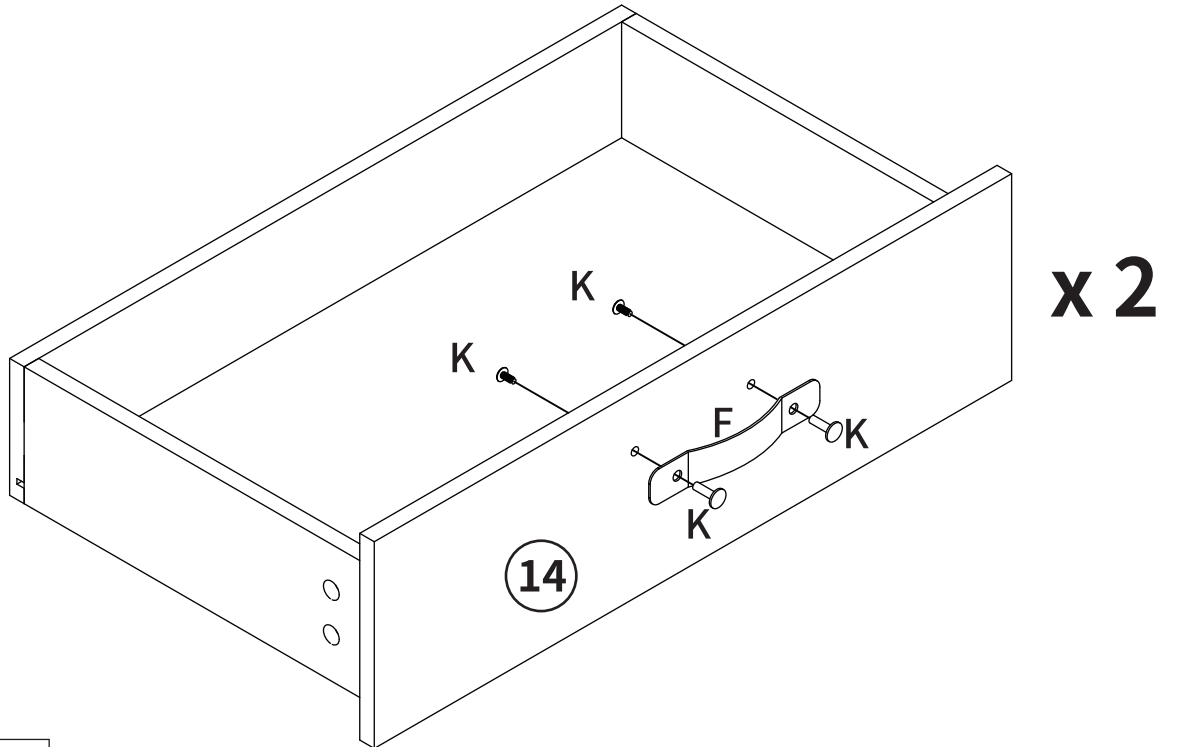


F×2

K×2

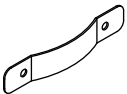

Secure (F) on (14) by (K).

11

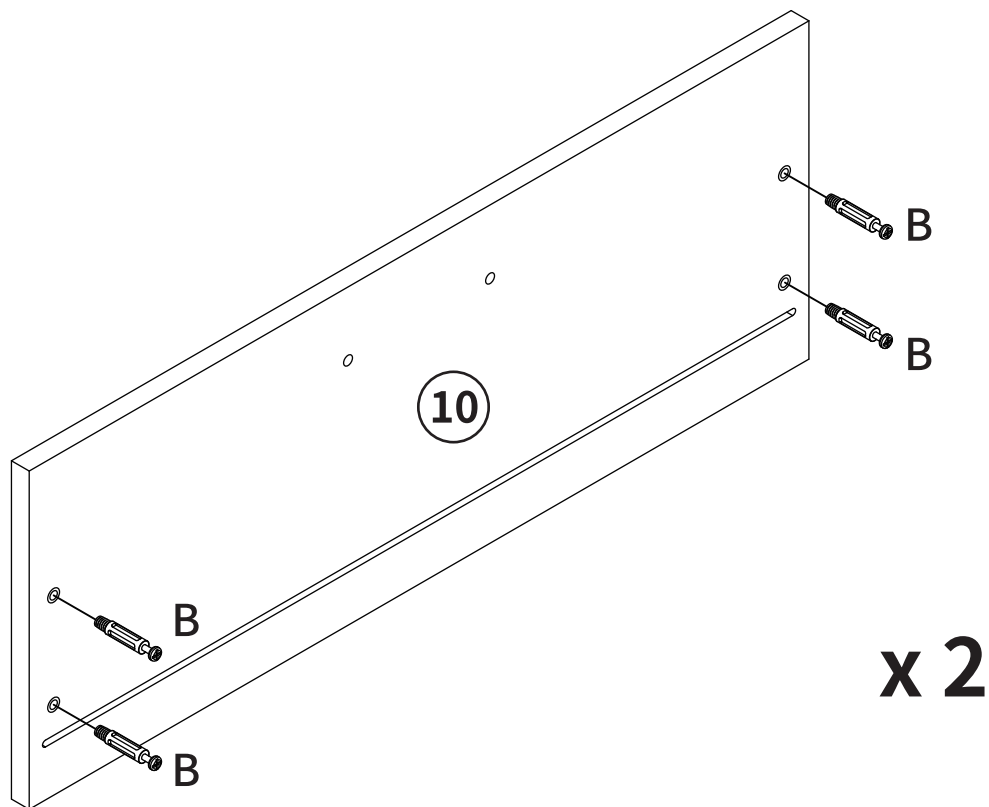


Bx8



Twist (B) into (10).

12

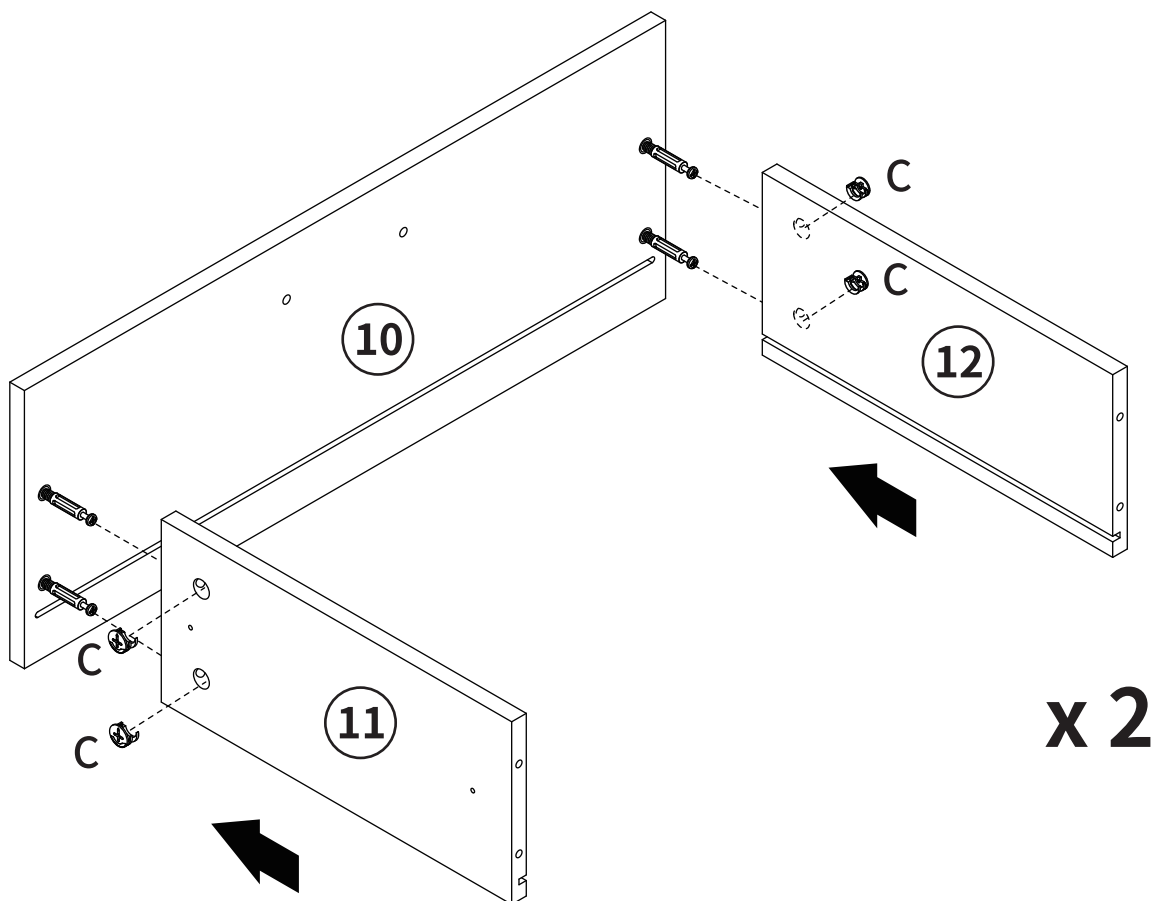


Cx8



Connect (10) with (11)(12), securing with (C).


13

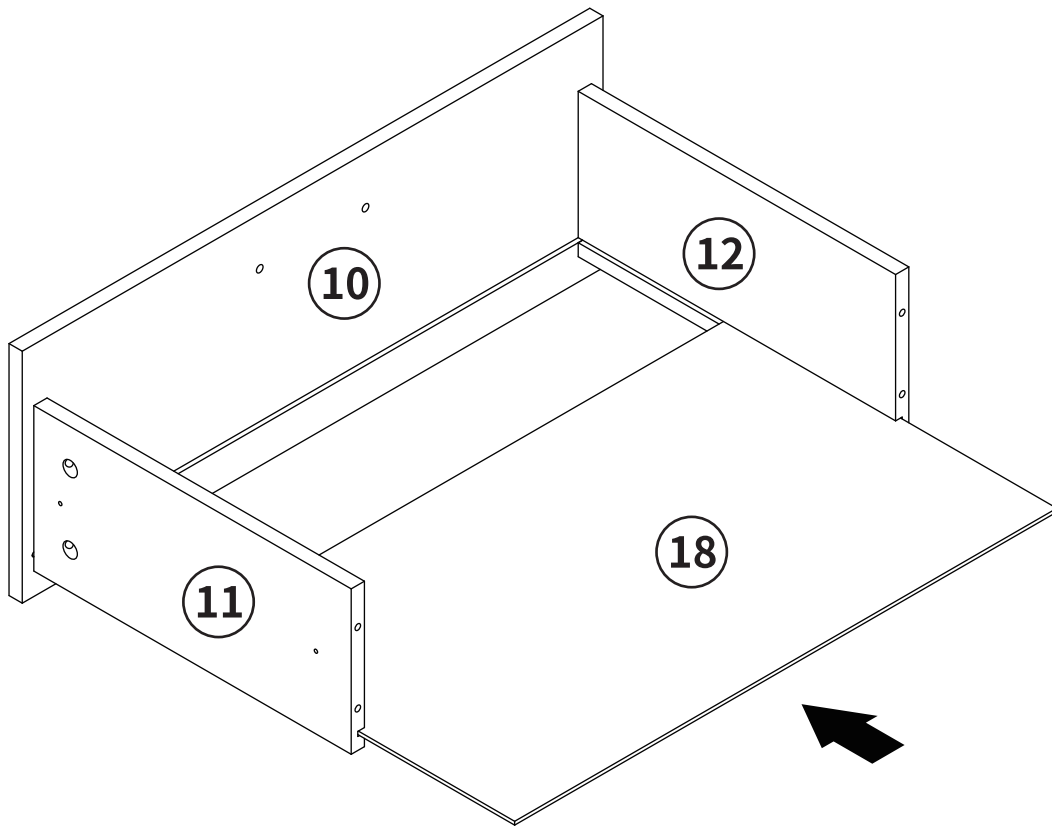

x 2


Insert (18) into the grooves on Board(10)(11)(12).

14

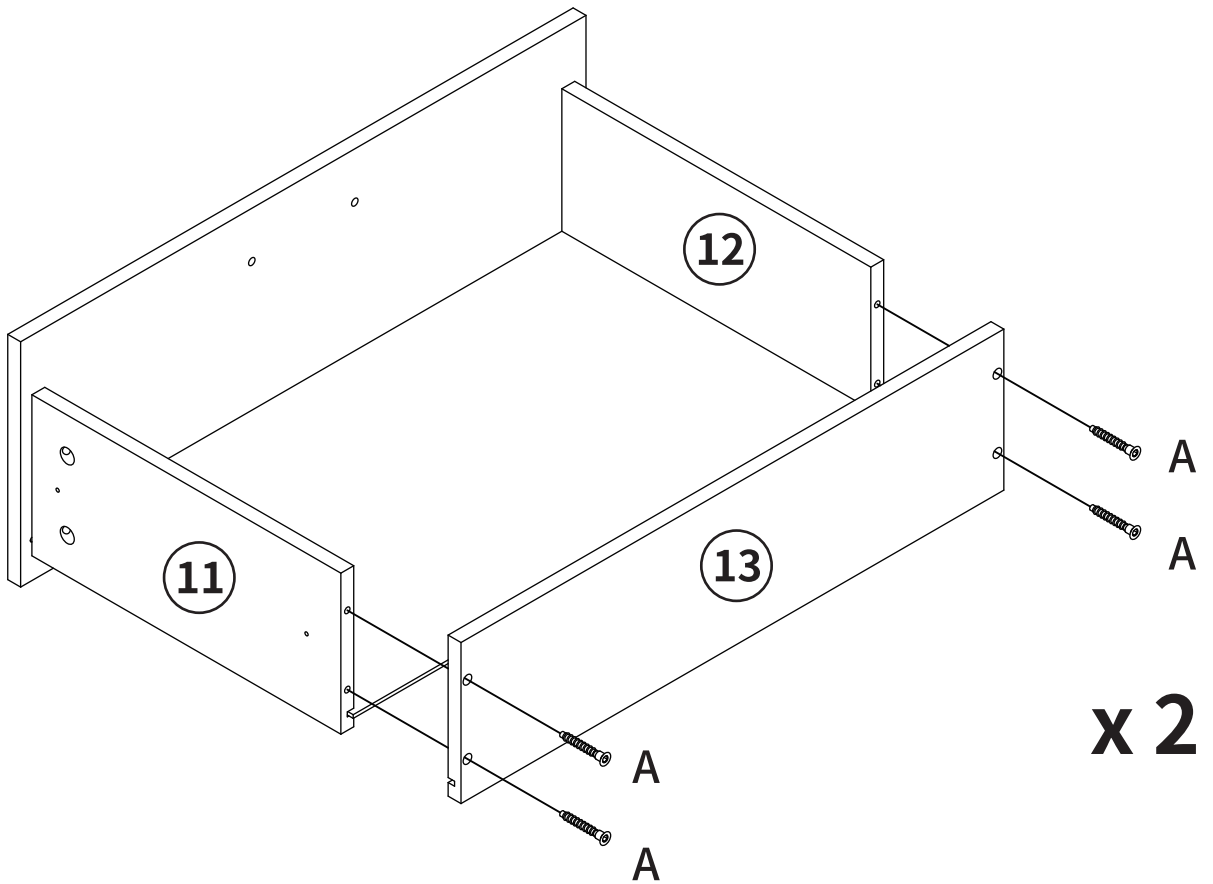


x 2

A×8

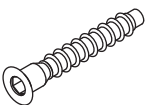

Twist (A) to connect (13) with (11)(12).

15

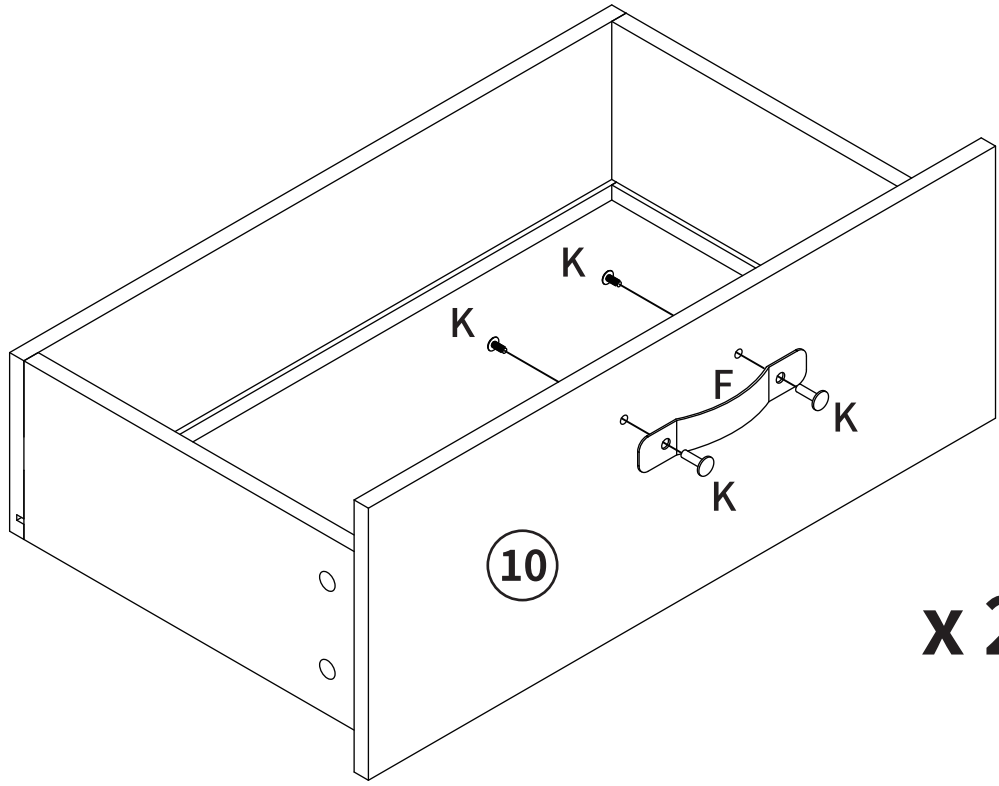


x 2

F×2	K×2

Secure (F) on (10) by (K).

16

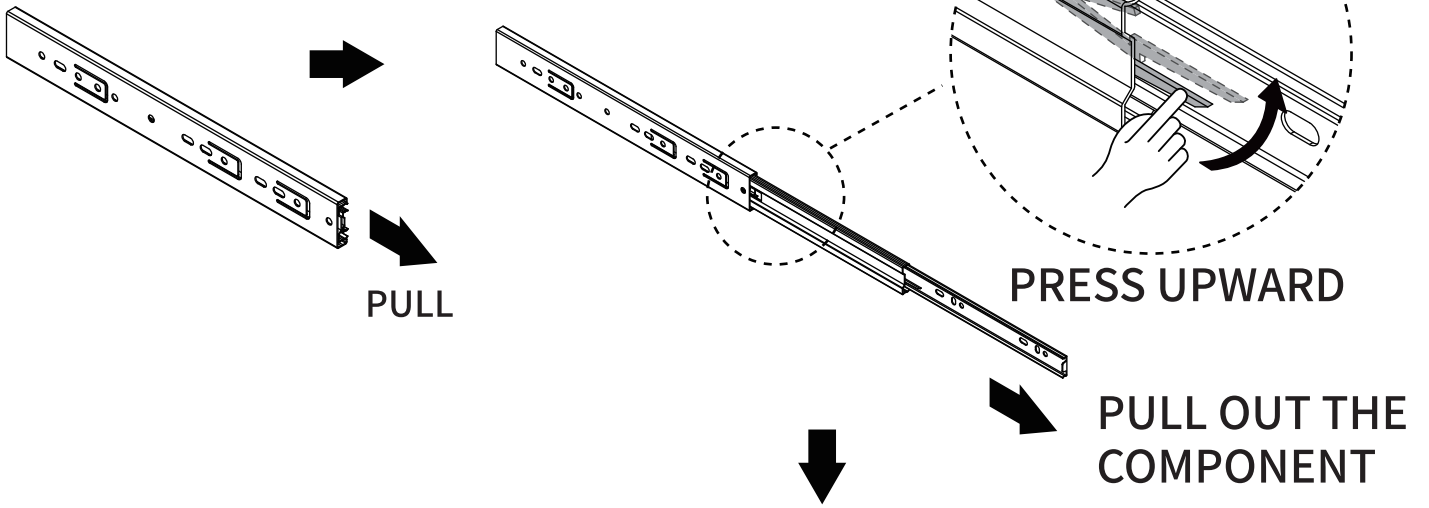

PULL

PRESS UPWARD

PULL OUT THE COMPONENT


D-1 ×8	
D-2 ×8	

x 8



D×8

Detach (D) into (D-1) (D-2).

17

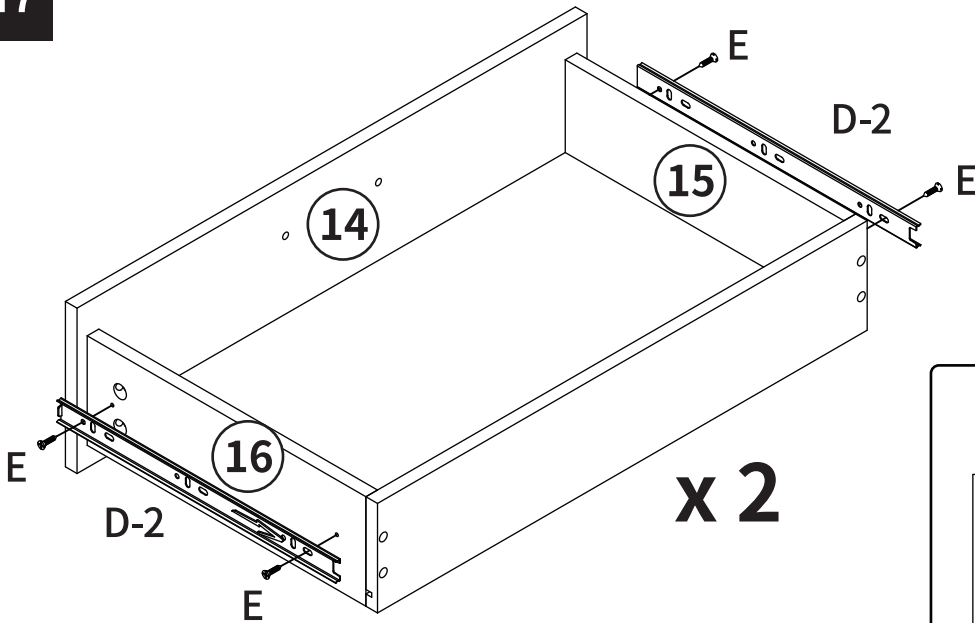


x 2

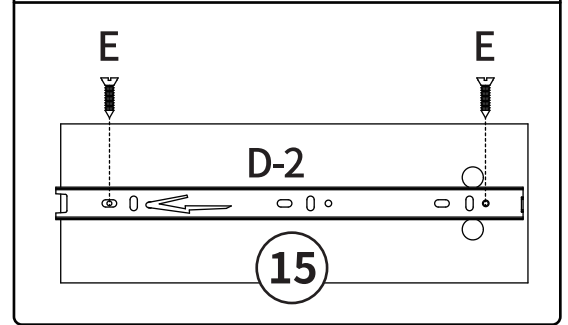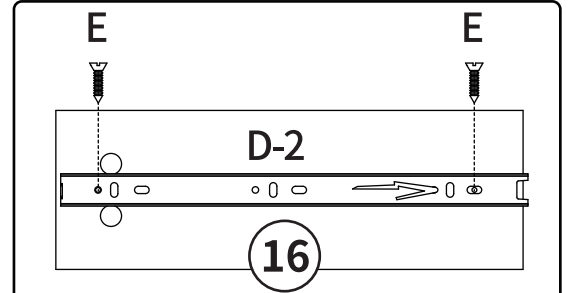


D-2 x 4

E x 8


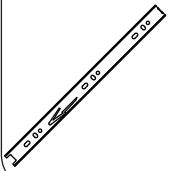


Twist (E) to secure (D-2) on (15)(16).

18

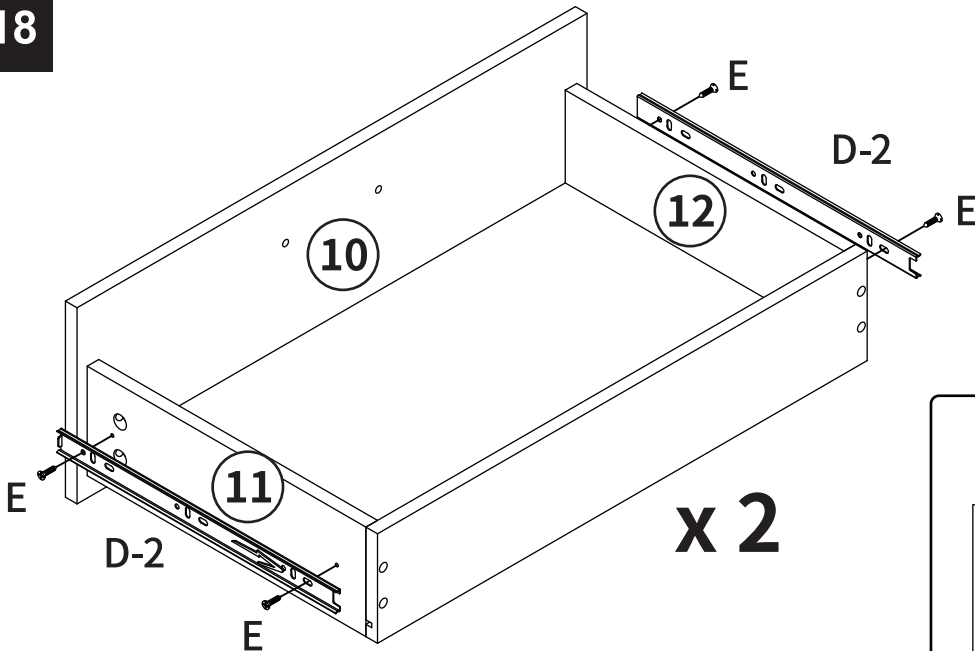


x 2

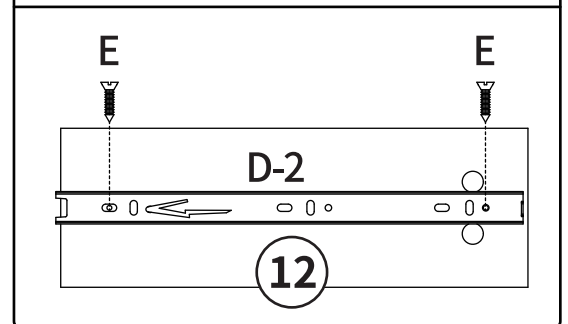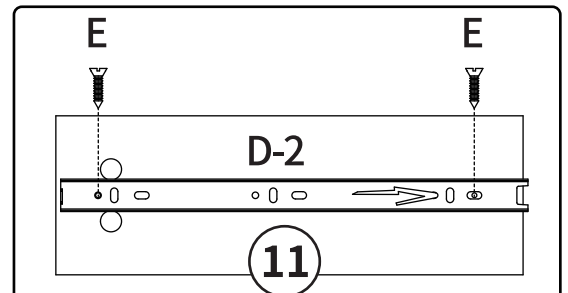


D-2 x 4


E x 8

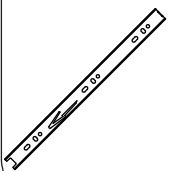

Twist (E) to secure (D-2) on (11)(12).

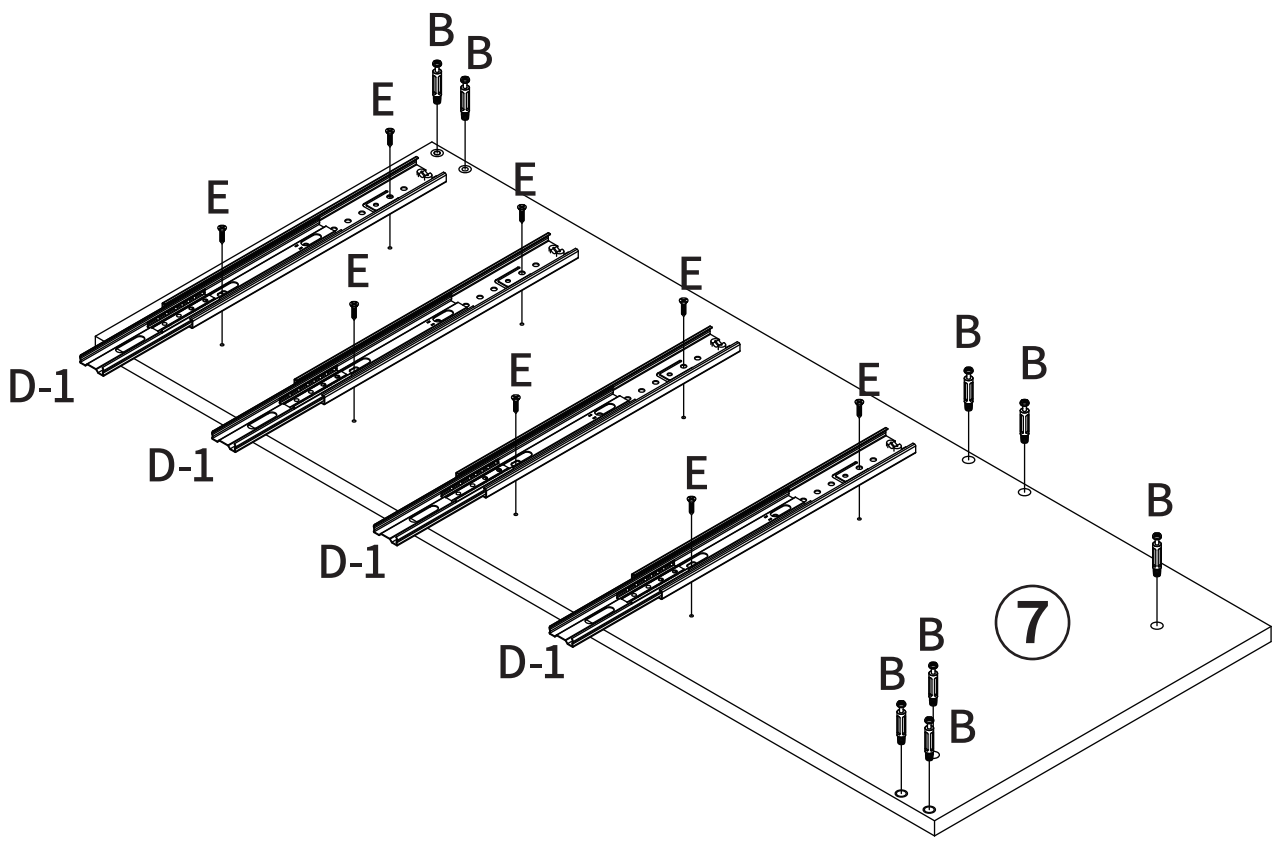


FLAT - VIEW DRAWING

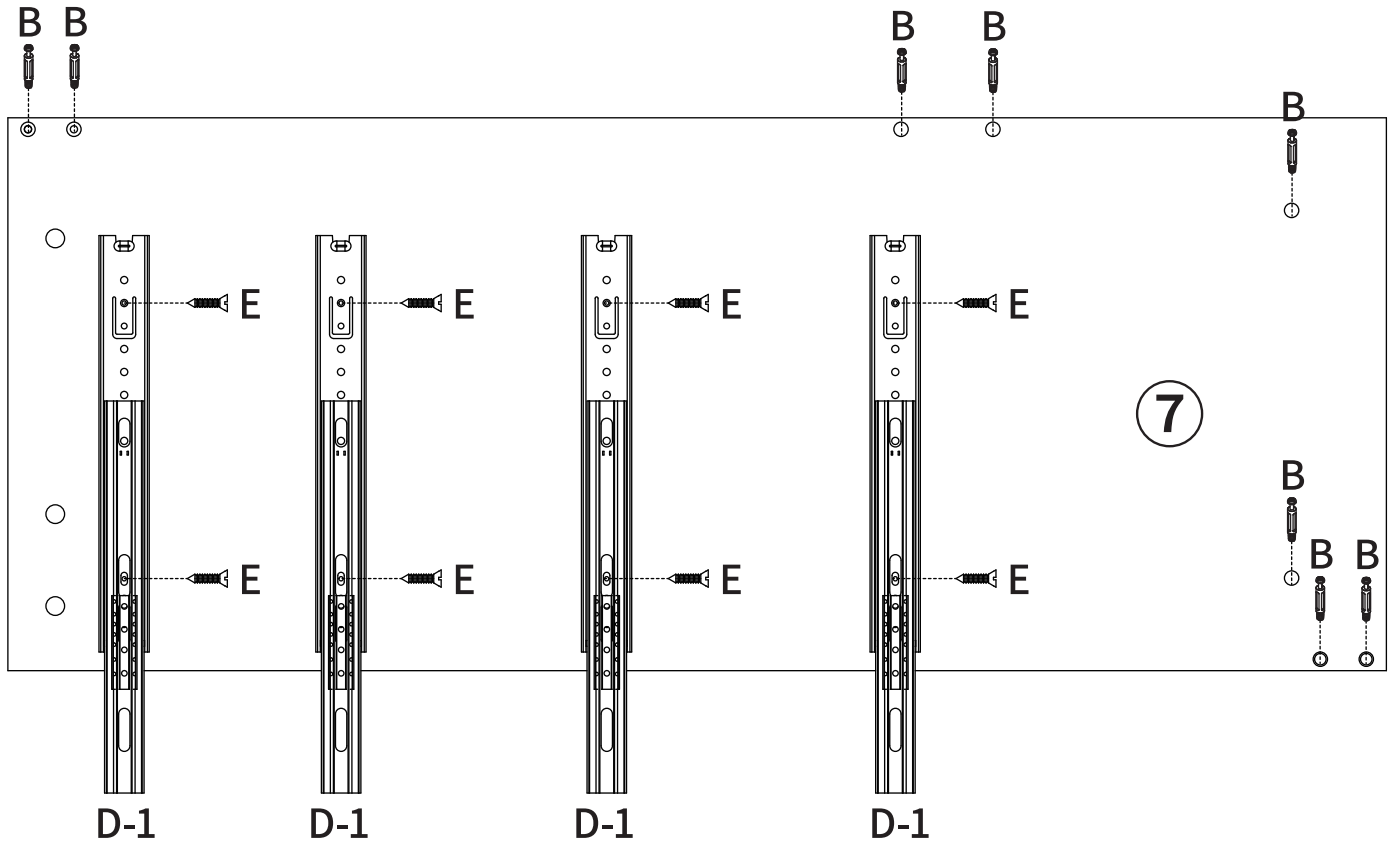


D-1×4

B×8


E×8

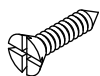

Twist (B) into the holes on (7),
then twist (E) to secure (D-1) on (7) as displayed.

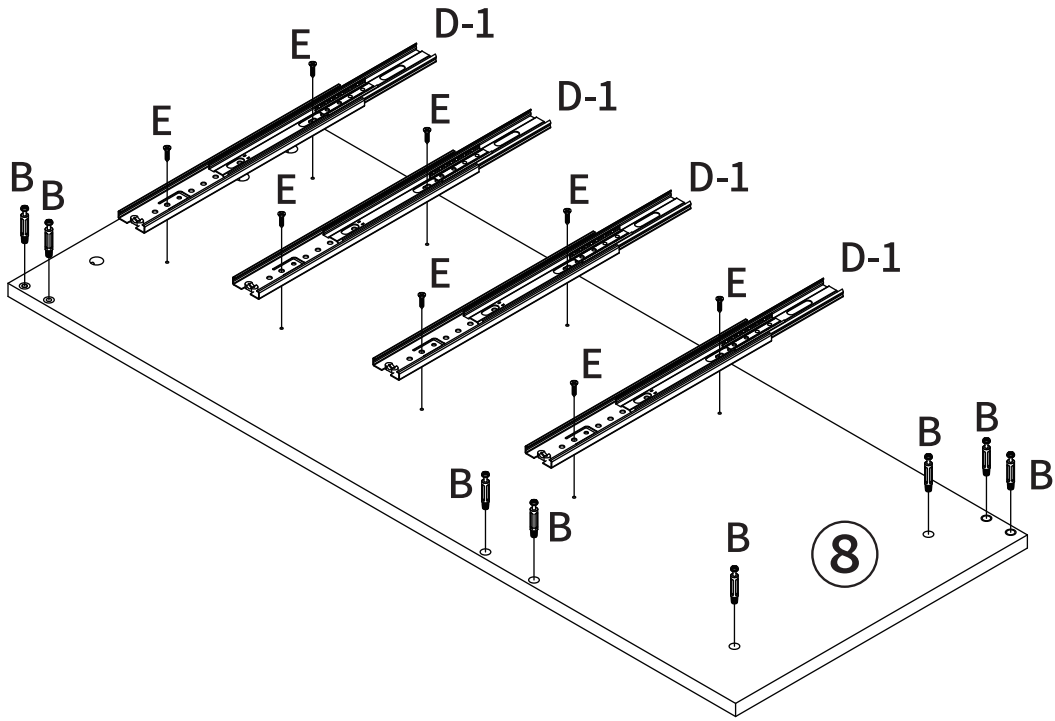



FLAT - VIEW DRAWING

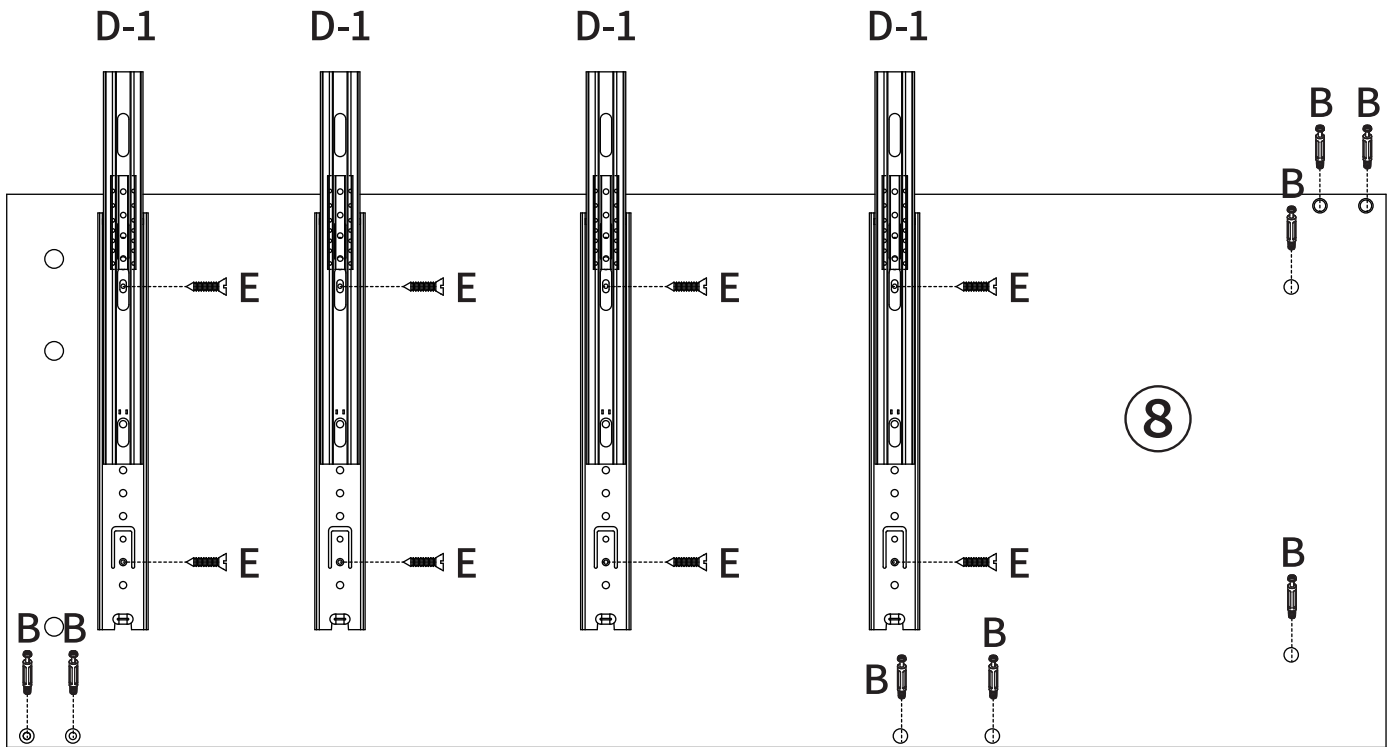


D-1×4

B×8

E×8

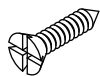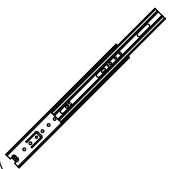

Twist (B) into the holes on (8),
then twist (E) to secure (D-1) on (8) as displayed.

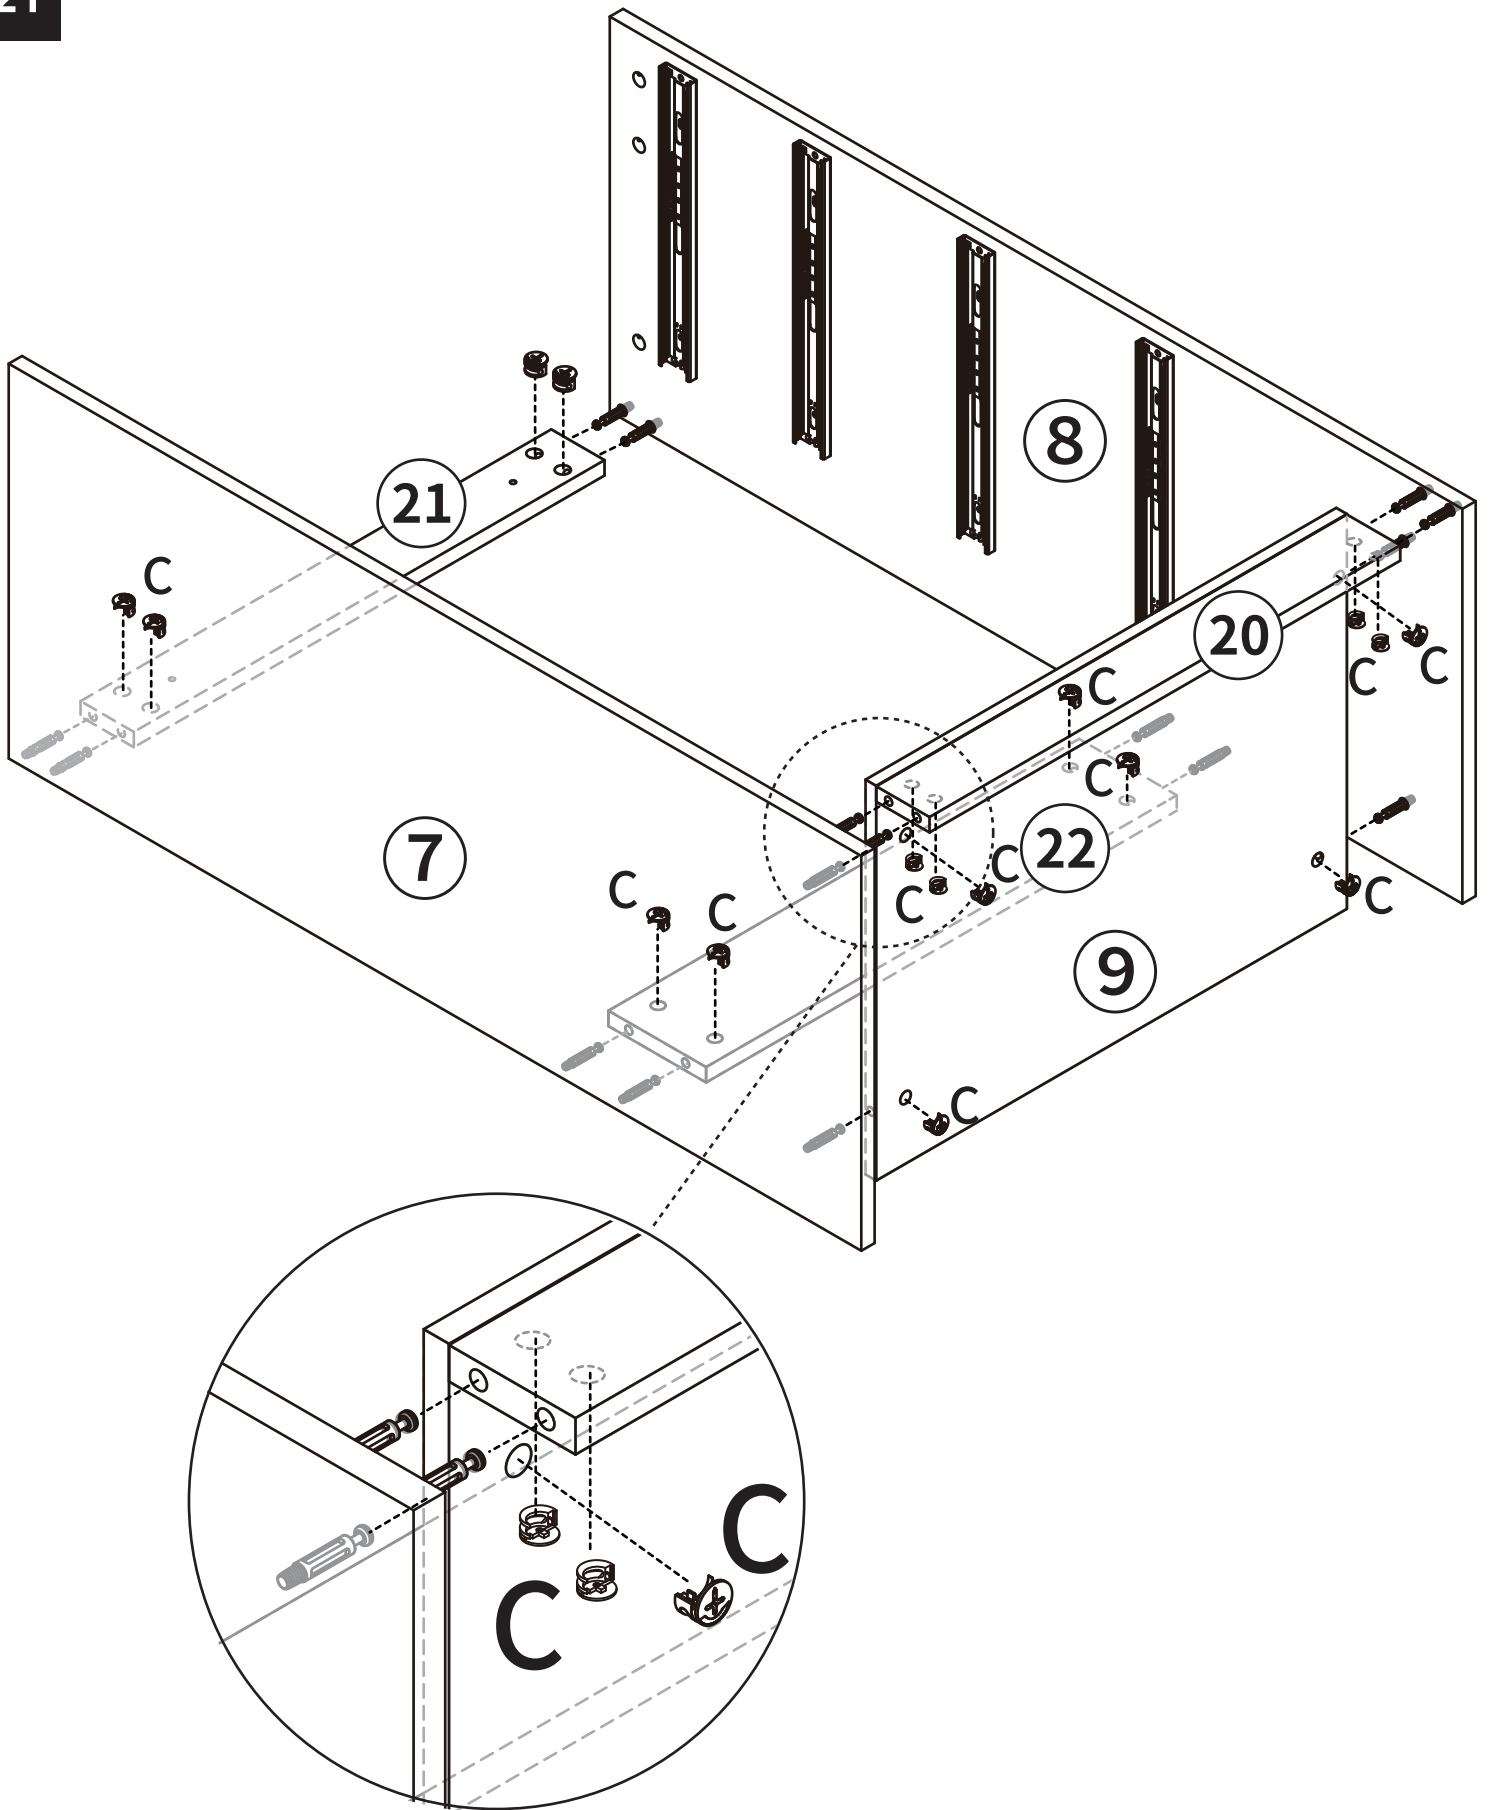



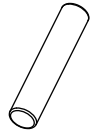




C×16



Connect (7)(8) with (9)(20)(21)(22), securing with (C).

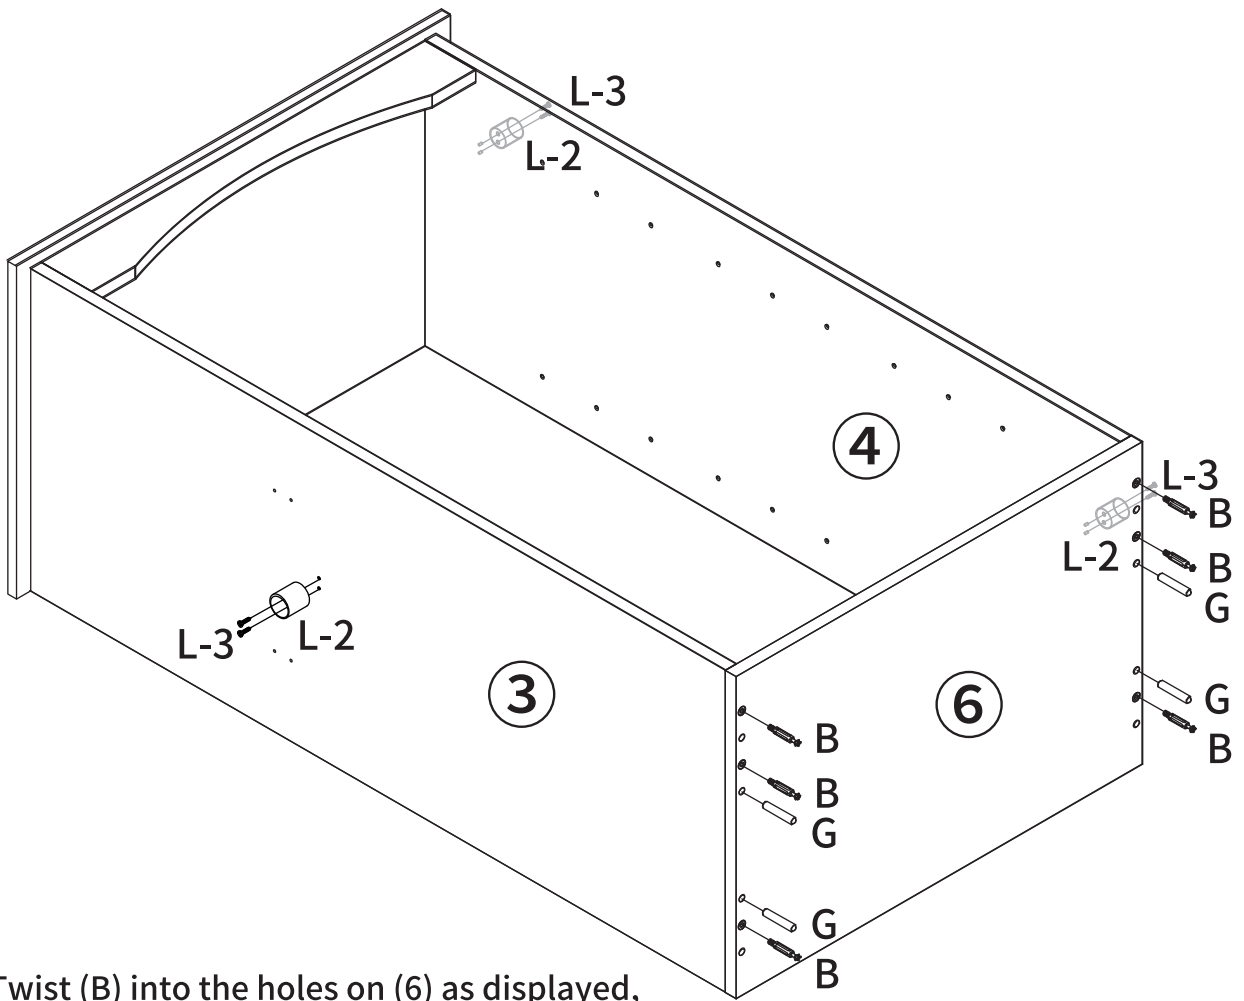
22



B×6	G×4
	
L×3	
   	

Twist (B) into the holes on (6) as displayed, then insert (G) into the rest of holes on (6). Twist (L3) to secure (L2) on (3)(4).


23

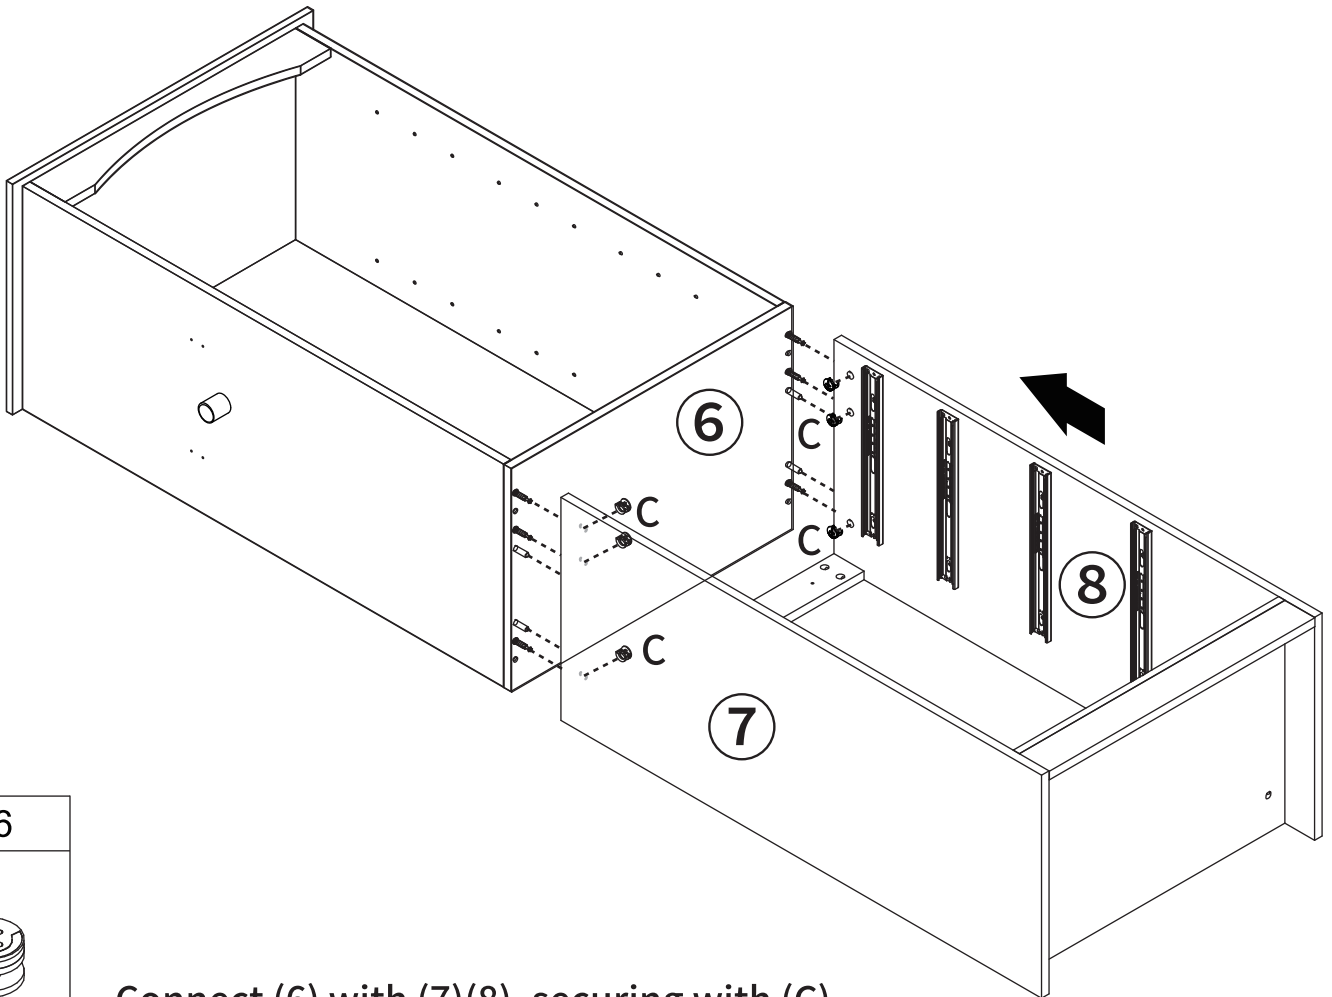

C×6



Connect (6) with (7)(8), securing with (C).


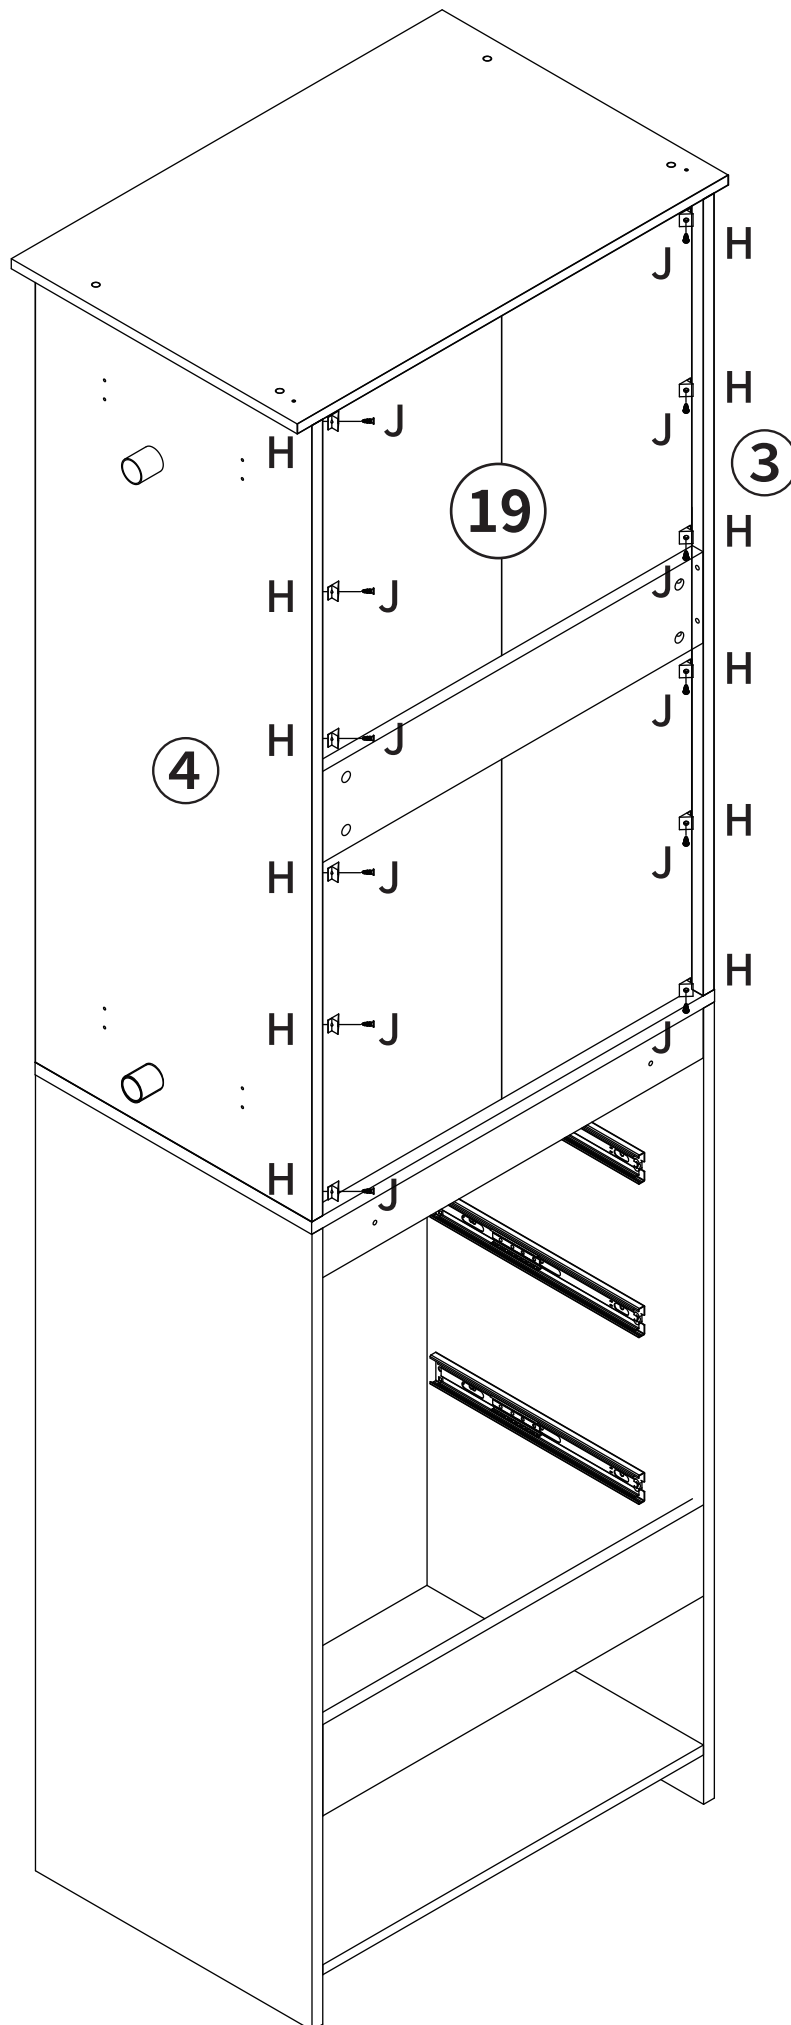


H×12

J×12





Insert (J) into the back of cabinet,
then use (H) to secure (J) on the board.





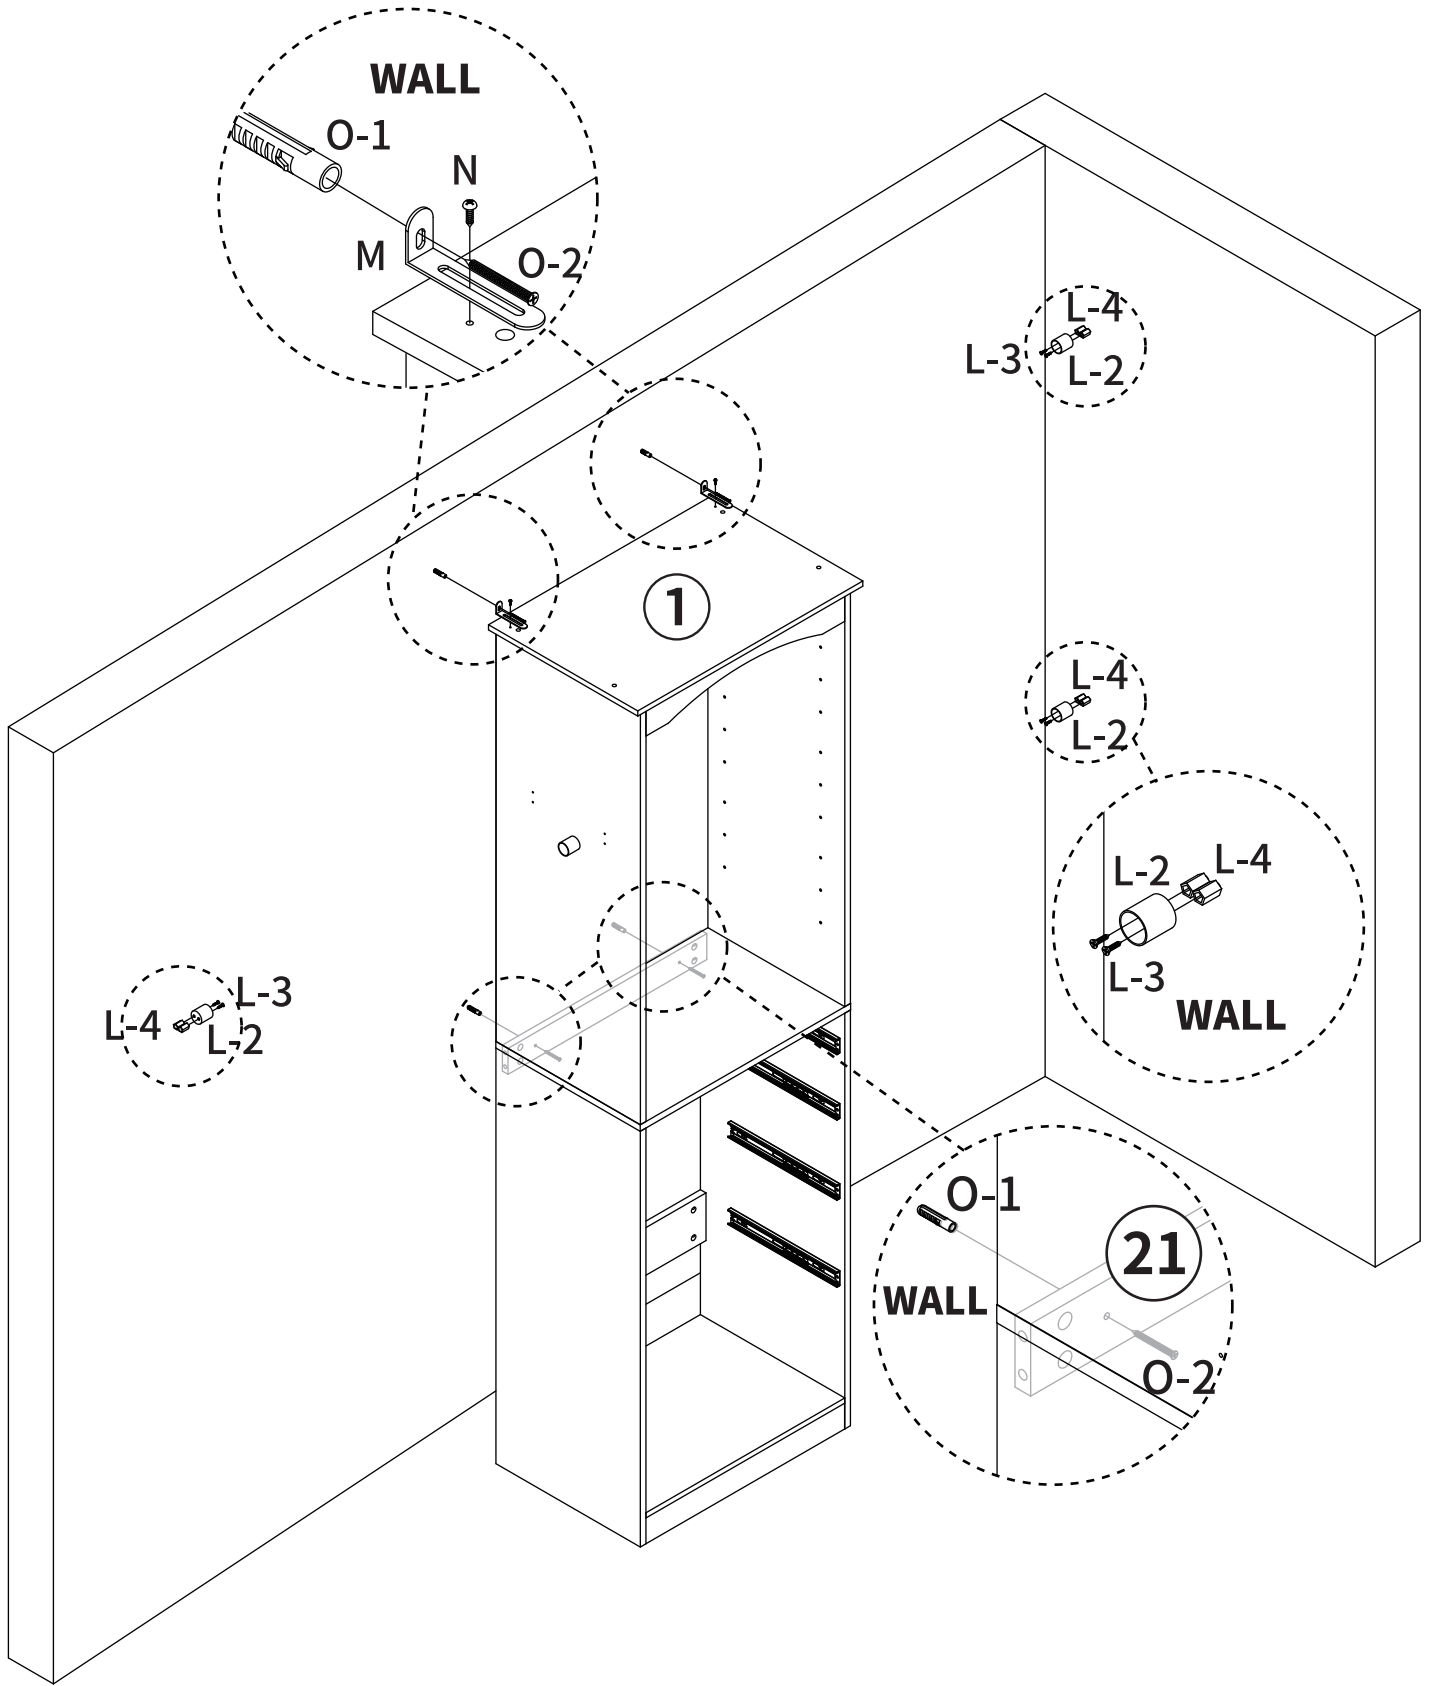
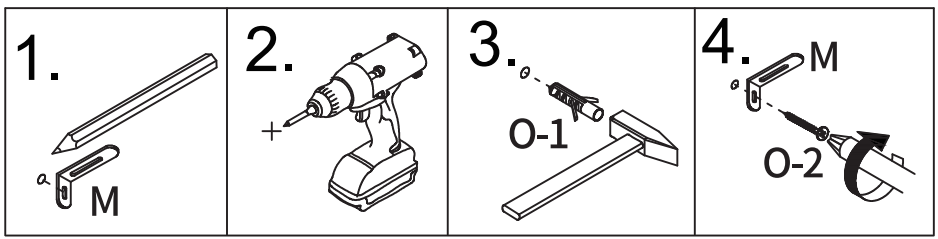


M×2	N×2	O×4	L×3
		 O-1	 L-1 L-2 L-3 L-4

Twist (N) to secure (M) on (1).
 Install (O-1) on the wall, then twist (O-2) into (O-1) to secure (M) on the wall,
 and then twist o-2 into (O-1) to secure (21) on the wall.
 Install (L-4) on the wall, then twist (L-3) to secure (L-2) on (L-4).

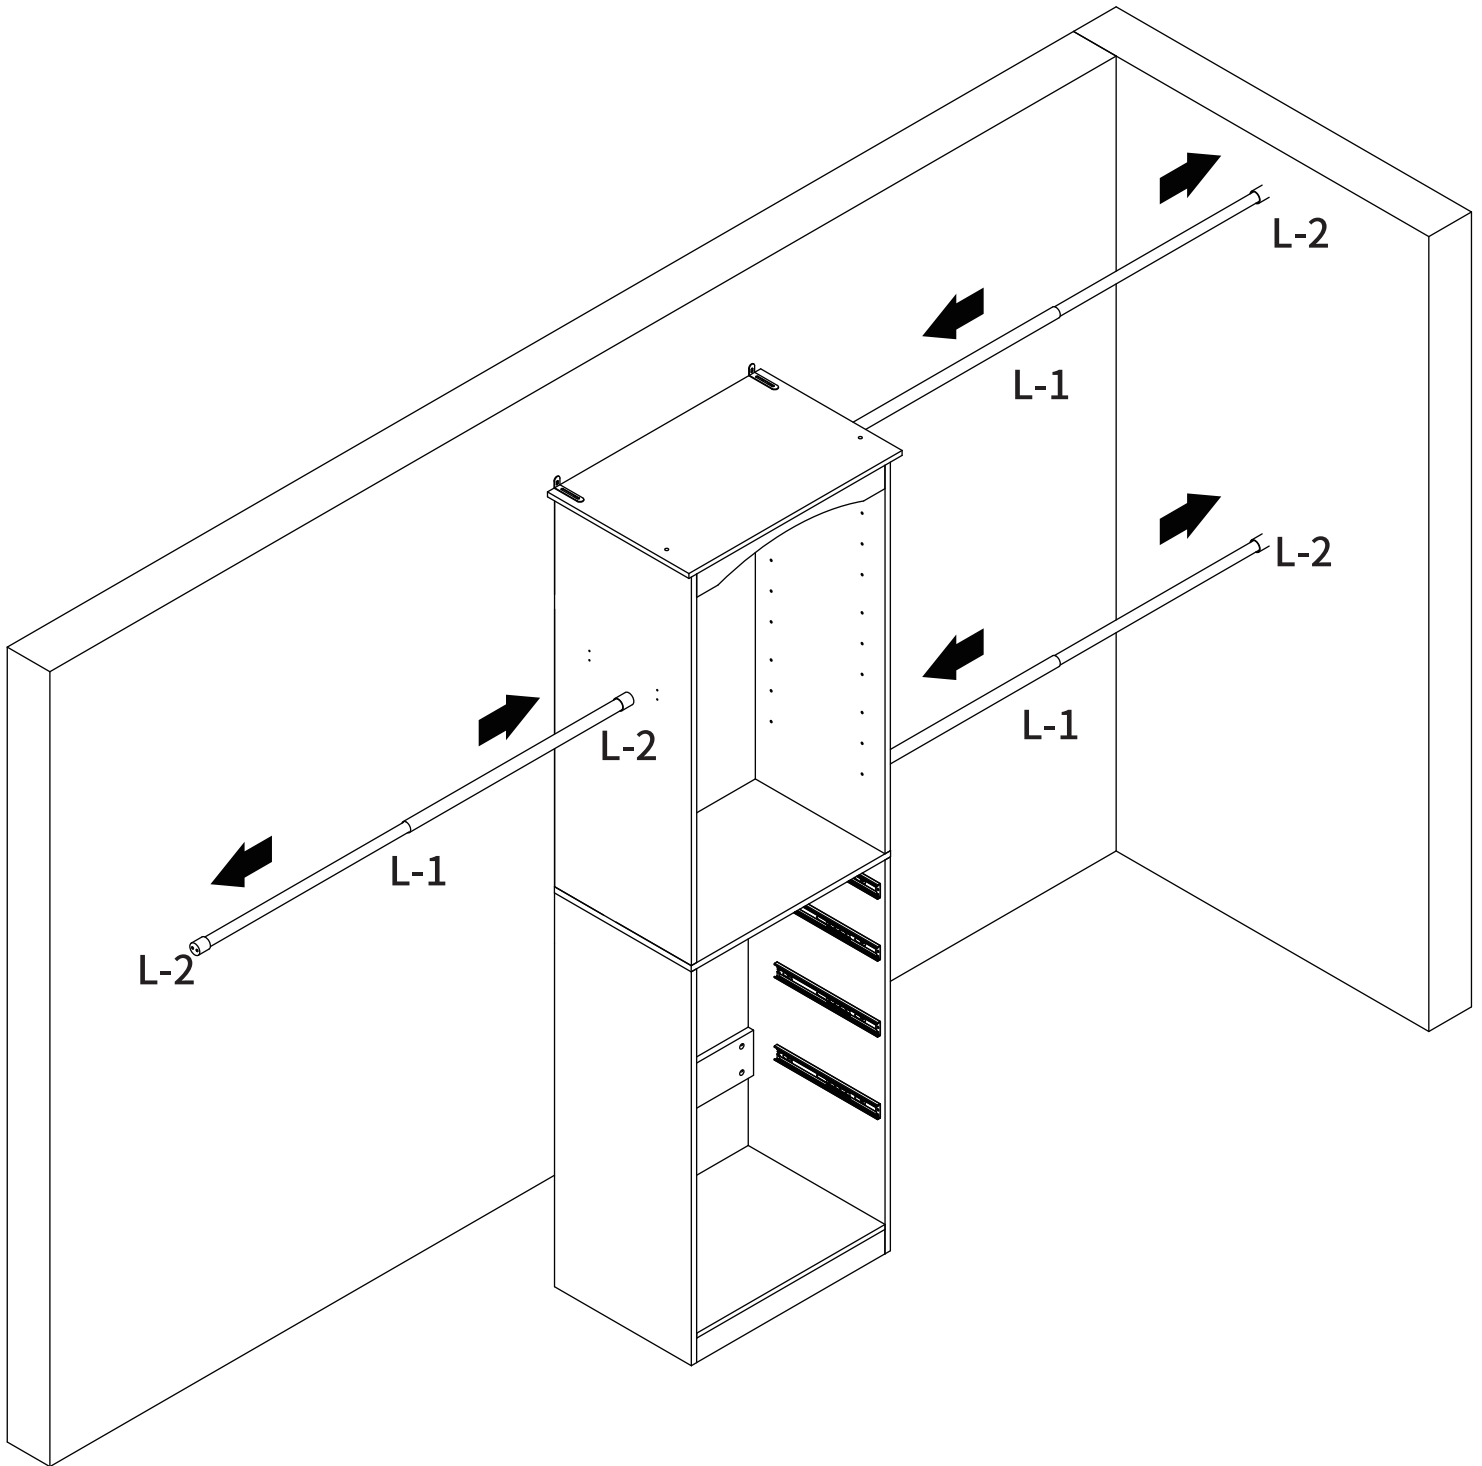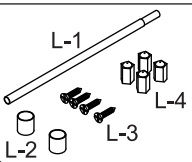**L×3**



Insert (L-1) into (L-2). The length of (L-1) is adjustable by pushing and pulling the rod.

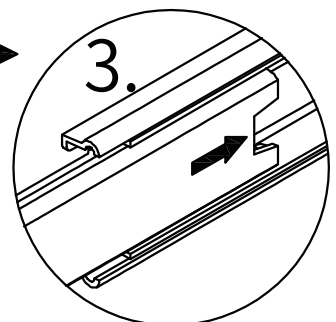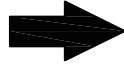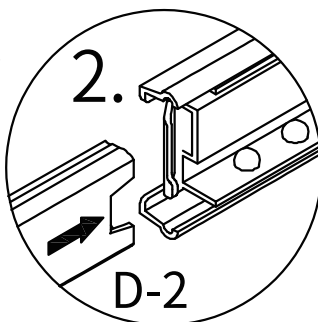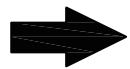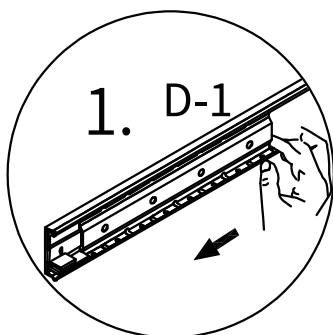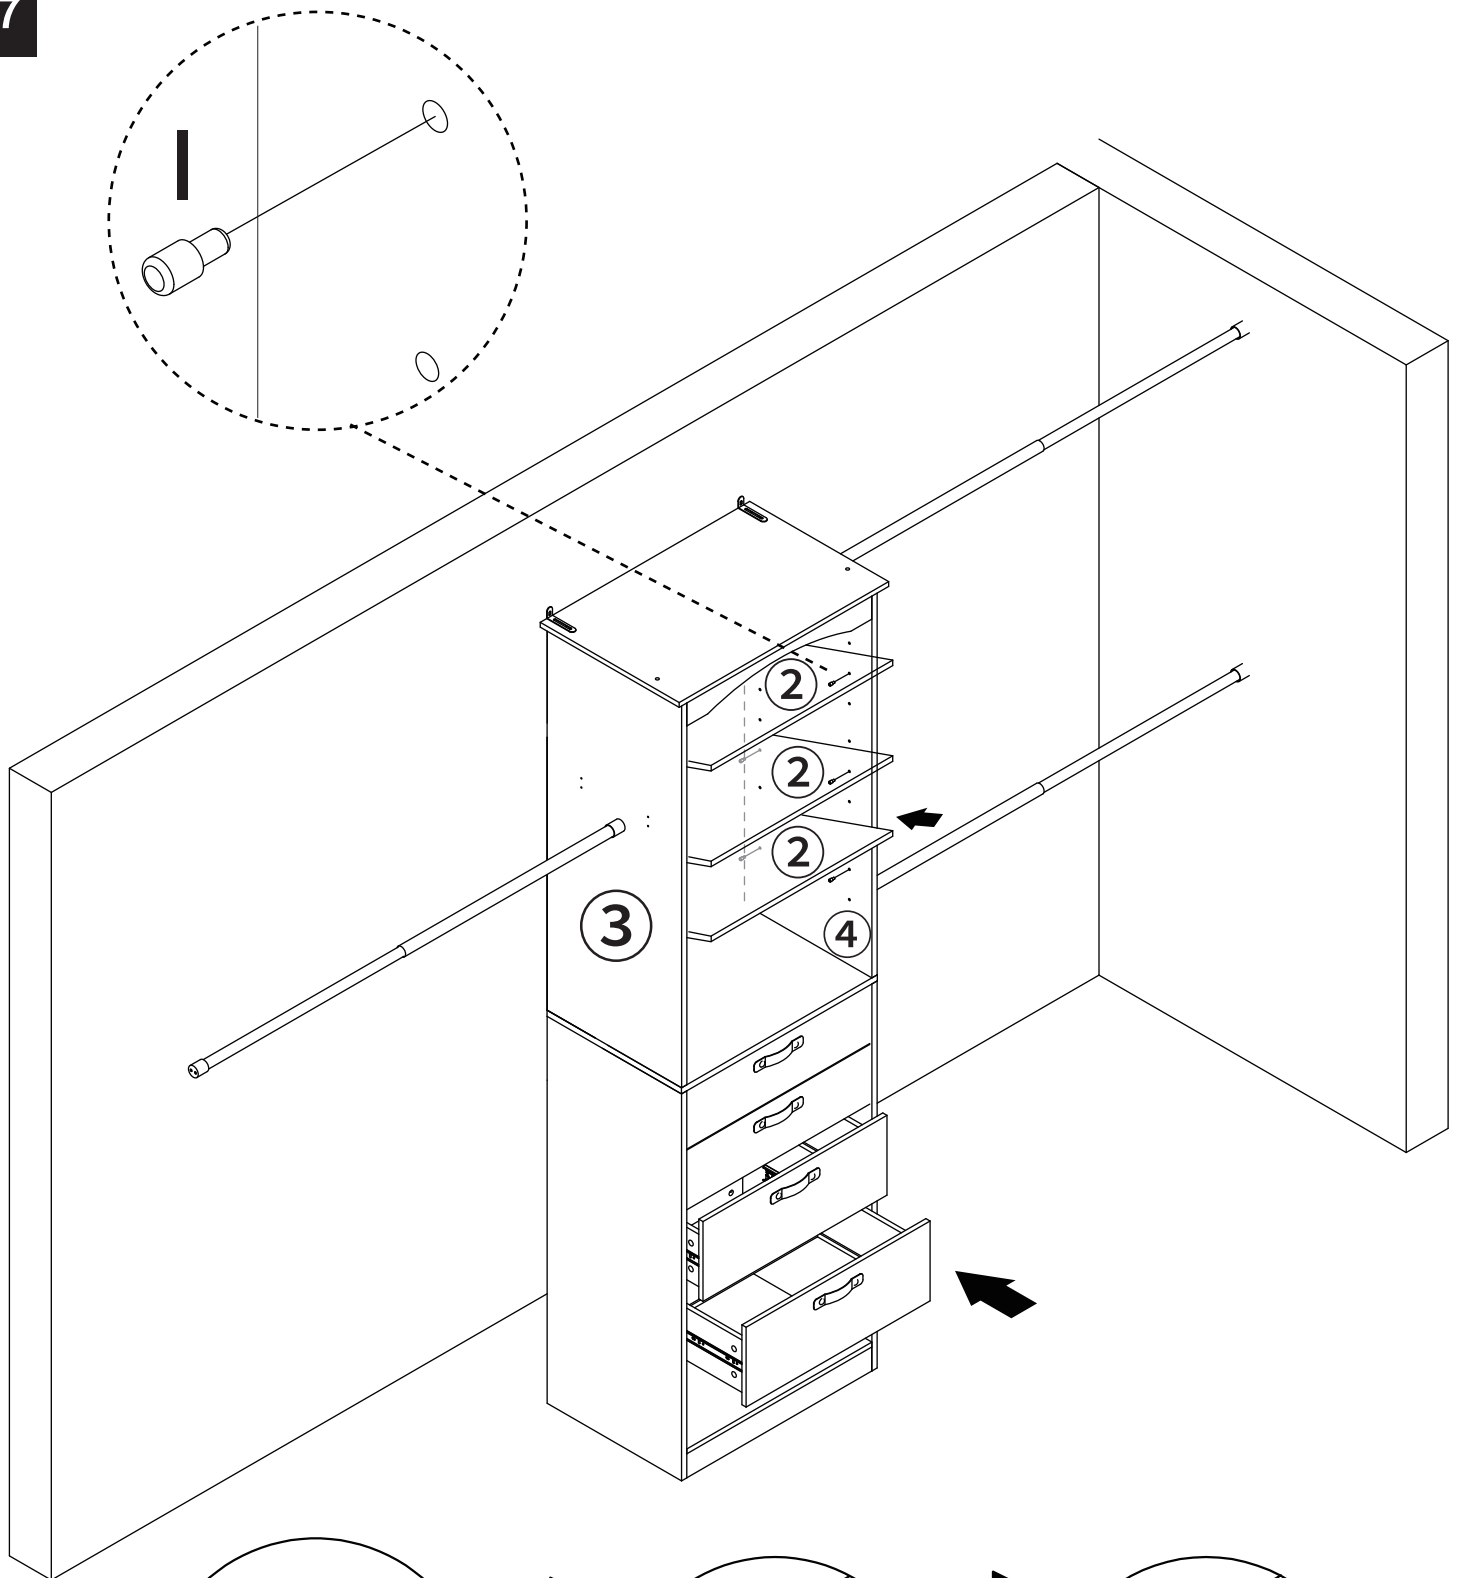

1x12






Insert (1) into the holes on (3)(4), then place (2) on (1).
Adjust (D-1) as displayed, then inset (D-2) into (D-1).

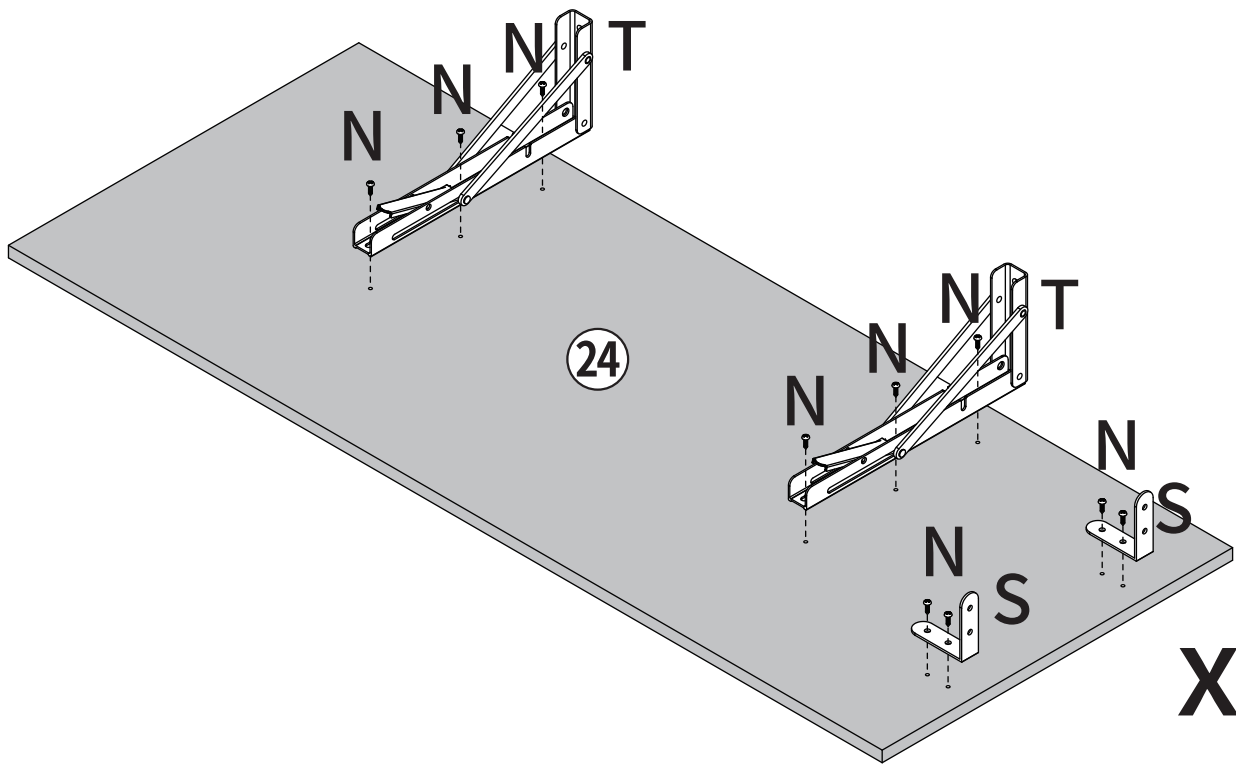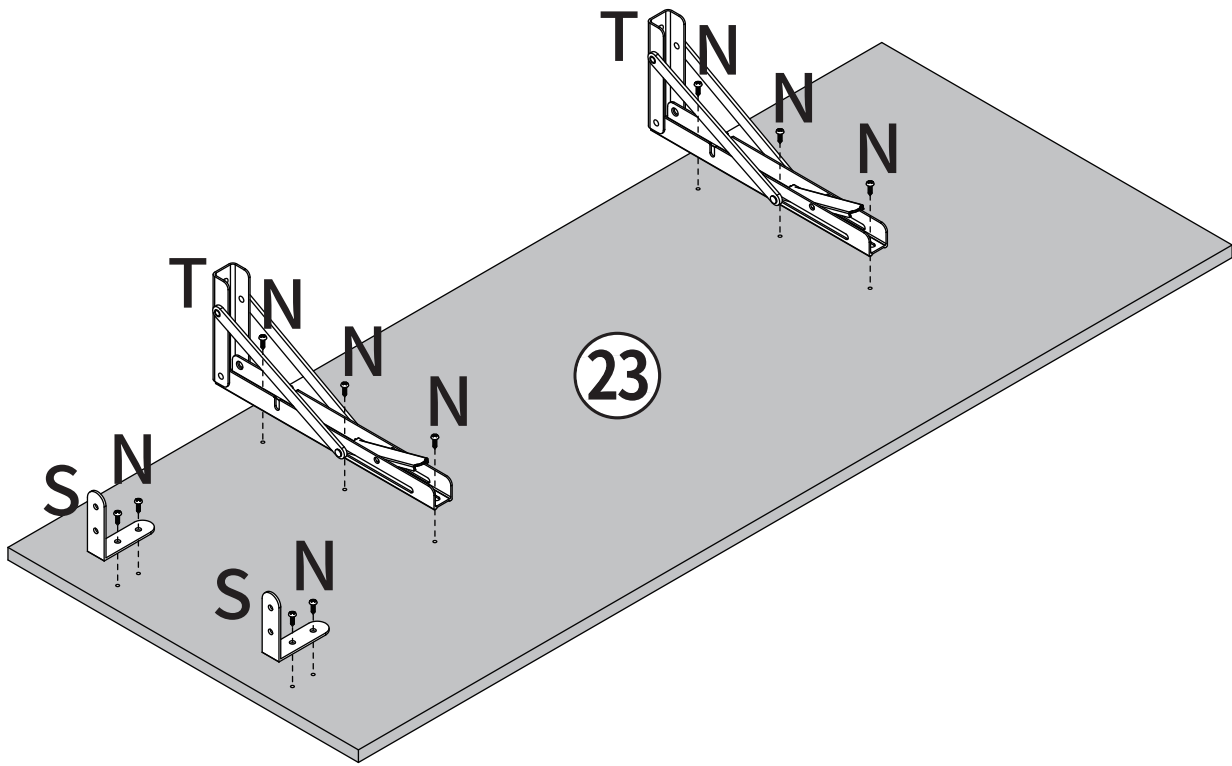



S x 6

T x 6


N x 30

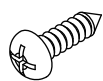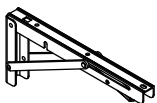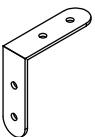


Twist (N) to fix (T) and (S) onto Boards (23) and (24).

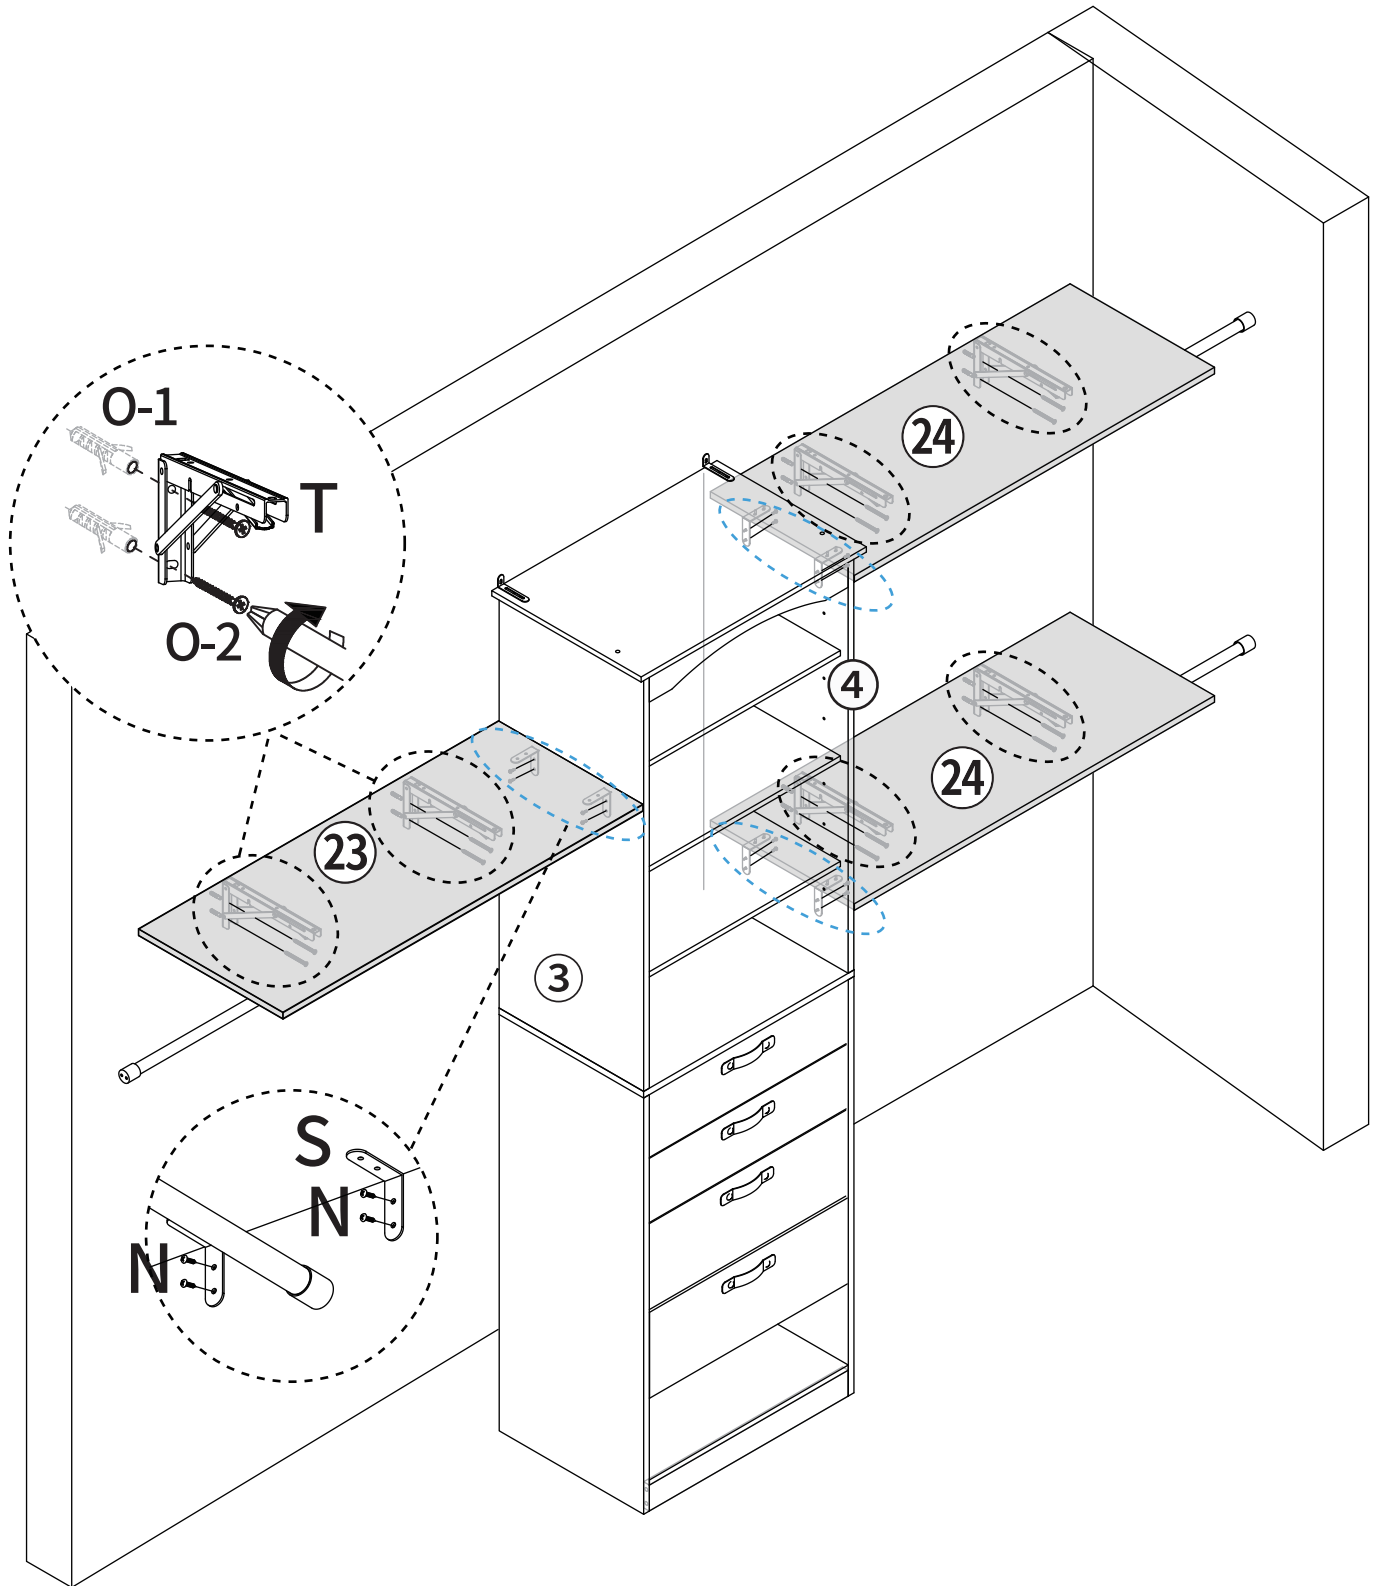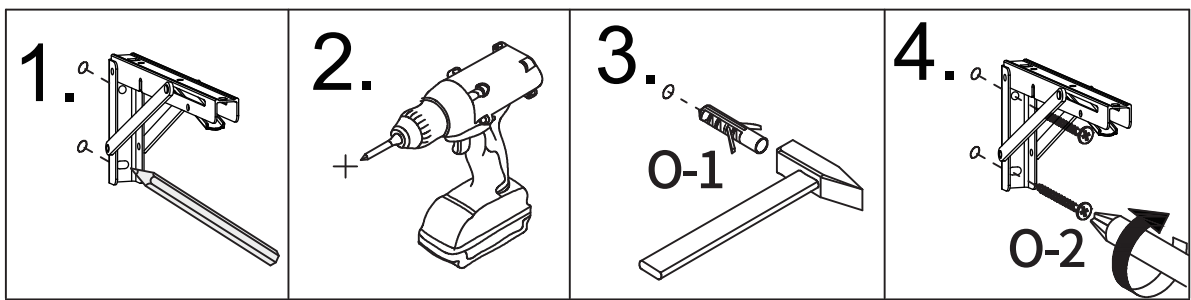

O×12	N×12
------	------

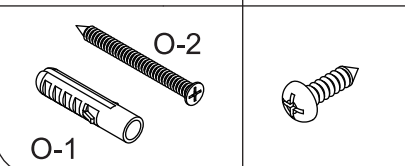

Fix (O-1) into the wall, then twist (O-2) through (T) and lock it into (O-1). Twist (N) through (S) to fix them into Boards (3) and (4) respectively.

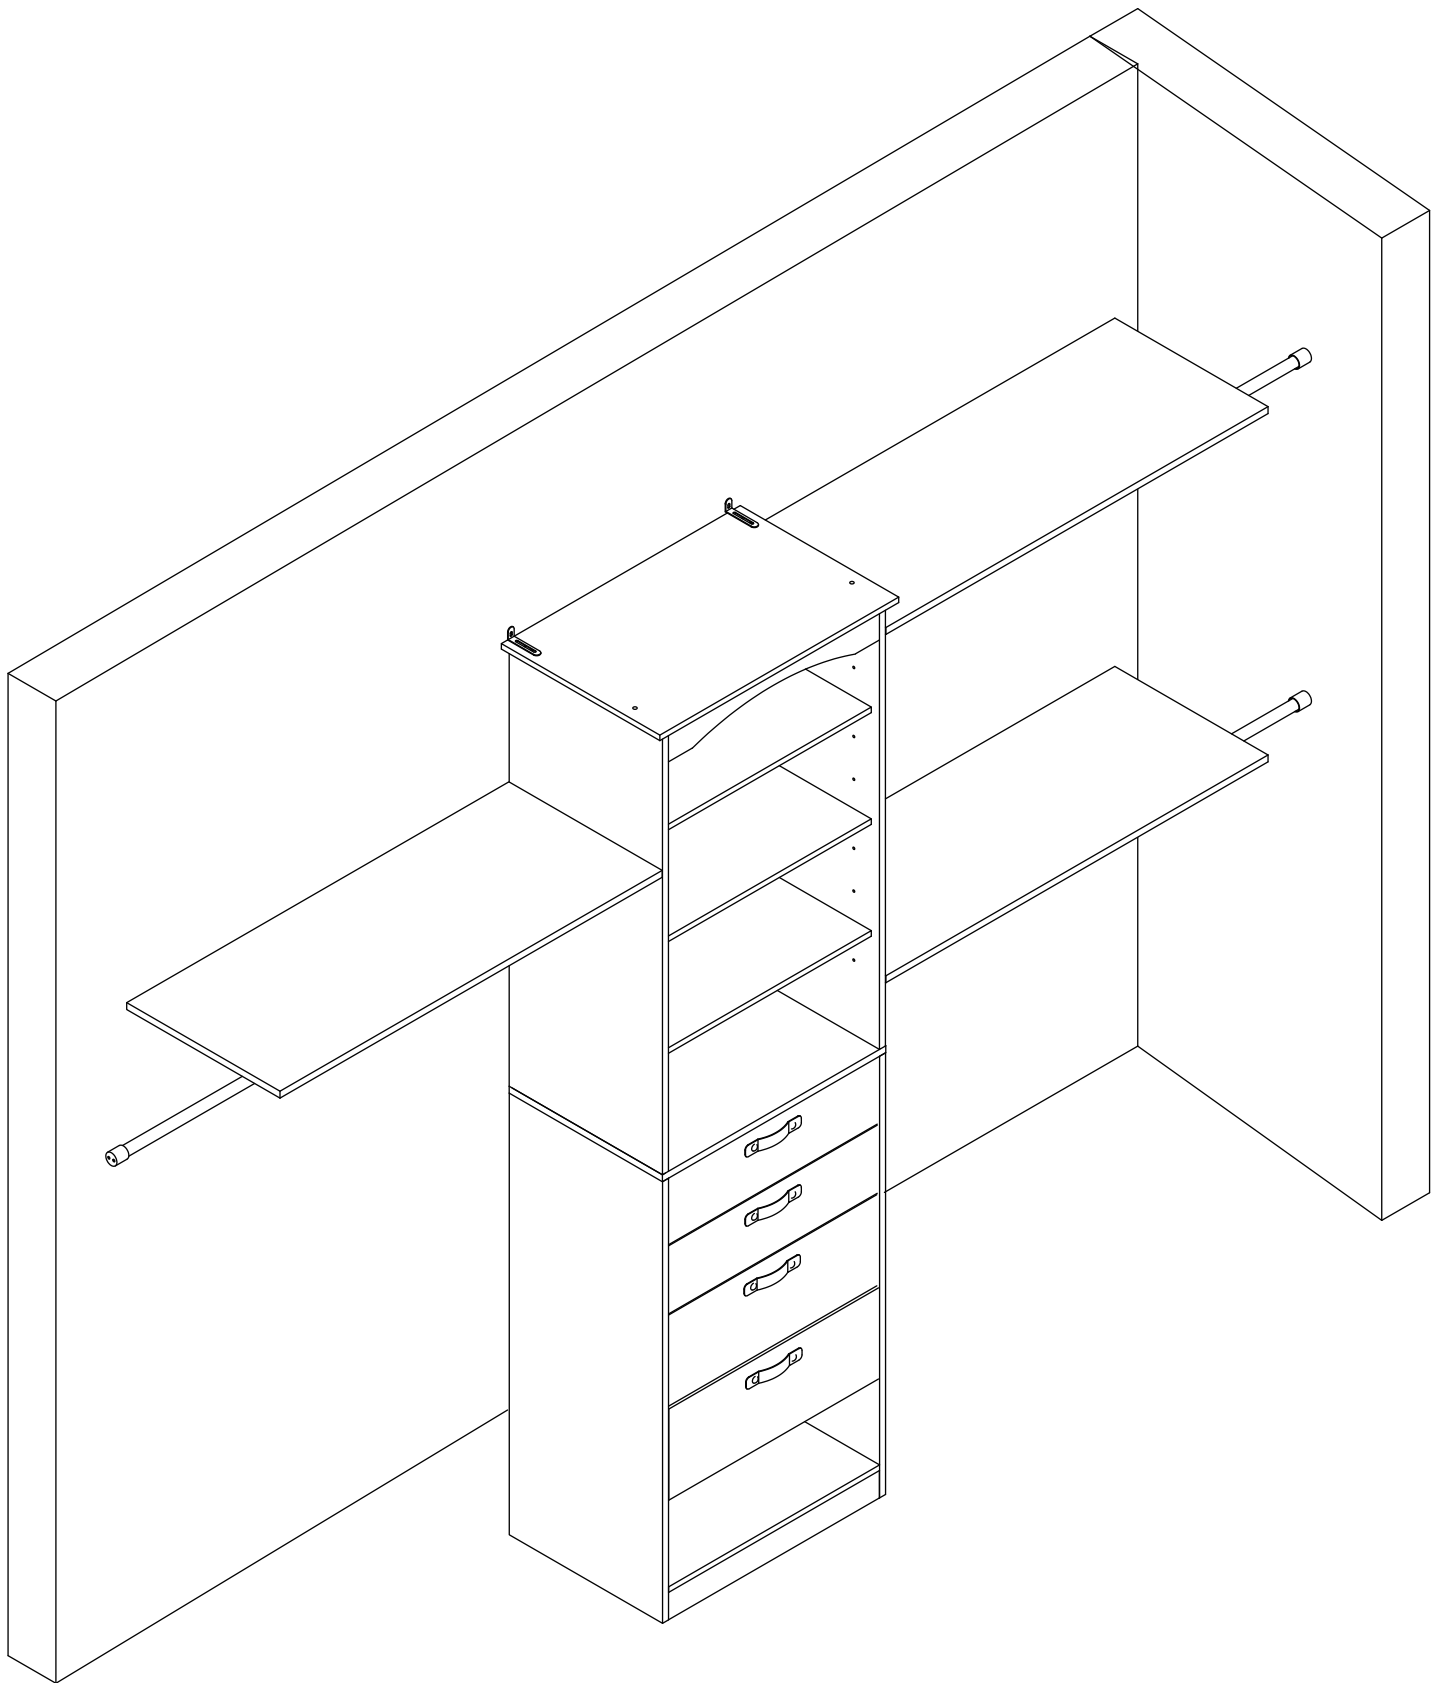

Finish!