


# BAR STOOLS










## ASSEMBLY MANUAL

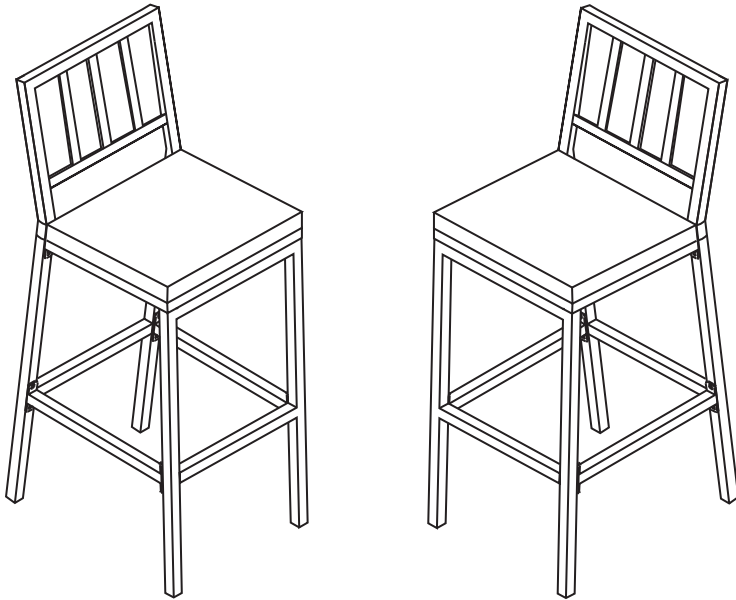

### Dear Customer,

Thank you for choosing our product. Please read this manual carefully before assembling or using this product. If there are parts missing, please kindly send us messages to let us know the name of missing part regarding to the Part List parts list of instructions. We will send replacement to you asap.

# PART LIST

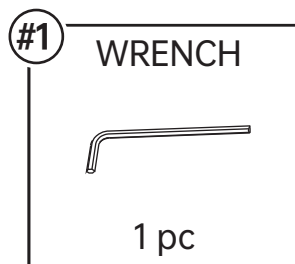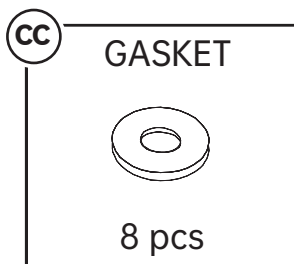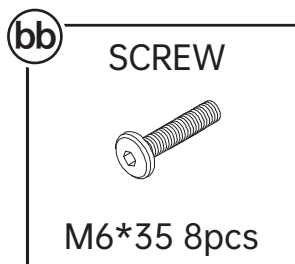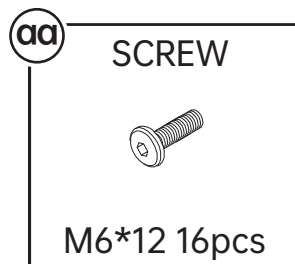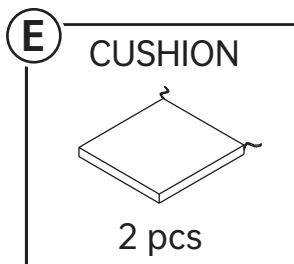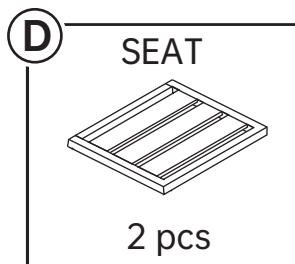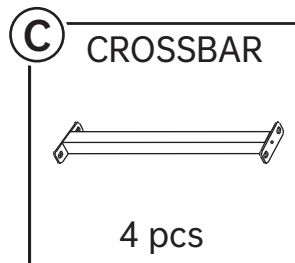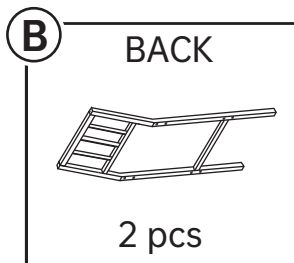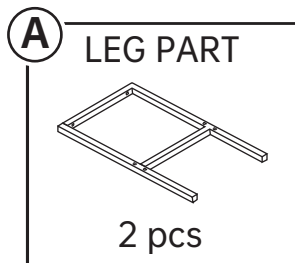

## TOOLS REQUIRED

### NOTE!

The Manual is an example of assembling one chair.



POWERDRILL



260 LBS  
TOTAL CAPACITY









2 PERSON  
ASSEMBLY






UP TO 30 MIN.  
ASSEMBLY

**STEP 1** Place PART B flat, align the two holes of PART B and PART D, and use the Screws bb\*2 and Gaskets cc\*2 to attach the parts.

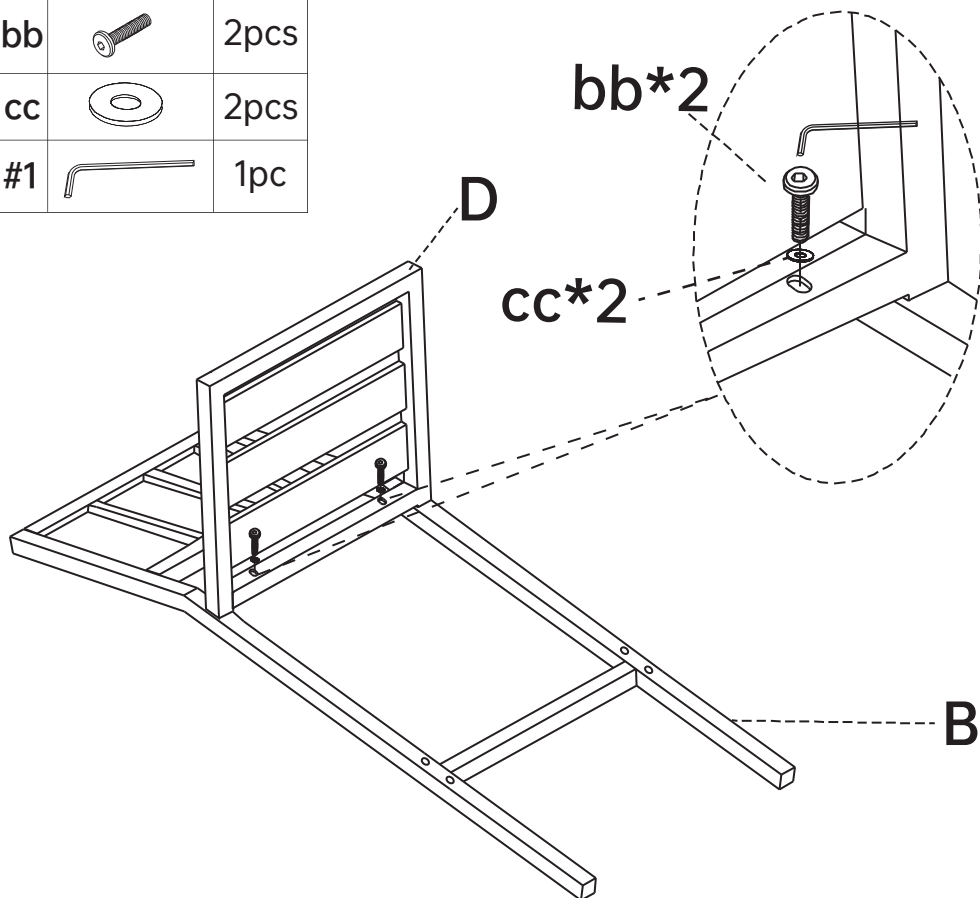D		1pc
B		1pc
bb		2pcs
cc		2pcs
#1		1pc





**STEP 2** Align the two holes of PART C with the two holes of PART B and mount with Screws aa\*4.

C		2pcs
aa		4pcs
#1		1pc




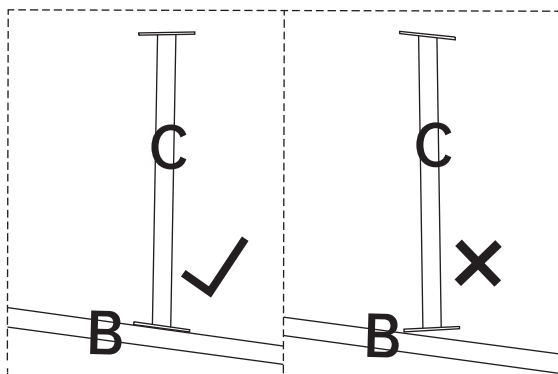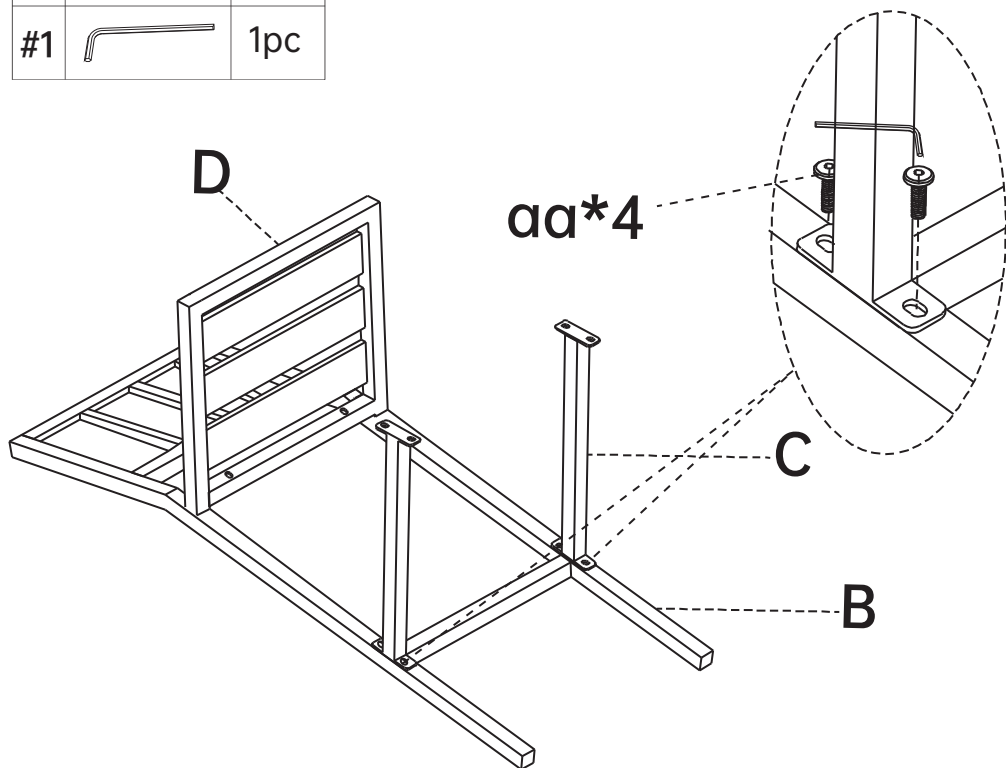

**NOTE!**


PART C must be aligned vertically with PART B, and the angle should be slightly toward PART D.



**STEP 3**

Align PART A with the top holes in PART D. Use Screws bb\*2 and Gaskets cc \*2 to assemble the two holes first. Then align the holes in PART C with PART A, and use Screws aa\*4 to attach them.

A		1pc	cc		2pcs
aa		4pcs	#1		1pc
bb		2pcs			

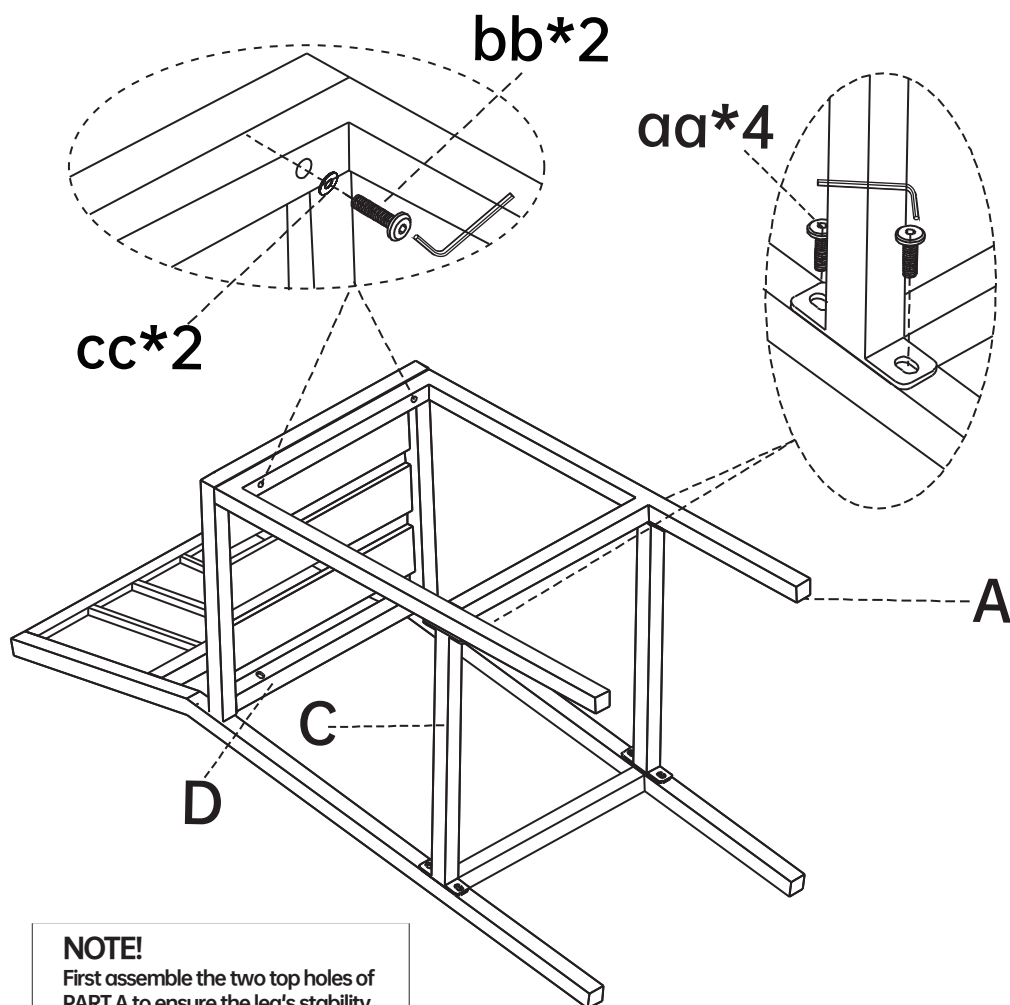**NOTE!**

First assemble the two top holes of PART A to ensure the leg's stability.

**STEP 4**

Place the cushions. Each cushion has two velcro straps to prevent the cushions from sliding.

