


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (8) Allen Bolts M6 x 40mm
- B (4) Allen Bolts M6 x 30mm
- C (6) Allen Bolts M6 x 45mm
- D(4) Wood Screws
- E 18) Spring Washers
- F(14) Flat Washers
- G (1) Allen Wrench

PARTS LIST

- K (1) Stool Back
- L (1) Seat Cushion
- M (1) Seat Base
- N (4) Wooden Legs
- P (1) Large Support Ring
- Q (1) Small Support Ring


PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	8		B	4	
C	6		D	4	
E	18		F	14	
G	1				

STEP 1

Begin by attach the Wooden Leg (N) Small Support Ring (Q) by using 1 Allen Bolt (A), 1 Spring Washer (E) & 1 Flat Washer (F) per each Leg. Do not fully tighten all bolts.

STEP 2

Slowly place the Support Ring (P) to each Wooden Leg (N) by using 1 Allen Bolt (A) & 1 Spring Washer (E) per each Leg. Tighten all bolts from Step 1 using Allen Wrench (G) that has been provided.

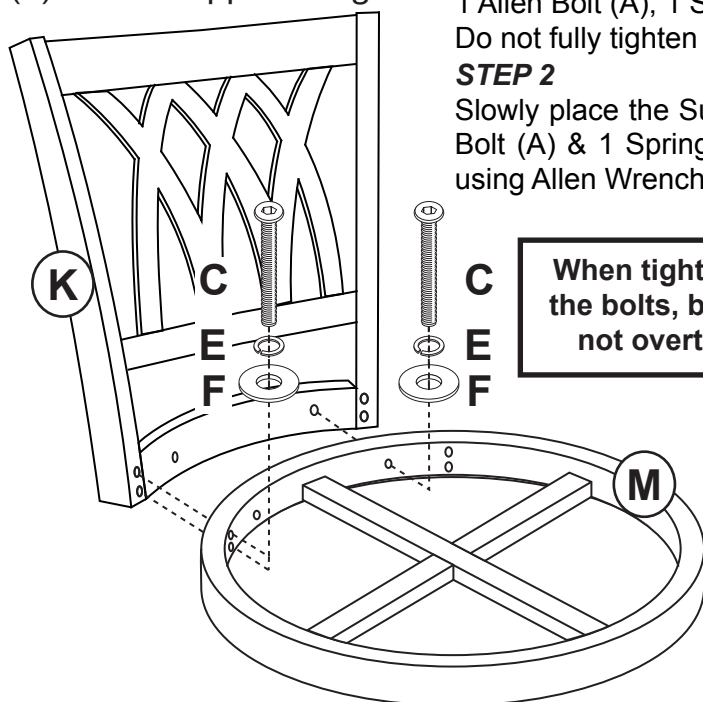

STEP 3

Attach the Stool Back (K) to the Seat Base (M) by using 3 Allen Bolts (C) 3 Spring Washer (E) & 3 Flat Washer (F) per each side. Tighten all bolts using Allen Wrenches (F).

STEP 4

Next attach the Seat Base (M) to the pre-assembled Swivel Metal Plate using 4 short Allen Bolts (B), 4 Spring Washers (E) & 4 Flat Washers (F) to secure in place from the bottom. Tighten all bolts.

STEP 5

Next attach the Seat Cushion (L) to the Seat Base by using 4 Wood Screws (D) and assemble thru the metal bracket. Tighten screws using a philips head screwdriver (not included).

The assembly is now complete

