

■ Know Your Shade


Number of parts included for each shade:

Shade width	Brackets	Hex-Head Screws	Flat Head Screws	Handle
$24'' \leq W \leq 38''$	2	4	4	1
$38'' < W \leq 72''$	3	6	6	2


2 of headrail end caps
2 of bottom rail end caps

- Bracket 
- Hex-Head Screw 
- #4 x 3/4" Flat Head Wood Screw 
- Handle 
- 2 Headrail End Caps

Left side:



Right Side:




- Bottomrail End Cap




■ Install End Caps

Install Left and Right Headrail End Caps by sliding both top tabs into the top of the headrail

Left Side:

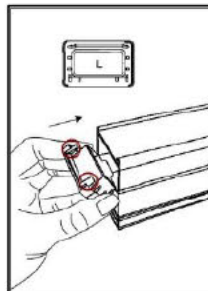


Right Side:

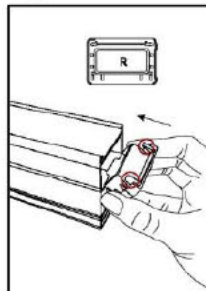

To install Bottom Rail Left and Right End Caps, match the flat side of end caps with the bottom rail of your shade (For bottom rail end caps, left / right side are the same). By using the flat surface on end caps, push fabric/ stiffener against end of rail and slide end caps into side of the rail

Left Side:

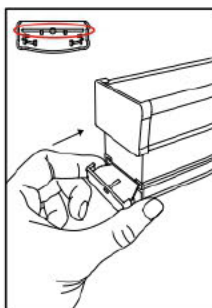


Right Side:



■ Inside Mount

Position brackets along the top of the window opening in the desired location. Remember to leave few inches away from each side of your window.

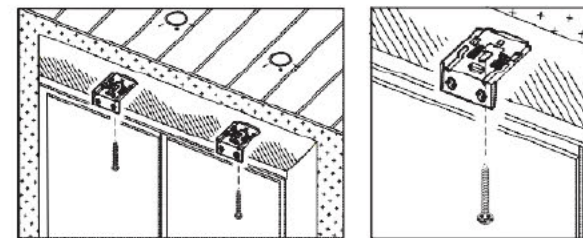


Make sure both brackets are aligned. The "L" shape opening should be facing down, with longer side against the top of the window opening.

Option 1. Install brackets with hex-head screws

Insert and fasten 1 hex-head screw into the oval opening at the top center.

Option 2. Install brackets with flat-head screws


Insert and fasten flat-head wood screws to the round opening at the top rear side.

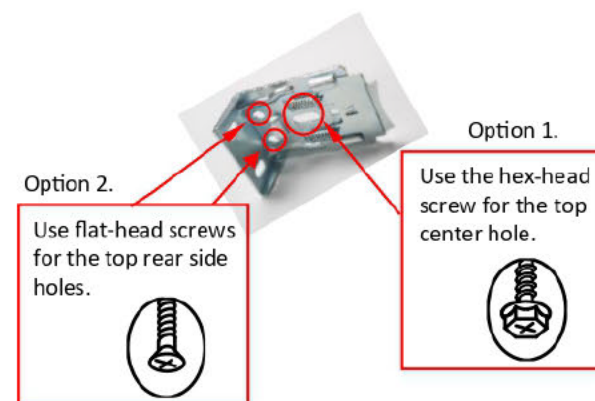

DO NOT use hex-head screws for holes at the rear side of the bracket for inside mount. It will prevent your shade from clicking in place. The two rear side holes only work with flat-head screws.


■ Outside Mount

Position brackets above the window opening. Remember to leave the brackets few inches away from each side of your window. Spread them out evenly by having same distance from each side of the window.

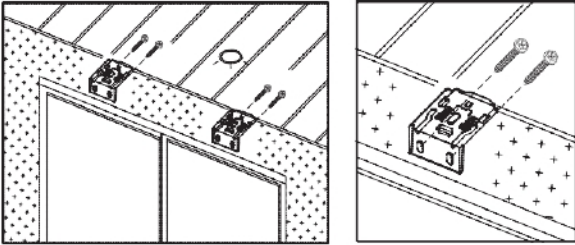


Make sure brackets are aligned. "L" shape opening should be facing down, with shorter side against the wall.

Insert 2 hex-head screws into both openings and fasten.

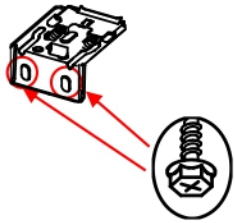


■ Mount Shade on Brackets

Install the headrail by hooking the front of the bracket and push the shade towards back of brackets, in a rolling motion, until clicks place.

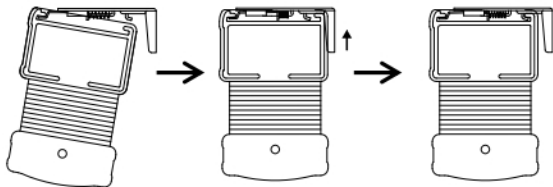

■ Installing Handle

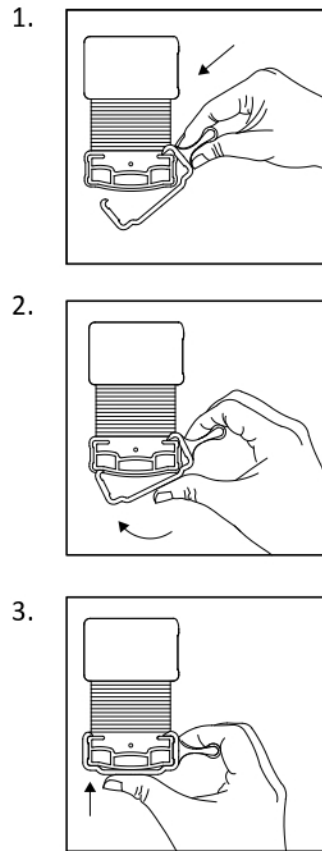

Transparent Cordless Handles should be operated from the center of the bottom rail.

For shade width $38'' < W \leq 72''$, spread handles out evenly- by having the same distance from each side of the window.

To insure proper usage of cordless shades, be sure to extend and retract shade steadily assuring the cord to stack evenly.

****Please allow 24 hours for your shade to drop to its actual height when first installed due to the nature of the fabric.**

CORDLESS CELLULAR SHADE INSTALLATION INSTRUCTIONS