Assembly Instructions




Filing Cabinet

Model No.

HOGA-F2349-B

Contact Us


We're here to help you.

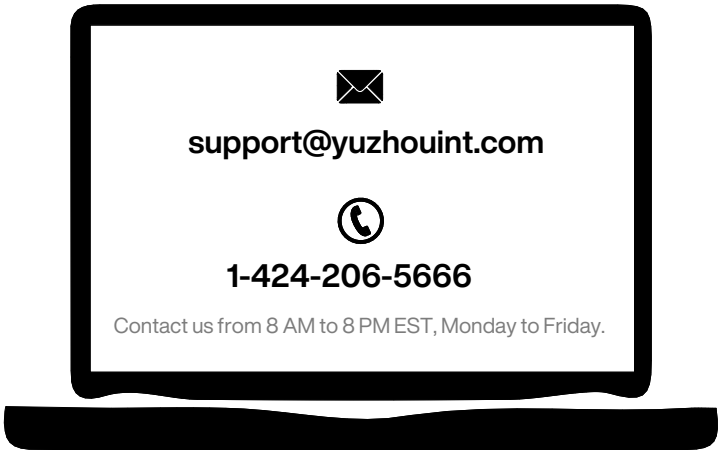

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

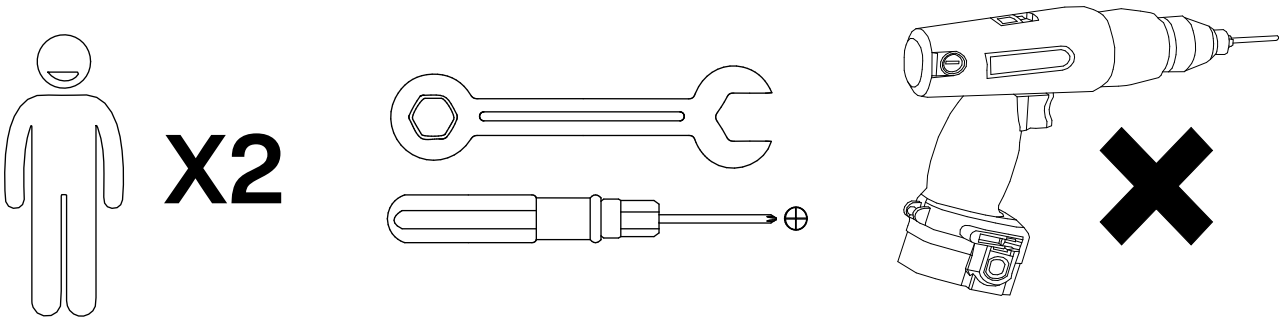


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

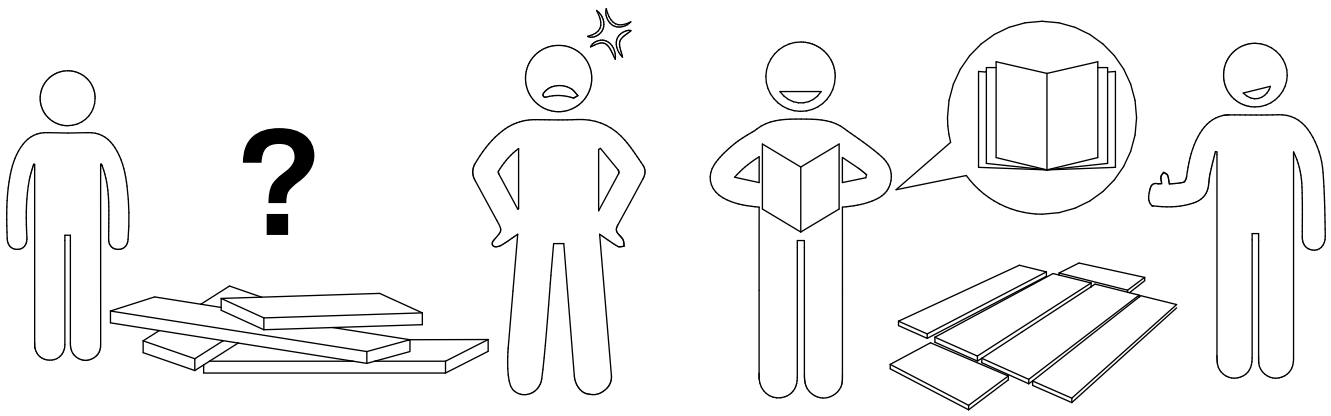

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

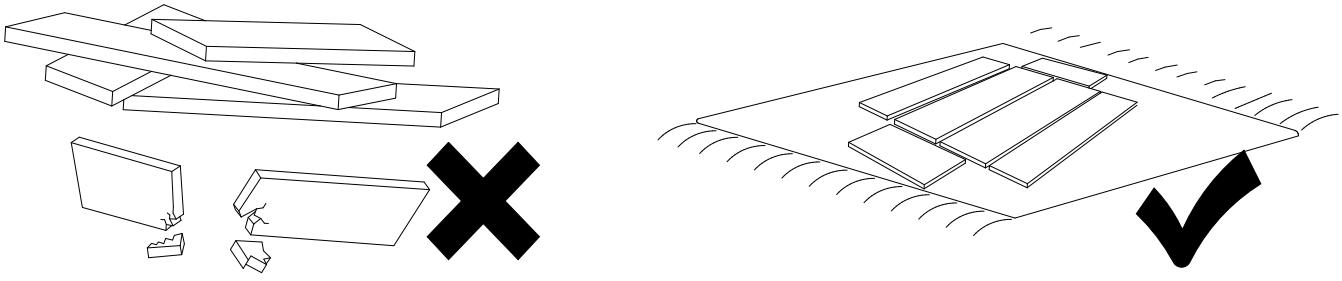


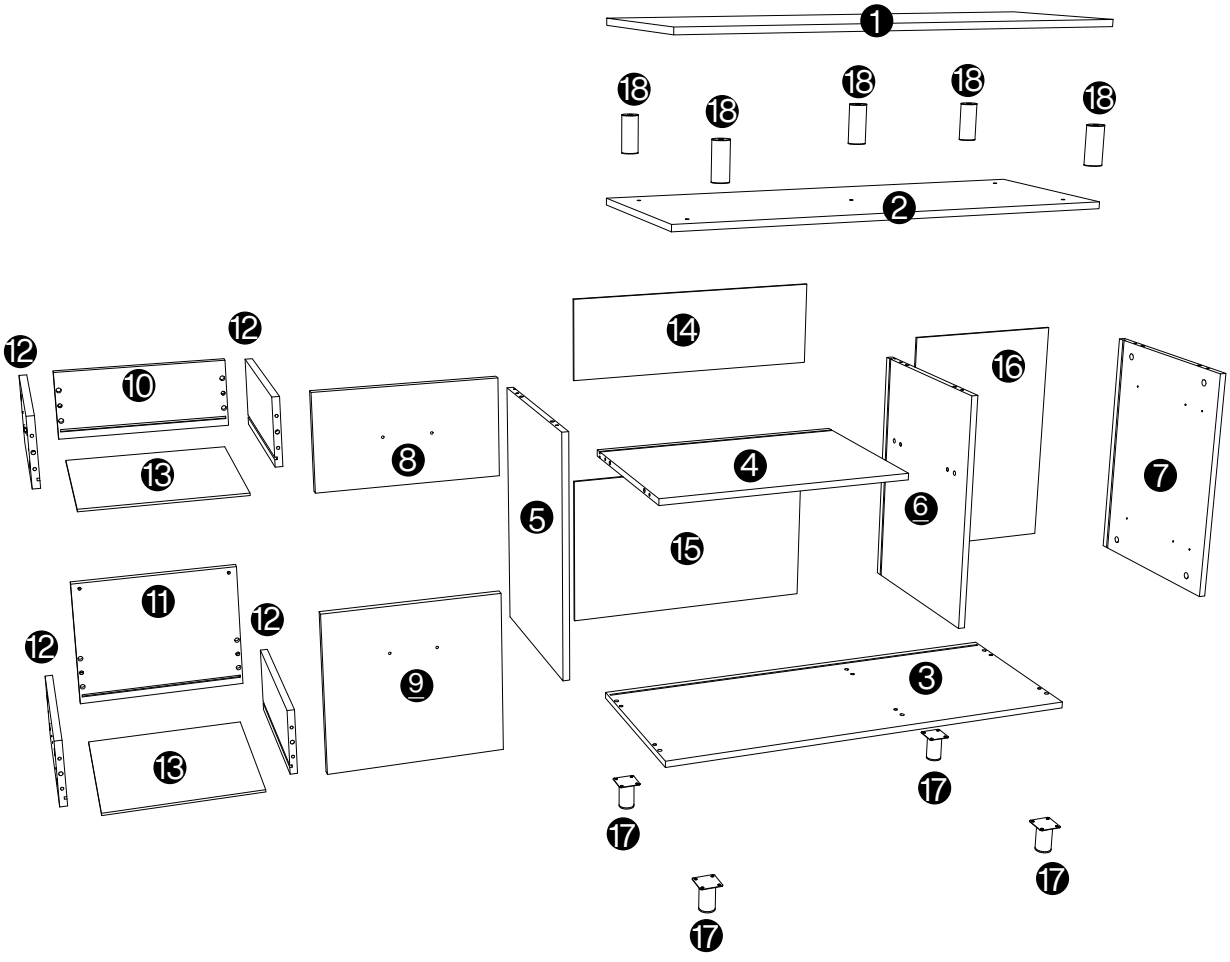





⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

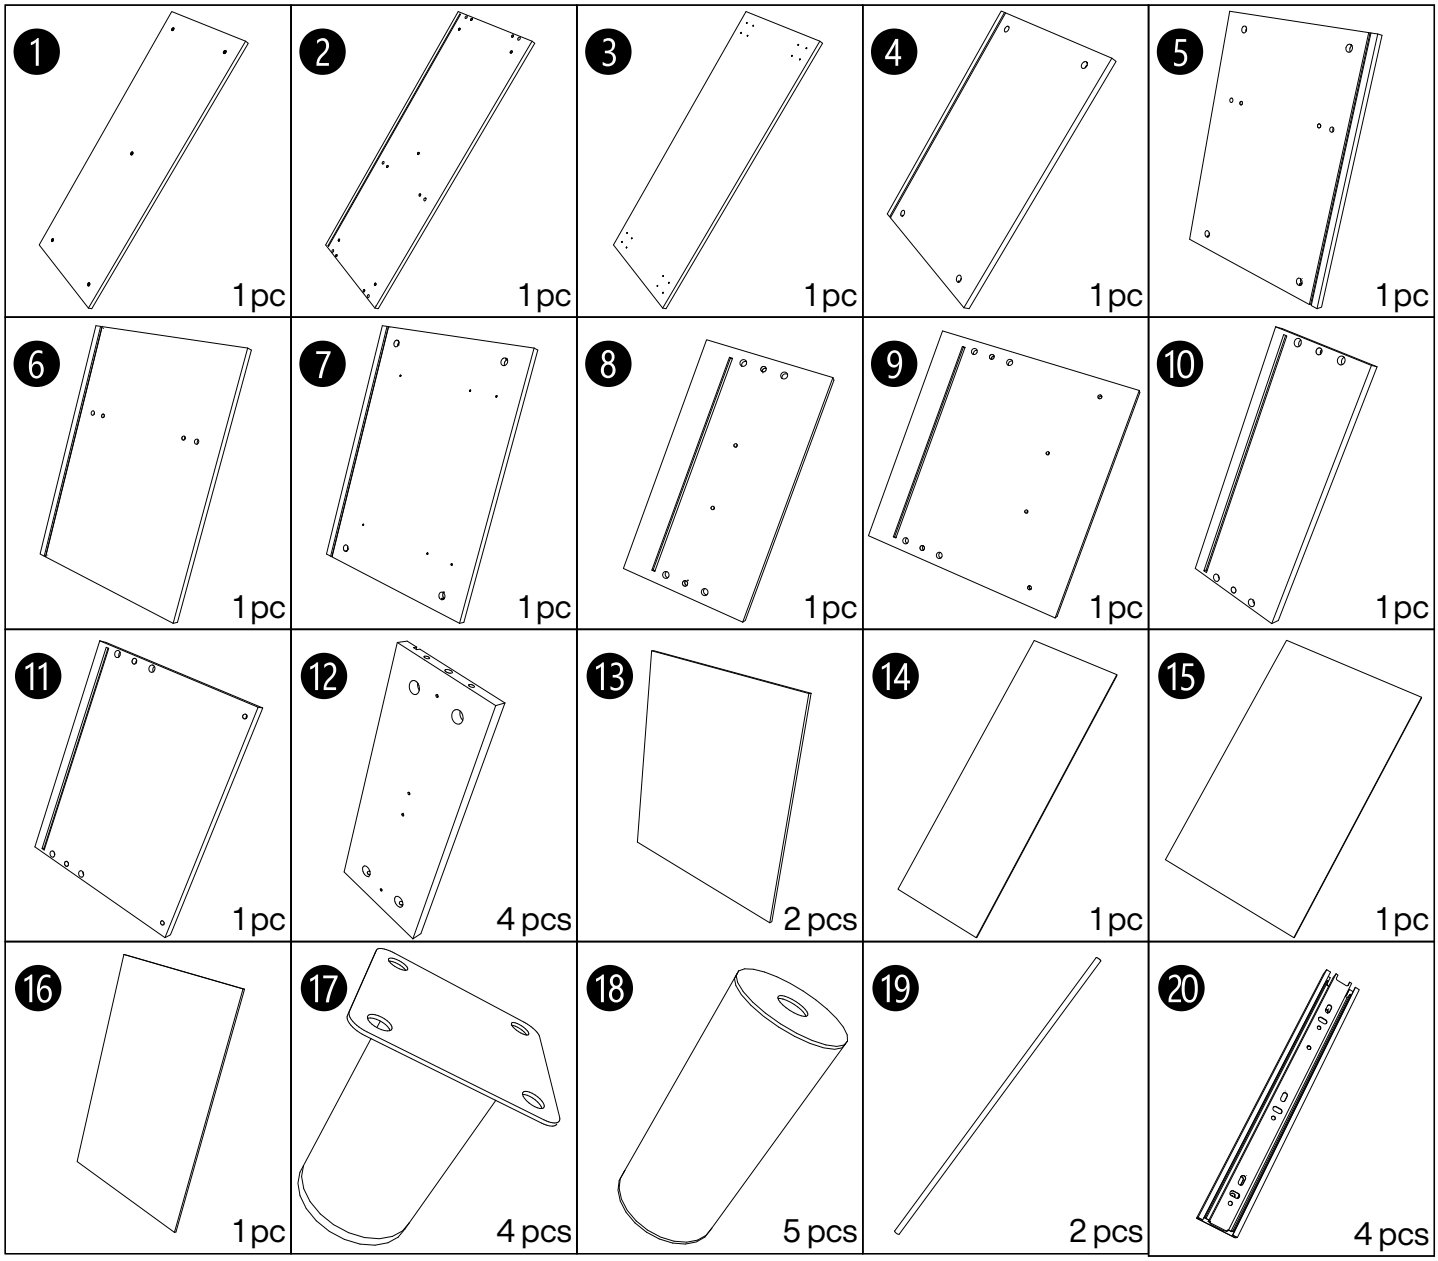


Hardware List

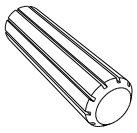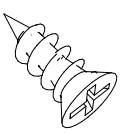A	B	C	D	E	F	G
						
M6x40mm	Ø15x12mm	Ø8x30mm	M6x110mm	Ø3.5x12mm	Ø3.5x14mm	Ø20mm
33 pcs	33 pcs	25 pcs	5 pcs	5 pcs	41 pcs	5 pcs

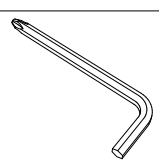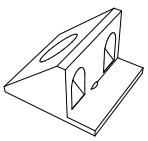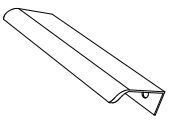
H	I	J	K	L
				
M4			Ø3.5x18mm	
1 pc	4 pcs	25 pcs	25 pcs	2 pcs


Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

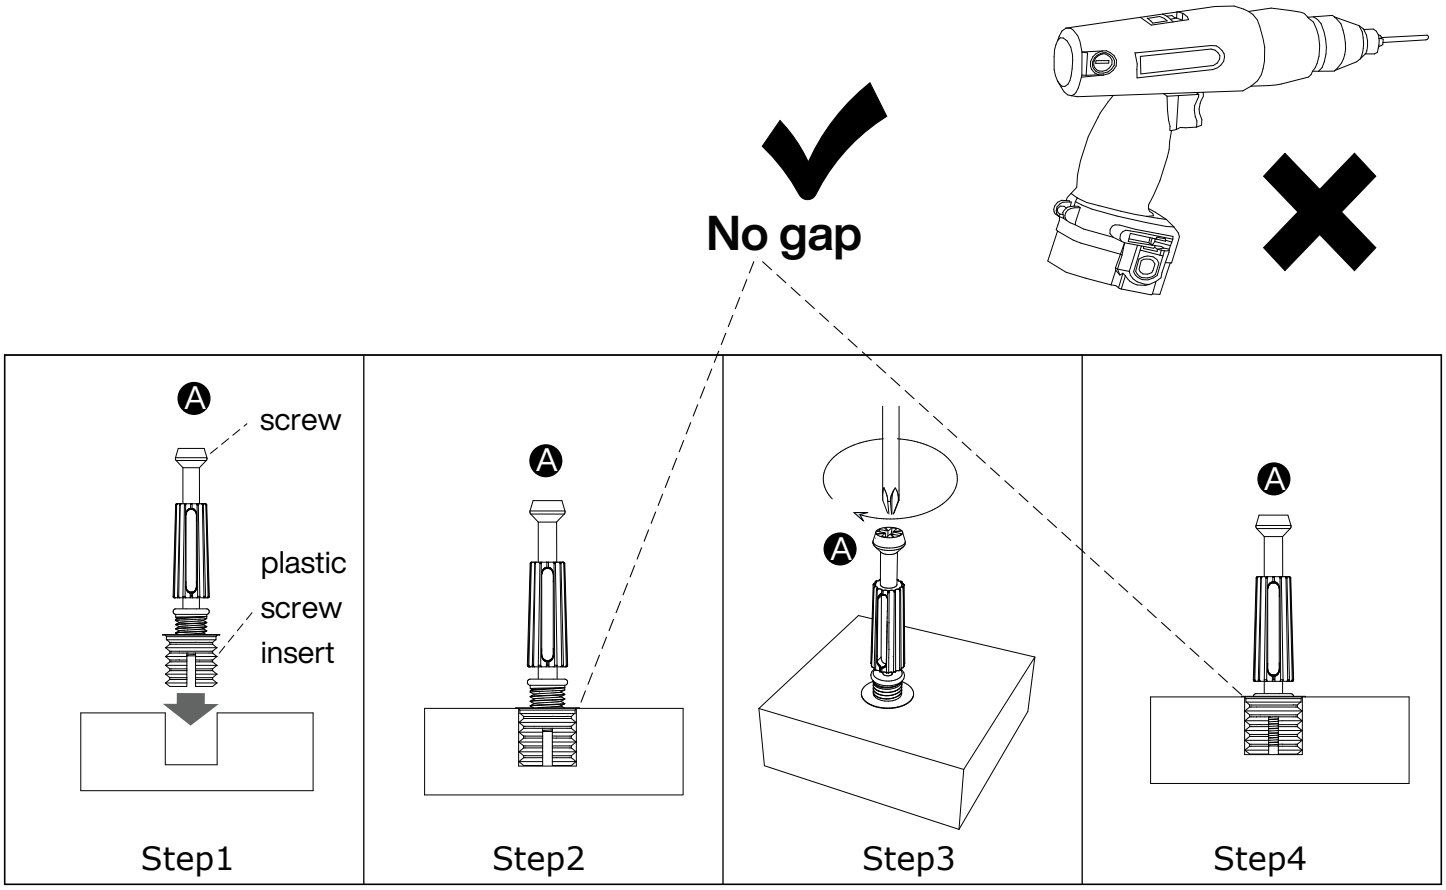



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins.Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

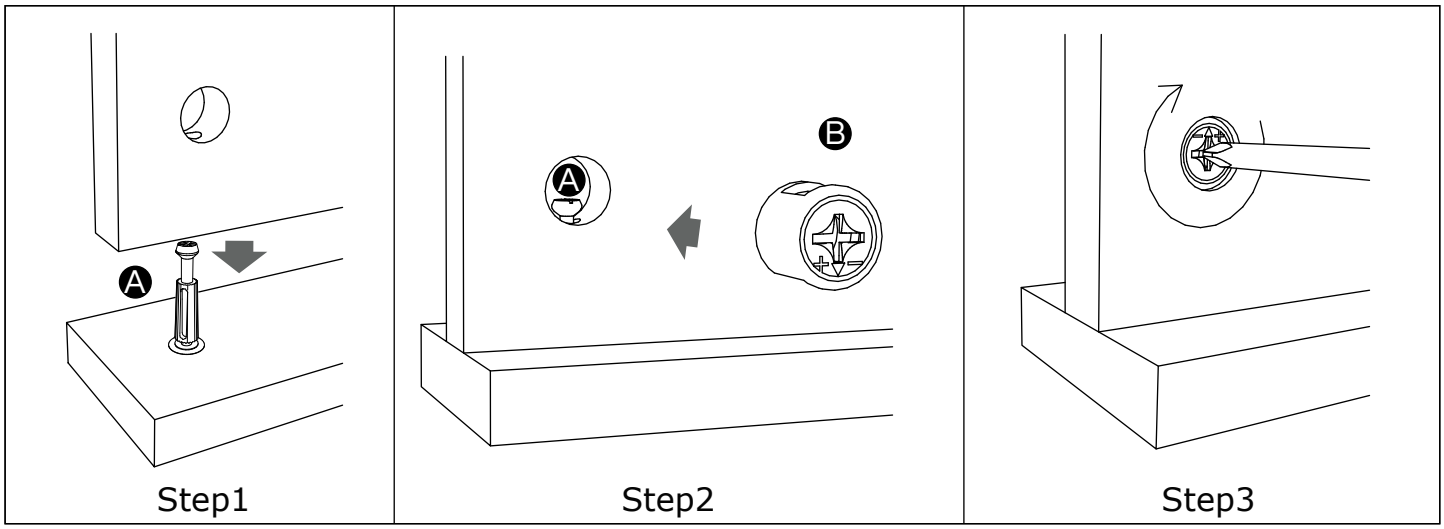

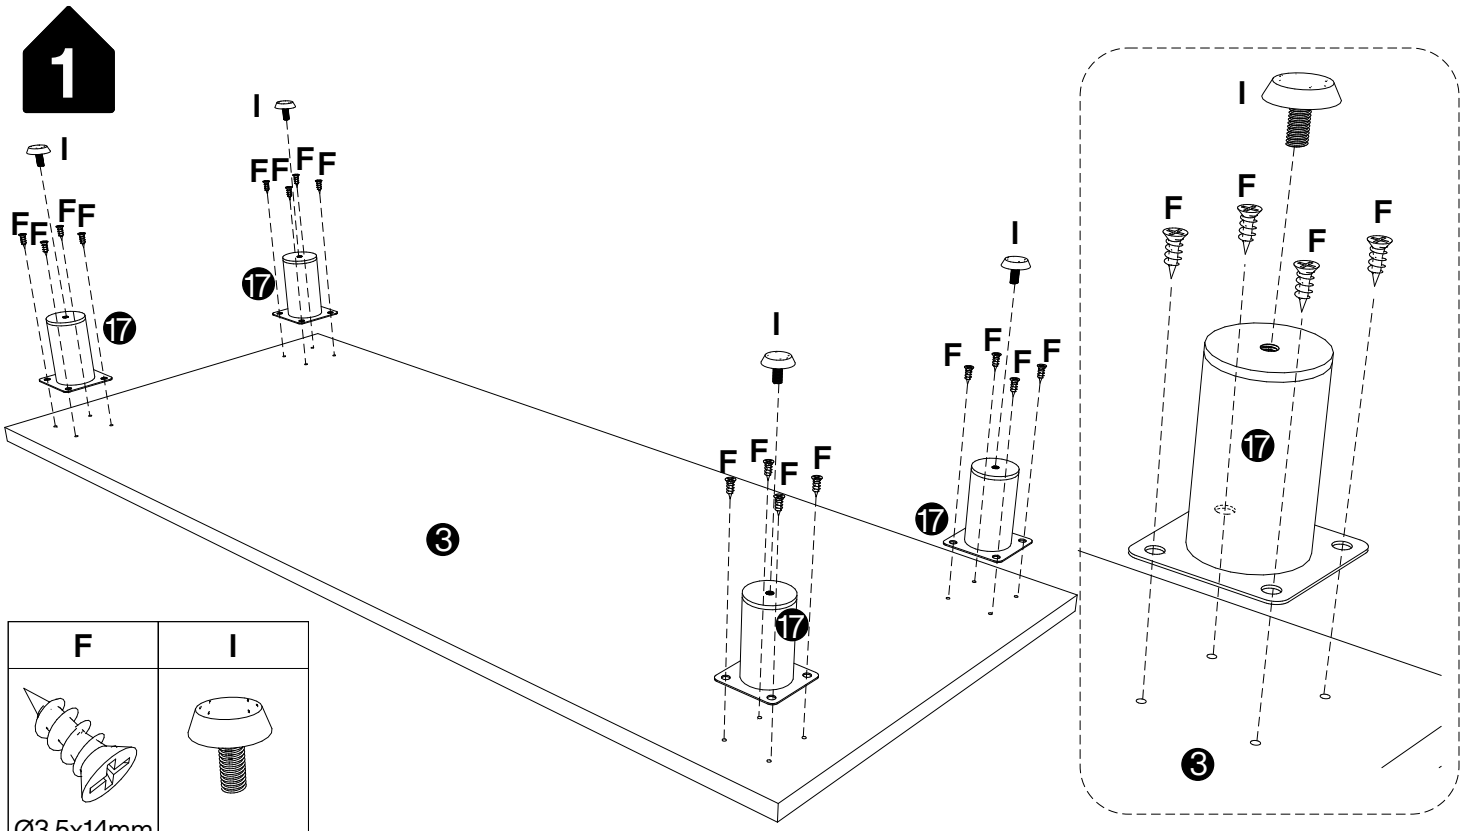


F	I
Ø3.5x14mm	
16 pcs	4 pcs

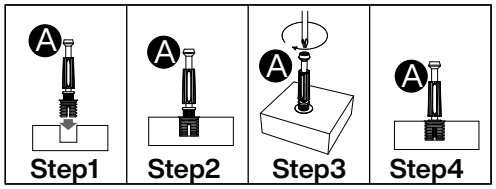


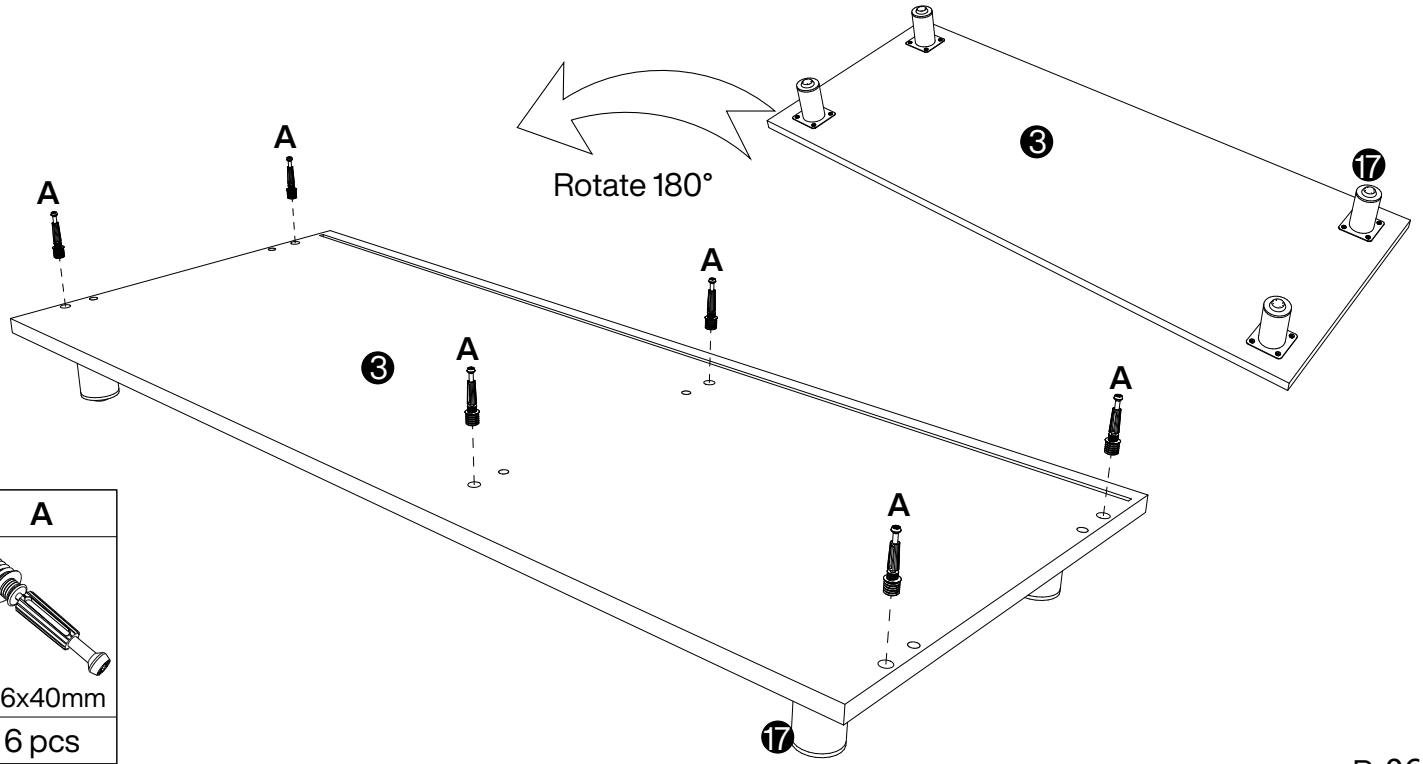


A
M6x40mm
6 pcs

3

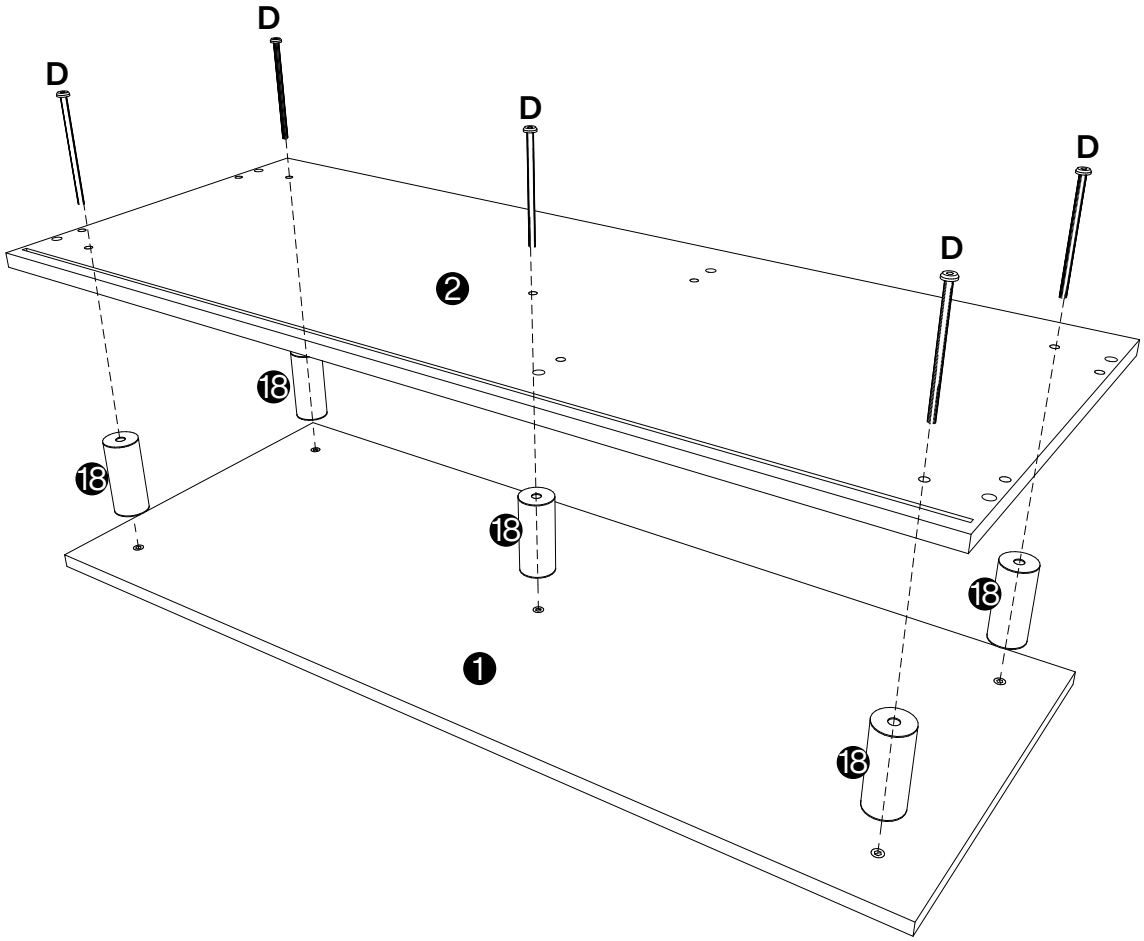

D

M6x110mm
5 pcs

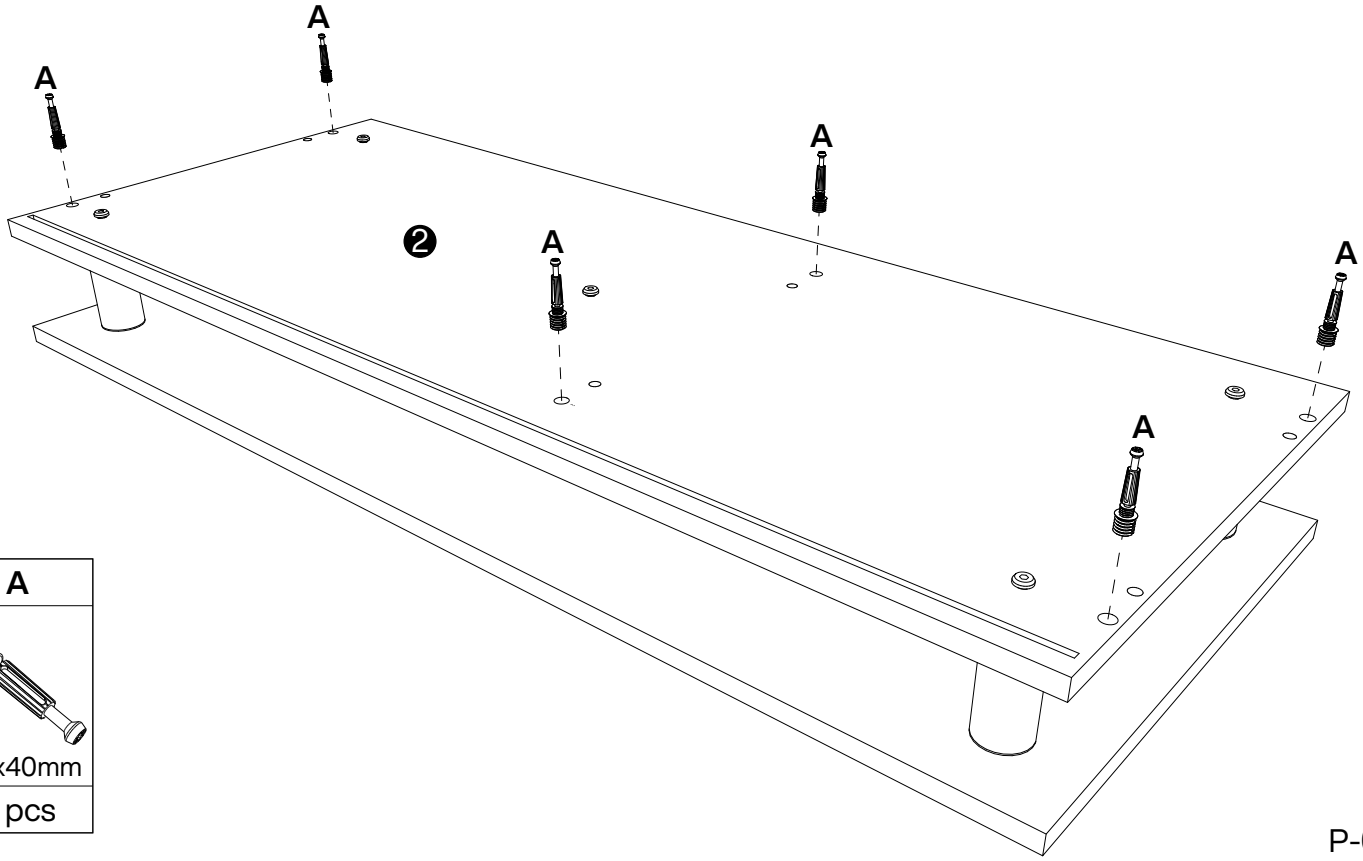4




A
M6x40mm
6 pcs

5

Please split component " ⑳" into "⑳-1" and "⑳-2" before as - sembling the slide and then proceed to the next step of assembly


Step 1

Pull apart component " ⑳ " to each side, and then gently push up the lever of component "⑳ -2"

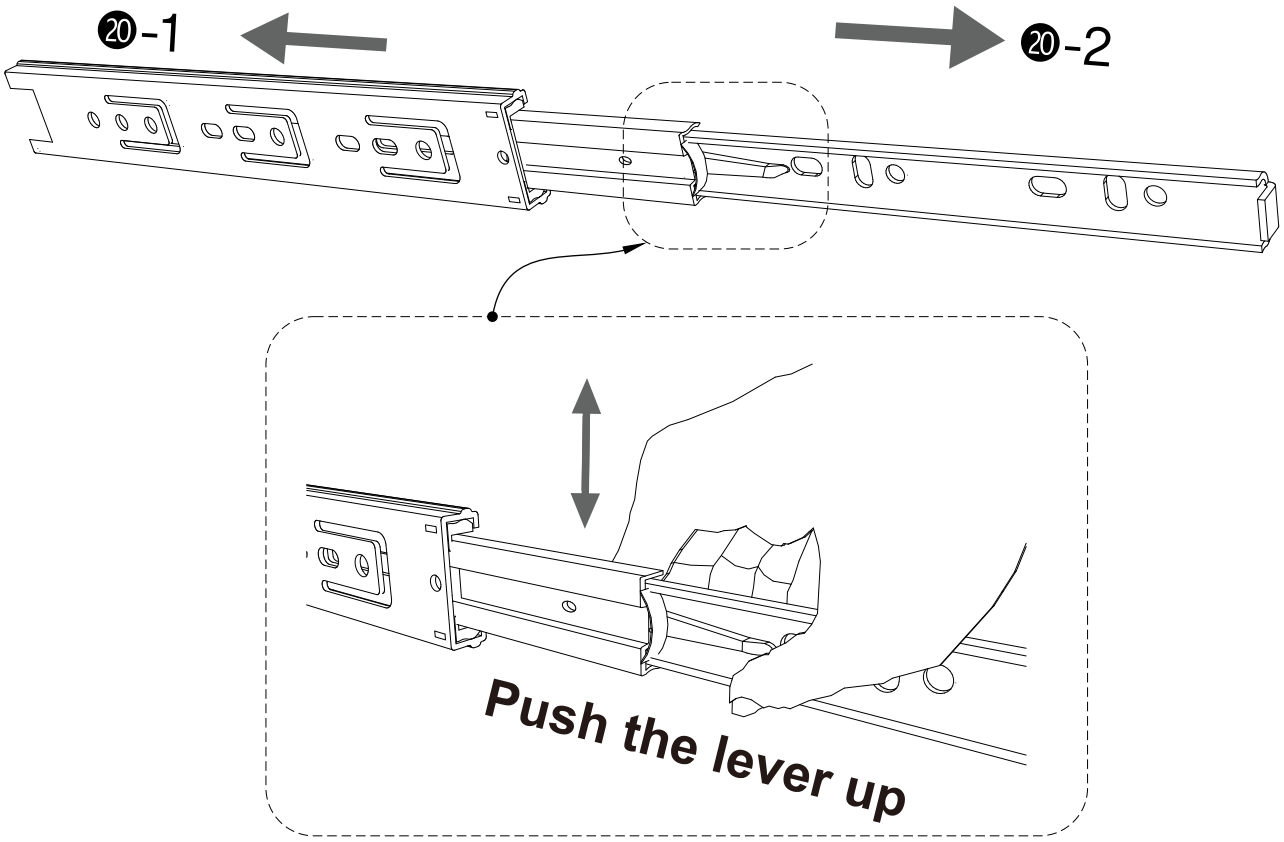



Step 2



Split component "⑳ -1" and "⑳ -2"

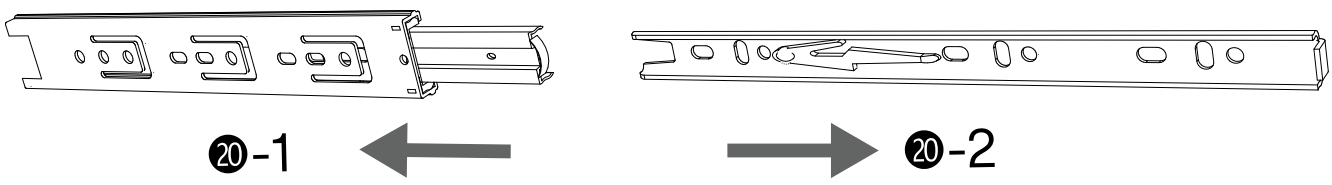


6

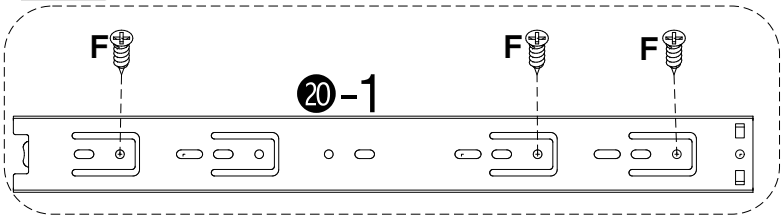

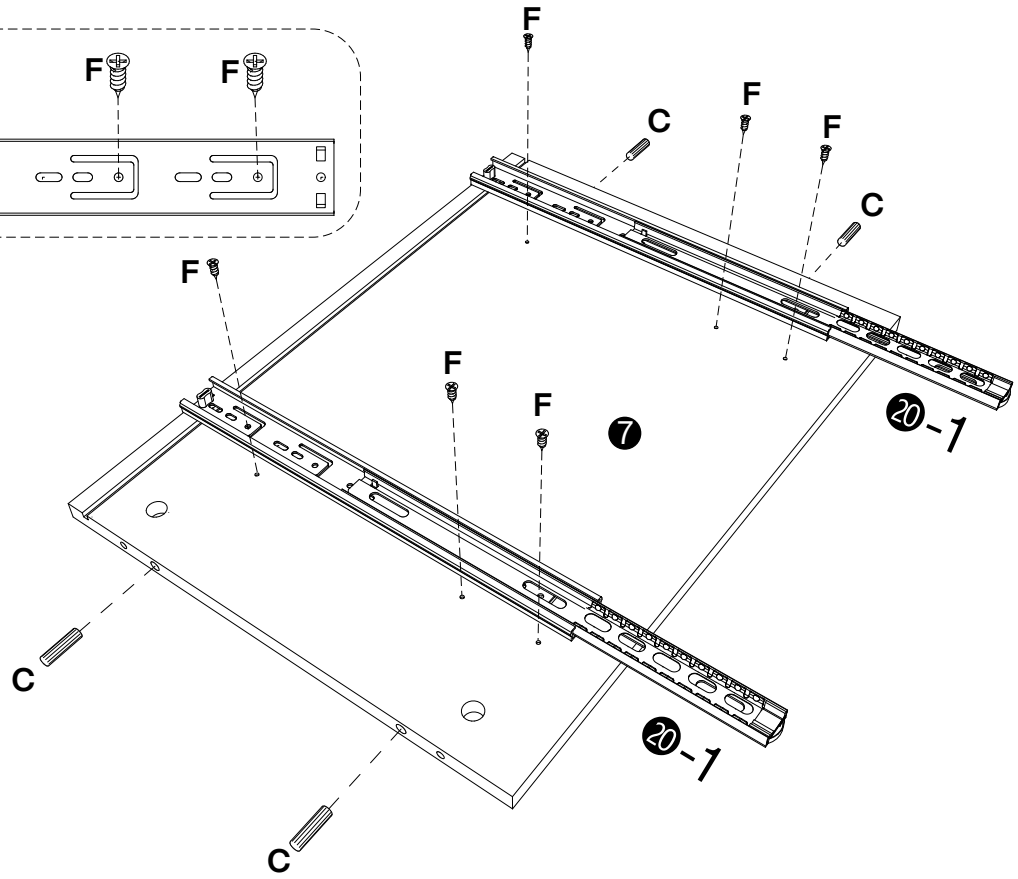

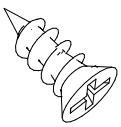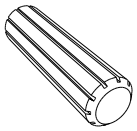
F	C
	
Ø3.5x14mm	Ø8x30mm
6 pcs	4 pcs



7

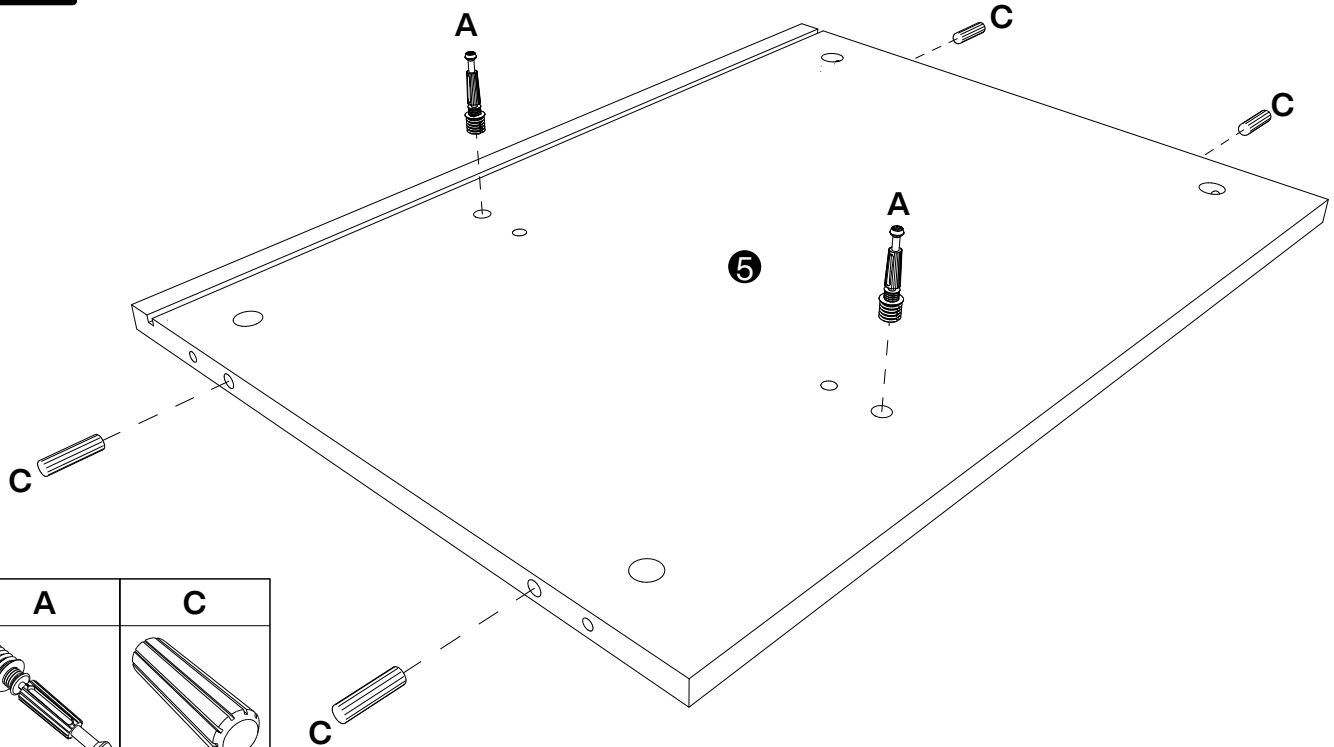


A	C
M6x40mm	Ø8x30mm
2 pcs	4 pcs


8

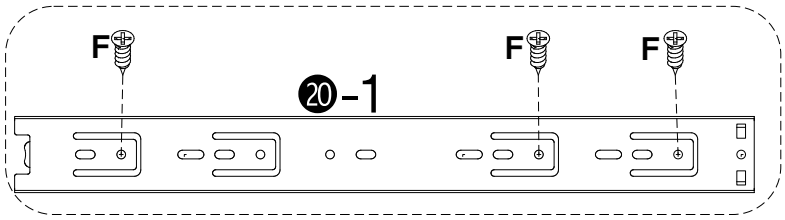

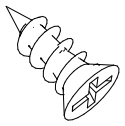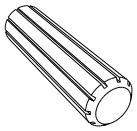F	C
	
Ø3.5x14mm	Ø8x30mm
6 pcs	4 pcs

9

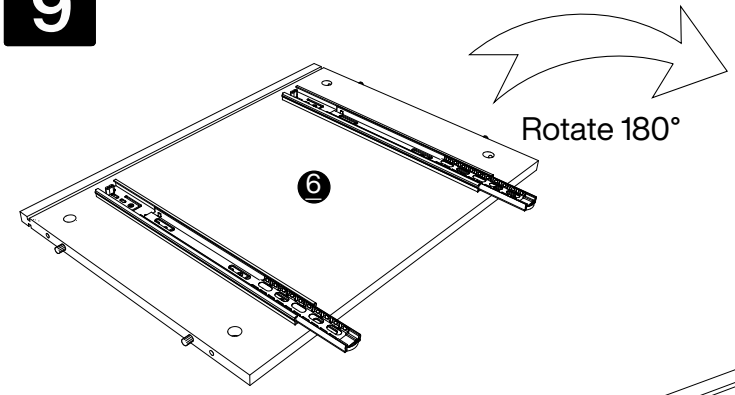


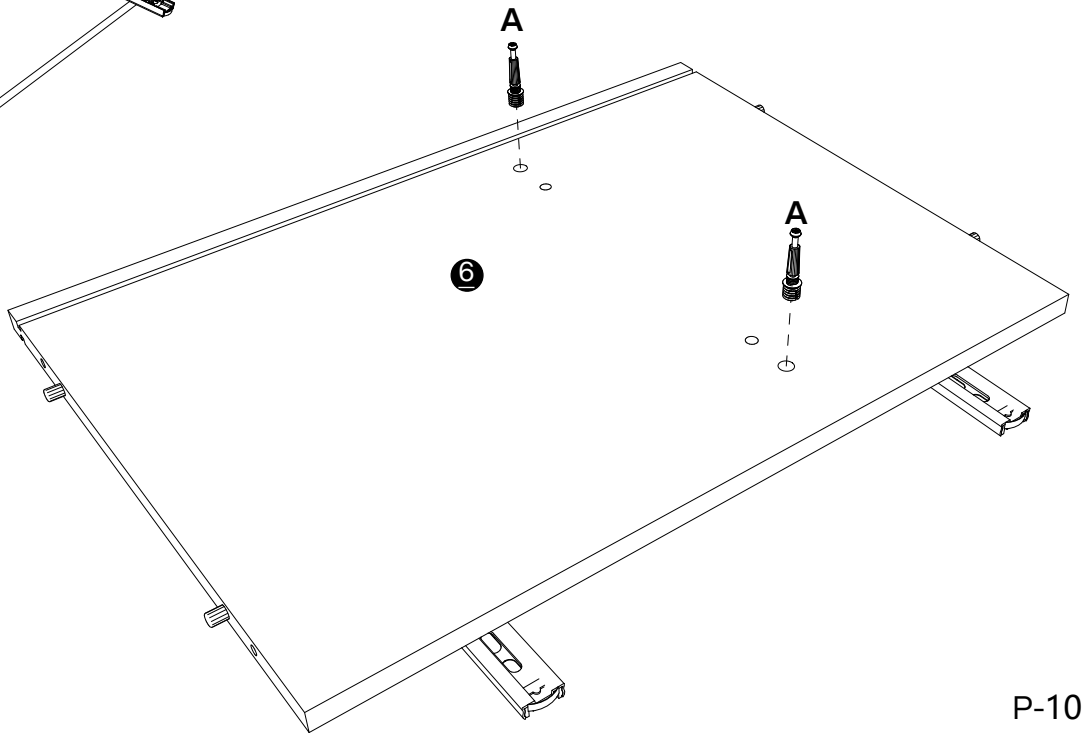


A


M6x40mm
2 pcs

10

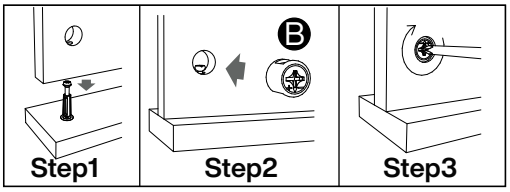


B

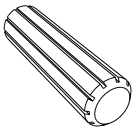
Ø15x12mm
4 pcs
C

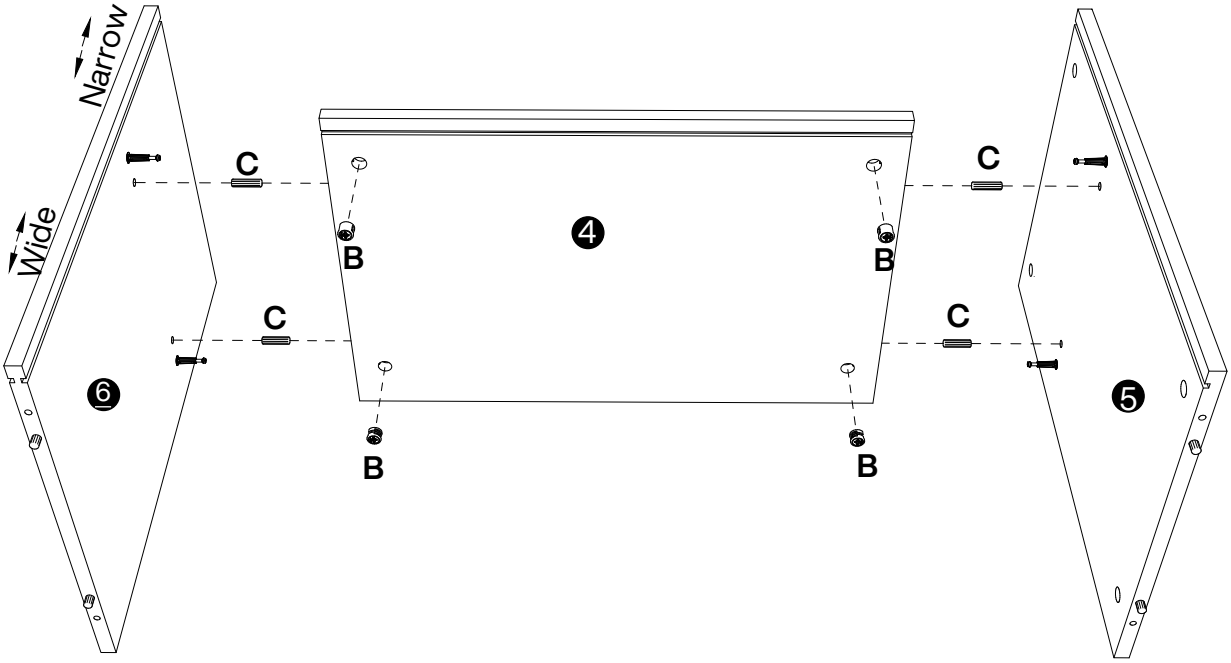Ø8x30mm
4 pcs

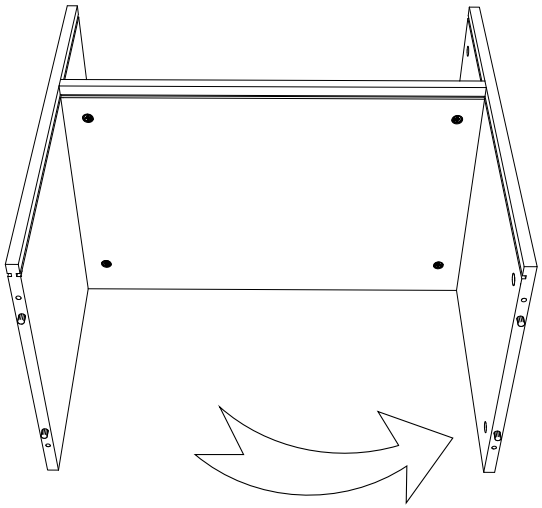


11

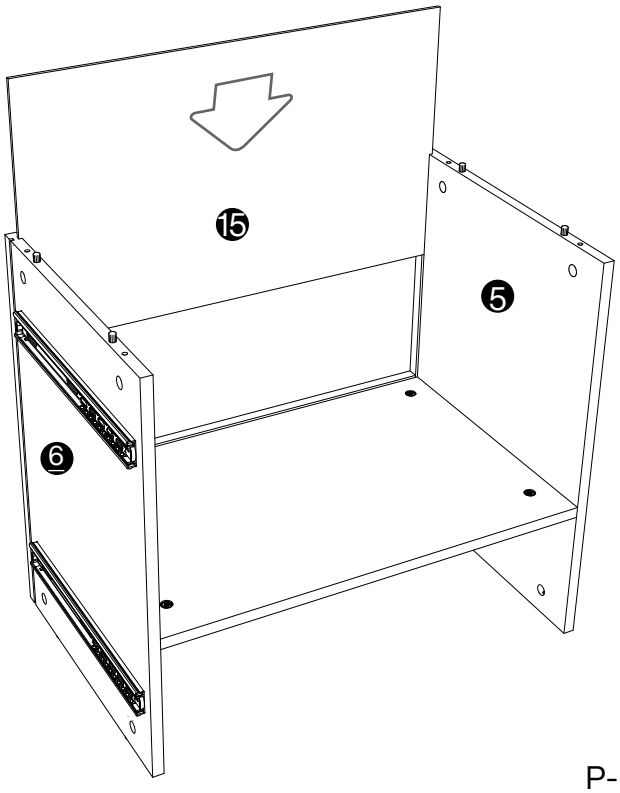

Rotate 90°




12

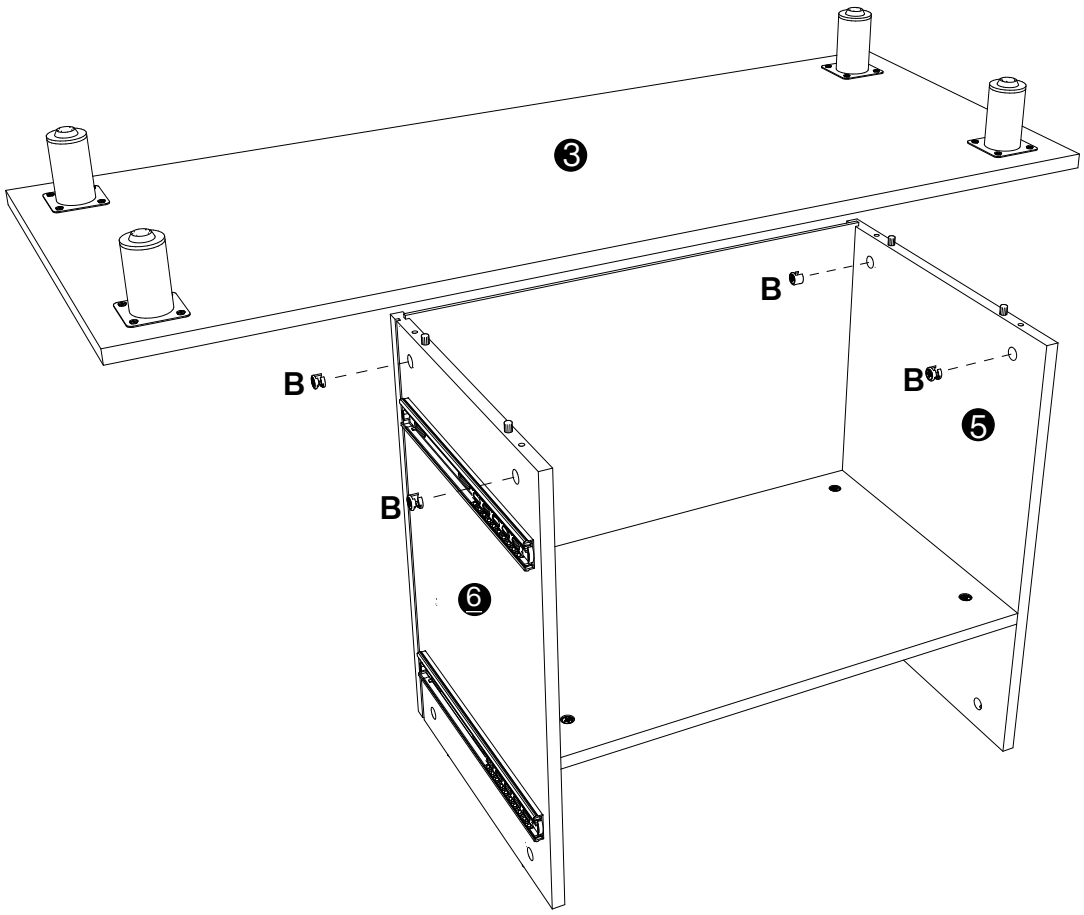

B

Ø15x12mm
4 pcs


13

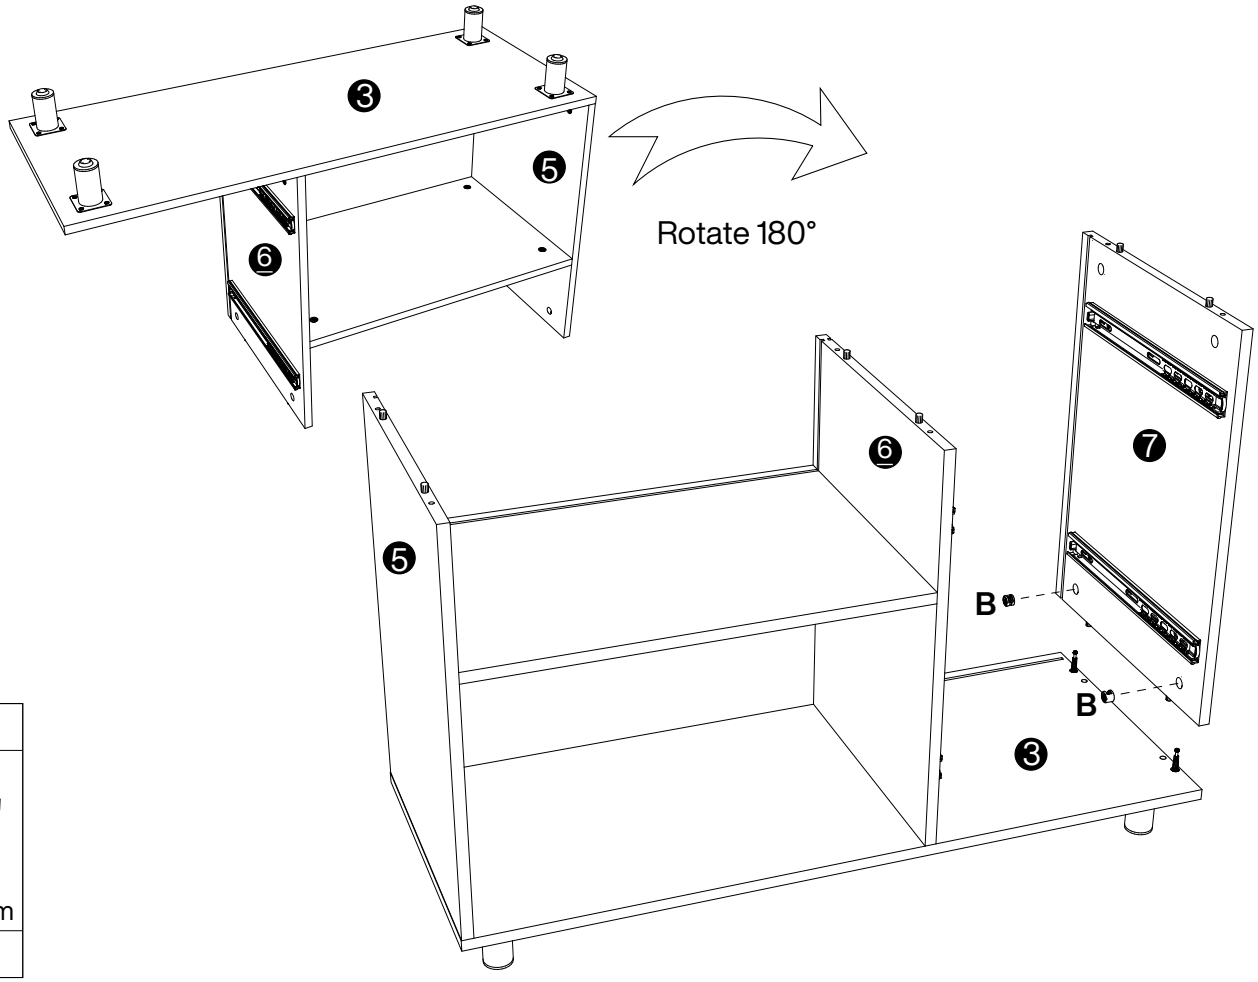

B

Ø15x12mm
2 pcs


14

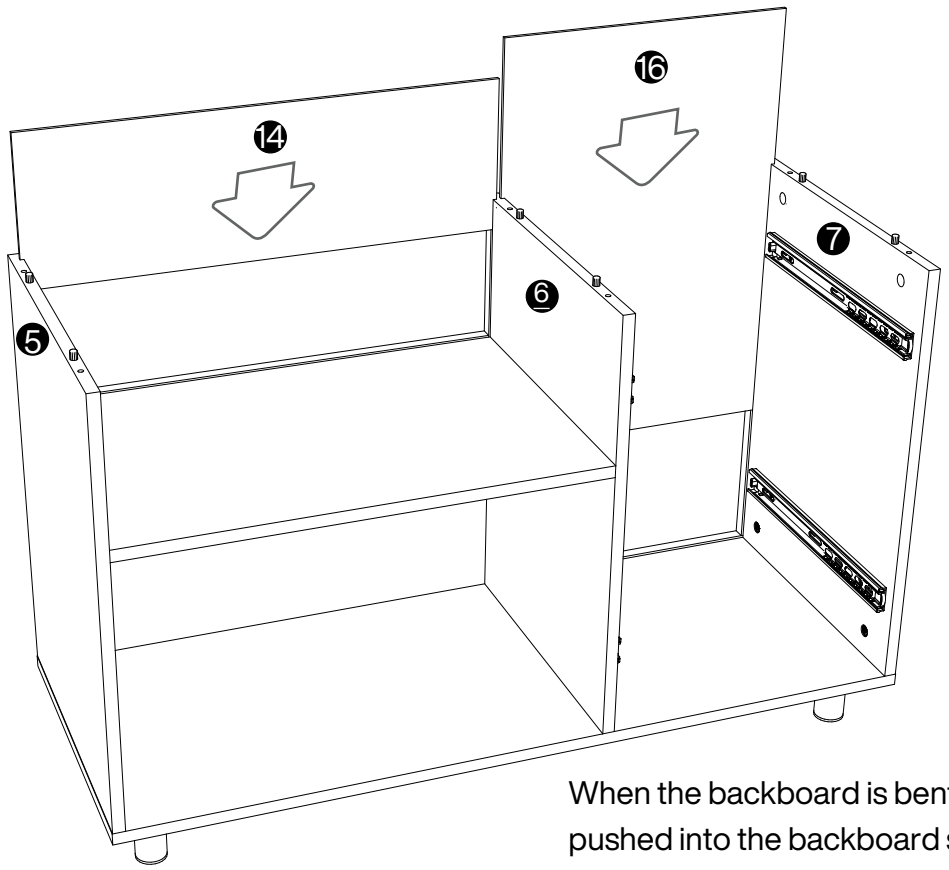


When the backboard is bent, it can be pushed into the backboard slot by hand appropriately

---

15

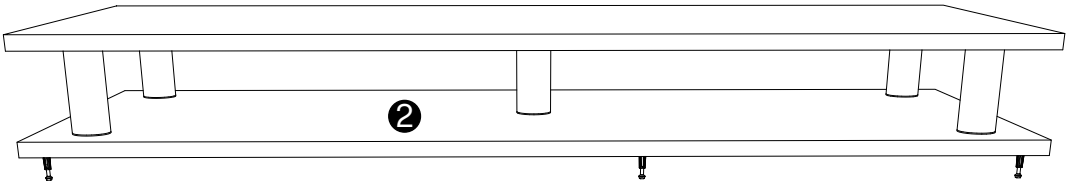



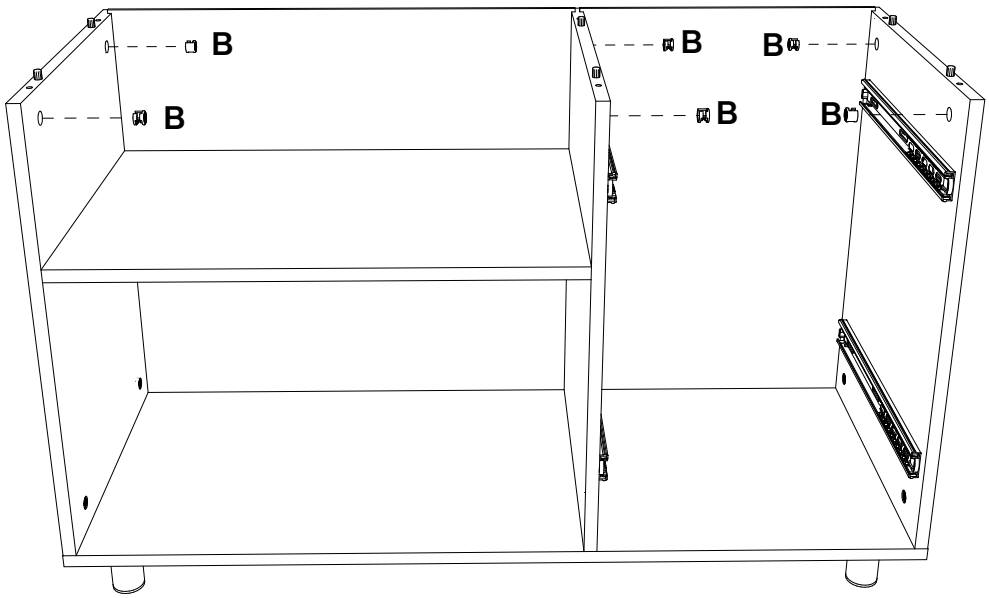



B


Ø15x12mm
6 pcs

16

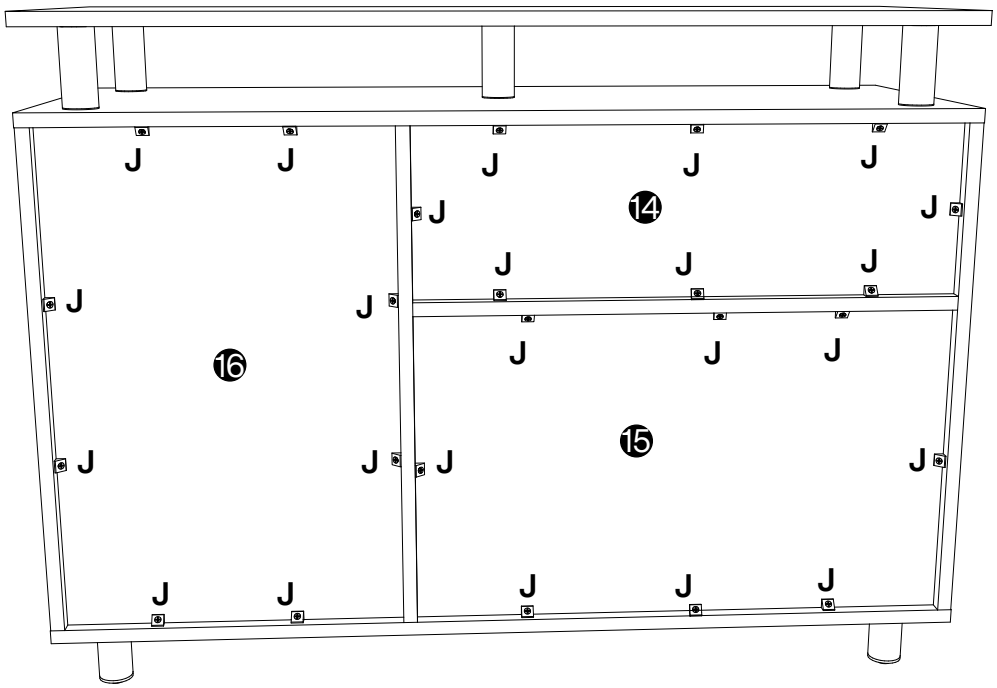


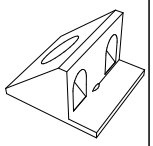
J

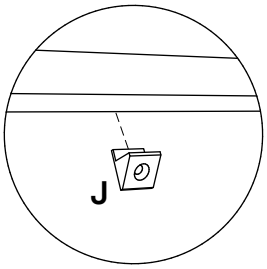24 pcs
K

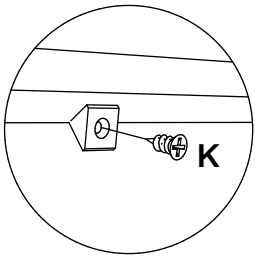Ø3.5x18mm
24 pcs



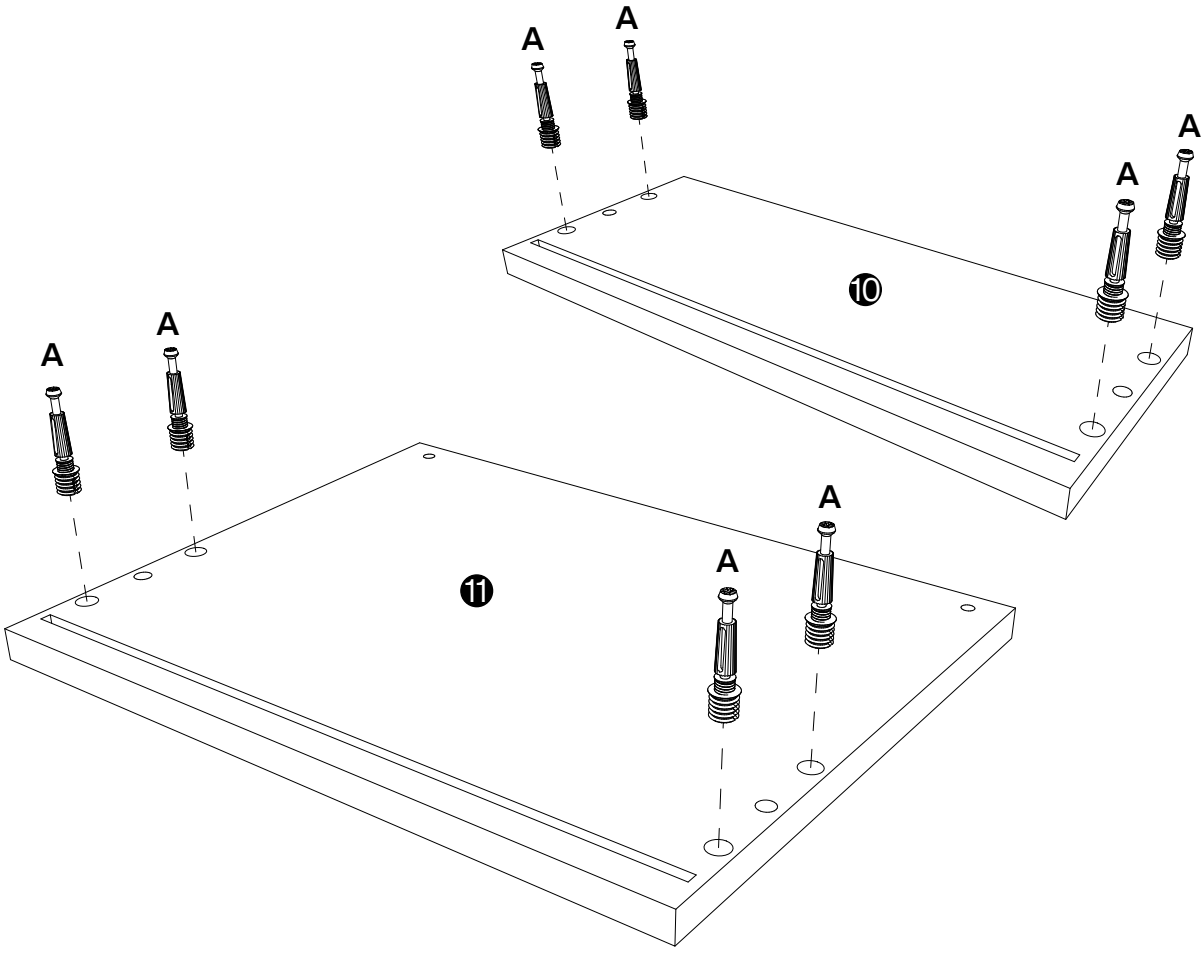


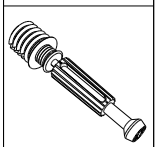
17




A

M6x40mm
8 pcs

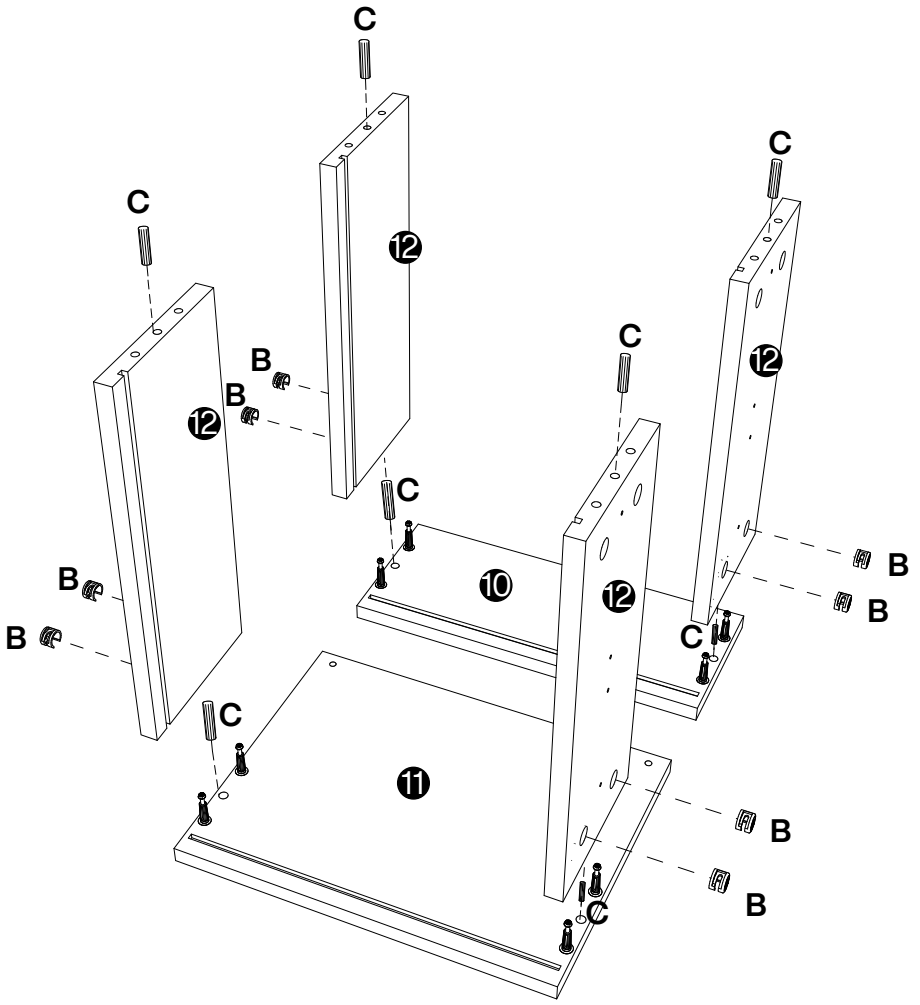18

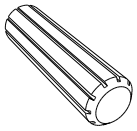


B	C
	
Ø15x12mm	Ø8x30mm
8 pcs	8 pcs

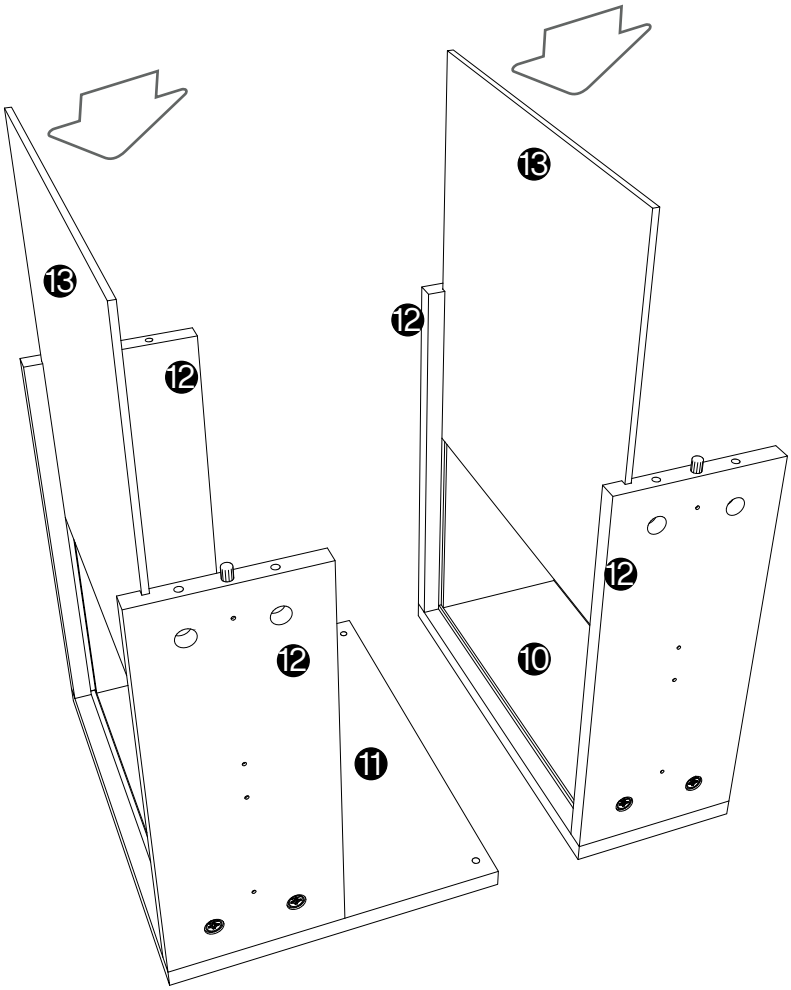19




20

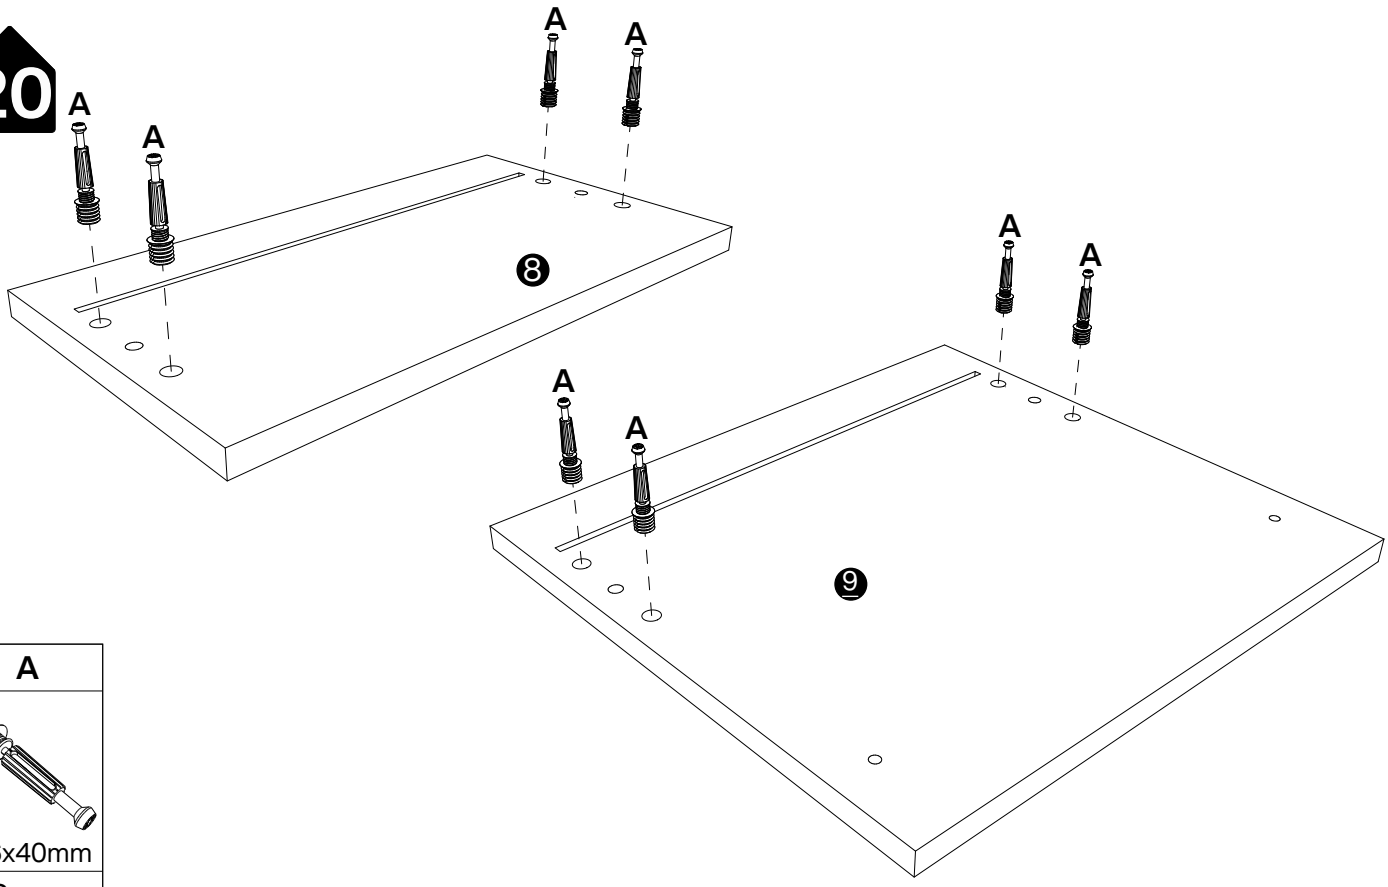


A
M6x40mm
8 pcs


21

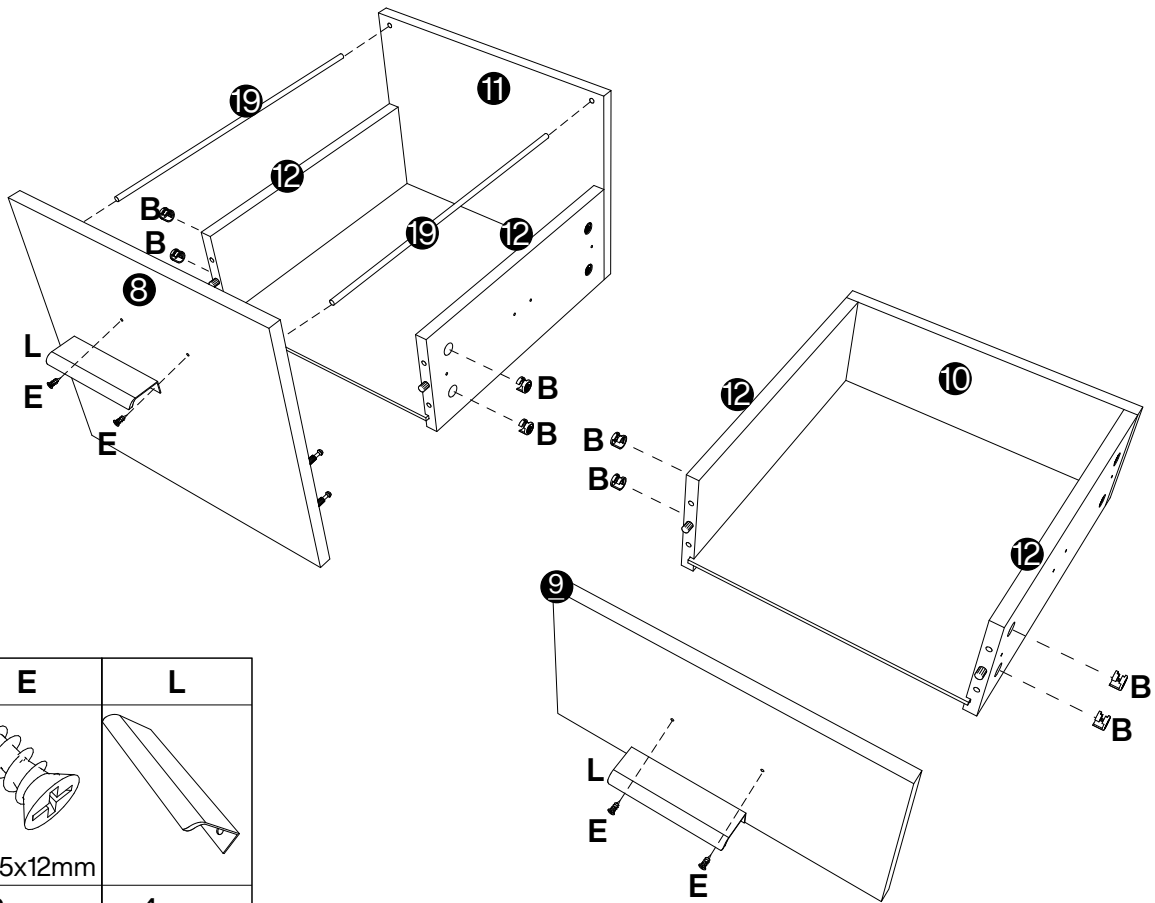

B	E	L
		
Ø15x12mm	Ø3.5x12mm	
8 pcs	2 pcs	4 pcs

22

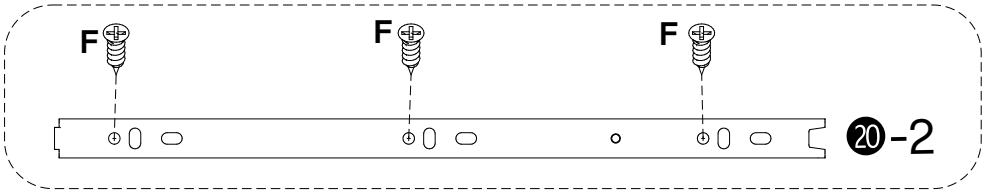


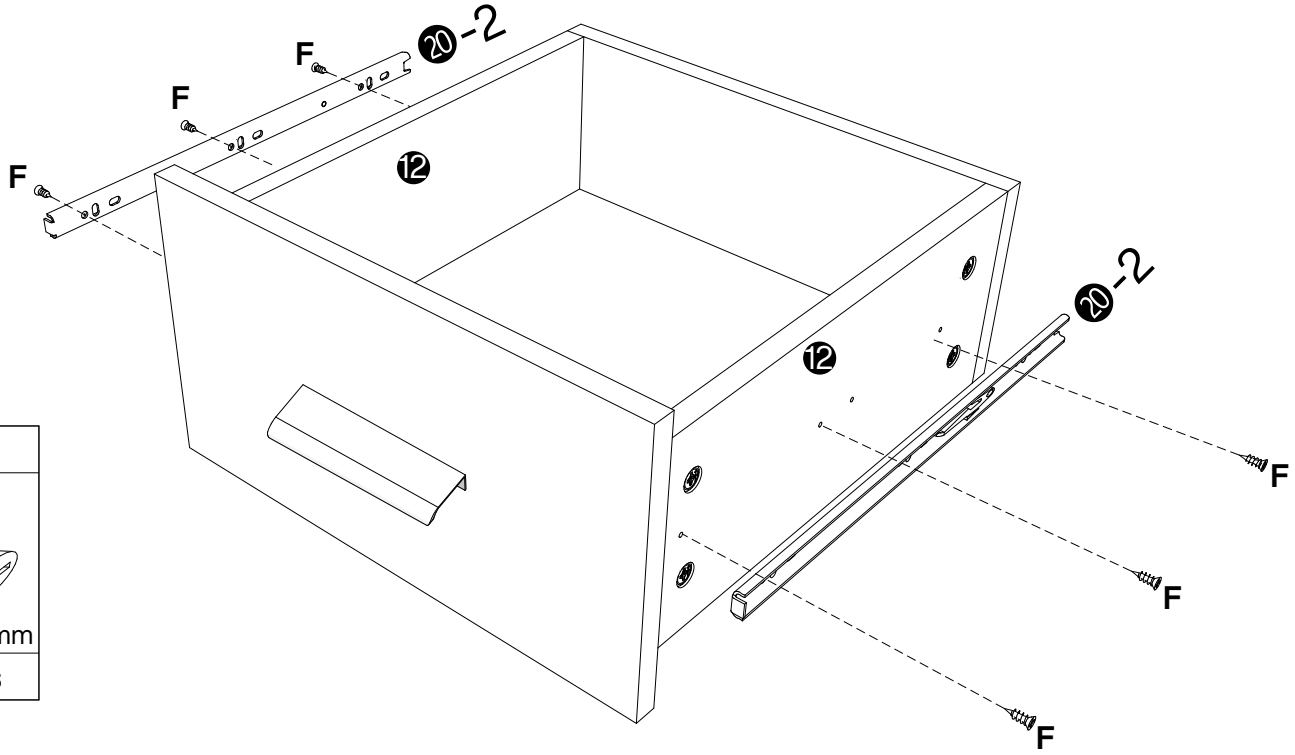


F

Ø3.5x14mm
6 pcs

23

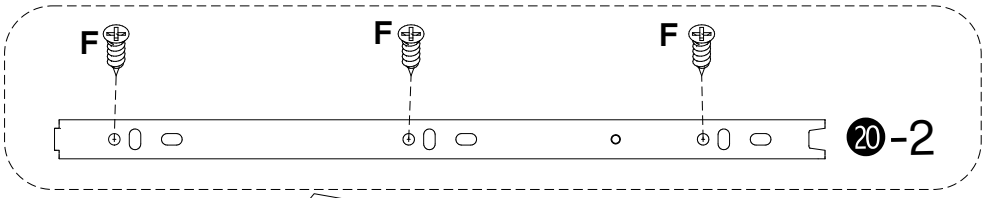


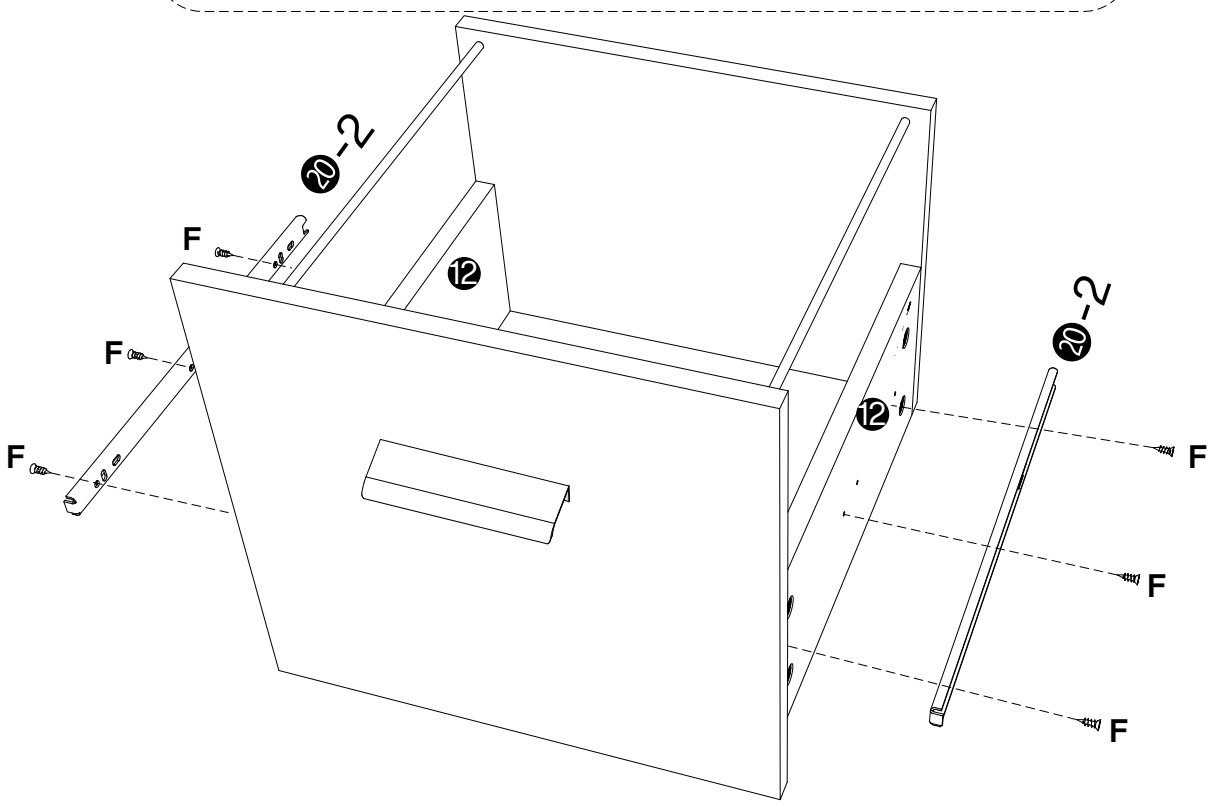


F

Ø3.5x14mm
6 pcs


24

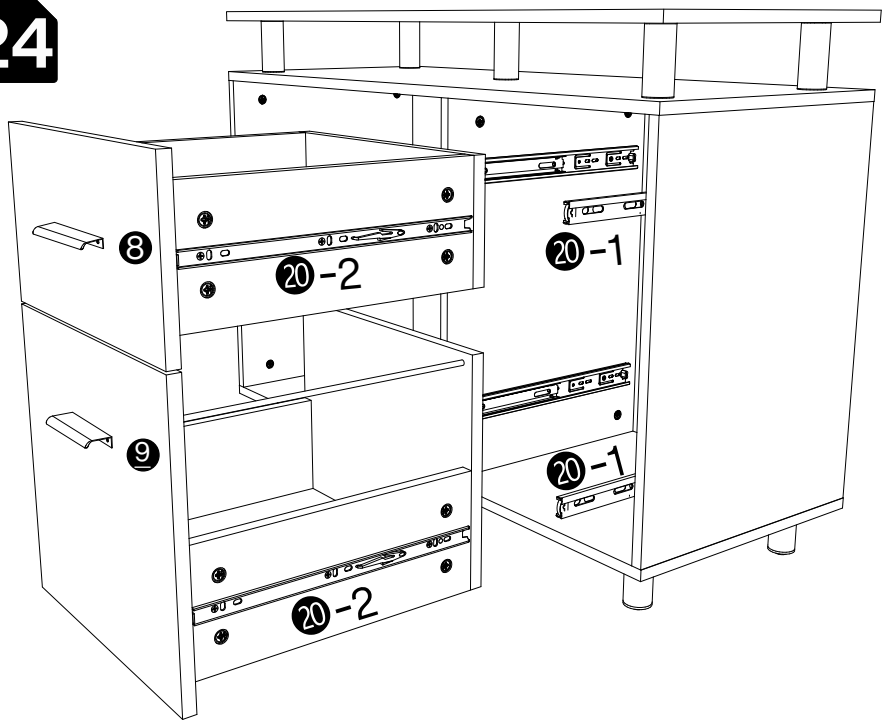


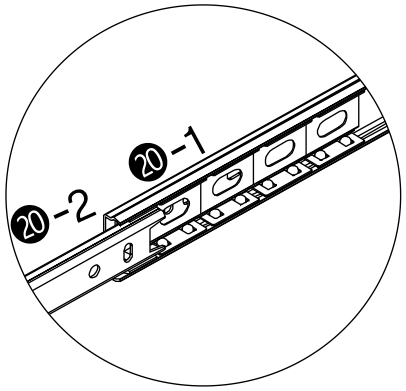



Move the movable iron piece with the small iron ball to the front and align the mounting rail.

25

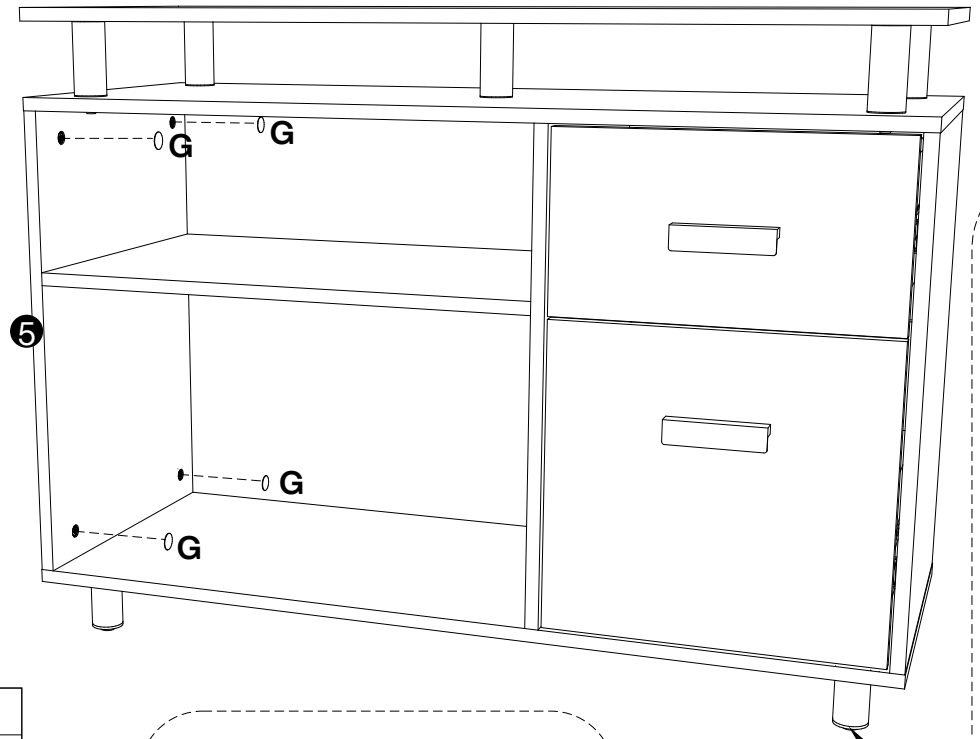

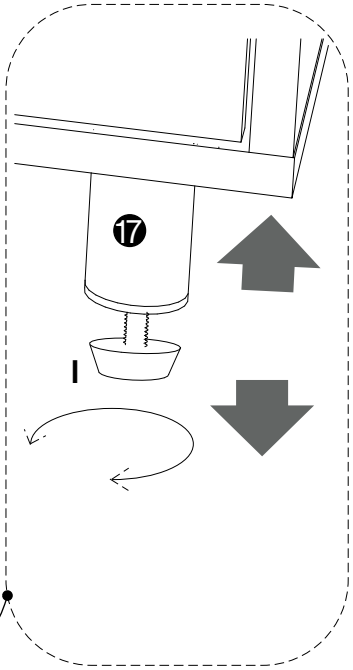

G

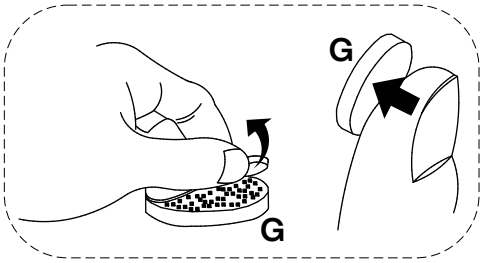Ø20mm
5 pcs



When it is not level on the ground, please adjust here.

Thank you for your support!

