




à monter soi-même
 zelf te monteren
 da montare
 para montar
 pronto a montar
 self assembly
 selbstmontage

LOUNGE STOEL ZAND/NATUREL


IMPORTANT: LISEZ LE TEXTE ATTENTIVEMENT ET CONSERVEZ-LE POUR CONSULTATION FUTURE
 BELANGRIJK, BEWAAR VOOR LATER GEBRUIK: LEES ZORGVULDIG
 WICHTIG, AUFBEWAHREN FÜR KÜNFTIGE KONSULTIERUNG: BITTE AUFMERKSAM LESEN
 IMPORTANTE, GUARDE PARA REFERENCIA FUTURA: LEA CON MUCHA ATENCION
 IMPORTANTE, GUARDAR PARA FUTURA CONSULTA: LER CUIDADOSAMENTE
 IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY
 IMPORTANTE, CONSERVARE PER L'EVENTUALE FUTURA CONSULTAZIONE E LEGGERE ATTENTAMENTE

A		1
B		1
C		2
D	 M6*20mm	16
E	 Ø13* Ø6.5*1.0mm	32
F		16
G		16
H		16
J		1
K		1
L		1

①

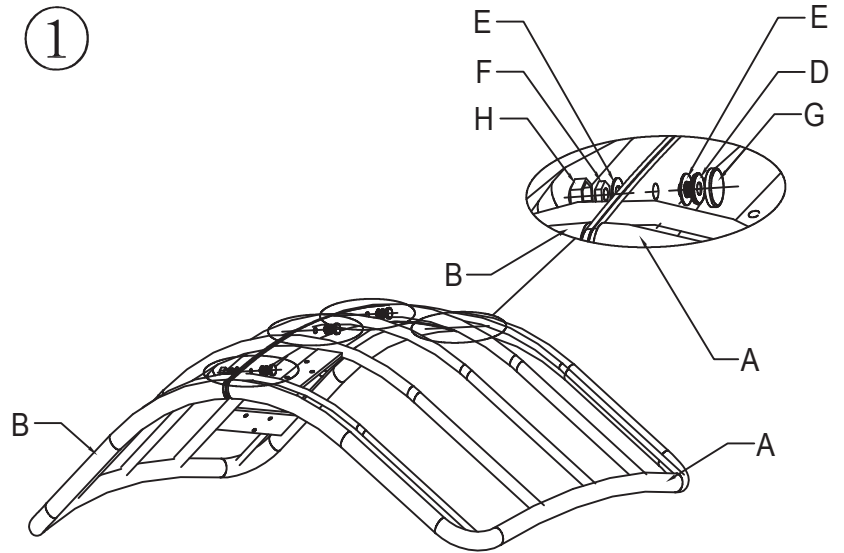

②

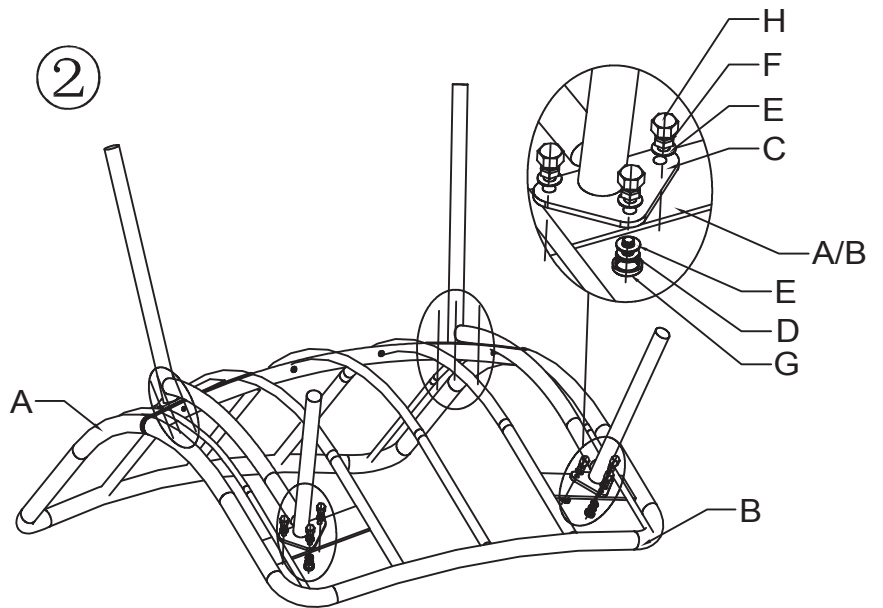

③

