

APP CONTROL INSTRUCTIONS

Install theFanlamp Pro”app from GooglePlay,AppleAppStore,or other app stores by scanning theQRcode or searching for the app name. Ensure that your phone is connected to the internet and Bluetooth enabled.



NOTE: Scan the QR code and install the APP in your phone, or search and install "FanLamp Pro" from Google Play, Apple App and other APP stores.
Make sure your phone is connected to the internet and bluetooth enabled.

 Pair button. Click it within 5 seconds after the fan is powered on from wall switch. After the fan flashes or beeps, it has been successfully paired with the phone, it can be controlled through it.

 Slide to change the fan speed.

 Slide to change the brightness of the light.

 Quick switch for "White" light color.

 Quick switch for "Yellow" light color.

 Quick switch for "Natural" light color.

 Night mode: Dim the lights.

 Fan moves forward.

 Fan moves reversely.

 Change the direction of the wind. (Not supported)

 Timing the fan.



 Natural wind: The fan speed will change automatically when you use this function.

 Sleeping wind, (Not supported)

 Turn on/off the light.

 Turn on/off the fan.


 Unpairing: Click the unpair button within 5 seconds after turning on the fan. Once the fan flashes or beeps, it has been successfully unpaired from your phone.

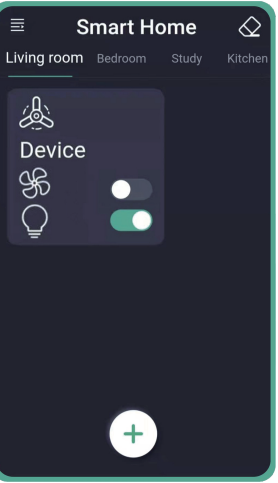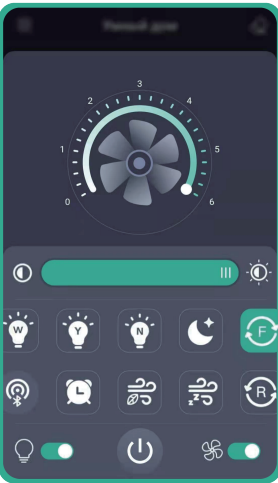

INSTALLATION
MANUAL

CEILING FAN WITH LIGHTS


Model No.: LL-002-44B

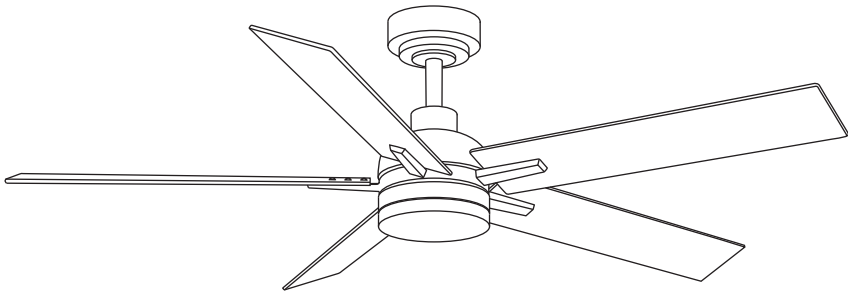

TOOLS REQUIRED




Ladder



Pliers



Wire Strippers



Screwdrivers




Scan for Installation Video







APP Control Applicable

PACKING LIST

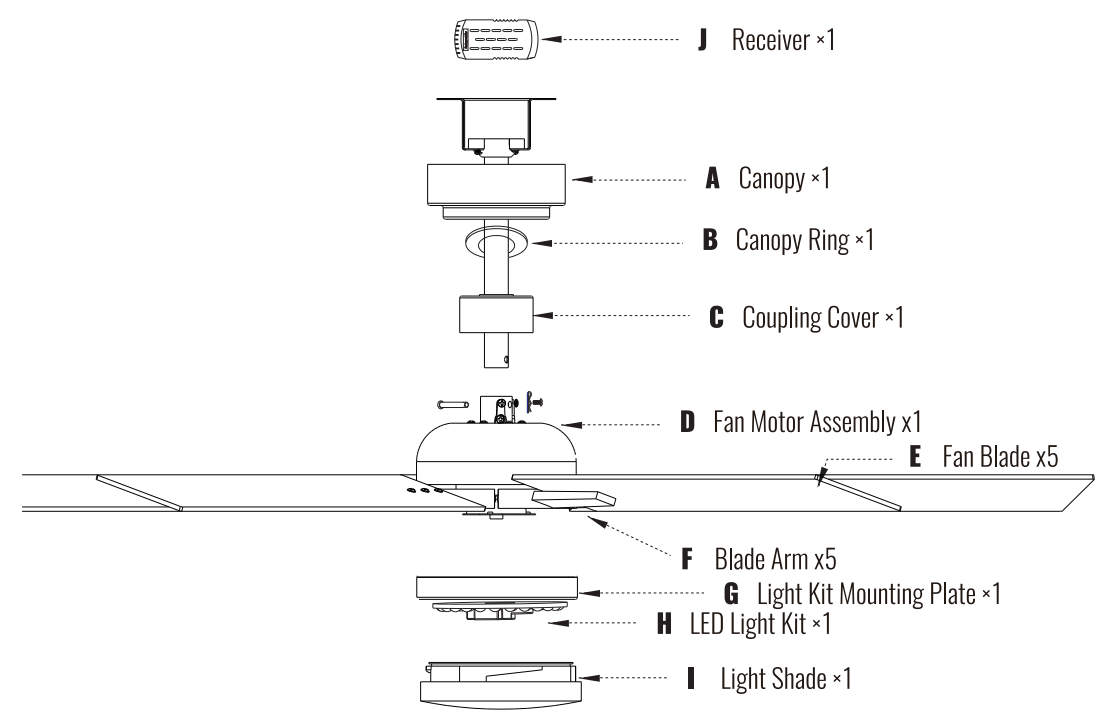


NOTE:
1. LED Light Kit (H) is pre-installed on Light Kit Mounting Plate (G).

INSTALLATION KIT

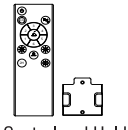AA  Mounting Bracket 1×	BB  Outlet Box Screw 2×	CC  Wood Screw 4×	DD  Plastic Anchor 4×	EE  Fan Blade Screw with Washer 15×
FF  Flat Washer 4×	GG  Wire Nut 3×	HH  Blade Arm Screw 10×	II  Long Downrod Assembly 1×	JJ  Short Downrod Assembly 1×
KK  Plastic Clip and Balancing Weight Washer 1×	LL  Remote Control and Holder 1×	MM  Clevis Pin & "R" Pin 1×	NN  Gloves 1×	

NOTE:
1. Some extra hardware may be included. The quantity listed above is the number required for installation.
2. Clevis Pin & "R" Pin (MM) is pre-installed on a Short Downrod Assembly (JJ). They need to be disassembled before installation.

9. Installing the Light Shade

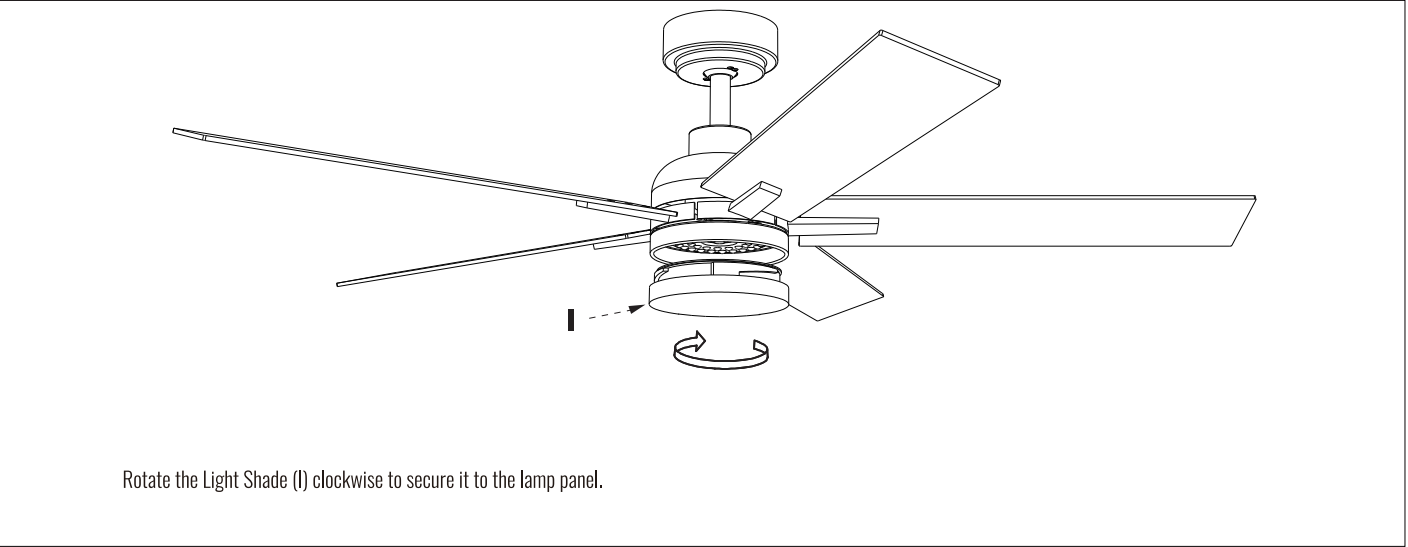


REMOTE CONTROL INSTRUCTIONS


REMOTE SIGNAL PAIRING:

If the remote control loses signal of the fan, press and hold the button ⑨ at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.

- ①: Turn off power.
- ②: Fan moves forwards & reversely.
- ③: Turn on the fan on 1/2/3/4/5/6 speed.
- ④: Reduce the brightness of the light.
- ⑤: 2H for timing the fan.
(Long press to turn on/off the mute mode.)
- ⑥: Natural wind, fan speed will change automatically with this function.
- ⑦: Turn off the fan.
- ⑧: Increase the brightness of the light.
- ⑨: Turn on / off the light.
- ⑩: Adjust the light color temperature.

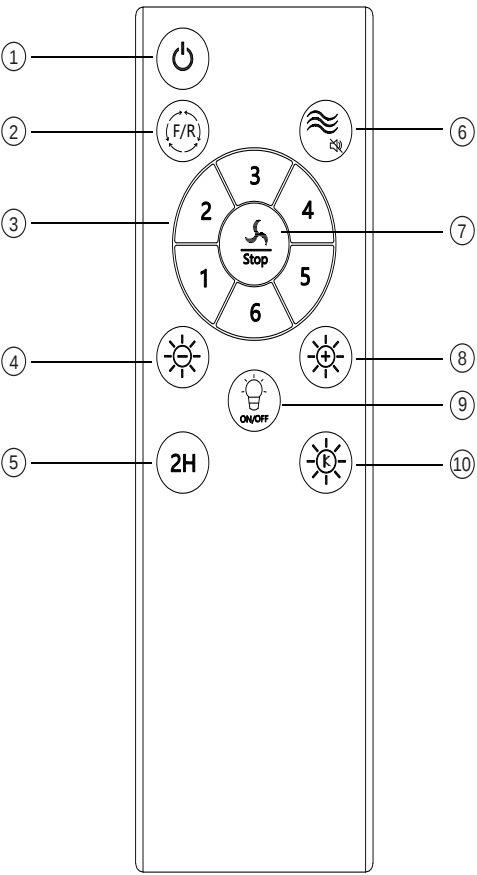


7. Assembling the Fan Blade

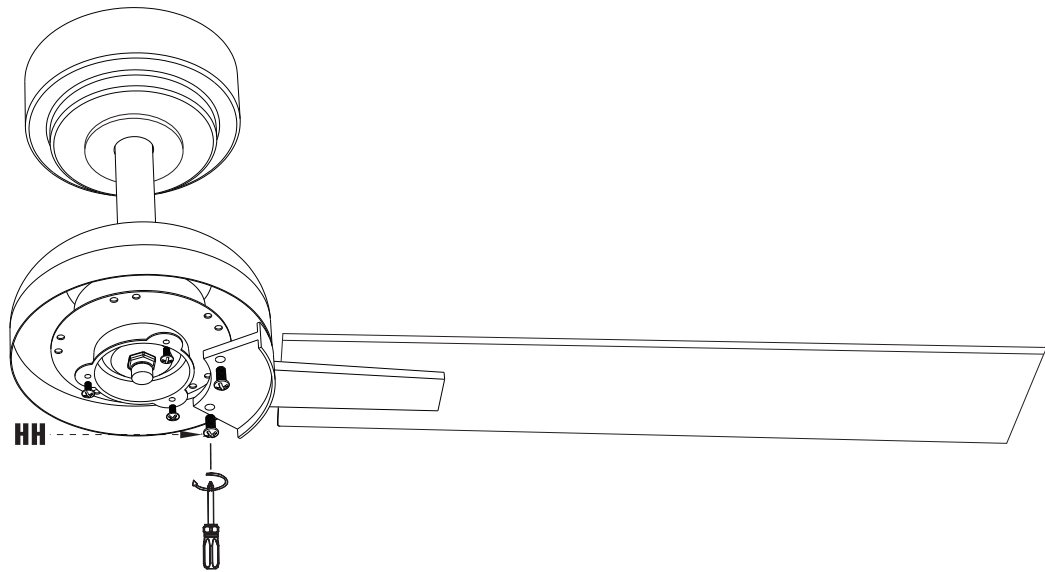

Align the Fan Blades (E) with the mounting holes, and fix them with Blade Arm Screws (HH).


8. Installing the LED Light Kit

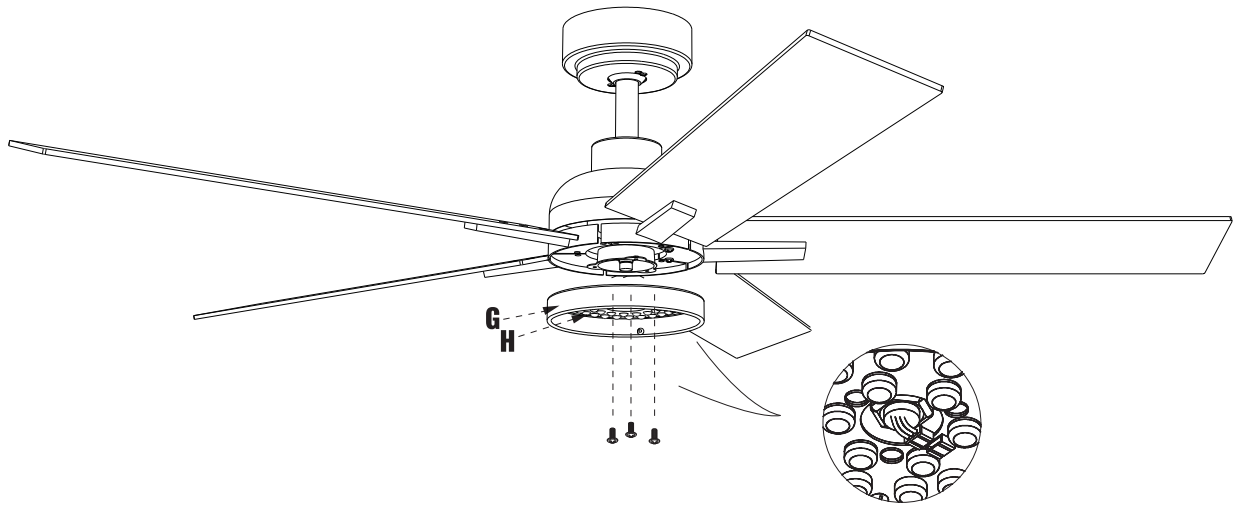

STEP 1: Fix the Light Kit Mounting Plate (G) on the Fan Motor Assembly (D) with fixing screws taken off.
STEP 2: Connect the wire terminal to the LED Light Kit (H) interface.

INSTALLATION


1. Installing the Mounting Bracket

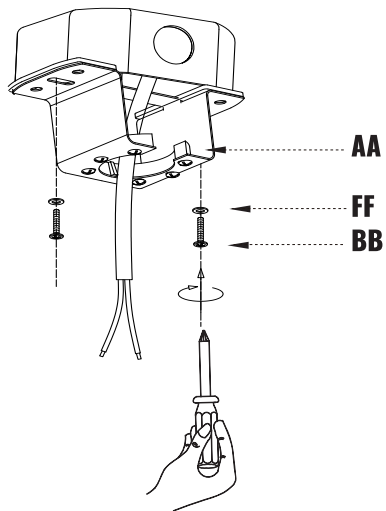

STEP 1: Take off the screws from outlet box.
STEP 2: Secure the Mounting Bracket (AA) onto the outlet box with screws taken off or Outlet Box Screw (BB) and Flat Washer (FF) provided.


NOTE:
1. Wood Screw (CC) are not necessary if you use Outlet Box Screw (BB).

2. Assembling the Fan

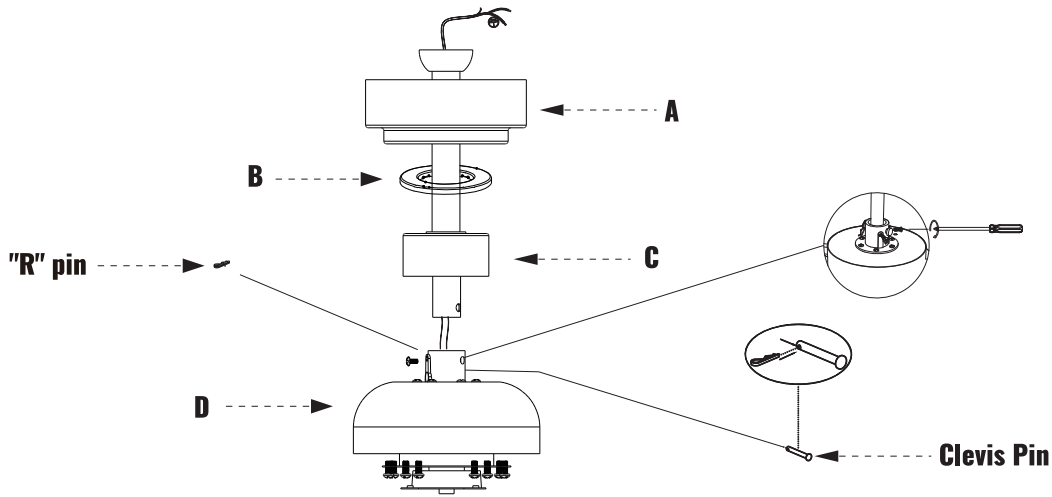


STEP 1: Assemble the Canopy (A) and Coupling Cover (C), and route wires from the fan through the downrod.
STEP 2: Loosen the set screw from the yoke but do not take off, align the holes at the bottom of the downrod with those in the yoke.
STEP 3: Carefully insert the Clevis Pin (MM) through the holes in the yoke and downrod (Be careful not to jam the Clevis Pin (MM) against the wires inside the downrod).
STEP 4: Insert the "R" pin (MM) into the end of the Clevis Pin (MM).
STEP 5: Tighten the set screw on the yoke to secure the downrod.

3. Hanging the Fan

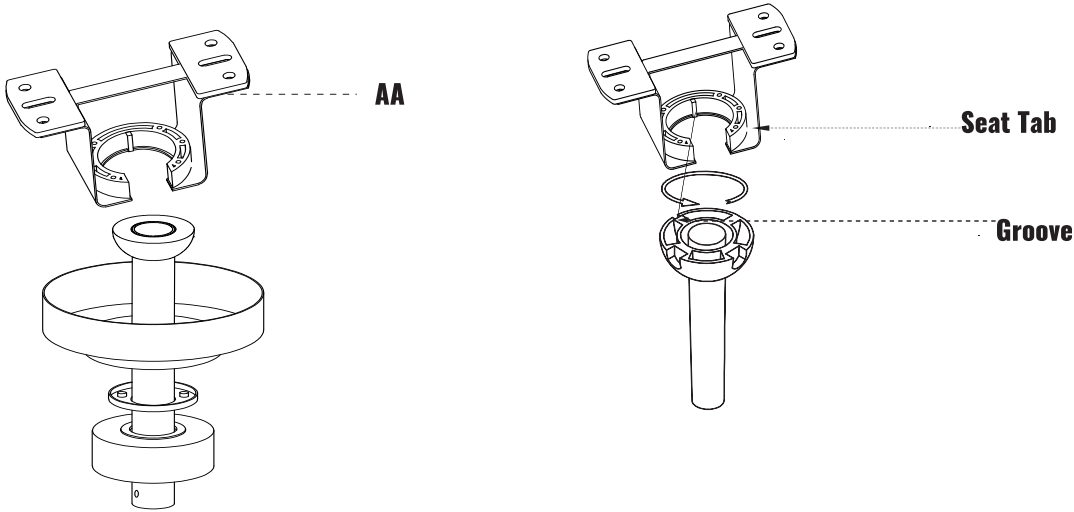


Lift the downrod into the Mounting Bracket (AA). Rotate the downrod until the seat tab in the Mounting Bracket (AA) is seated in the groove in the downrod ball.

4. Wiring

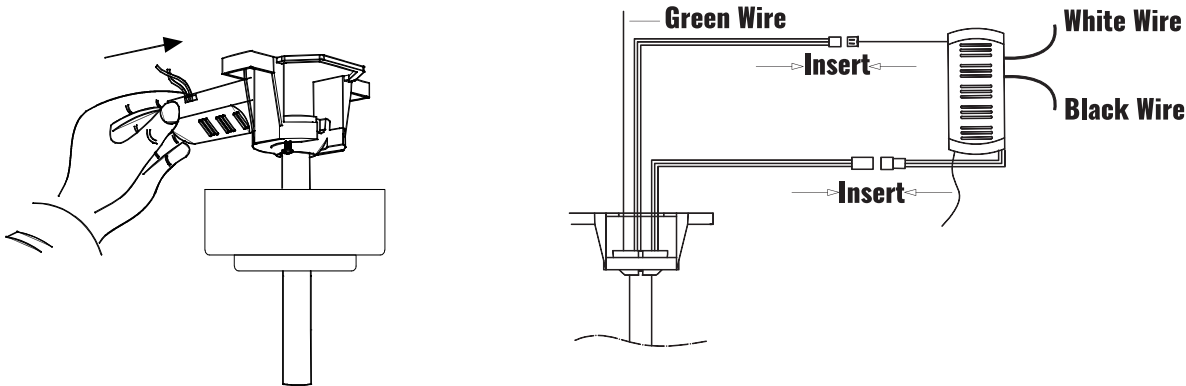


- STEP 1:** Insert the Receiver (J) into the Mounting Bracket (AA).
- STEP 2:** Connect the wires from the fixture to the house supply wires with Wire Nuts (GG), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white or blue) to neutral wire, and hot wire (black or brown) to the hot wire.
- STEP 3:** Wrap the connection with electrical tape.

5. Attaching the Canopy

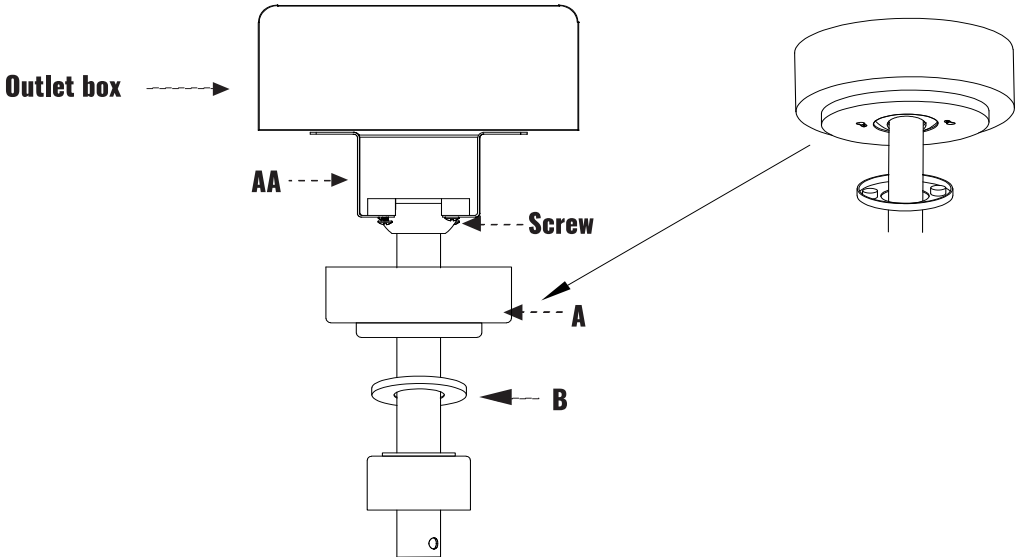

- STEP 1:** Slide the Canopy (A) up to the ceiling and attach it to the Mounting Bracket (AA) with the set screws provided.
- STEP 2:** Slide the Coupling Cover (C) downward to cover the yoke and fix the Canopy Ring (B) to the Canopy (A) with Magnet.

6. Assembling the Fan Blade

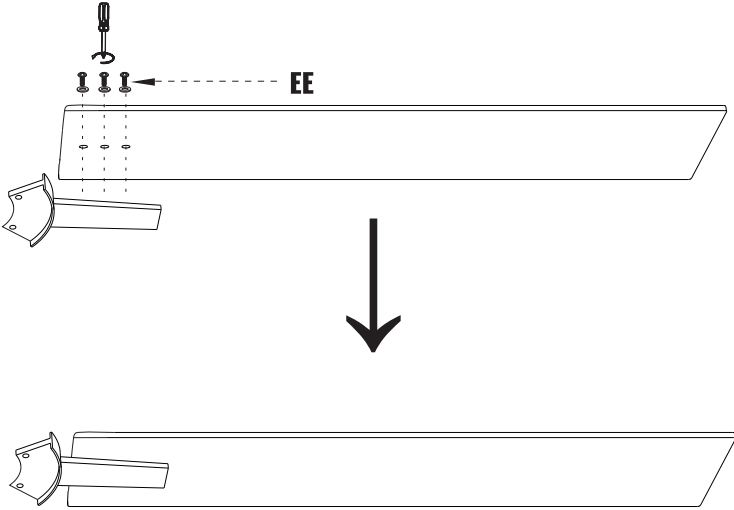

Align the Fan Blades (E) with the mounting holes, and fix them with the Fan Blade Screw with Washer (EE).