


INSTALLATION MANUAL

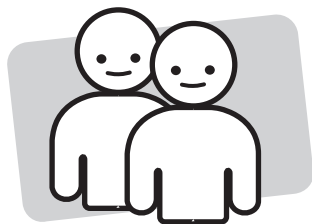

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.





Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

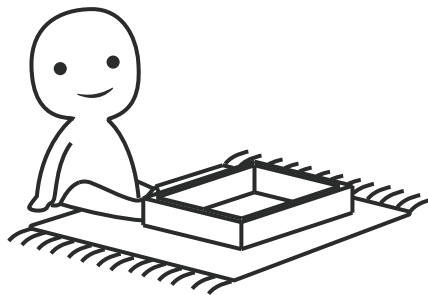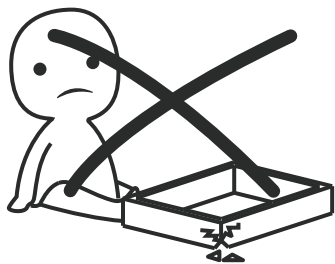

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

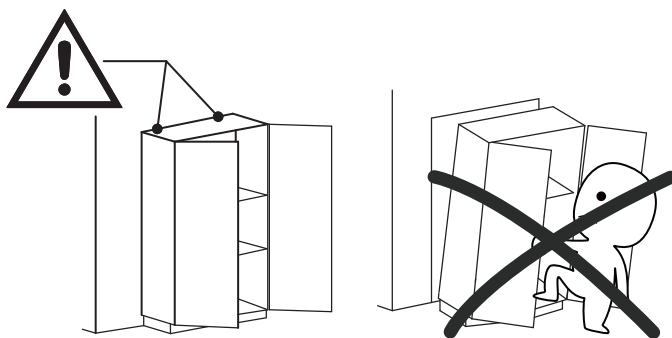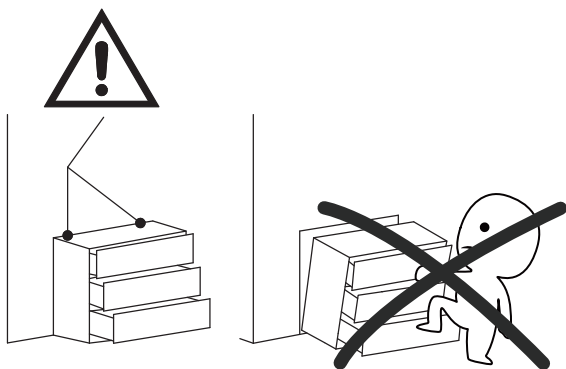

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.



For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.


Completed Assembly

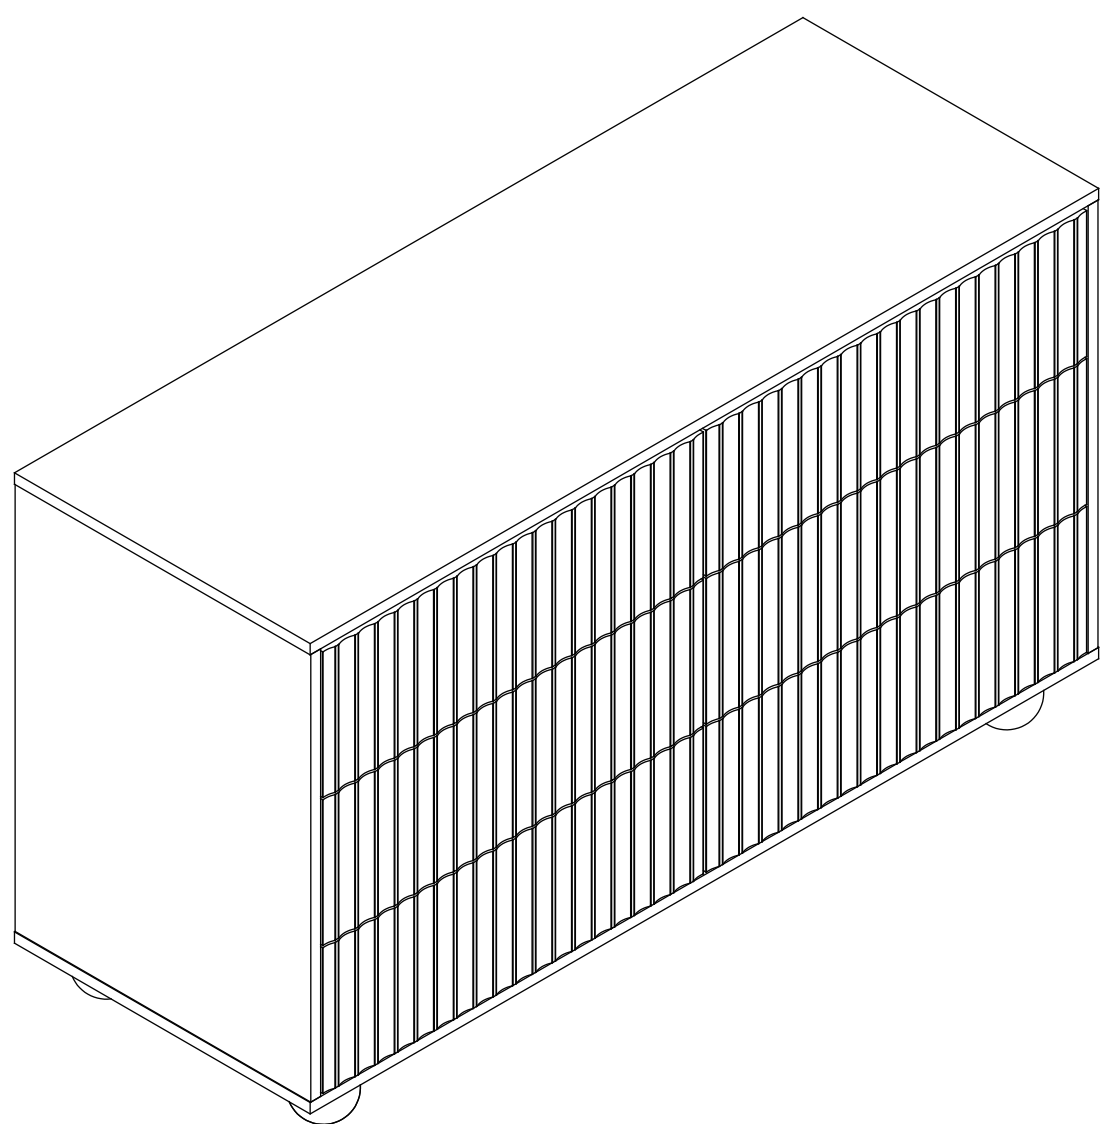


Parts Description

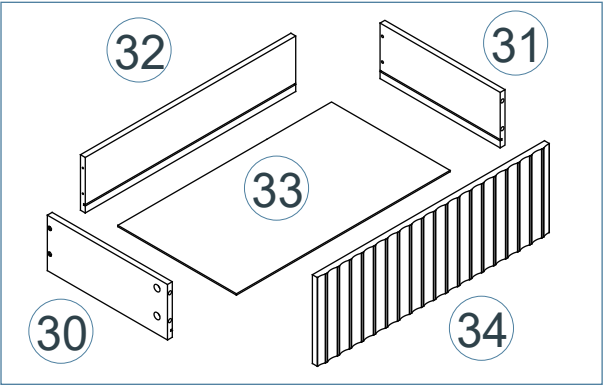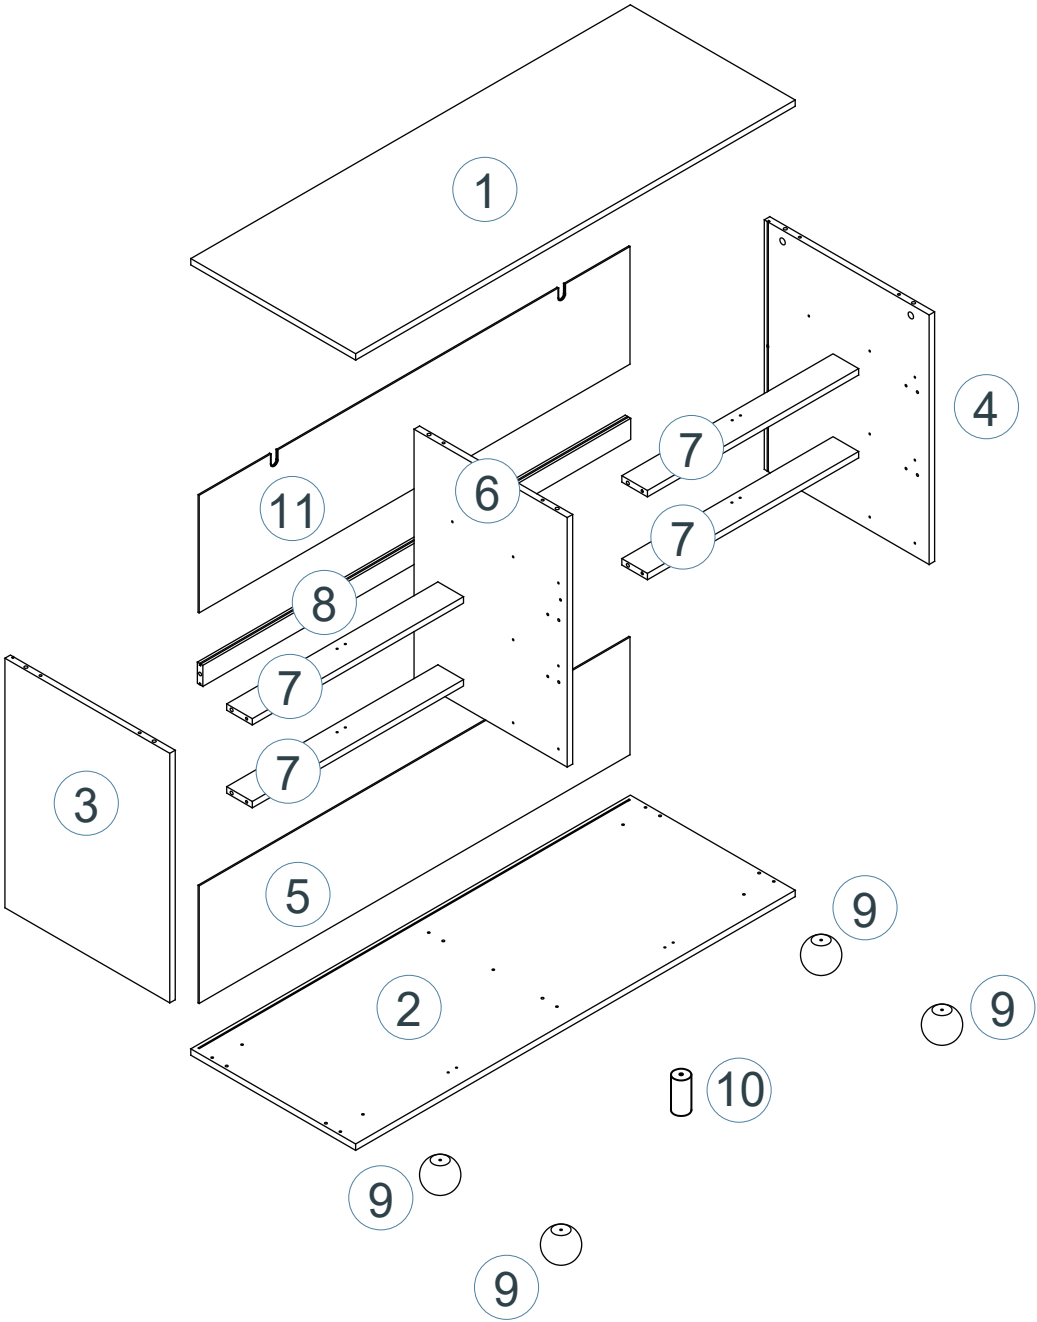


x3

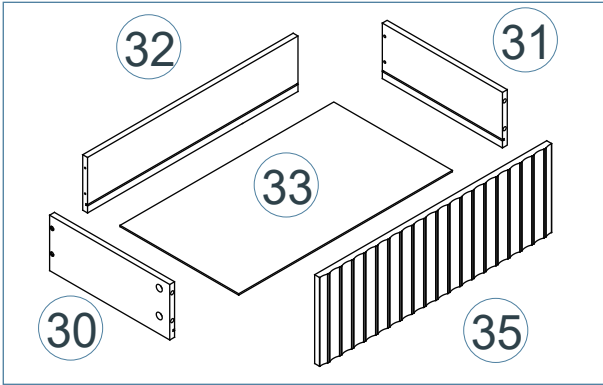


x3

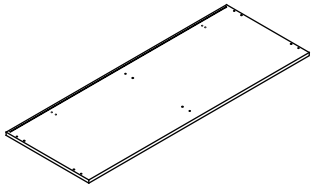


1

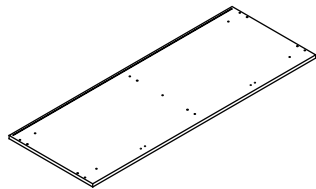


2

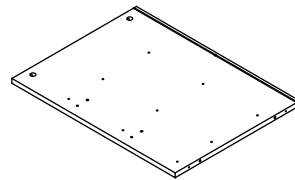


3

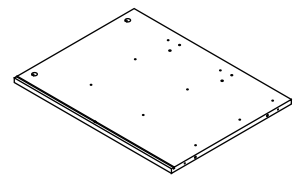


4

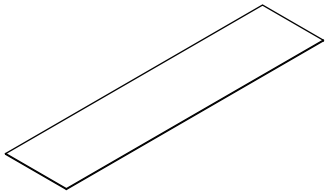


5

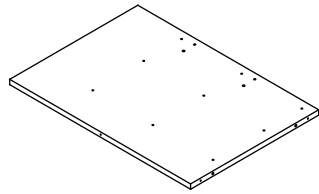

6

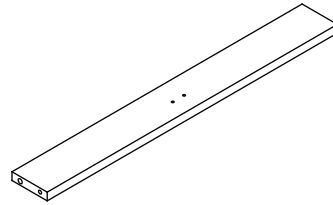

7 x4

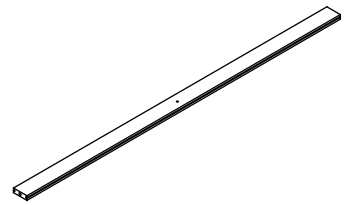


8




9 x4




10

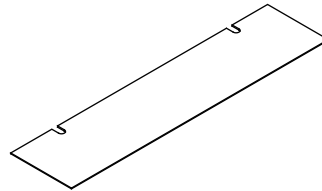


11

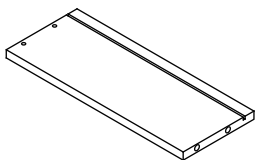


30 x6

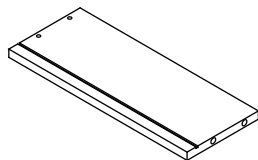


31 x6

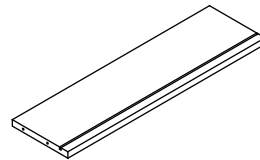


32 x6

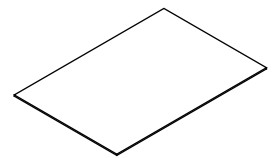















33 x6





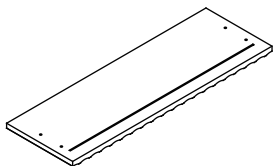


34 x3

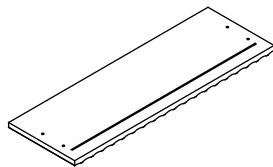

35 x3

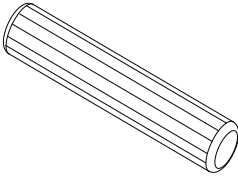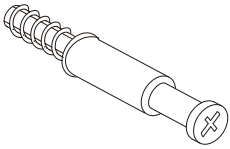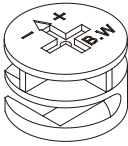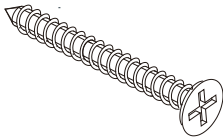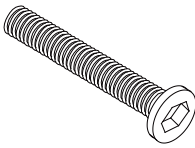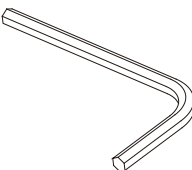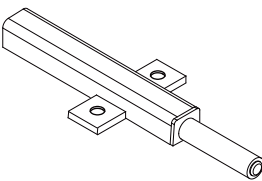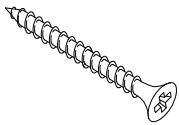A  6 X 30mm Dowel 20pcs	B  4 x 40mm Screw 7pcs	C  Bolt 40pcs
D  Locking Nut 40pcs	E  3 x 12mm Screw 72pcs	F  4 x 35mm Long Screw 24pcs
G  Wedge 8pcs	H  3 x 16mm Screw 8pcs	I  Felt Pad 4pcs
J  6 x 30mm Bolt 5pcs	K  Allen Key 1pc	L  Bracket 6pcs
M  4 x 35mm Wall Screw 2pcs	N  Adjuster 1pc	O  4 x 14mm Screw 12pcs

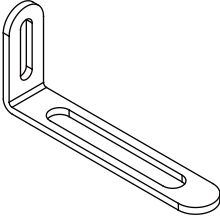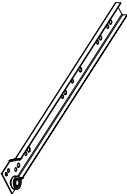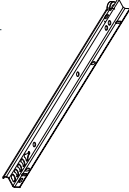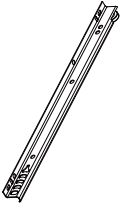P  Bracket 2pcs	Q  4 x 12mm Screw 4pcs	R  Wall Anchor 2pcs
CL  Slide Rail 6pcs	CR  Slide Rail 6pcs	DL  Slide Rail 6pcs
DR  Slide Rail 6pcs		



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

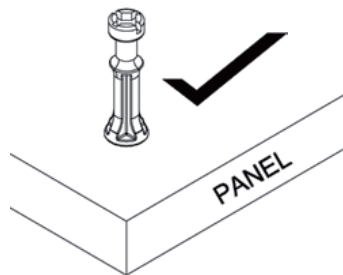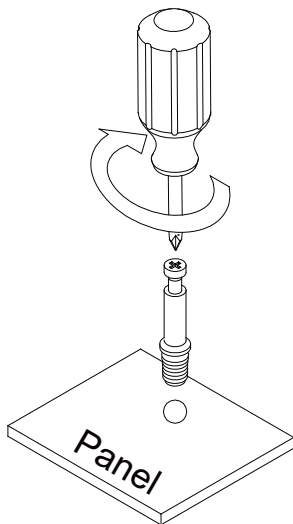



Shoulder is flushed
(on the same level)
with the panel.

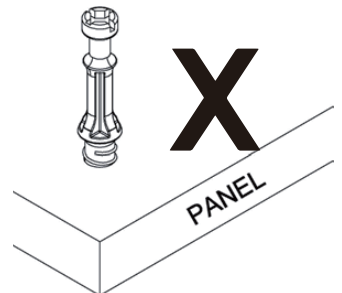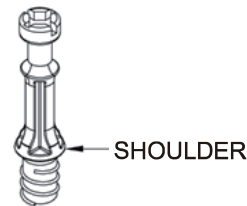

Shoulder is
above the panel.


CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

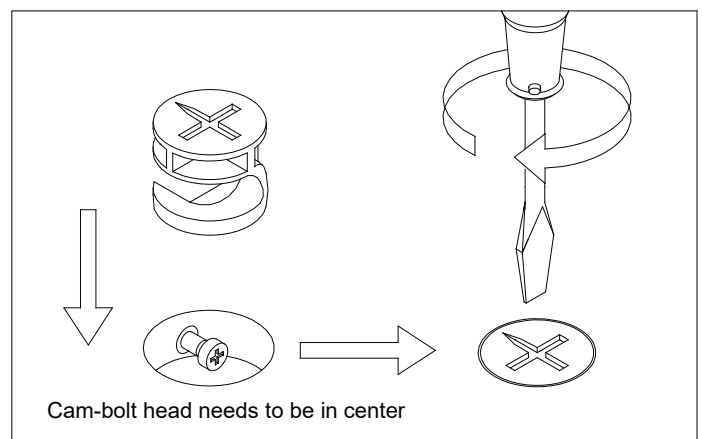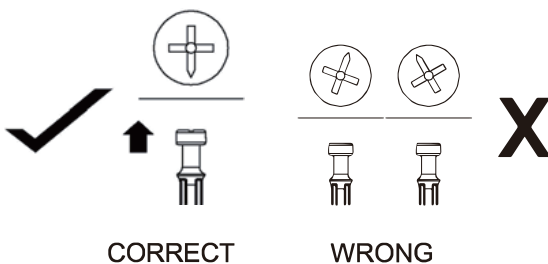


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

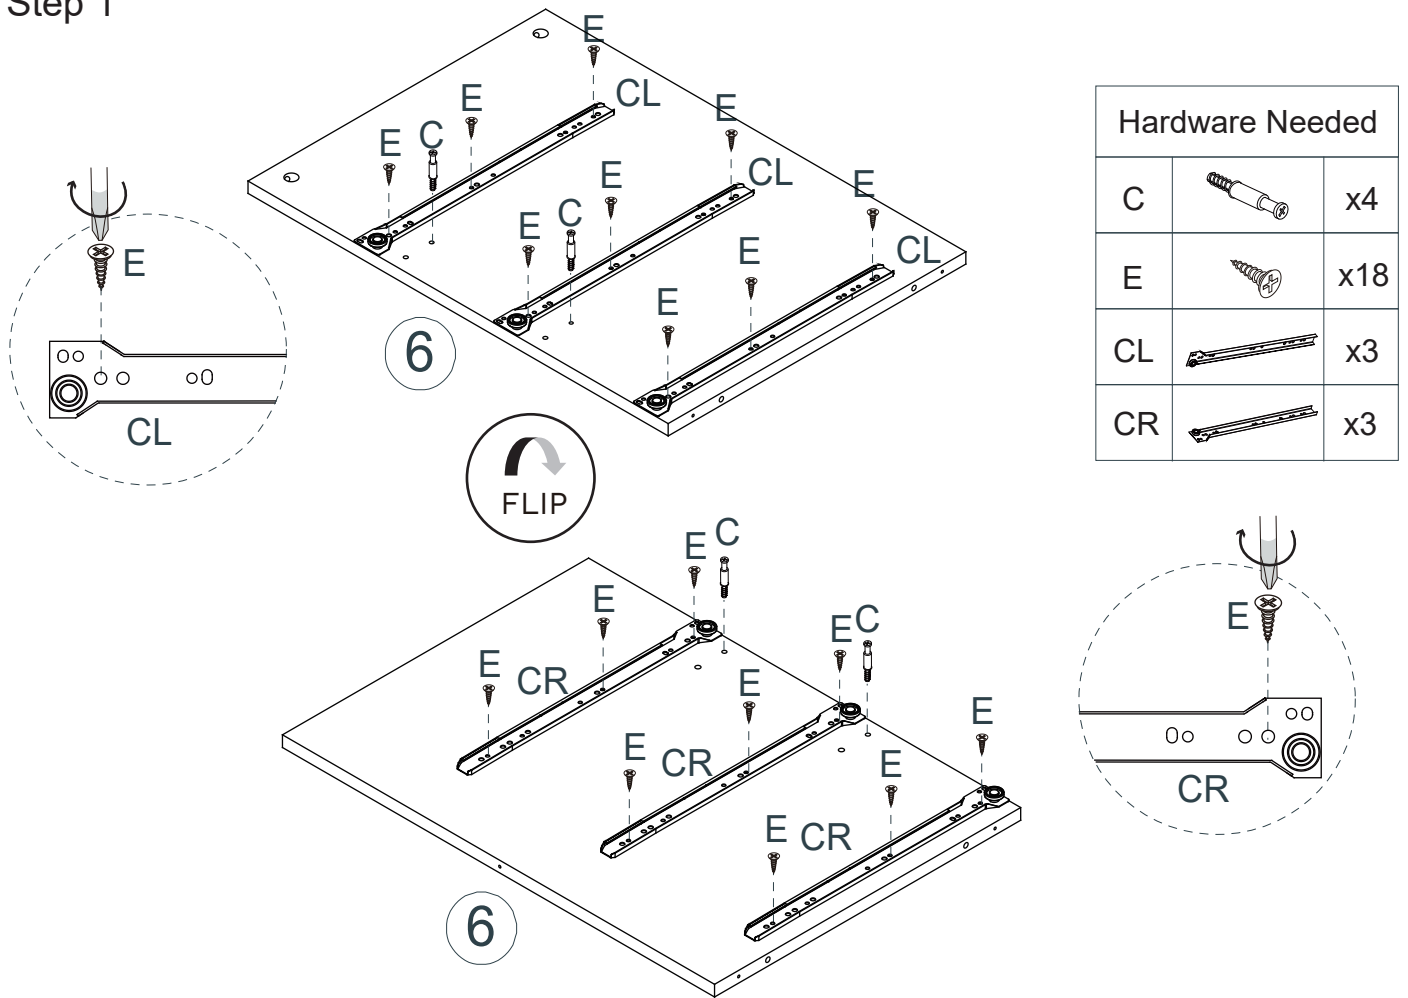


Step 2

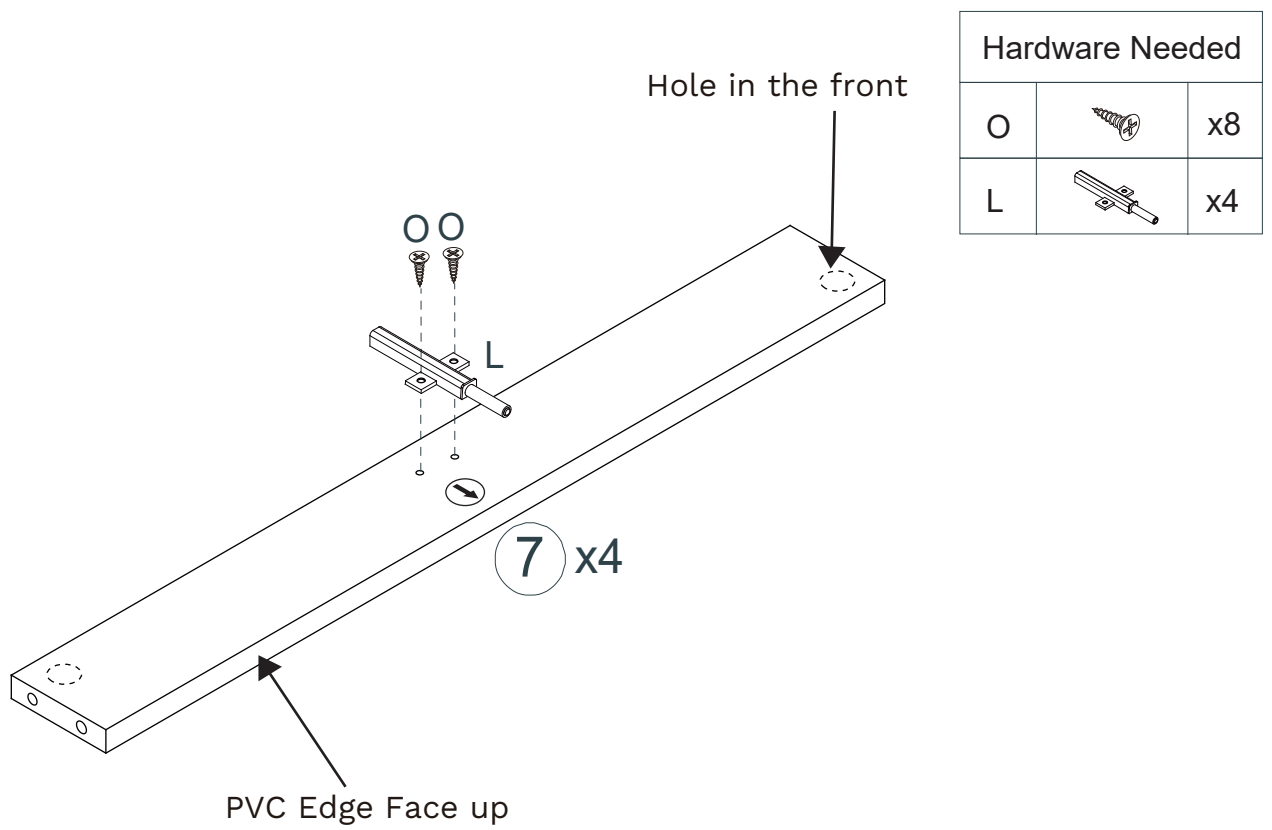


Step 3

Hardware Needed		
A		X4
D		X4

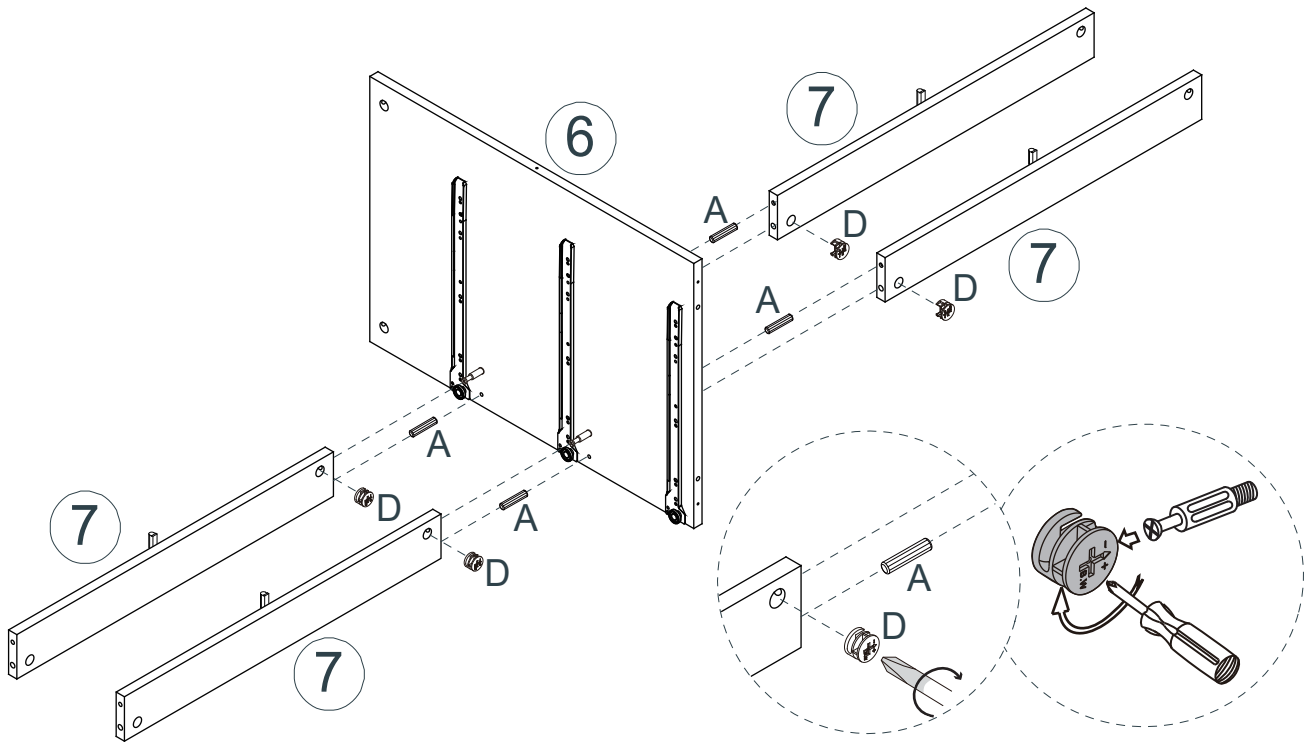


Step 4


Hardware Needed		
C		x6
E		x18
CL		x3
CR		x3

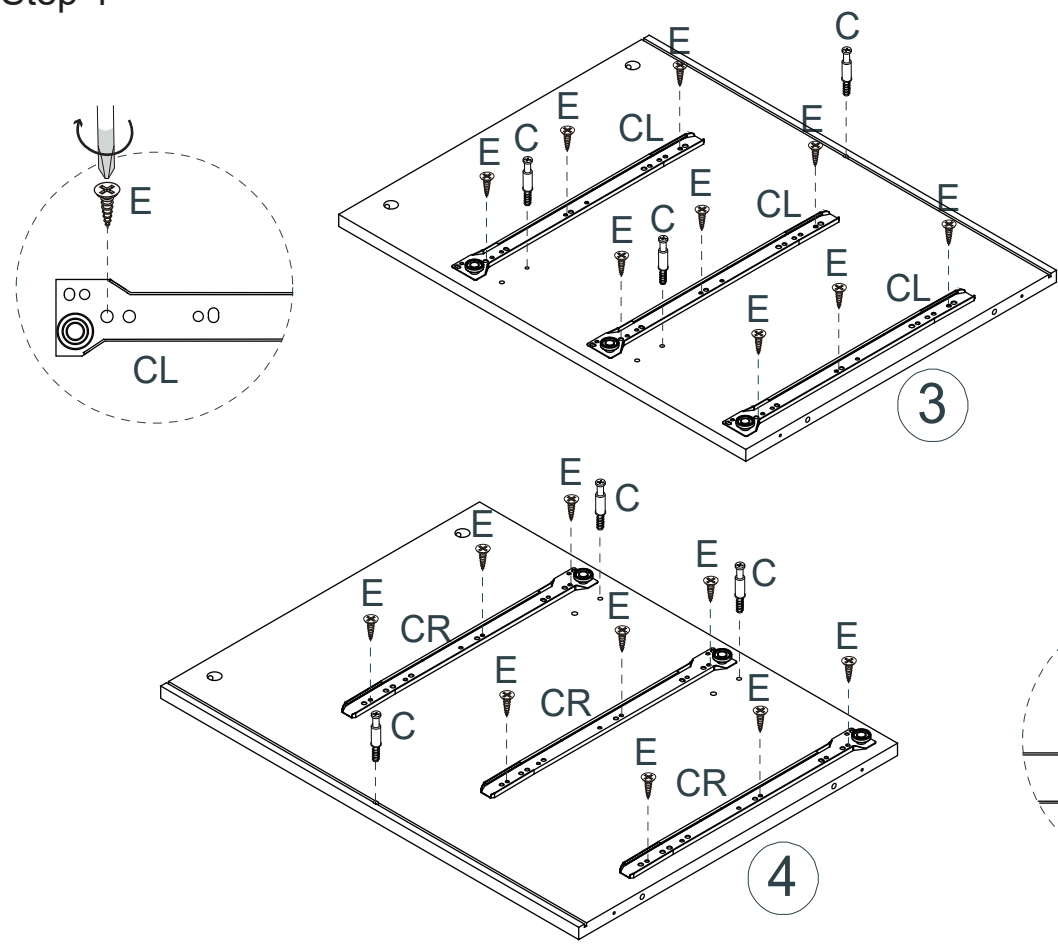


Step 5

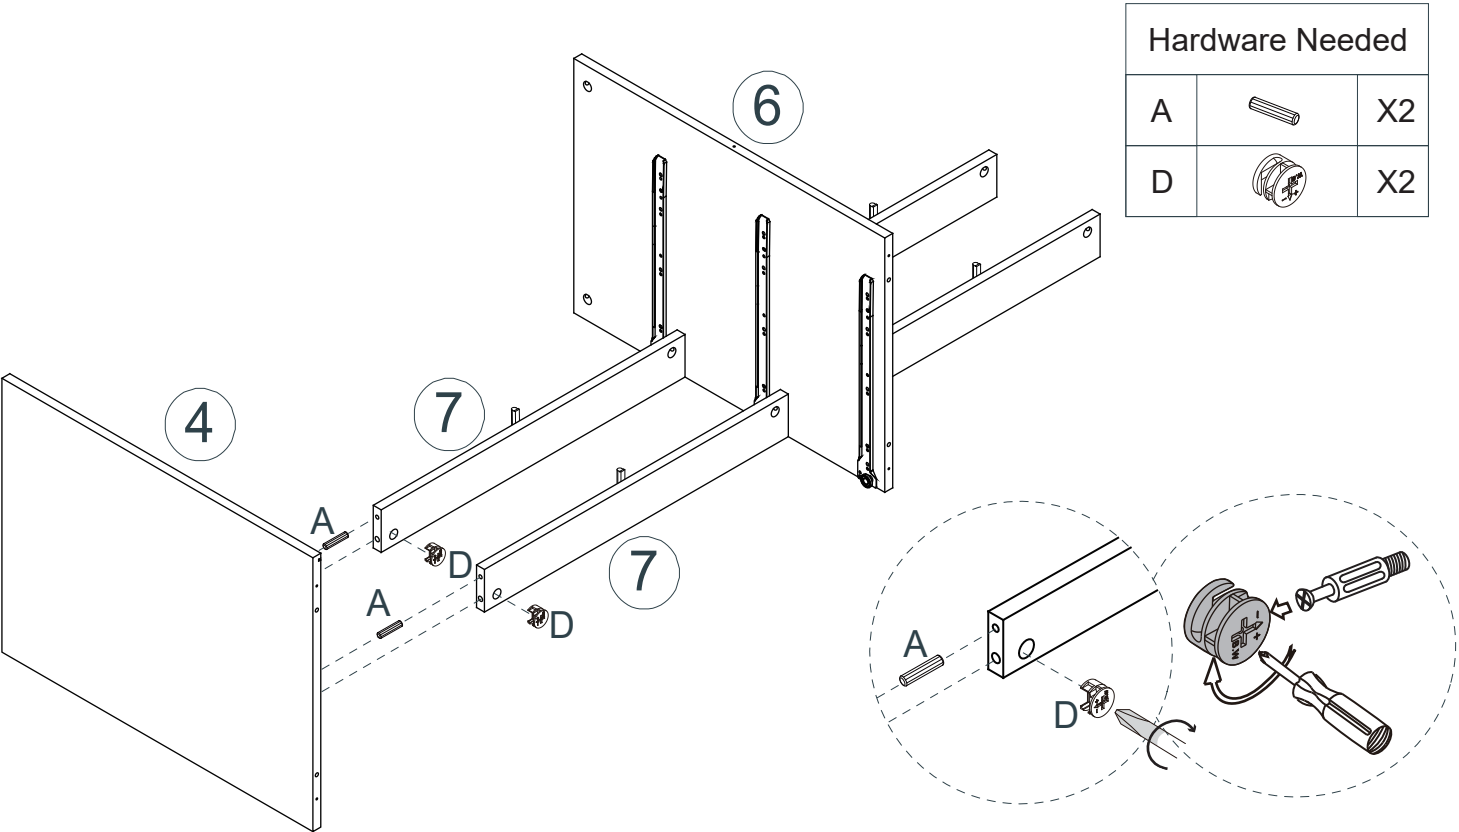


Step 6

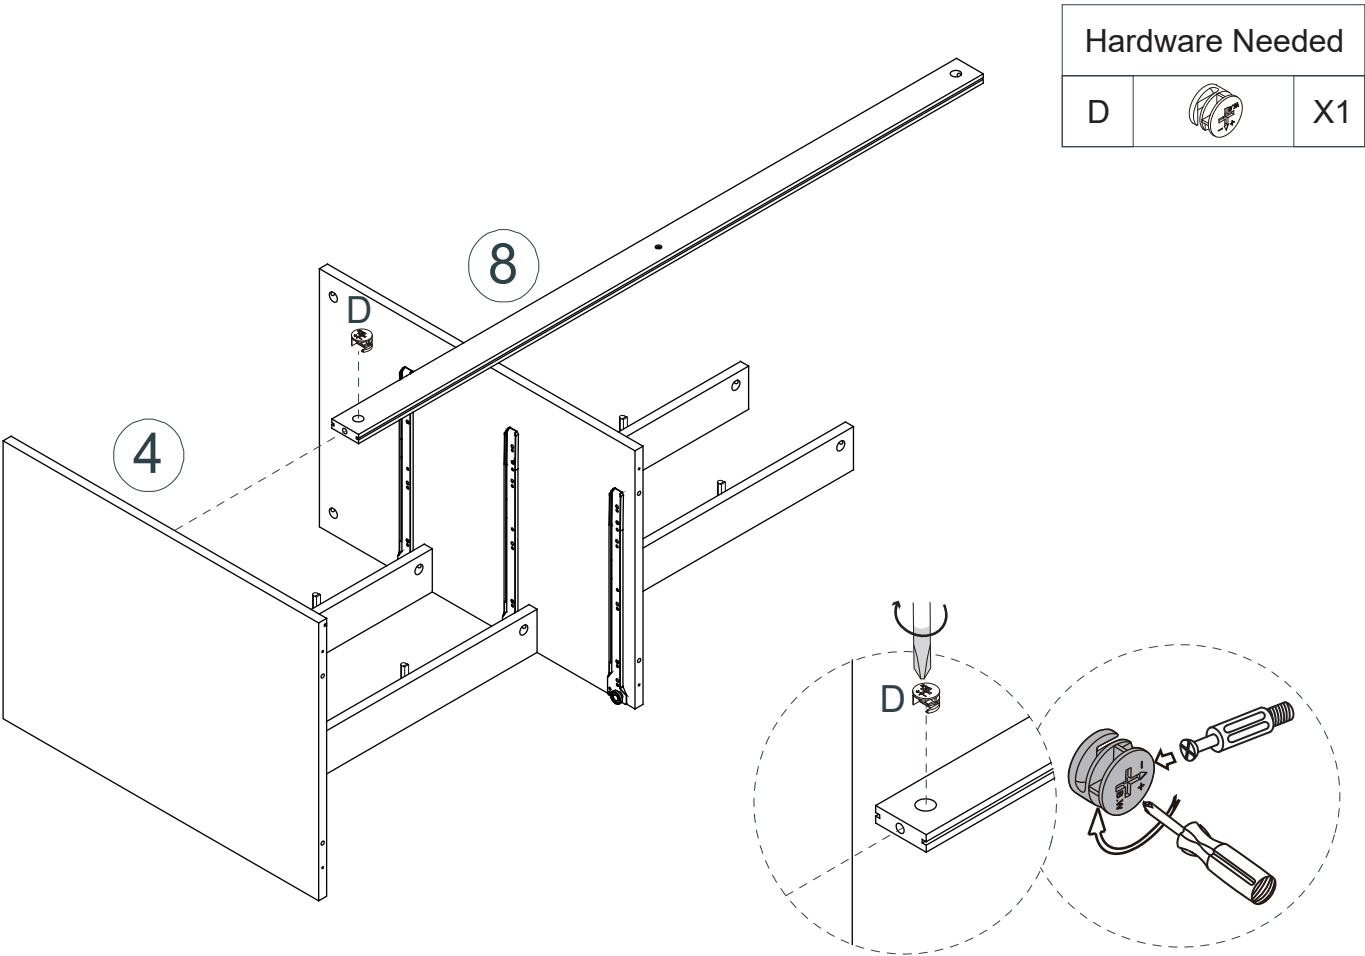


Step 7

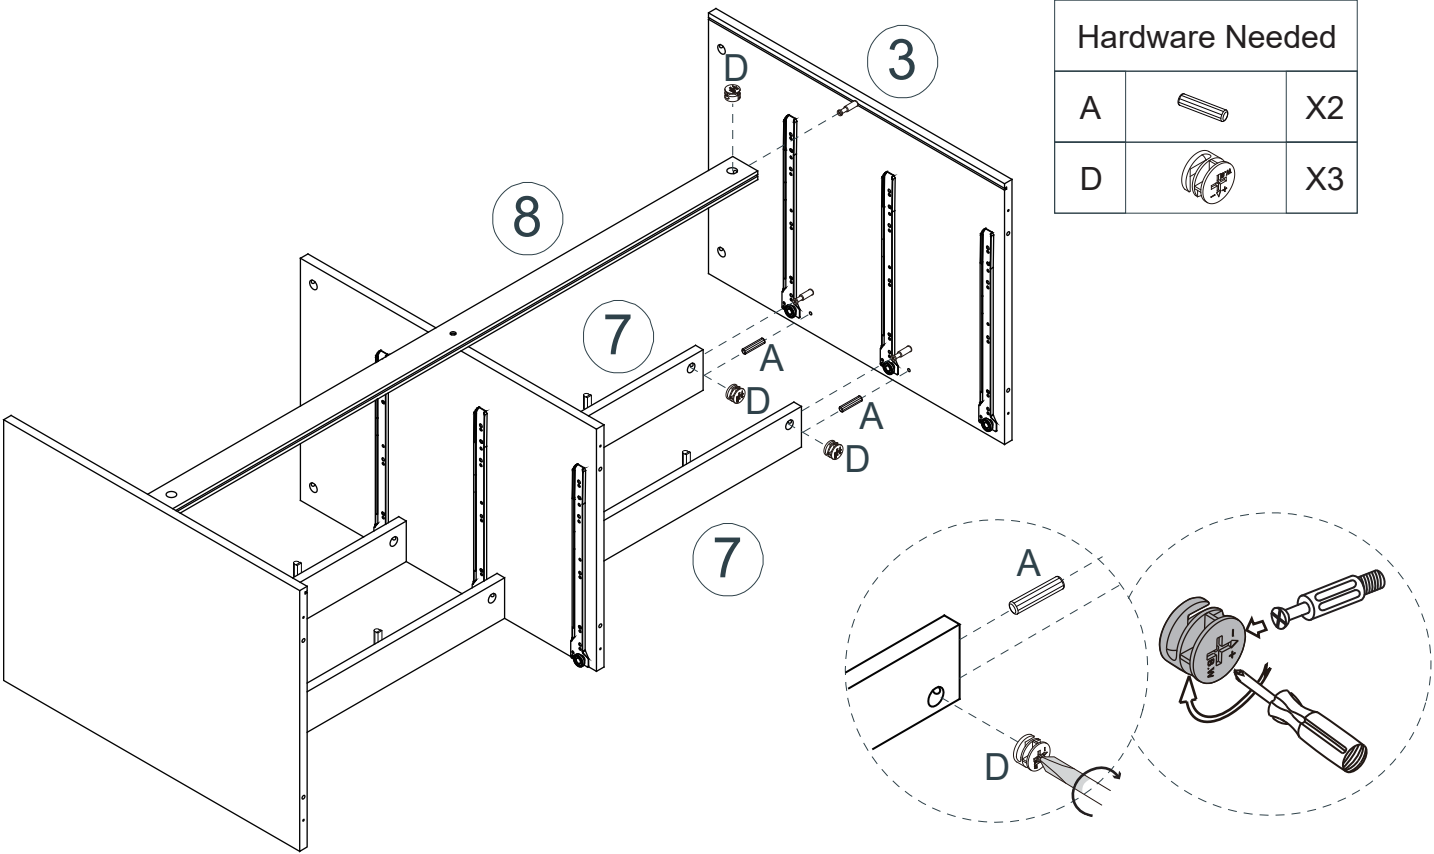


Step 8

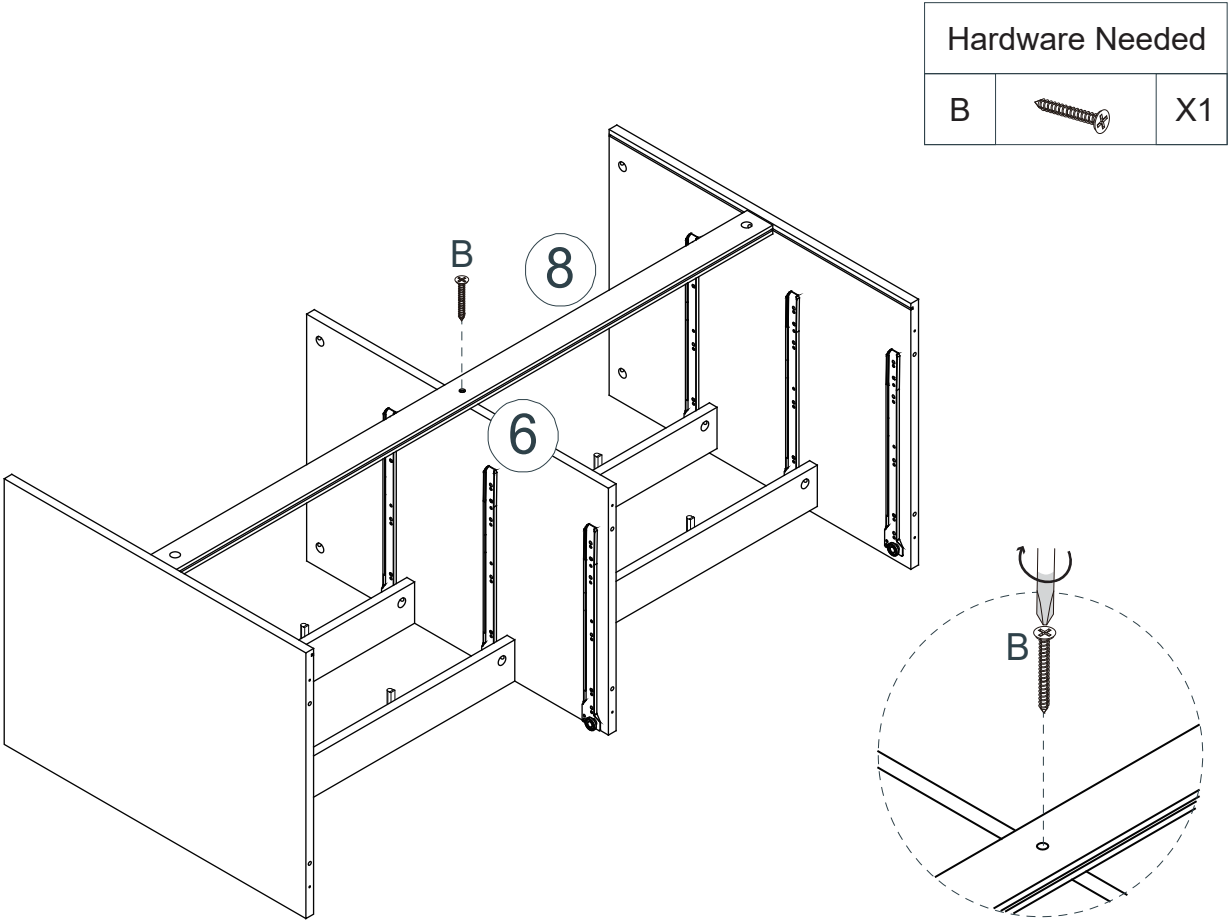

Step 9

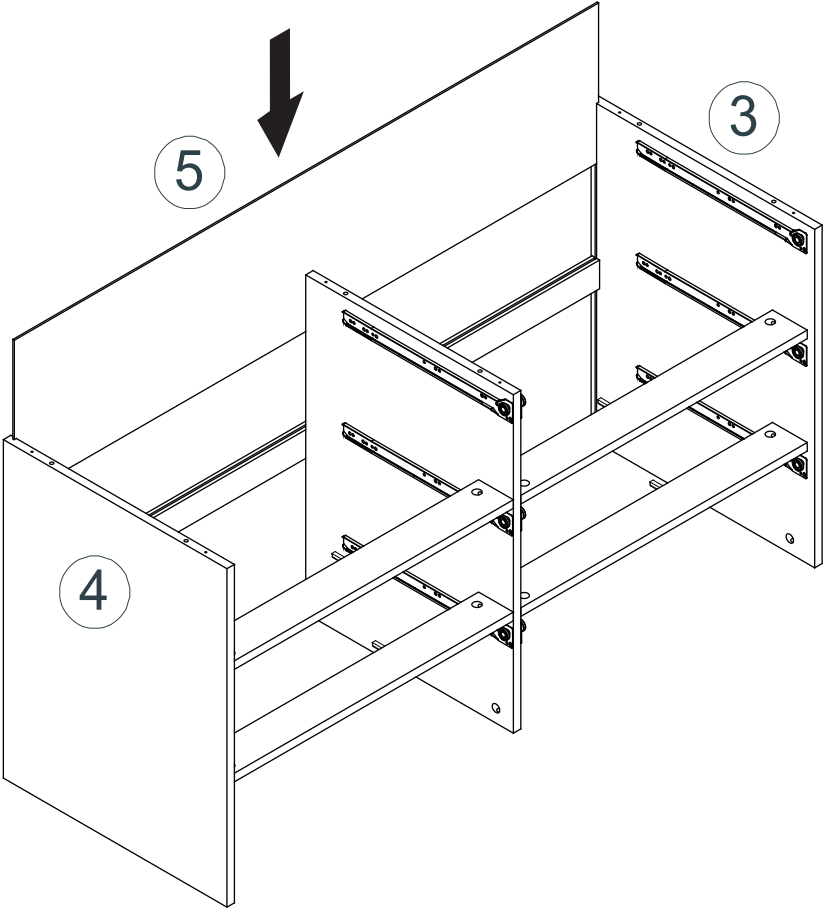


Step 10

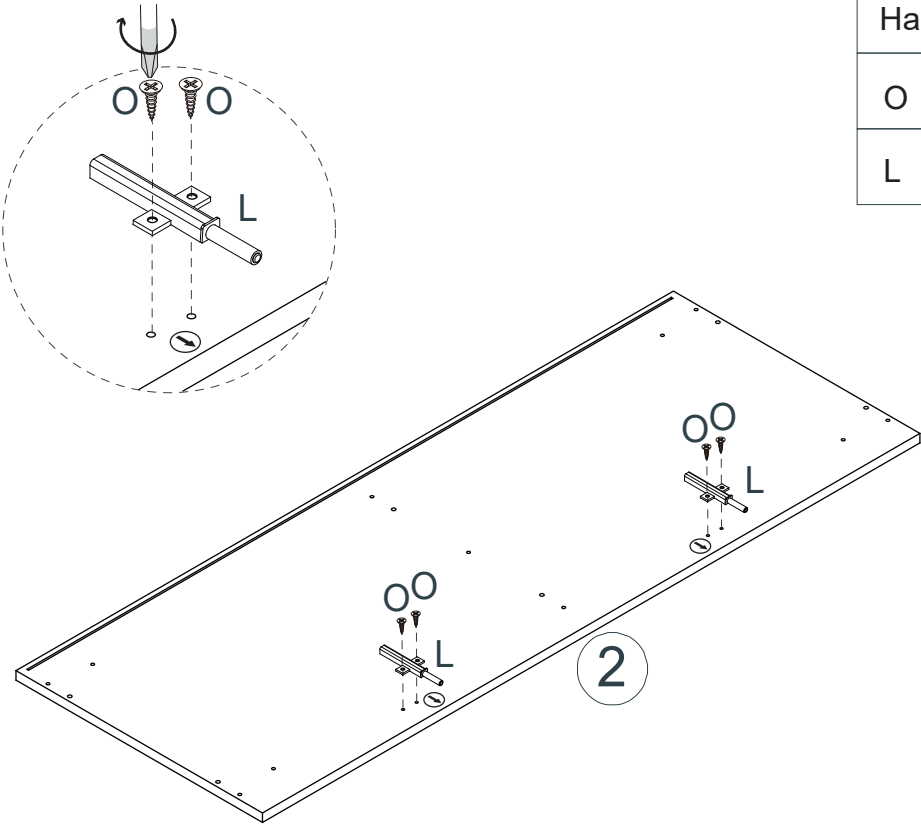


Hardware Needed

O		x4
L		x2


Step 11

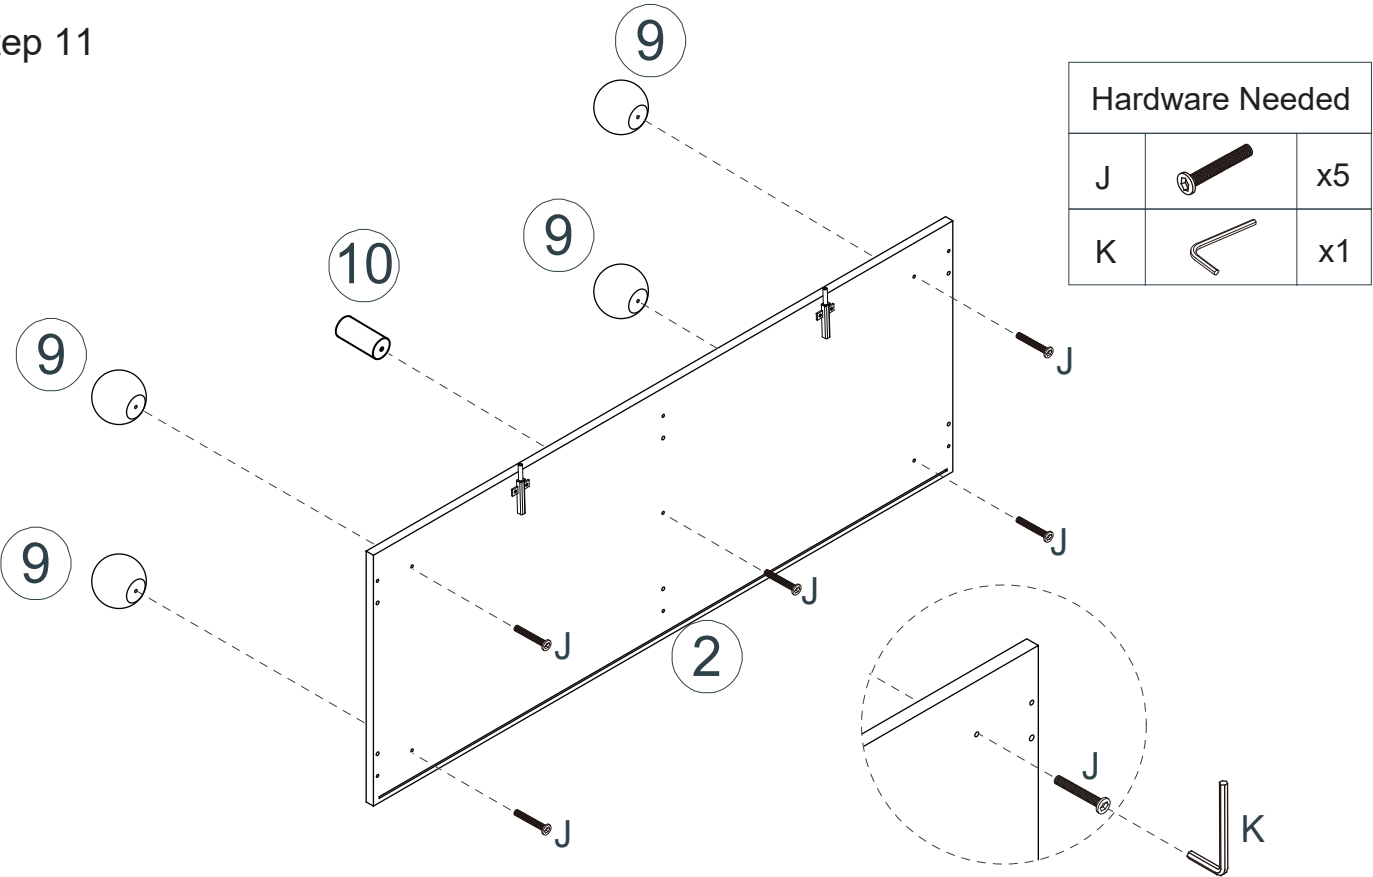


Step 12

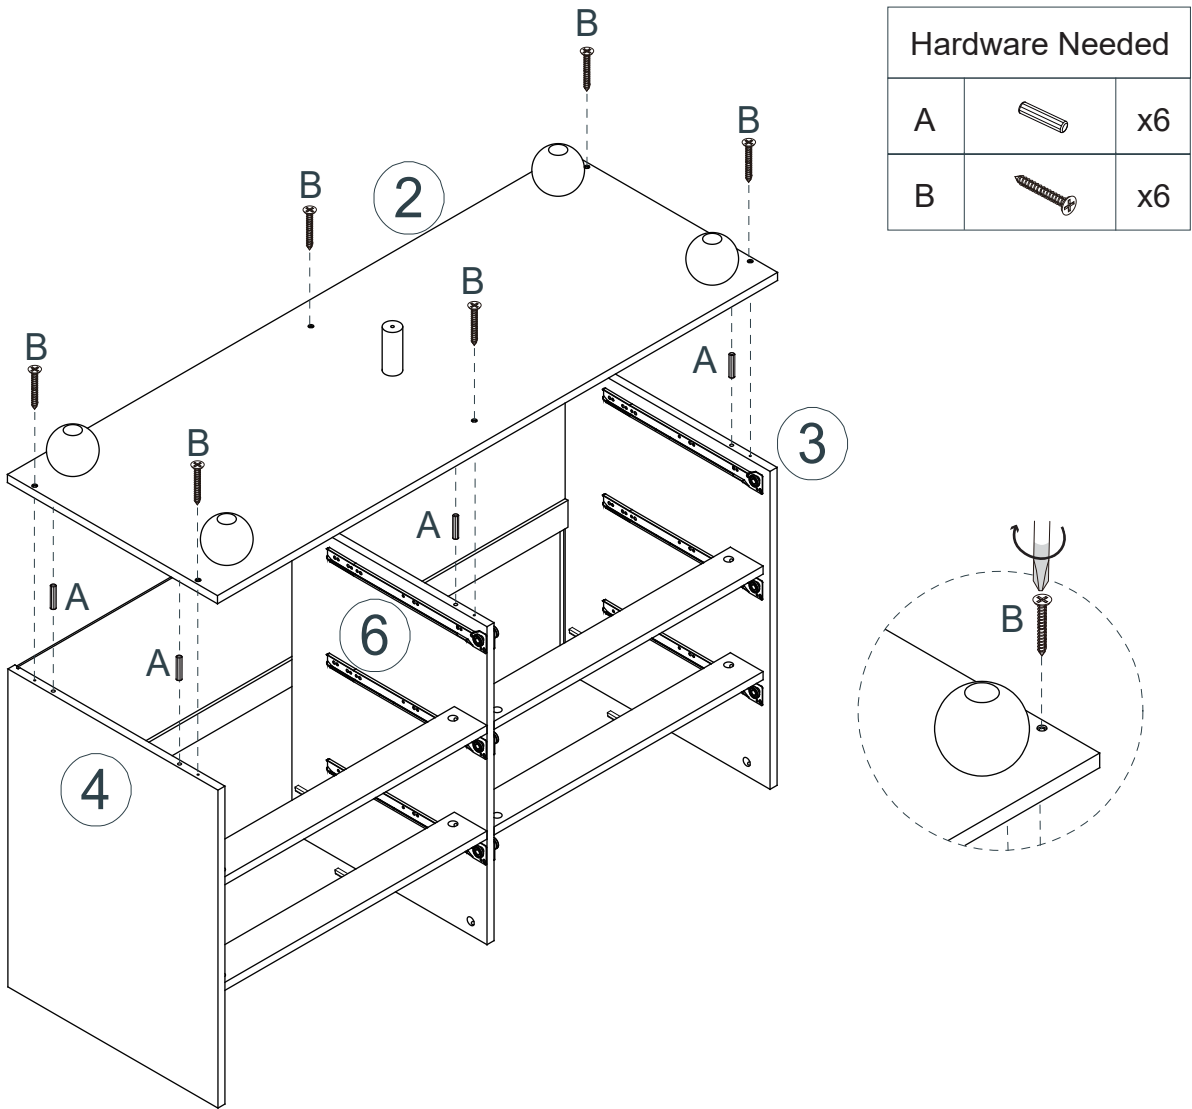


Step 13

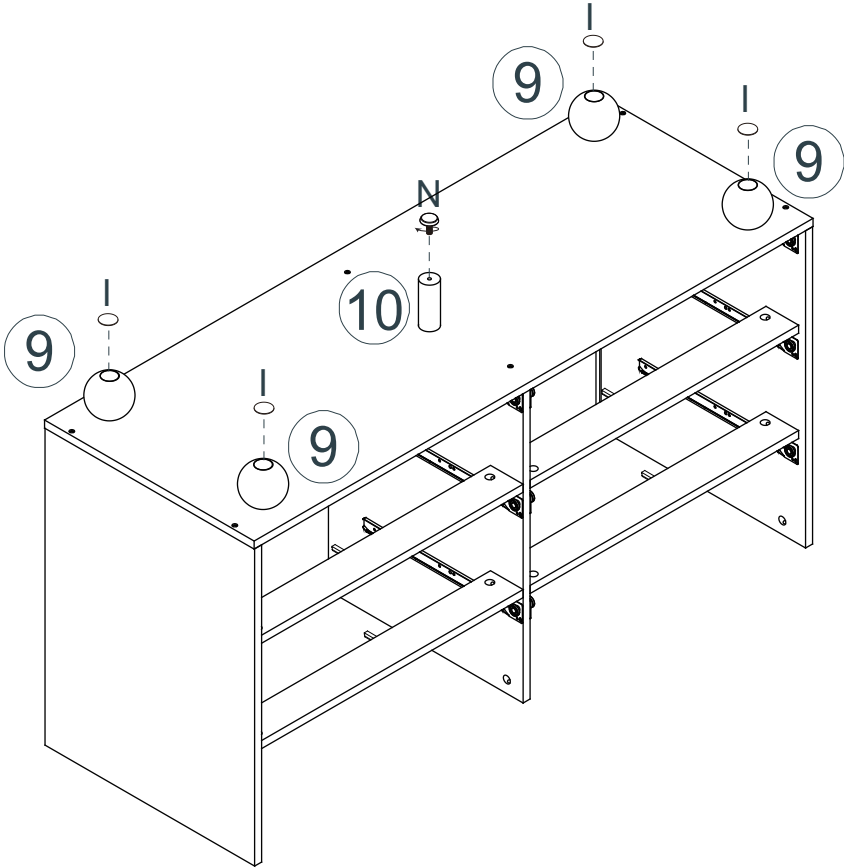


Hardware Needed		
I		x4
N		x1

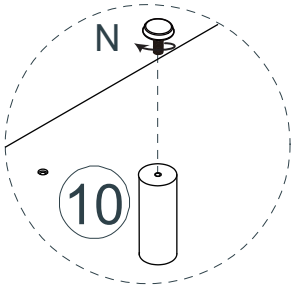


Step 14

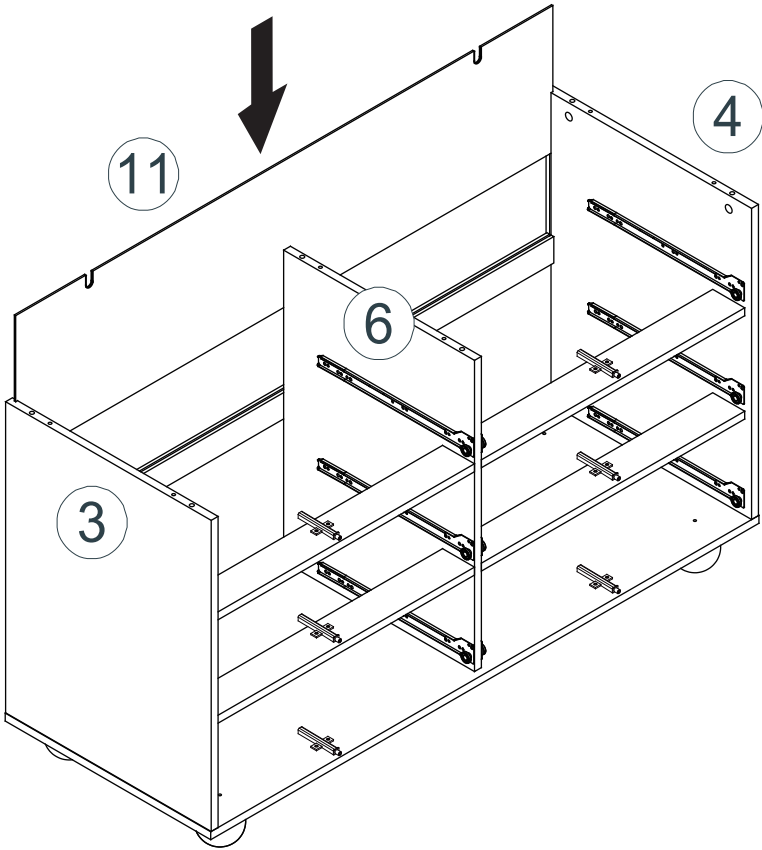


Step 15

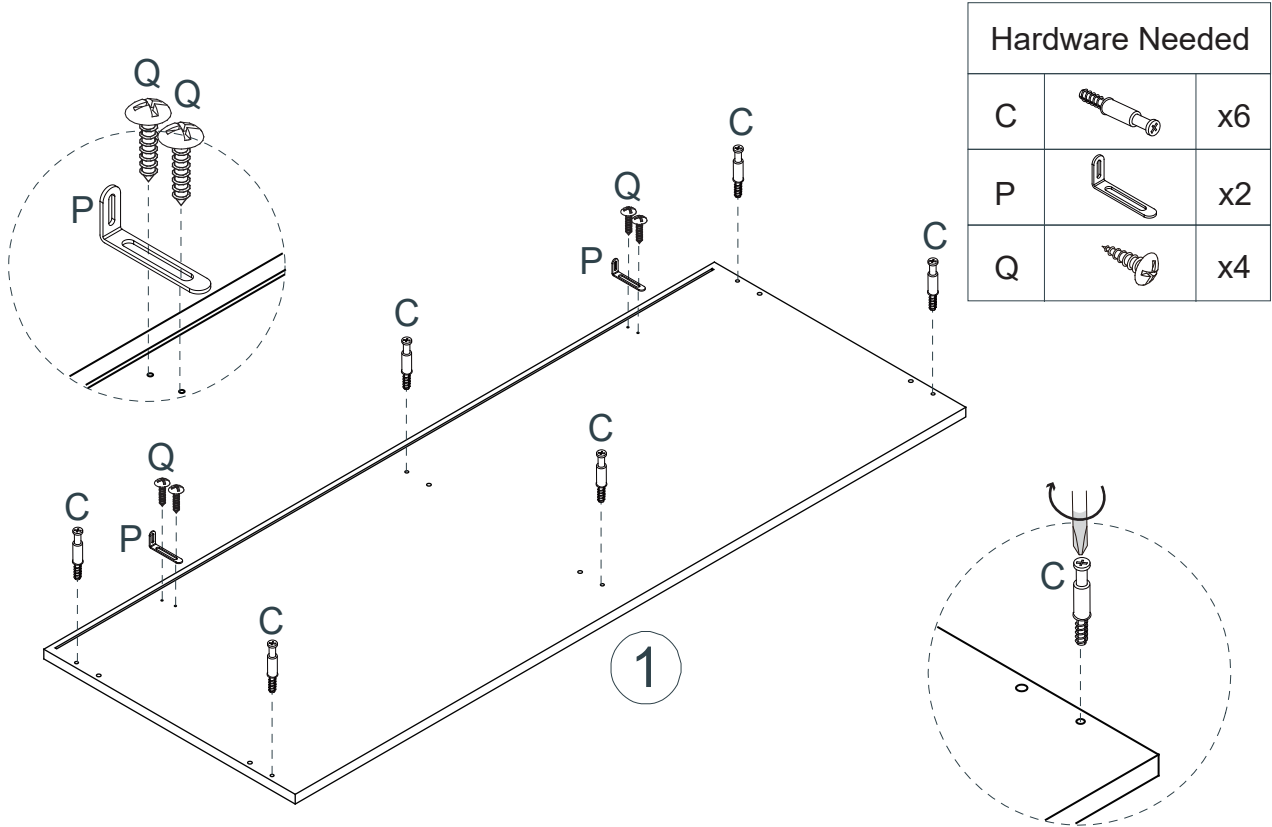


Step 16

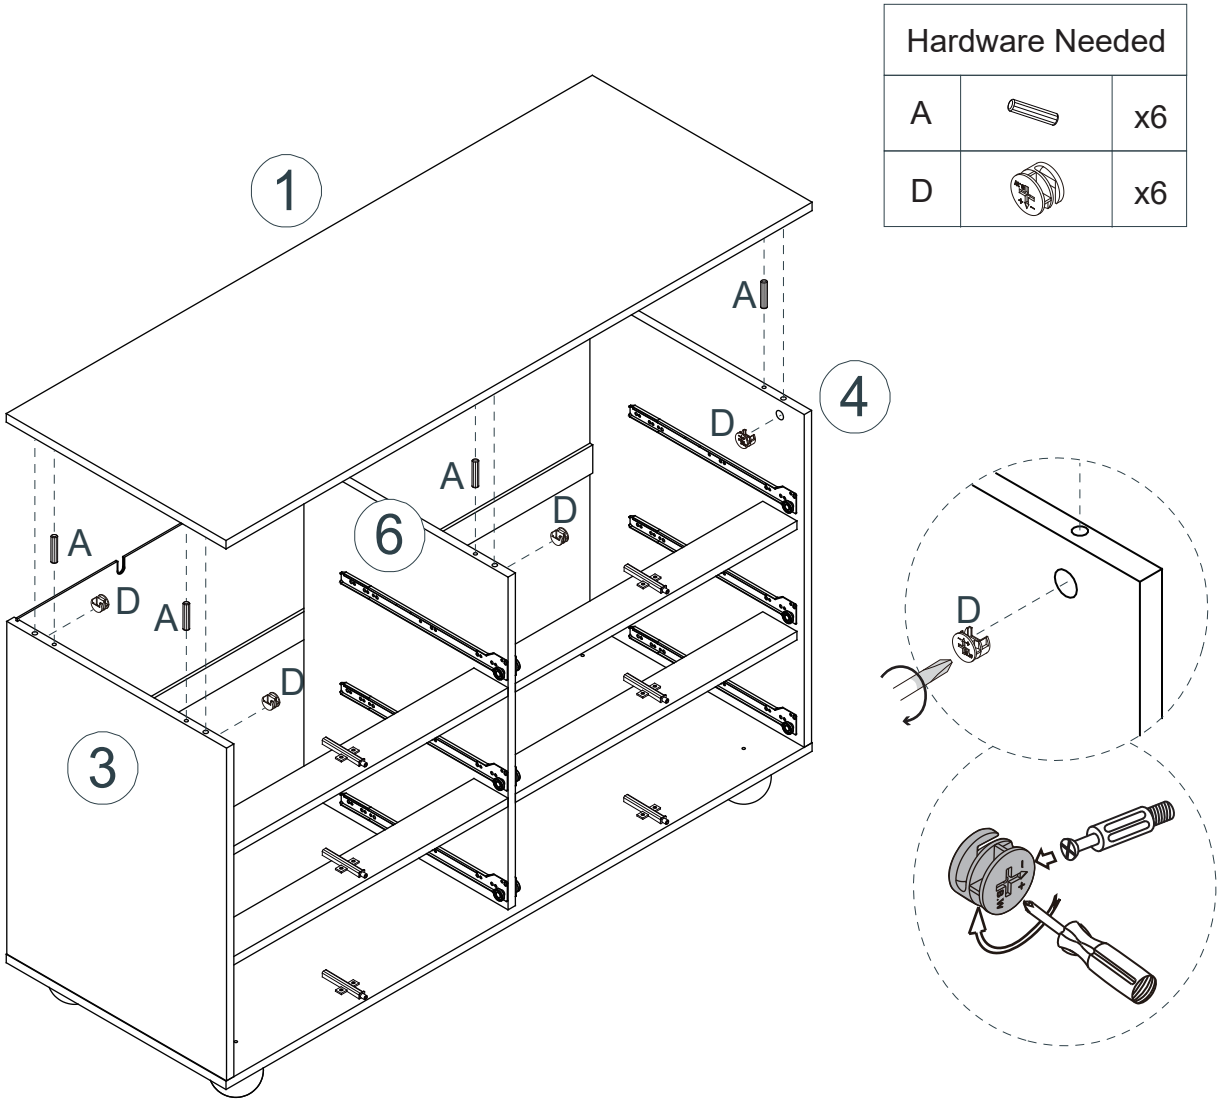

Step 17

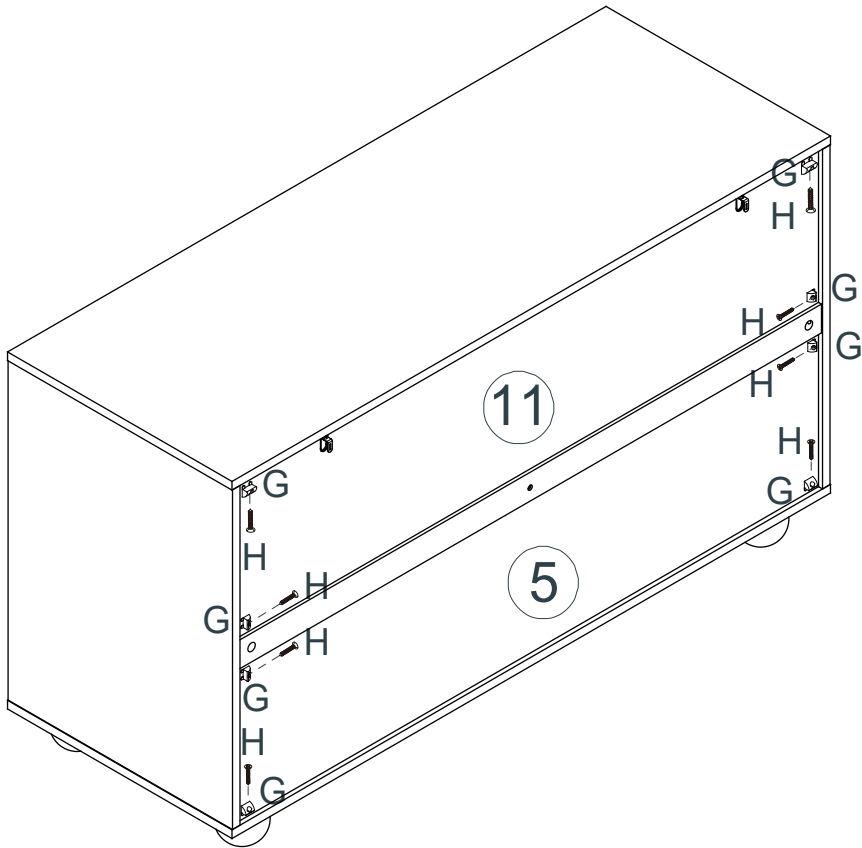


Hardware Needed		
G		X8
H		X8

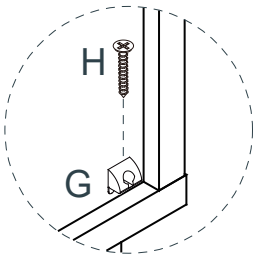



Step 18

- 1.Mark the drilling positions on the wall, drill holes, and insert the wall anchors (R).
- 2.Pass the screws (M) through the brackets (P) and fasten the cabinet securely to the wall to prevent tipping.

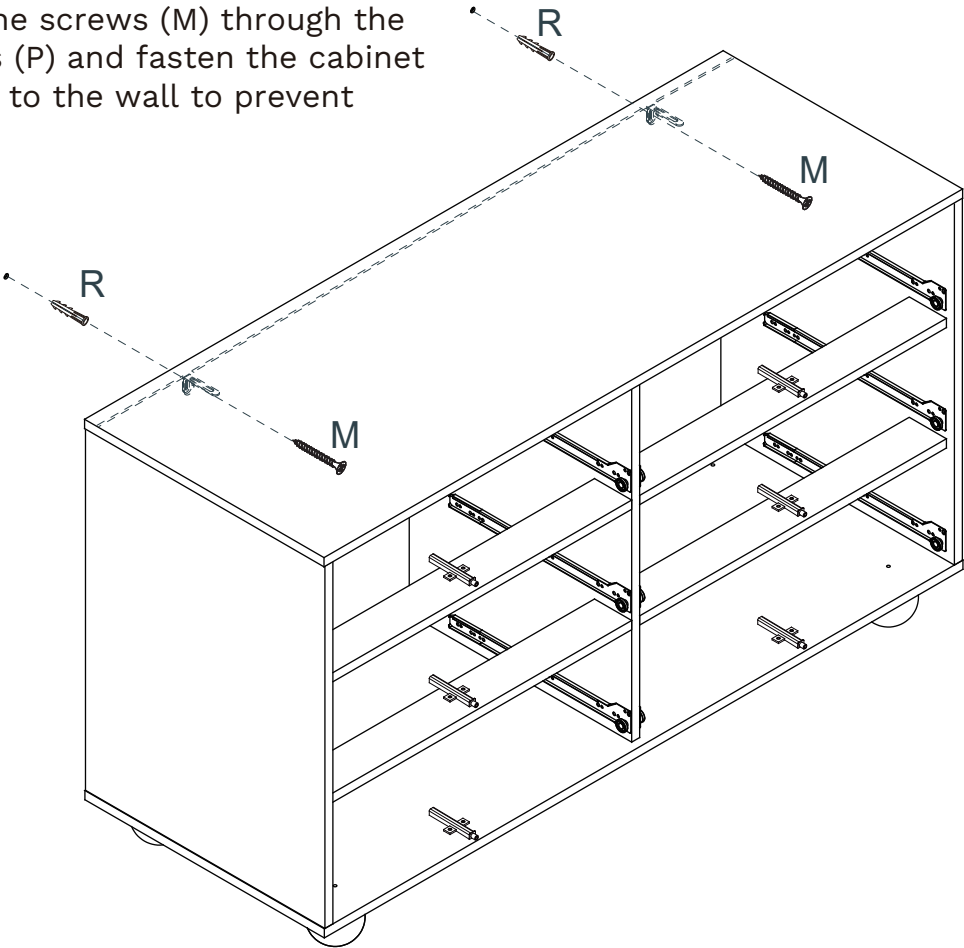

Hardware Needed		
R		X2
M		X2


Step 19

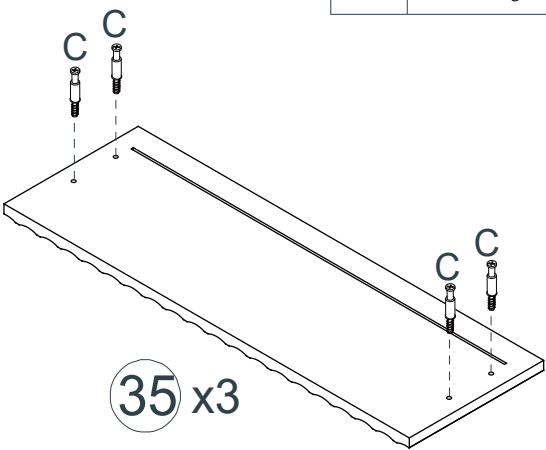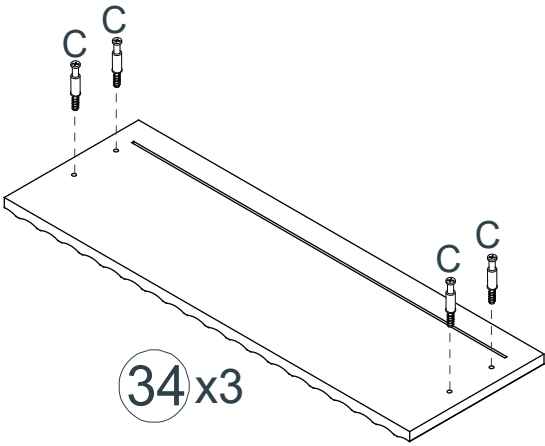

Hardware Needed		
C		x24

Drawer x6


Step 20

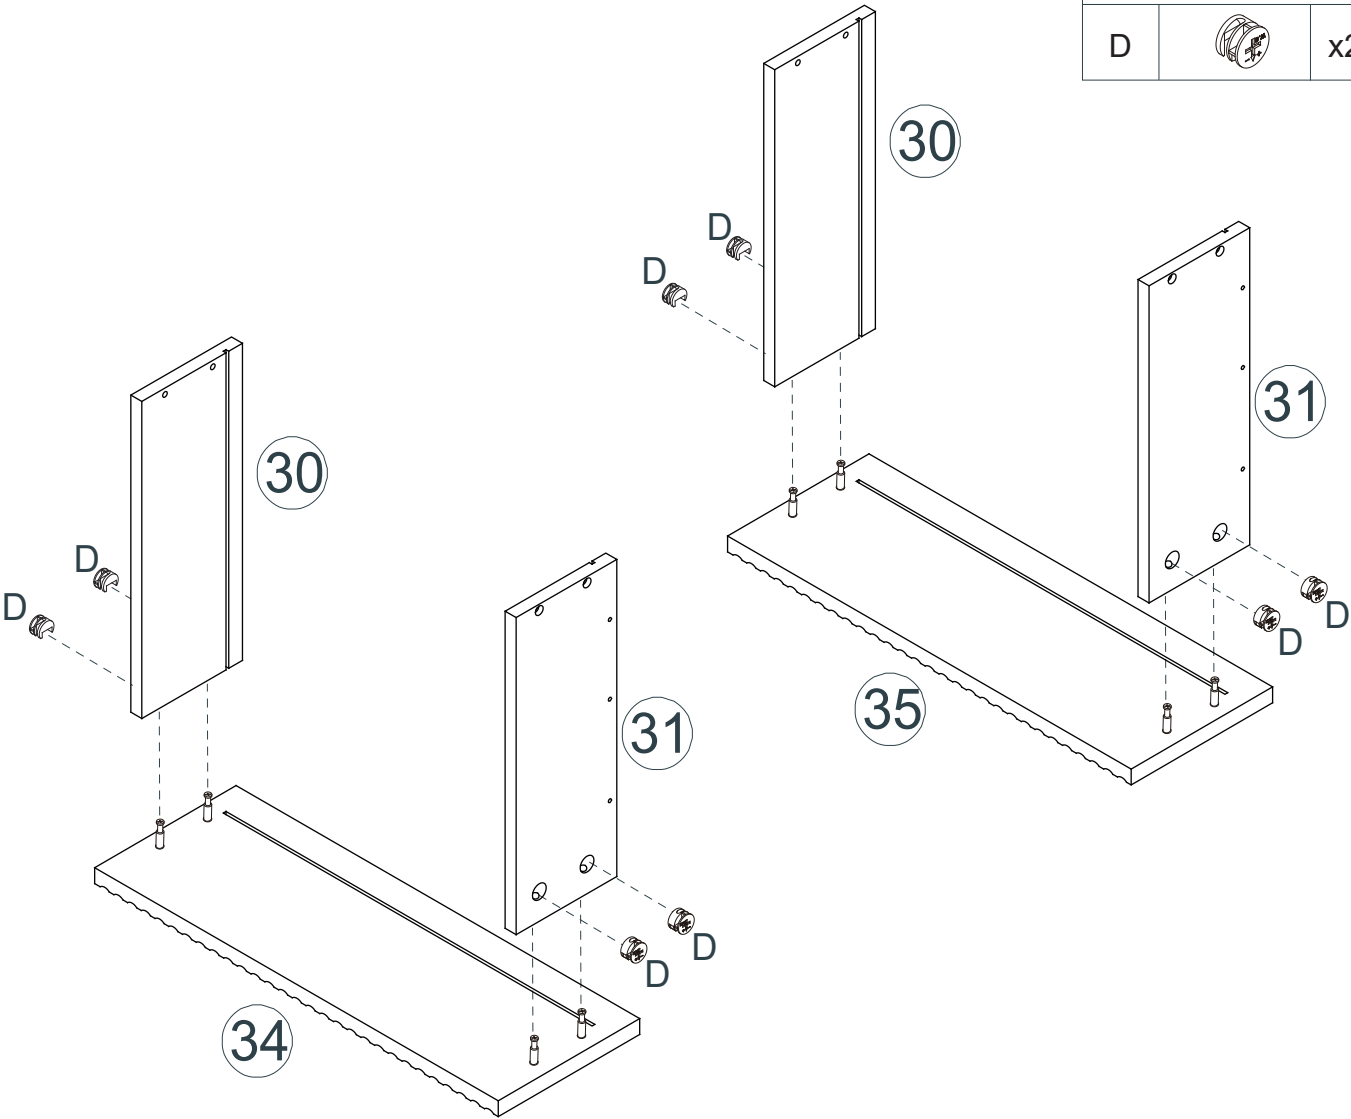

Hardware Needed		
D		x24


Drawer x6

Step 21

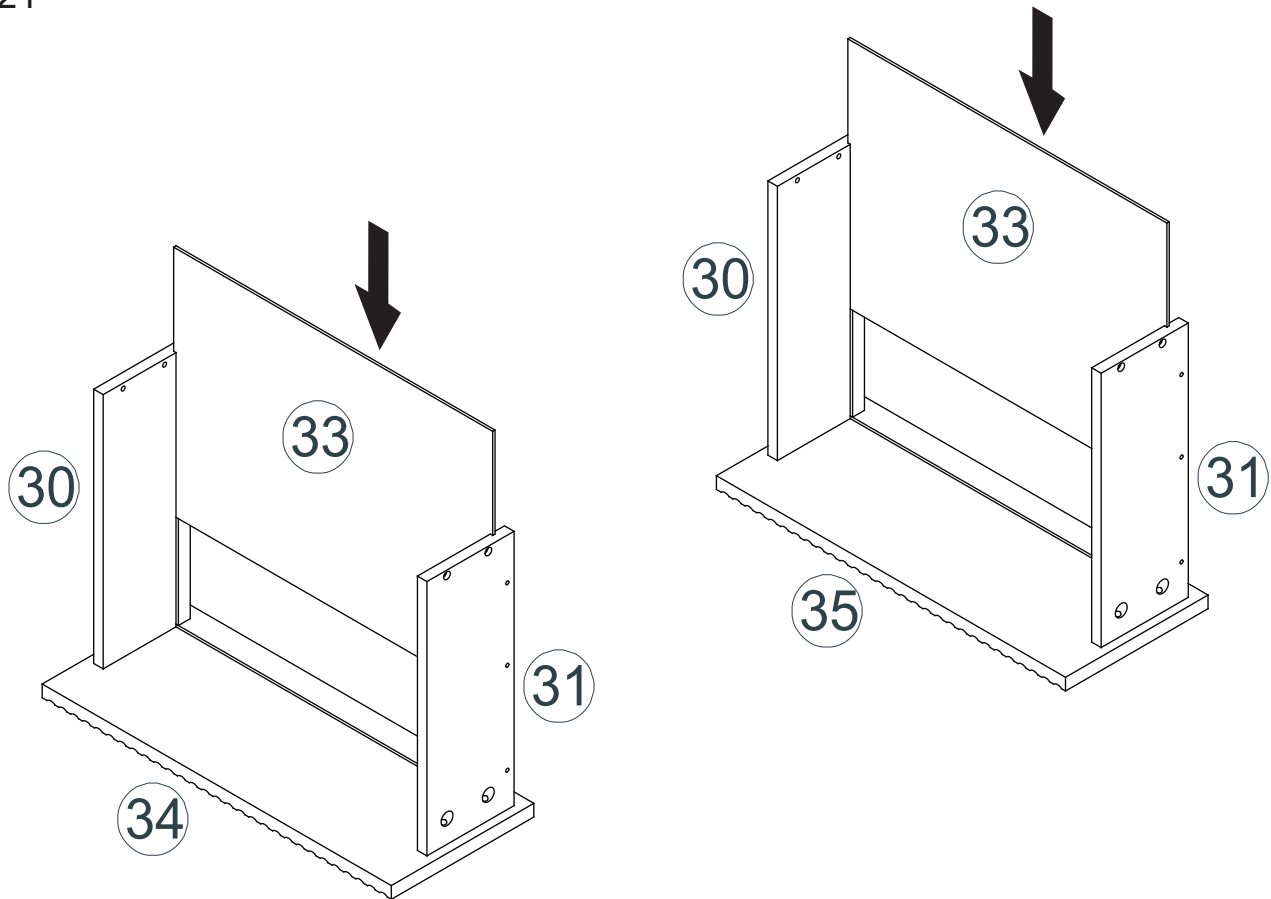

Drawer x6


Step 22

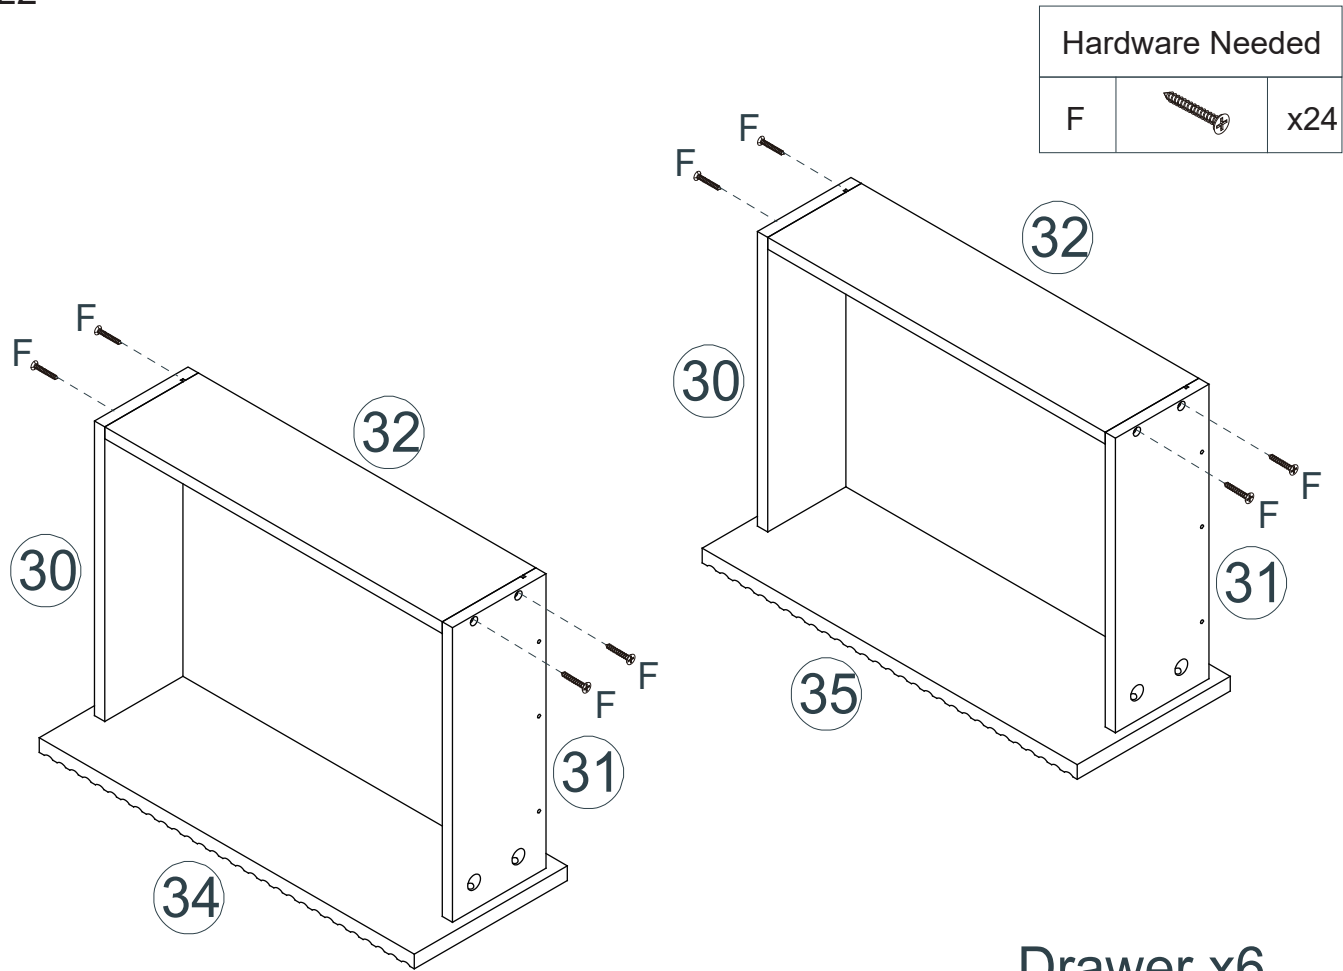


Hardware Needed		
F		x24

Drawer x6

Step 23

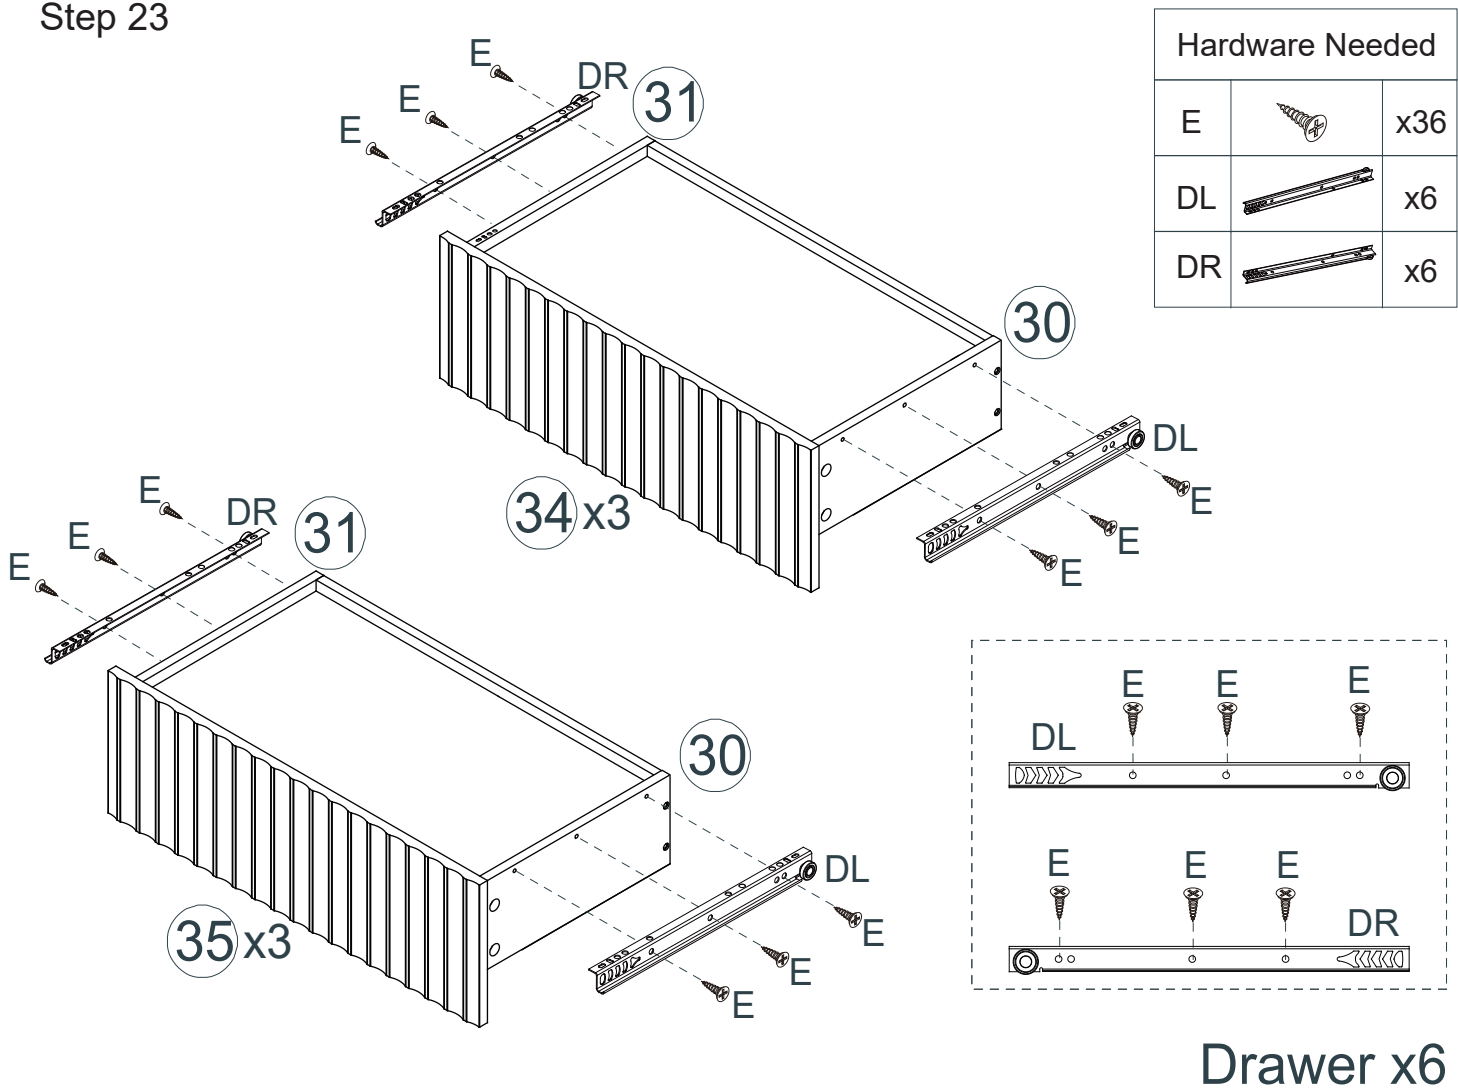


Step 24

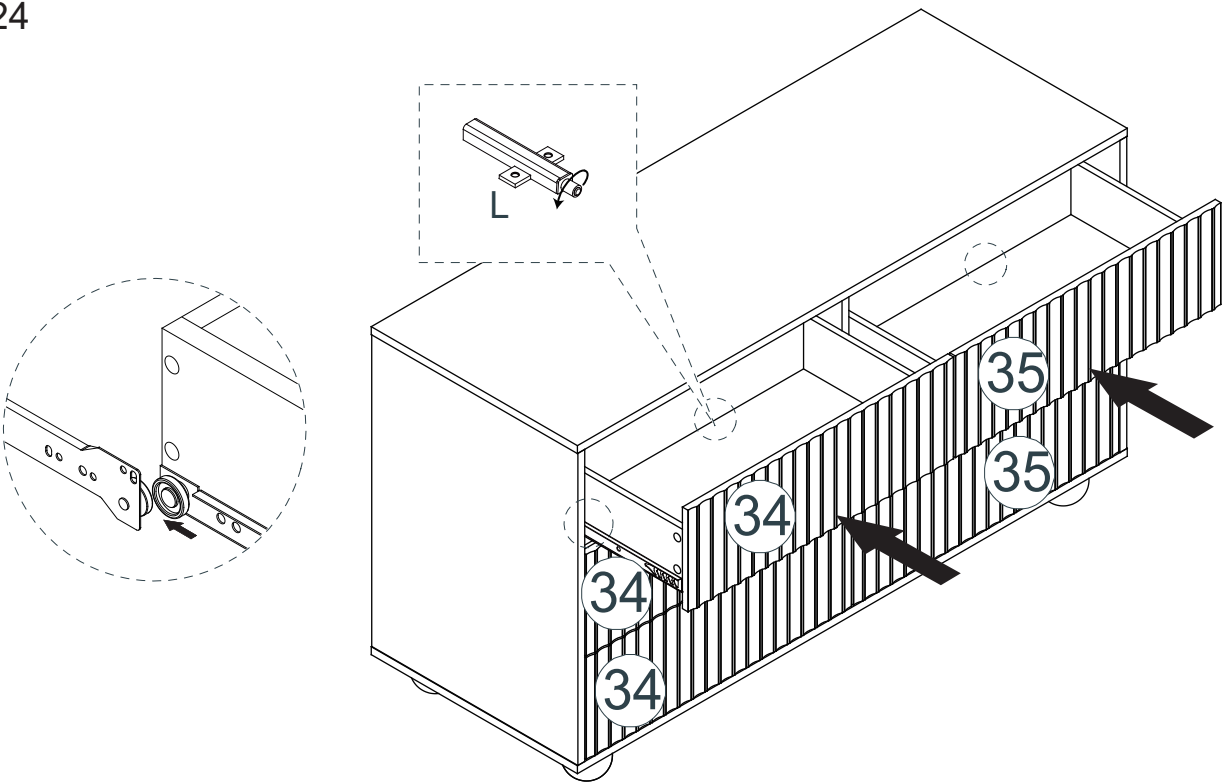


Insert the assembled drawers into the corresponding compartments as shown. Ensure the drawers slide easily along the rails. If the Drawer is not catching or sitting flush, twist the end of the Bracket (L).

Step 25

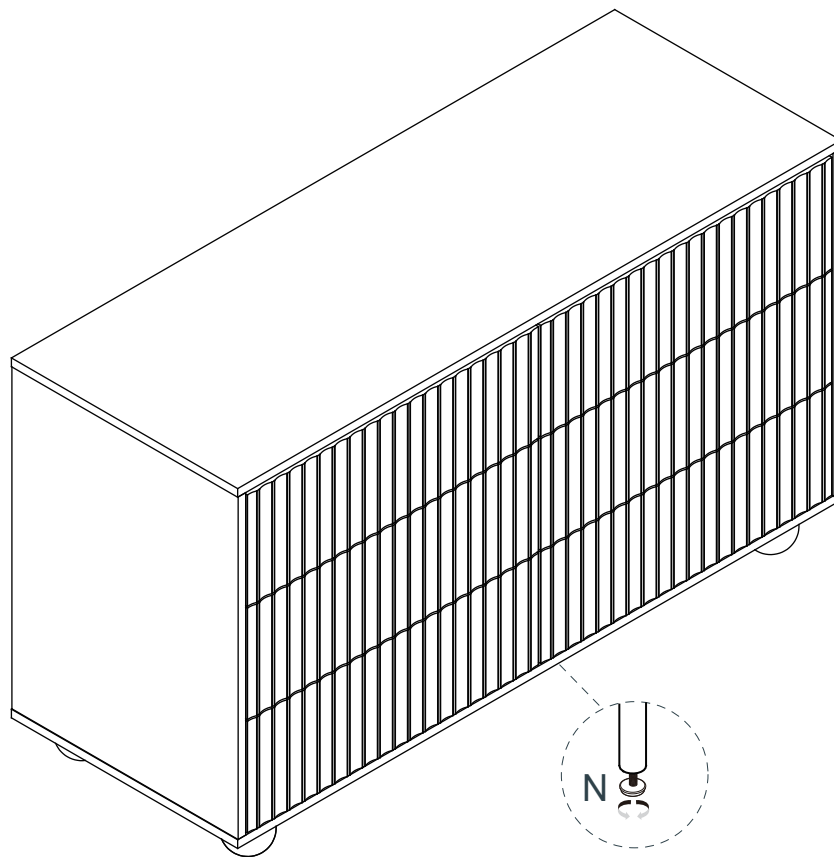


Twist the adjuster on centre leg to make sure the top panel is flush.


Step 26

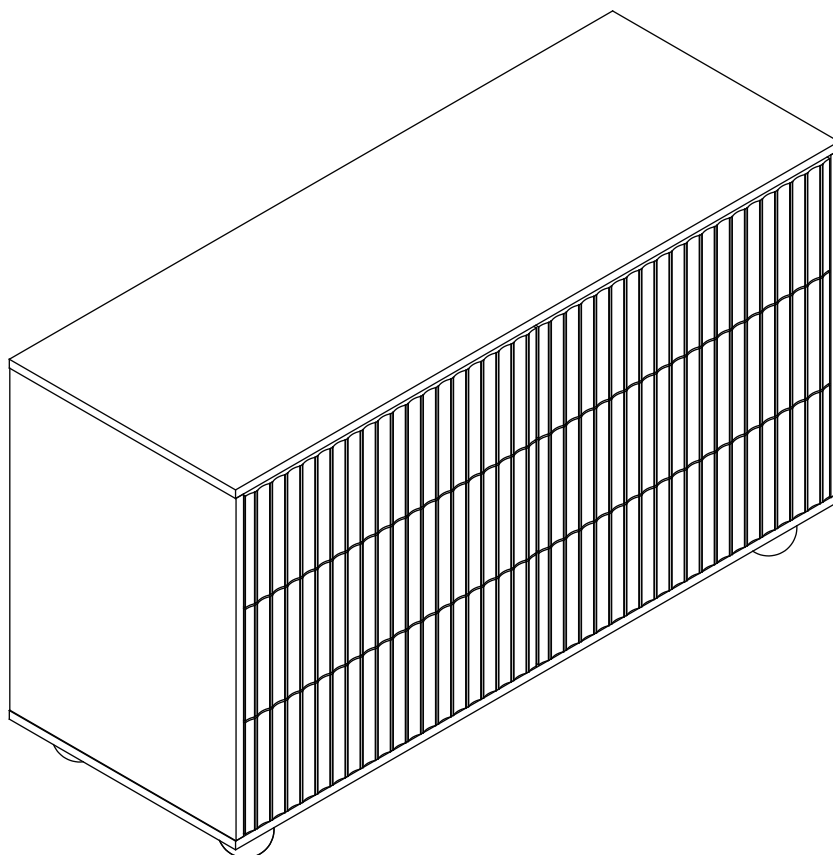

Step 27

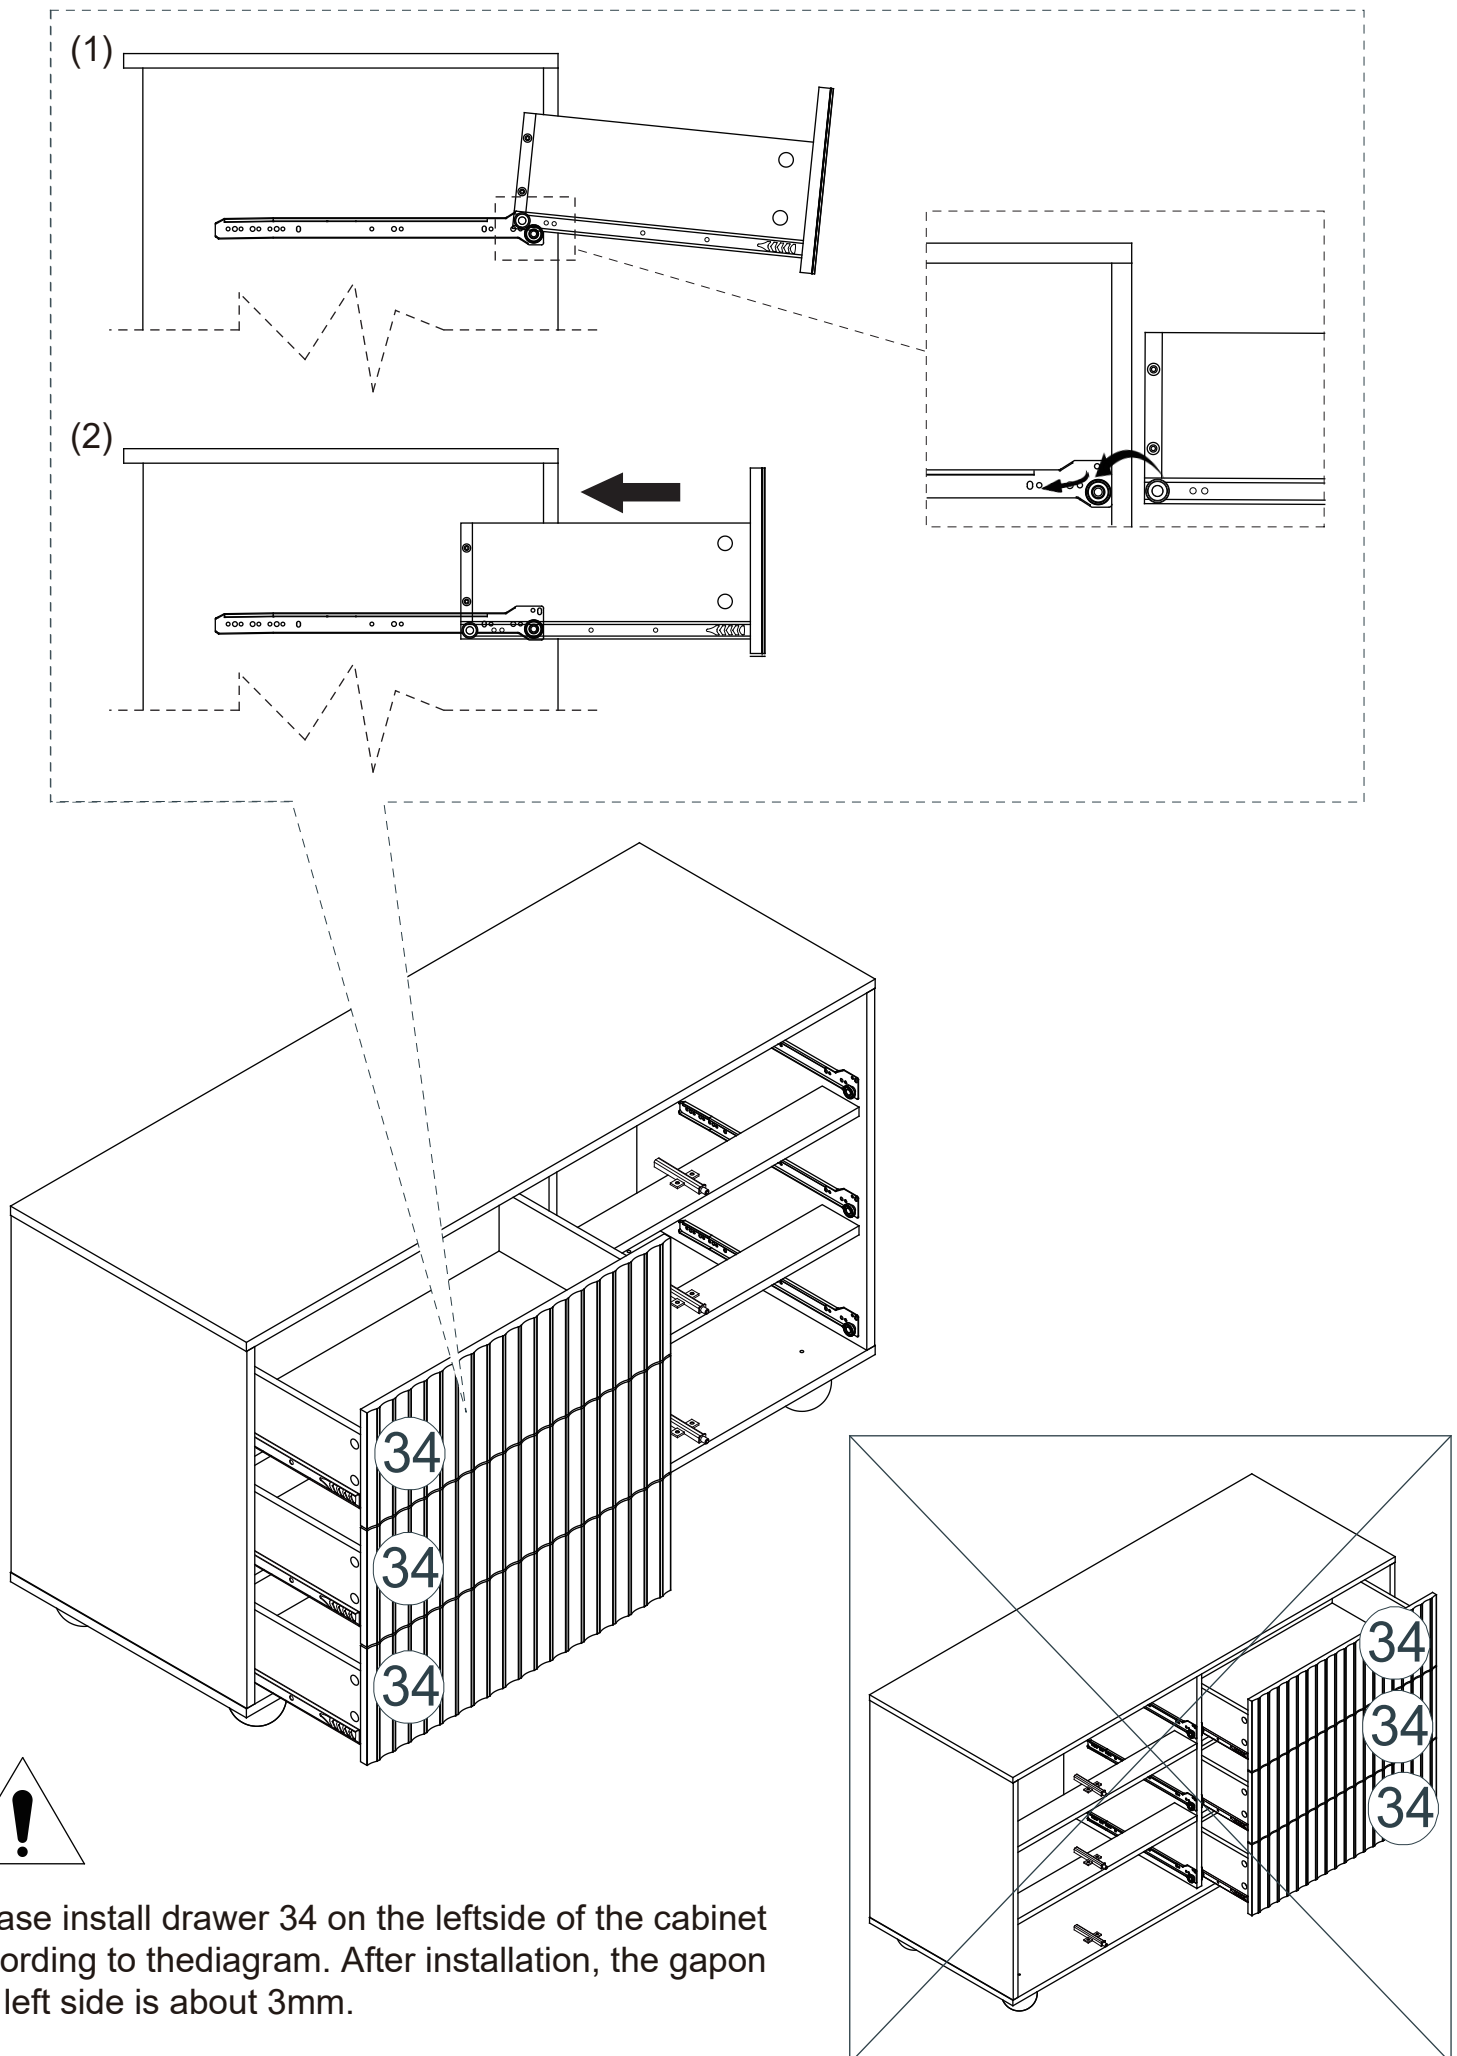


Step 28

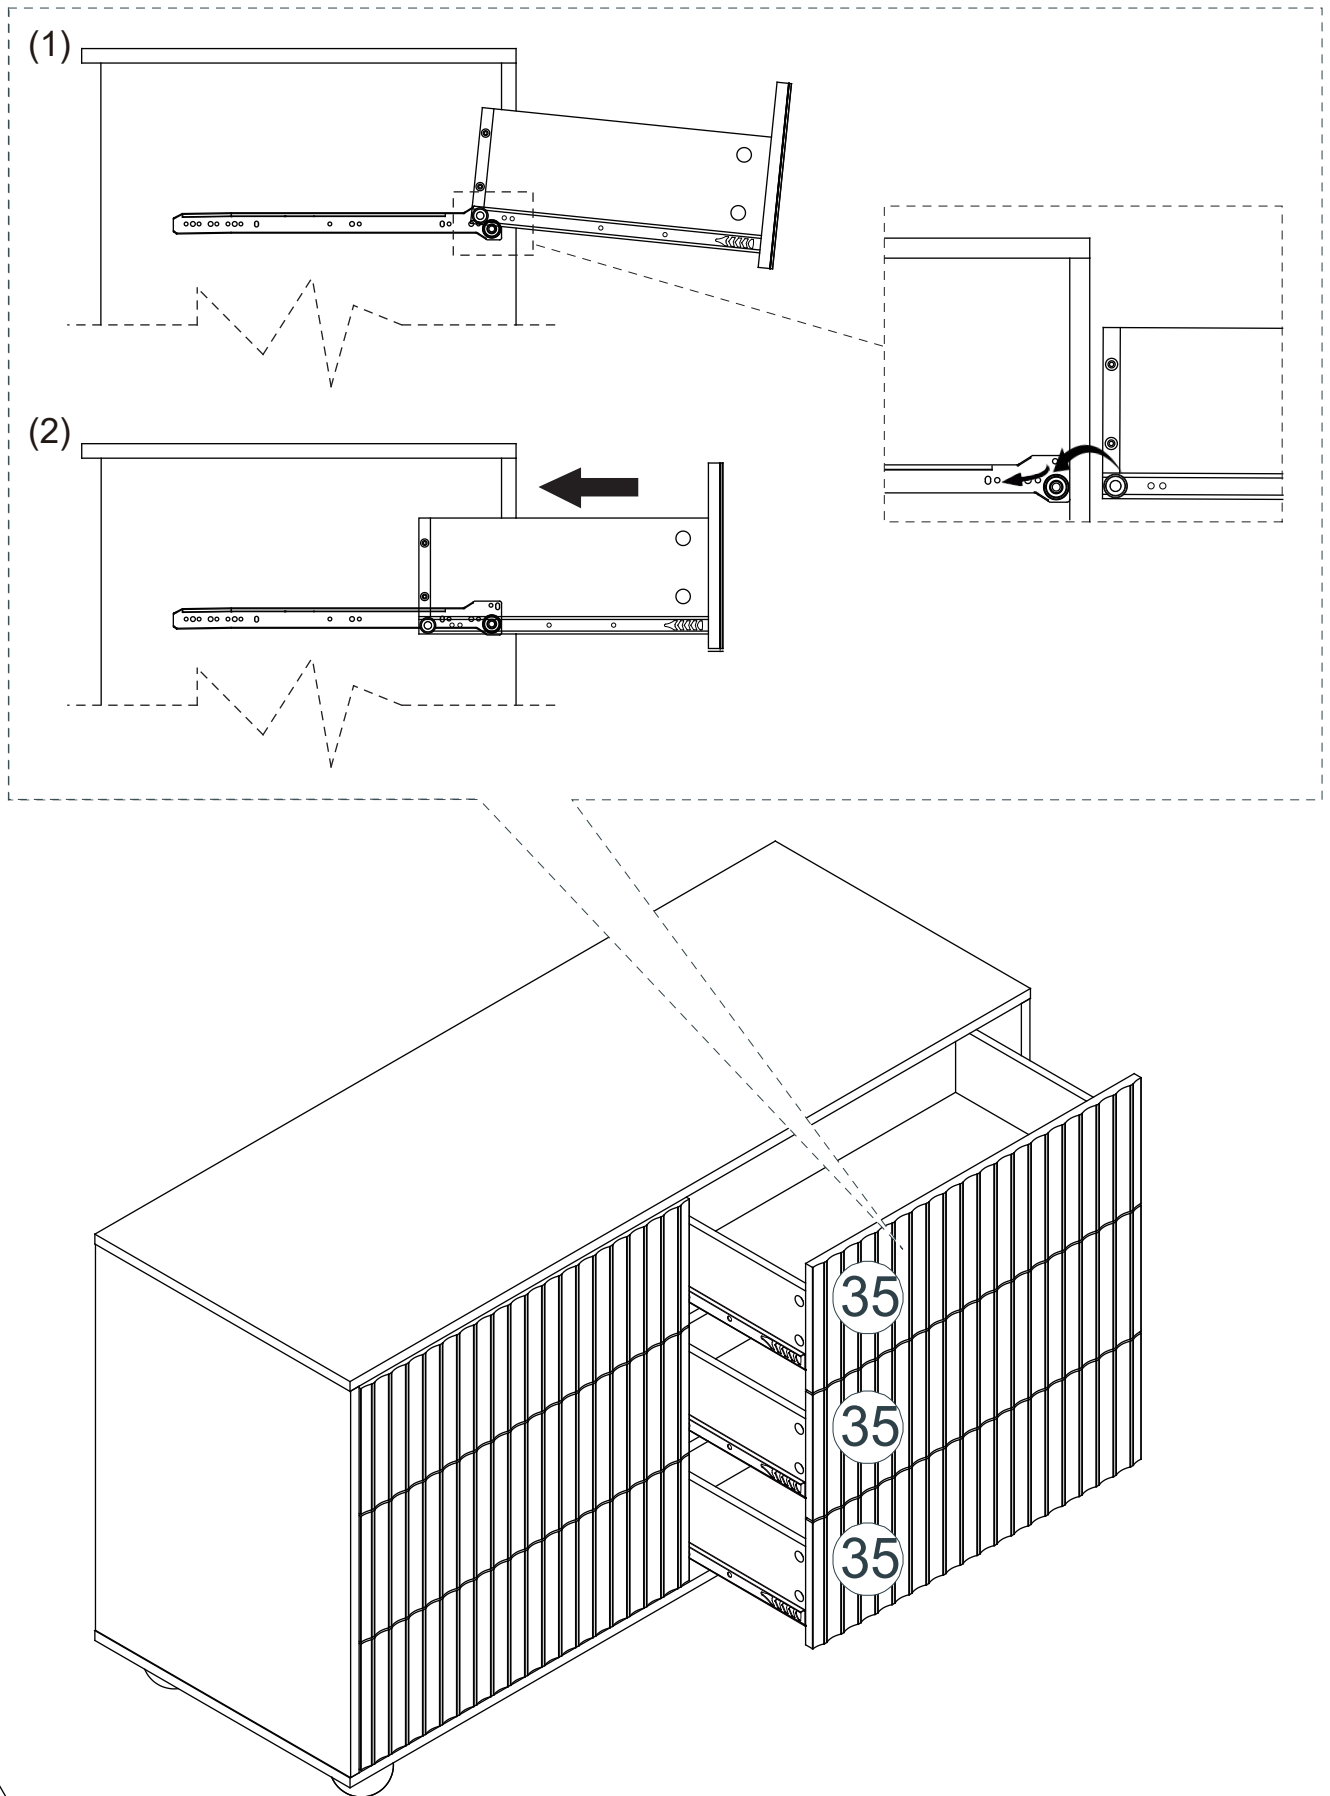

Please install drawer 35 on the rightside of the cabinet according to thediagram. After installation, the gap onboth sides should be about 3mm.



Step 29

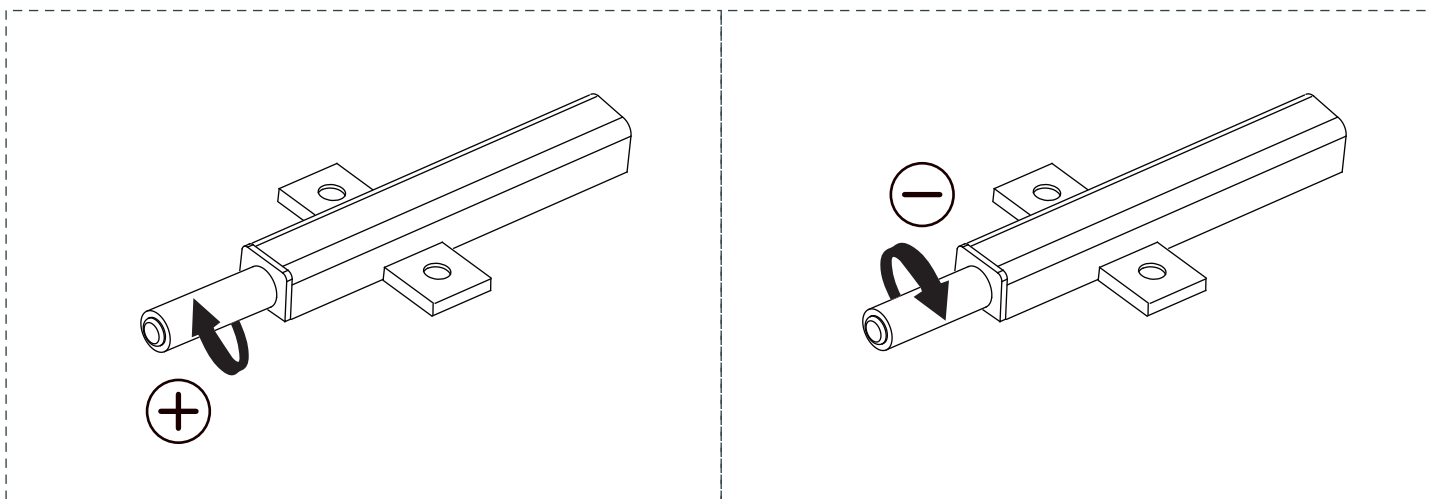


Adjustable 1/4 inch

Adjustable long stroke, make your installation more easy. And features 7 mm of adjustment to fit varying door gap widths, you can finely adjust the distance between the latch and the door to the most ideal state.


(The distance can be adjusted 1-7 mm by rotating the inner core).

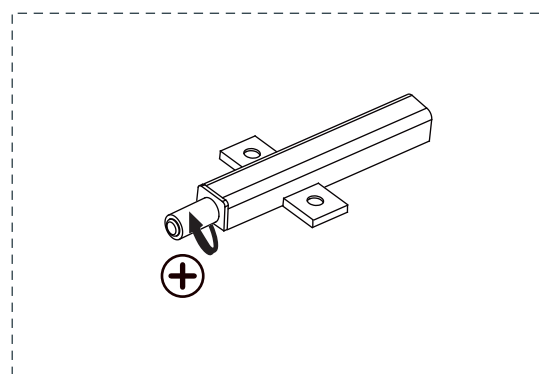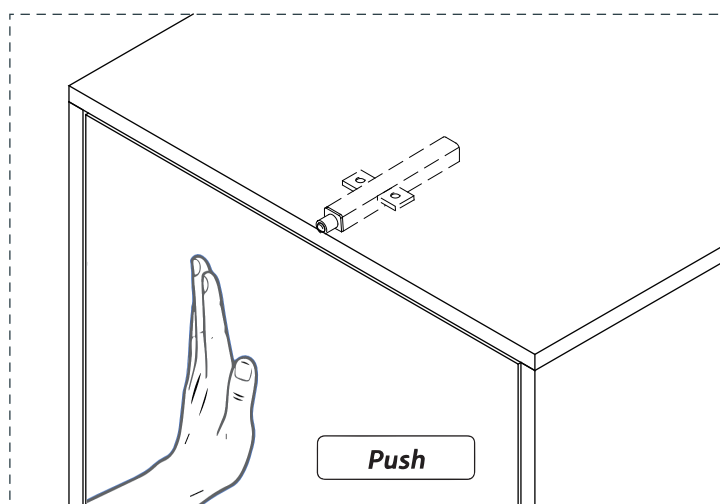


If the door cannot be opened, rotate the inner core counter clockwise.

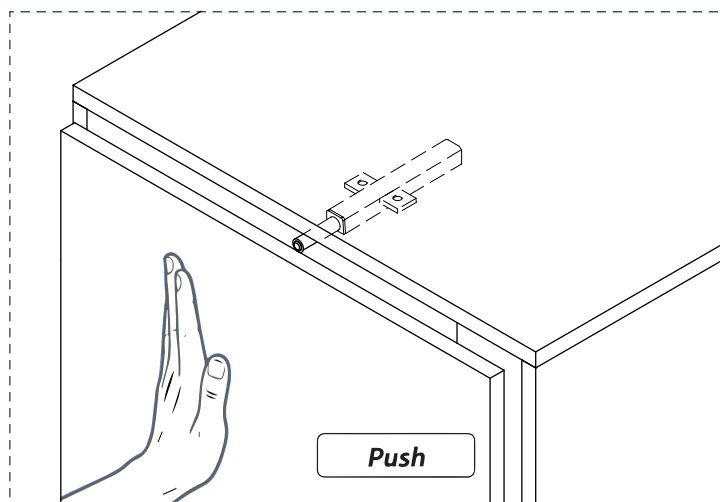

(1)

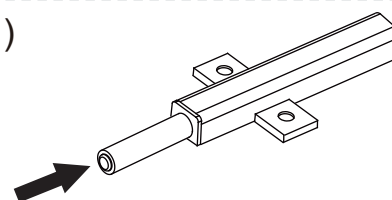

(2)

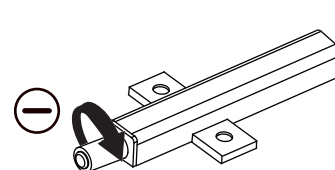

If the door cannot close, press the rotating inner core all the way in first, then turn it clockwise.