


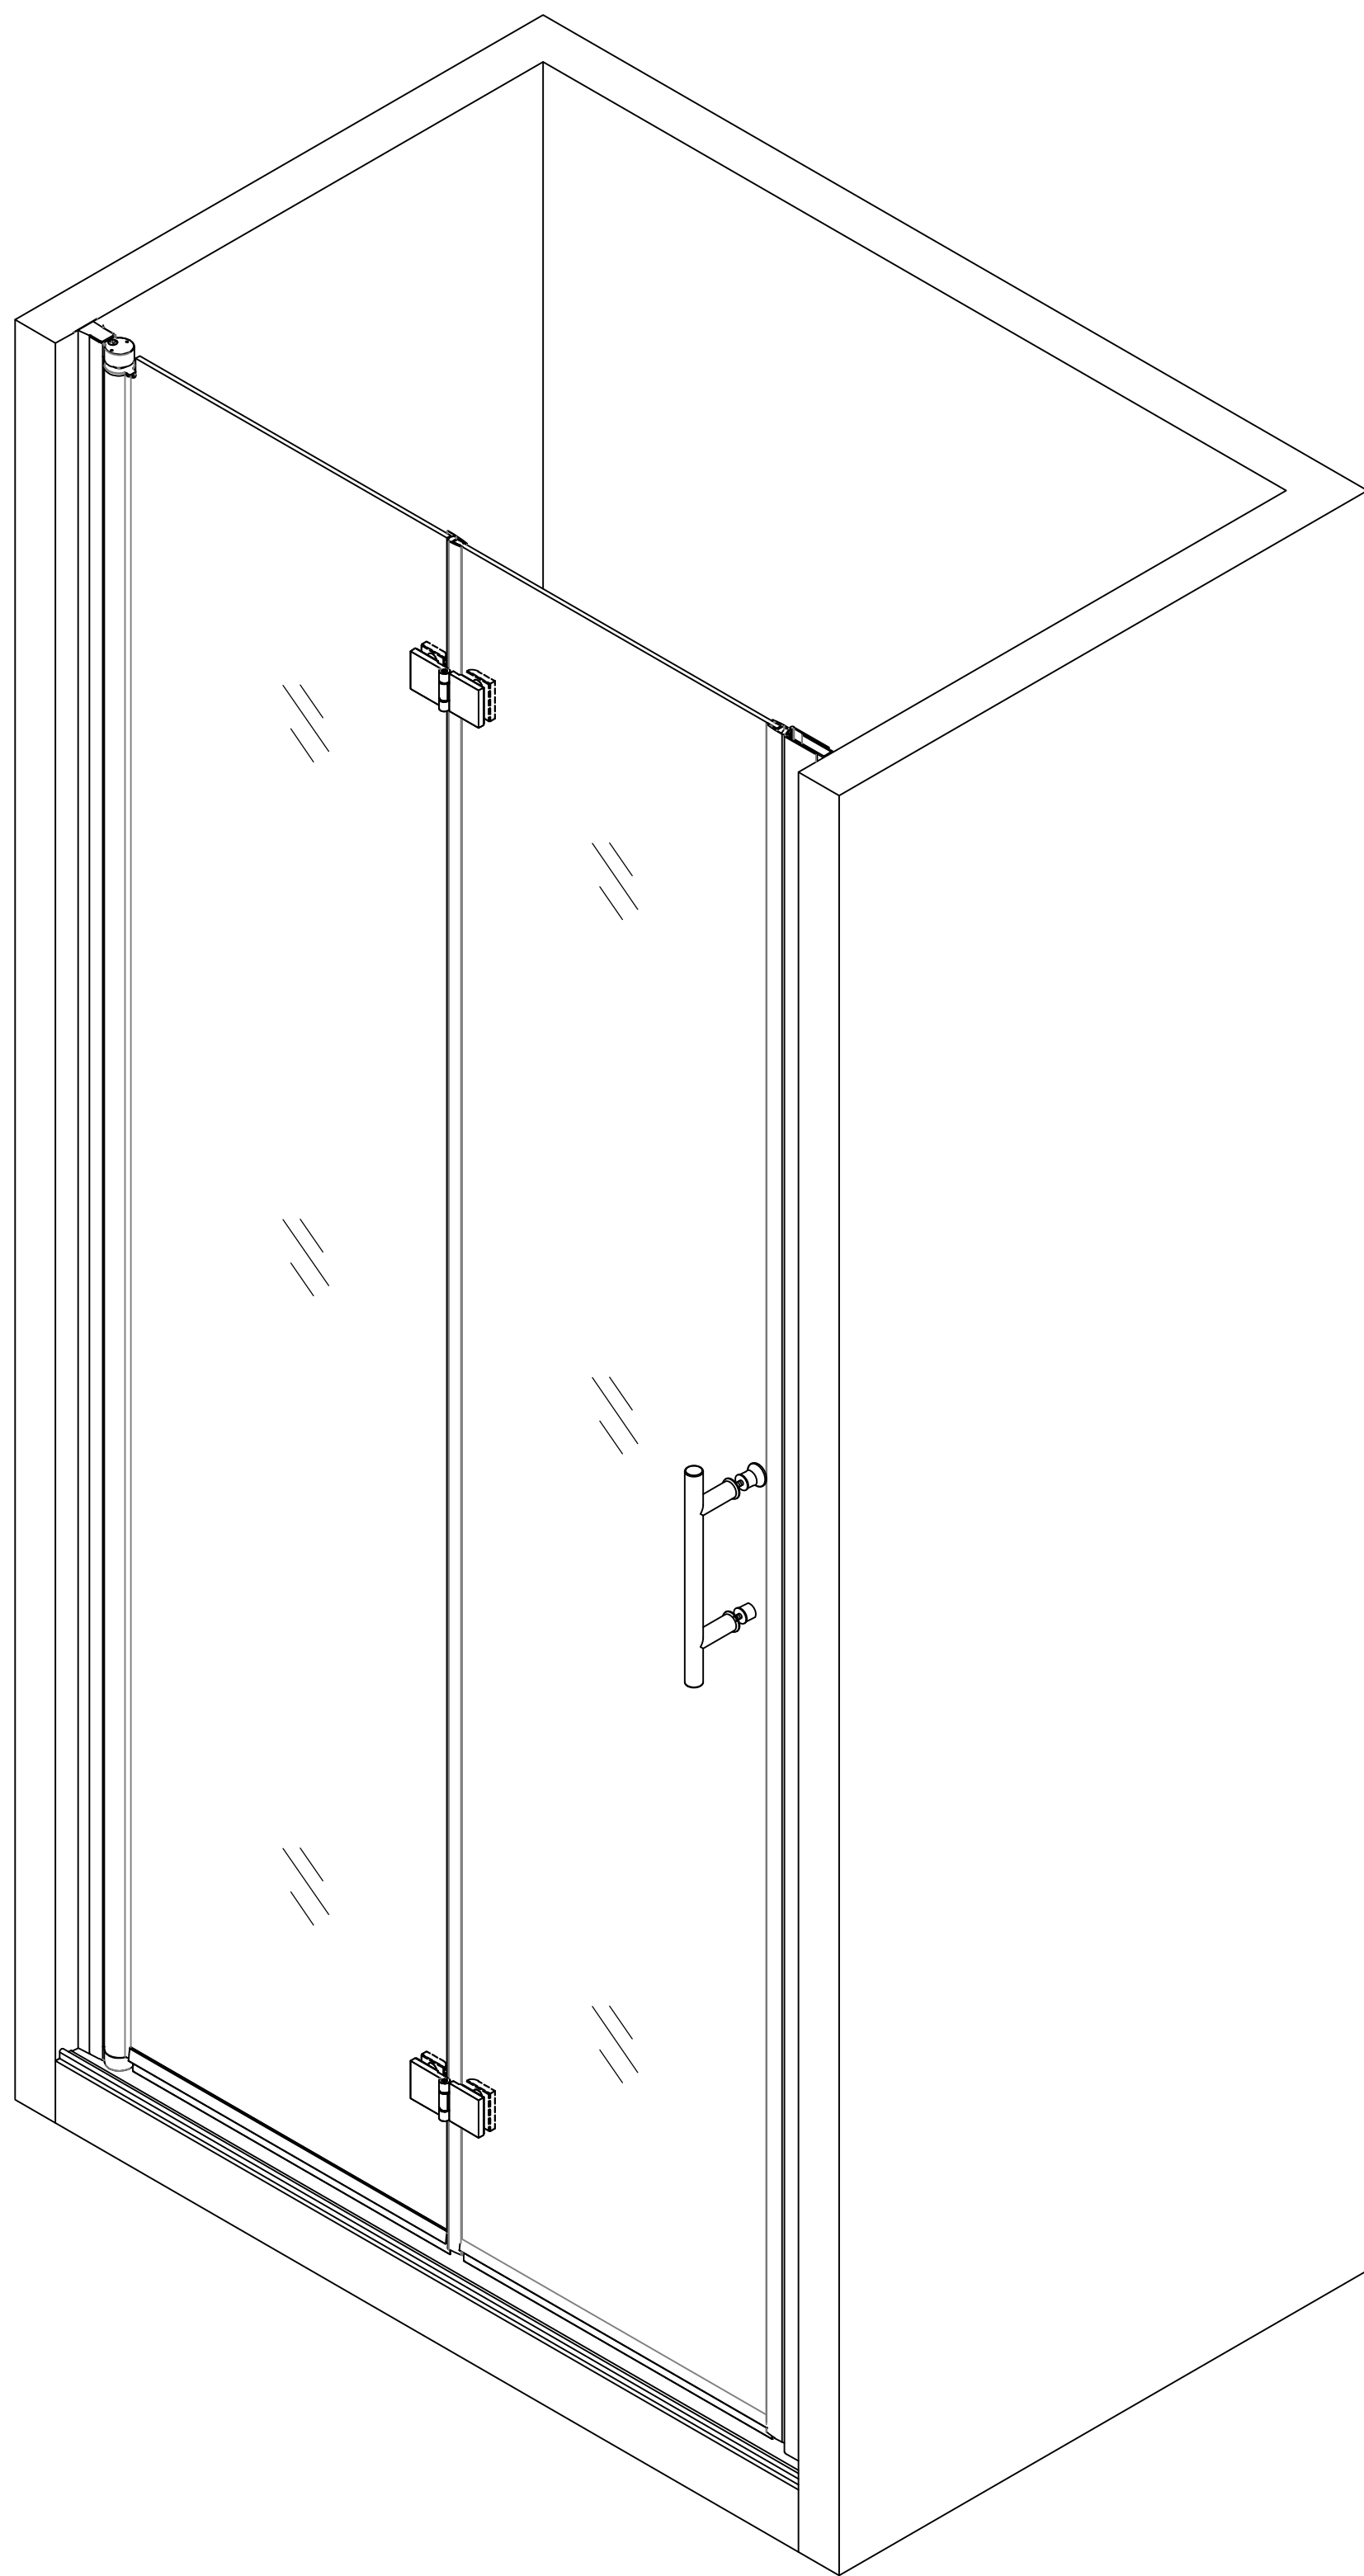

INSTALLATION MANUAL

FOR SHOWER DOOR

SAFETY INFORMATION

CAUTION







Please carefully read the following important safety information before handling or installing this shower door. There is a risk of serious injury while handling this product.

To minimize these risks, please note:


- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions. Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; If there is damage or part missing to the unit prior to installation, Please contact us via the email provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage. This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

NOTE:Two people should perform this installation.

NEED TOOLS

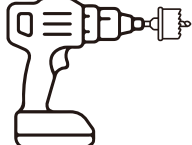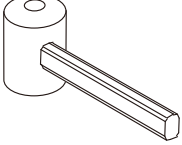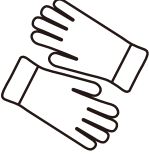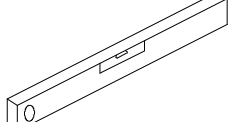 Safety Glasses	 Silicone Adhesive Sealant	 Tape Measure	 Rags	 Drill Bits
 Drill	 Screwdriver	 Pencil	 Hammer	 Knife
 Glove	 Spirit Level	 Allen Key		

Shower Door Installation Instructions

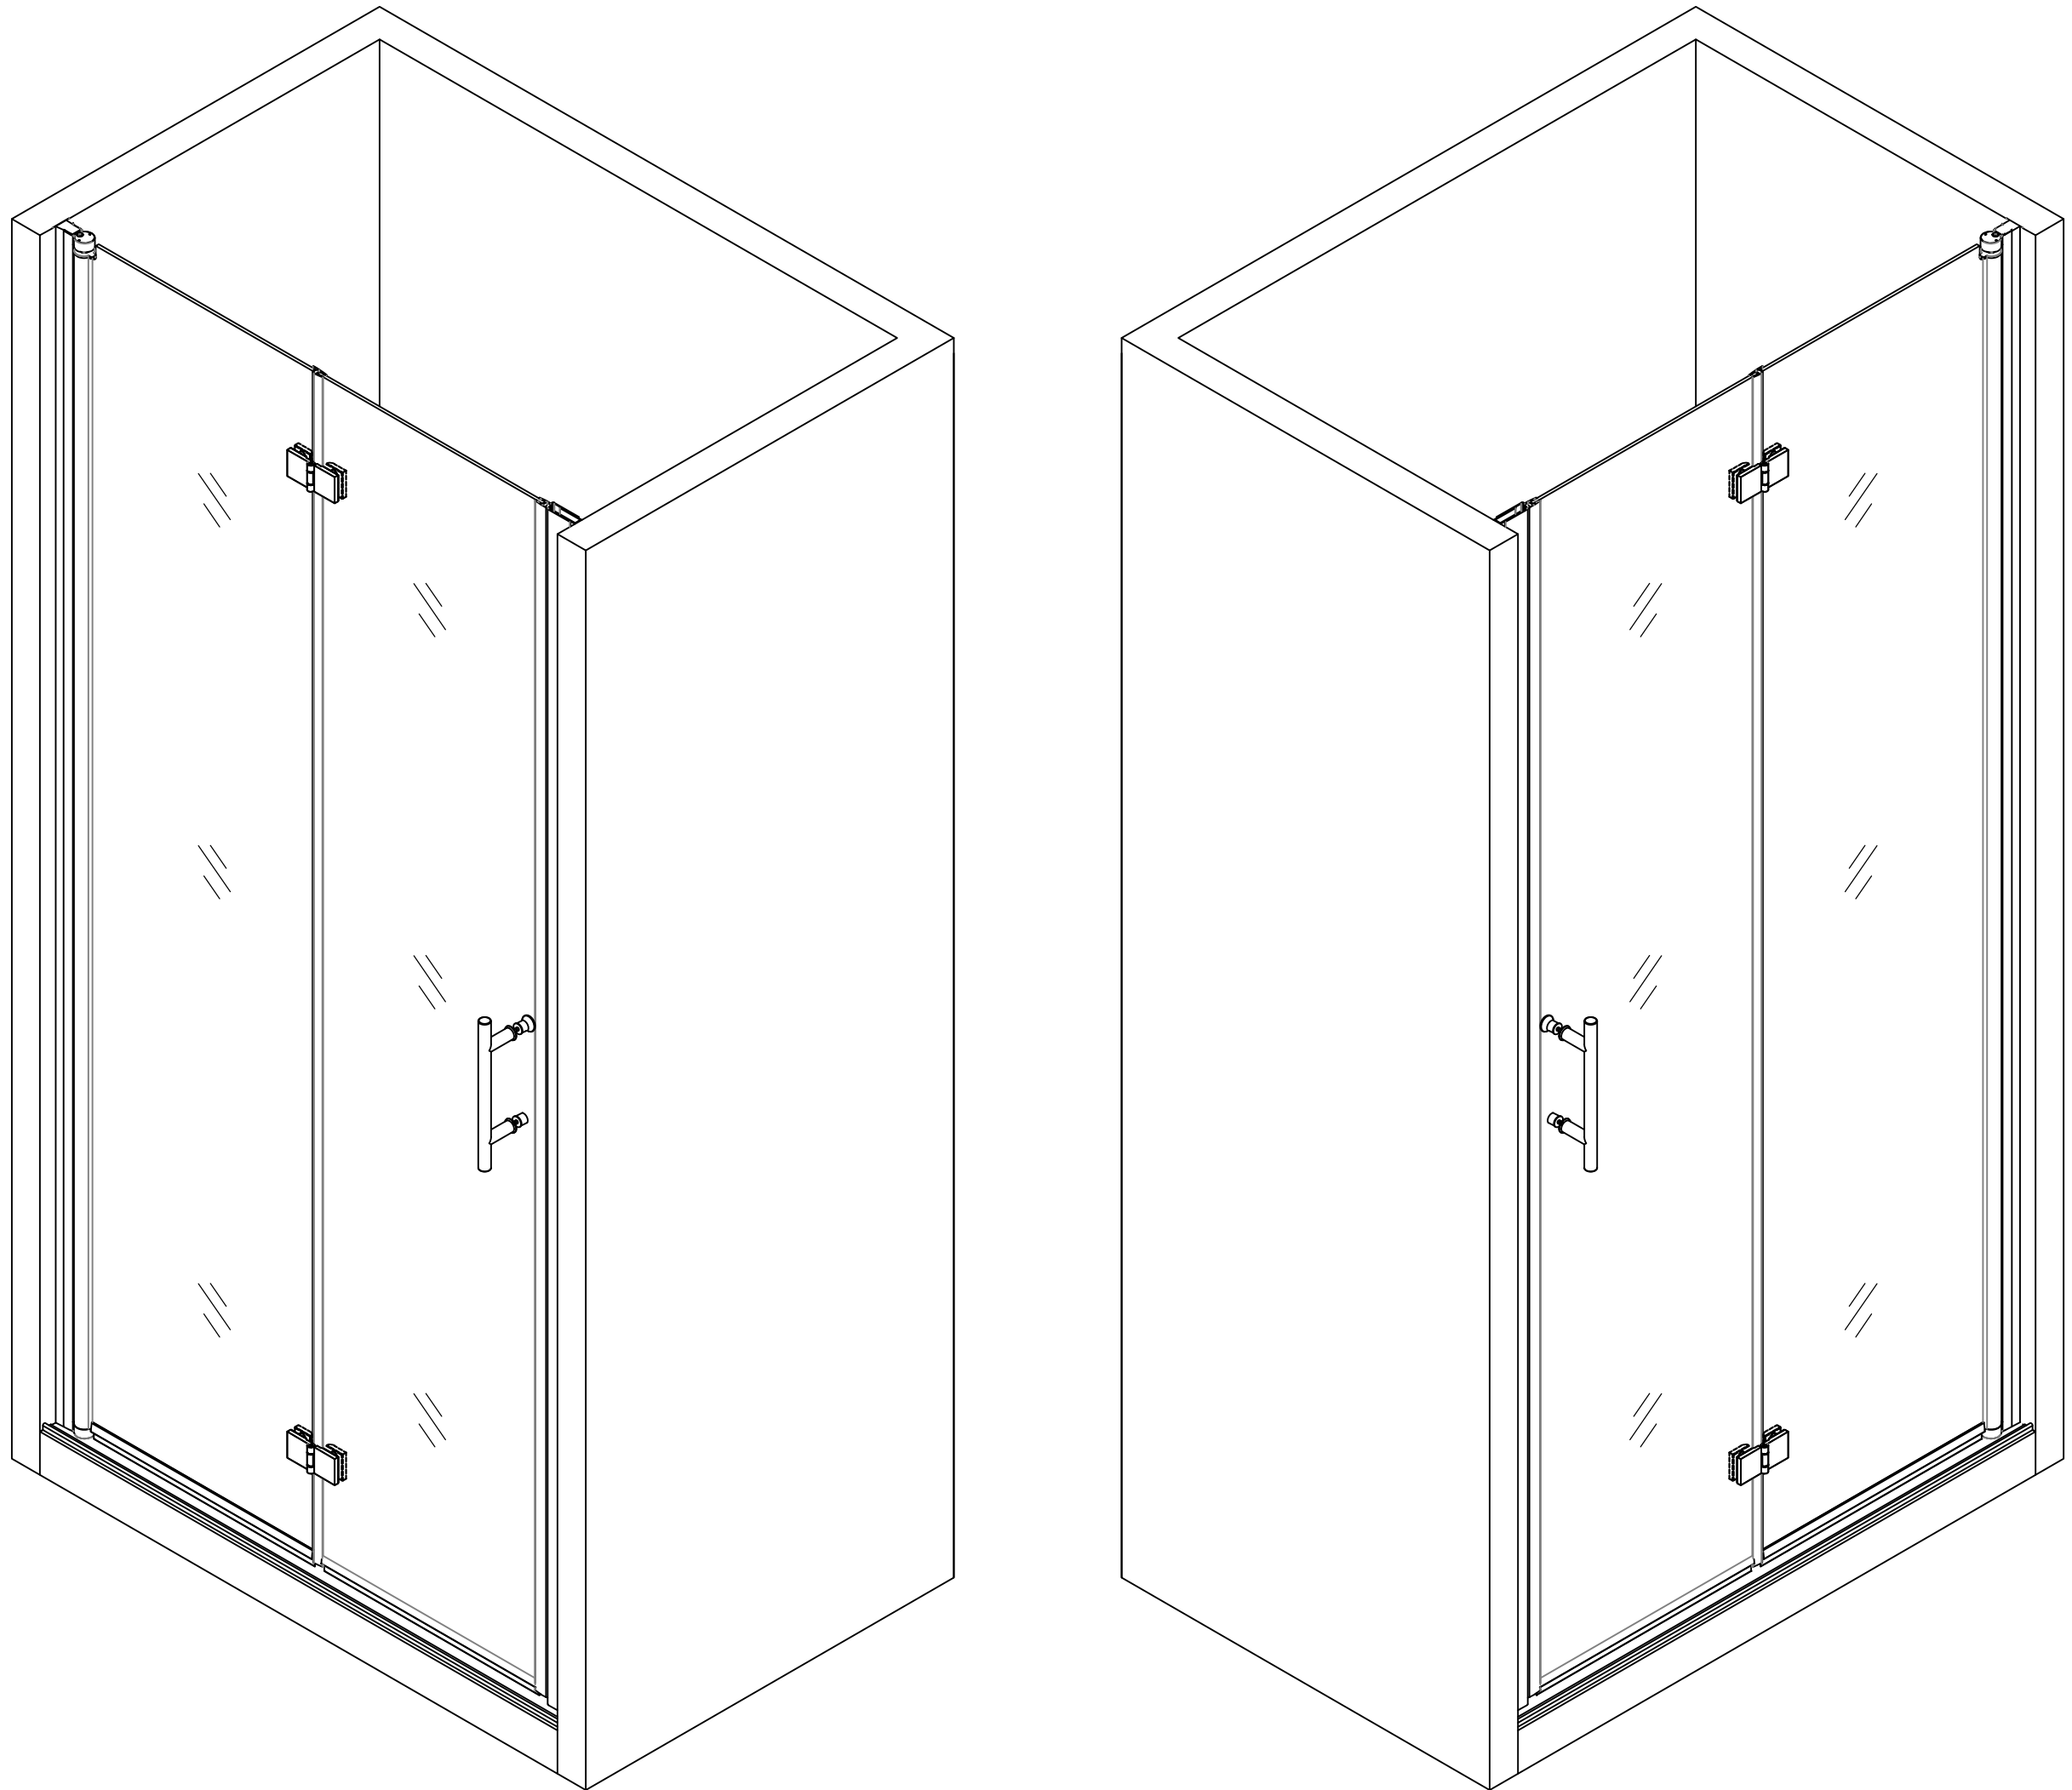


Reversible For a Left or Right Door

**Please Do Not Return the Product to the Store.
Contact us with any questions.**


Model Specific Preparation






REQUIRED:

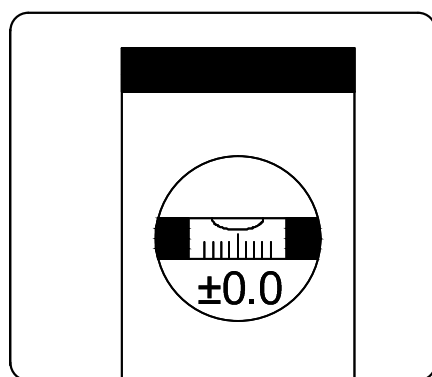


3/8" (10mm)
Out-of-Plumb
Adjustment within
the Wall Profile;
Verify threshold and
walls with a level.

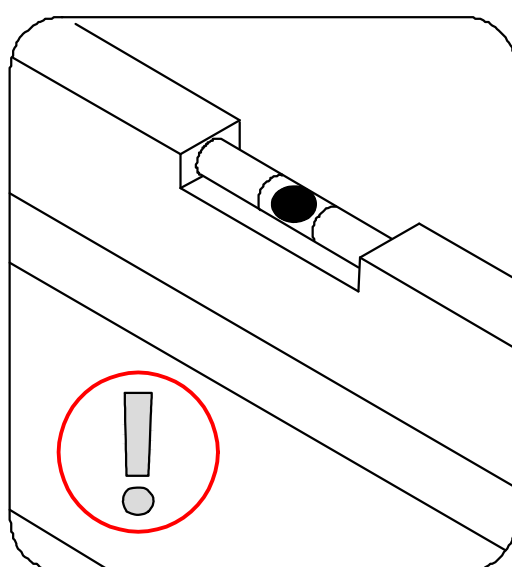

Threshold must be level

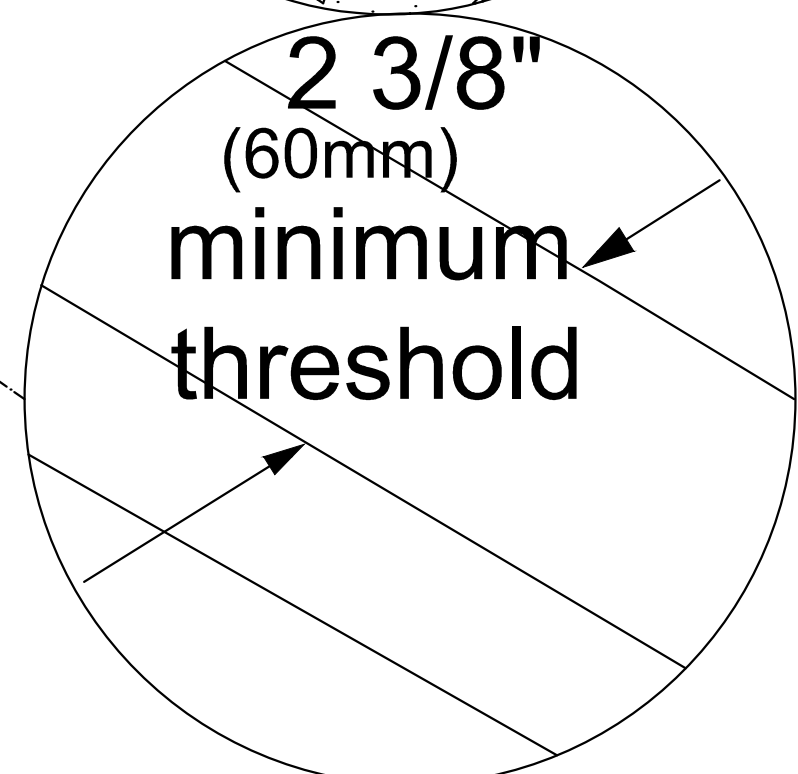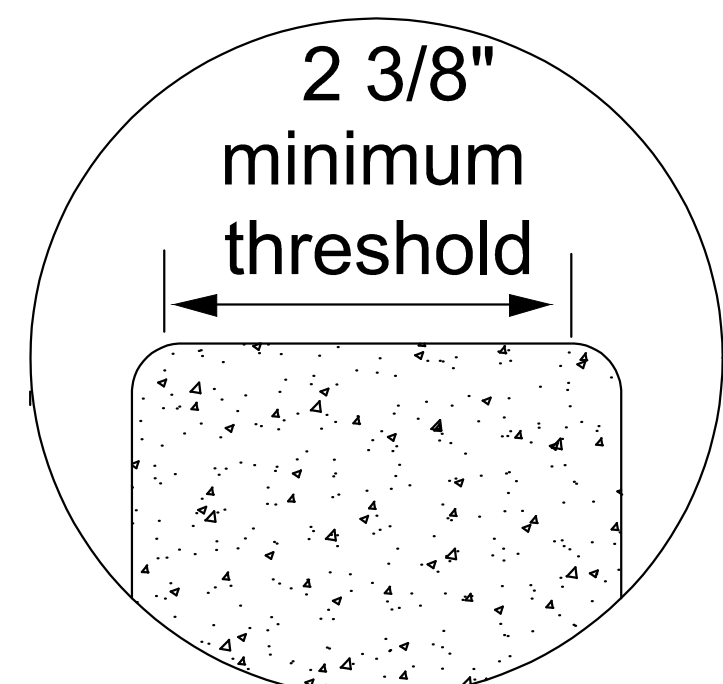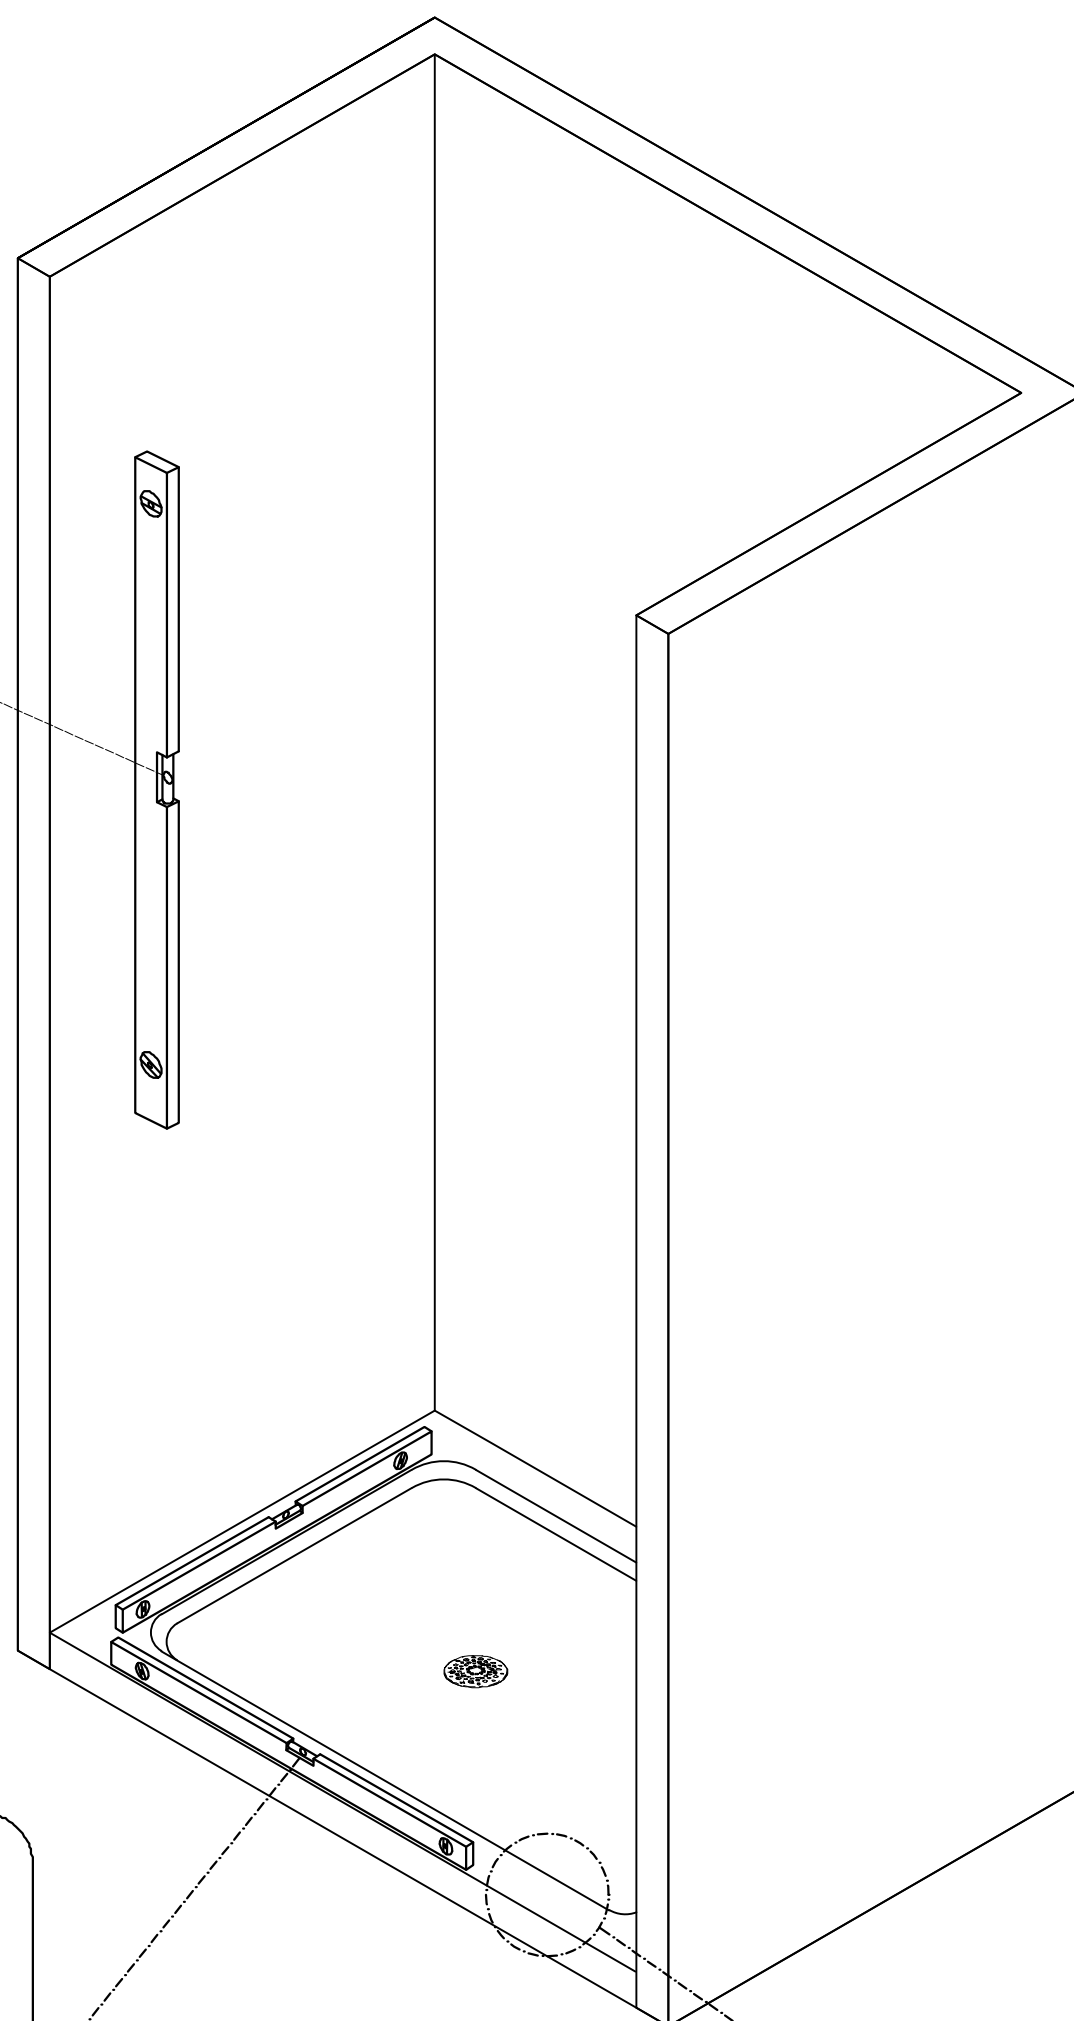

PACKAGE CONTENT

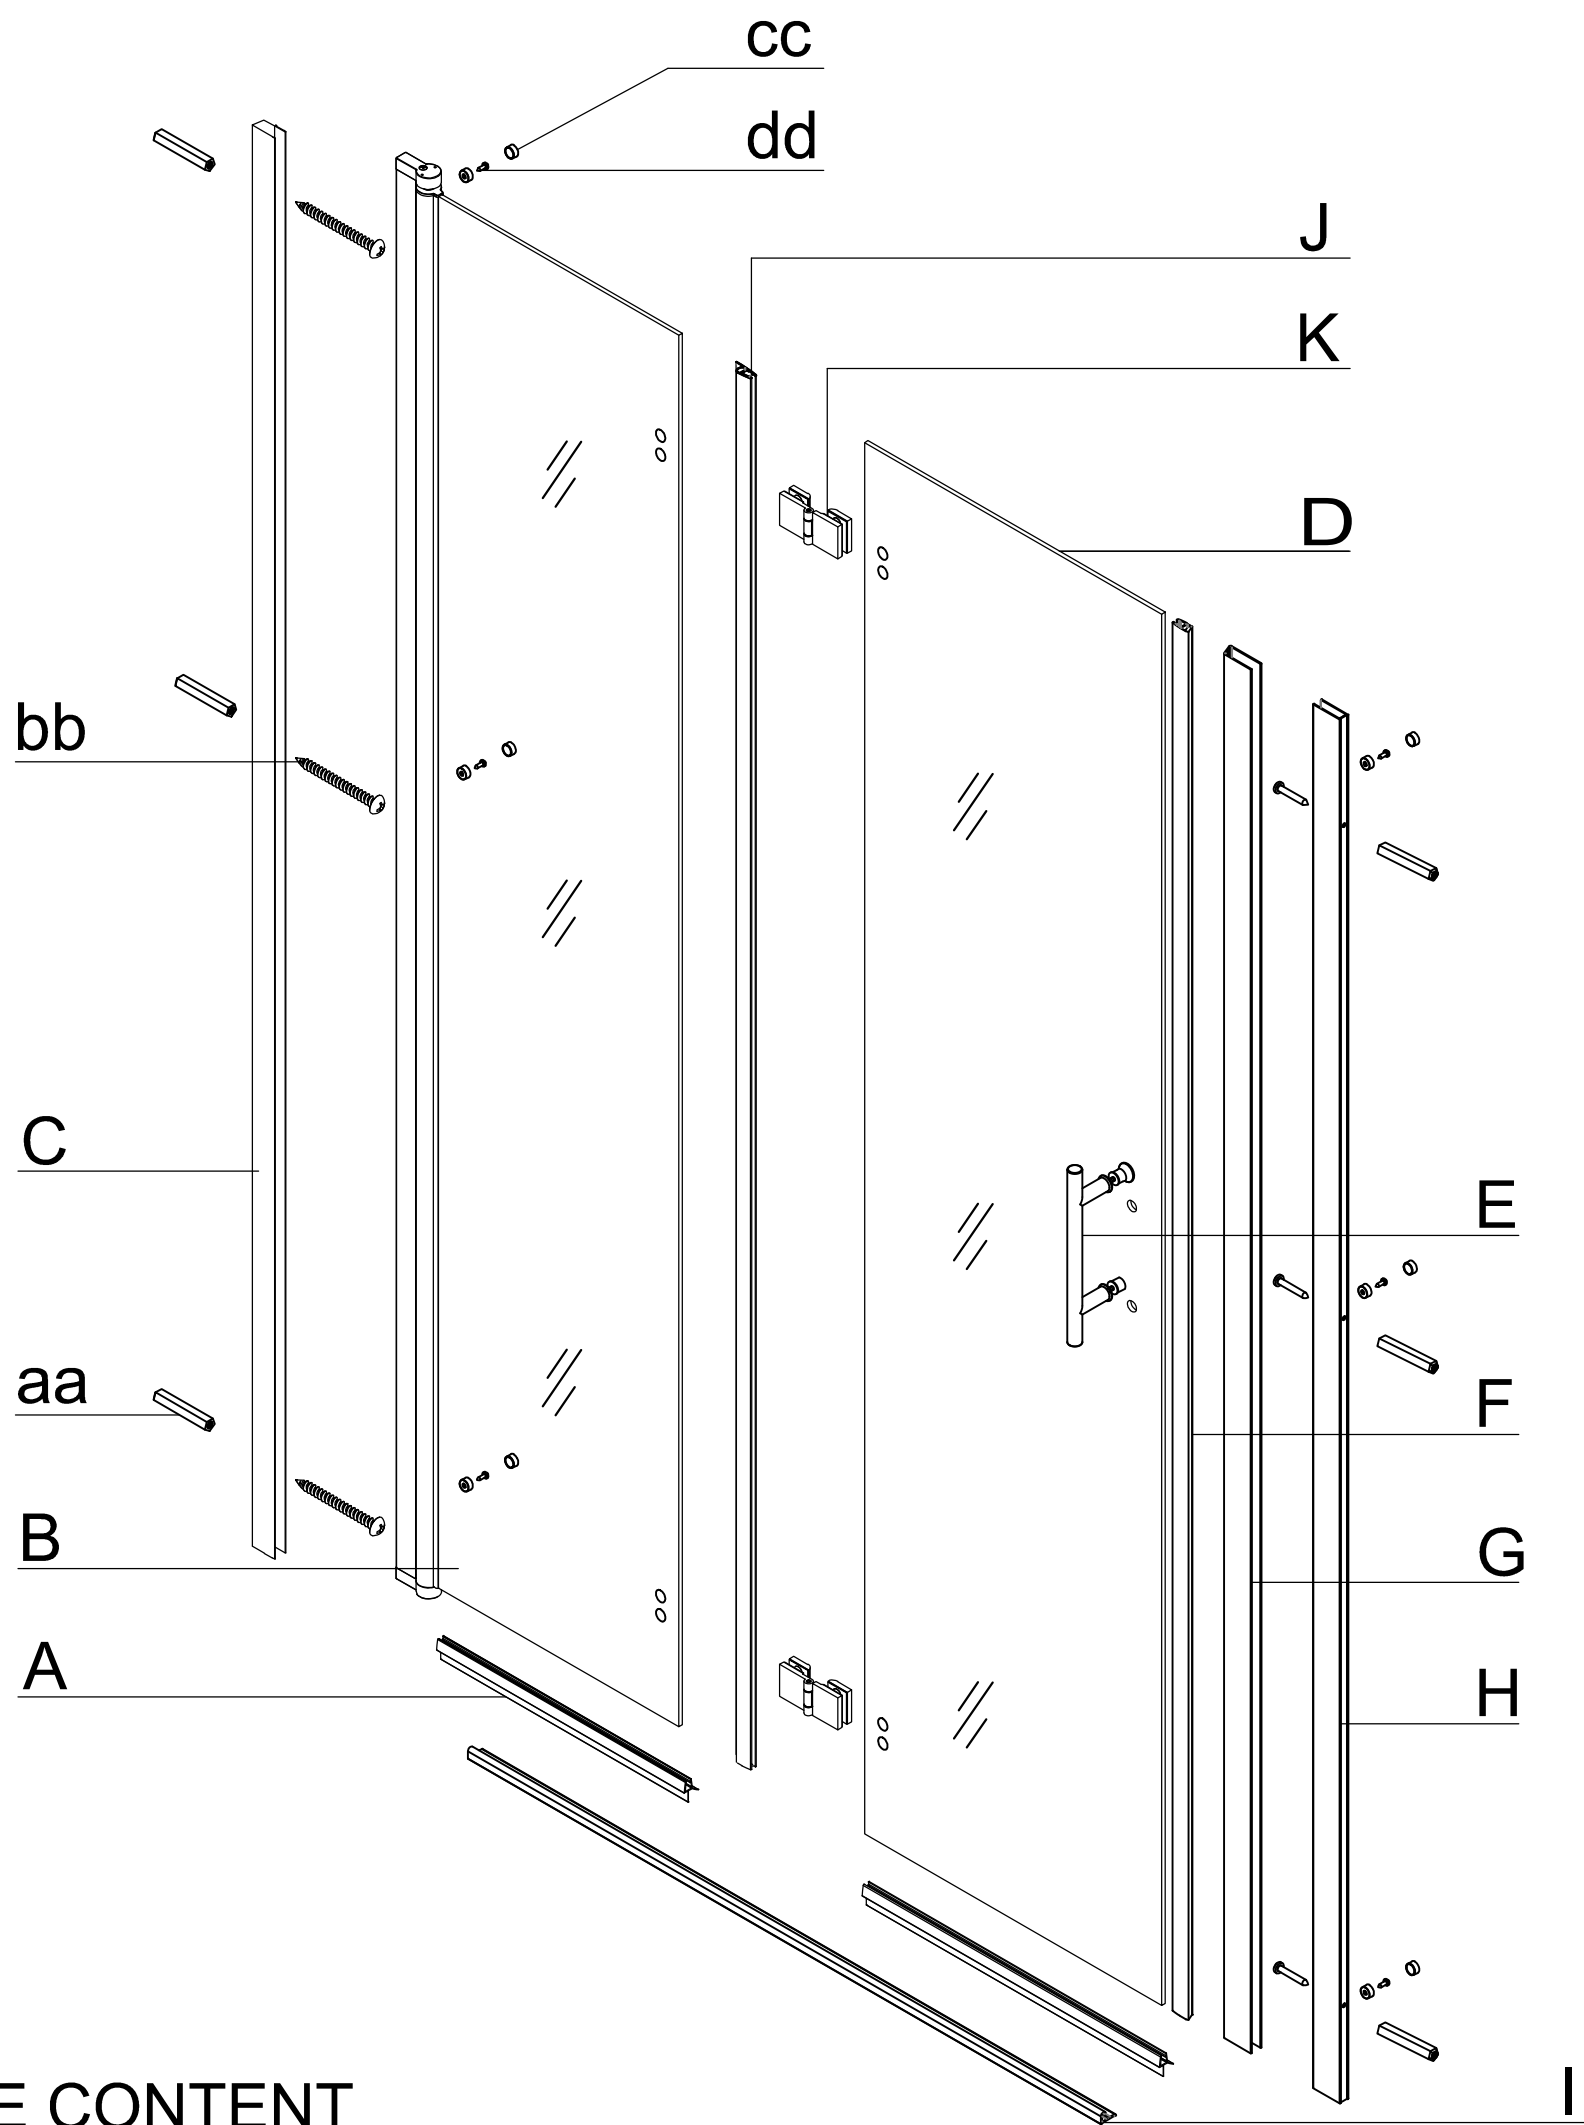












PACKAGE CONTENT

PART#	DESCRIPTION	QTY	PART#	DESCRIPTION	QTY
A	Bottom Gasket	2	G	Magnetic Seal Aluminum channel	1
B	Door panel-1	1	H	U channel	1
C	Wall Jamb	1	I	Alu. Threshold	1
D	Door panel-2	1	J	Vertical Gasket	1
E	Handle	1	K	Hinge	2
F	Magnetic strip	1			





NOTE

Inspect all parts for missing prior to installation!
Contact us for any parts missing.


PACKAGE CONTENT

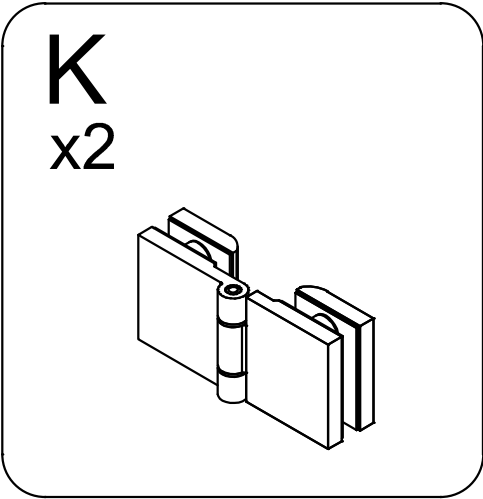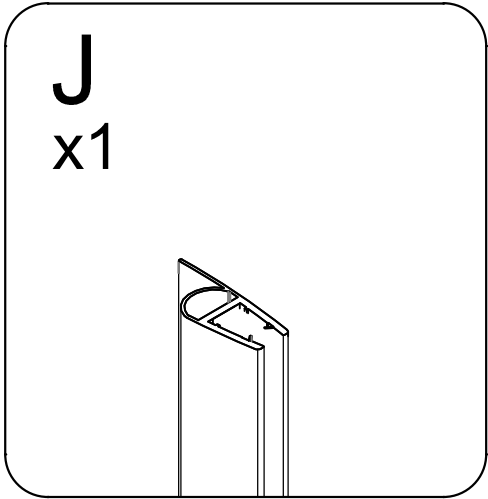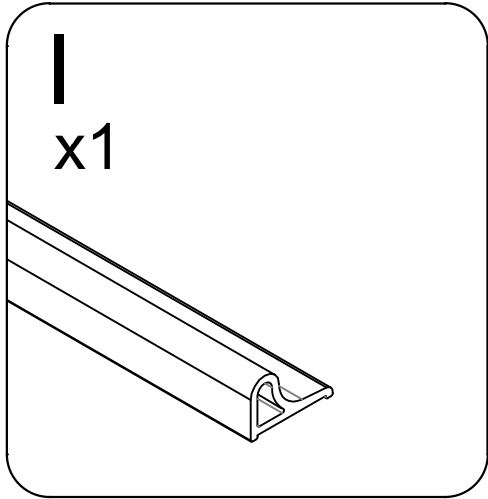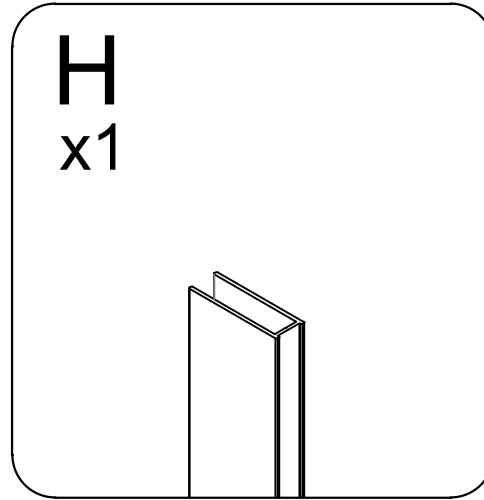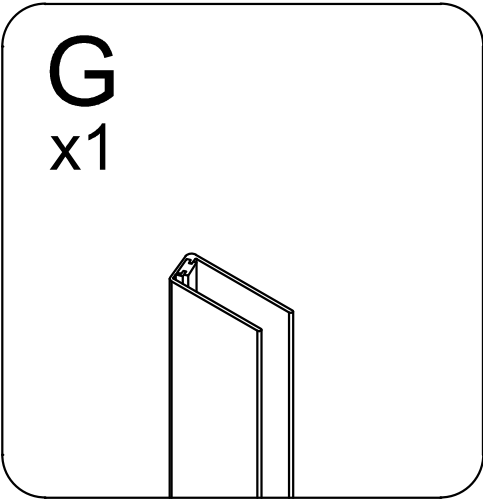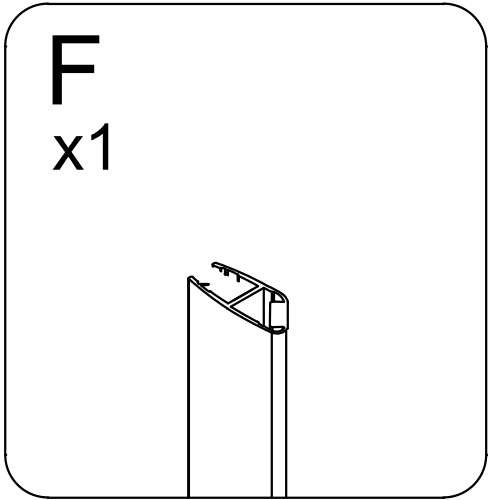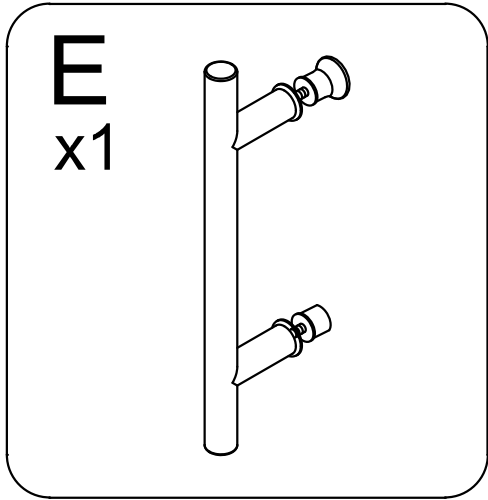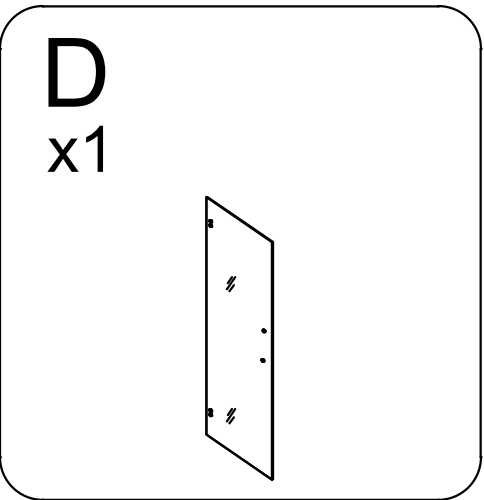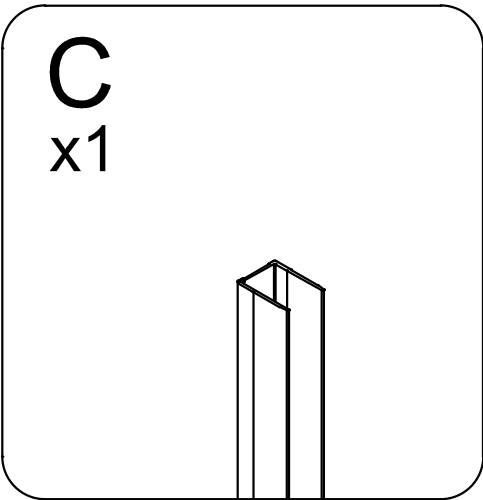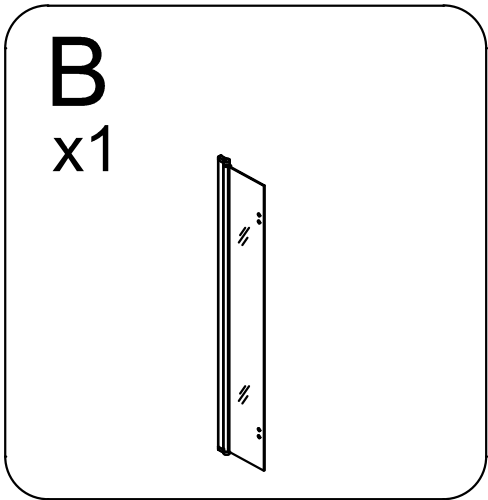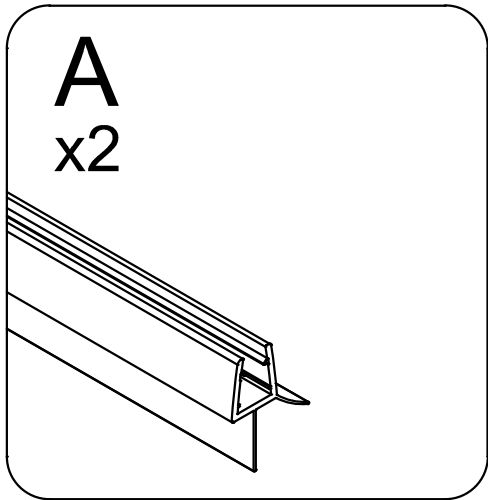

HARDWARE CONTENT












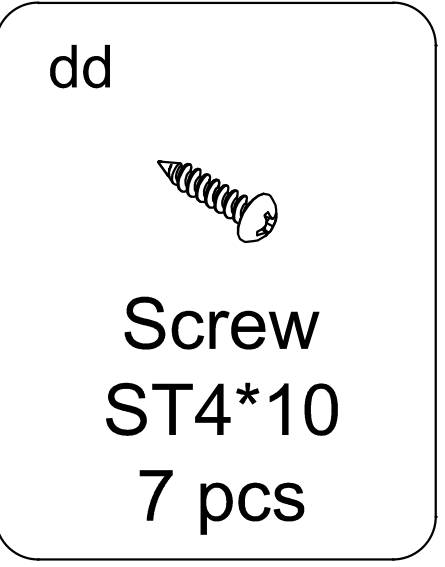
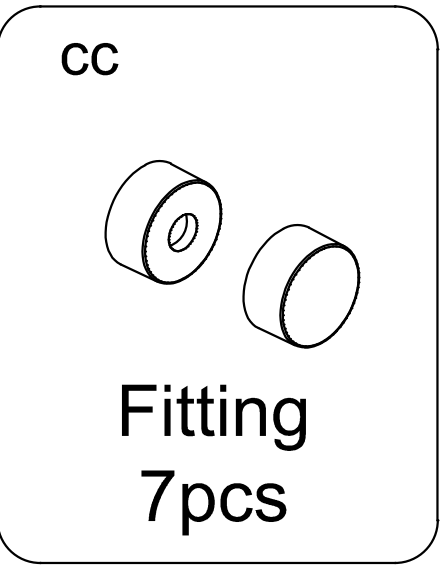
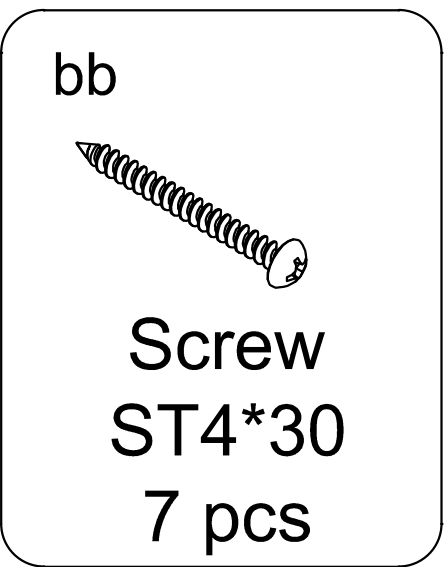
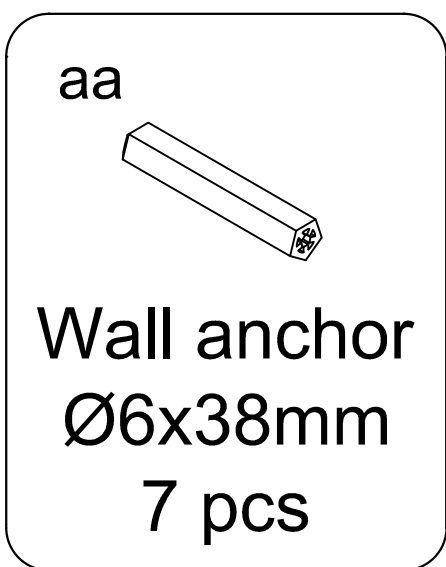


Additional spare parts are included.

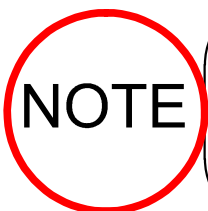

Inspect all parts for missing prior to installation!
Contact us for any parts missing.

TOOLS REQUIRED

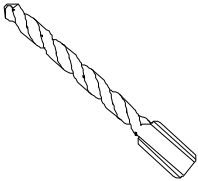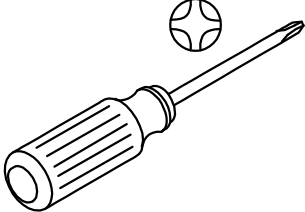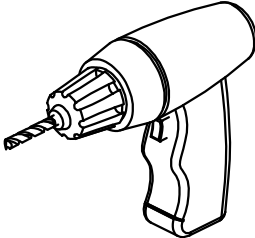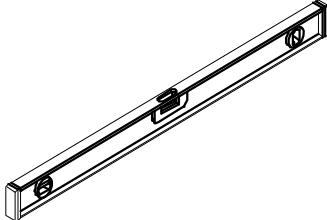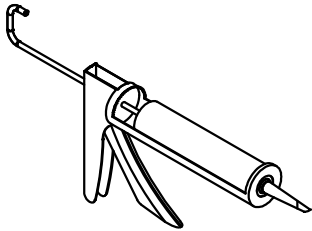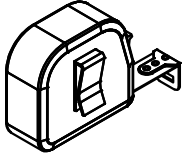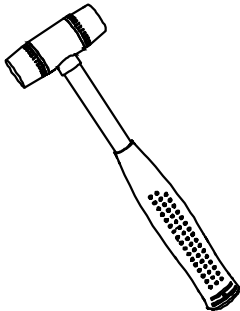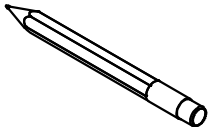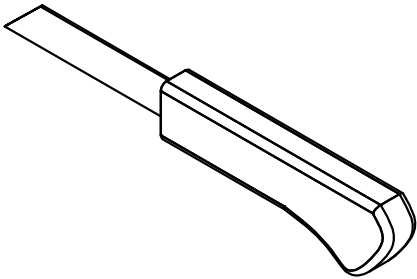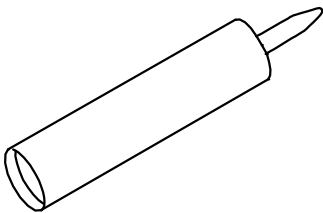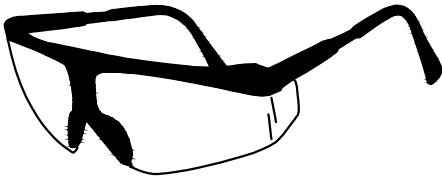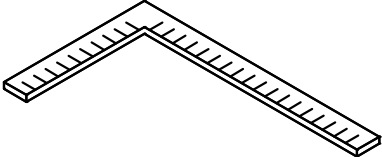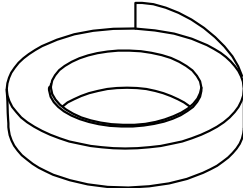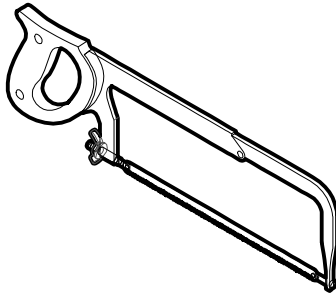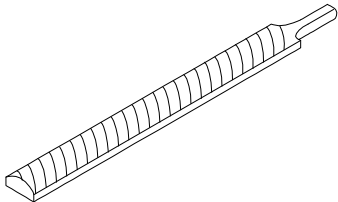Drill Bits  3.2/6mm dia. HSS	Screw Driver 	Drill 	Level 
Silicone 	Measuring Tape 	Soft Head Hammer 	Pencil 
Knife 	Sealant 	Masonry Drill Bit for Tile Ø6mm 	Safety Glasses 
Glove 	Carpenter's Squarer 	Masking or painter's tape 	Hack Saw 
Metal File 			

SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.



NOTE: Two people should perform this installaton.

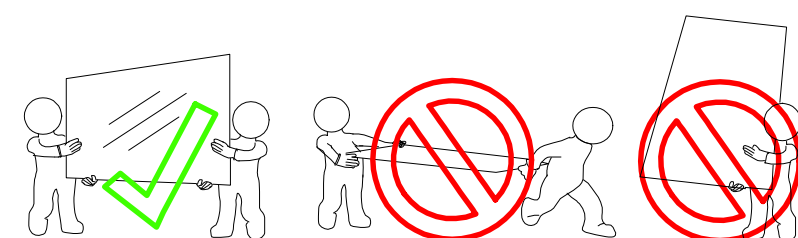

Model Dimensions


configuration dimensions:

A Product Height	B Model width	C Installation width	D (Opening)
72"	30"	30" ~31 3/8"	22 17/32"
	32"	32" ~33 3/8"	24 17/32"
	34"	34" ~35 3/8"	26 17/32"
	36"	36" ~37 3/8"	28 17/32"

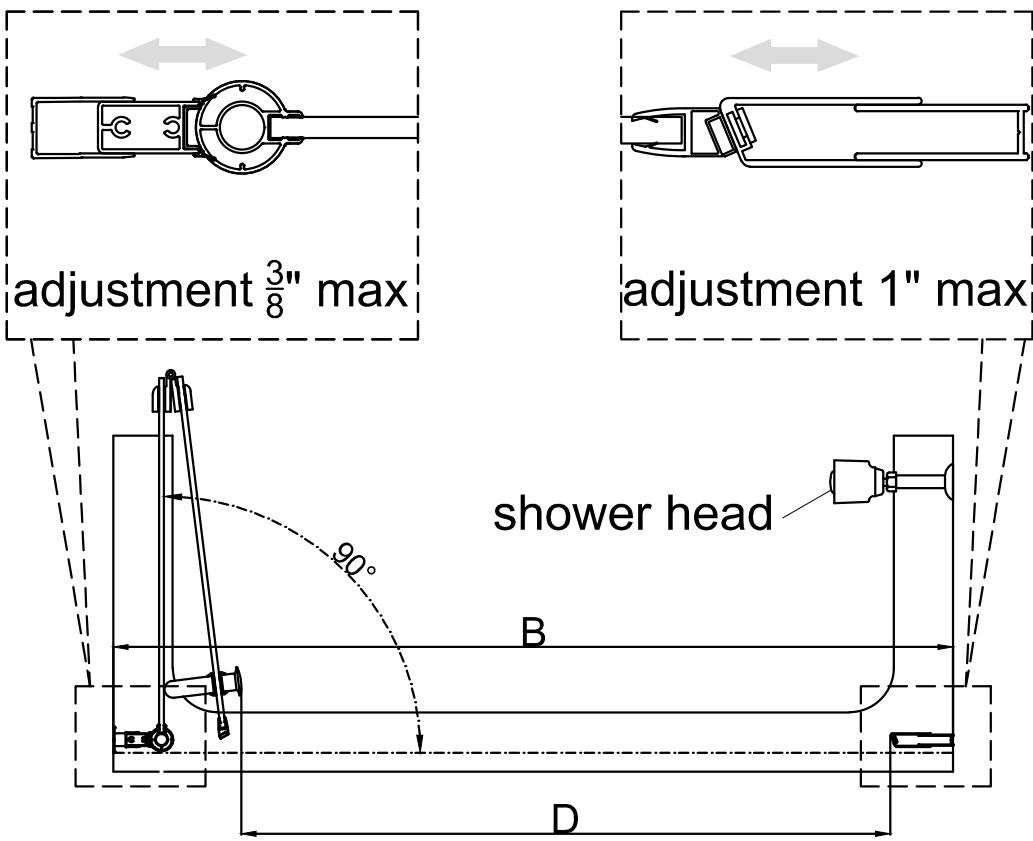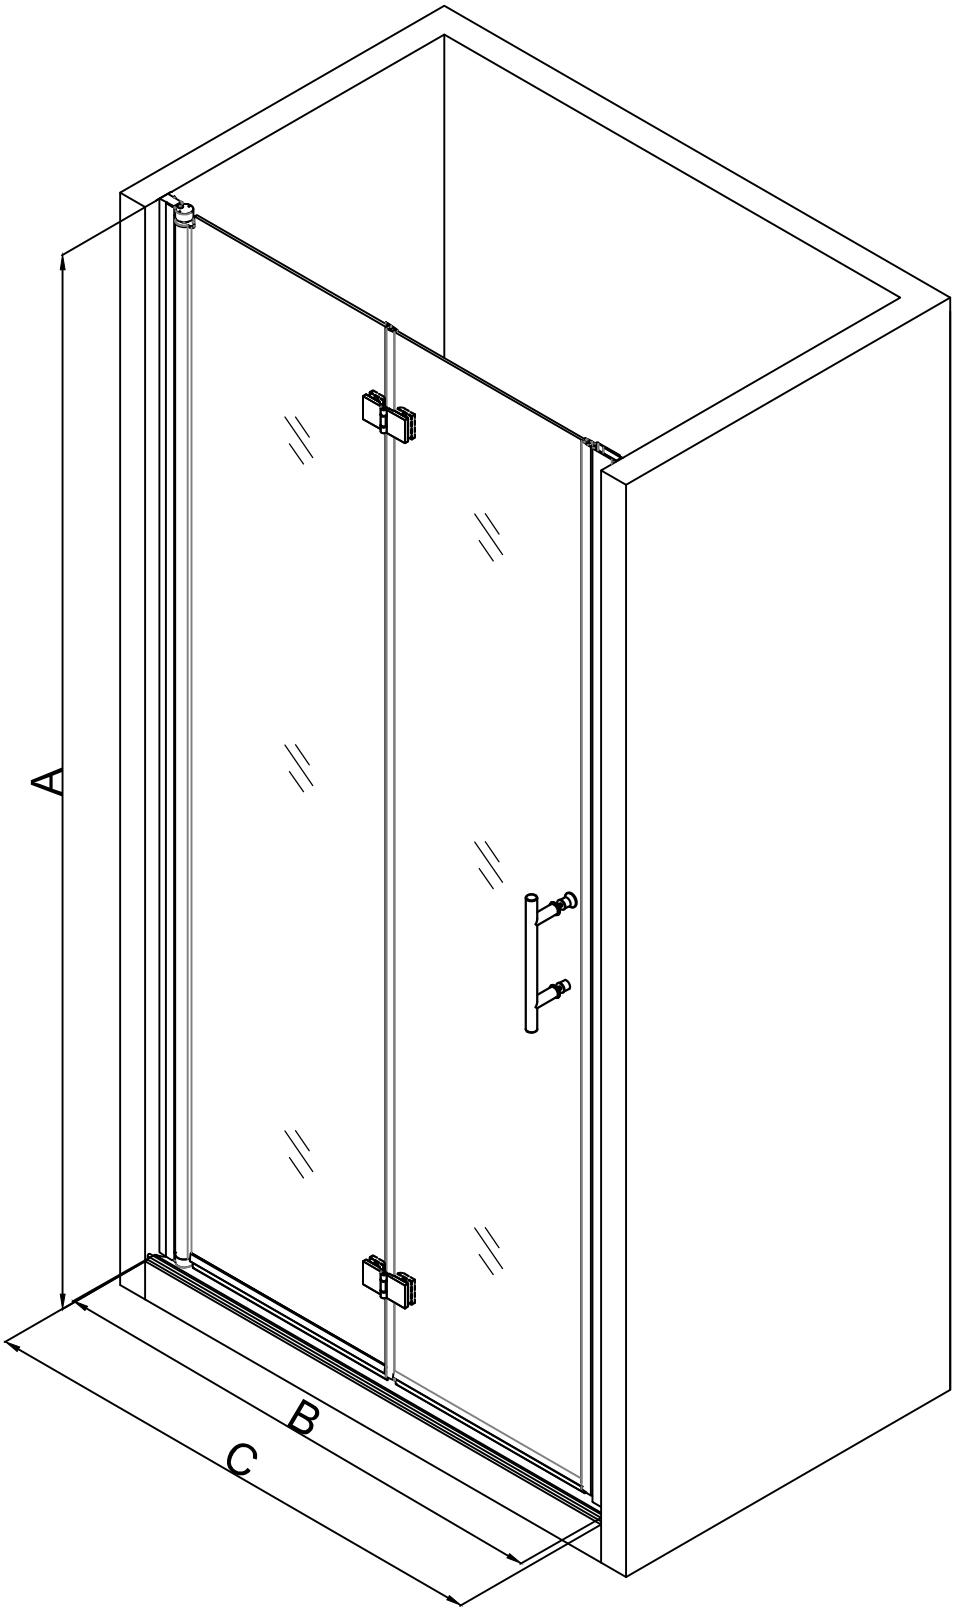

Left pivot

NOTE

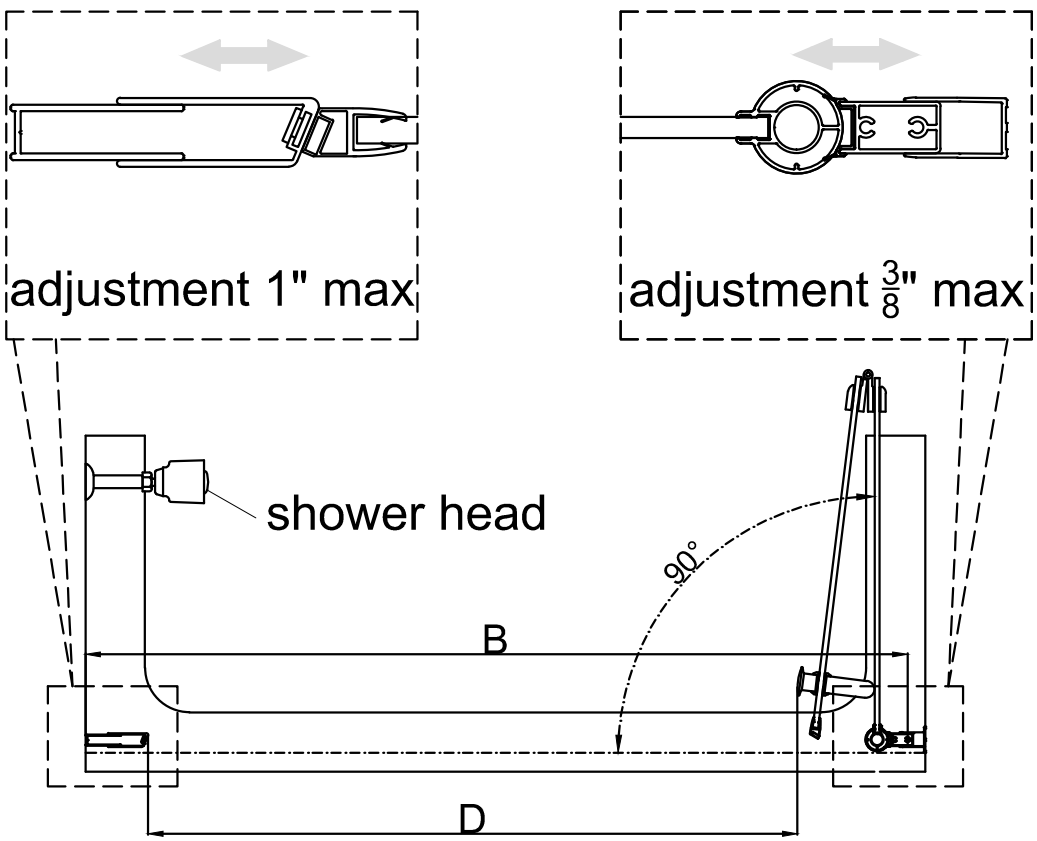

Right pivot




This model is reversible for right or left-hand door installation. The left-hand door installation is shown throughout this manual. For the right-hand door installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.

1-1

Wall Jamb Installation

NOTE

Confirm the Wall jamb is plumb with a level before marking the location of the holes for drilling.

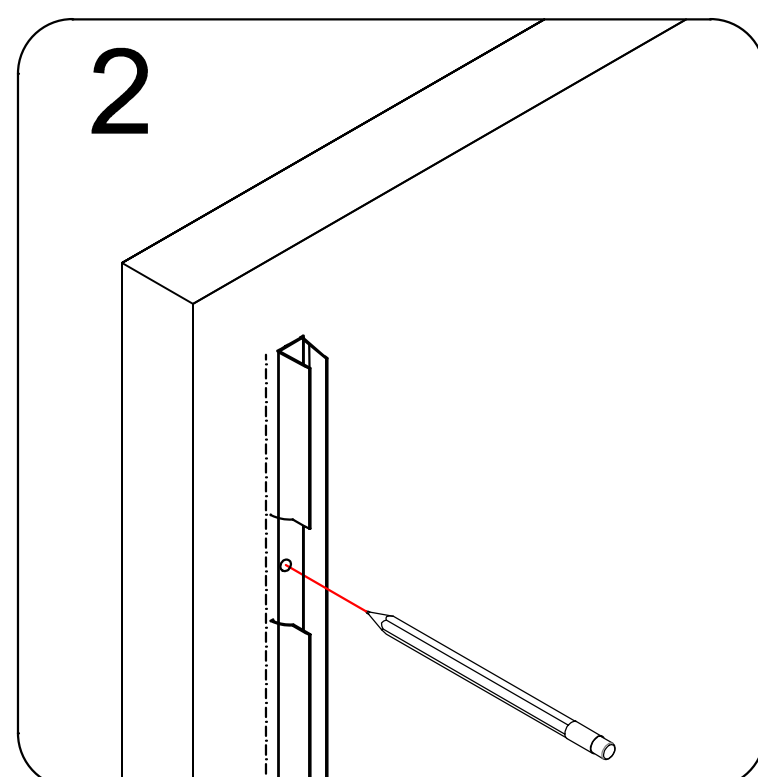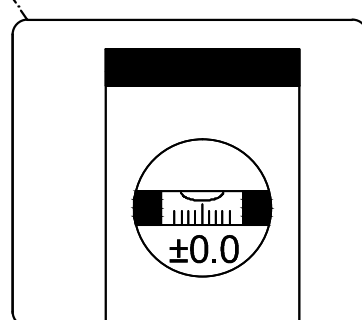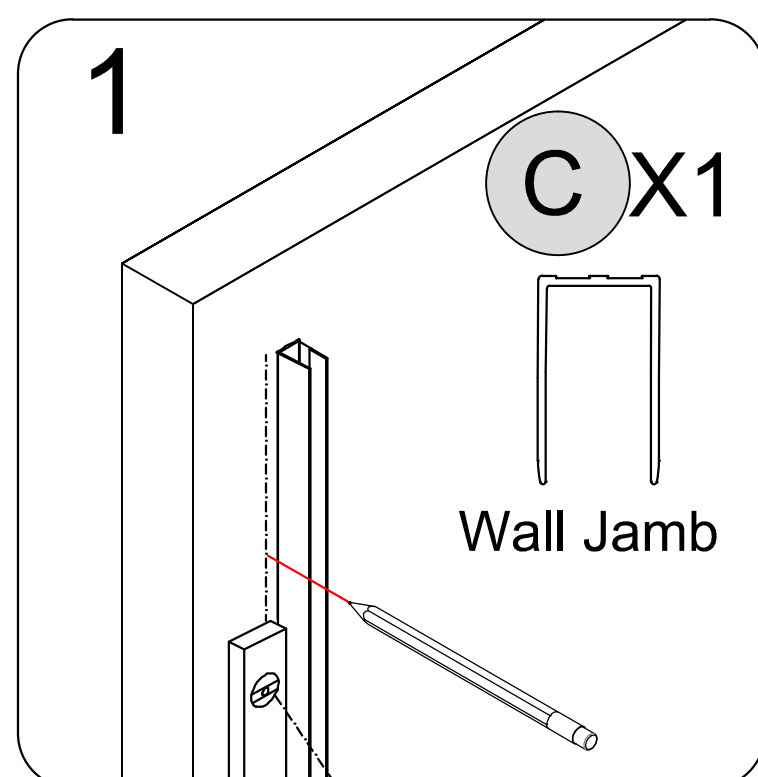






20mm [25/32"]

NOTE

Center the Wall jamb (C) on the Threshold.

1-2

Wall Jamb Installation

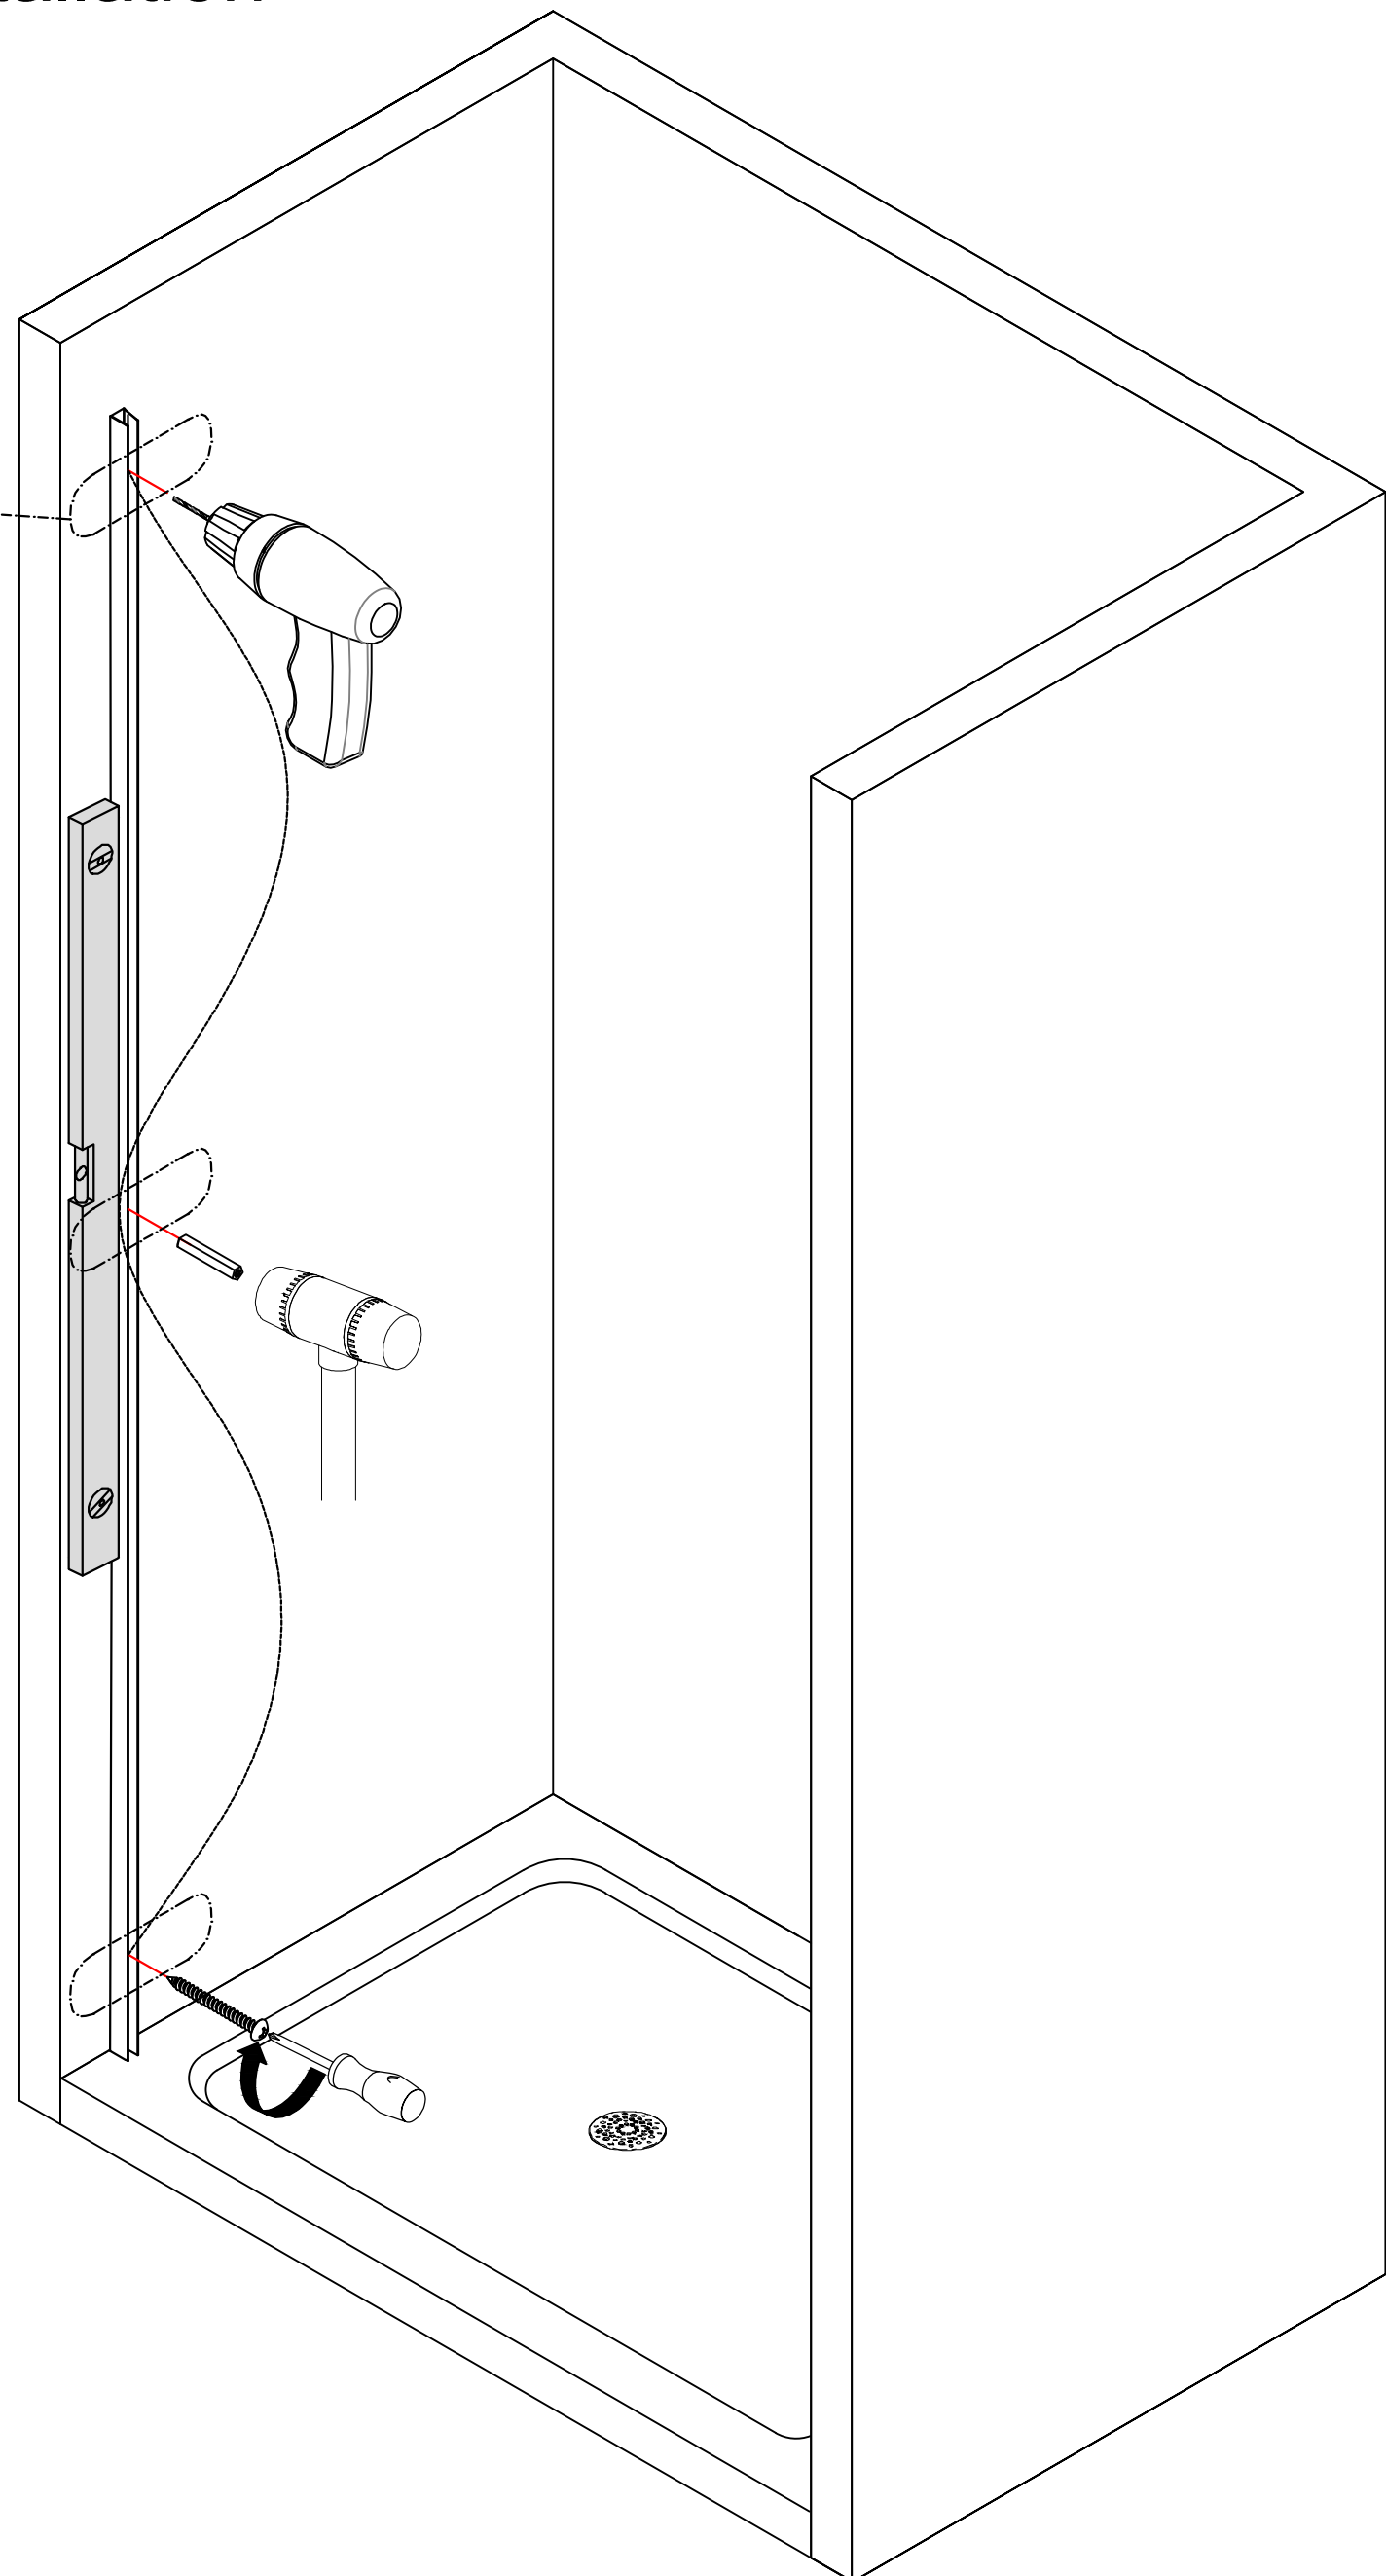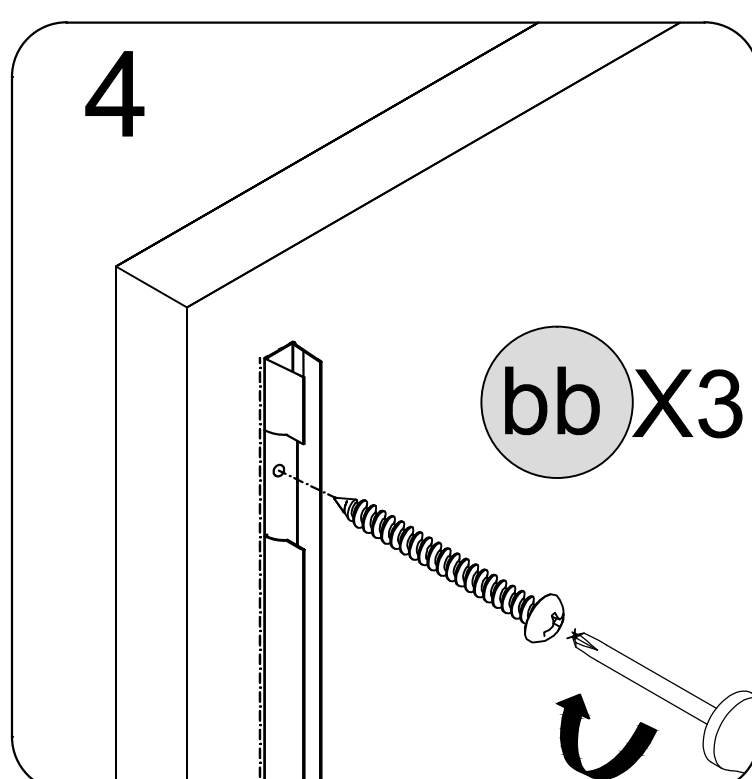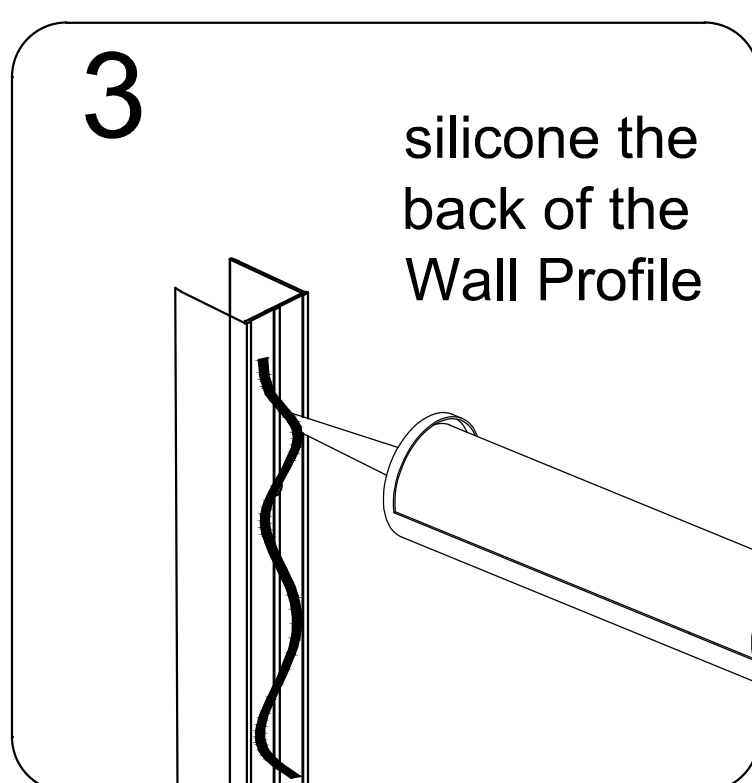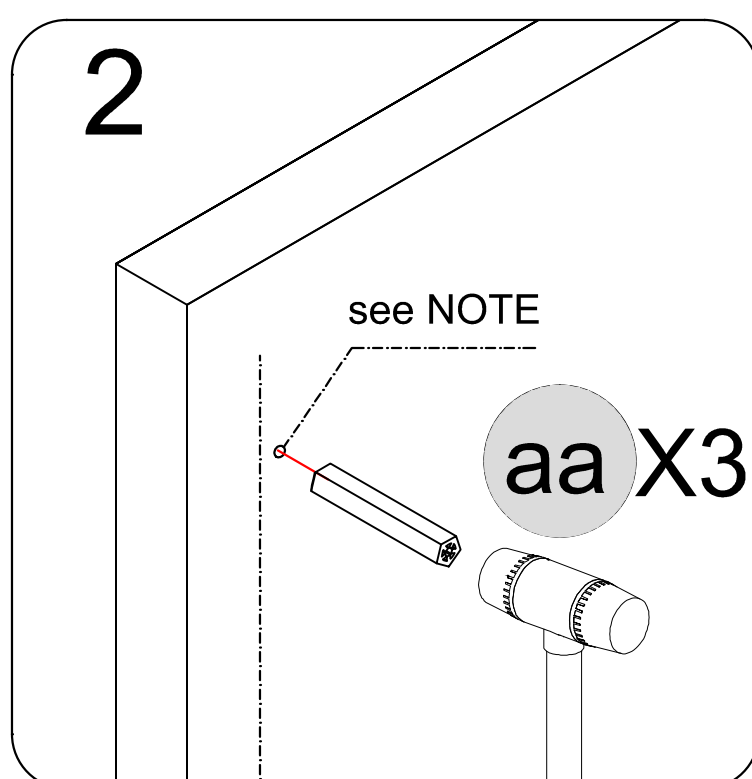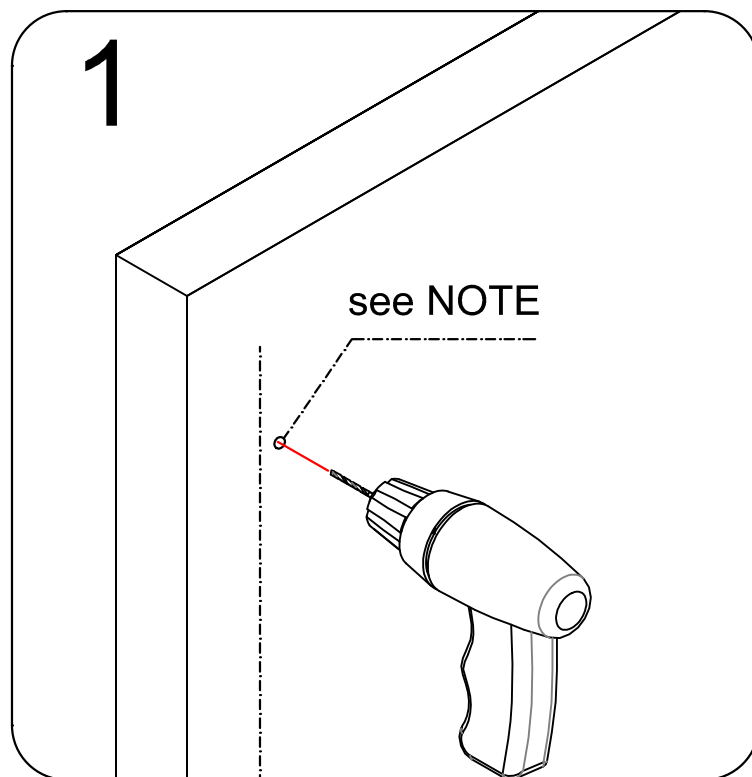


NOTE

- If a Stud is present behind the wall:
drill a $\text{Ø}3/16"$ (4mm) hole up to the stud,
drill an $\text{Ø}1/8"$ (3mm) pilot hole into the stud and
use the ST4.0 x 30mm Pan Head Screws (bb)
OR
- If No Stud is present behind the wall:
drill a $\text{Ø}1/4"$ (6mm) hole and insert the Wall Anchors (aa)
and use the ST4.0 x 30mm Pan Head Screws (bb).




2

Door panel Installation

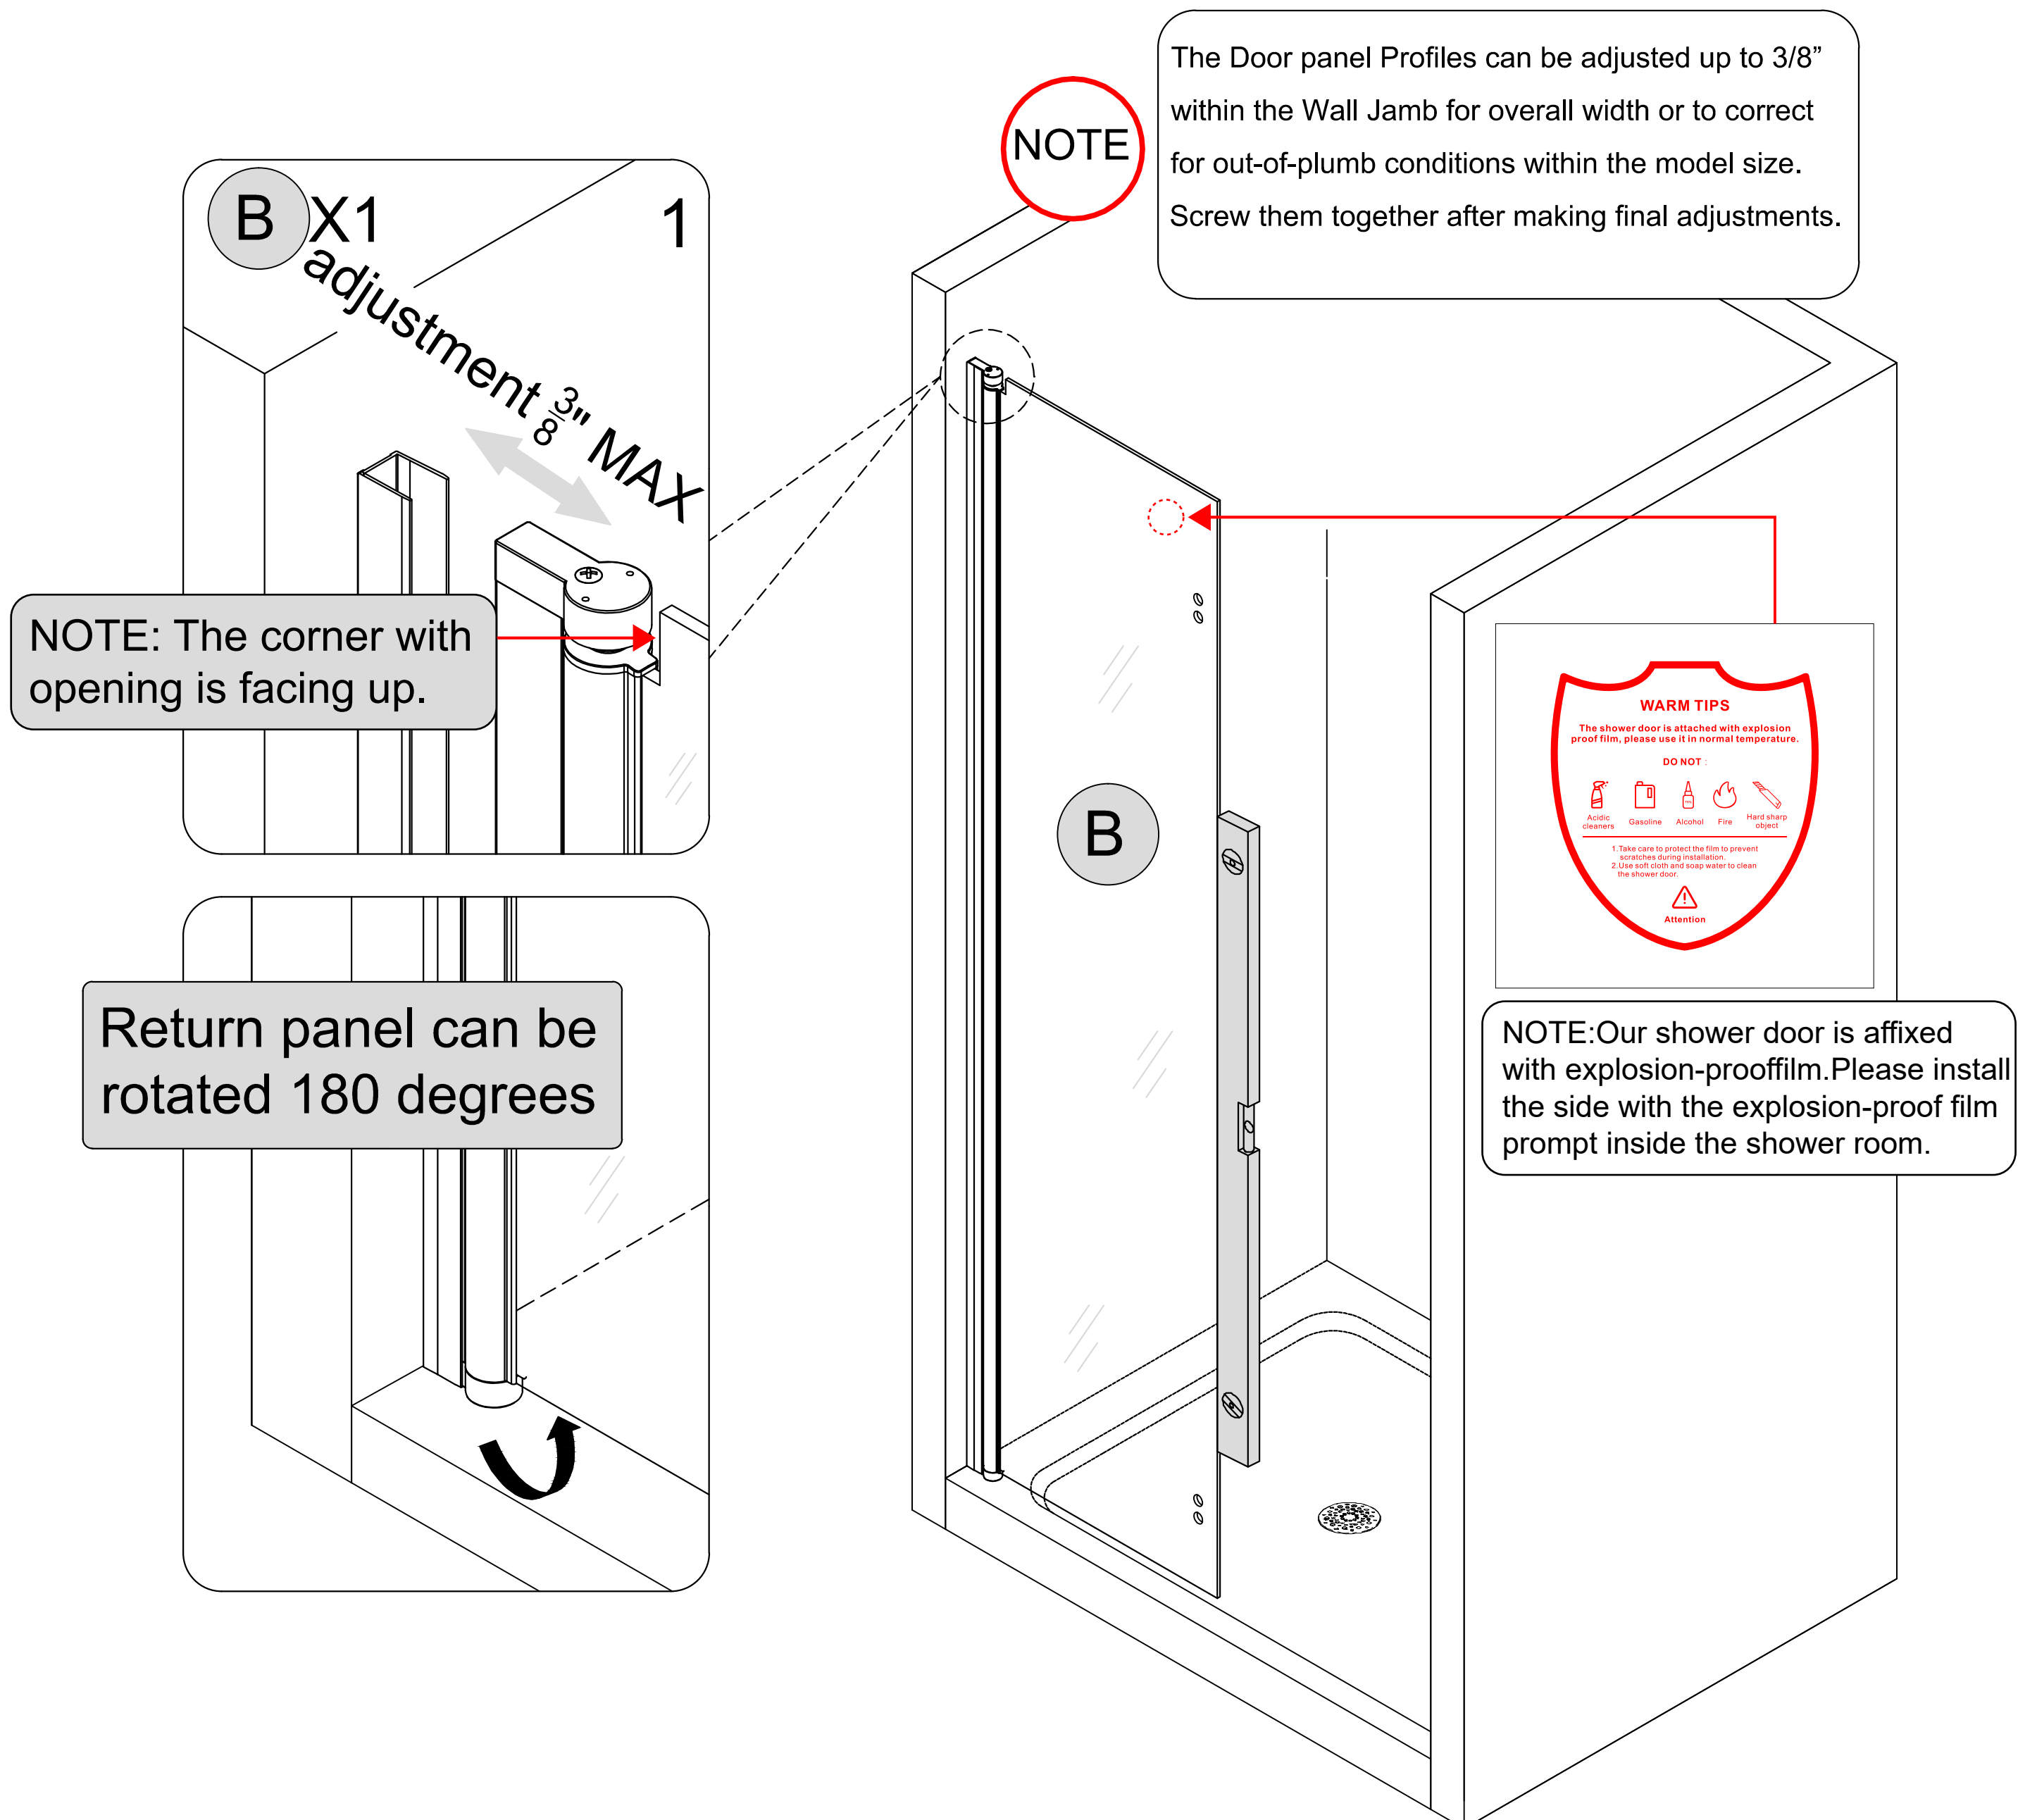


3.1

Glass-to-Glass Hinge Assembly Installation

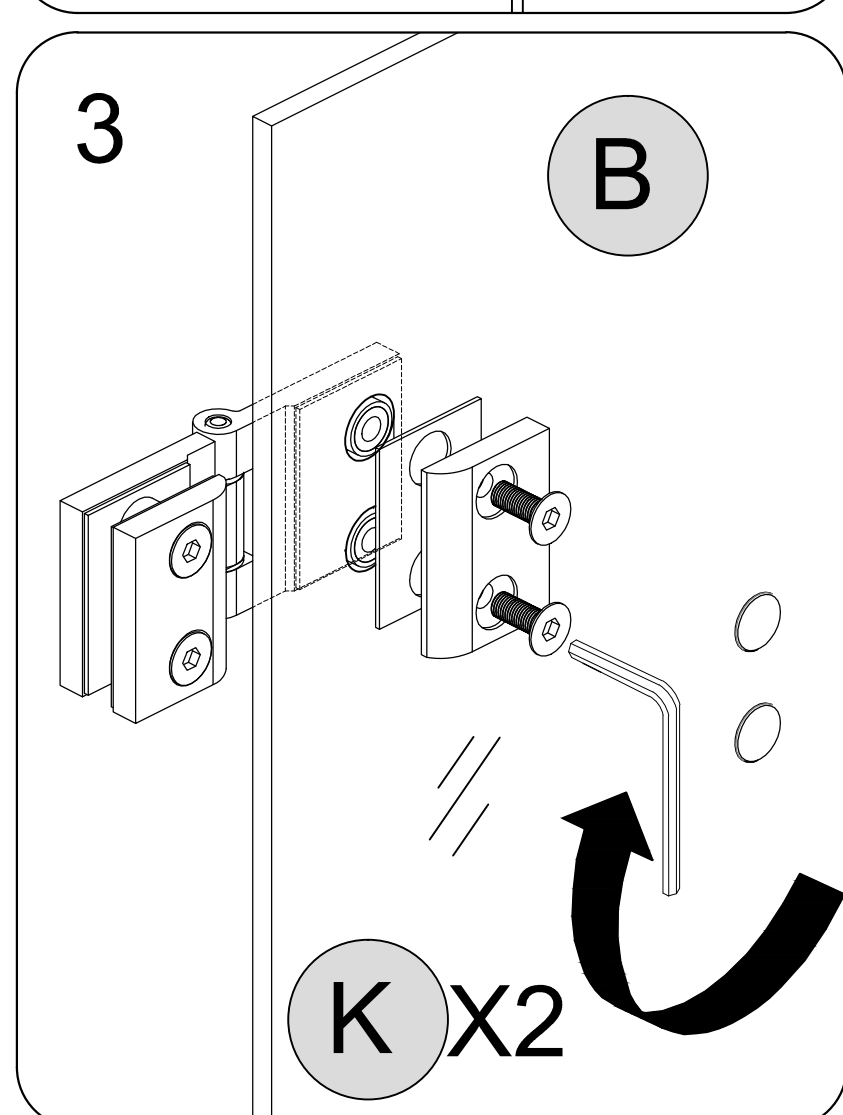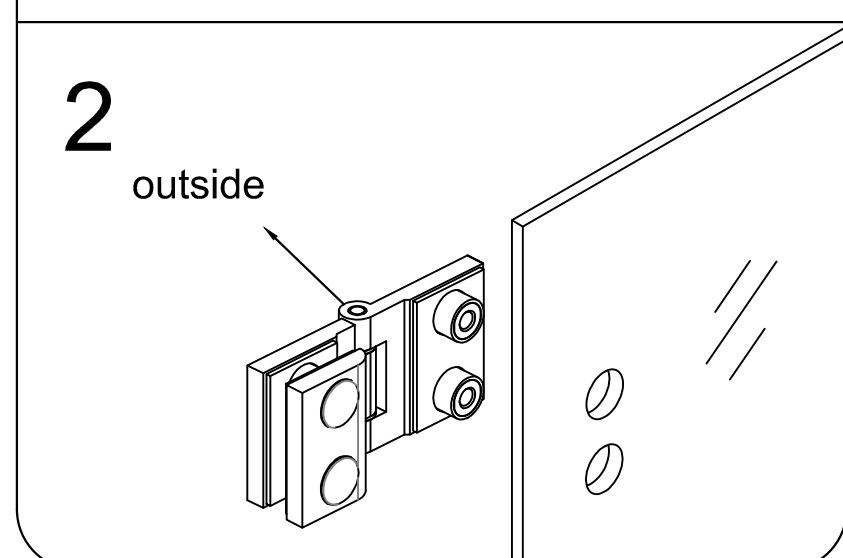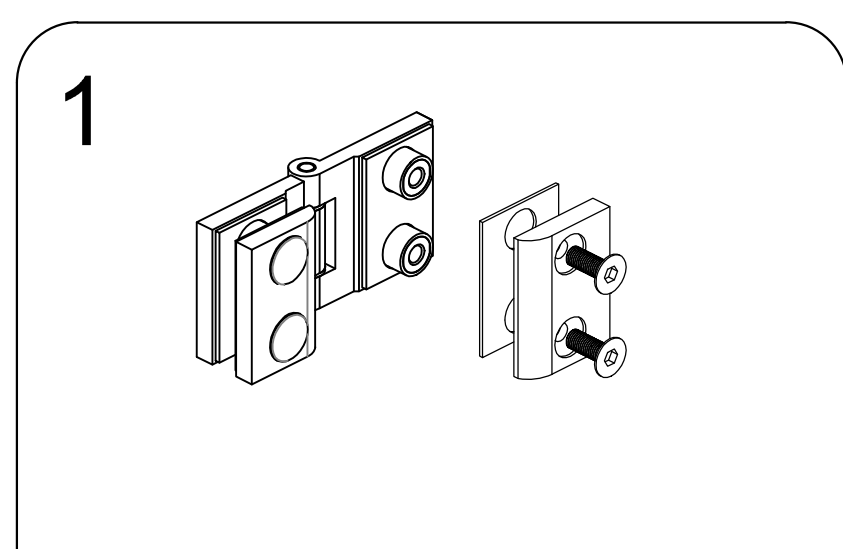

NOTE

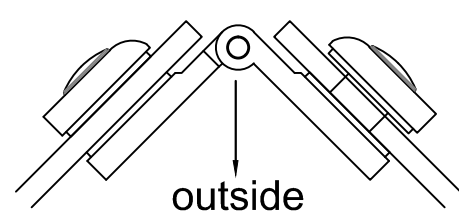


Ensure the orientation of both Hinge Assemblies are the same.

Make sure the Hinge Assemblies (B) are square and flatly installed on the glass





To prevent glass-to-metal contact, confirm the gaskets are present between the Hinge Assemblies and the Door Glass.

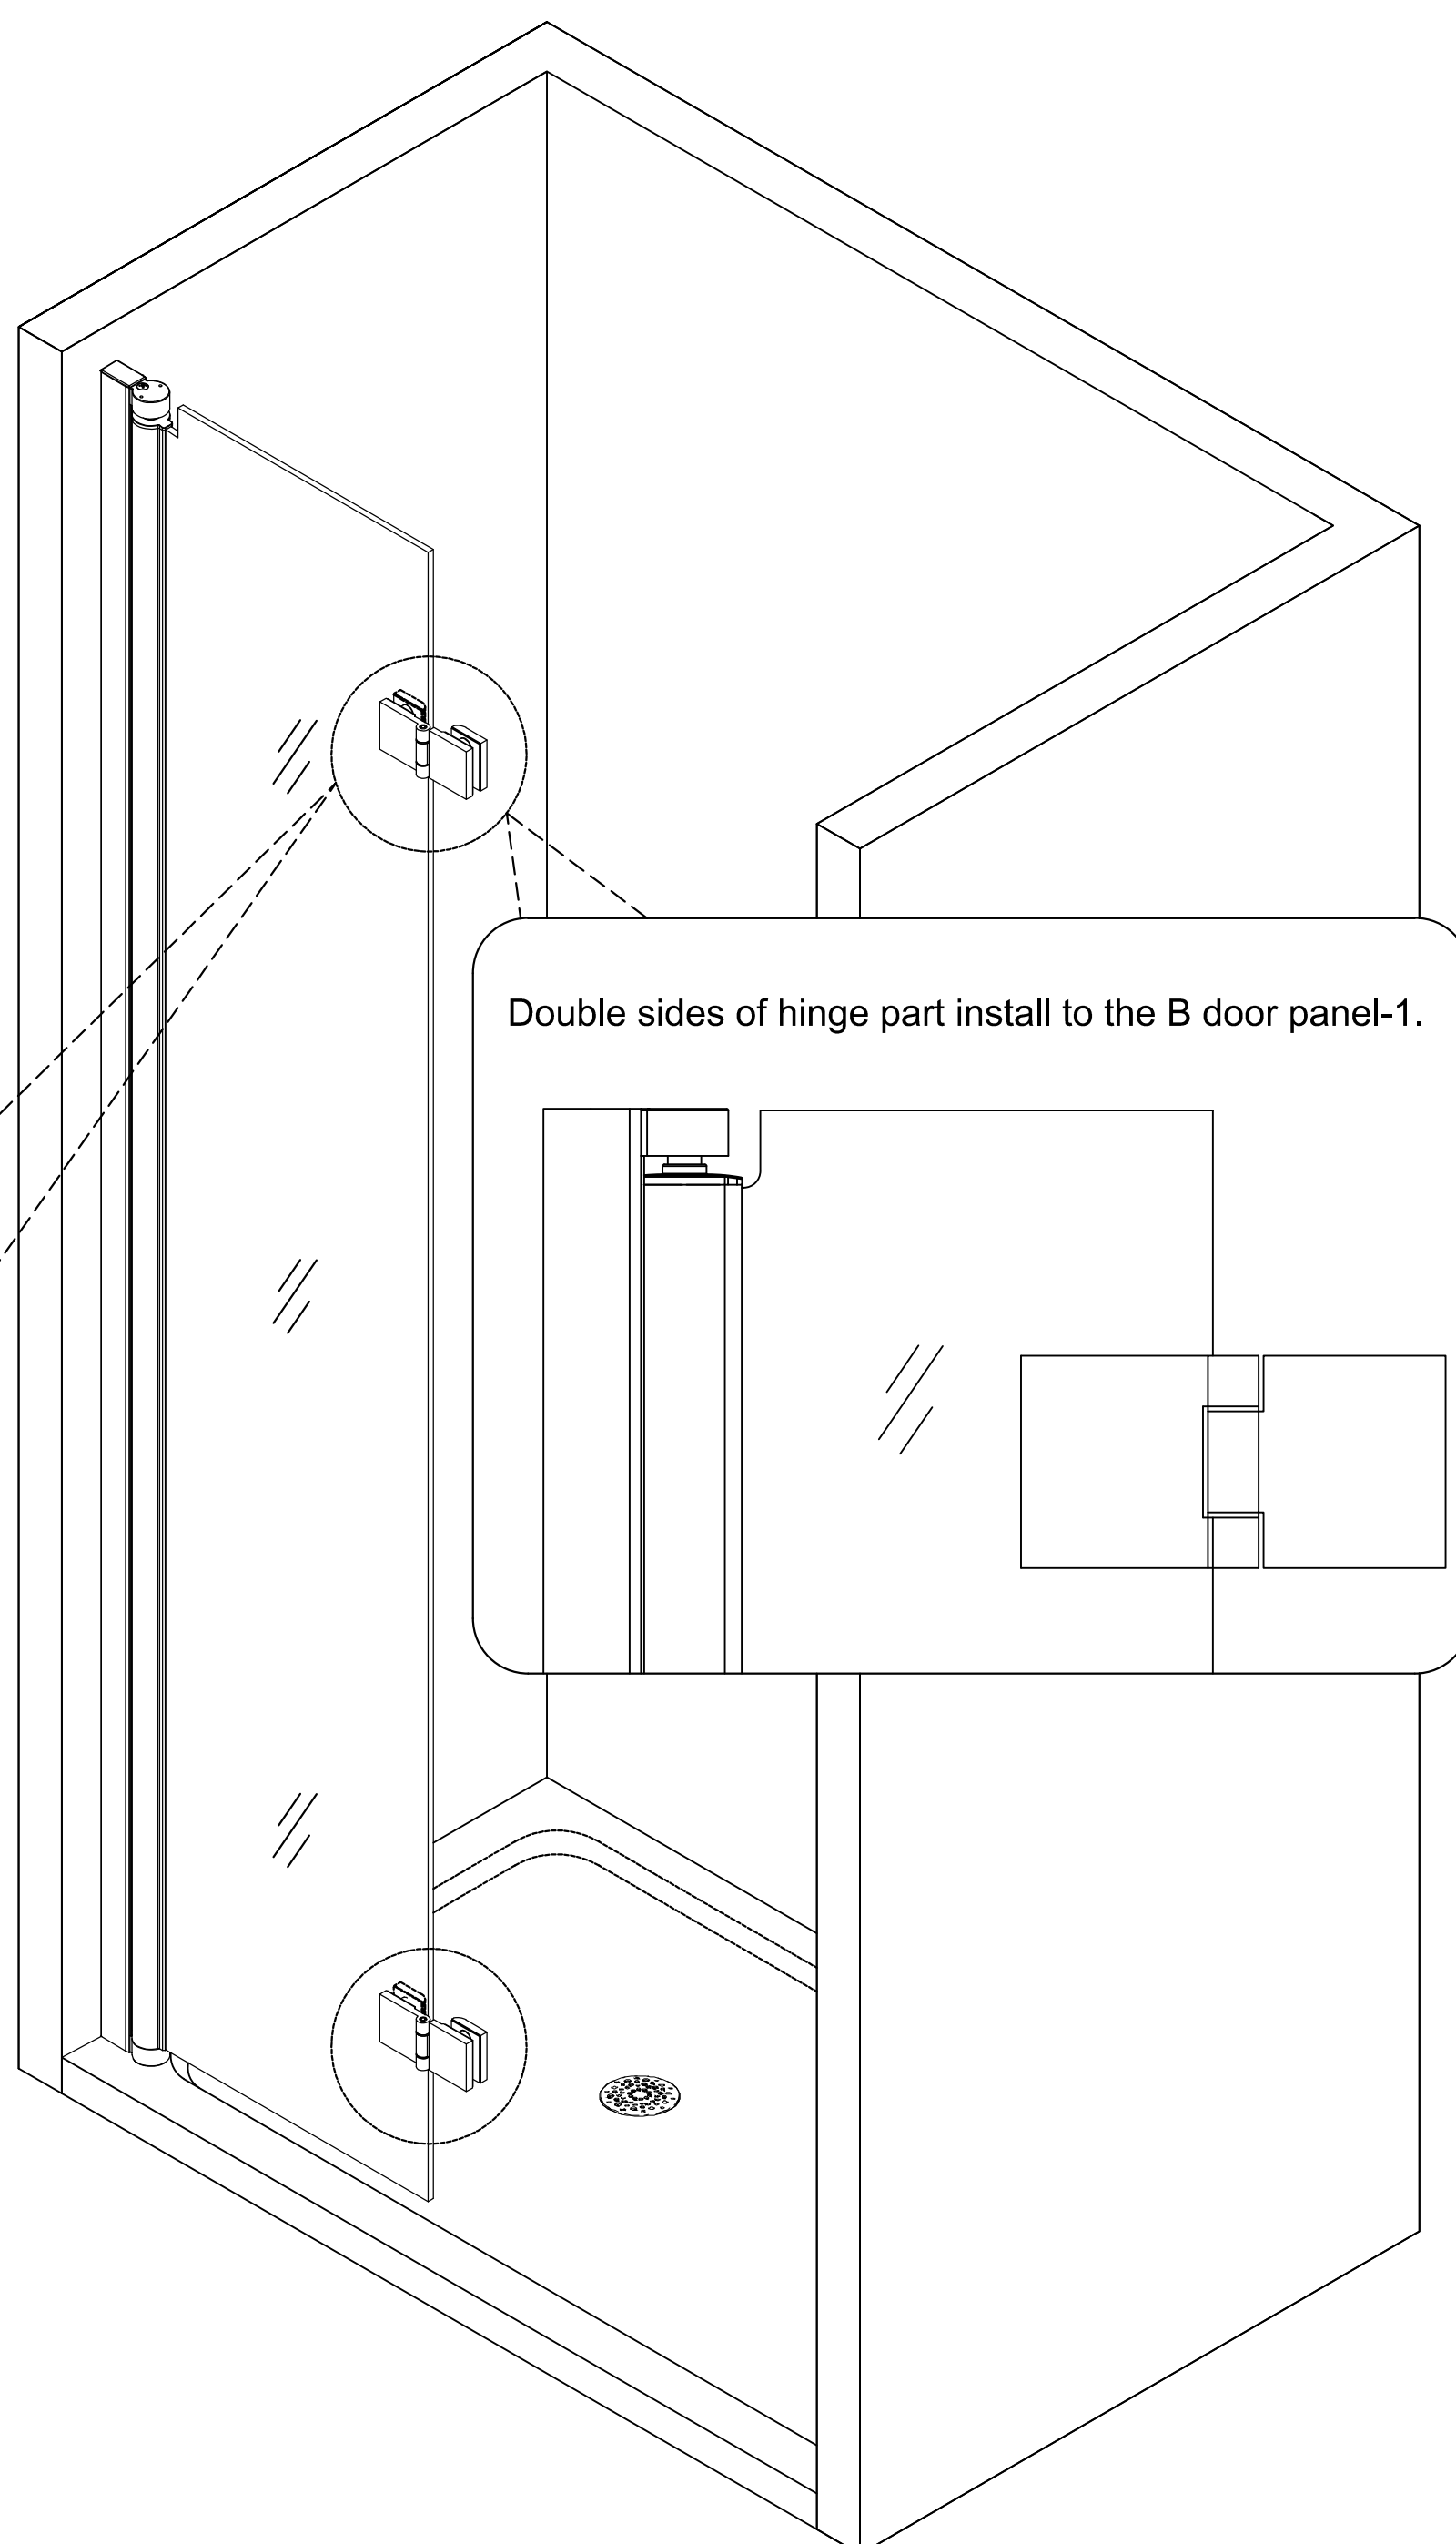


3.2

Glass-to-Glass Hinge Assembly Installation

Inside View

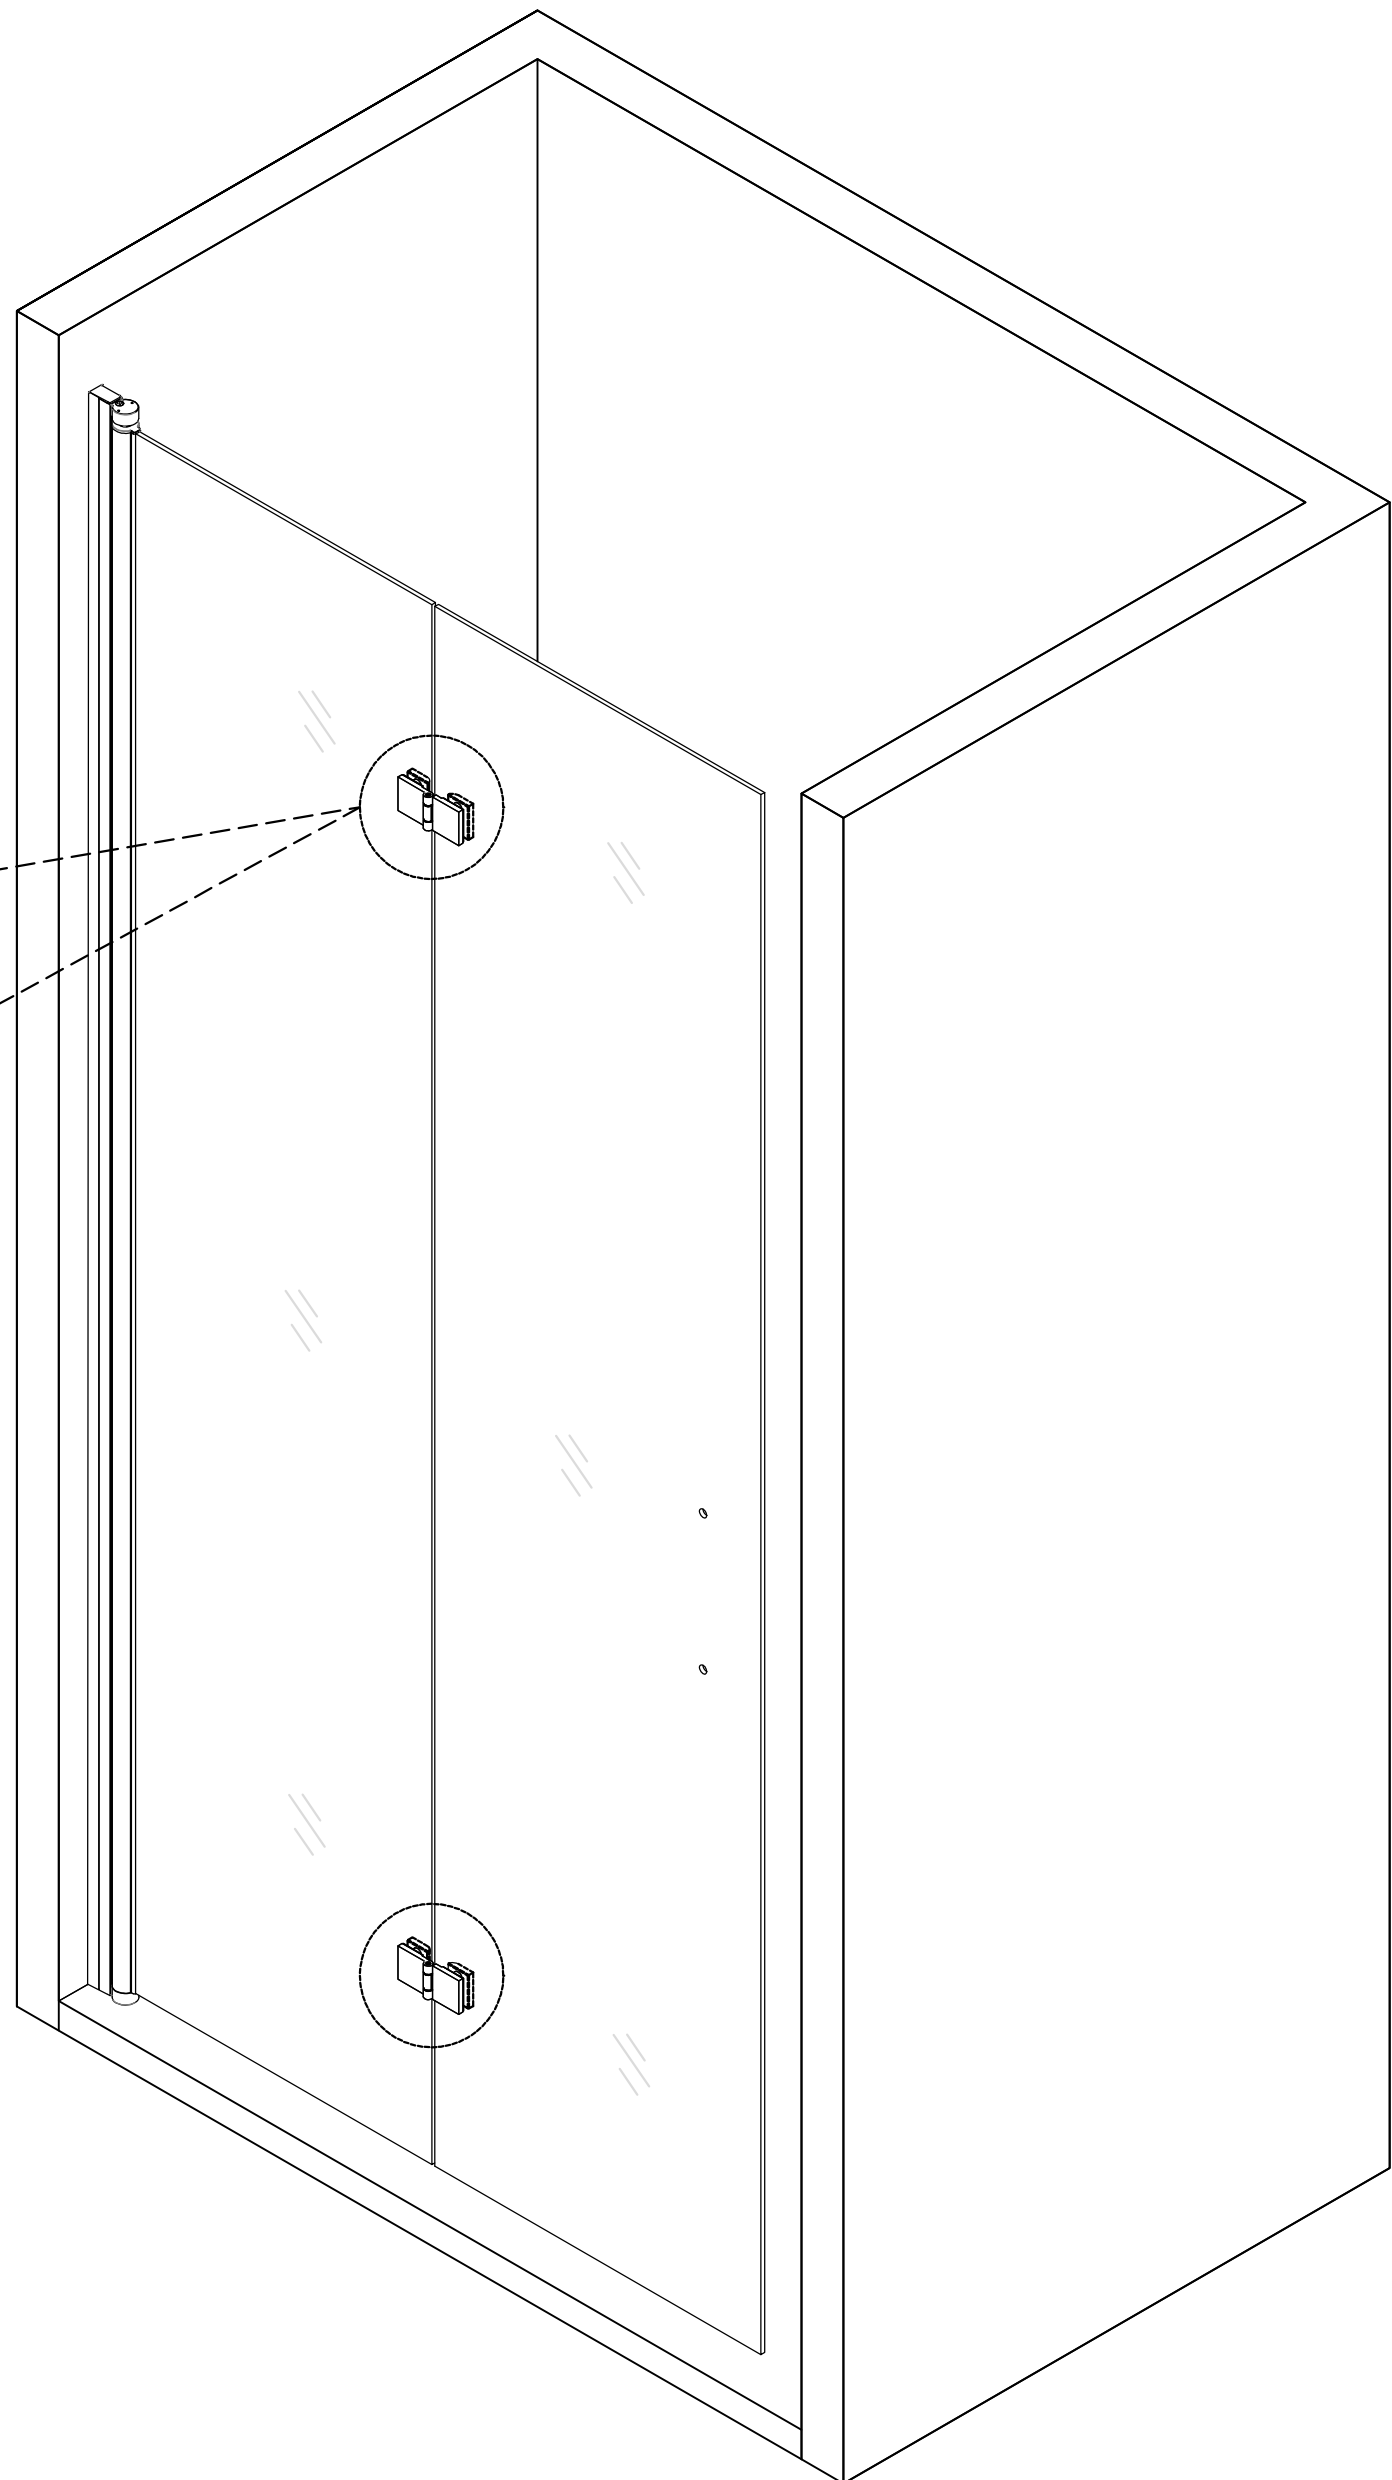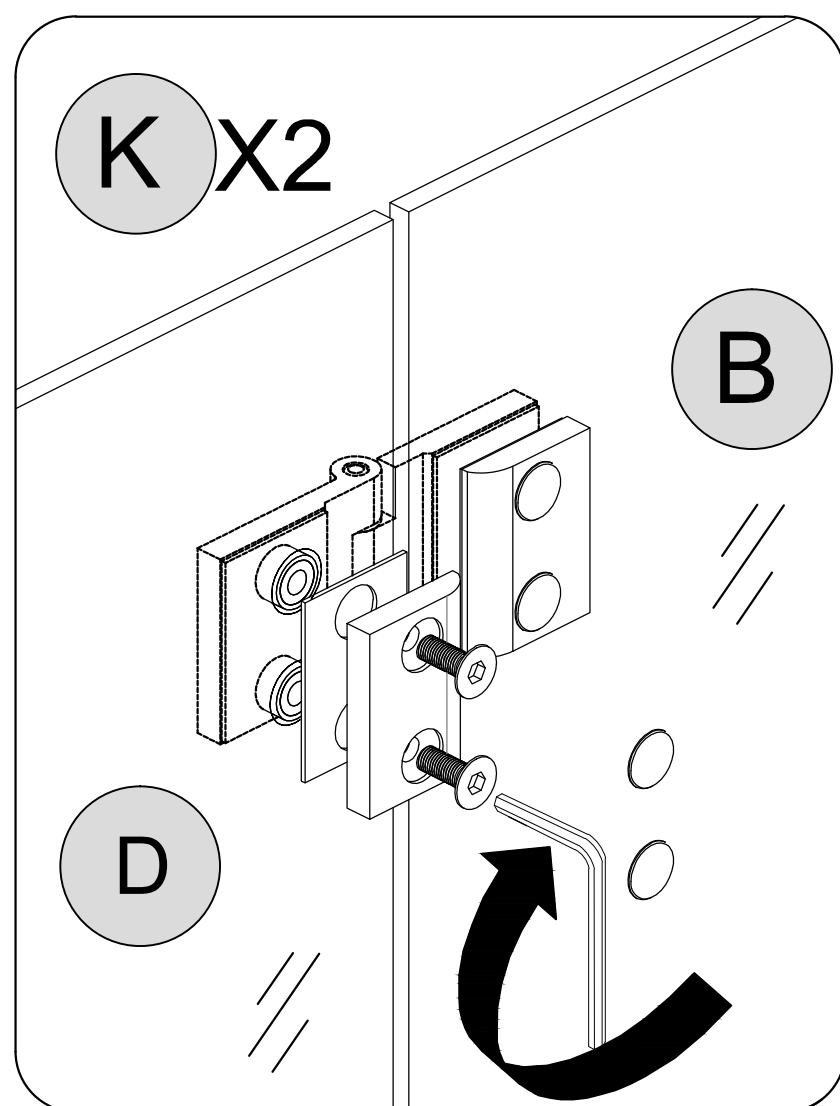

NOTE

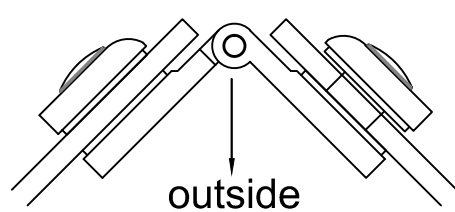

Ensure the orientation of both Hinge Assemblies are the same.





Make sure the Hinge Assemblies (K) are square and flatly installed on the glass



To prevent glass-to-metal contact, confirm the gaskets are present between the Hinge Assemblies and the Door Glass.

4

Magnetic strip Install to door panel-2

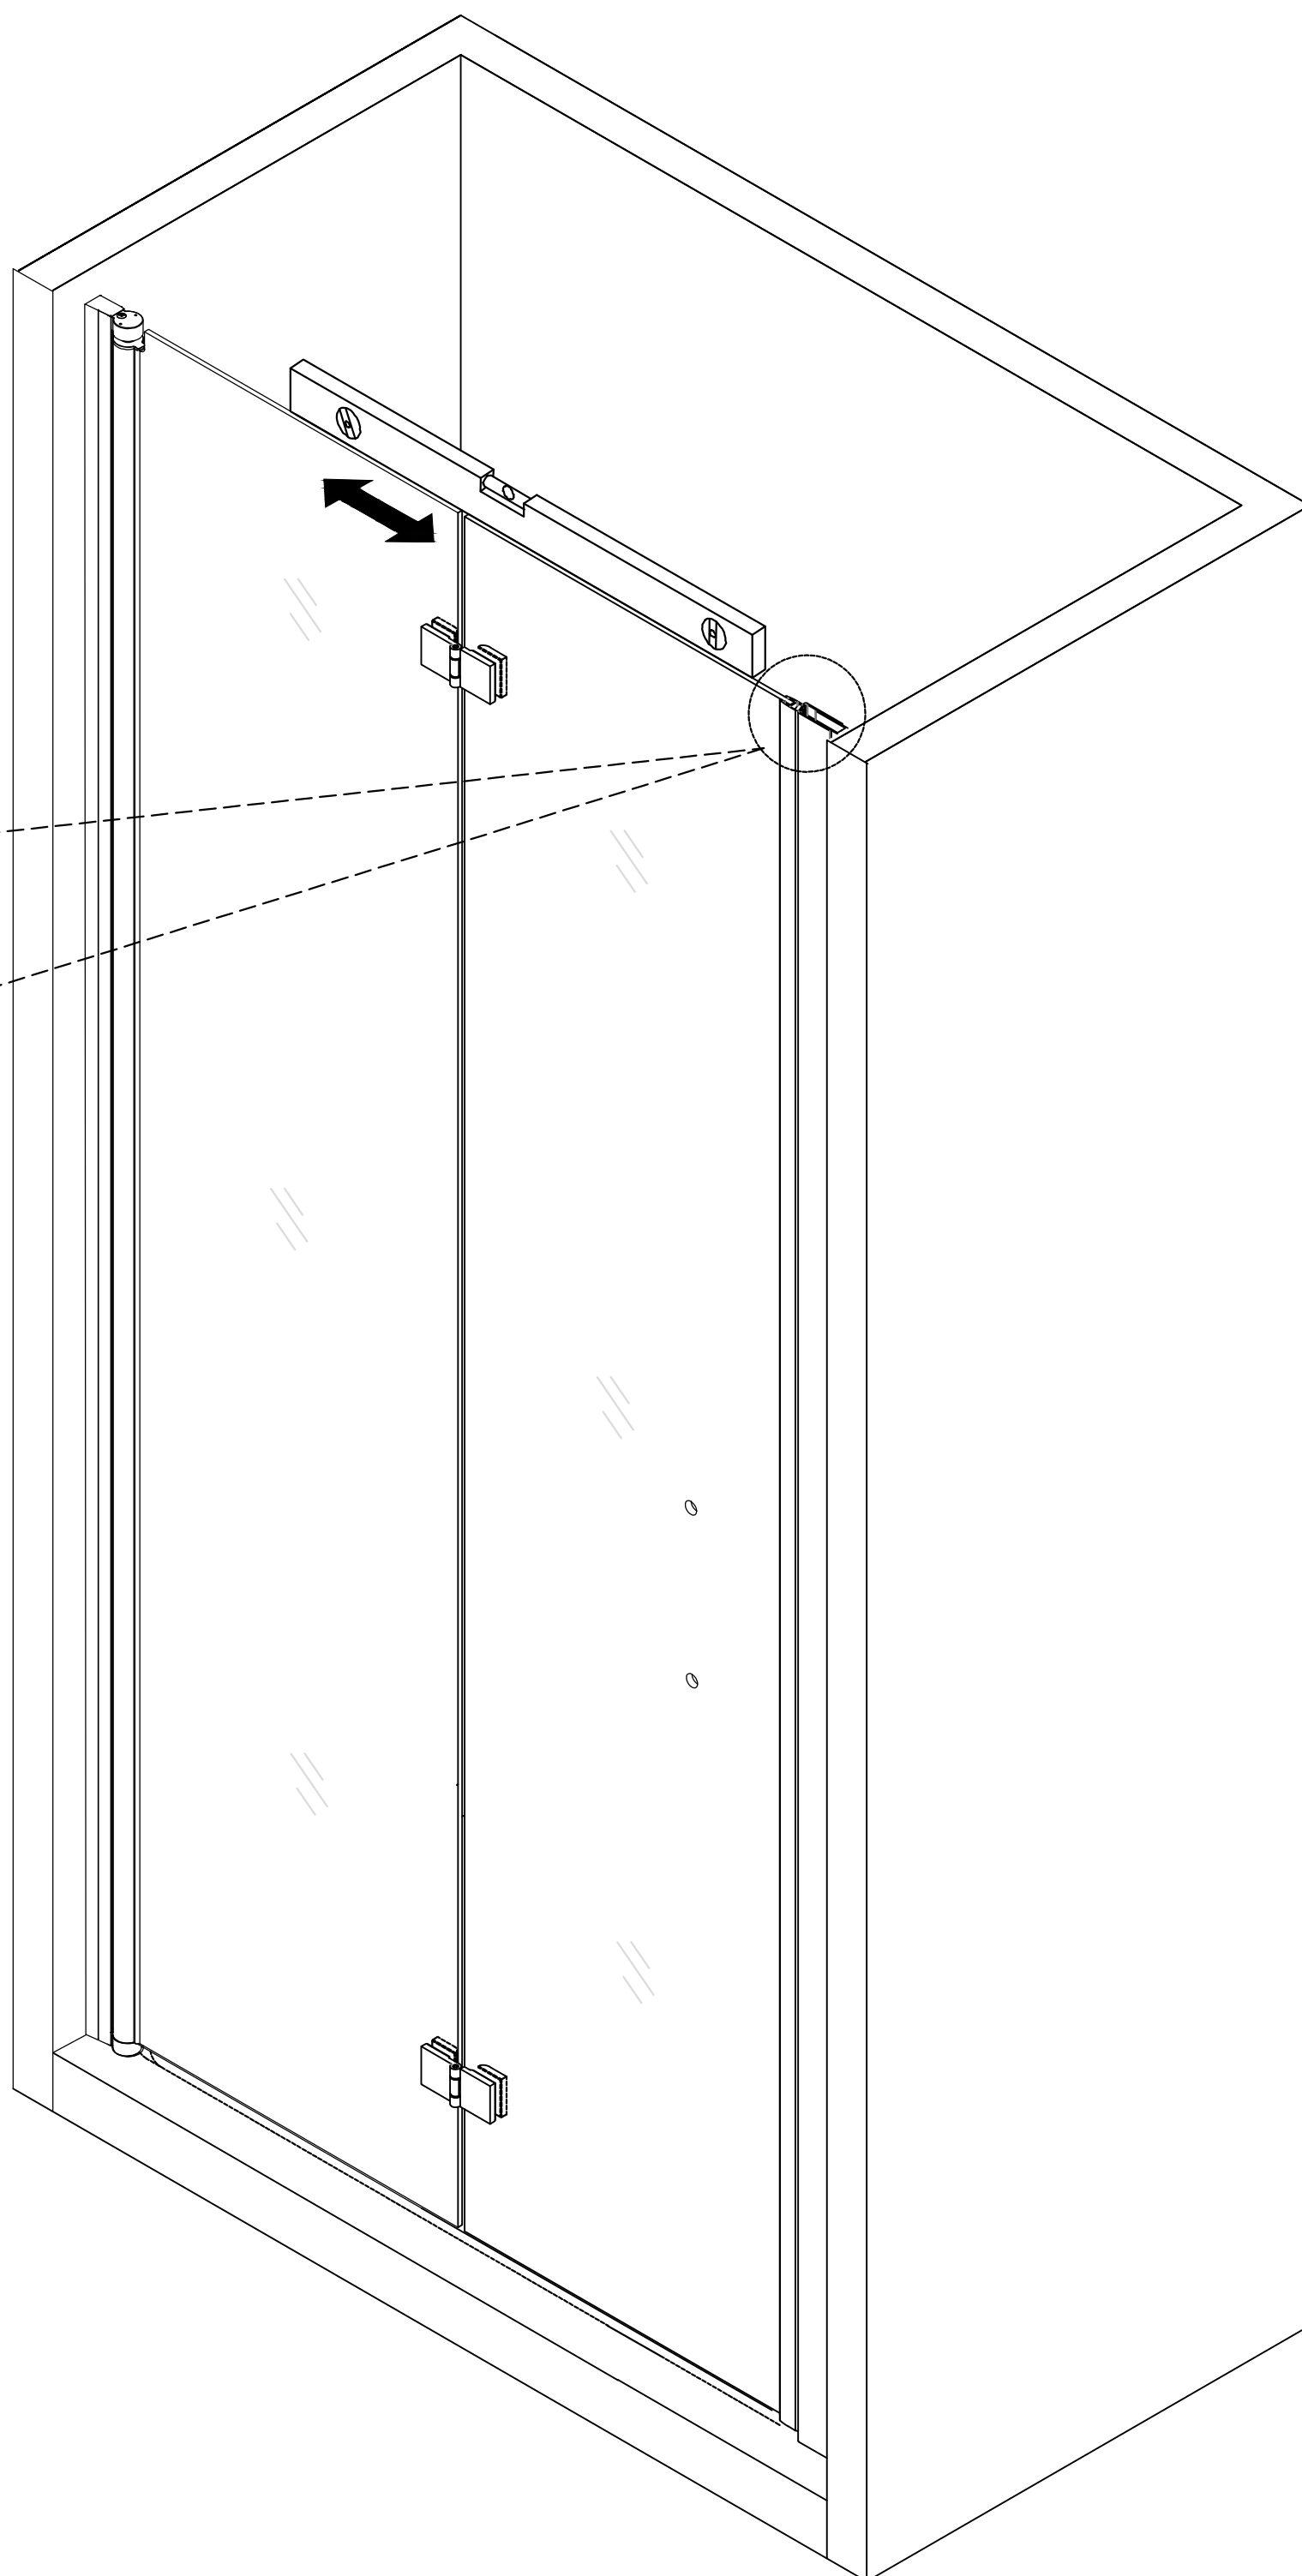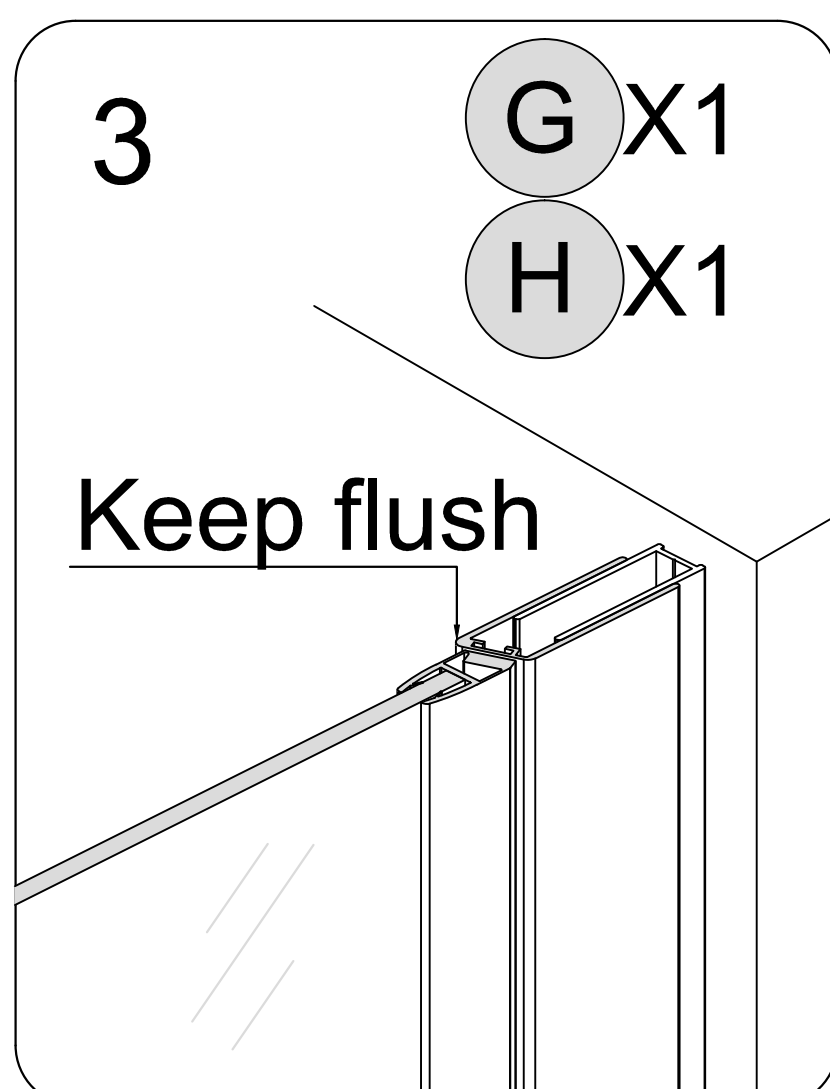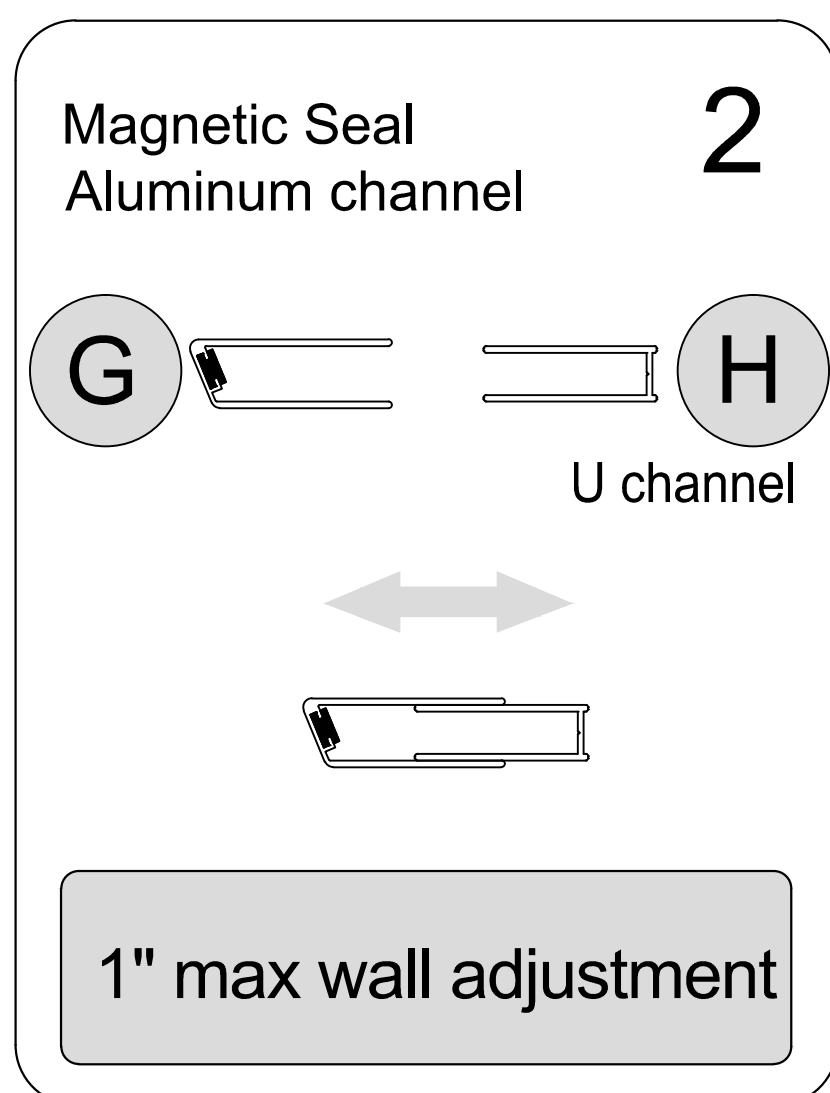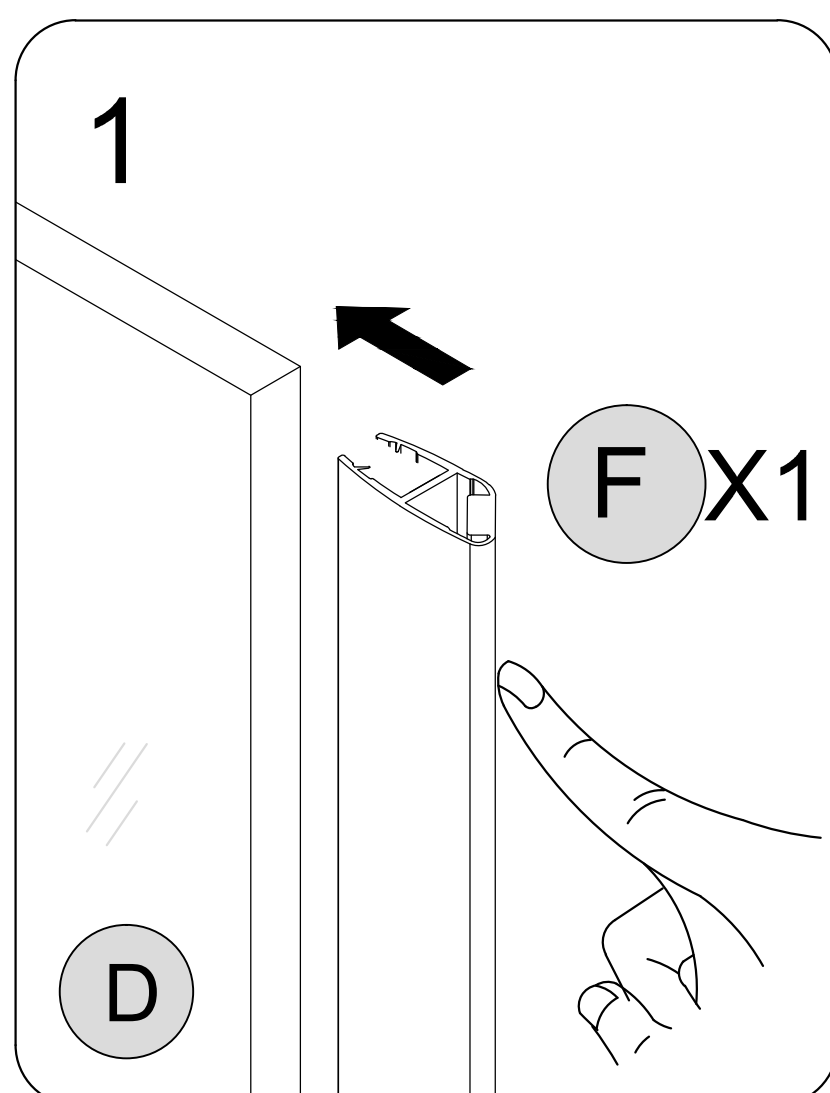

NOTE


- 1、Magnetic strip Install to door panel-2.
- 2、Put F,G,H together before fasten the glass door,make all these parts keep flush.

5




Fasten the door panel

NOTE

After final adjustments, drill $\varnothing 1/8"$ holes in the Wall Jamp (C).
Drill only through the first layer of the Door panel Profile and install the ST4.0x10mm Pan Head Screws (dd) using the Decorative Covers and Washers (cc)

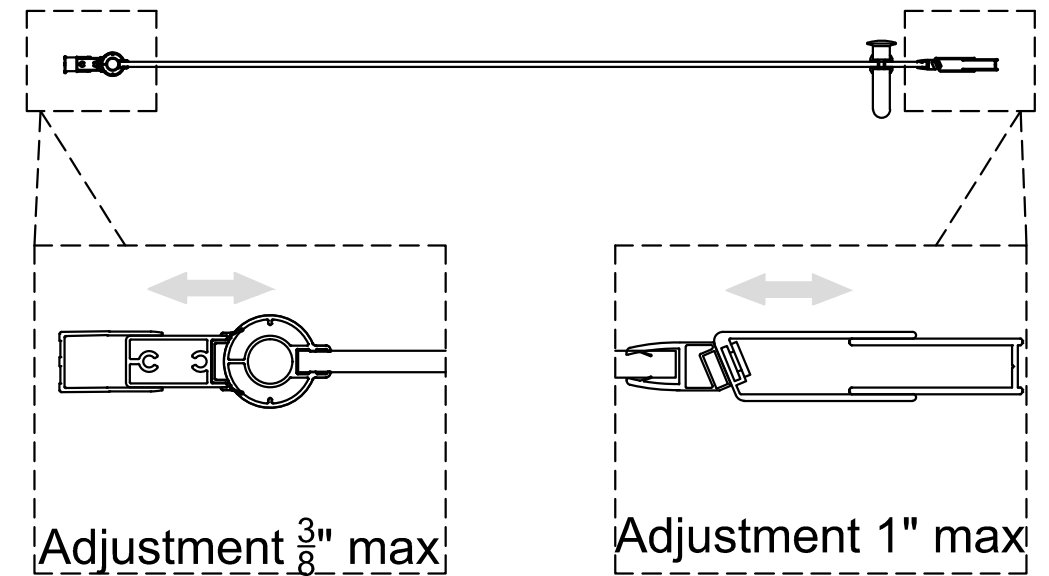


Inside View

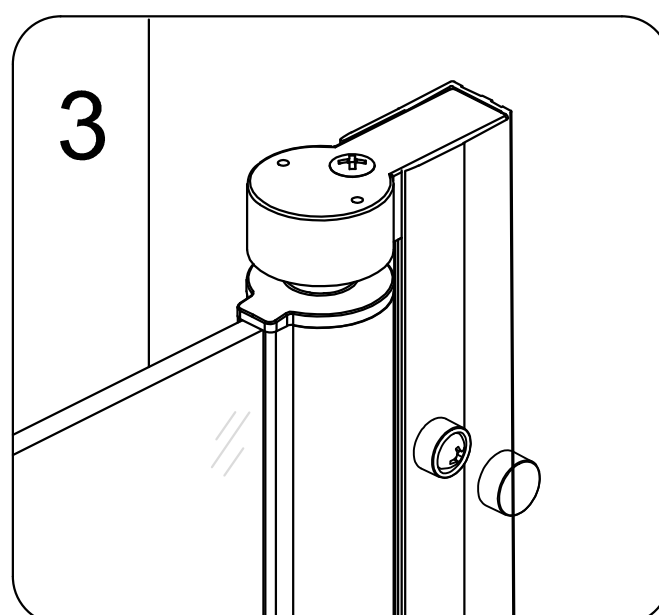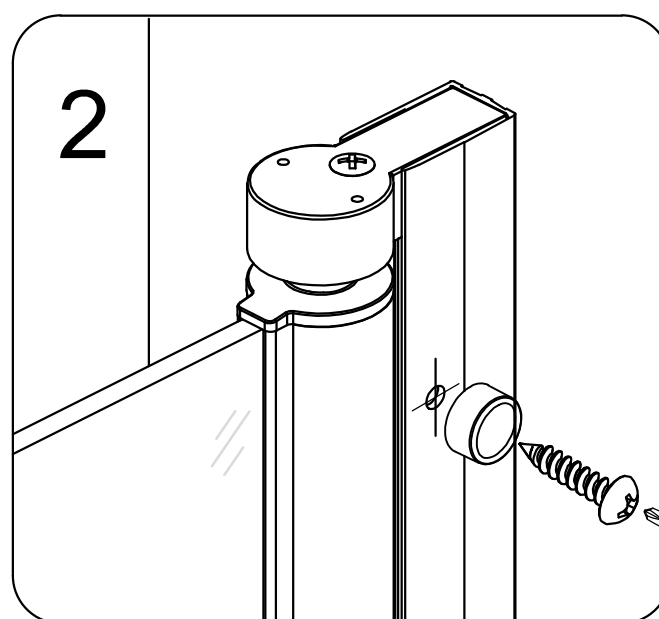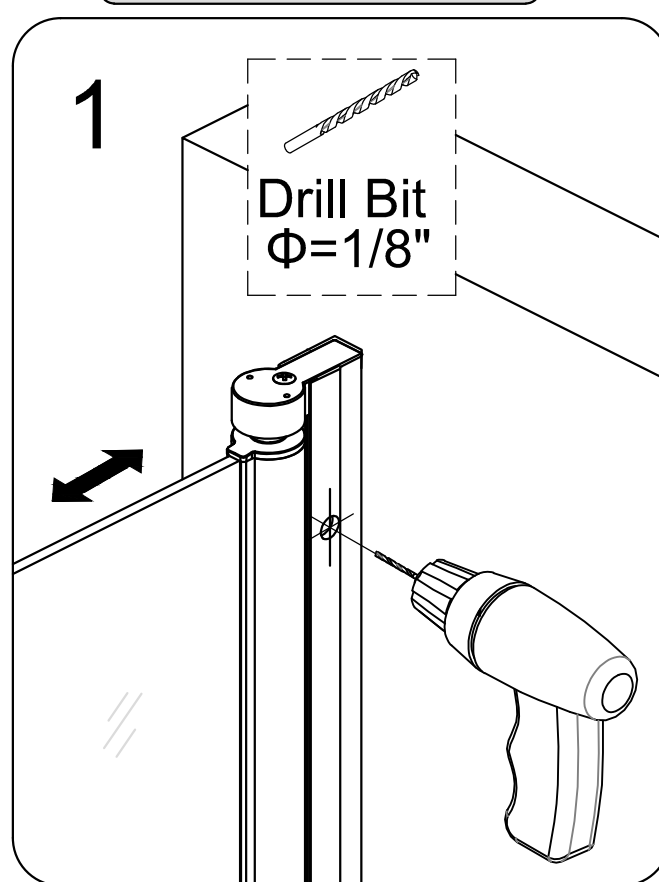

cc X3

dd X3


Keep flush

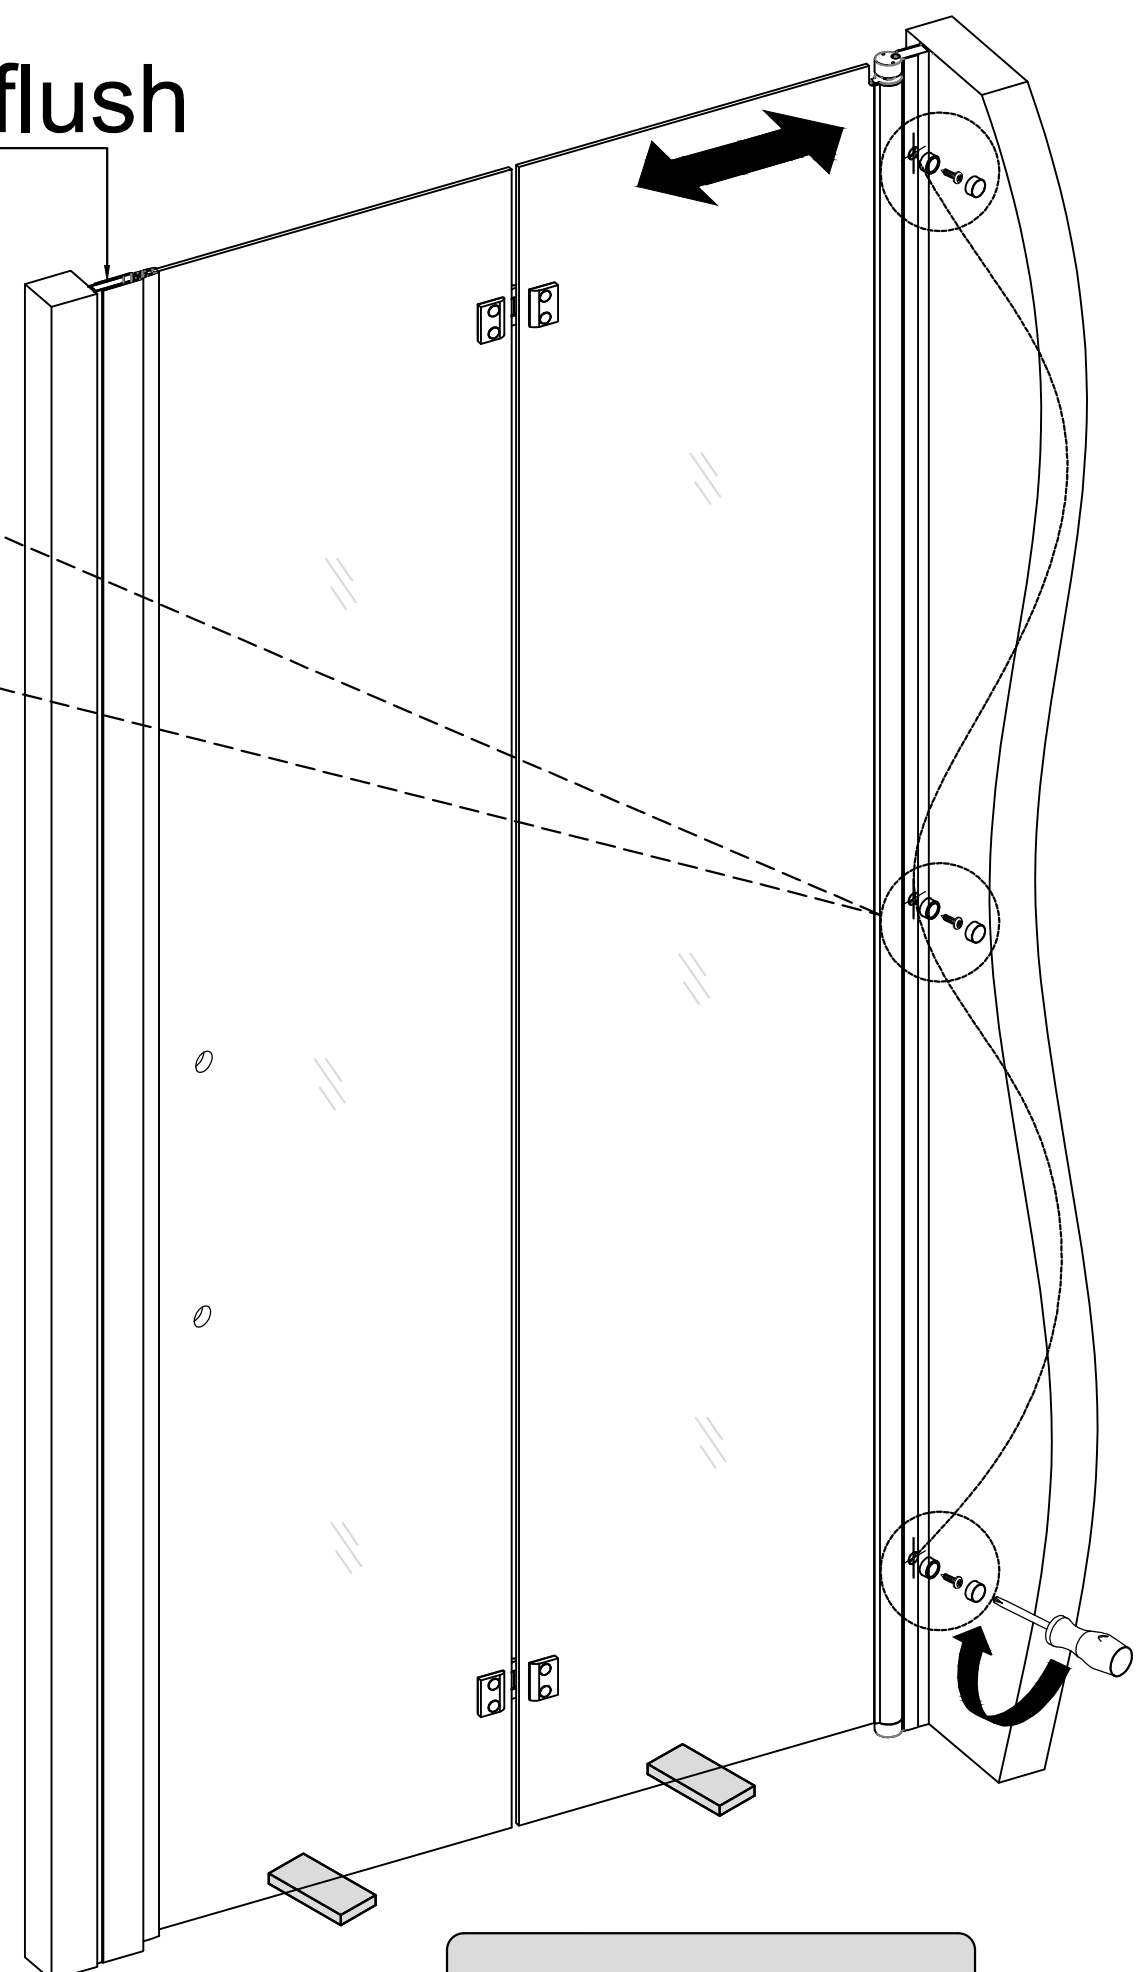

Inside View


NOTE

Include the washers when installing the ST4.0x10mm Pan Head Screws (dd) and Decorative Caps (cc) .

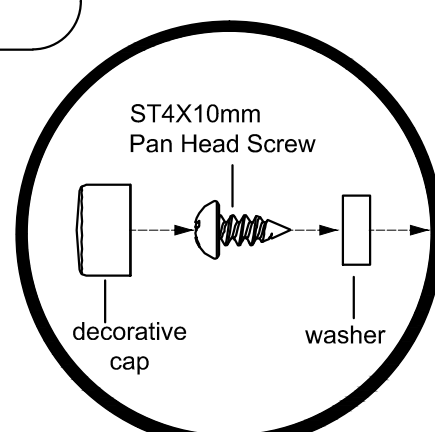

6

Determine the G & H position

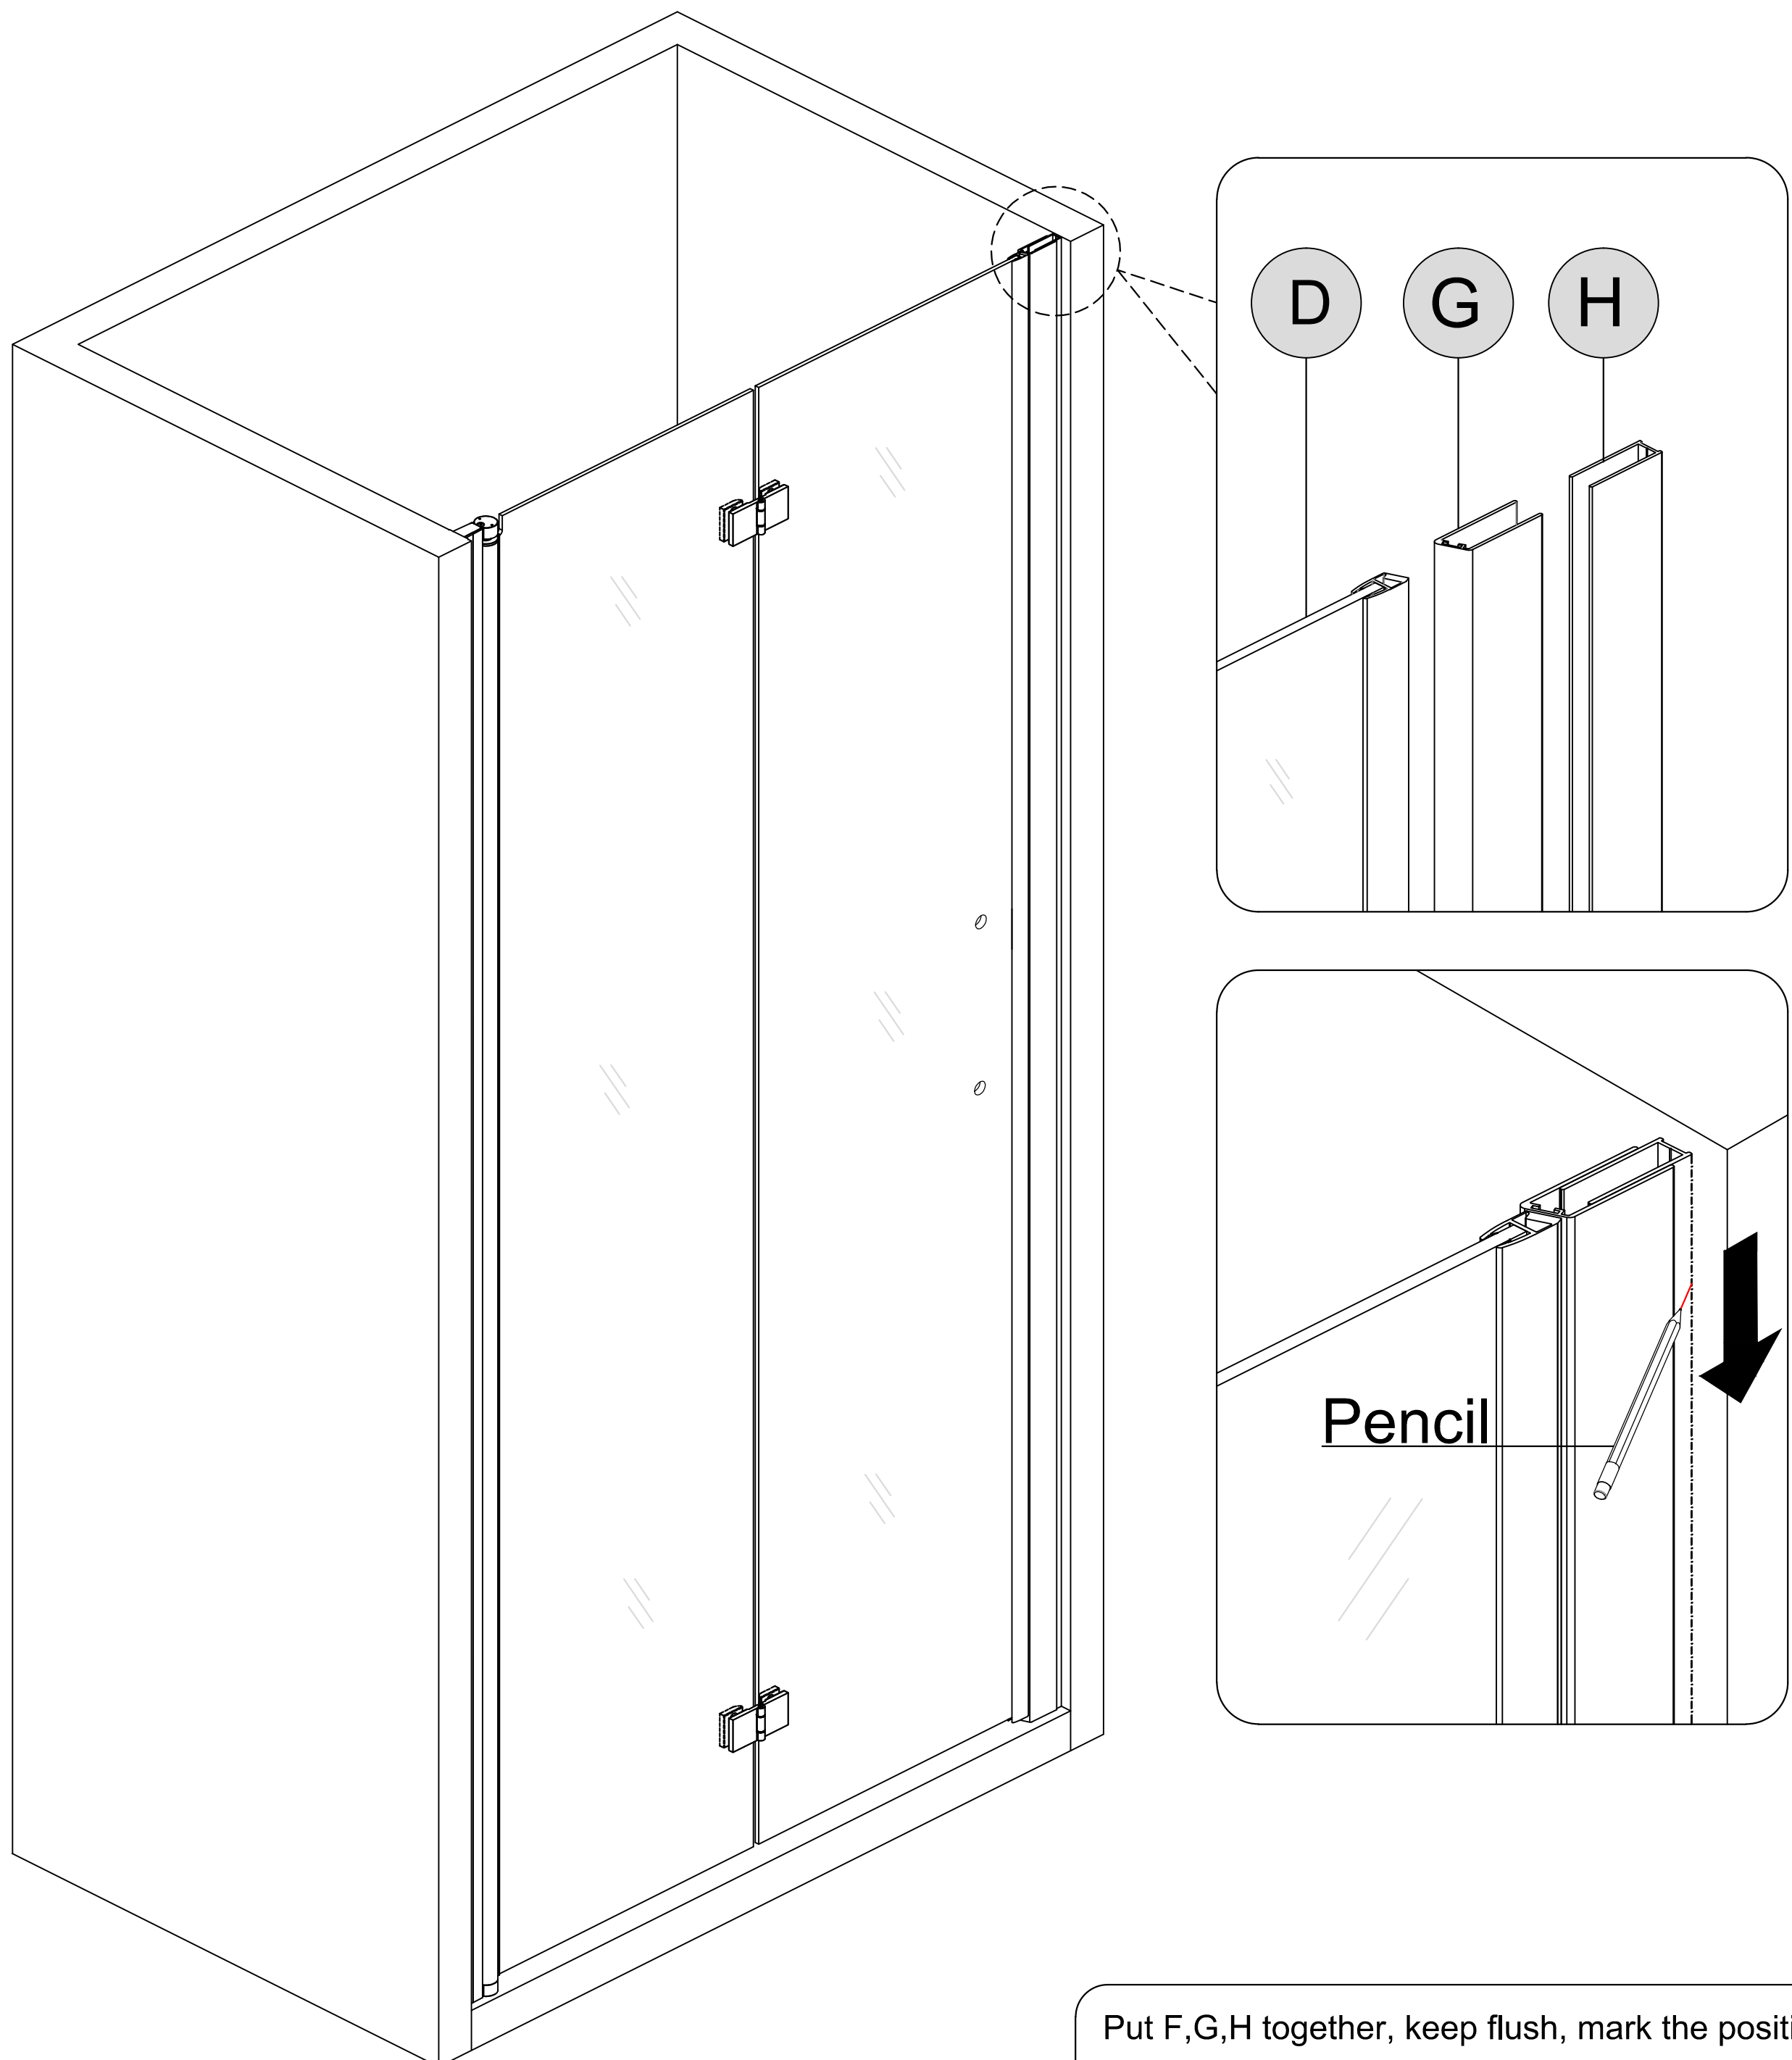







NOTE

Put F,G,H together, keep flush, mark the position on the wall.

Center the Magnetic Seal Aluminum channel(G) and U channel (H) on the Threshold.

7

U channel Installation

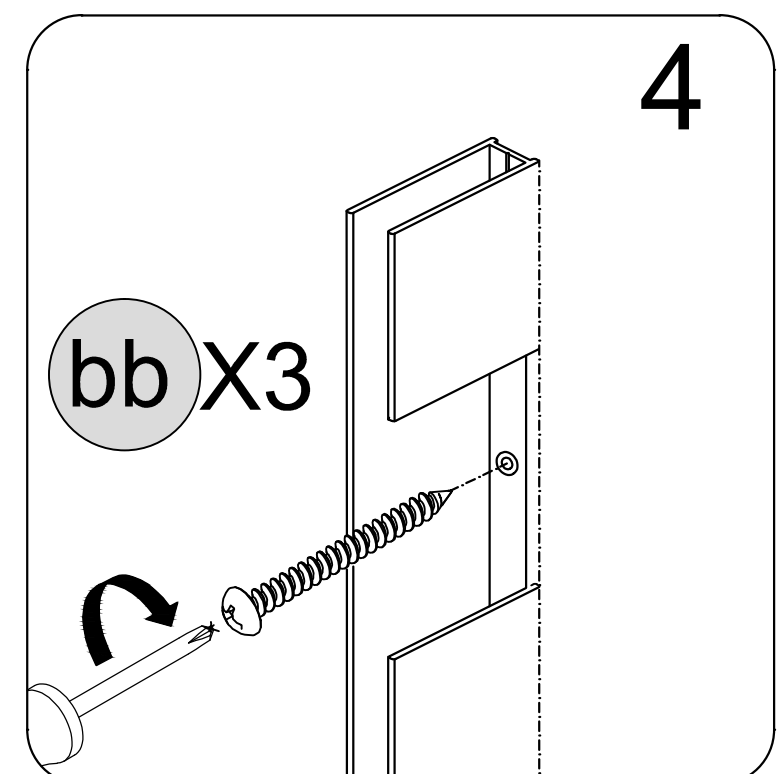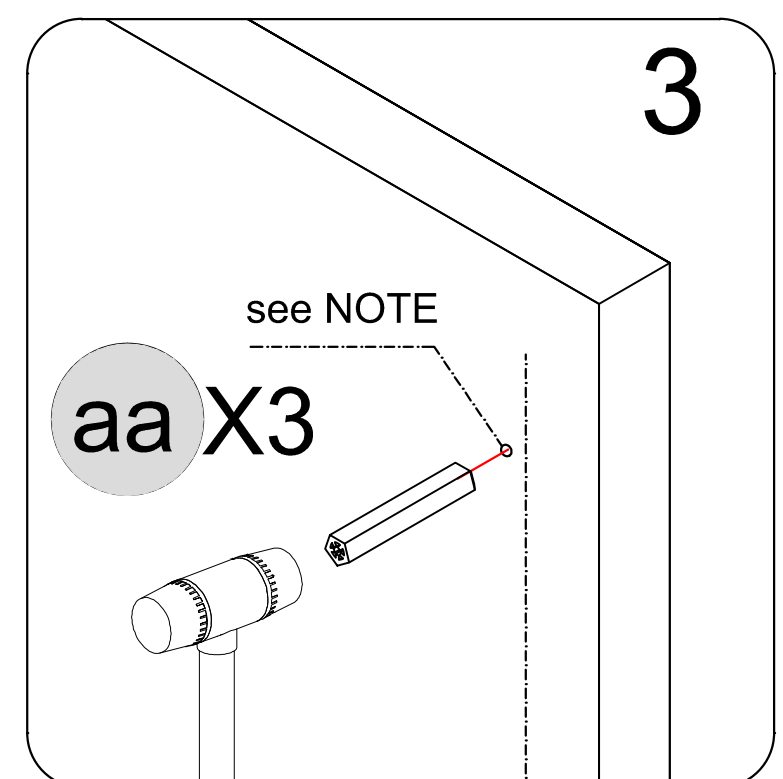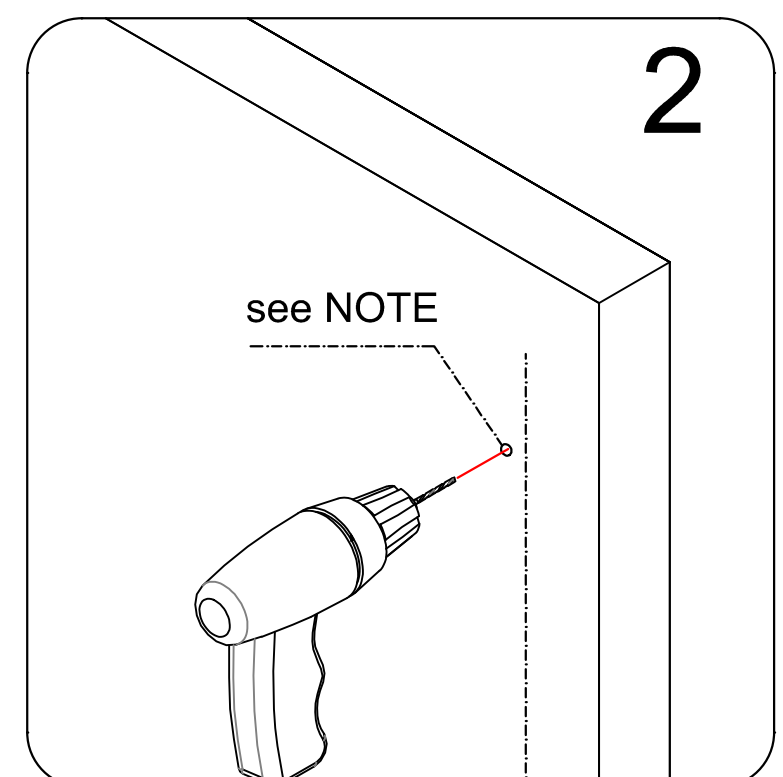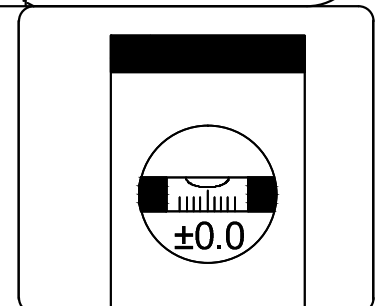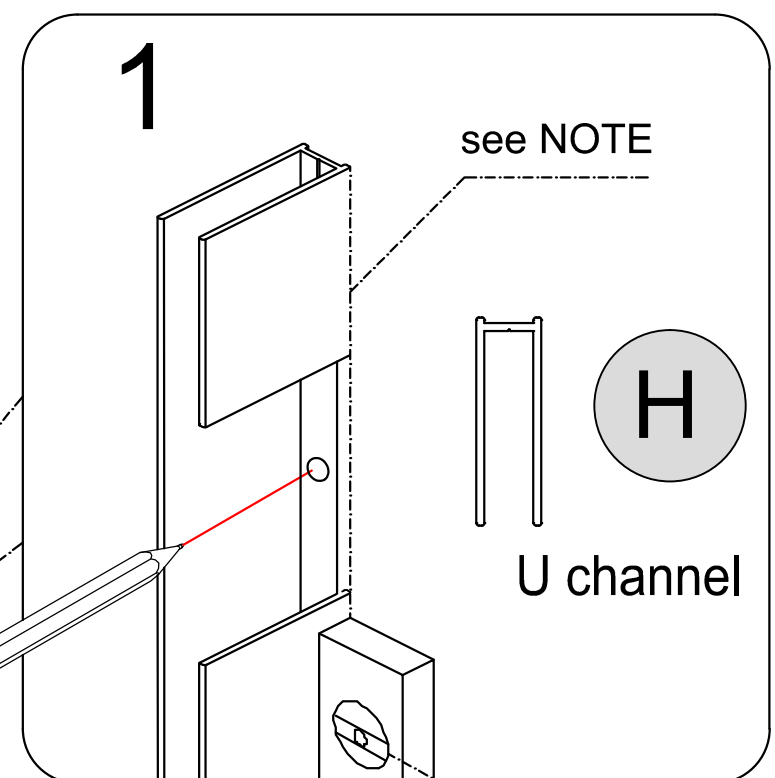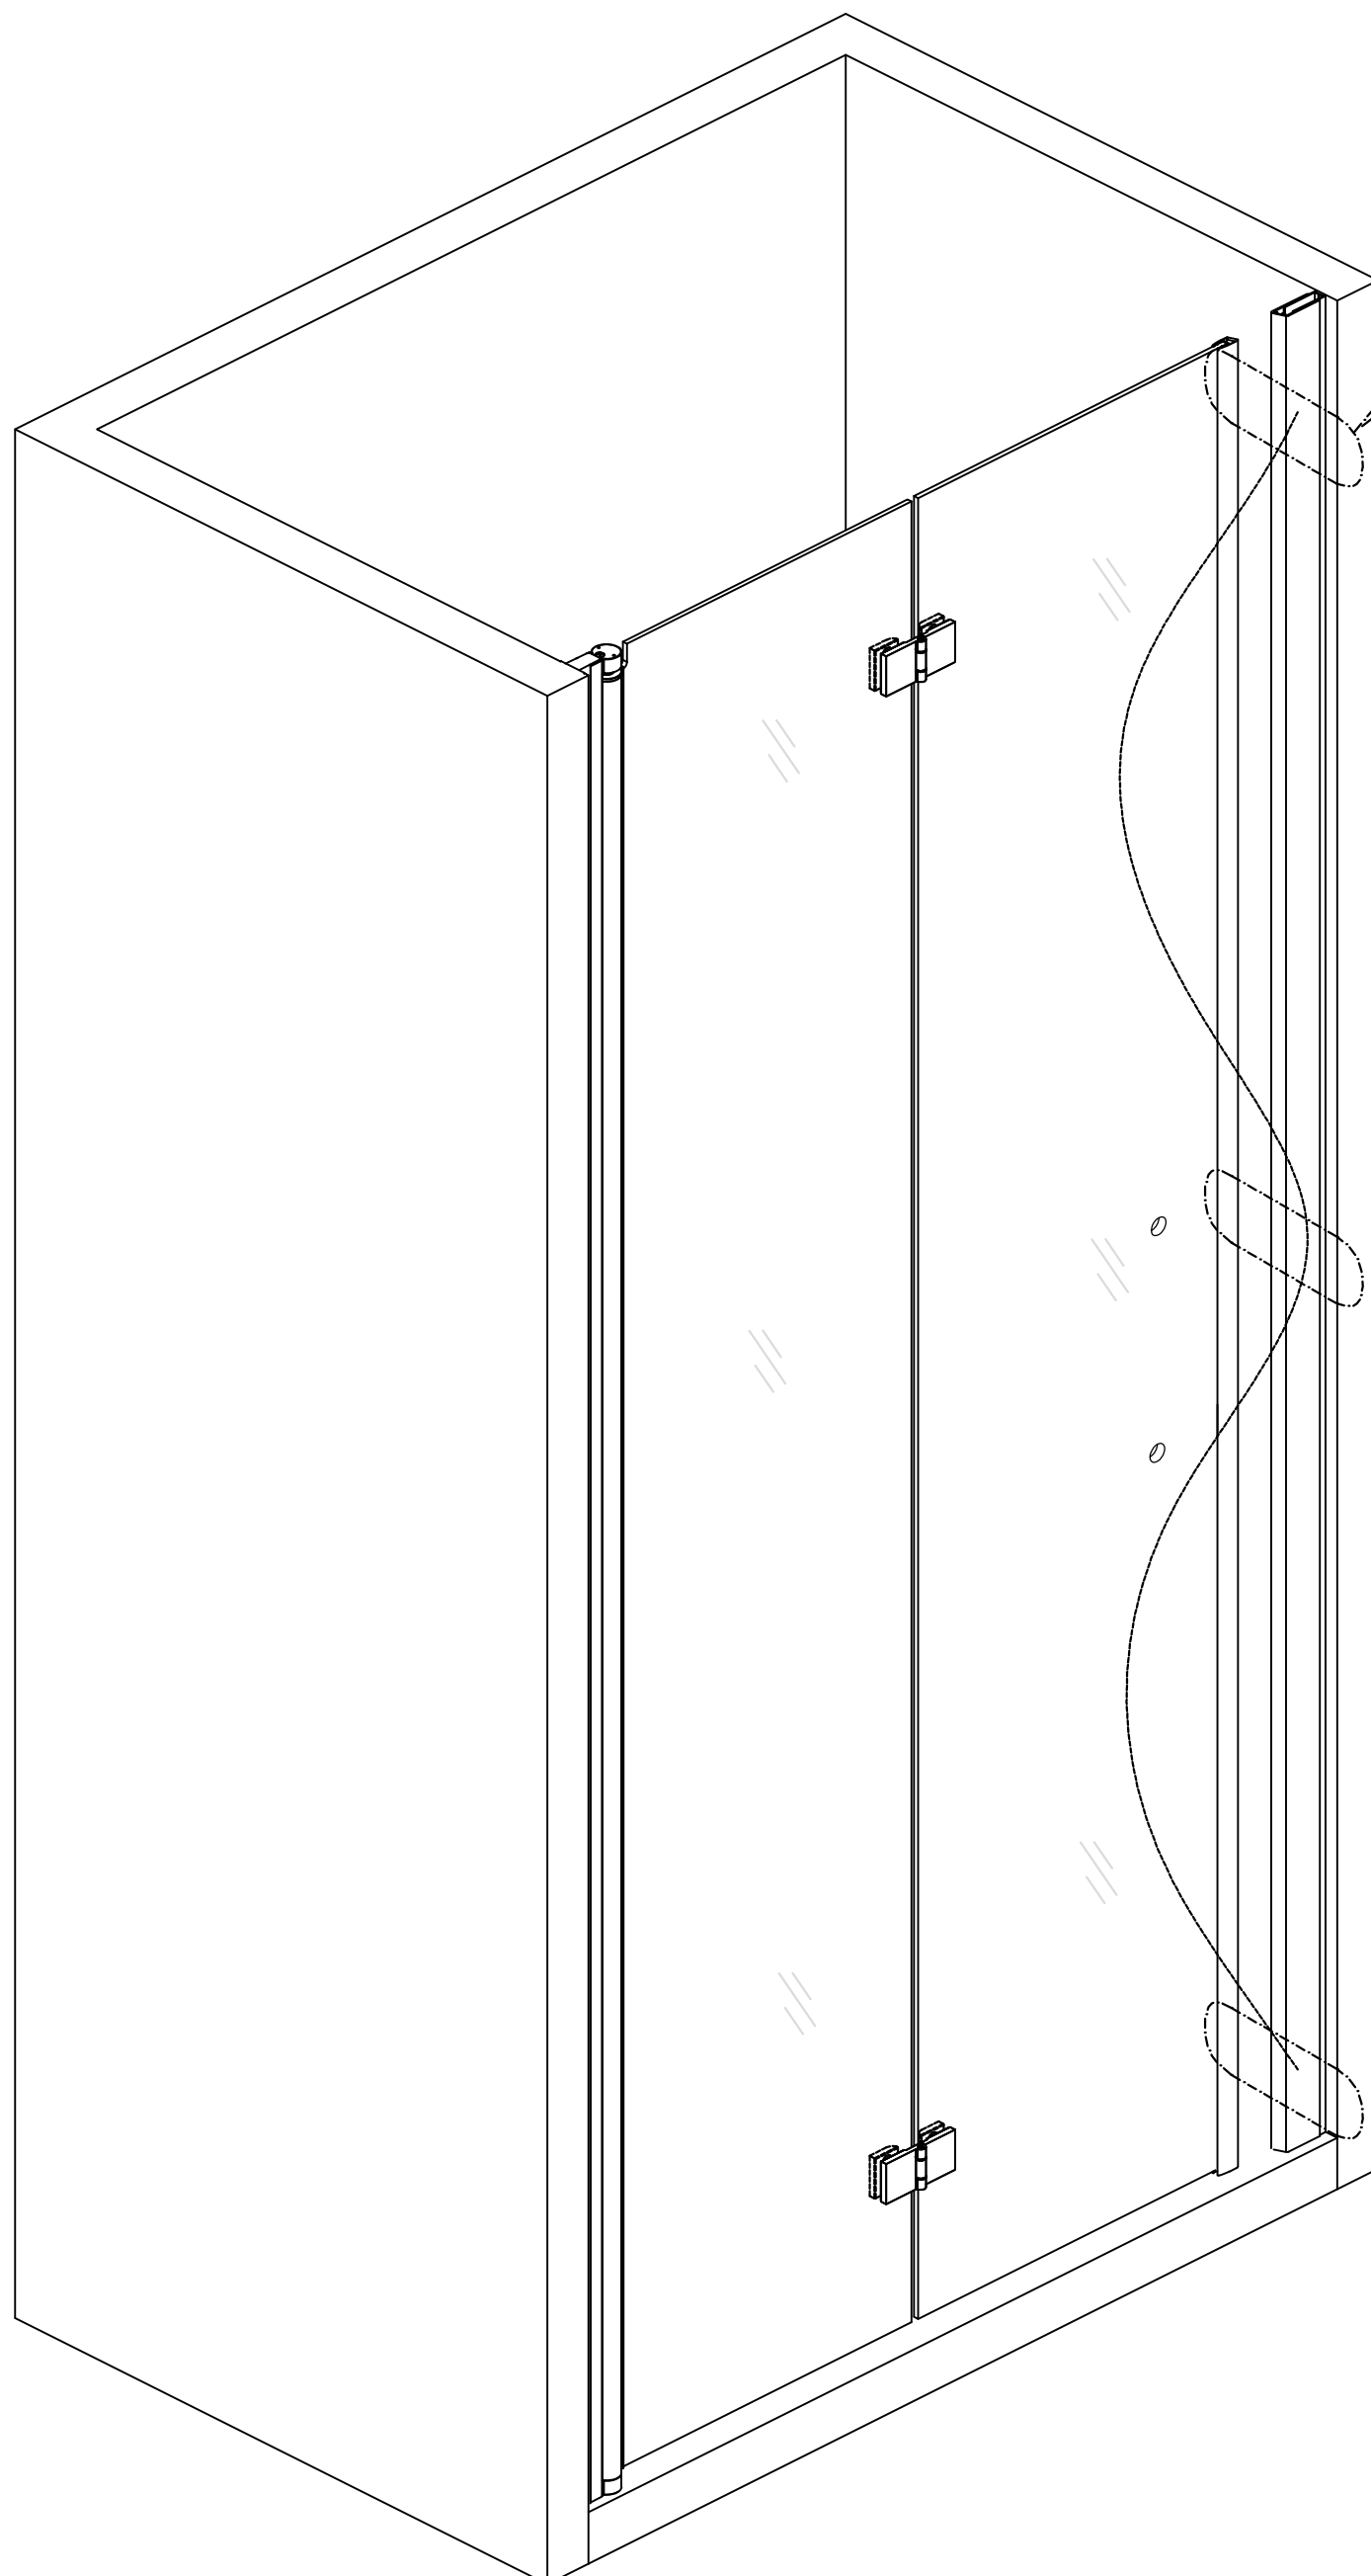


NOTE

- If a Stud is present behind the wall:
drill a Ø3/16" (4mm) hole up to the stud,
drill an Ø1/8" (3mm) pilot hole into the stud and
use the ST4.0 x 30mm Pan Head Screws (bb)
OR
- If No Stud is present behind the wall:
drill a Ø1/4" (6mm) hole and insert the Wall Anchors (aa)
and use the ST4.0 x 30mm Pan Head Screws (bb).


8

Magnetic Seal Wall Jamb Installation

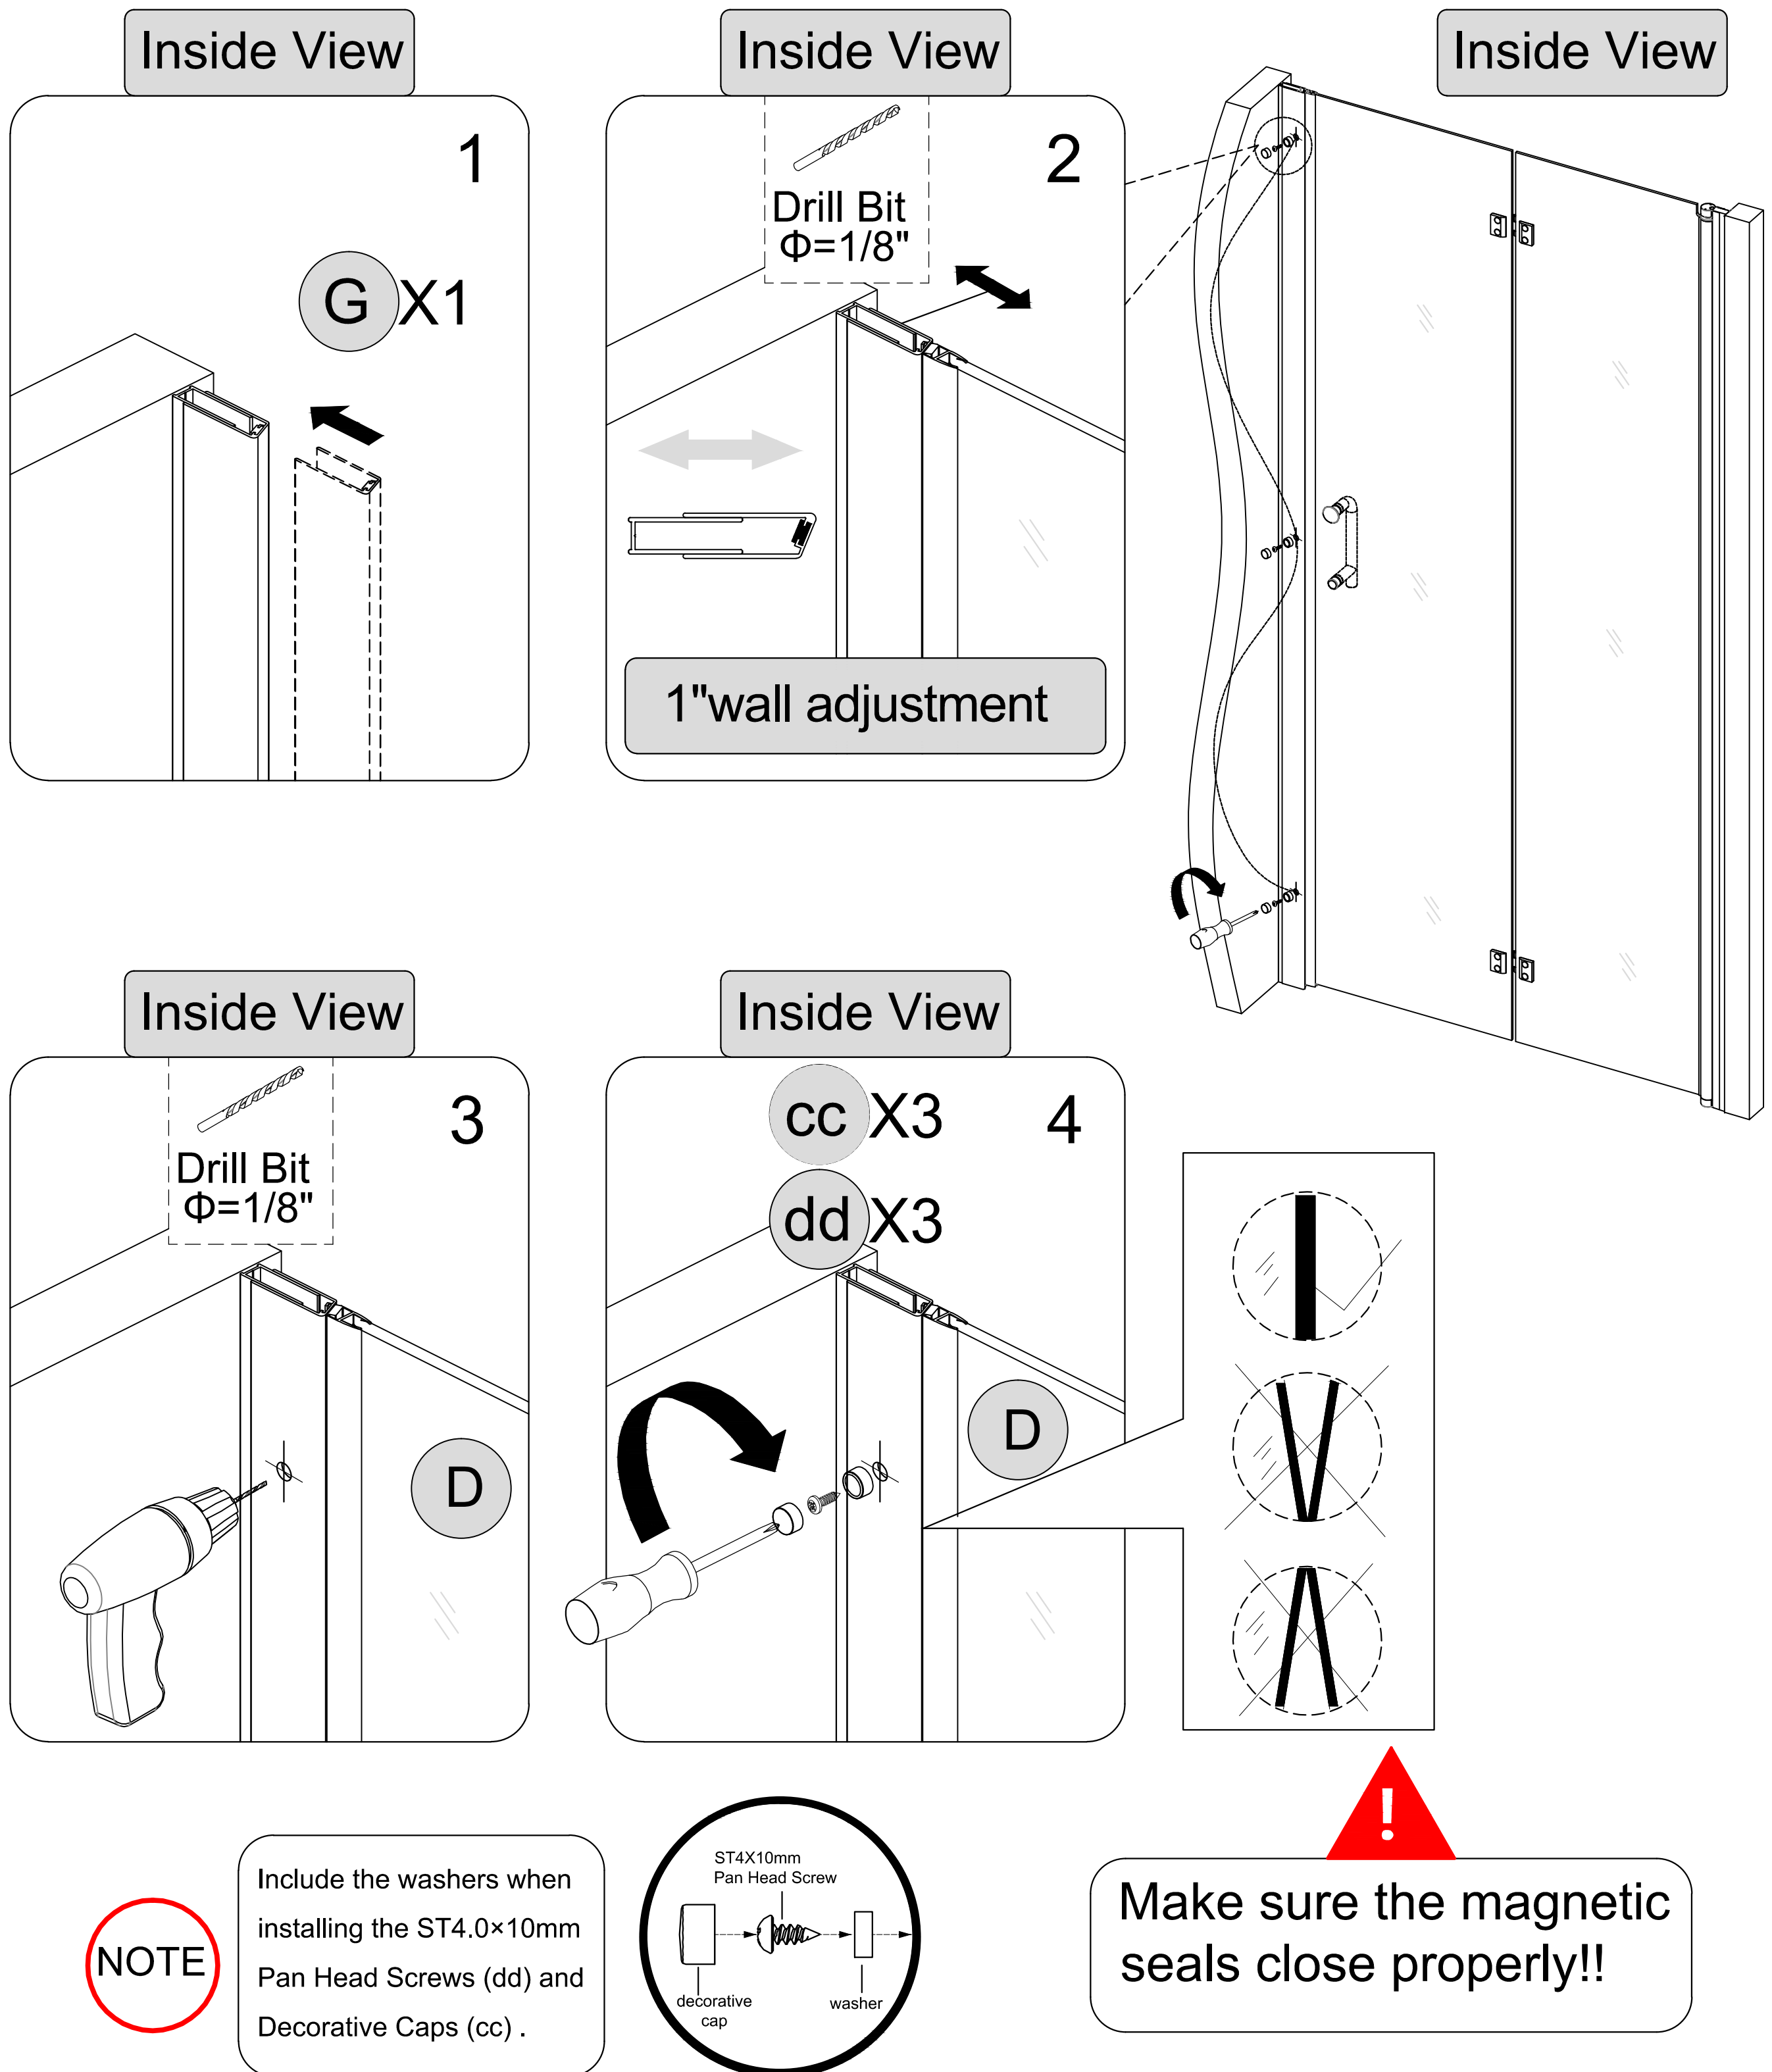


9

handle Installation

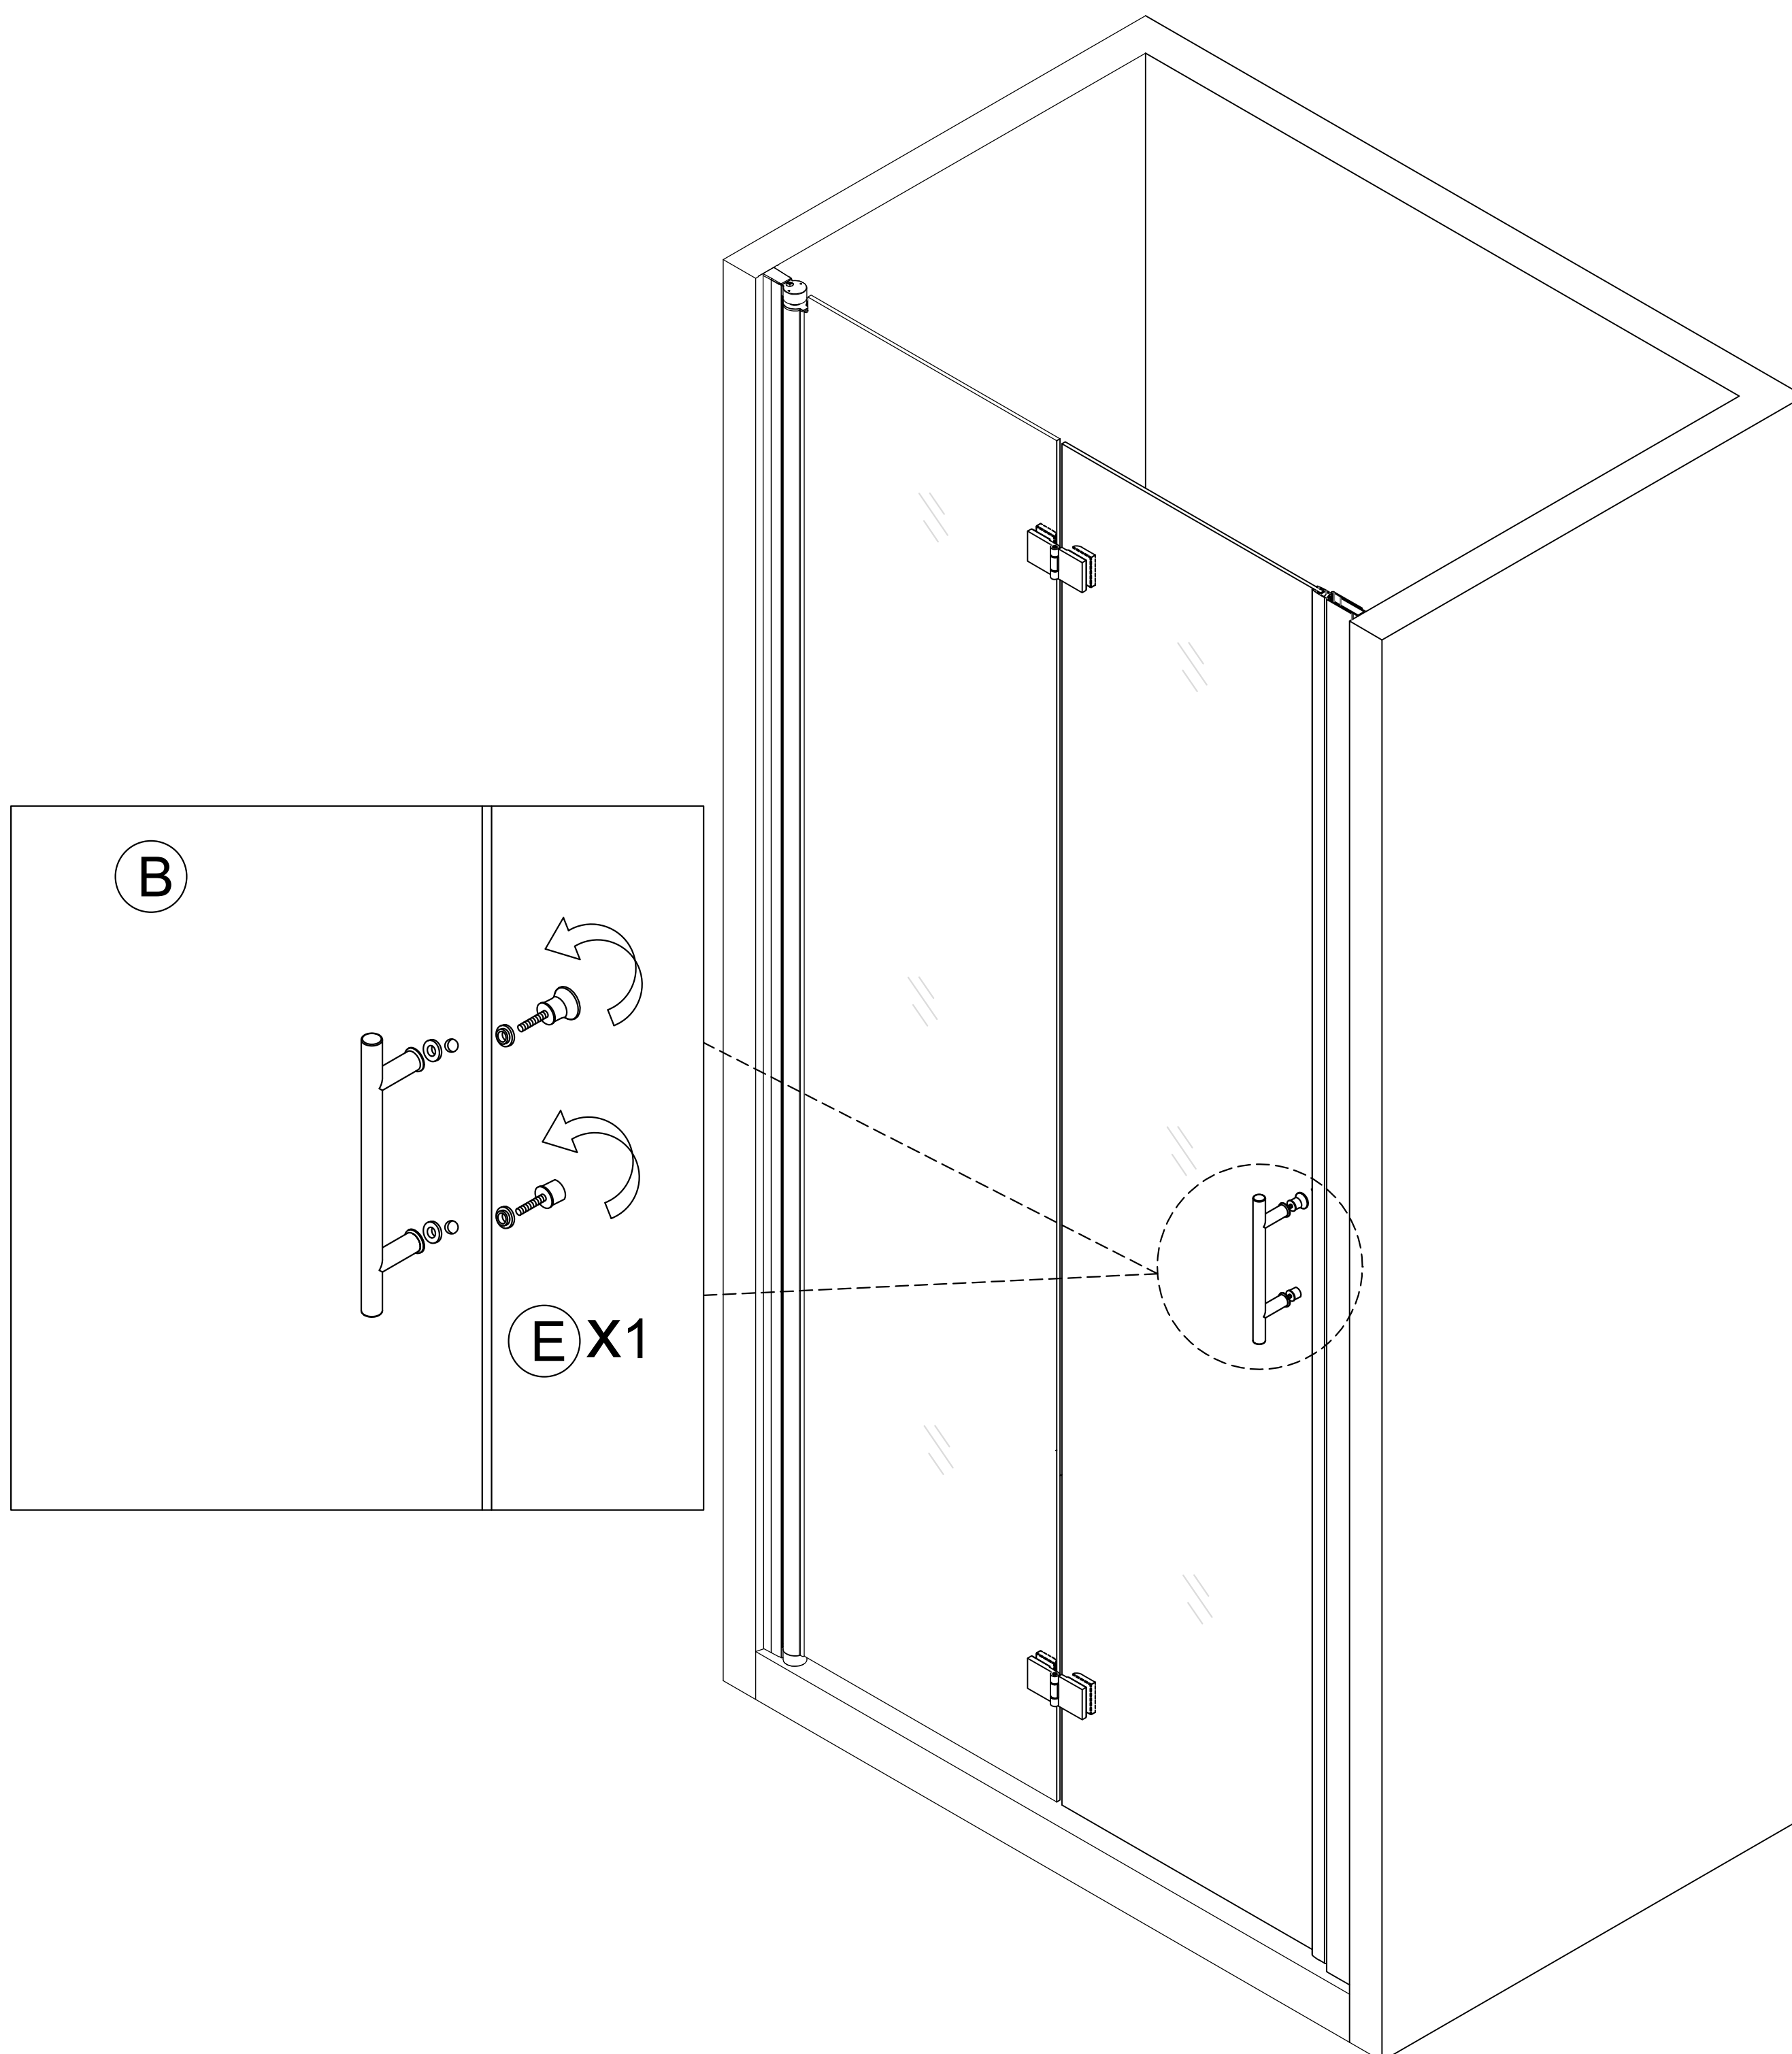

10 Top Cover Cap & Vertical Gasket Installation

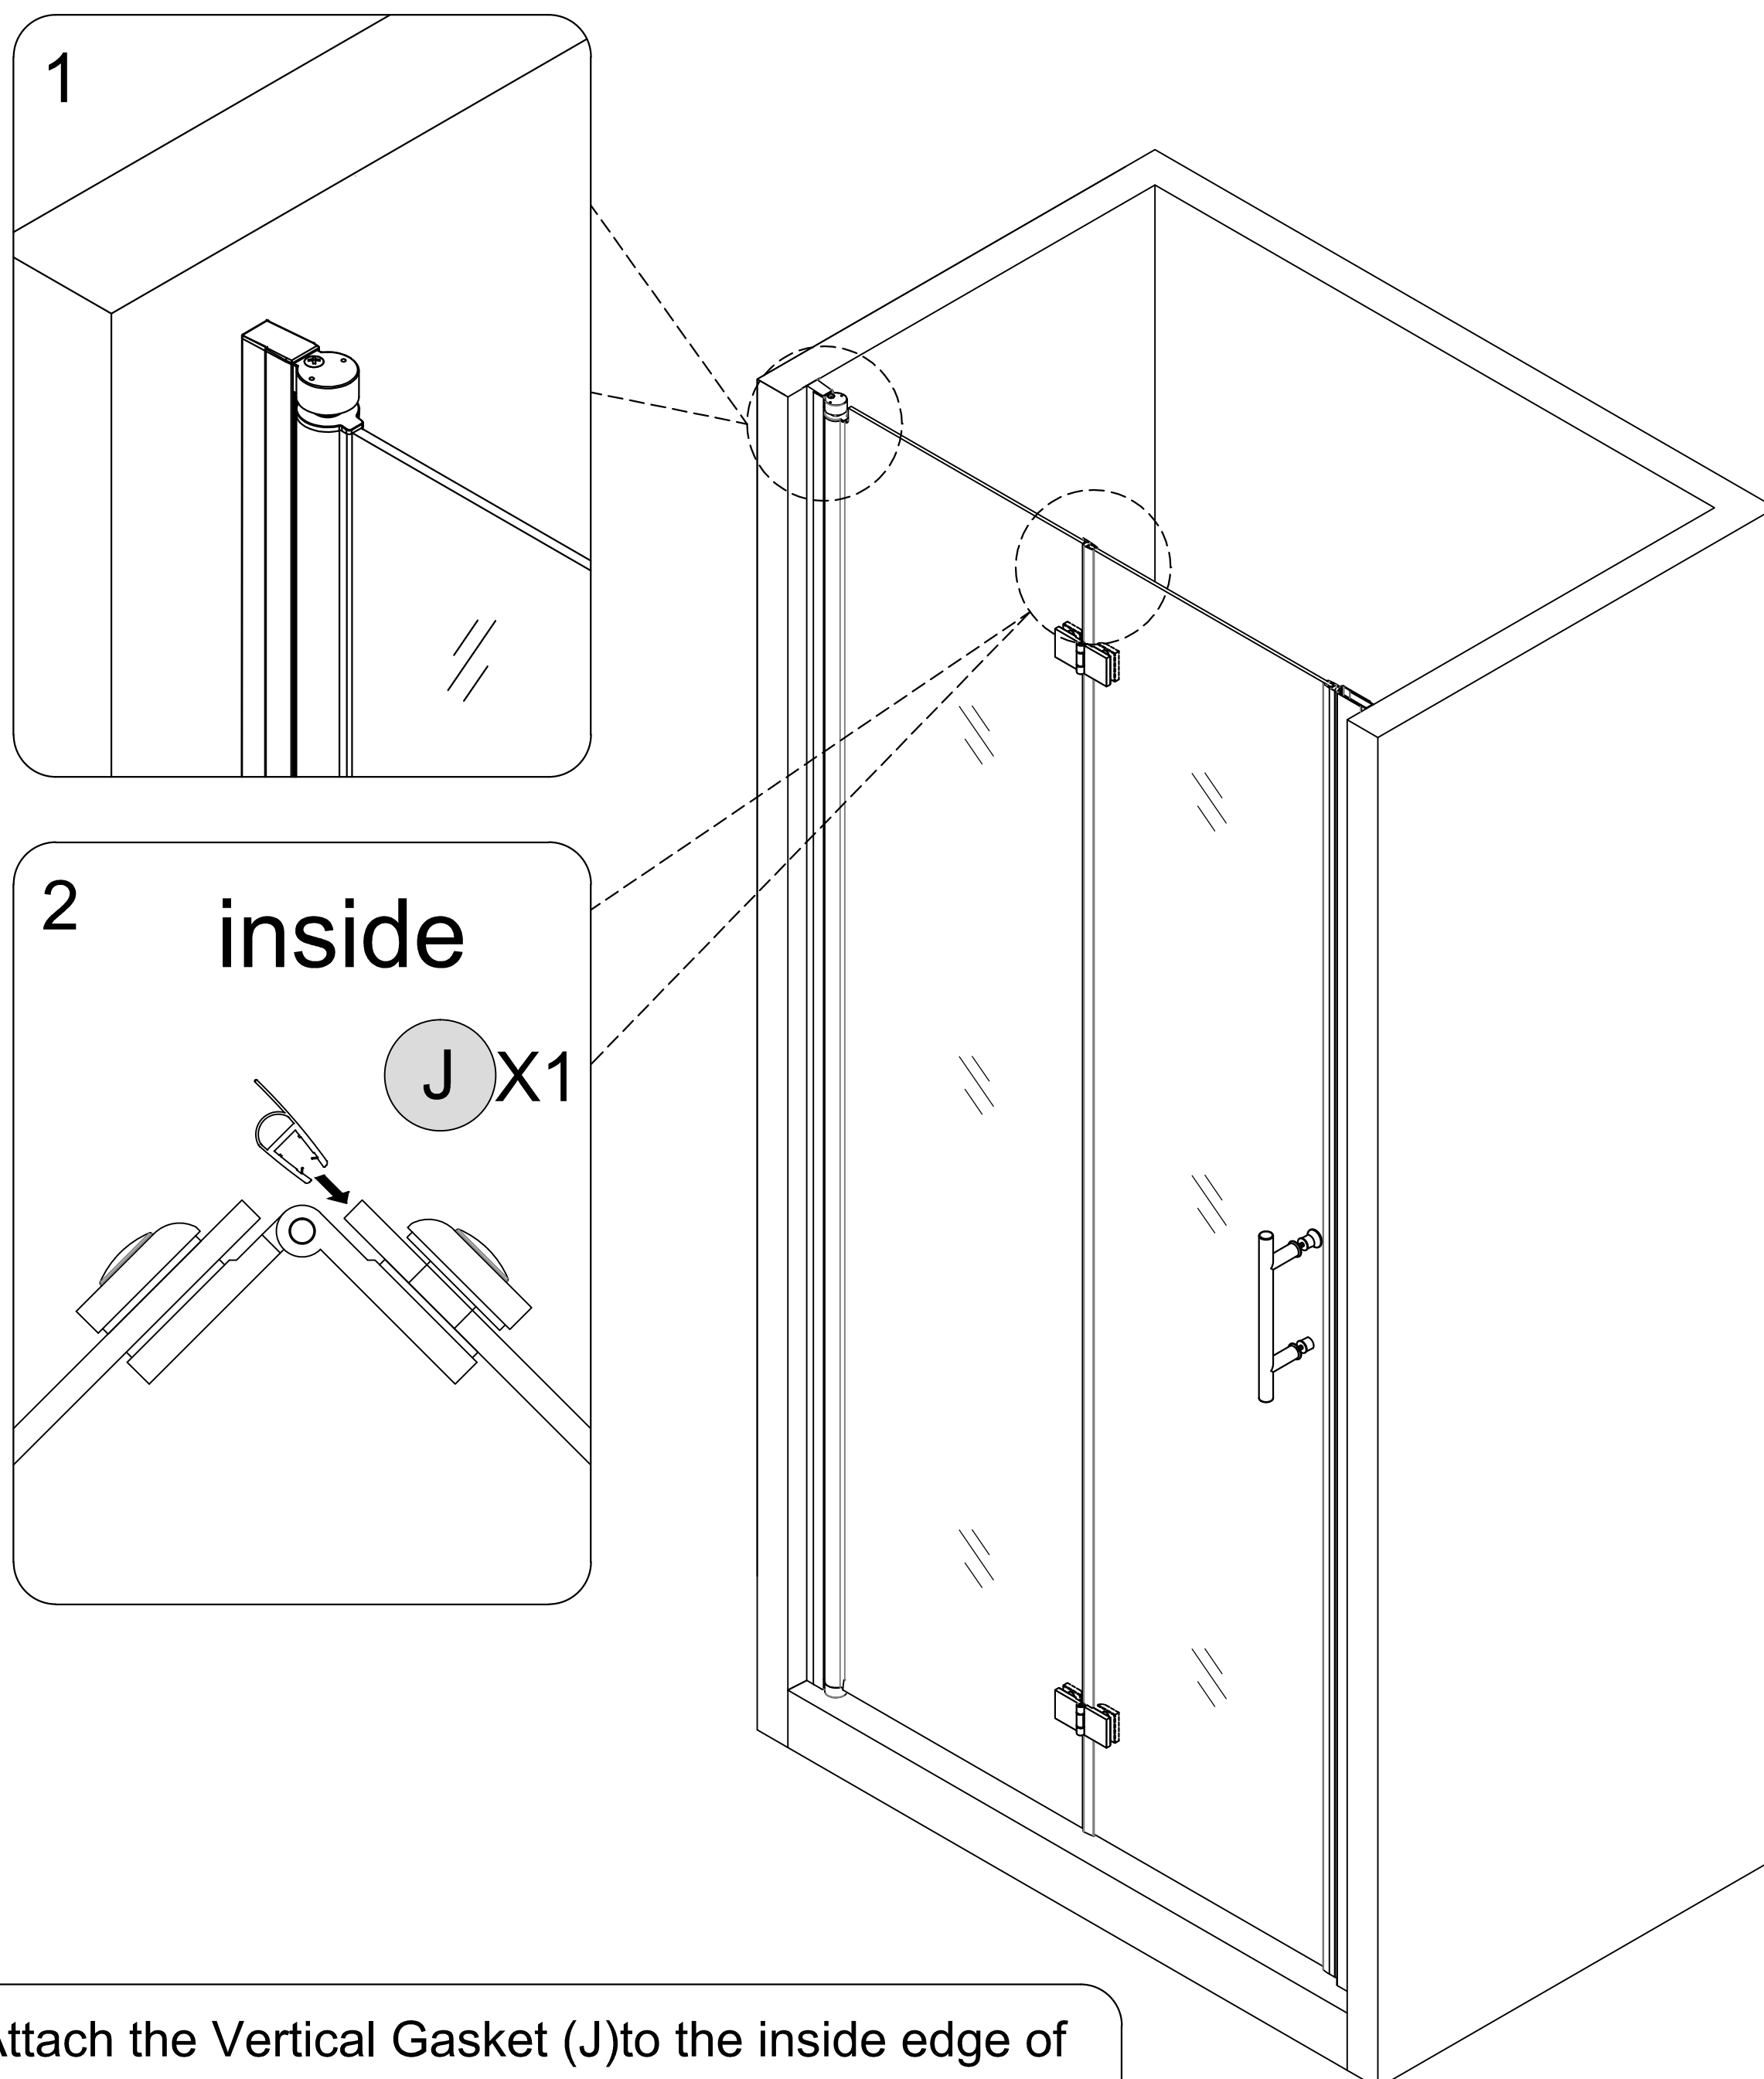

NOTE

Attach the Vertical Gasket (J) to the inside edge of the Door Glass that is on the same side as the shower head so that the flexible fin is pointing away from the water source.


11

Bottom Gasket Installation



NOTE

1

Measure "X" and cut the Bottom Gasket same length as "X".

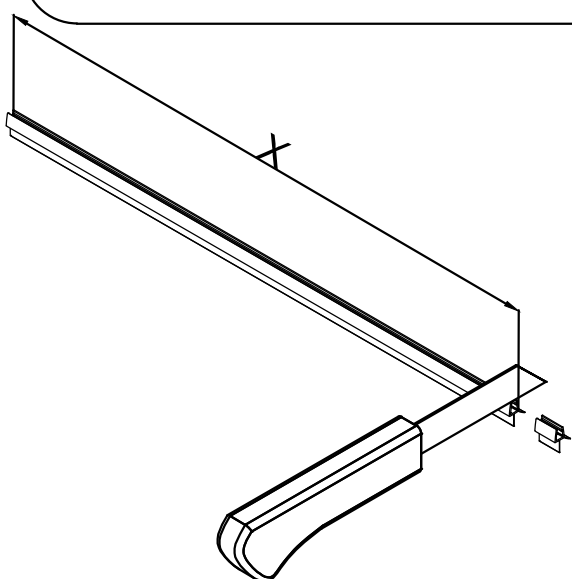

2

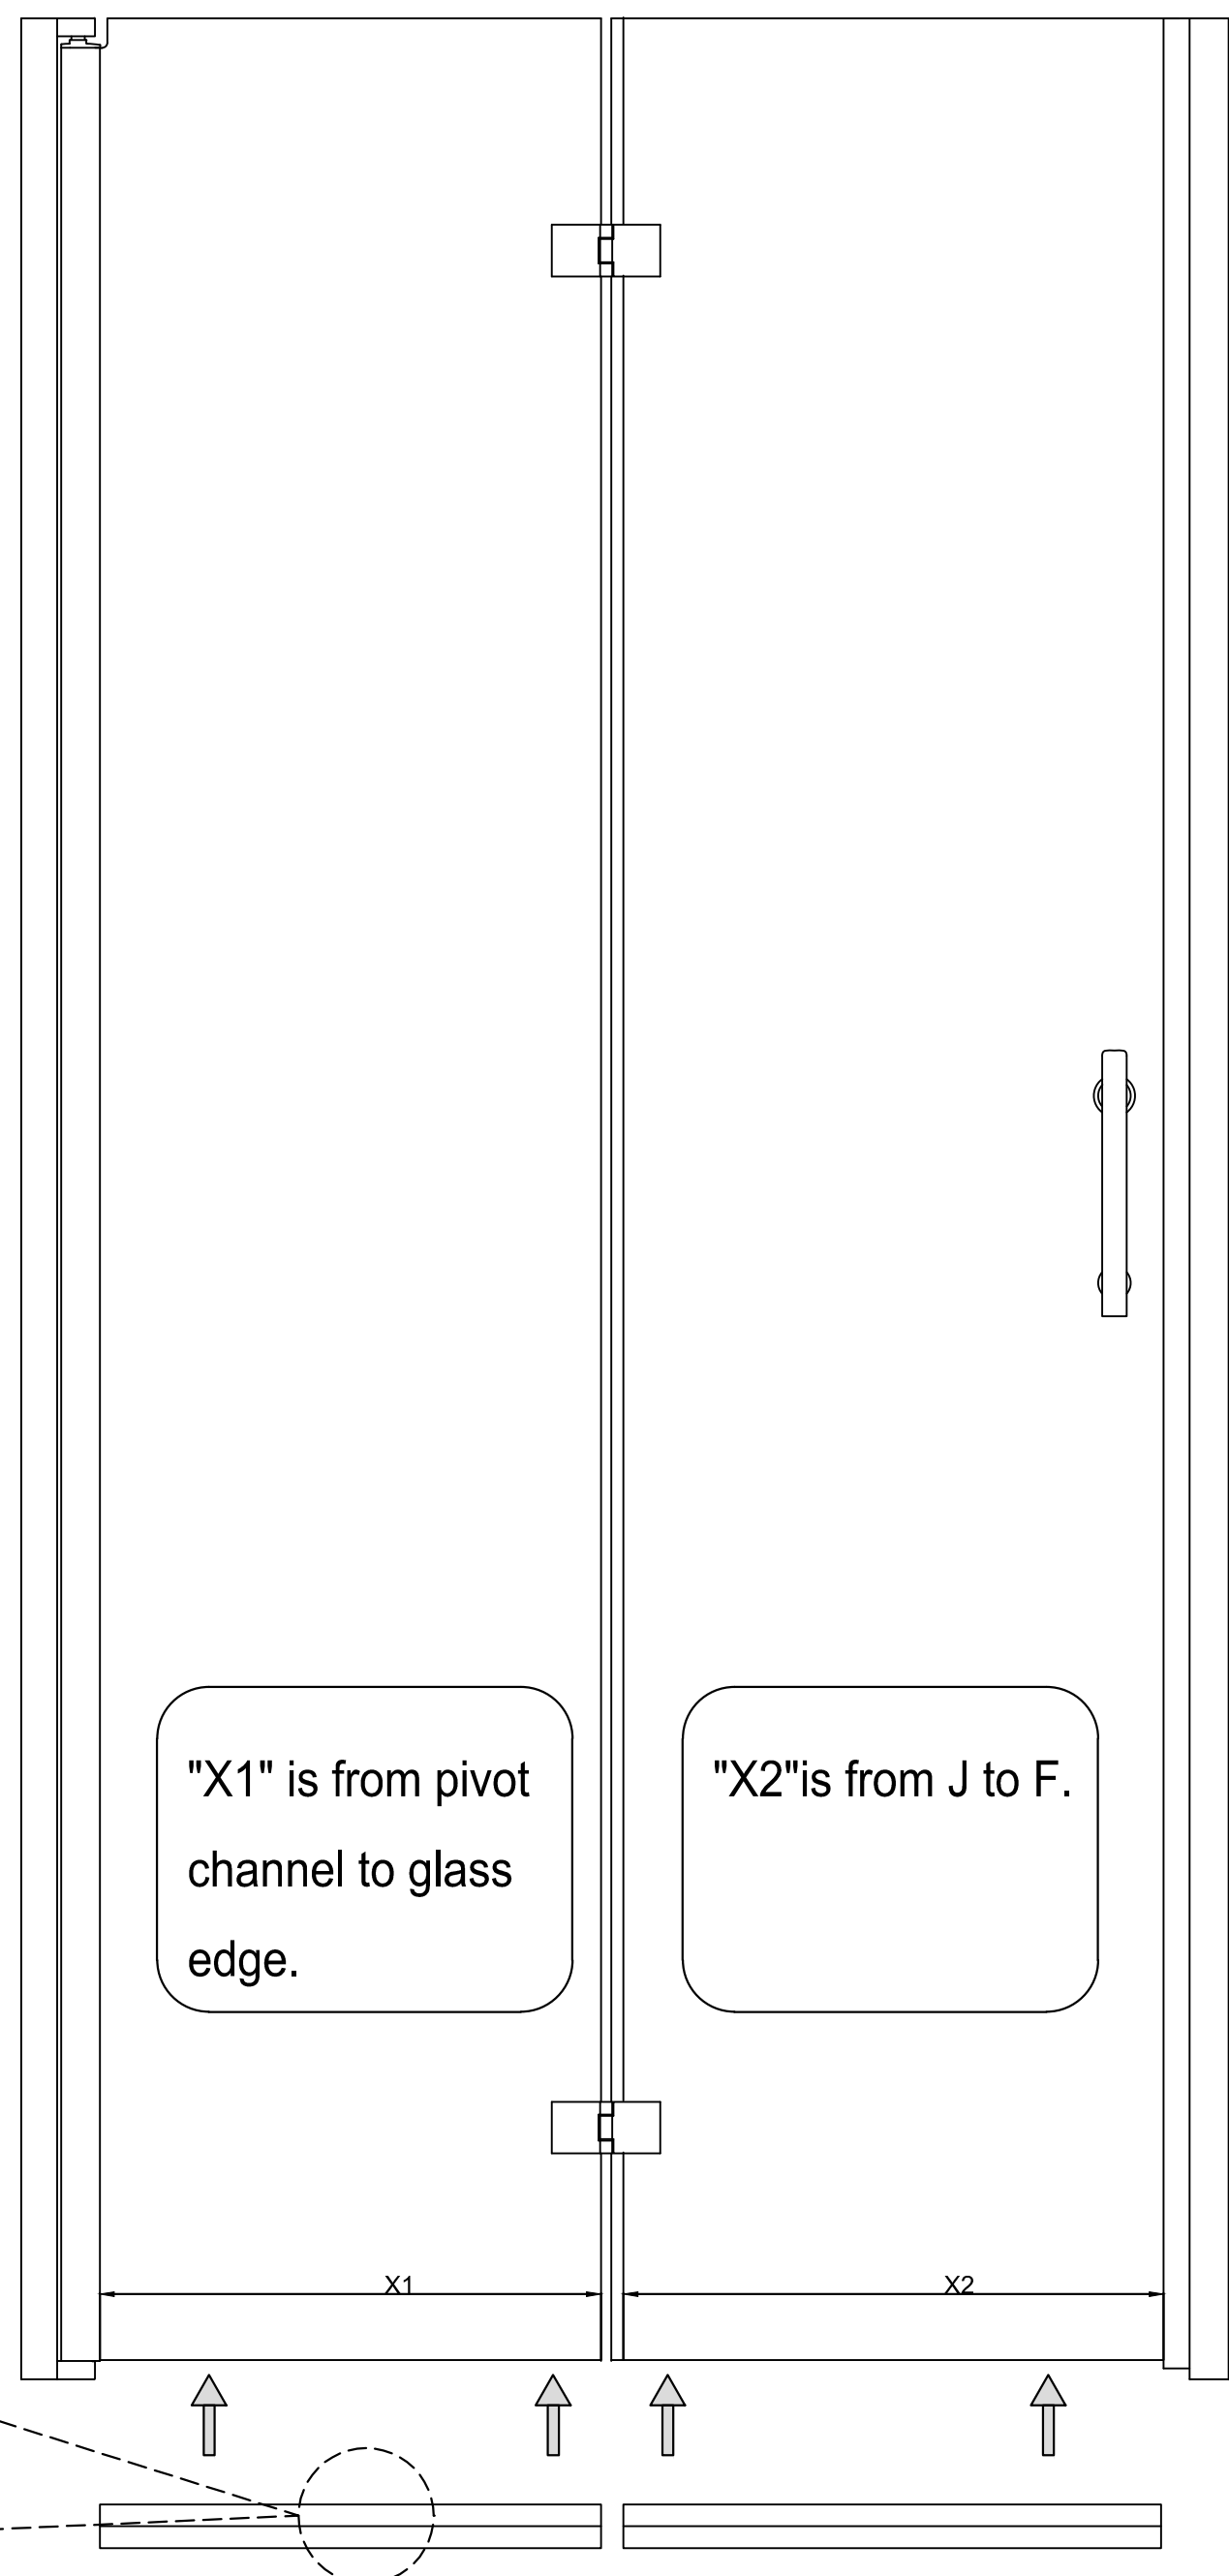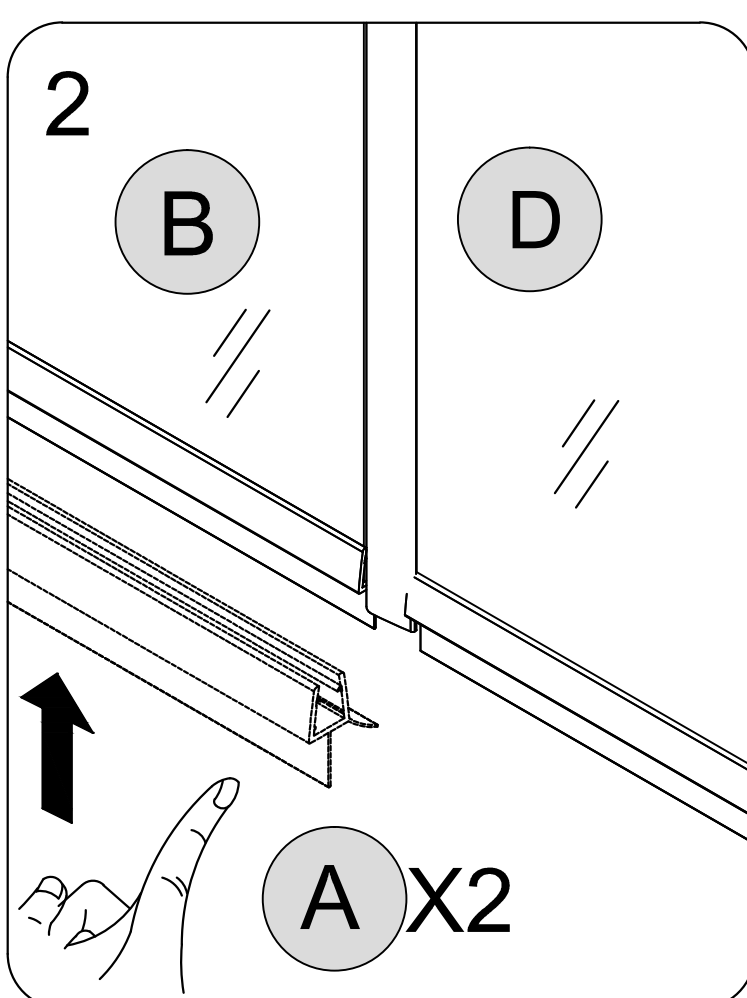

"X1" is from pivot channel to glass edge.

"X2" is from J to F.





12 Alu.Threshold Installation

NOTE

Measuer "X" and cut the alu threshlod same length as "(X-1/16inch)".

NOTE

"X" wall to wall width.

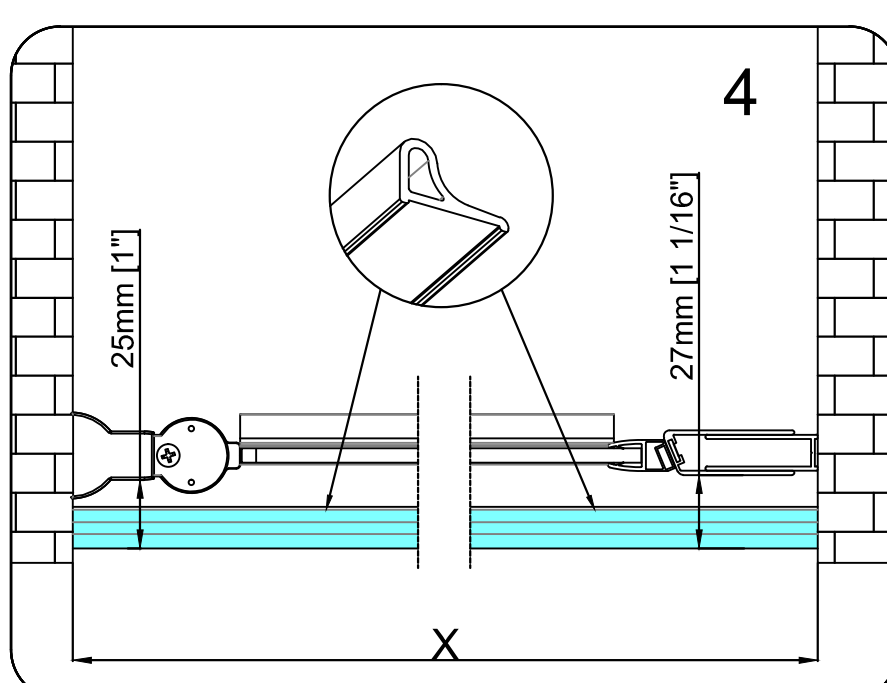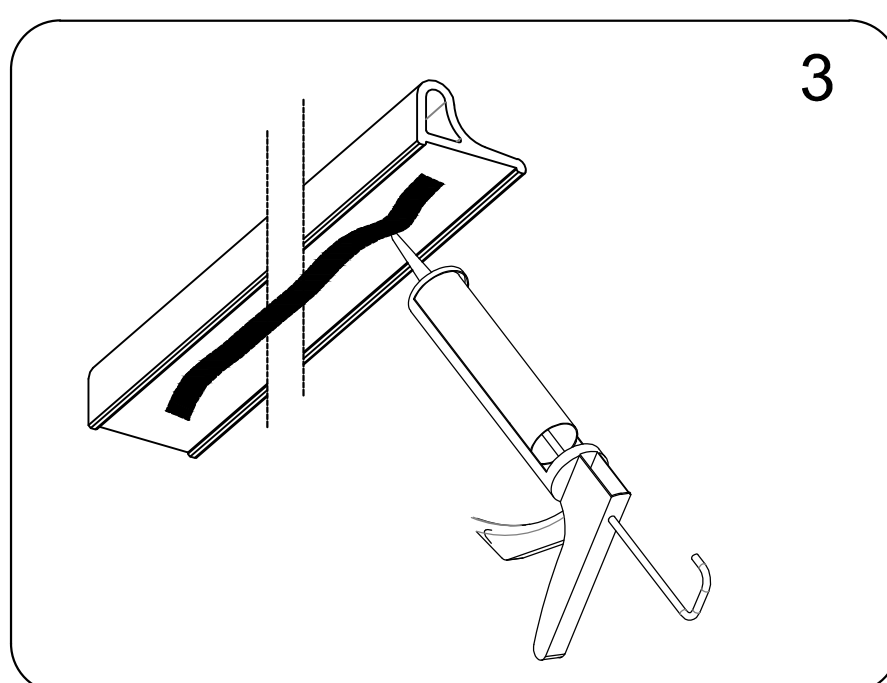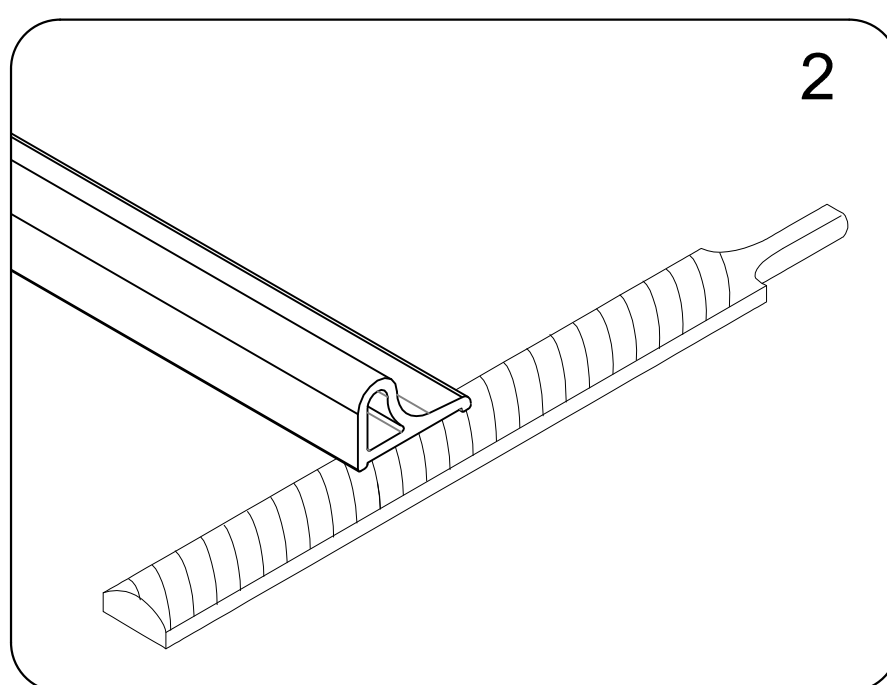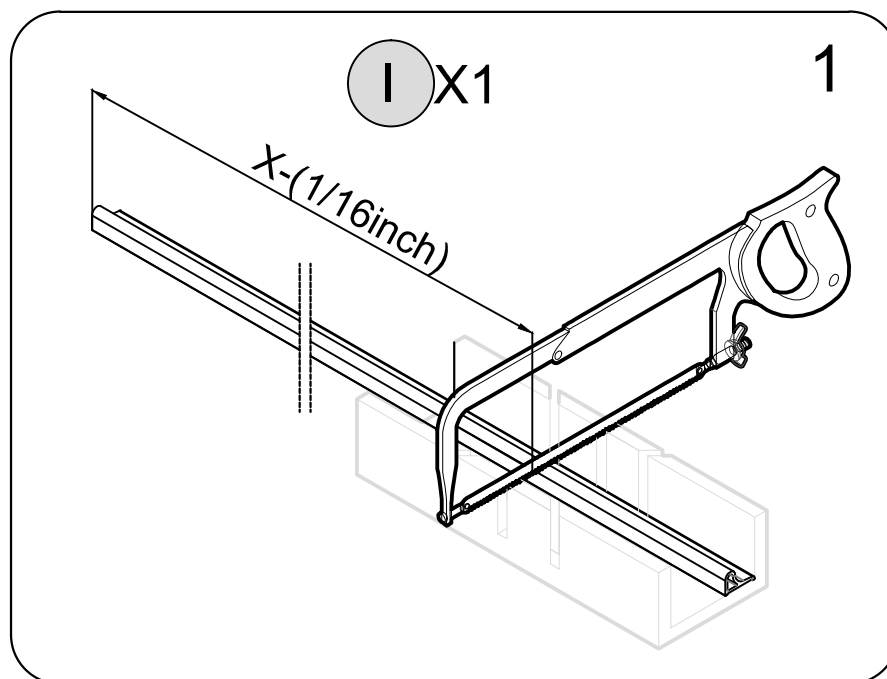

NOTE

The large curved lip of the dam strip is intended to face toward the outside of the shower to ensure the flow of water is redirected towards the drain.

13 SEALING





The surfaces need to be clean and free of debris before applying silicone.





Ensure that the Shower door closes tightly and opens smoothly.
Apply a good quality silicone sealant along the wall Jamb(C)&(H)and Water seal (I) .



Allow 24 hours for the silicone to cure before using the shower.

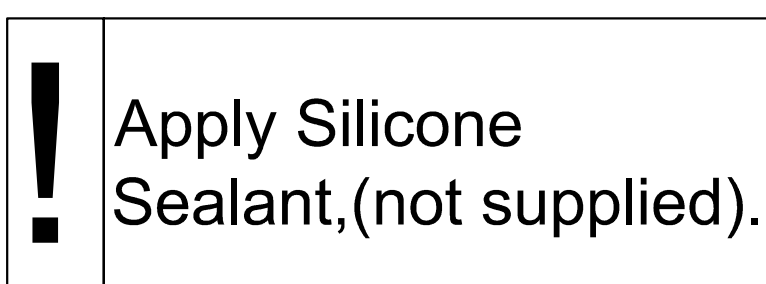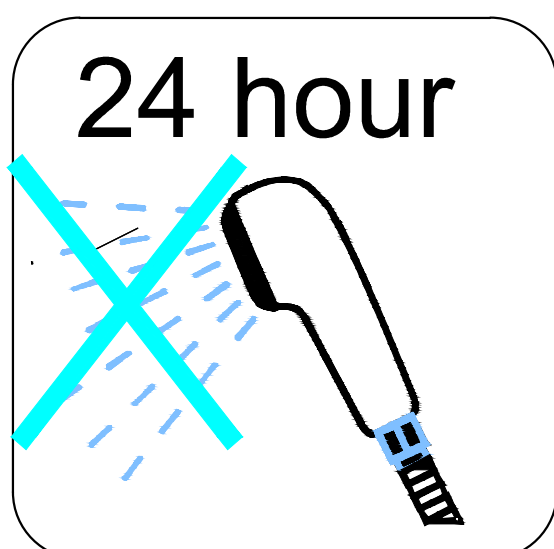

Apply Silicone Sealant,(not supplied).

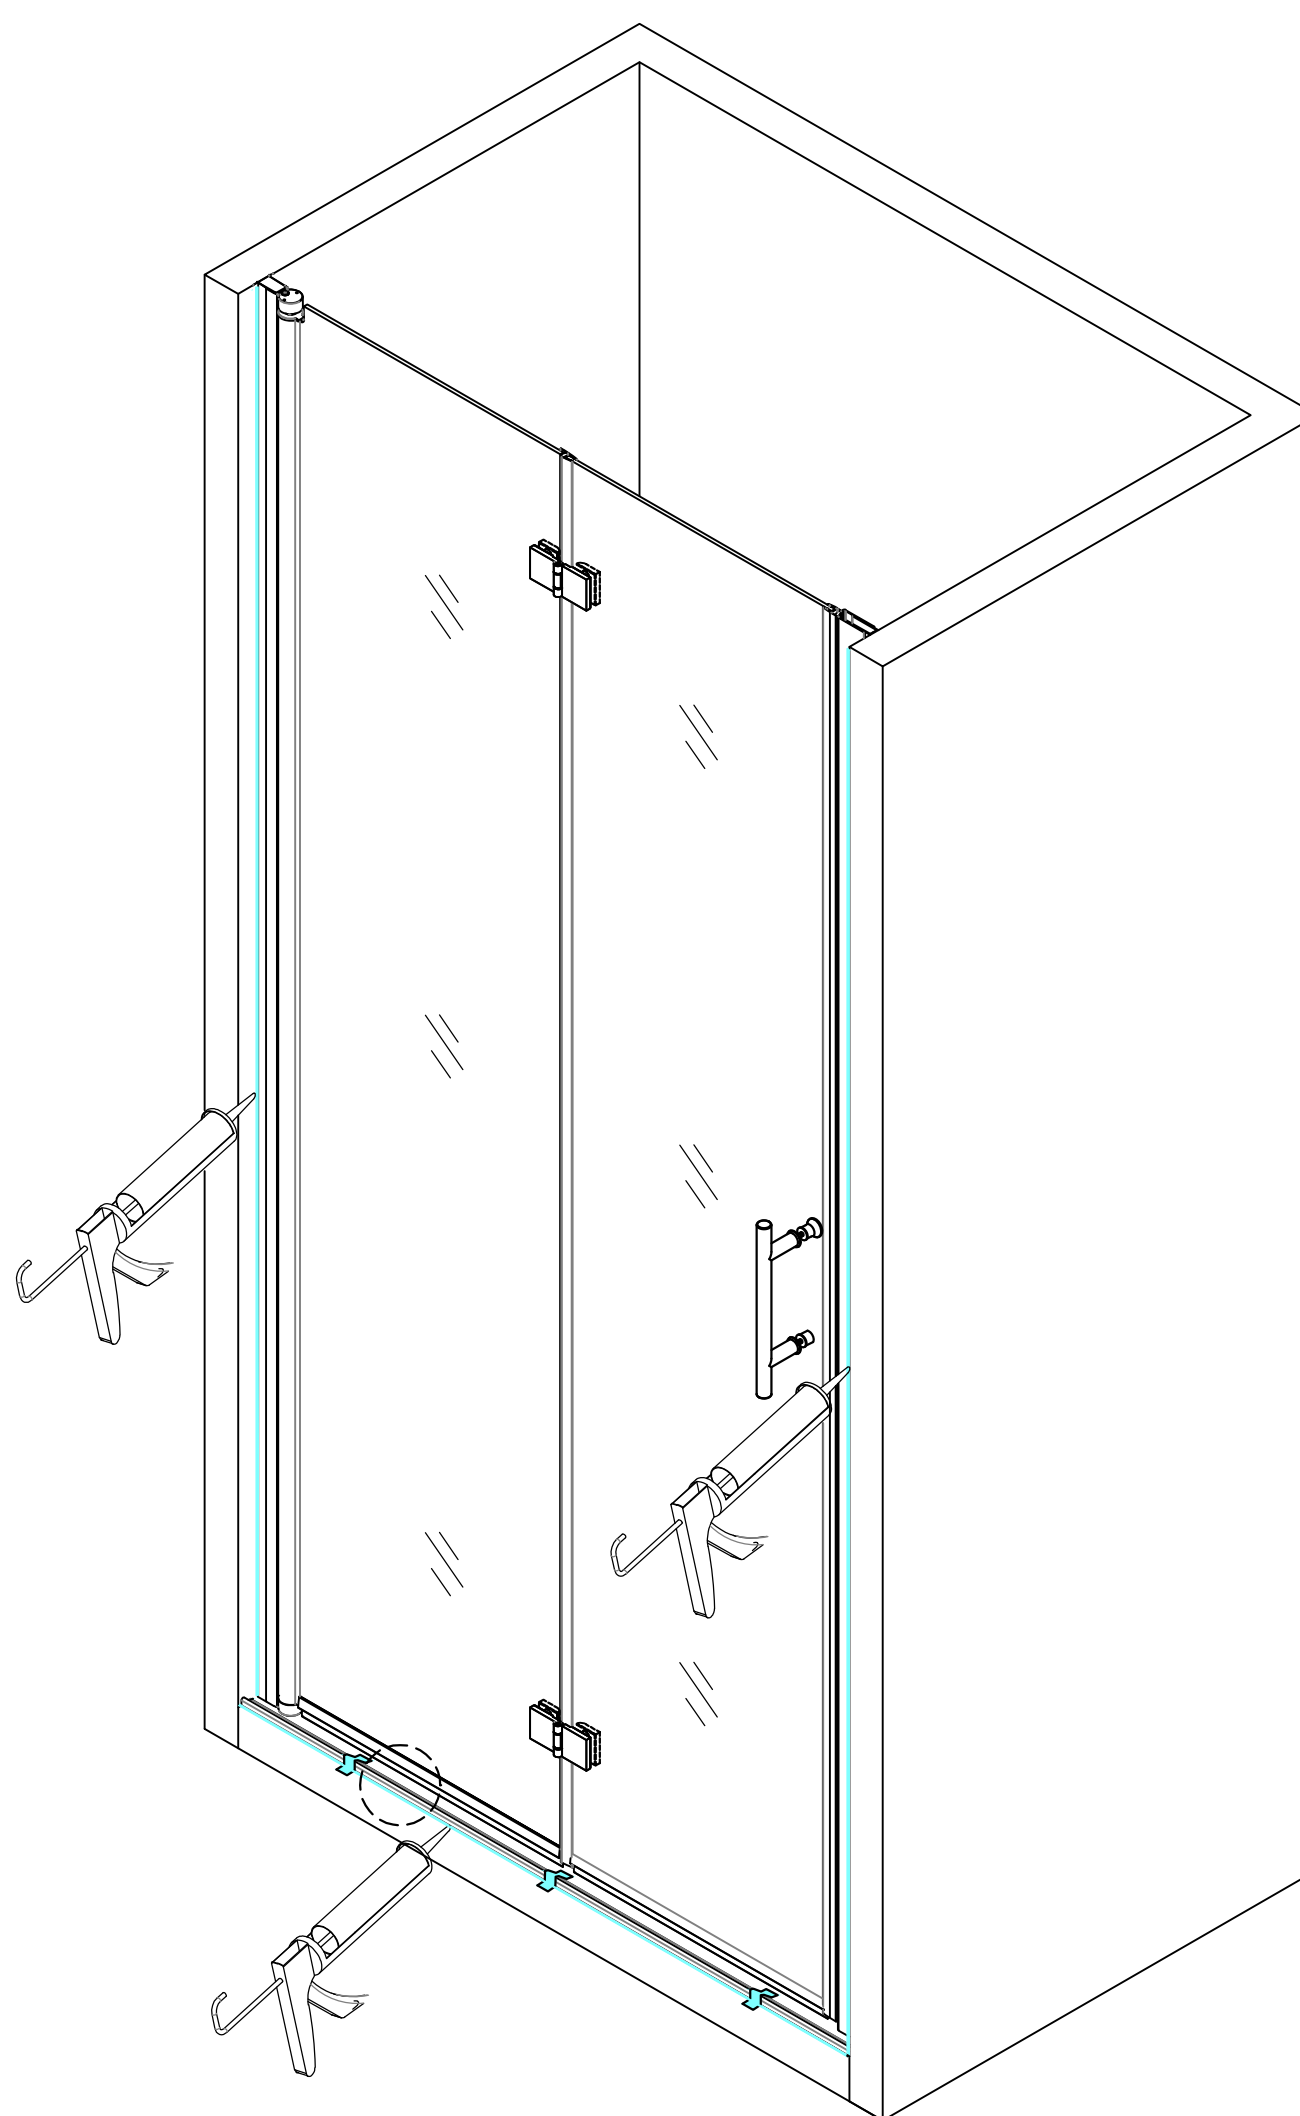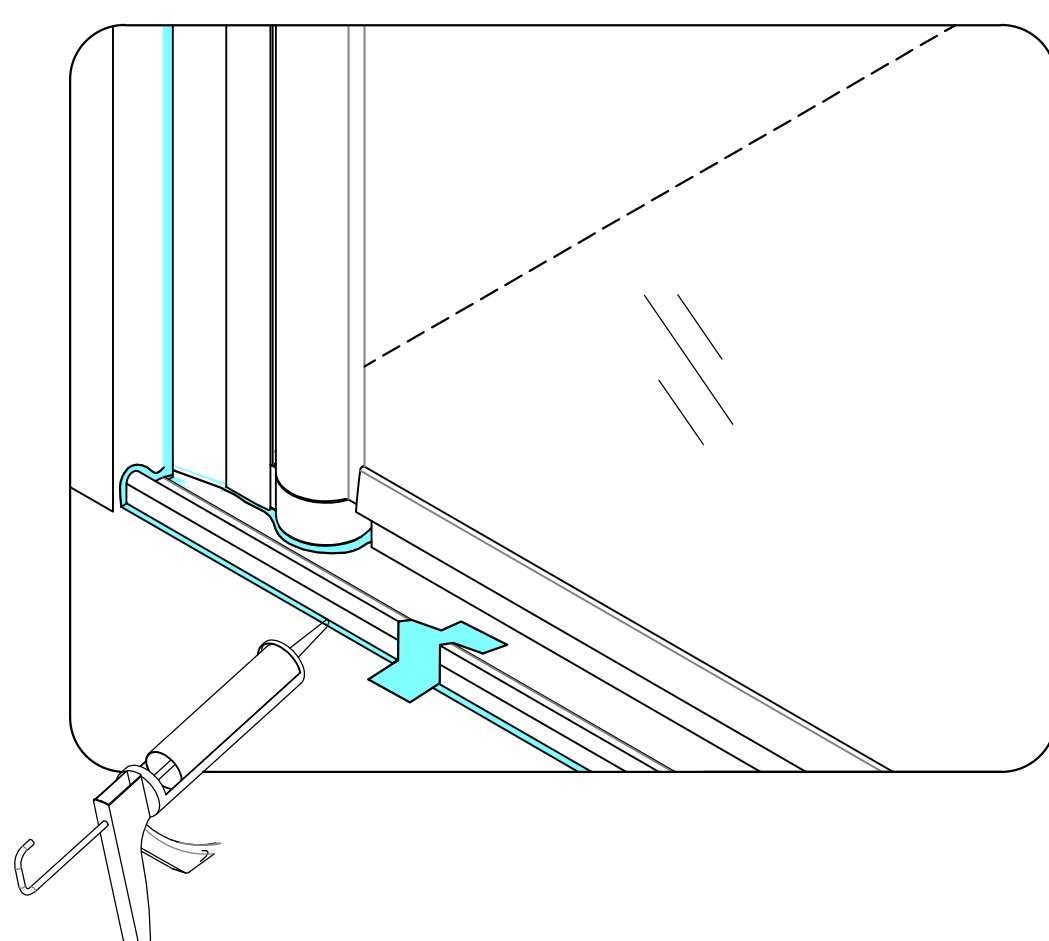

This troubleshooting guide is for general aid only. For service and installation issues or concerns, please contact us by email servicefast1@outlook.com

Troubleshooting		
Problem/Symptom	Suggested Solution	Page(s)
Missing parts	*Check all shipping/packaging material for missing parts/components. *If not found, please contact us by servicefast1@outlook.com for replacement.	2.3
Door is not operaing smoothly	*Check the magentic seal (F)and pvc seal (J) for proper trimming and installation. *Confirm the Hinge (K)Assemblies are tightly secured to the Door Glass(B&L). * Confirm the sweep seal (A) is tightly secured to the bottom of Door Glass * Confirm the hinge side pvc seal is correctly notched around the Bottom sweep seal.	9-19
Water leakage	*Check all the pvc seals for proper trimming and installation. *Check the alu. threshold installed properly and secured with silicone.	19-21
Handle rattles during operation	*Confirm the pvc gaskets are present and the handle is tightly secured to the glass.	17

SHOWER DOOR MAINTENANCE MANUAL

Cleaning:

1. When cleaning the frame, glass and hardware accessories of the shower door, please use a soft cloth. If there is slight dirt, please use a soft cloth or sponge dipped in "neutral detergent" for cleaning. After removing the stubborn dirt, please rinse with plenty of water to prevent the cleaning agent from remaining on the surface of the shower door and causing corrosion damage.
2. When using the special detergent and cleaning agent for bathroom, please be sure to use it correctly according to the precautions described in the detergent. Incorrect use will cause the product to have some bad conditions, such as paint peeling, color fading, rust, tarnishing, etc.
3. Do not use the following items for cleaning: acid, alkaline solvents, medicines (such as hydrochloric acid), solvents containing bleach, acetone diluent, detergent powder, toilet cleaner, etc, otherwise the product will be damaged. There are some bad conditions, such as paint peeling, discoloration, rust, tarnishing, etc.
4. The cleaning items that can be used for the product are: soft cloth, toothbrush, neutral detergent, a mixture of diluted vinegar and salt. Note: any cleaning agent will have a certain impact on the surface of the product, so use caution. Rinse with clean water in time to prevent damage to the surface caused by the residual detergent.

How to use and maintain the pulley of the shower door:

1. Avoid hitting the movable door with force, so as not to cause the movable door to fall off.
2. Pay attention to regularly clean the slide rails, pulleys and sliders, and add lubricant (lubricating oil or lubricating wax).
3. Regularly adjust the fixing screws of the pulley to ensure the effective bearing and good sliding of the pulley on the movable door.

Maintenance of tempered glass:

1. Do not hit or hit the glass surface with sharp objects to avoid damage.
2. Do not wipe the glass surface with rough objects to avoid scratches.
3. After using for a period of time, the glass will remain dirt, remove the dirt on the glass. you can use a mixture of cool and salt to wash with a toothbrush, you can remove the stains. Pay attention to rinse with clean water in time after use.

THANK YOU FOR SHOPPING WITH US!



**PLEASE DO NOT RETURN TO STORE!
PLEASE CHECK ALL THE ACCESSORIES
BEFORE INSTALLATION.**

Tips: If there is any questions for the products, please feel free to contact us. We will solve it at the first time.

For quick and better to solve problem for you,
Required information is a MUST:

1. Where you buy
2. PO Number/Tracking number
3. SKU Number
4. Problem to Clarify
5. Picture/Video

BRING BETTER LIFE FOR YOU