



ASSEMBLY INSTRUCTIONS






FULL FENCE FLOOR BED

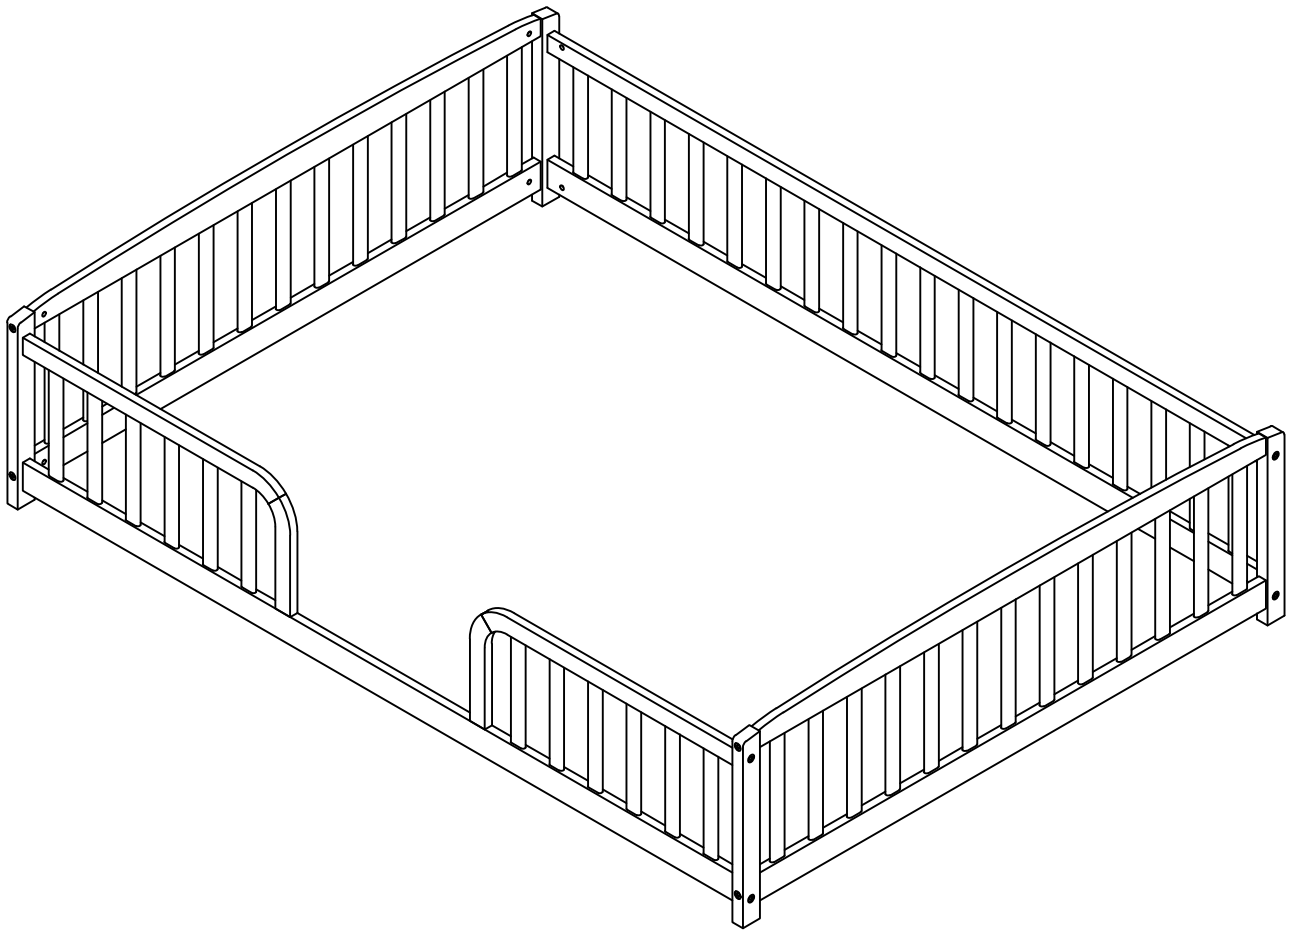

Detail View

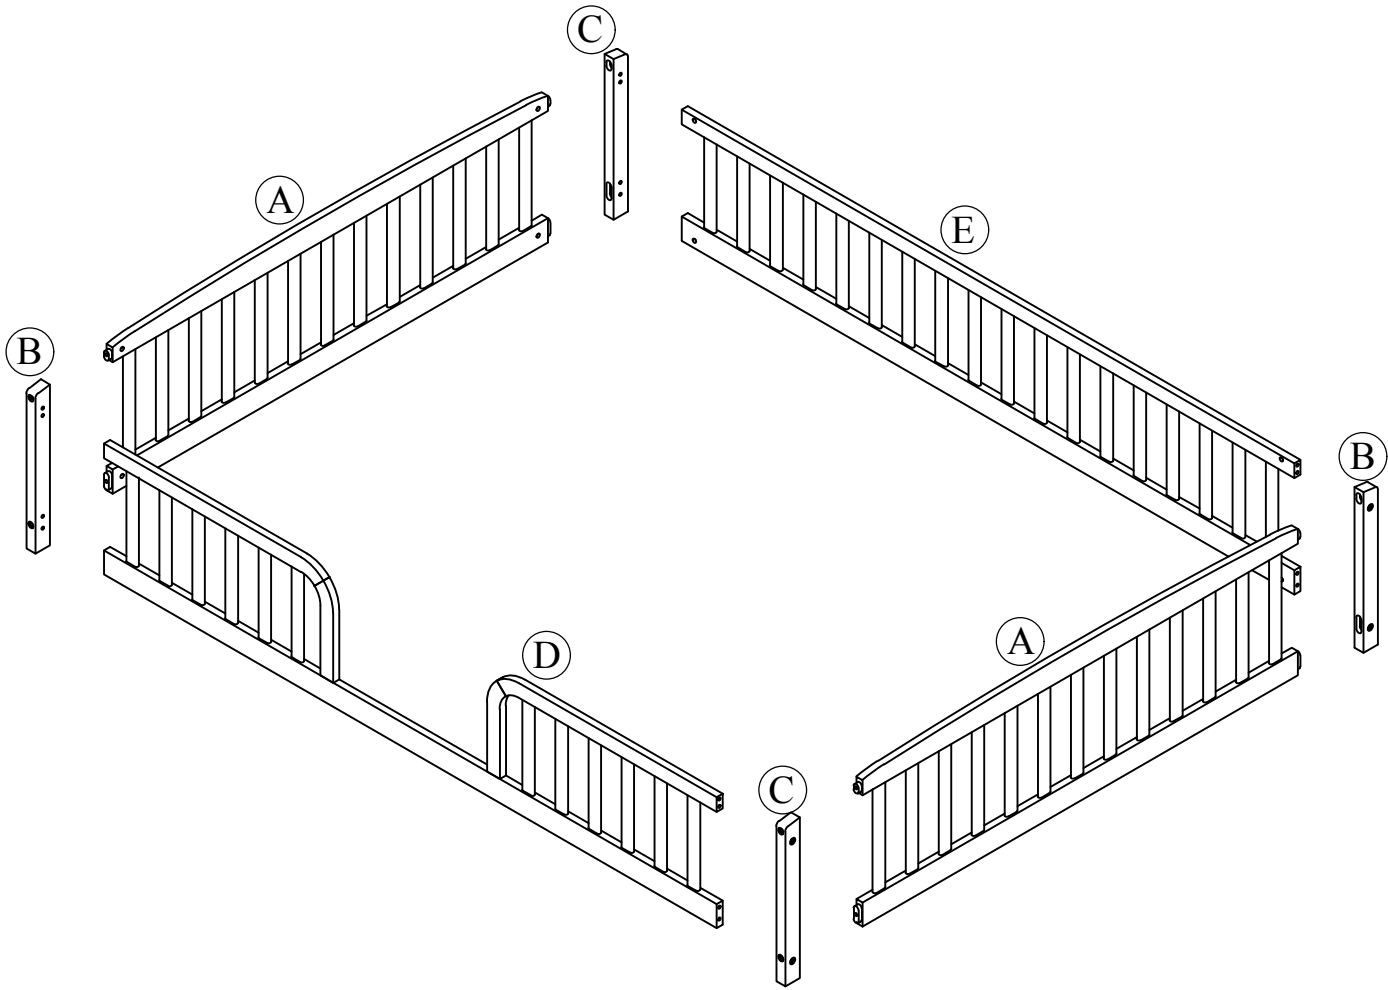


Part List

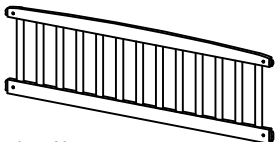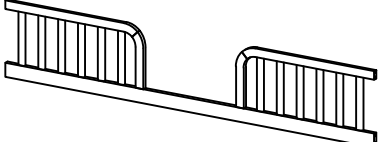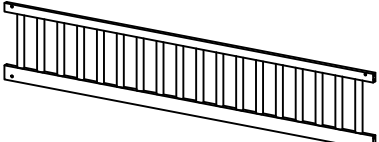A  Guard rail - 2pcs	B  Leg (Left)- 2pcs	C  Leg (Right)- 2pcs
D  Guard rail (Front) - 1pc	E  Guard rail (Back) - 1pc	

Hardware List

1  (Ø15) 1/4"*90 Hex-Head bolts (16pcs)	2  1/4"*15 (9.5mm) Horizontal-Hole bolts (16pcs)	3  Ø8*30mm Wood dowel (8pcs)
4  (1/4") 4*58mm Allen key (1pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDE)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

x2

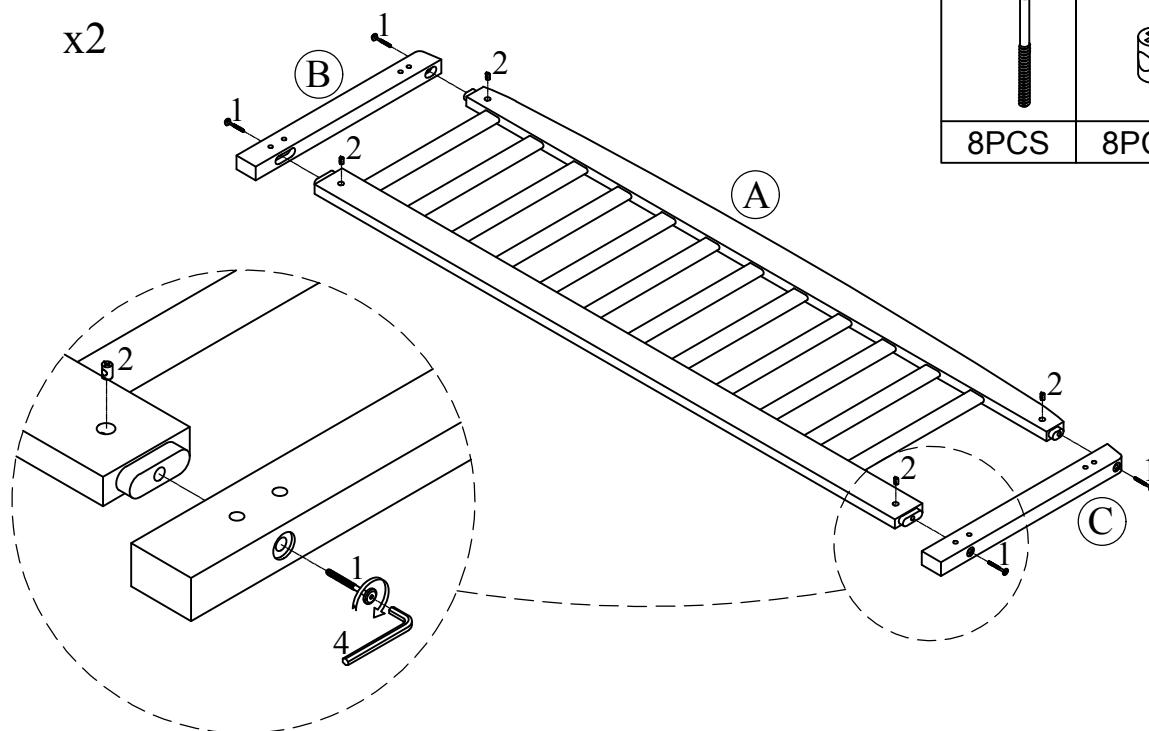

1	2
8PCS	8PCS

STEP 2:

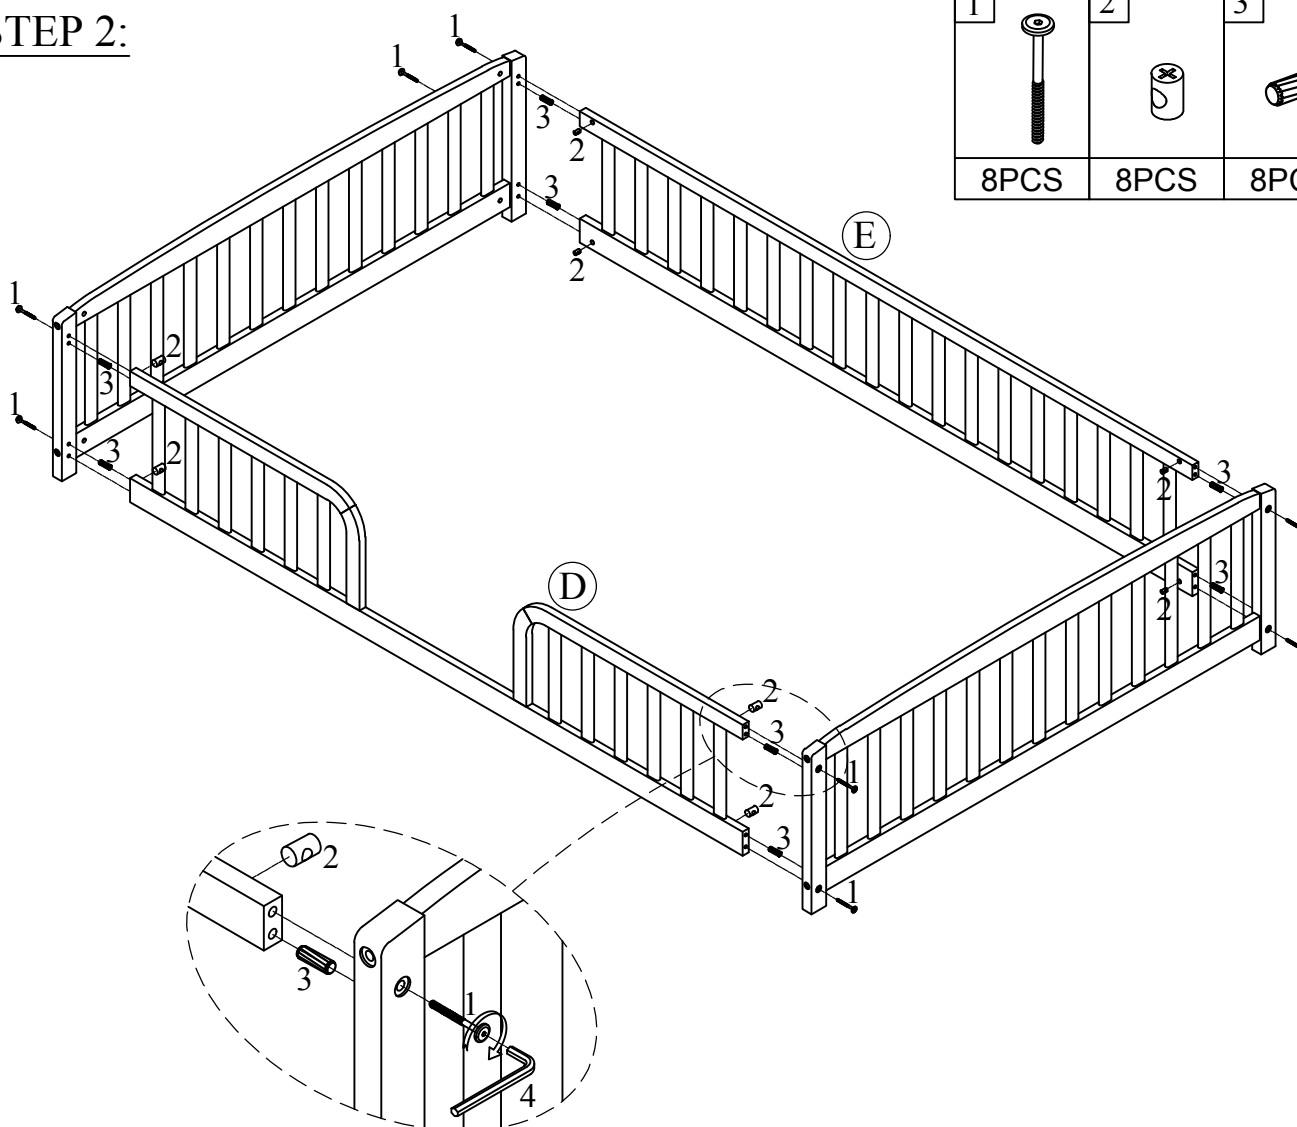

1	2	3
8PCS	8PCS	8PCS

FINISH

