



The page features a minimalist design with a white background. In the top right corner, there is a small, light gray triangular shape pointing towards the center. The bottom of the page is filled with a large, abstract geometric composition of overlapping triangles in various shades of gray, creating a layered, mountain-like effect. The text 'US 168' is centered in the upper half of the page.


US 168

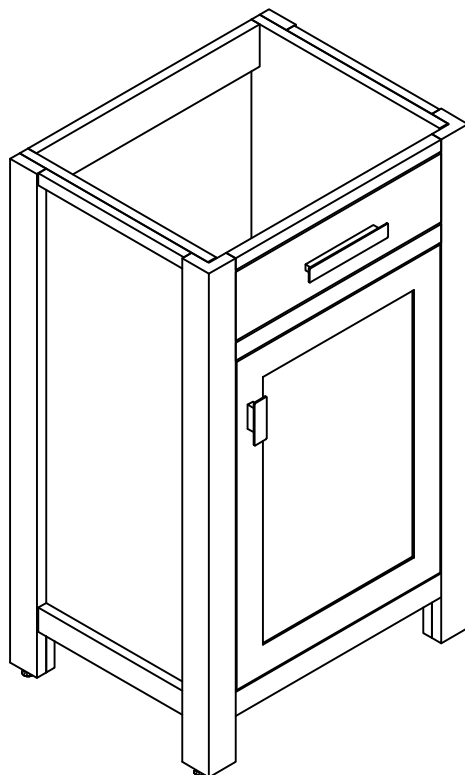


YOU MAY NEED (NOT SUPPLY)

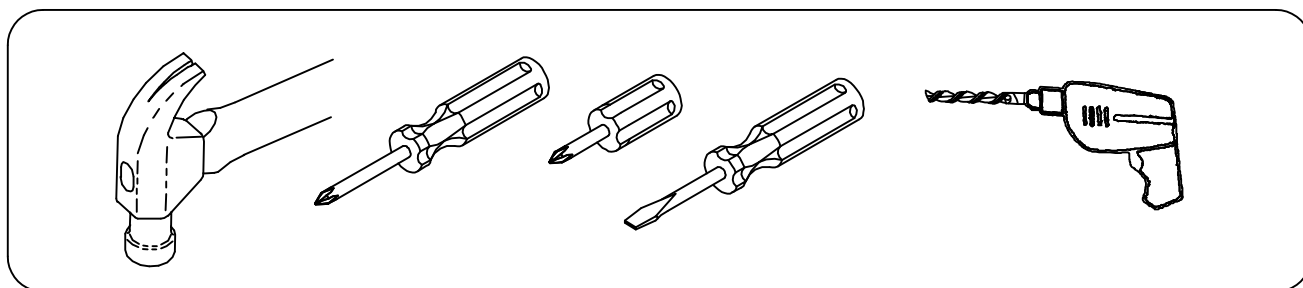

ASSEMBLY DIAGRAM

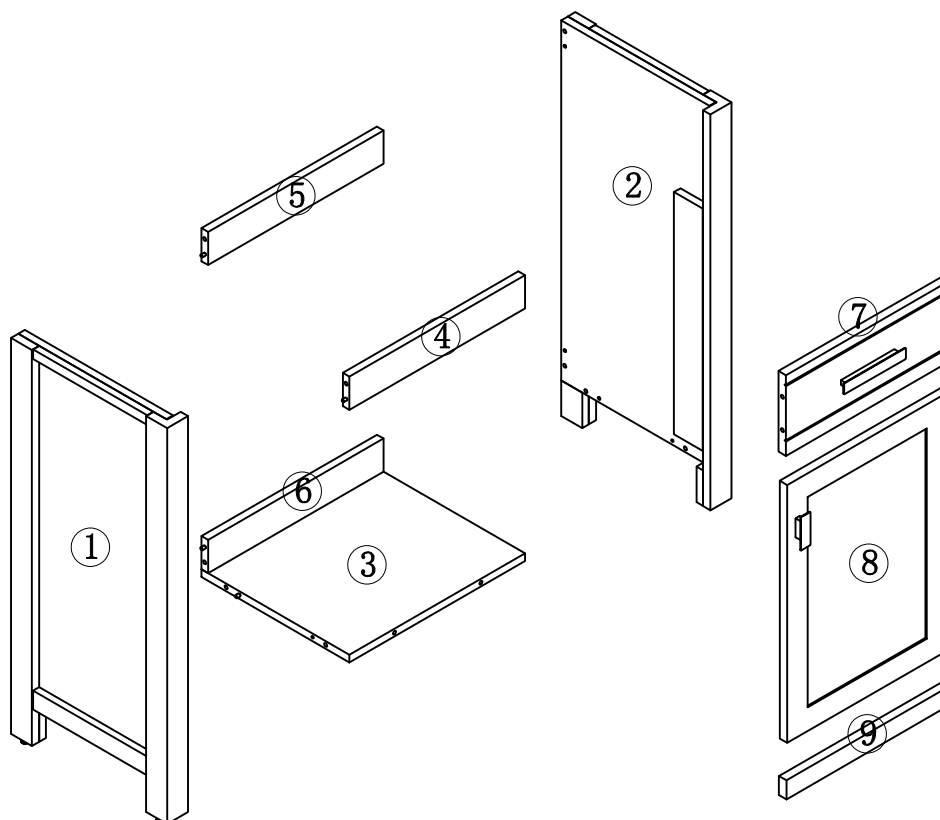


PARTS LIST					
PARTS LIST					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
①	Left side panel 	1	⑥	Back fixed panel 	1
②	Right side panel 	1	⑦	Top Decorative Panel 	1
③	Bottom panel 	1	⑧	Right door panel 	1
④	Front fixed panel 	1	⑨	Bottom Decorative Panel 	1
⑤	Back fixed panel 	1			

PARTS LIST					
HARDWARE LIST					
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
A	Three-in-one eccentric wheel 	16	F	Fake door handle 	1
B	Three-in-one connecting rod 	16	G	4*16mm screw 	12
C	Three-in-one sticker 	16	H	4*23mm screw 	4
D	8*40mm wood dowel pins 	10	I	Door hinges 	2
E	door handle 	1	J	Small adjustable foot 	4
CAUTION: Please confirm the parts list before installation					


STEP 1

HARDWARE LIST		
Three-in-one connecting rod B  16PCS	Small adjustable foot J  4PCS	


1. Put the three-in-one connecting rod in the 10mm hole of the following panels and tighten them with a cross screwdriver or an electric tool.

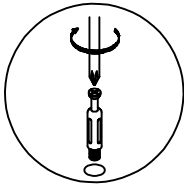

2. Fix the small adjustable feet on the bottom of the left and right side panels

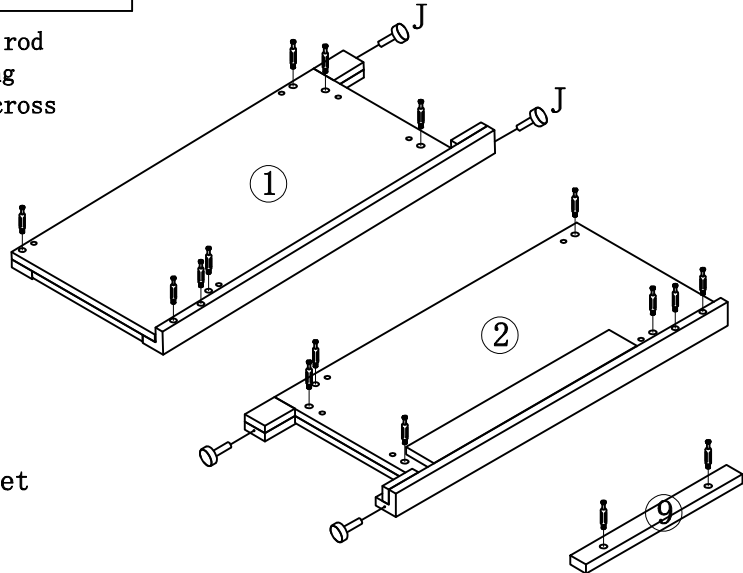



STEP 2

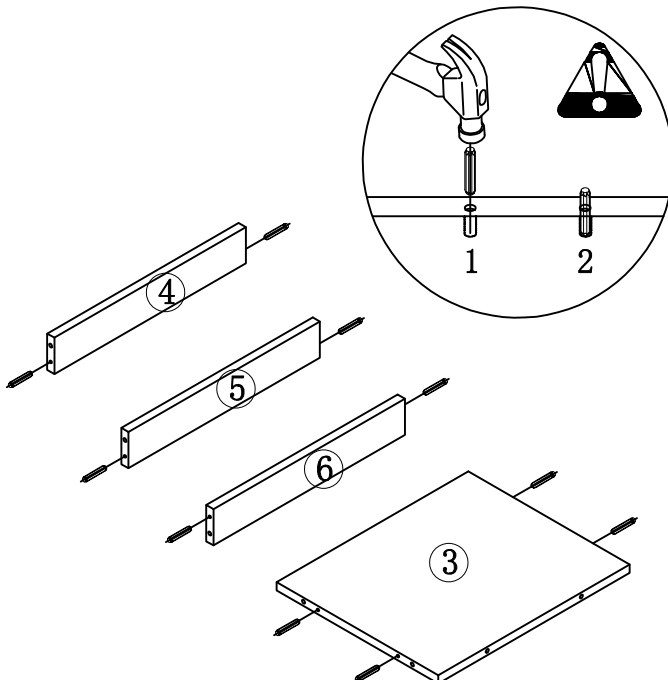


1. Strike the 08*40mm wood dowel pin into the 8mm hole of the above panels with an iron hammer. Please note that the hole of the three-in-one connecting rod should also be 8mm. The hole of the three-in-one connecting rod connects to the hole of 15mm three-in-one eccentric wheel.

HARDWARE LIST	
8*40mm wood dowel pins D  10PCS	

STEP 3

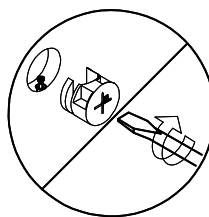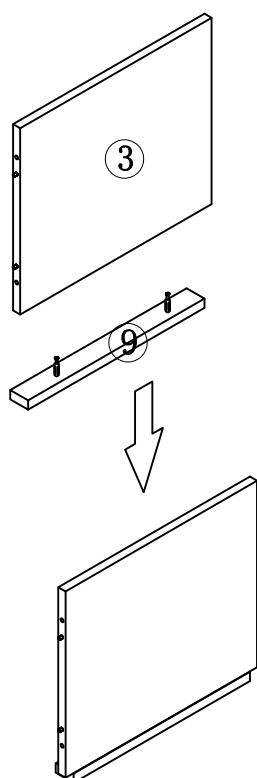

1. Connect No. 3 panel to No. 9 panel tightly with the three-in-one eccentric wheel.

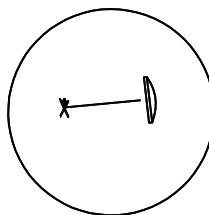

2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.



HARDWARE LIST

Three-in-one
eccentric wheel
A  2PCS


Three-in-one
sticker
C  2PCS



STEP 4

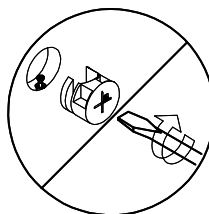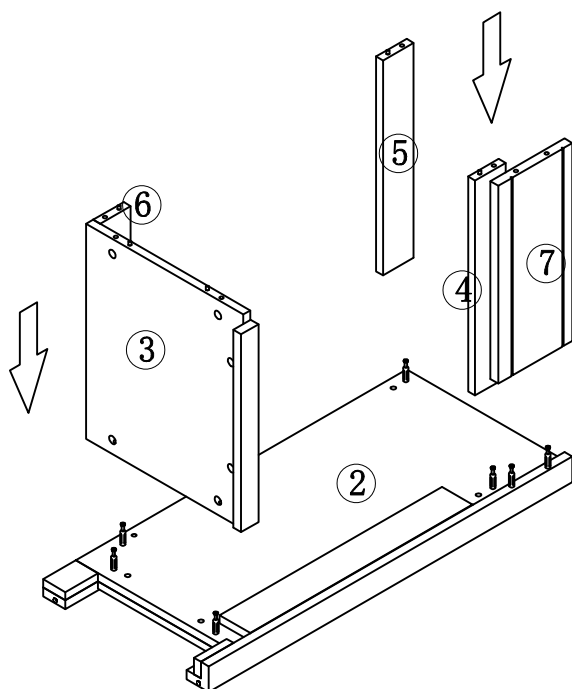

1. Connect No. 3-4-5-6-7 panel to No. 2 panel tightly with the three-in-one eccentric wheel.

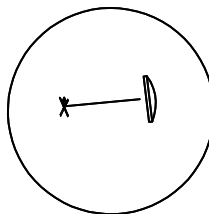

2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.



HARDWARE LIST

Three-in-one
eccentric wheel
A  7PCS


Three-in-one
sticker
C  7PCS



STEP 5

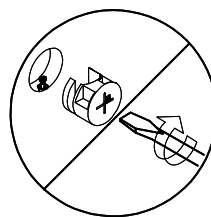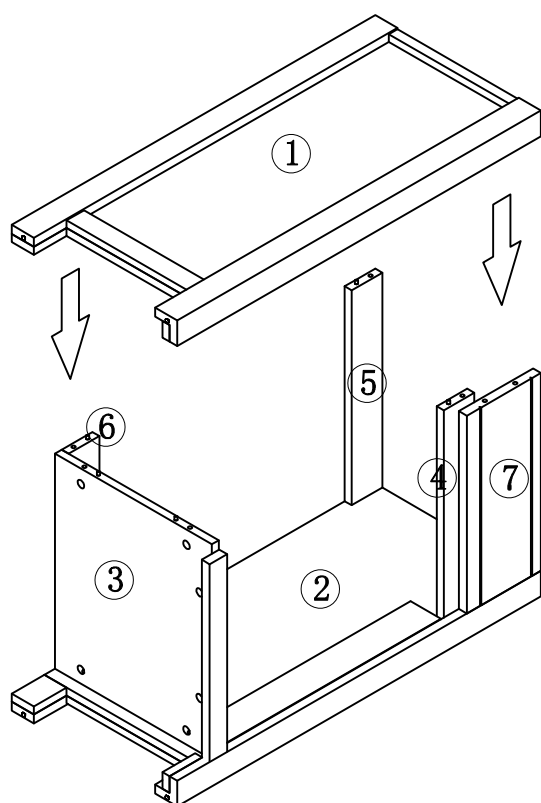

1. Connect No. 1 panel to No. 3-4-5-6-7 panel tightly with the three-in-one eccentric wheel.

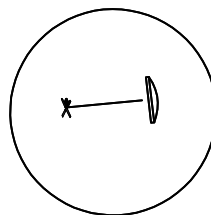

2. Cover the mounting hole of the eccentric wheel with a three-in-one sticker.


HARDWARE LIST

Three-in-one
eccentric wheel
A  7PCS

Three-in-one
sticker
C  7PCS



STEP 6

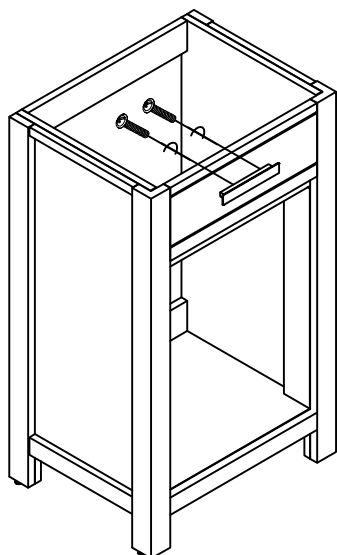

Install the door handle
with 4*23mm screws.


HARDWARE LIST

Fake door handle
F  1PCS


4*23mm screw
H  2PCS




STEP 7

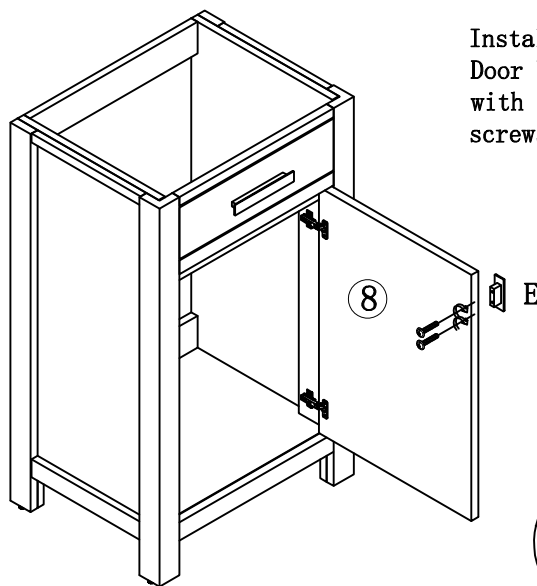


Install the Door handle with 4*23mm screws.

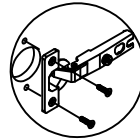



1. Install the hinge cup to the door panel with 4*16mm screws.

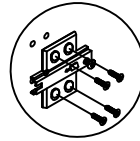

2. Install the hinge to the side panel with 4*16mm screws.

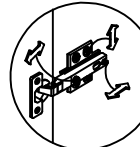

4. Adjust the door panel clearance.

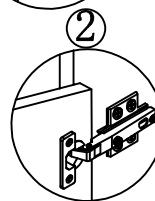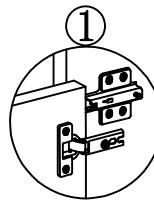


3. Install the hinge cup on the door panel to the hinge of the side panel.

HARDWARE LIST				
4*16mm screw	Door hinges	door handle	4*23mm screw	
G  12PCS	I  2PCS	E  1PCS	H  2PCS	


Hinge/Door Adjustment and Realignment

If adjustment or realignment is needed, follow the instructions provided in the following chart.


Vertical adjustment

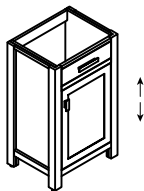


1. Loosen screws

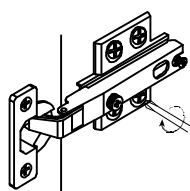





2. Adjust hinge

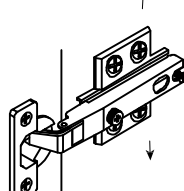





3. Tighten screws

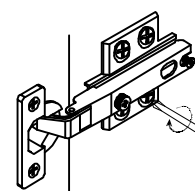

Horizontal adjustment

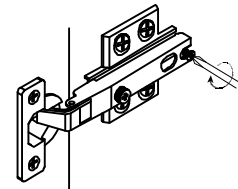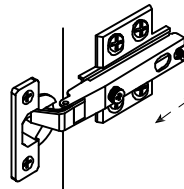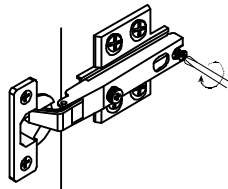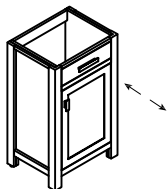

Door gap adjustment

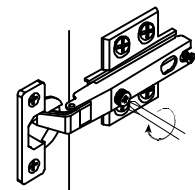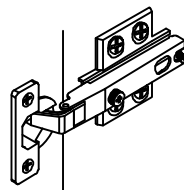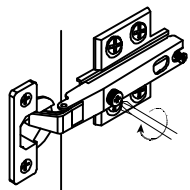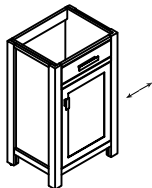



Choking hazard-Small Parts : This unit contains small parts, not for children under 3 years.

Tip-over hazard : Secure finished unit to wall stud using L-Bracket and wall screw (#10*1.5"W/out provided). If a wall stud is not neccessible , Consault your local hardware store for appropriate mounting hardware . Failure to properly install will result in product collapse or tip-over. Serious injury can occur .