



Installation Instruction

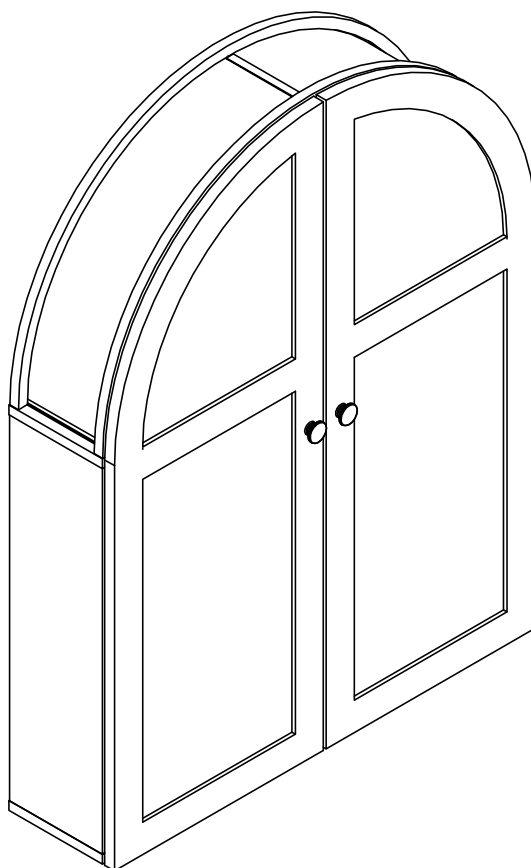

Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100

lbs table top

| 35

lbs per

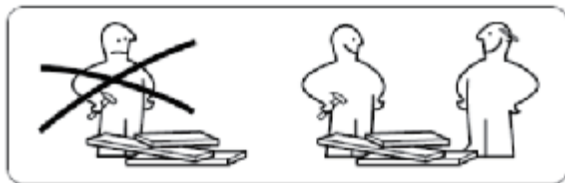


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	19
B	Cam Lock 15X9MM	19
C	Wooden Dowel M6X30MM	10
D	Screw M4X40MM	14
E	Shelf Holder	4
F	Metal shake handhandle	2
G	Hinge	4
H	Screw M3.5X12MM	28
I	Cam Bolt M4X18MM	2
J	The back button	4
K	Anchor	2
L	Hole position sticker	19
M	Long plastic card strip	1
N	Short plastic card strip	1

The Hardware


A




B



C



D




E



F



G




H



I




J




K



L



M

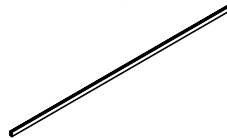

N




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)


Included Accessories






Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Left door panel	1
6	Right door panel	1
7	Movable laminated plate	1
8	Front arc plate	1
9	Reinforcing plate	5
10	Back arc plate	1
11	Top plate	2
12	Back brace	1
13	Locking panel	1
14	Tergum	2

The Accessoriess

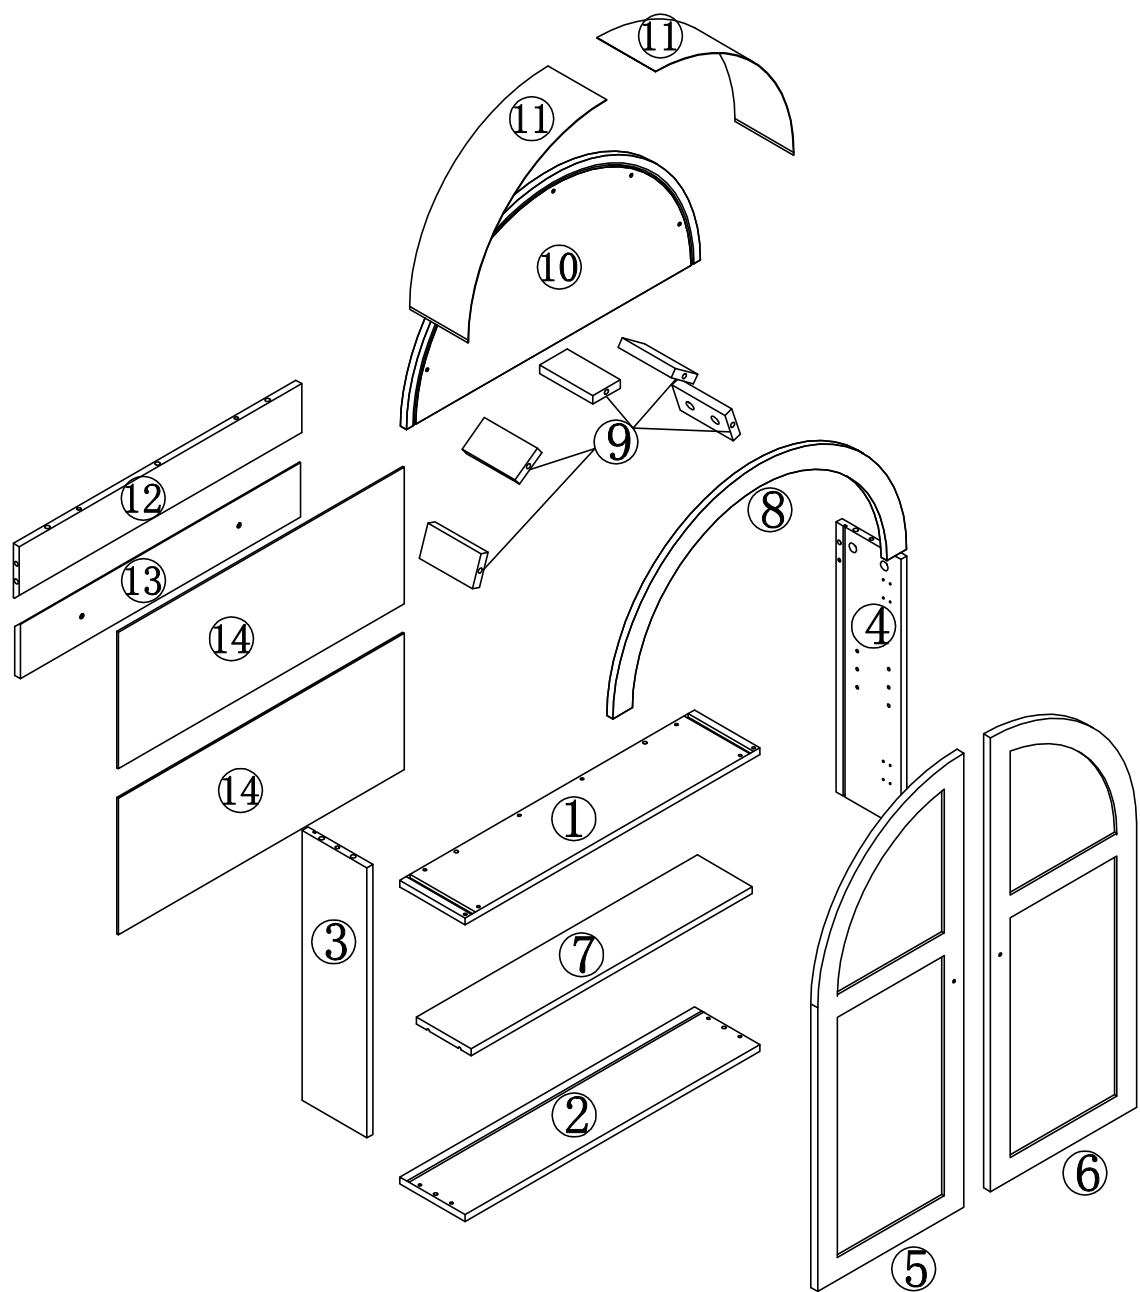

Step 1


A	x 2
	


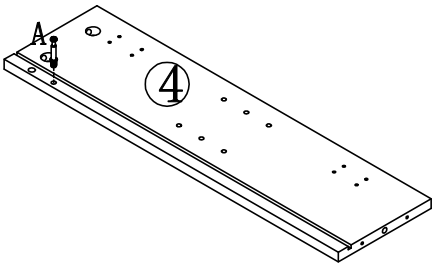
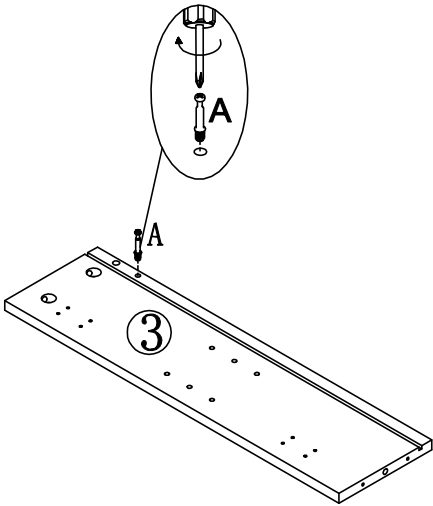


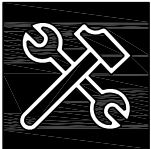


Step 2


B	x 2
	


L	x 2
	





C	x 2
	

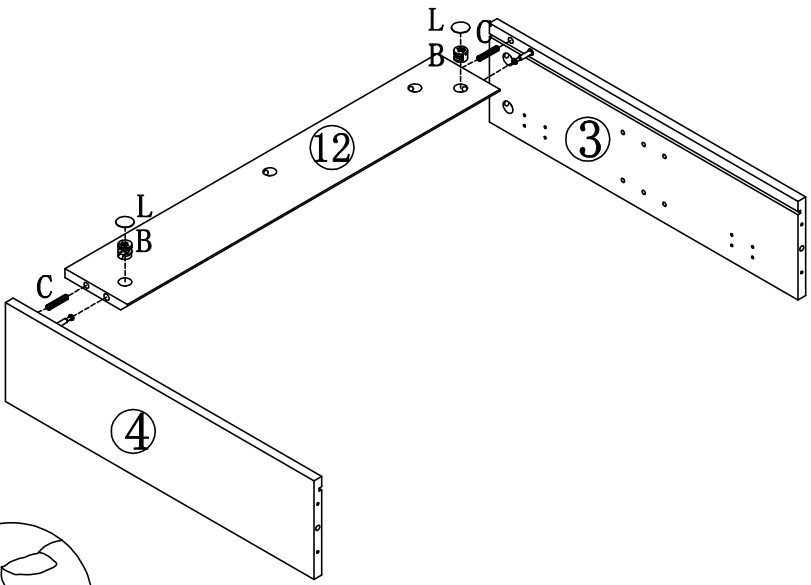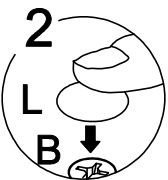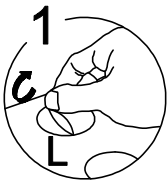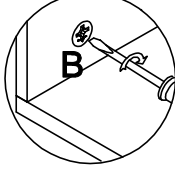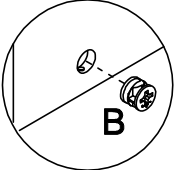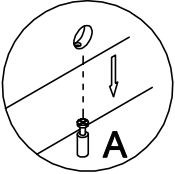

Step 3


C	x 2
	

D	x 4
	

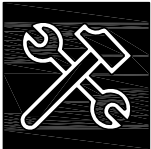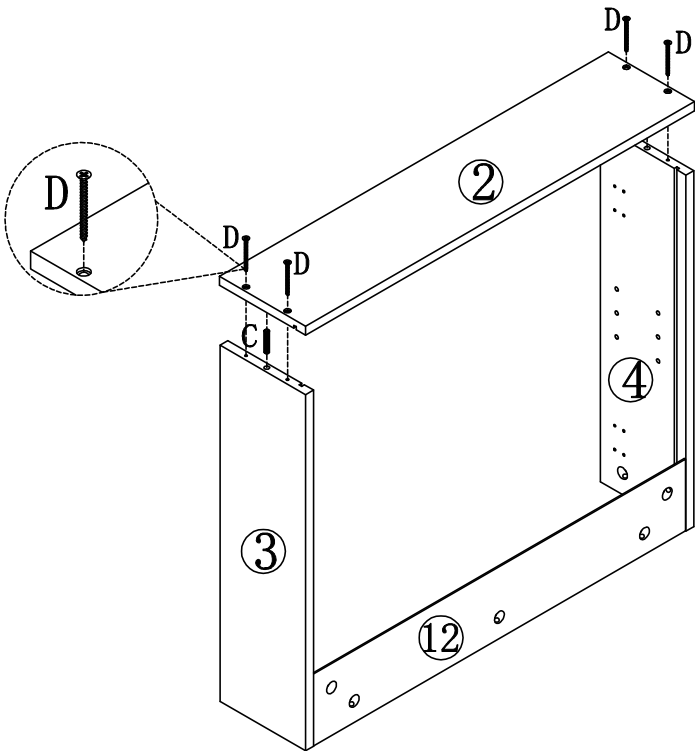


Step 4






M	x 1
	

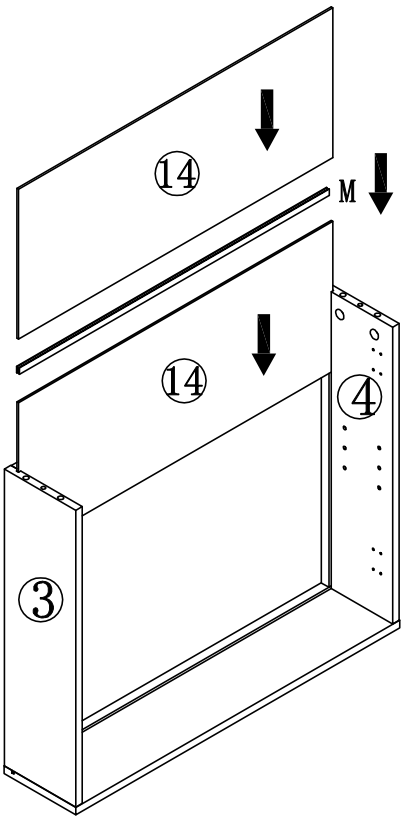

During installation, insert the No. 14 back plate into slot M of the accessory

Step 5








A	x 10
	

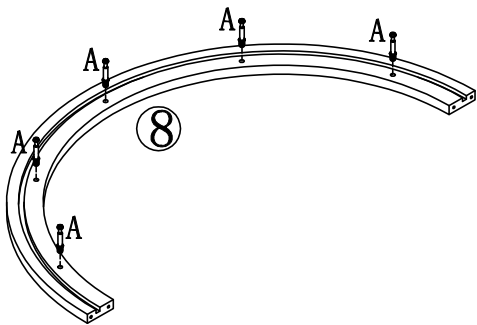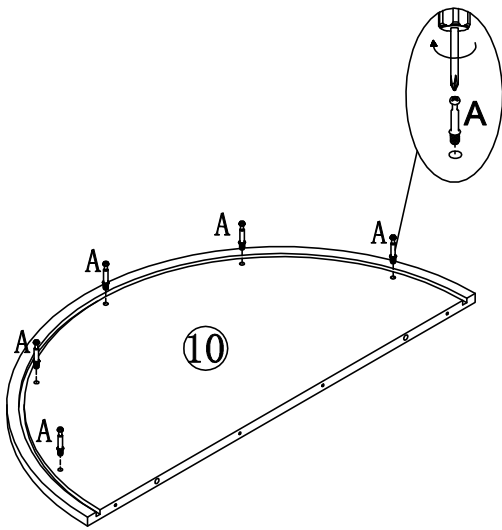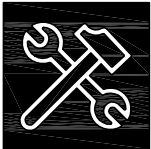








Step 6

B	x 5
	




L	x 5
	

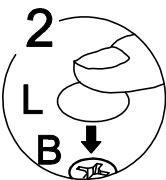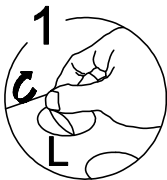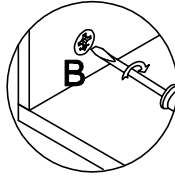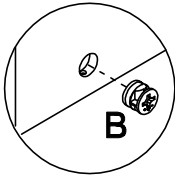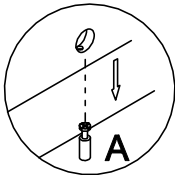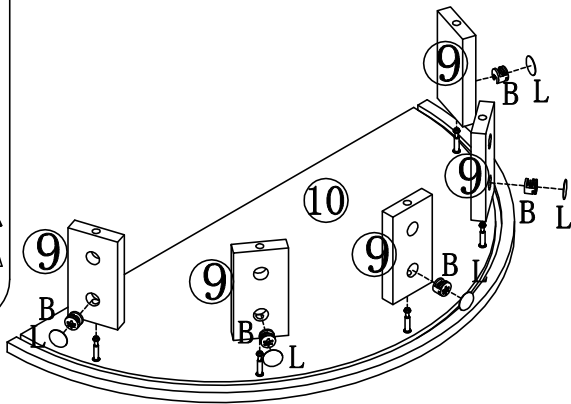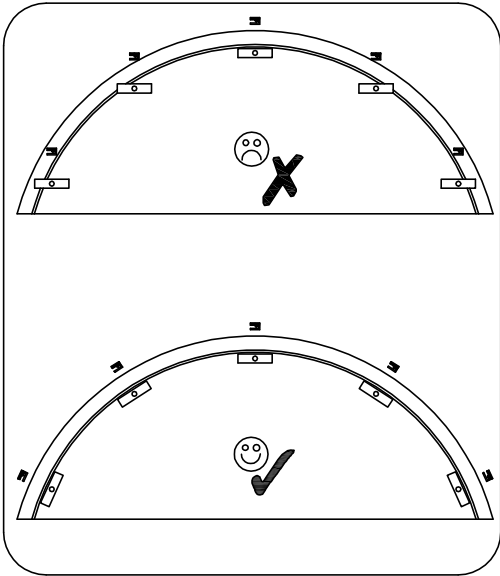

Step 7

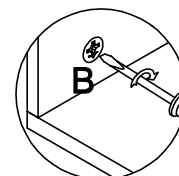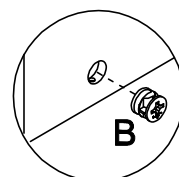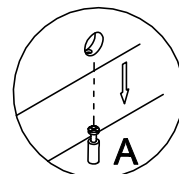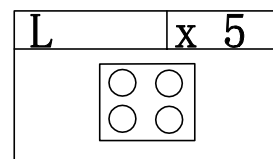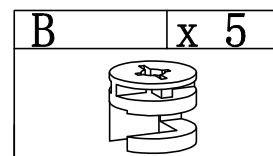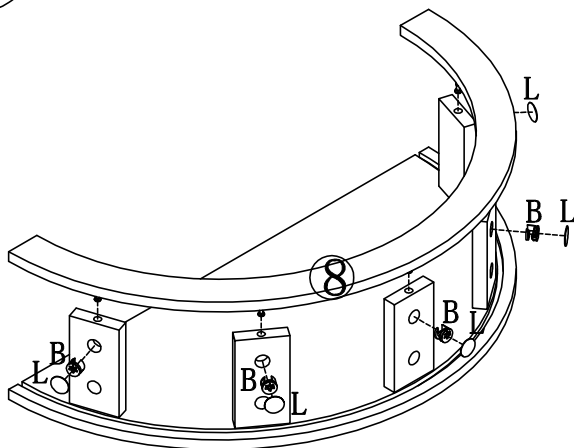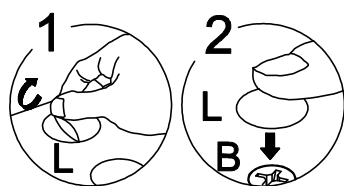

Step 8

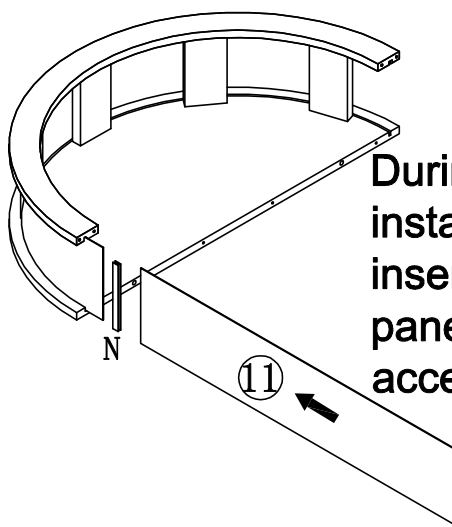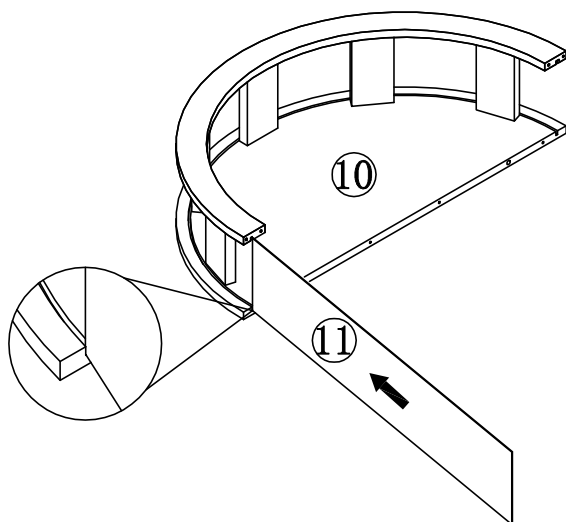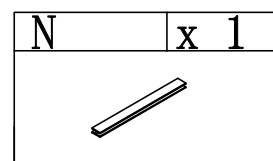


During the installation process, insert the 11th back panel into the slot of accessory N.




When the 11th board is pushed in, it should align with the upper and lower slots. If the 11th board is multicolored, the color of the inner side of the board facing inward should be the same as that of the inner side of the 10th board. If it is a single color board, there are no requirements.

Step 9

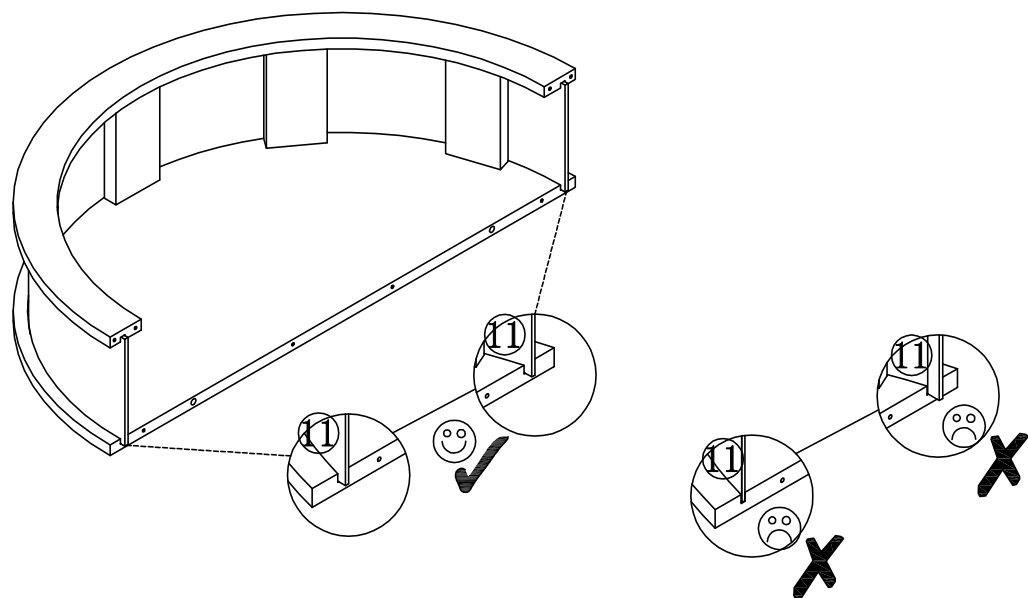






Step 10

C	x 2

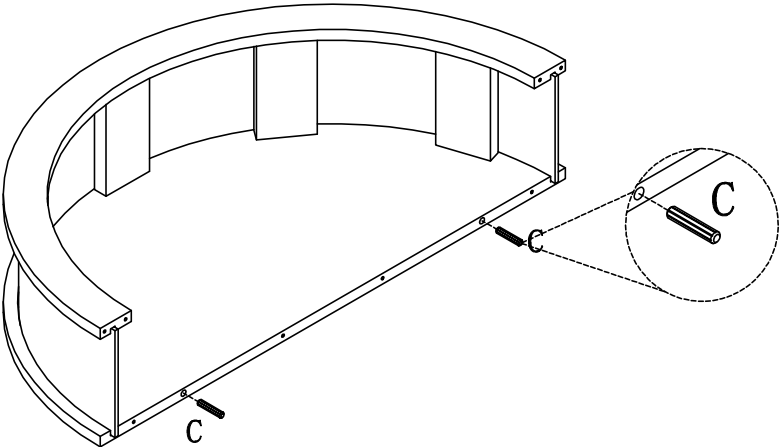






Step 11

A	x 7
	

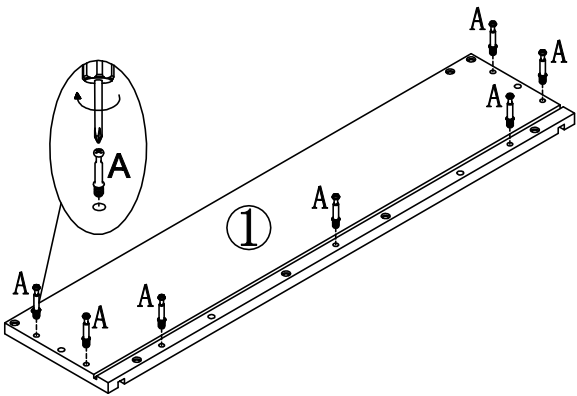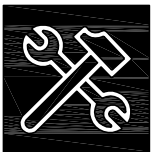


Step 12

D	x 8
	

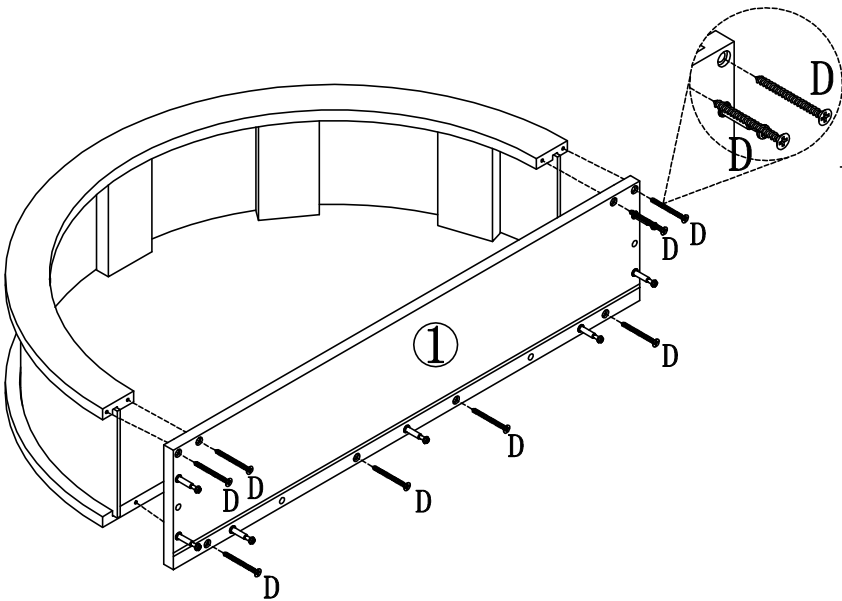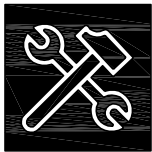


Step 13

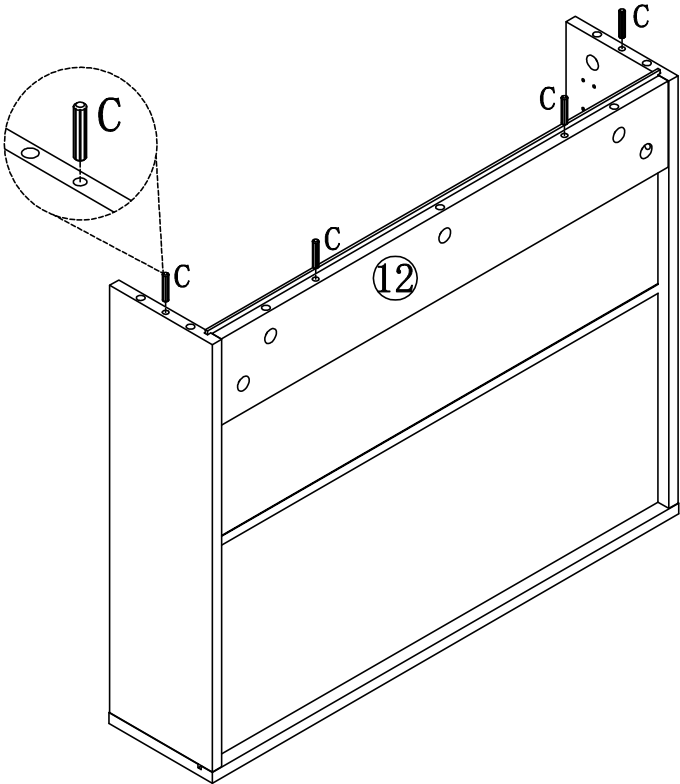





C	x 4

Step 14

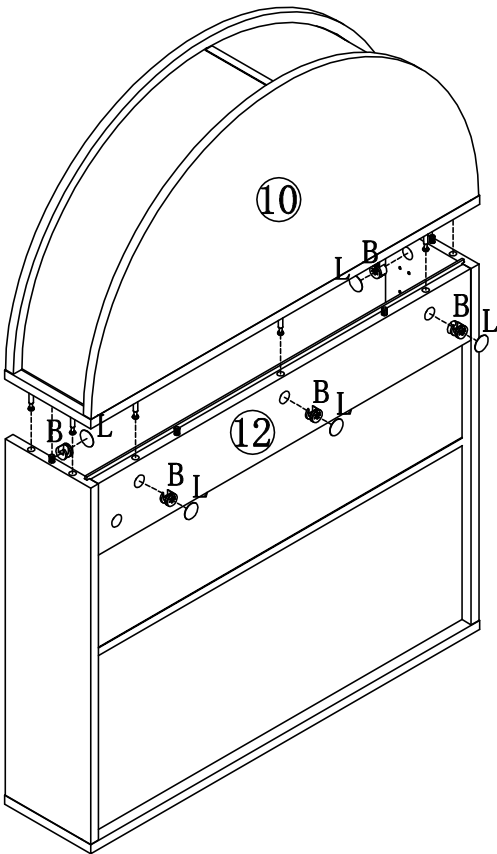

B	x 7


L	x 7

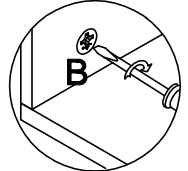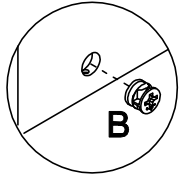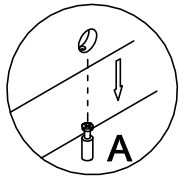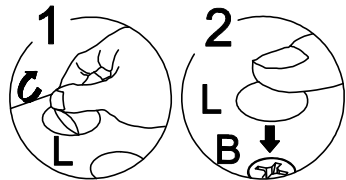


Step 15





Please lock the fitting J to the back plate of the lower half, not the upper half

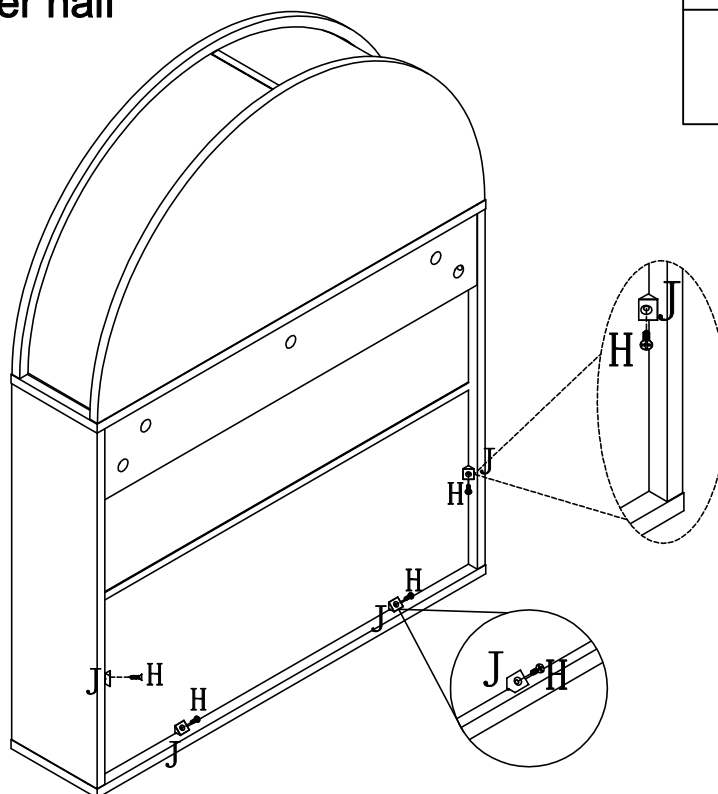


H	x 4
	

J	x 4
	




Step 16

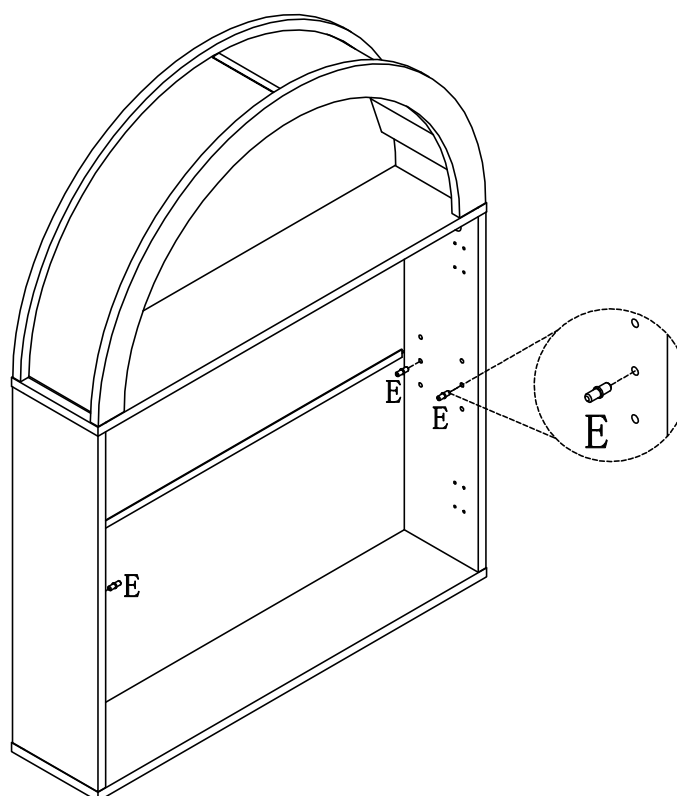






E	x 4
	

Step 17

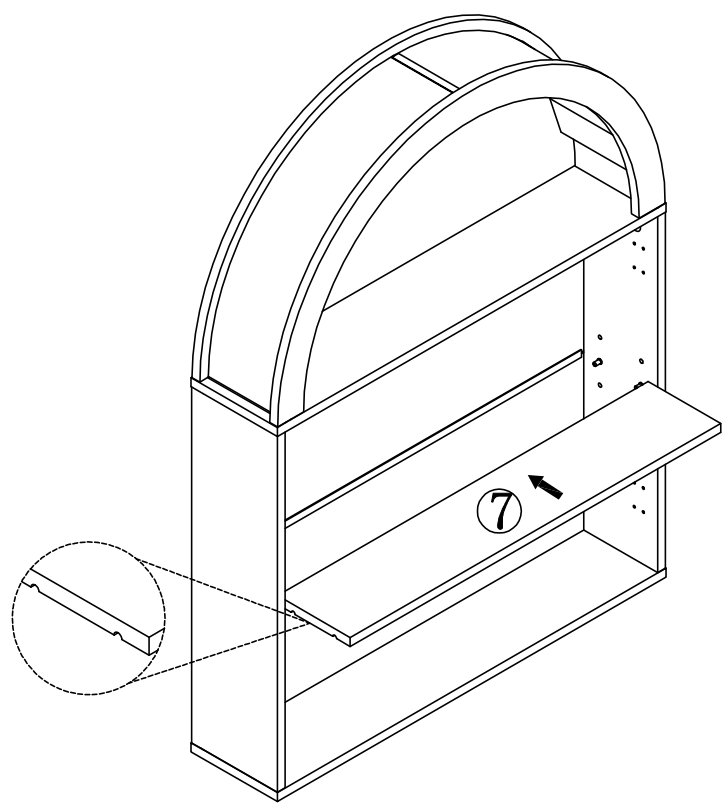

Step 18

H	x 8	G	x 4
			

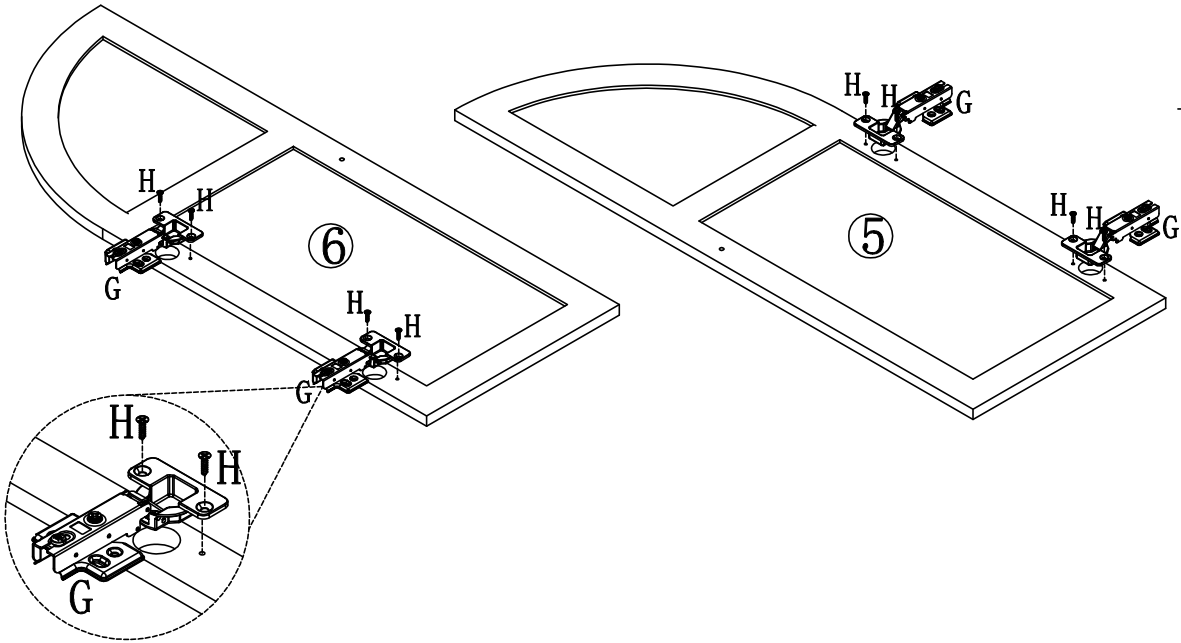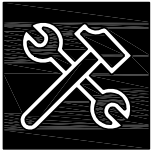


Step 19


H	x 16
	

F	x 2
	


I	x 2
	

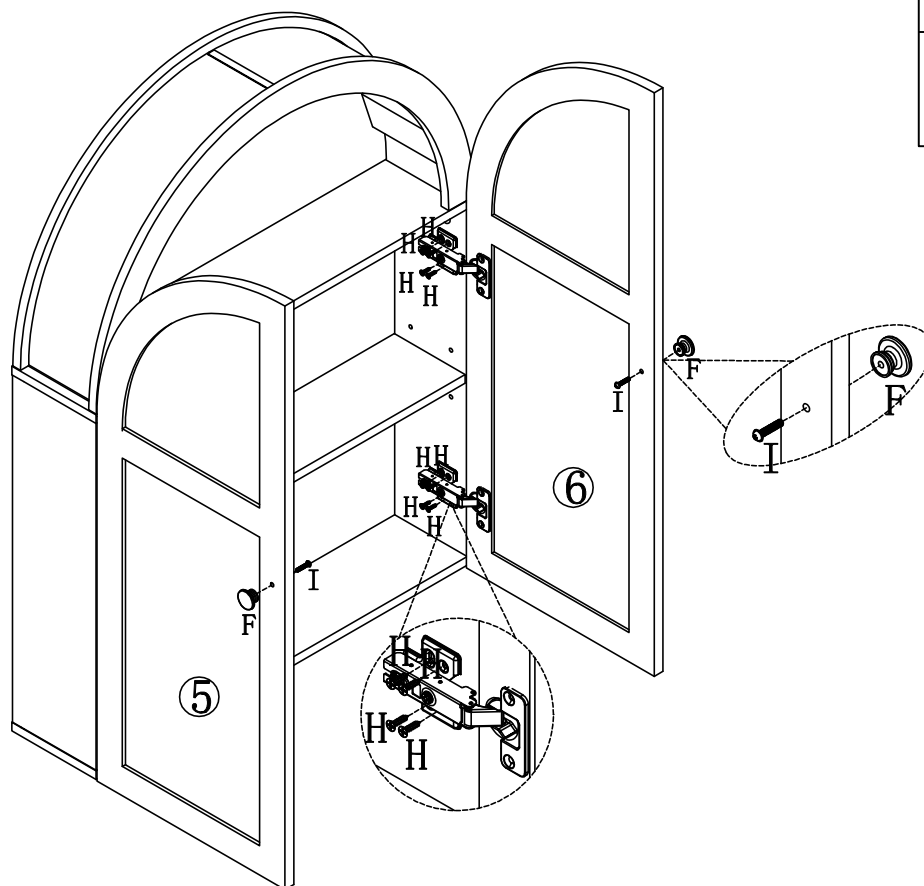


How do I get the two doors to align flat by adjusting the hinges?

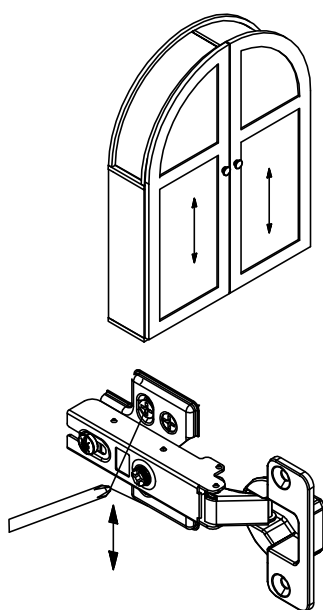

1. The screws can be loosened to adjust the uneven problem under the table top.






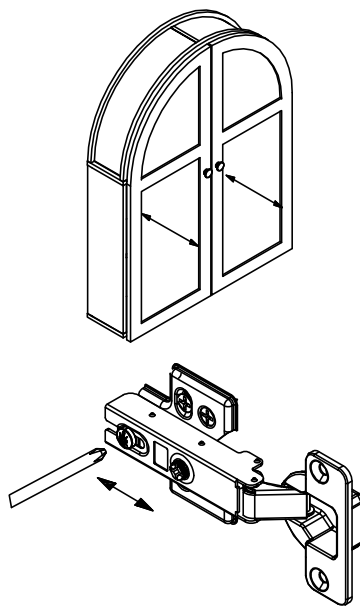


2. Adjust the screws shown in Fig. 2 and pull the door back and forth so that it can be opened smoothly.

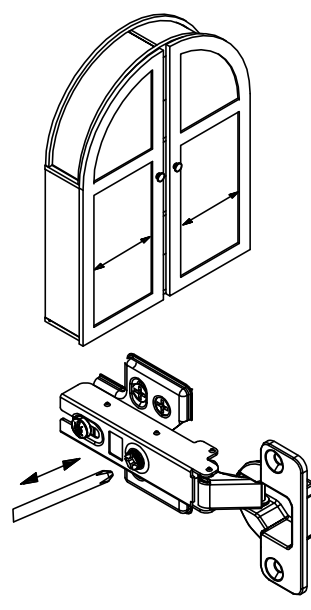


3. Adjust the screws shown in Figure 3 to adjust the door left and right to the right position.

Step 20

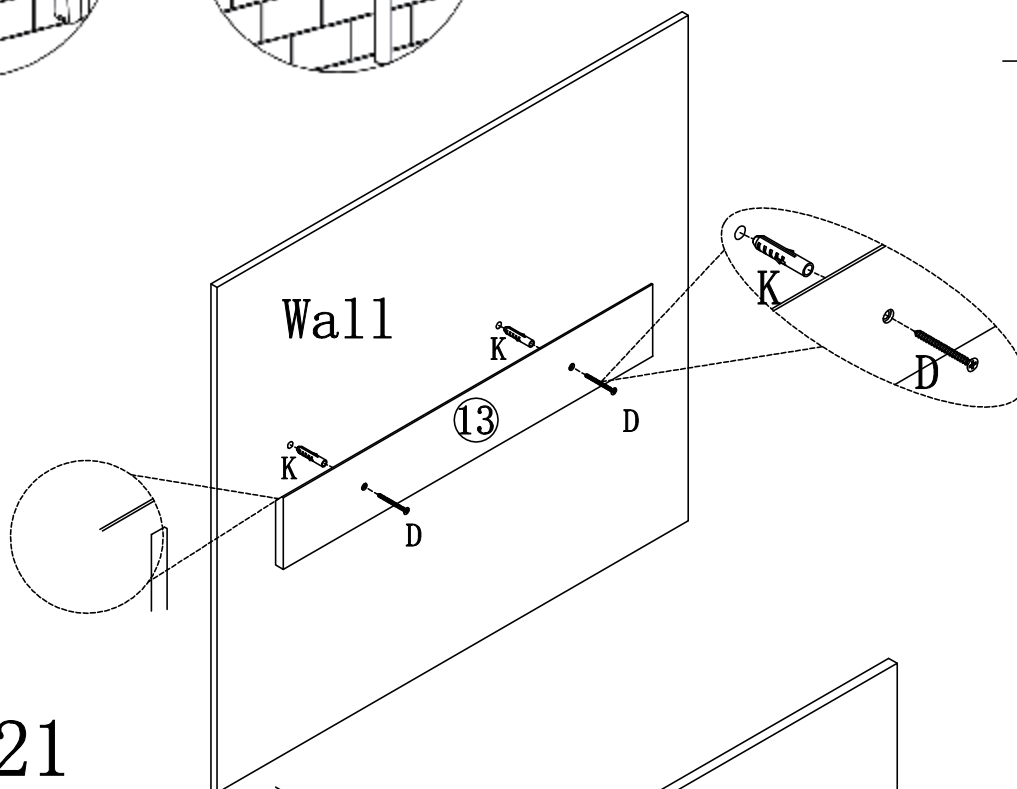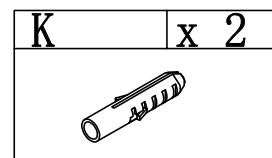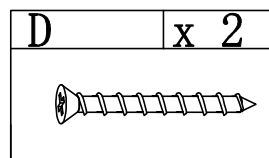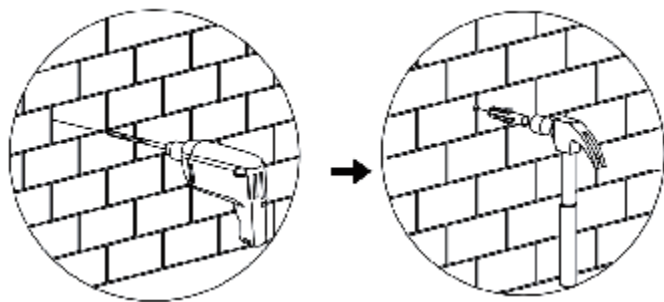

Step 21

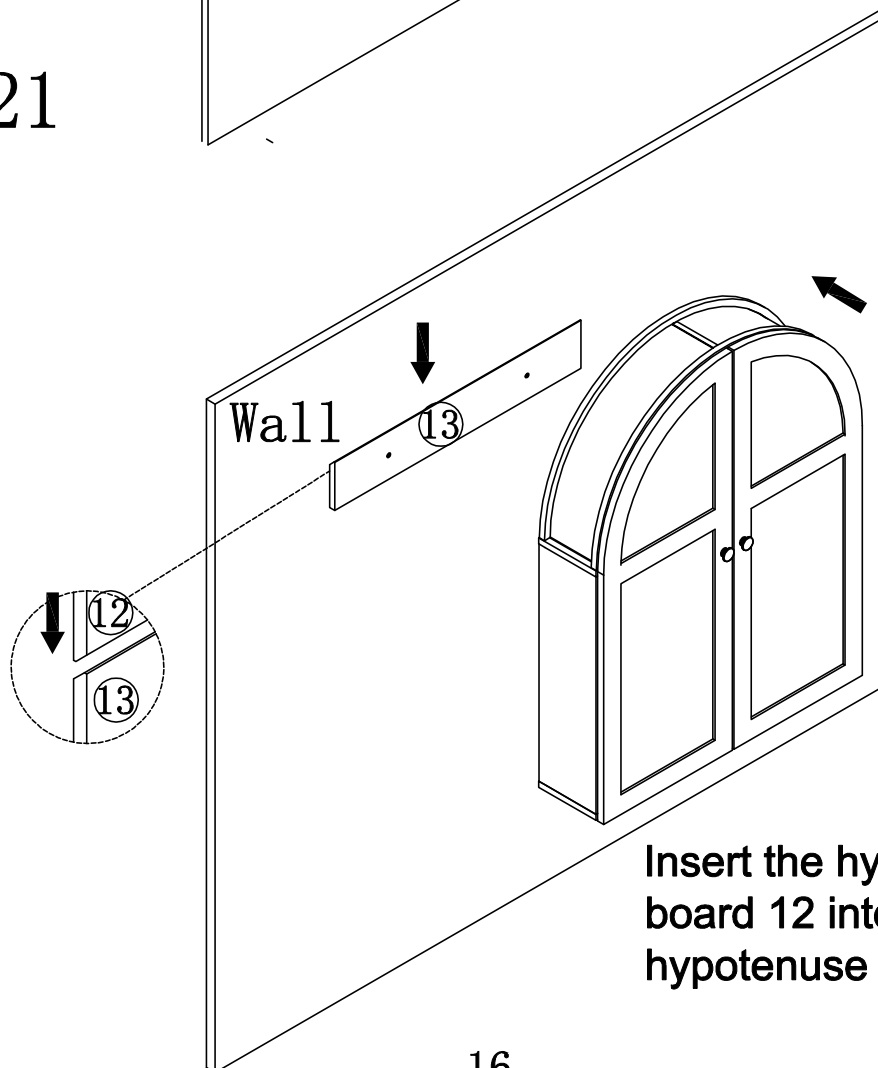

Insert the hypotenuse of board 12 into the hypotenuse of board 13