








ASSEMBLY INSTRUCTIONS

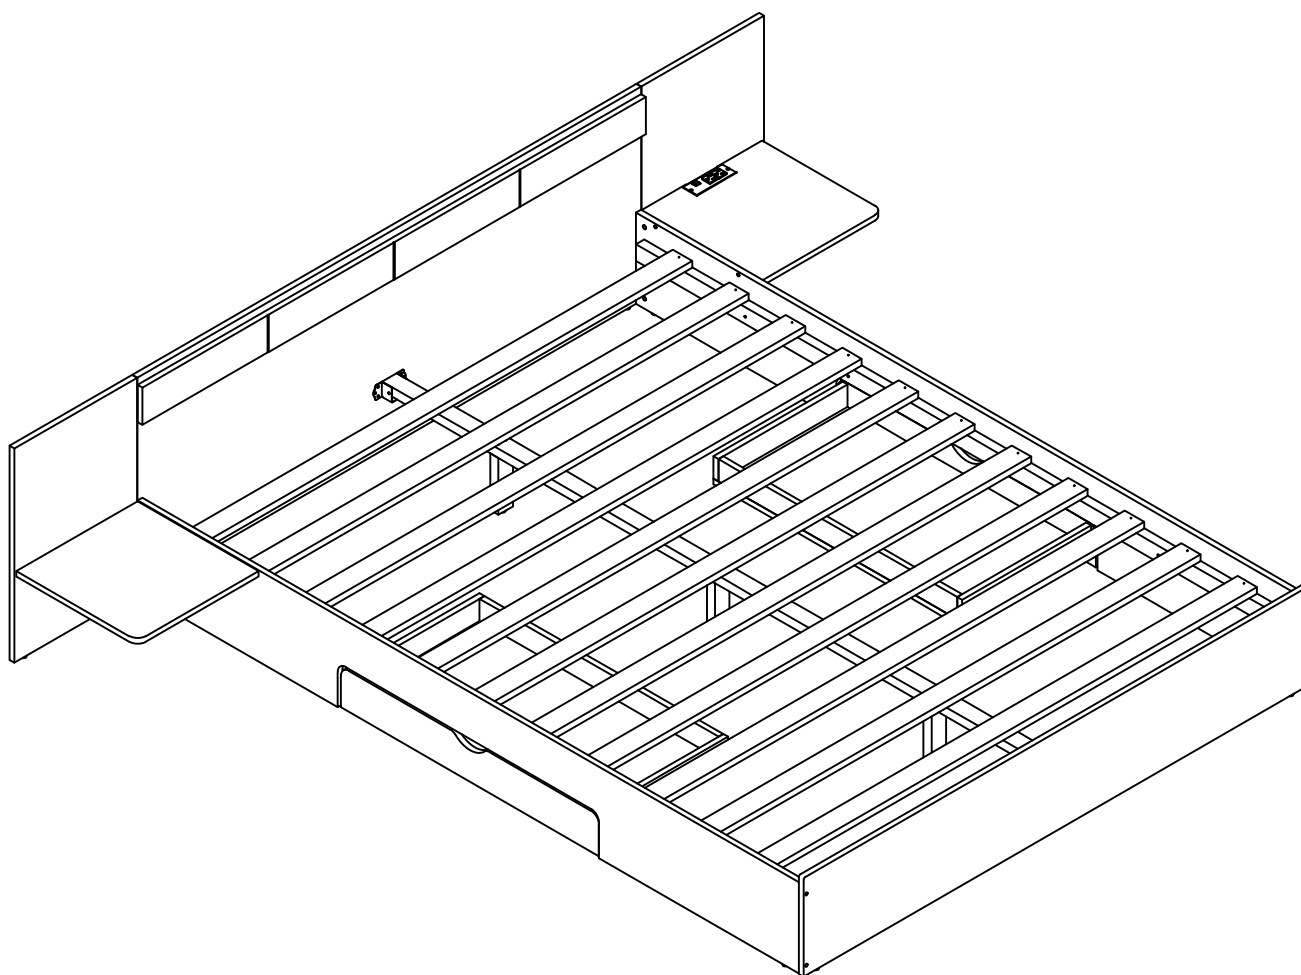



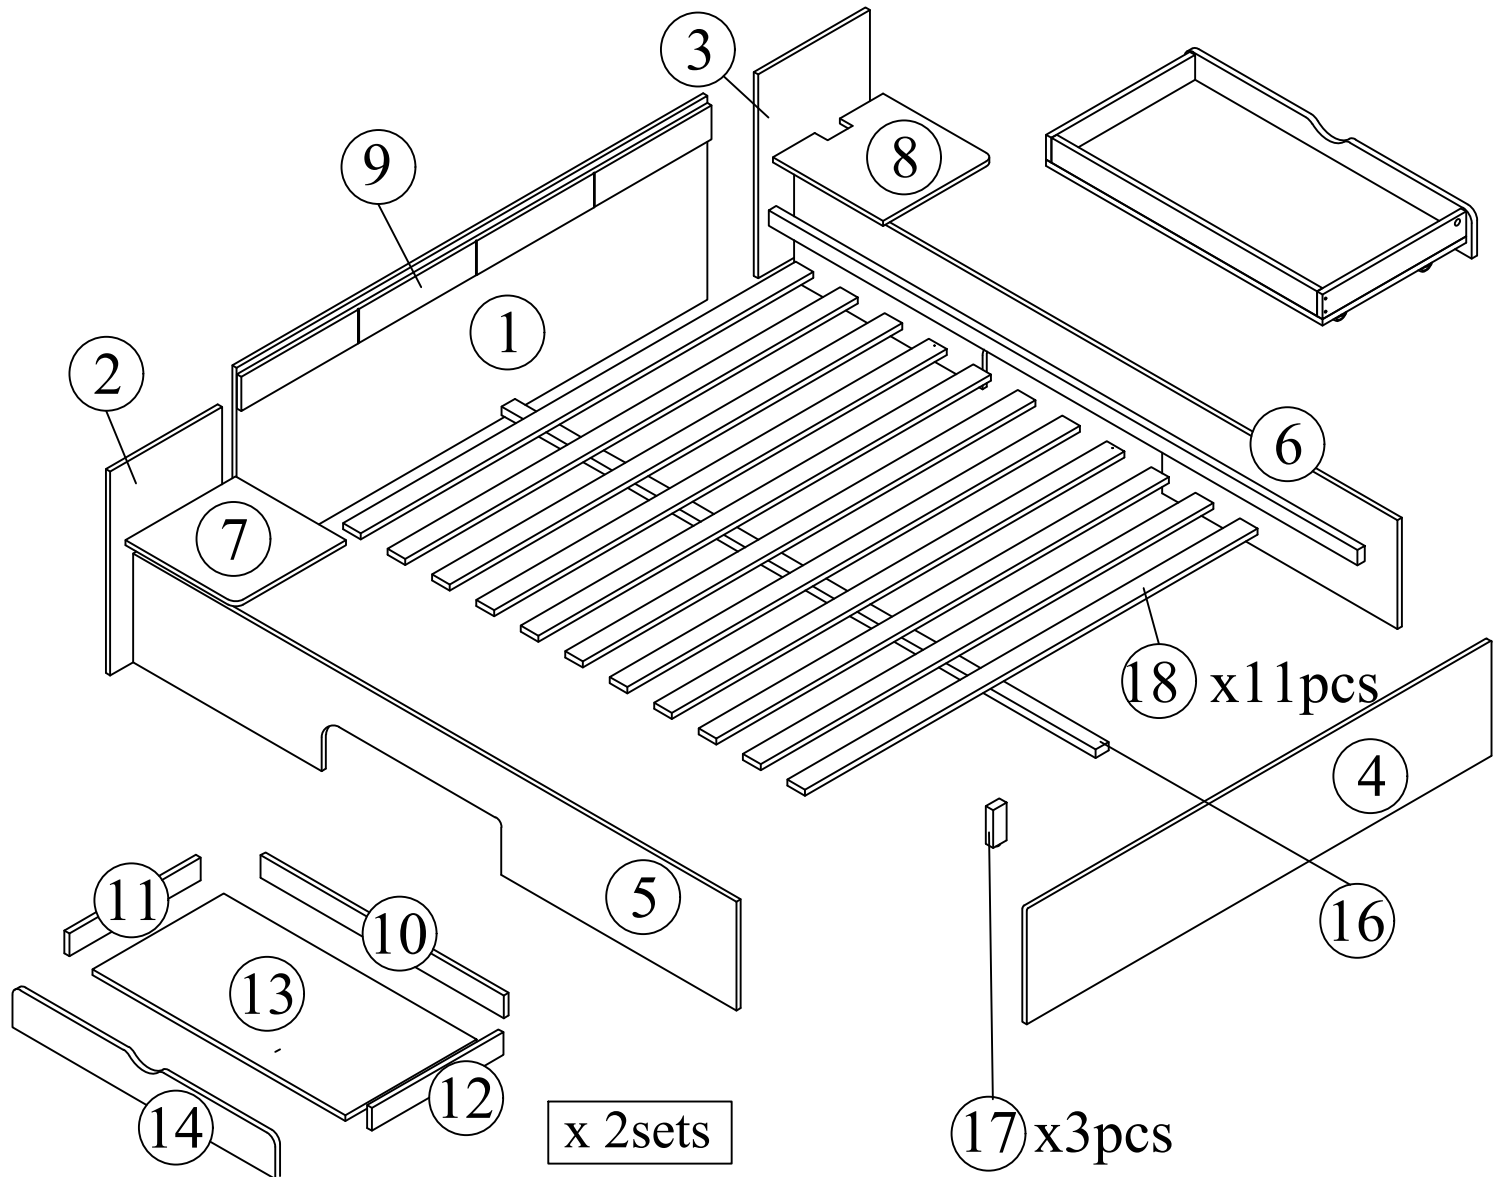



ASSEMBLY INSTRUCTIONS

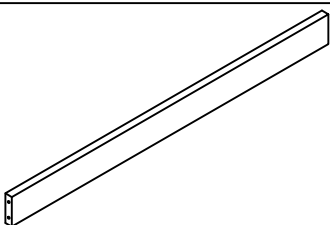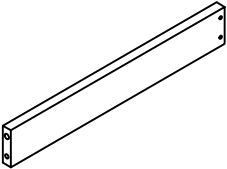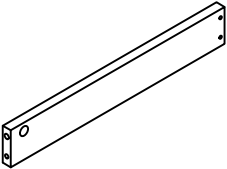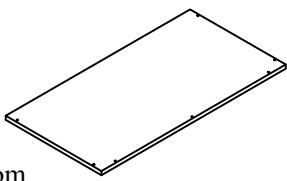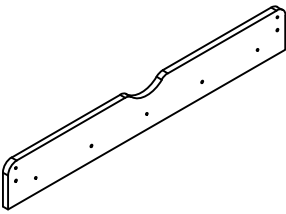


Part List


<div>10</div>  <p>Drawer Back Panel = 2pcs</p>	<div>11</div>  <p>Drawer Left Side Panel = 2pcs</p>	<div>12</div>  <p>Drawer Right Side Panel = 2pcs</p>
<div>13</div>  <p>Drawer Bottom Panel = 2pcs</p>	<div>14</div>  <p>Drawer Front Panel = 2pcs</p>	

Hardware List

<div>C</div>  <p>WOOD DOWEL M6 x 25mm 8pcs</p>	<div>E</div>  <p>CAM NUT 15mm 10pcs</p>	<div>J</div>  <p>CSK SCREW M4 x 38mm 22pcs</p>	<div>K</div>  <p>CSK SCREW M3.5 x 16mm 16pcs</p>	<div>Q</div>  <p>Cam Bolt 10pcs</p>	<div>R</div>  <p>Nylon Castor 40-Stop 8pcs</p>
-----------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------



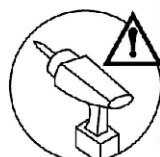

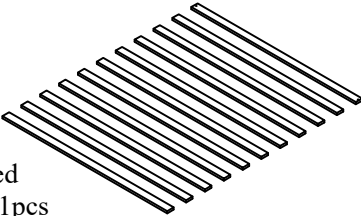


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



















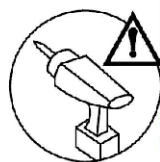
PLEASE BE CAREFULL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

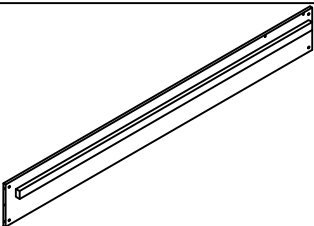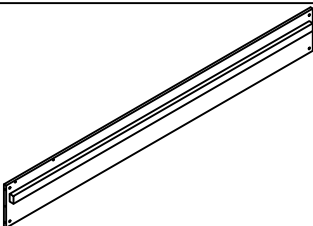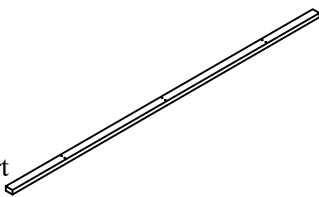Part List


<div>5</div>  <p>Left Side Panel = 1pc</p>	<div>6</div>  <p>Right Side Panel = 1pc</p>	<div>16</div>  <p>Center Support LVL = 1pc</p>
<div>17</div>  <p>Support Leg LVL = 3pcs</p>	<div>18</div>  <p>LVL Bed Slat = 11pcs</p>	

Hardware List

<div>A</div>  <p>Steel Nut M6 x 10mm 16pcs</p>	<div>B</div>  <p>JCBC SCREW M6 x50mm 16pcs</p>	<div>C</div>  <p>WOOD DOWEL M6 x 25mm 12pcs</p>	<div>D</div>  <p>WOOD DOWEL M8 x 50mm 4pcs</p>	<div>E</div>  <p>CAM NUT 15mm 12pcs</p>	<div>F</div>  <p>DOUBLE END BOLT 6pcs</p>
<div>G</div>  <p>PVC NAIL 5/8" 16pcs</p>	<div>H</div>  <p>WIRE CAP 35mm 1pc</p>	<div>I</div>  <p>CSK SCREW M4 x 65mm 6pcs</p>	<div>J</div>  <p>CSK SCREW M4 x 38mm 22pcs</p>	<div>K</div>  <p>CSK SCREW M3.5 x 16mm 18pcs</p>	<div>L</div>  <p>ALLEN KEY 1pc</p>
<div>M</div>  <p>SLAT BRACKET HC 021 2pcs</p>	<div>N</div>  <p>M6 x 20mm Glider 3pcs</p>	<div>O</div>  <p>USA SOCKET 1pc</p>	<div>P</div>  <p>JCBC SCREW M6 x 25mm 4pcs</p>		










ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFULL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


Part List

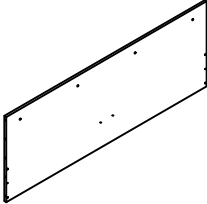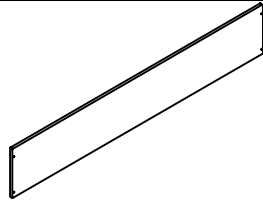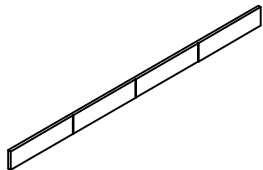1  Headboard Panel = 1pc	2  Headboard Left Side Panel = 1pc	3  Headboard Right Side Panel = 1pc
4  Footboard Panel = 1pc	7  Left Bed Side Table Panel = 1pc	8  Right Bed Side Table Panel = 1pc
9  Decoration Panel = 1pc		


STEP 1

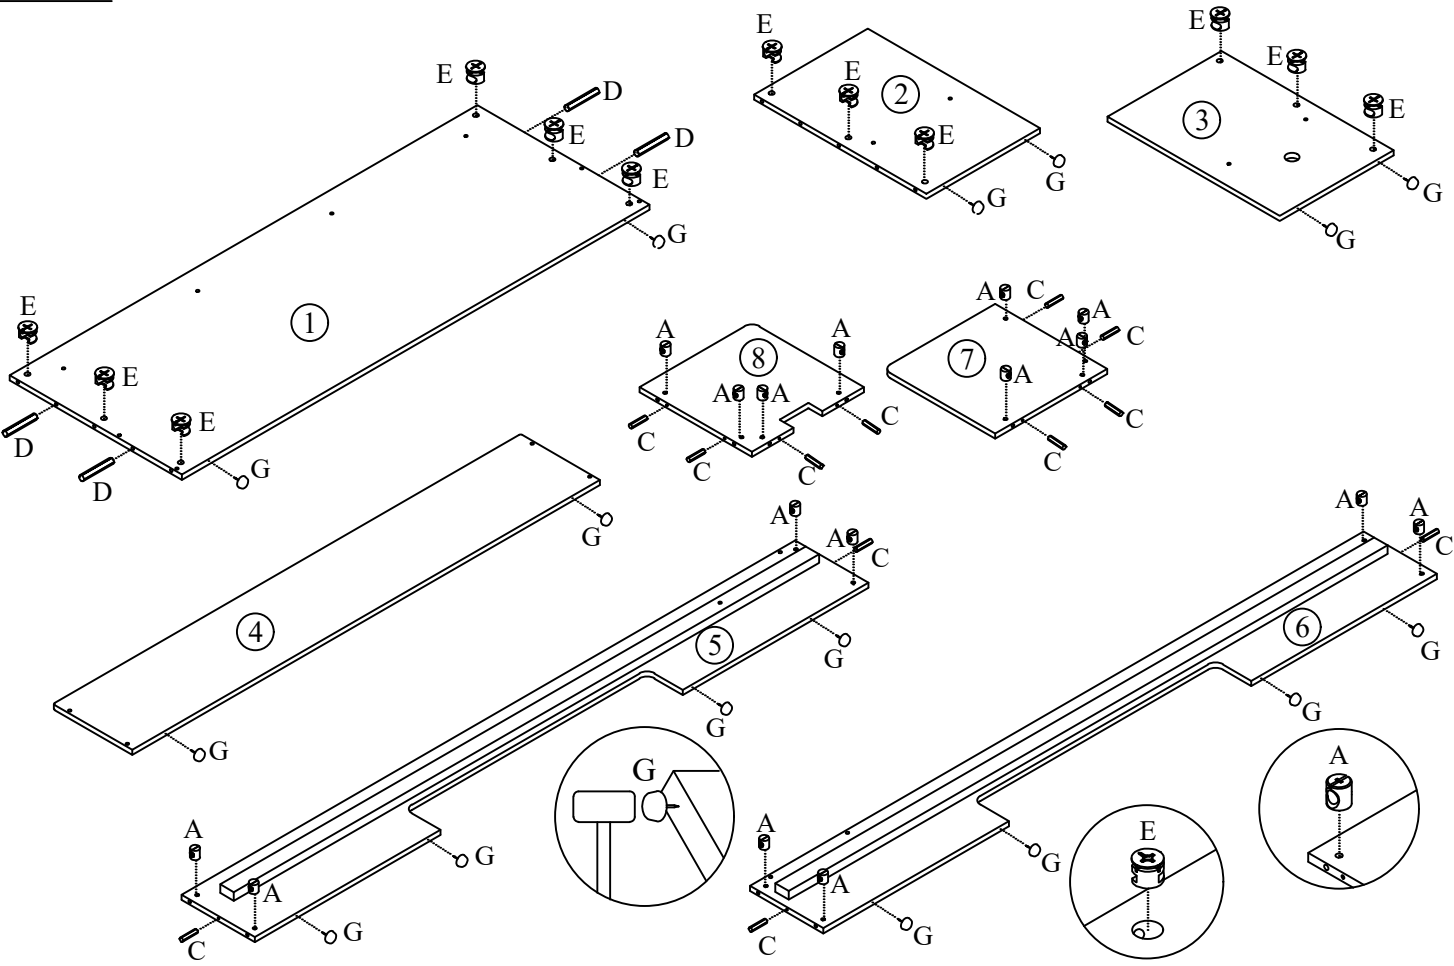


STEP 2

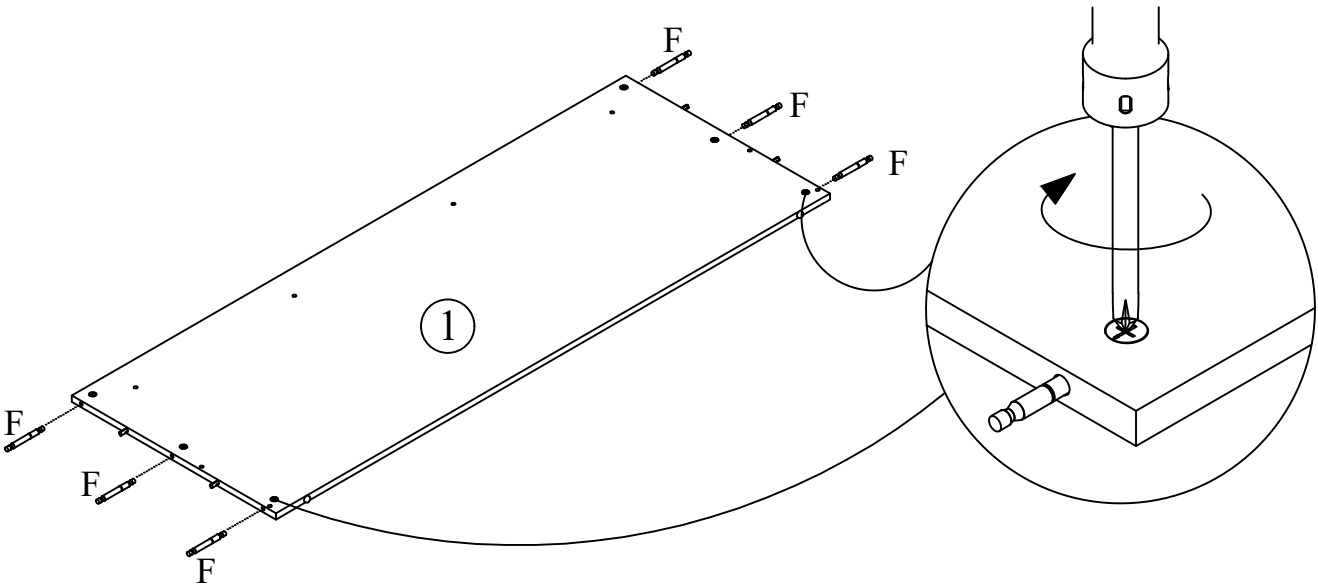


STEP 3

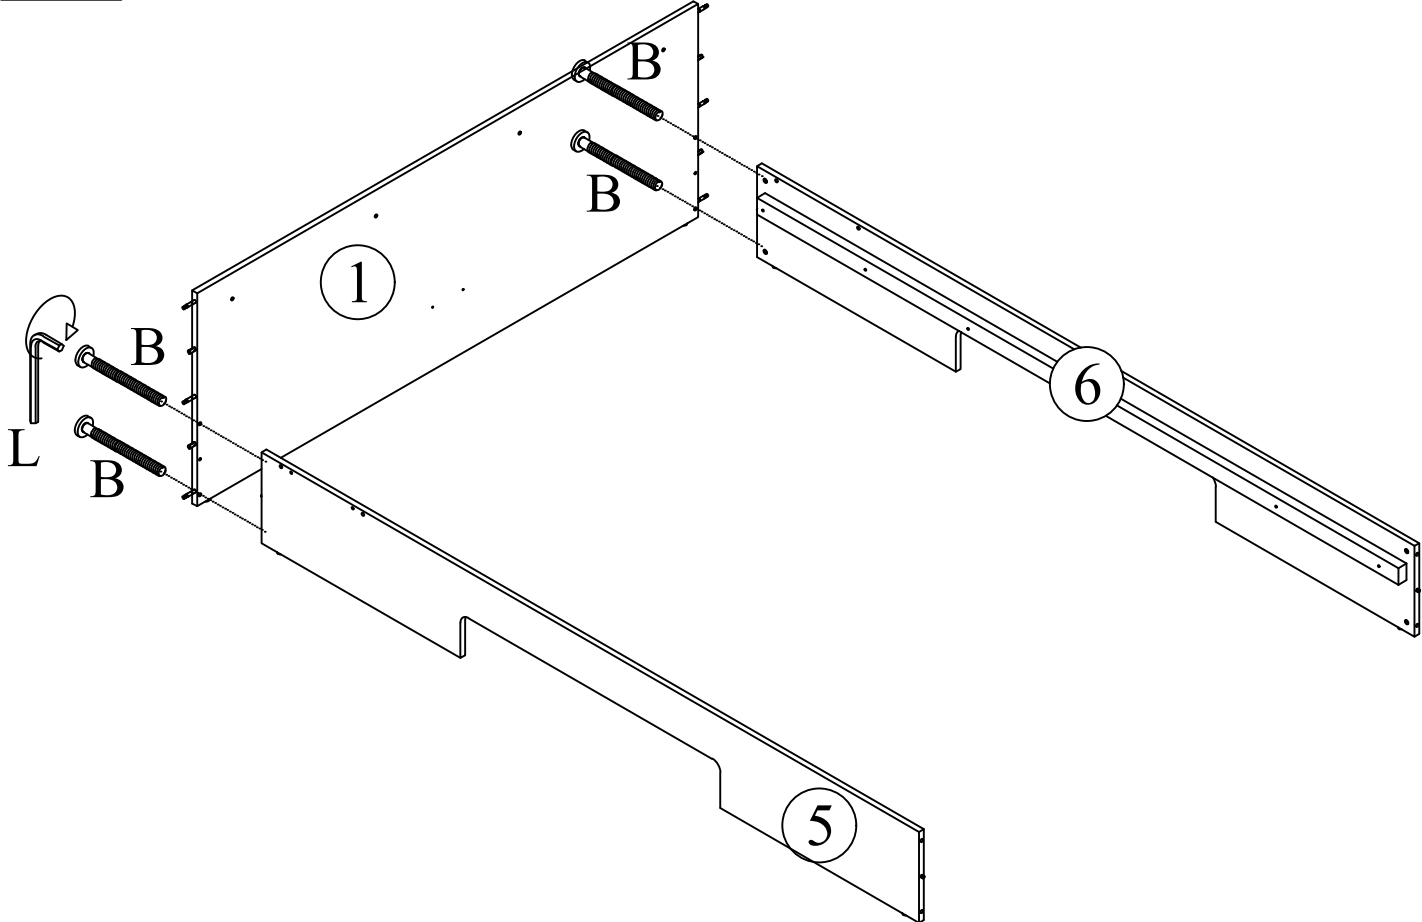


STEP 4

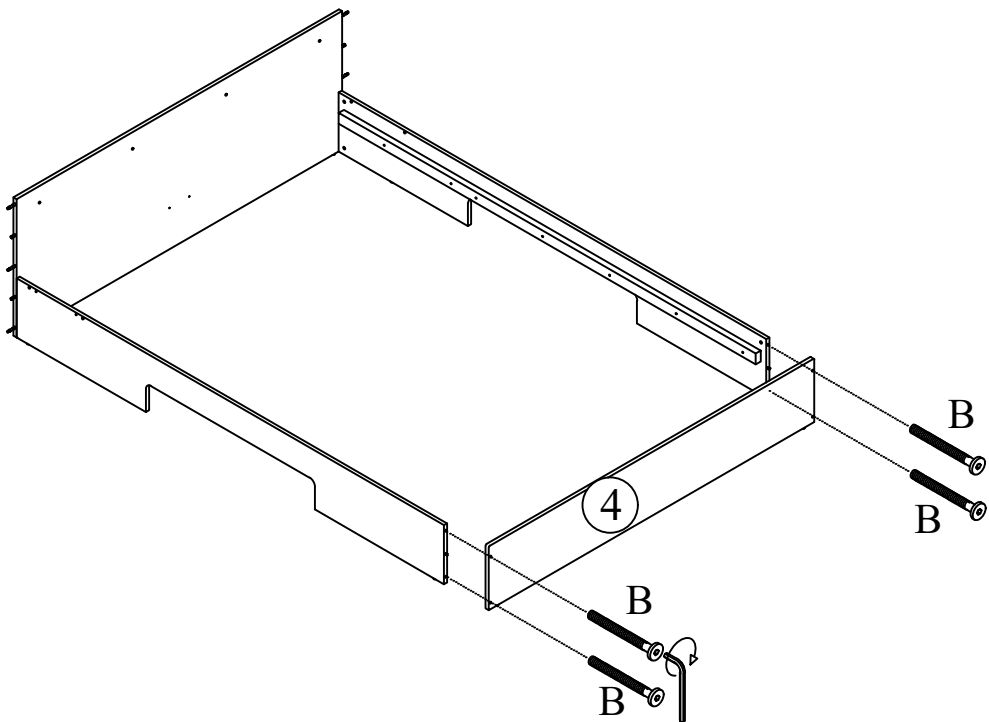


STEP 5

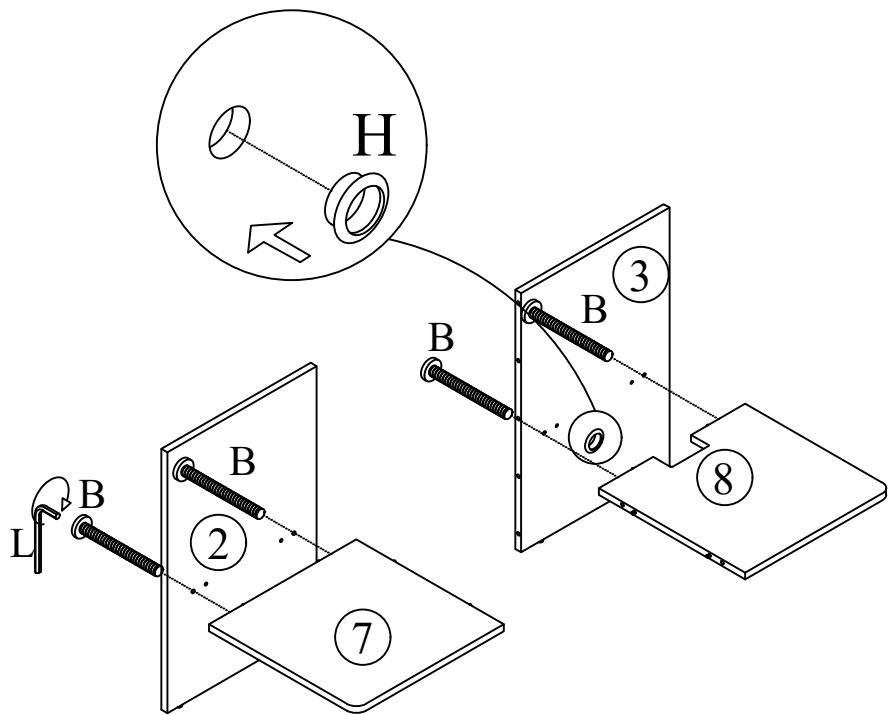


STEP 6

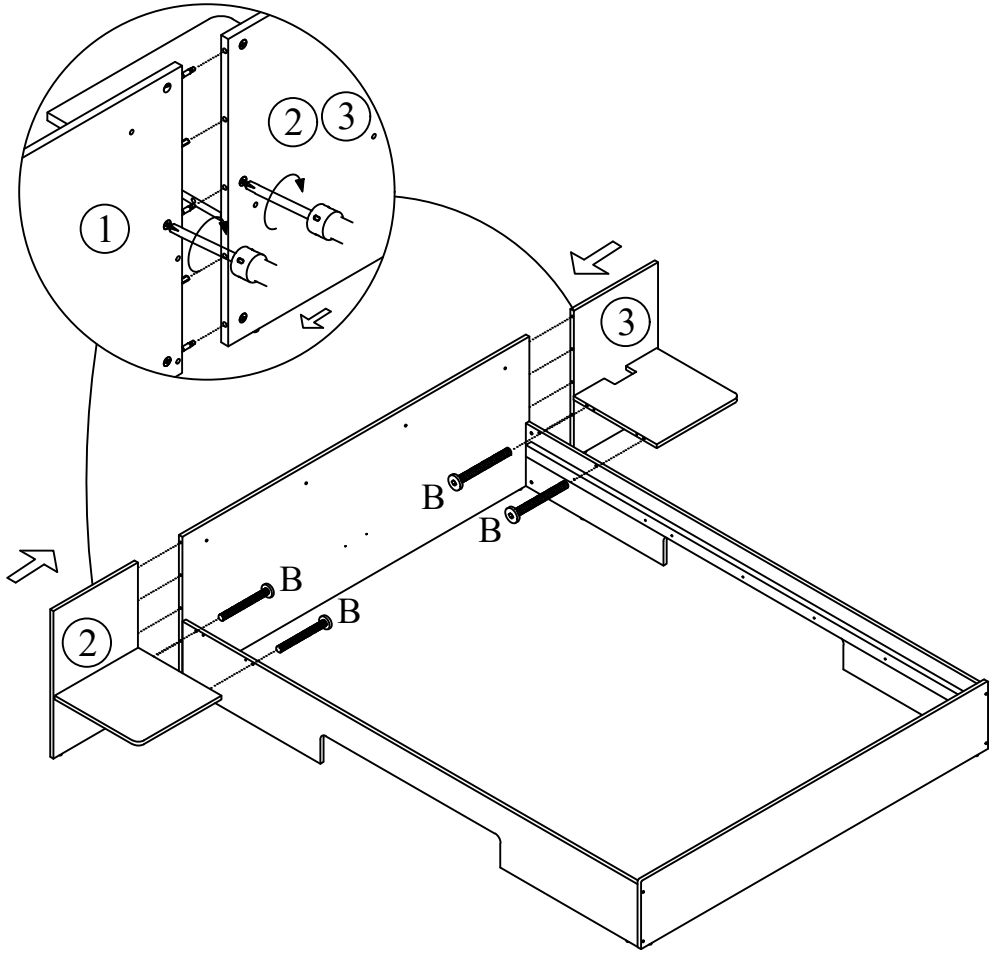


STEP 7

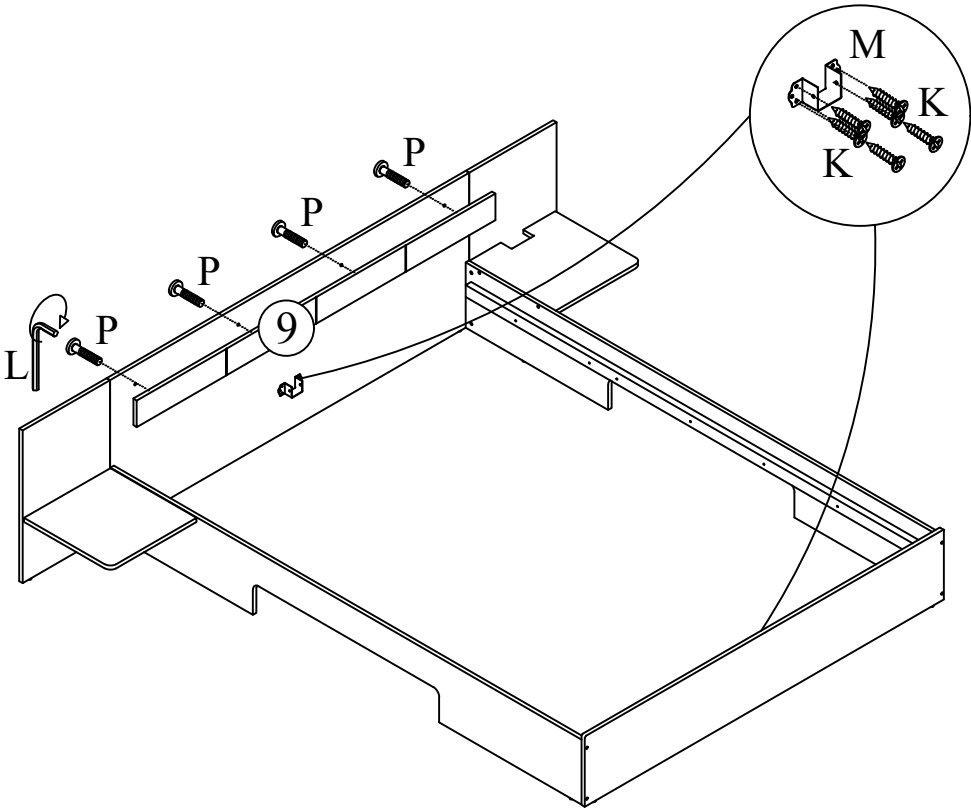



STEP 8

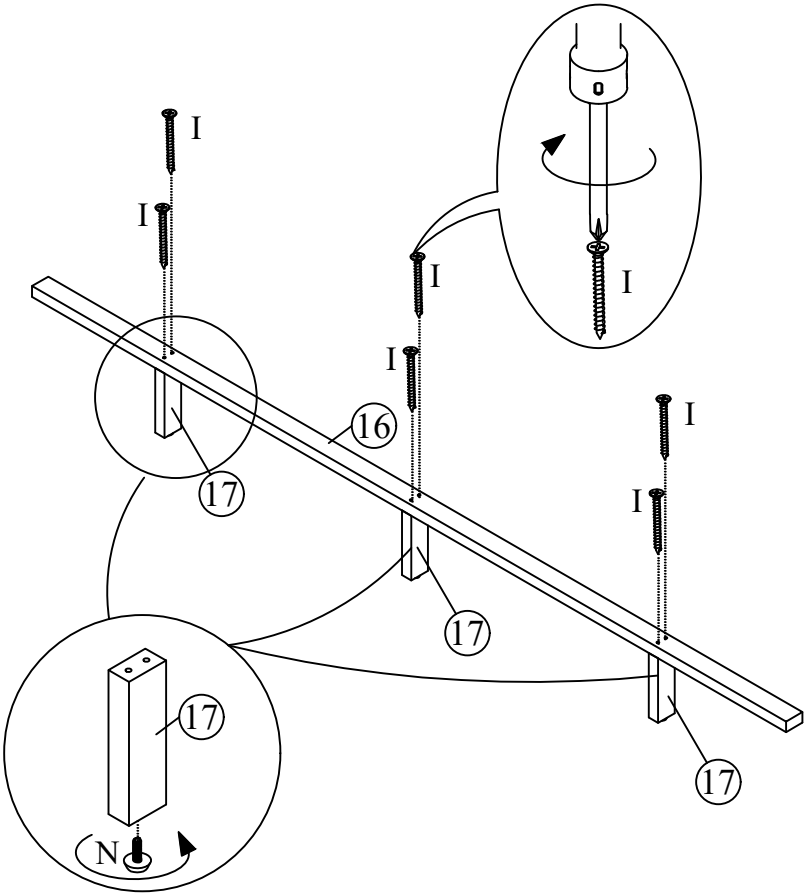

STEP 9

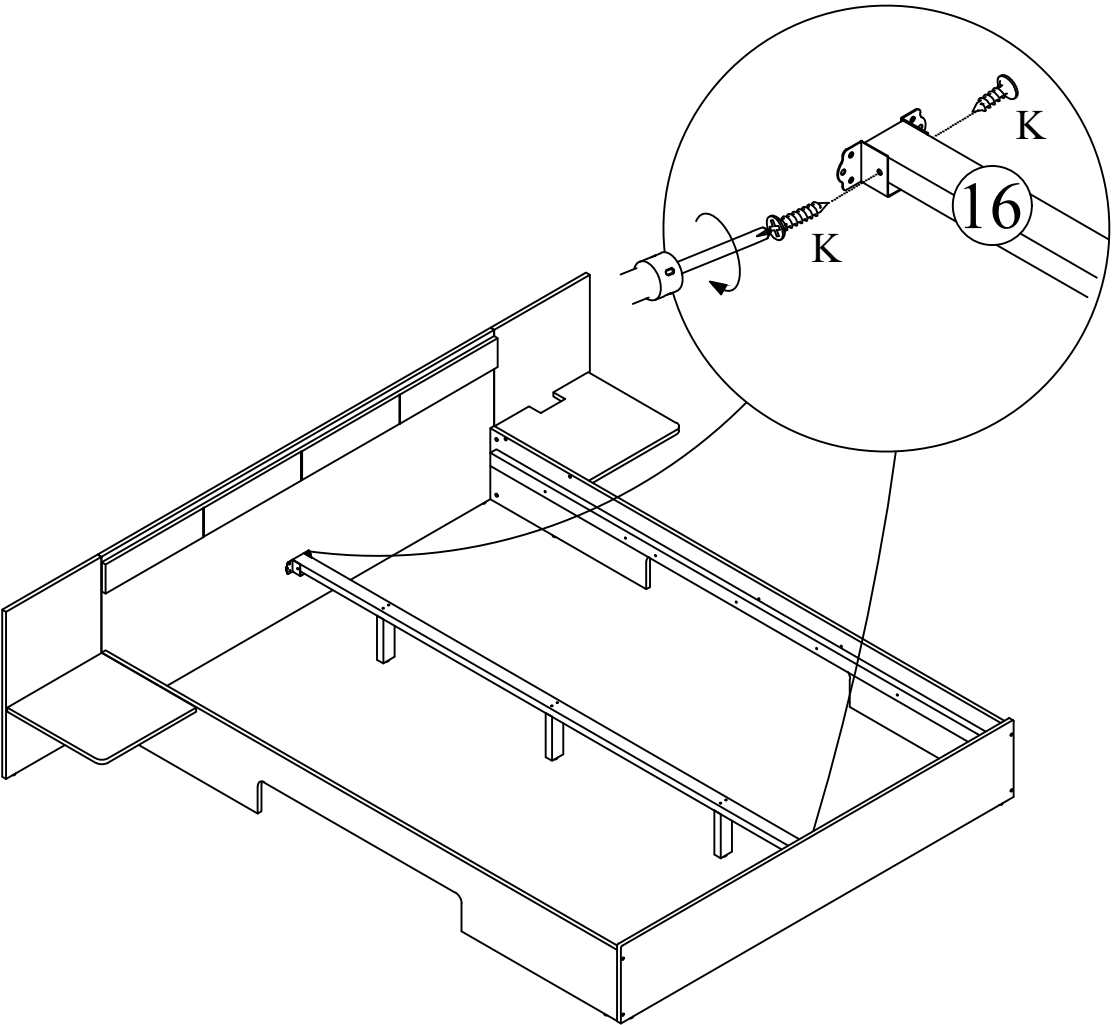


STEP 10

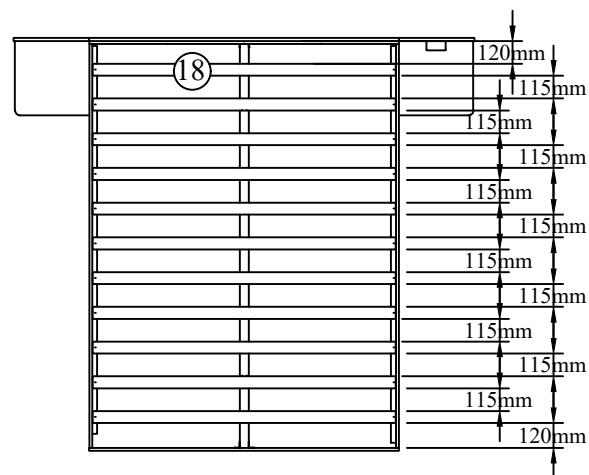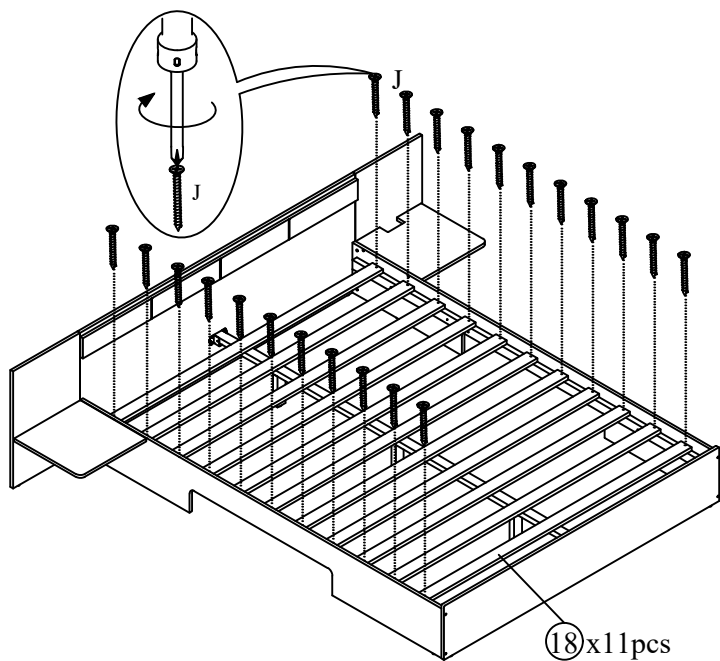


Please follow the above diagram for fixing slat base.


STEP 11

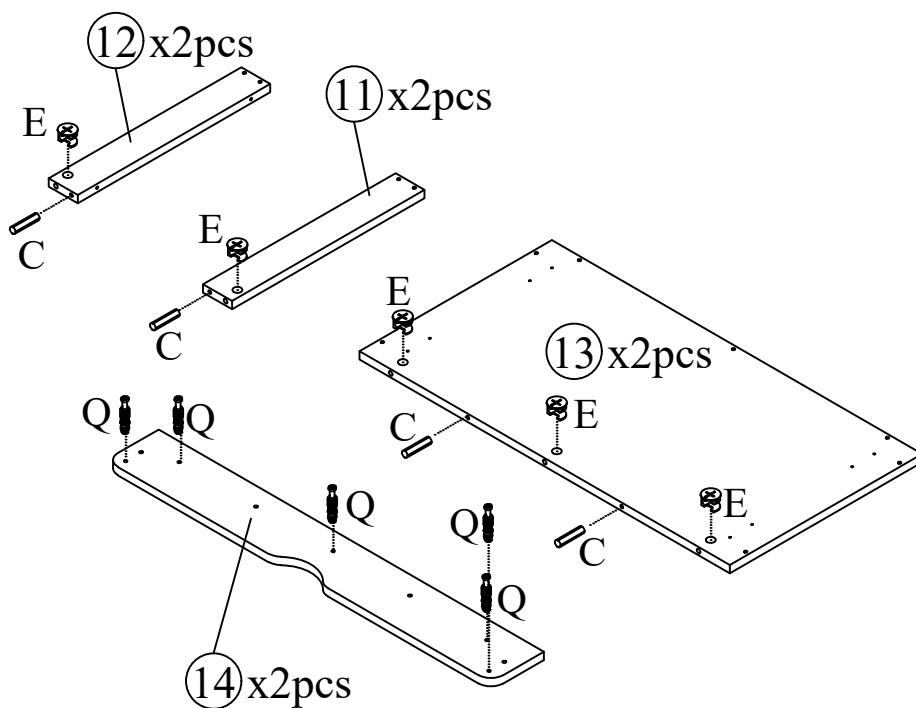

STEP 12

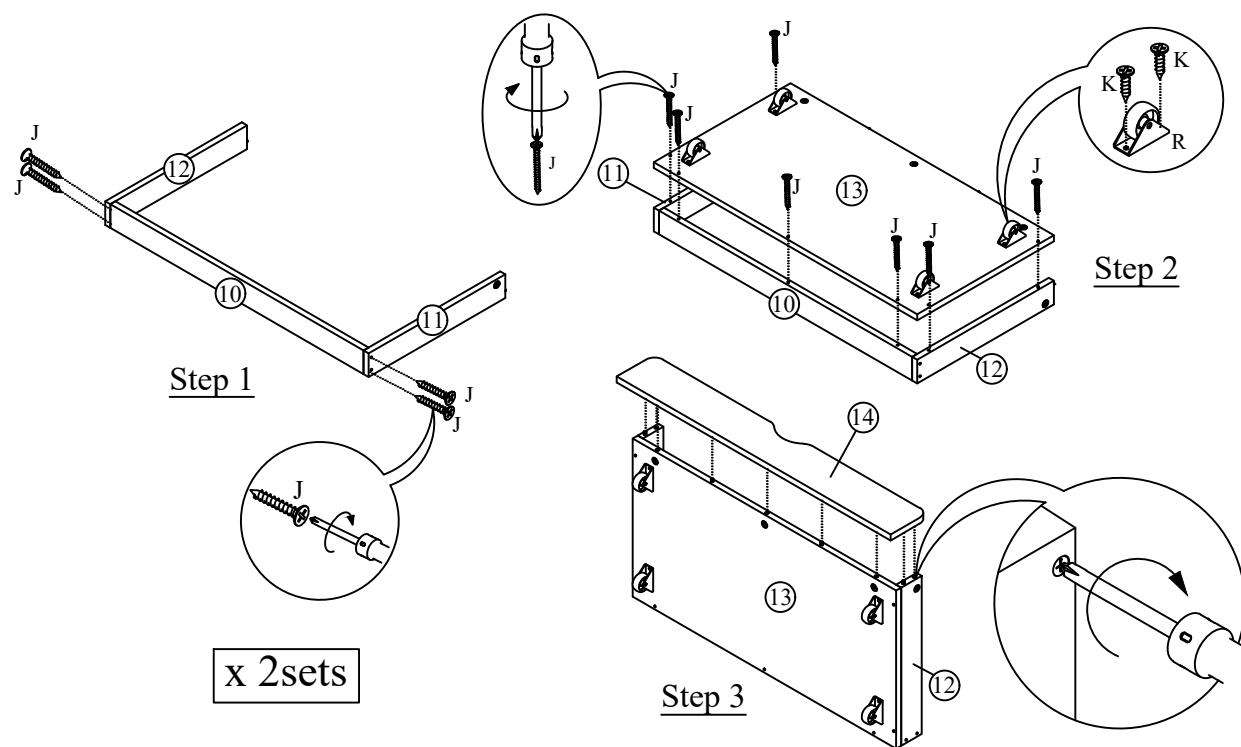

STEP 13

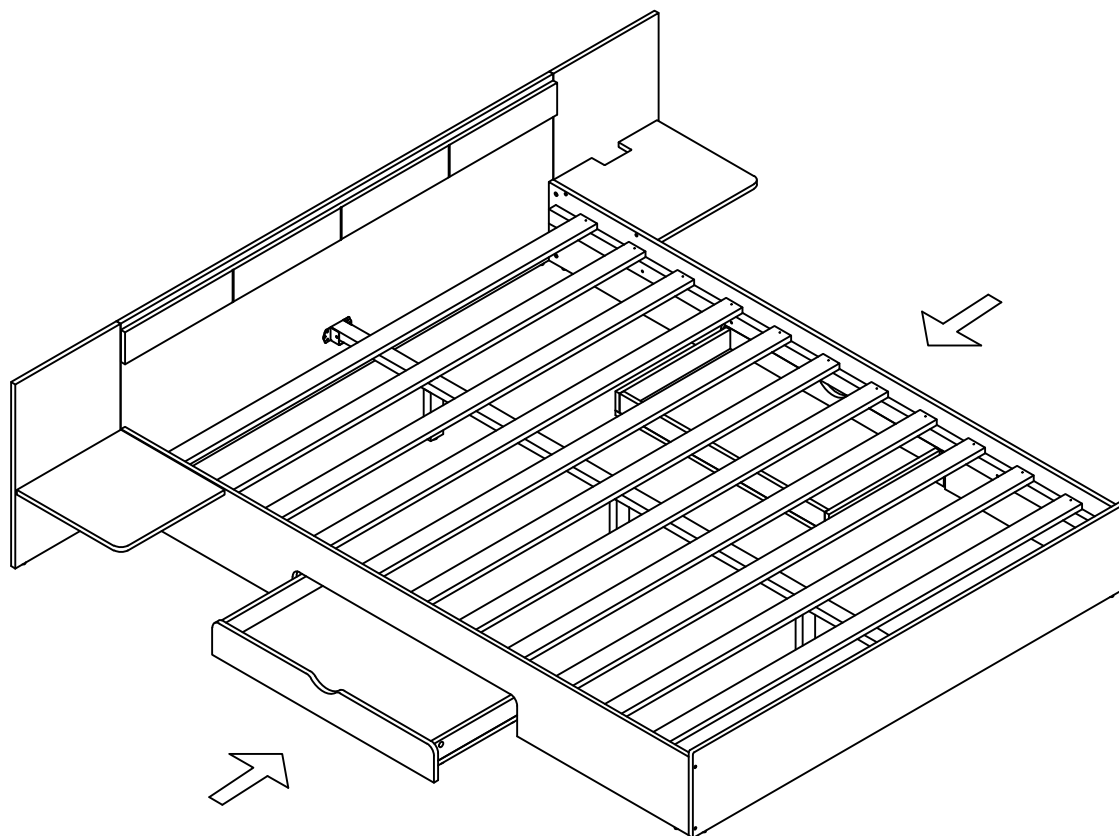

STEP 14

