



ASSEMBLY INSTRUCTION

FULL BED WITH UPH HB





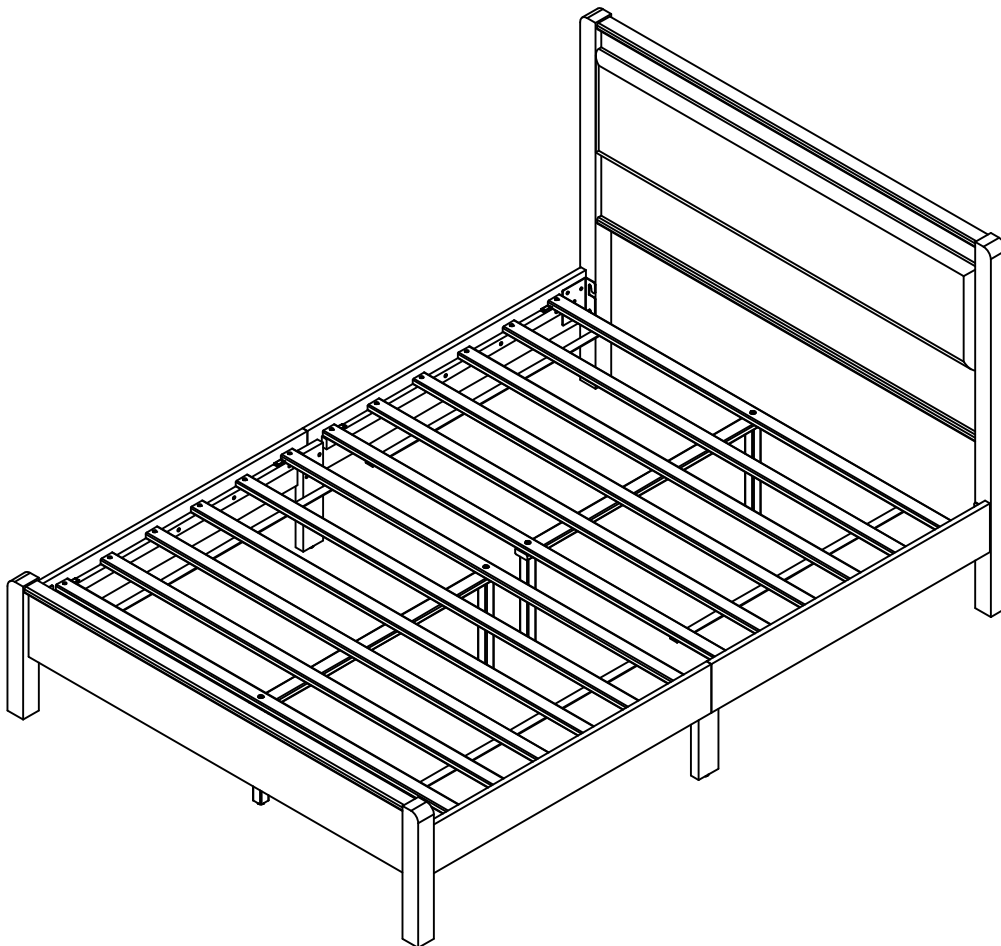


MT33002


Detail View

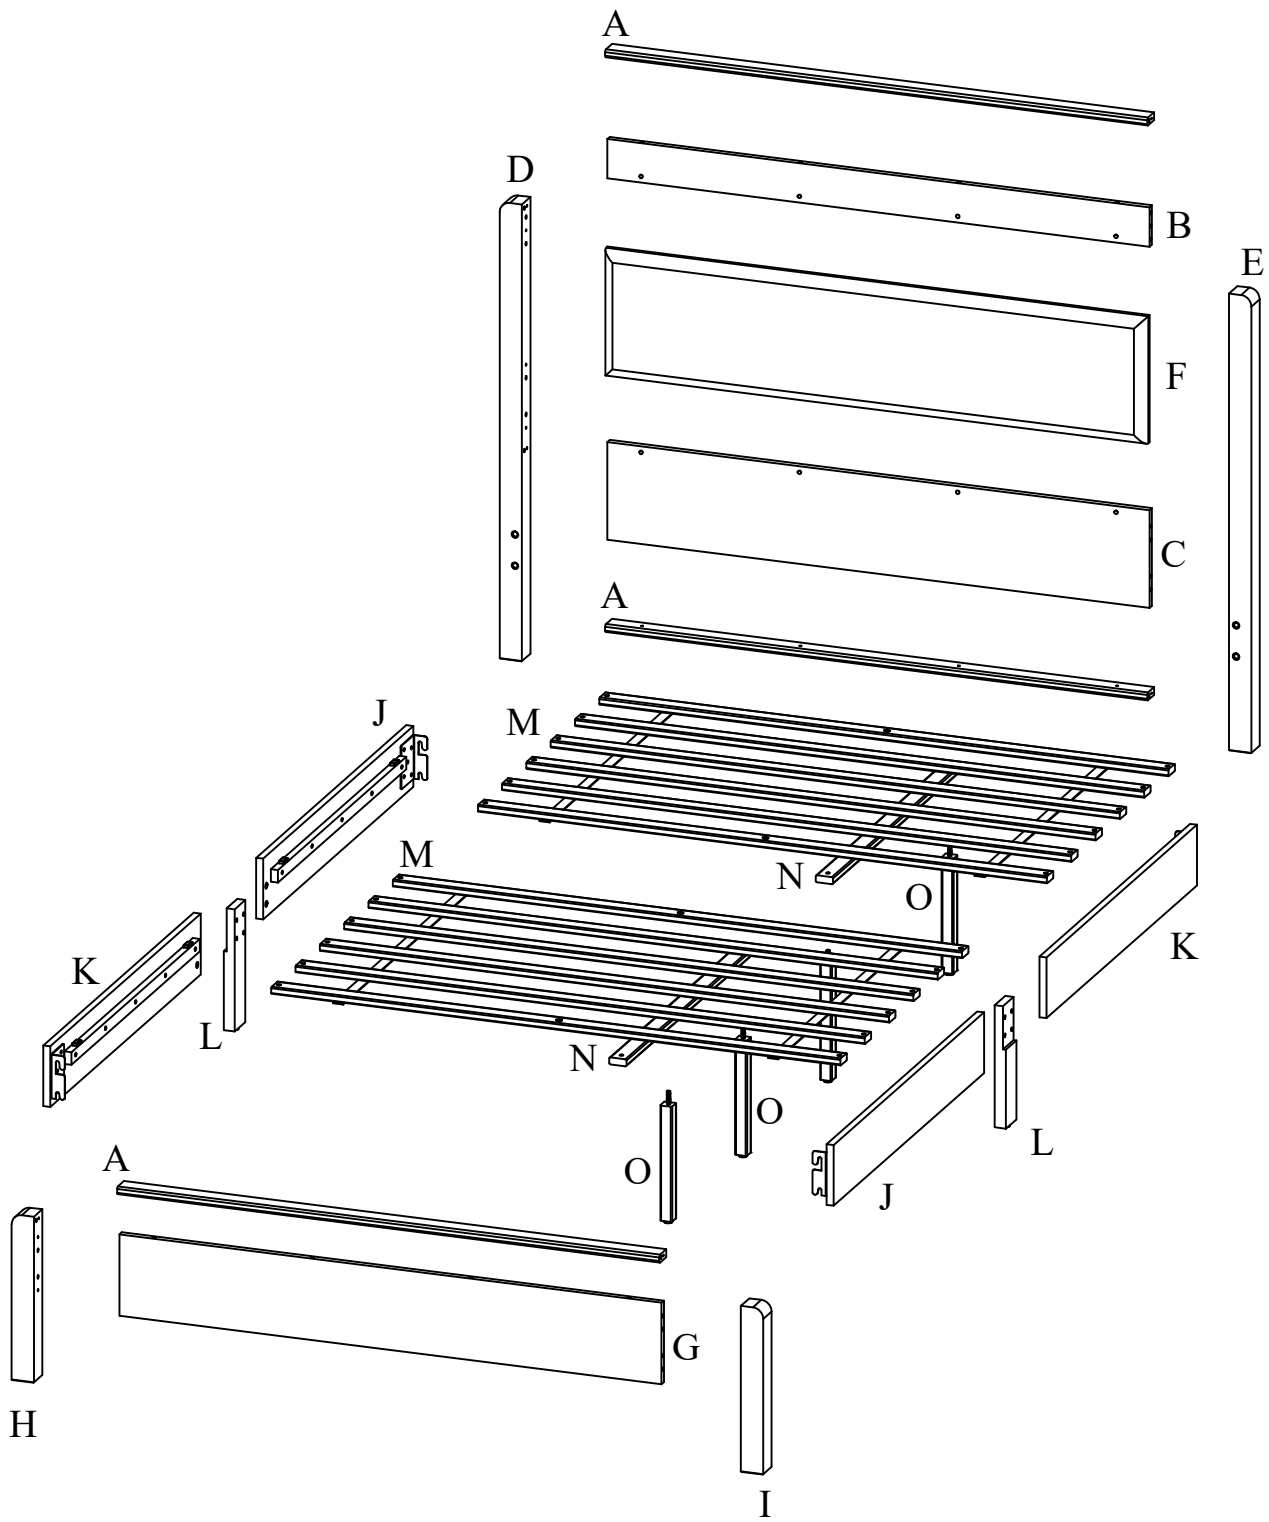

Part List

A  FB / HB Top & Btm Rail - 3 pcs	B  HB Top panel - 1 pc	C  HB Bottom Panel - 1 pc
D  HB Post L - 1 pc	E  HB Post R - 1 pc	F  HB Cushion - 1 pc
G  FB Panel - 1 pc	H  FB Post L - 1 pc	I  FB Post R - 1 pc
J  Side Rail 1 - 2 pcs	K  Side Rail 2 - 2 pcs	L  Center Leg - 2 pcs
M  Slat Rolls - 2 pcs	N  Center Slat - 2 pcs	O  Vertical Leg - 4 pcs

Hardware List


1		2	 15 x 11.5mm	3	 Ø8 x 30mm
Minifix Bolts (22 pcs)		Minifix Cam (22 pcs)		Wood Dowel (18 pcs)	
4	 M6 x 30mm JCBC (8 pcs)	5	 M6 x 35mm JCBC (8 pcs)	6	 M6 Spring Washer (16 pcs)
7	 M6 x 13mm Flat Washer (16 pcs)	8	 M8 x 20mm JCBB (8 pcs)	9	 M8 x 18mm Flat Washer (8 pcs)
10	 M4 x 30mm PH Screw (24 pcs)	11	 M4 x 38mm PH Screw (6 pcs)	12	 M4 Allen Key + Screw Driver (1 pc)
		13	 M5 Allen Key (1 pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

1	3
	
6 PCS	8 PCS

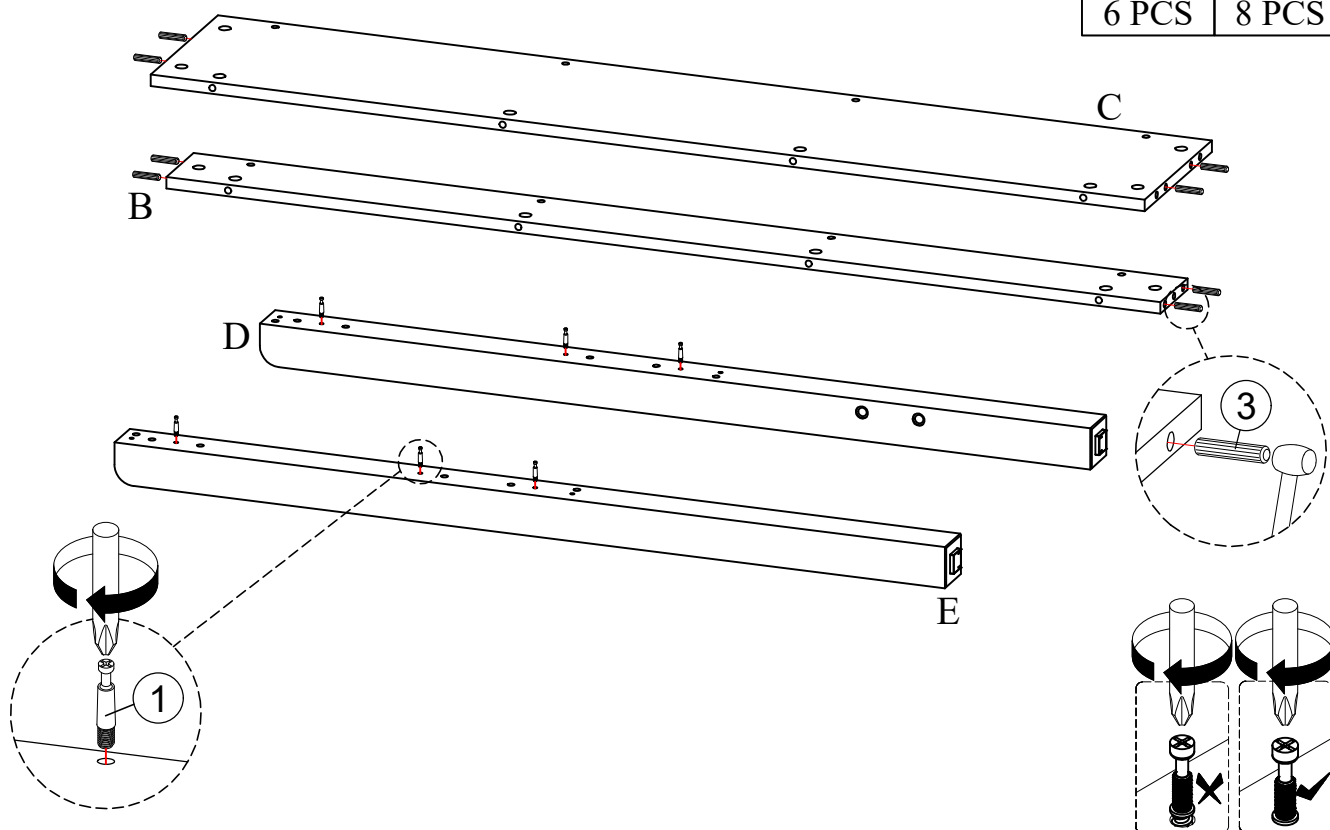

STEP 2:

1	3
	
12 PCS	6 PCS

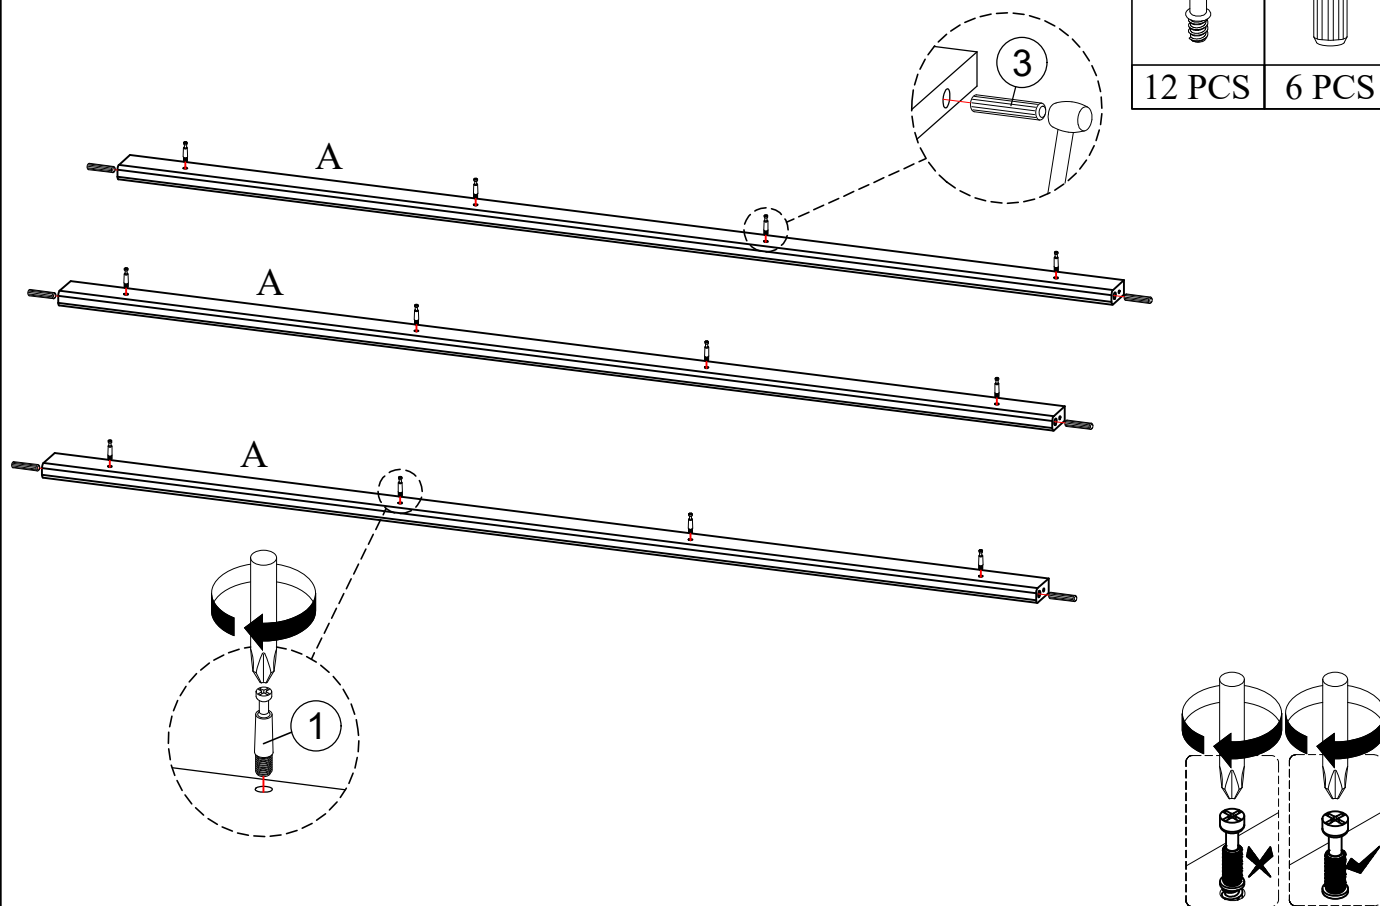


STEP 3:

2



4 PCS

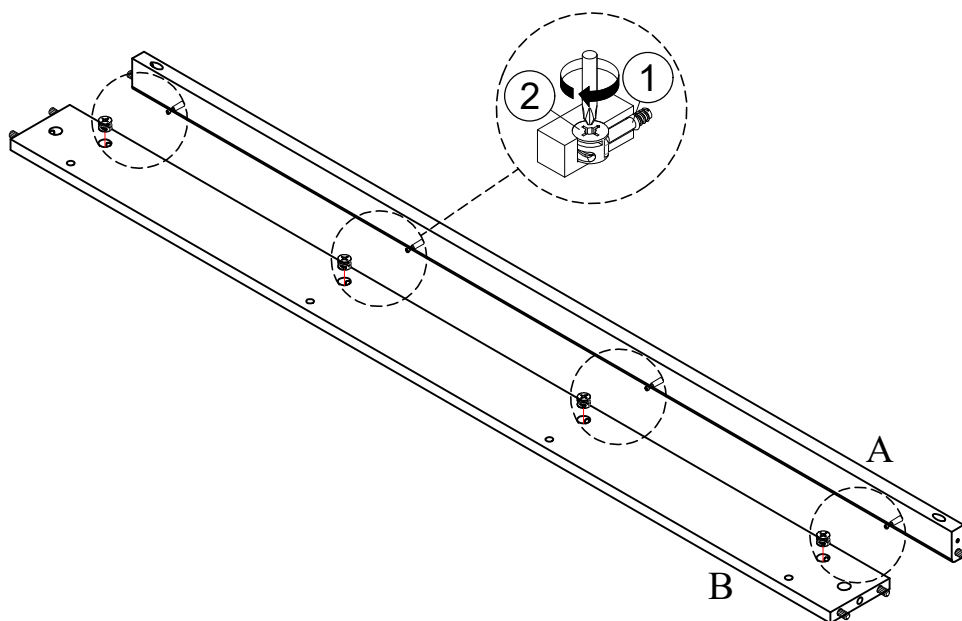


STEP 4:

2



4 PCS

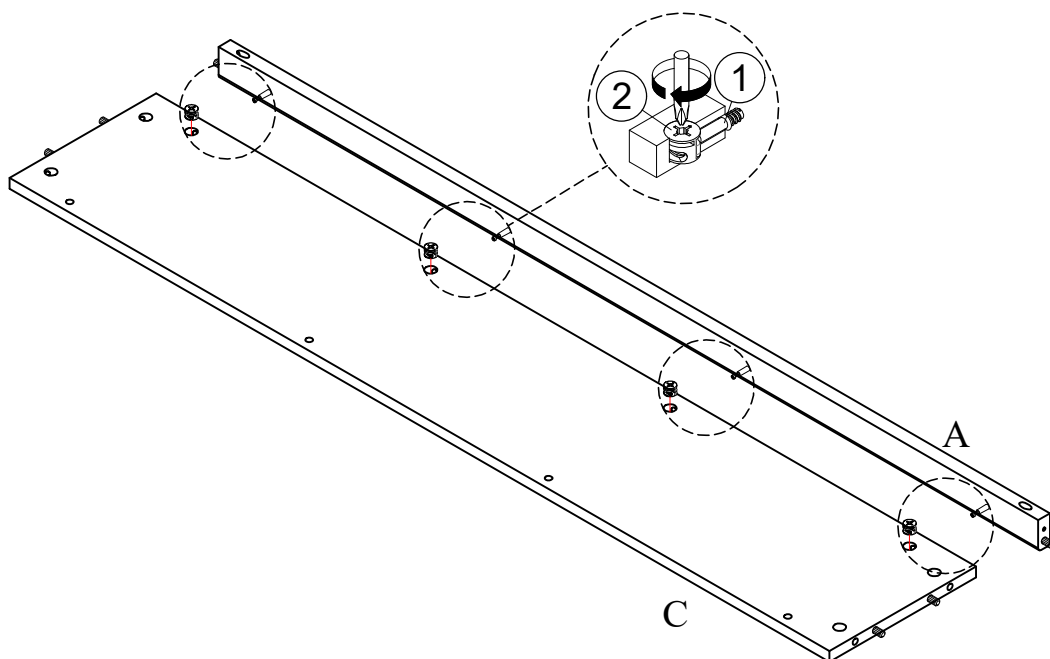


STEP 5:

2



6 PCS

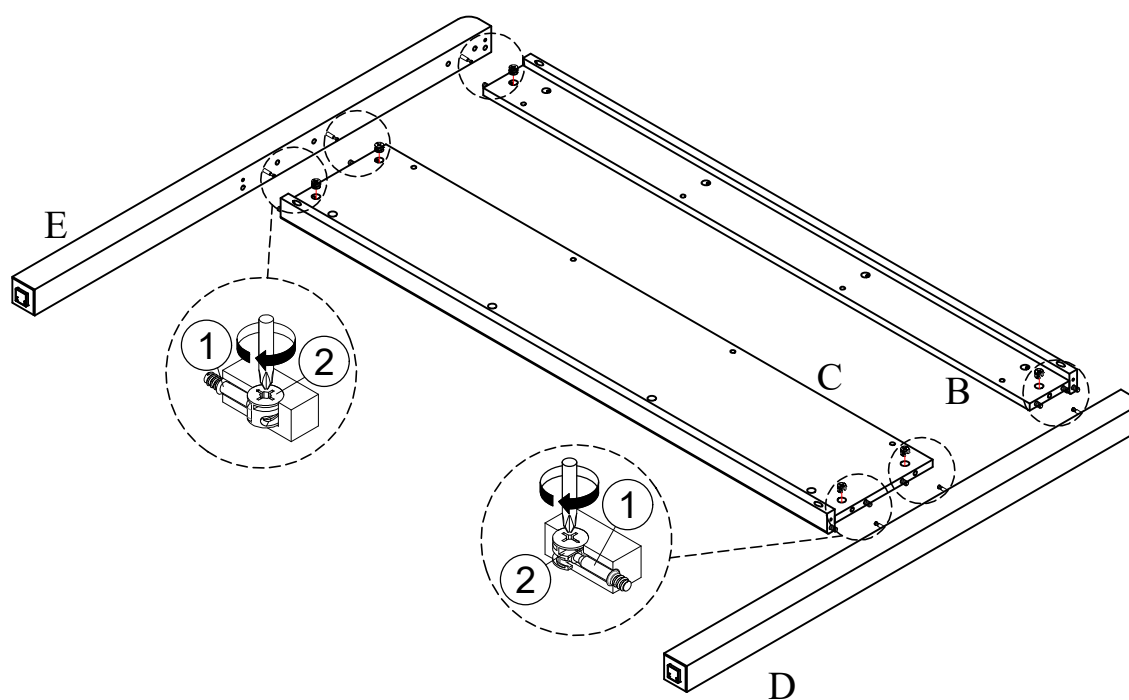


STEP 6:


11




4 PCS

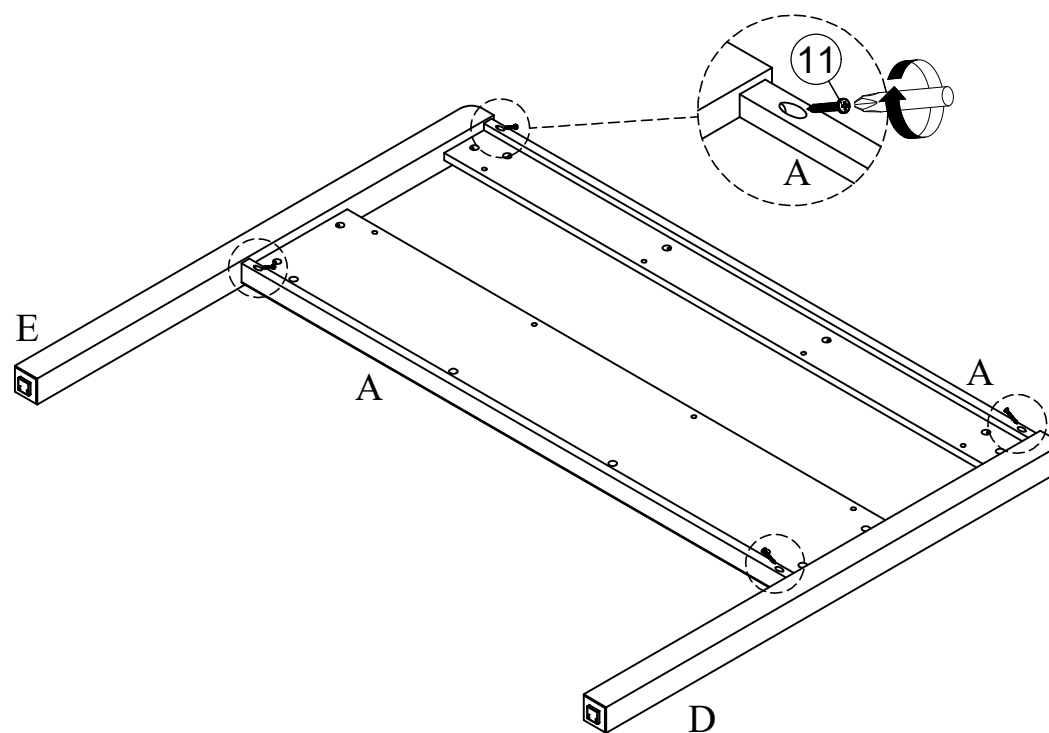

STEP 7:

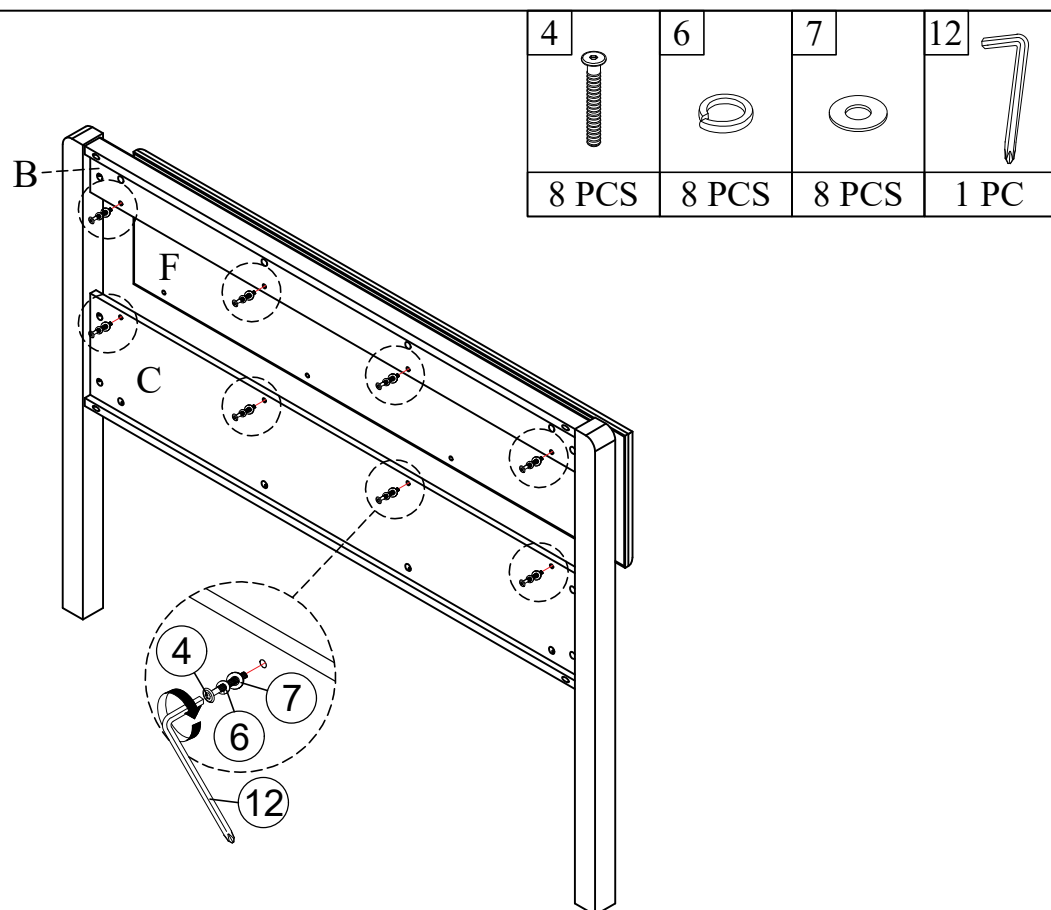

STEP 8:

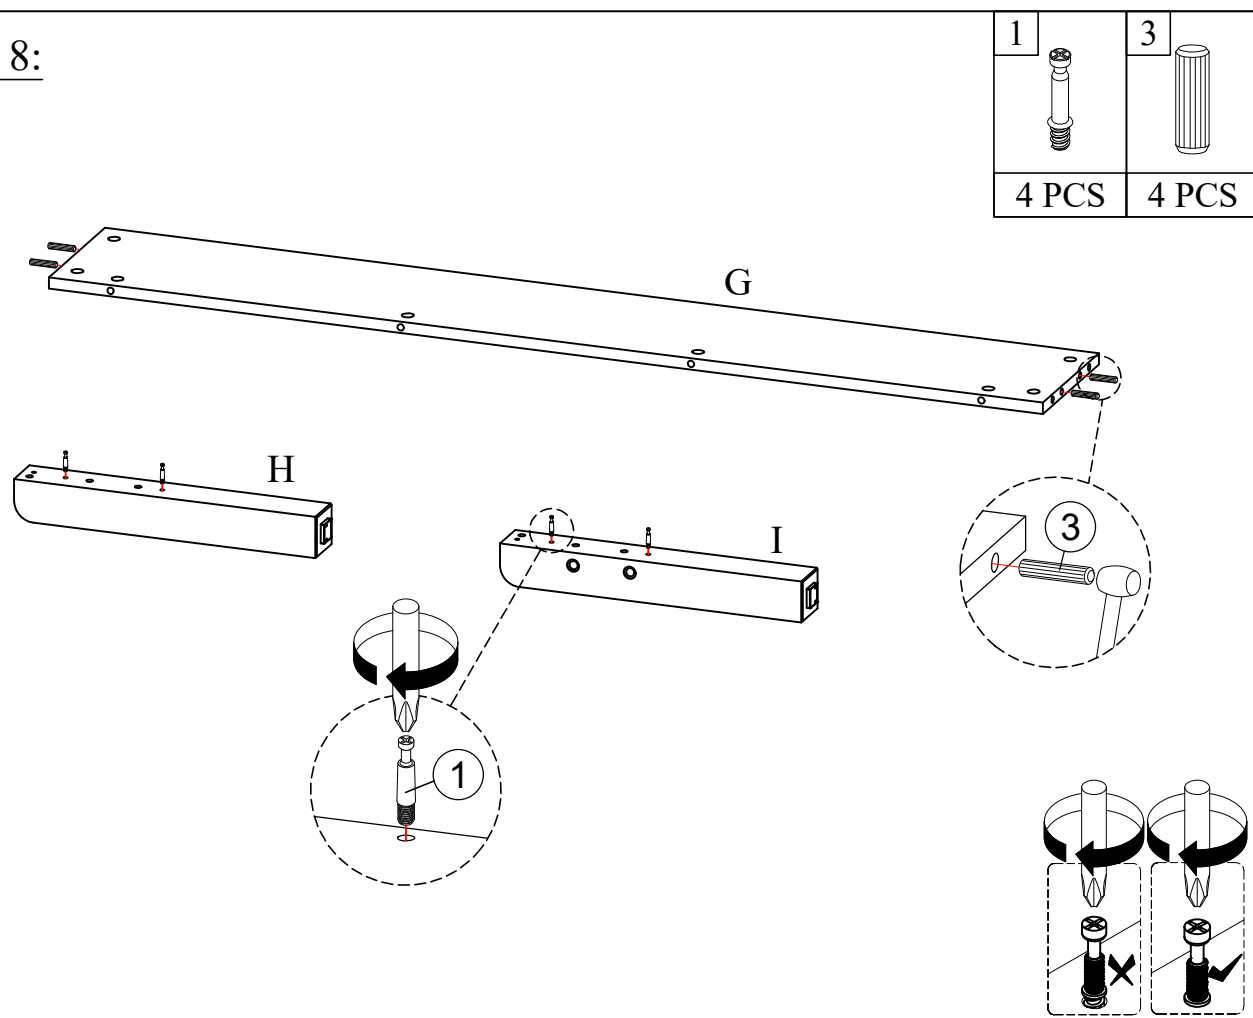


STEP 9:

2



4 PCS

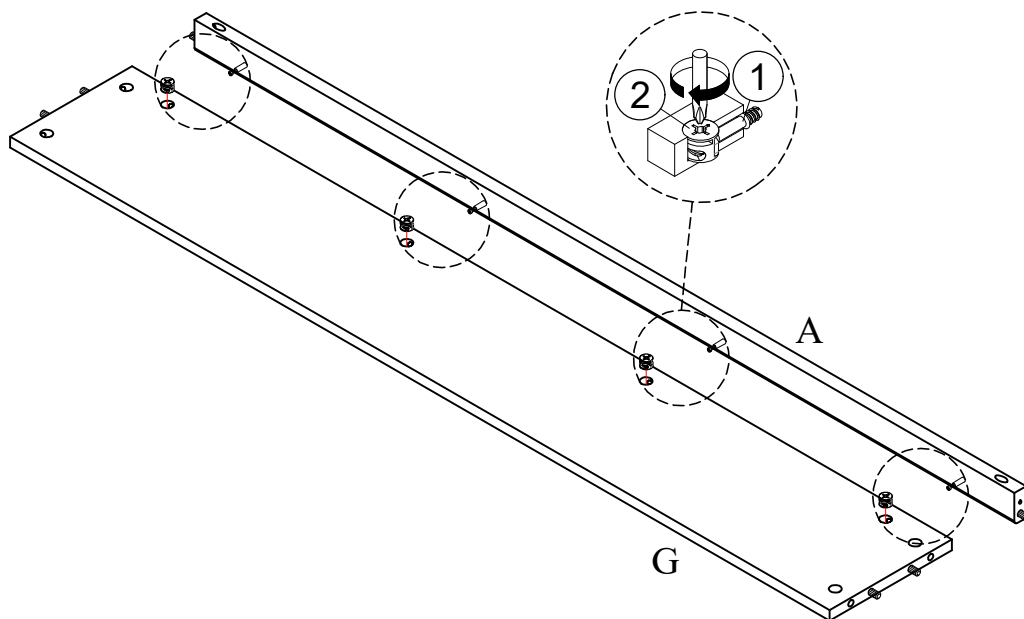


STEP 10:

2




4 PCS

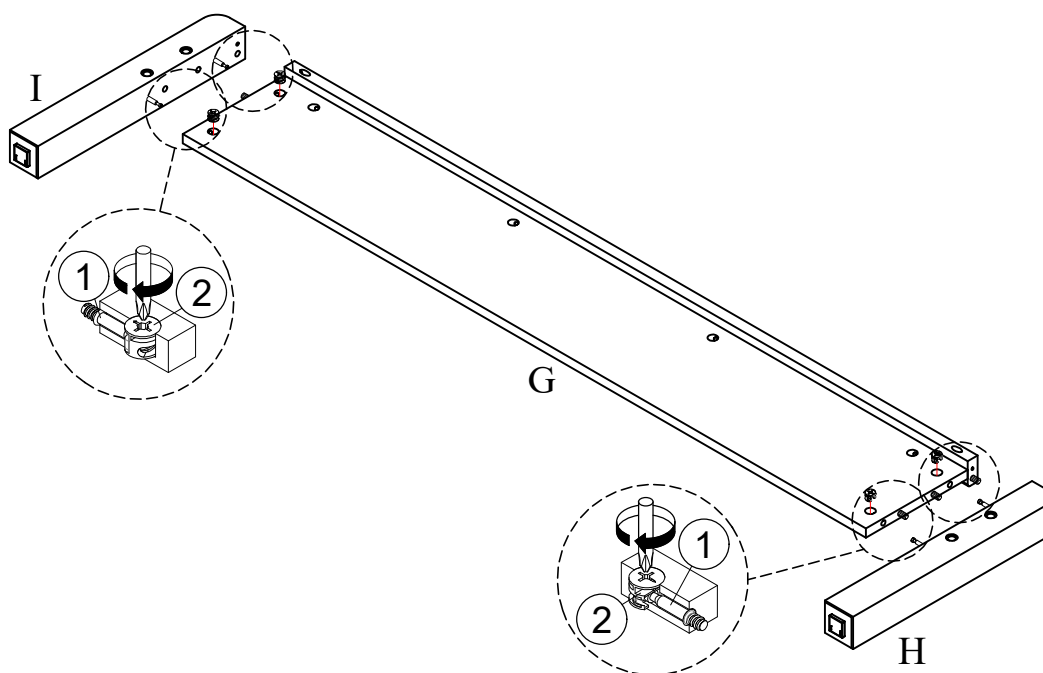


STEP 11:

11	
2 PCS	

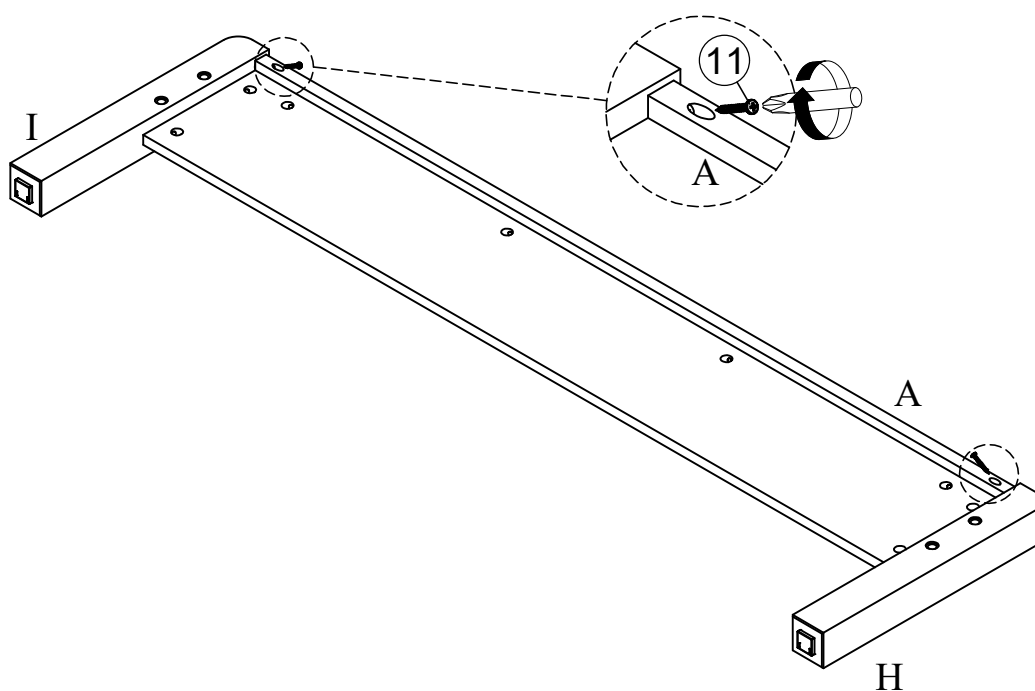


STEP 12:

5		6		7		12	
8 PCS		8 PCS		8 PCS		1 PC	

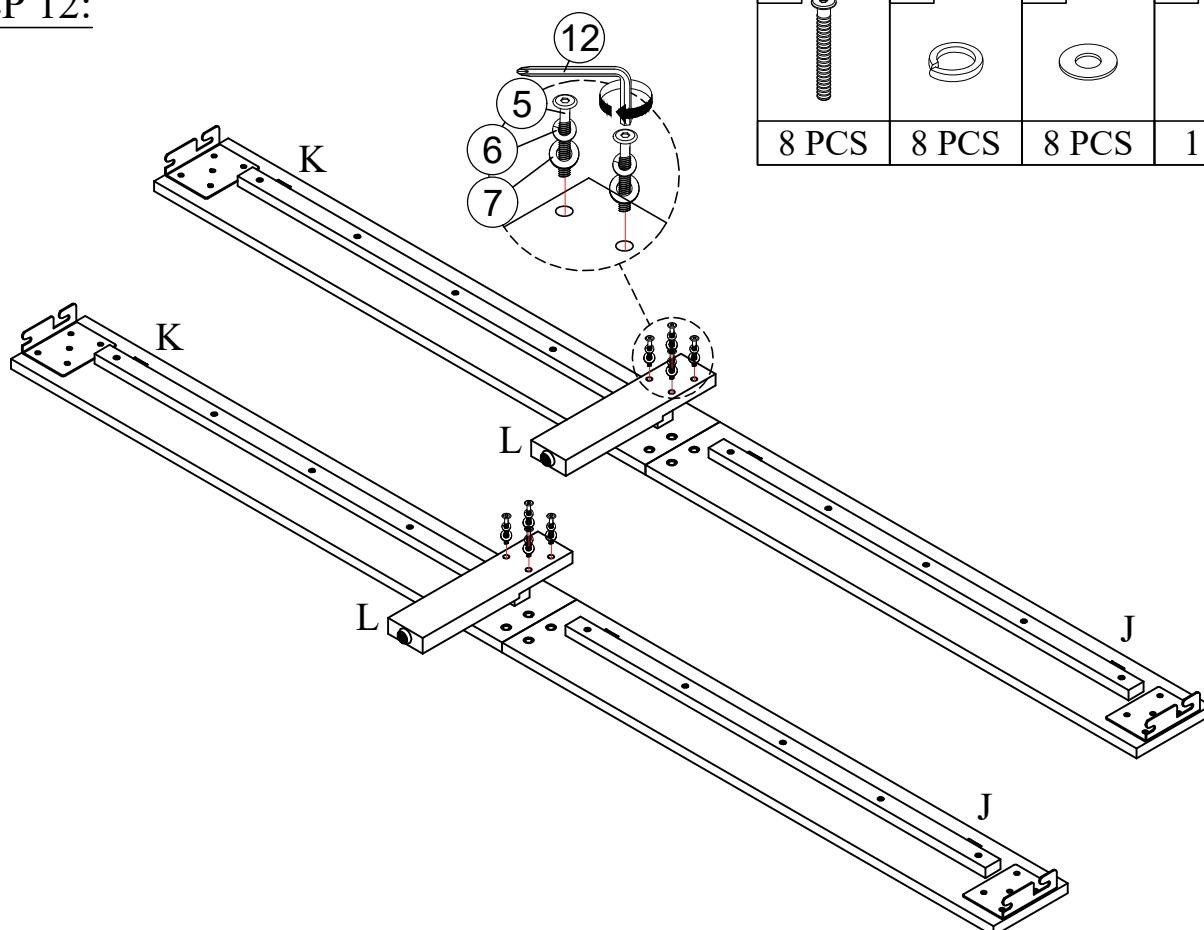


STEP 13:

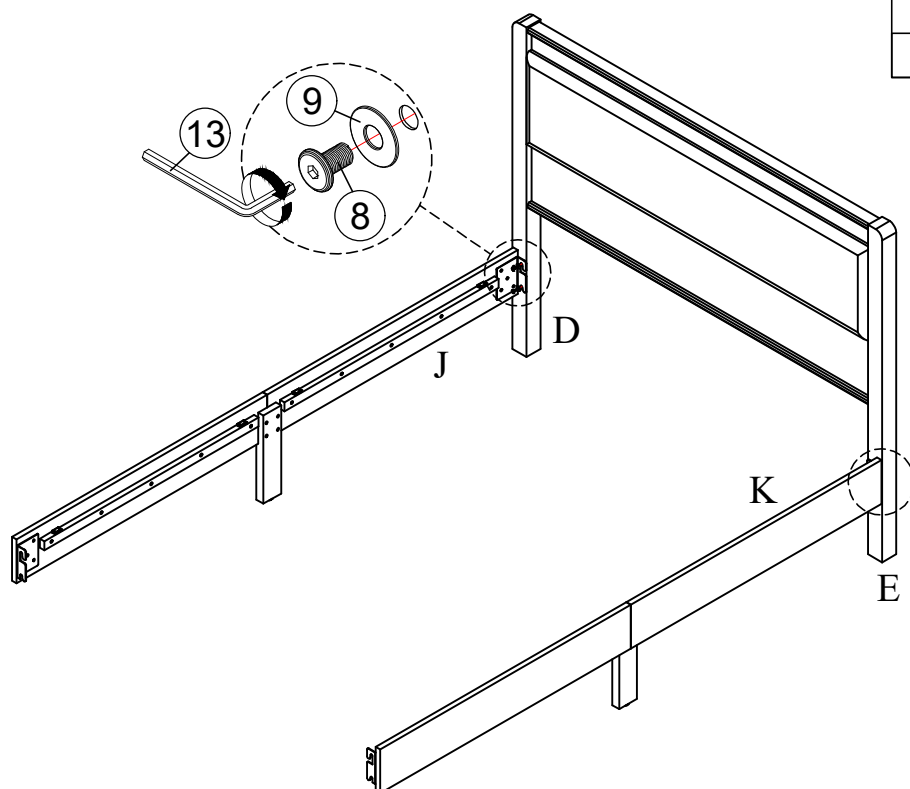


8	9	13
		
4 PCS	4 PCS	1 PC

STEP 14:

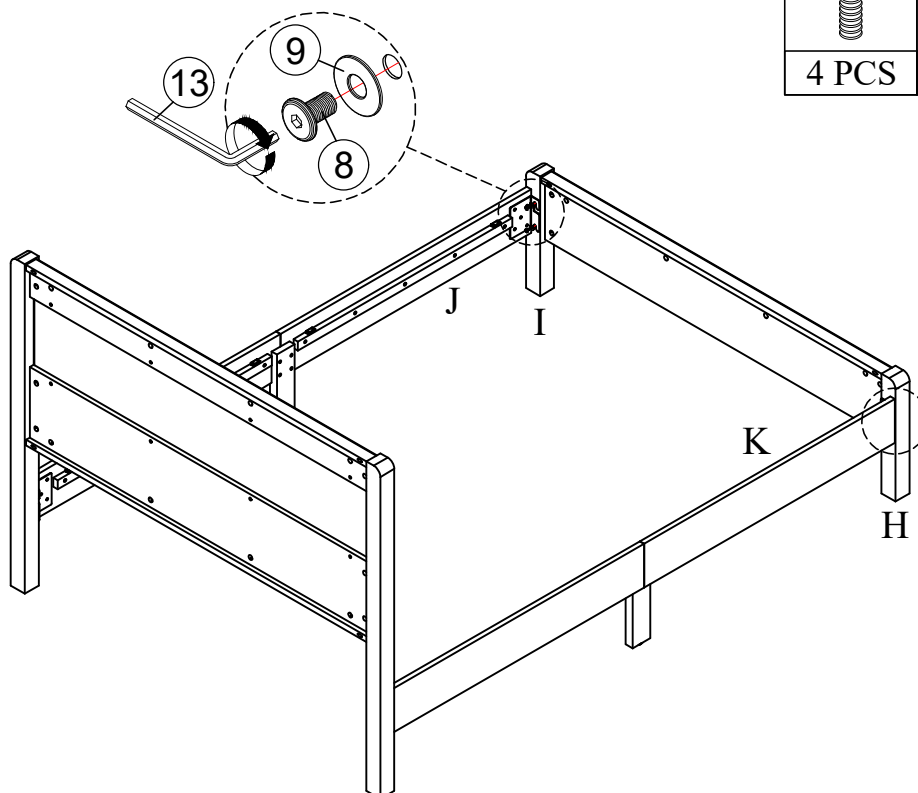


8	9	13
		
4 PCS	4 PCS	1 PC

STEP 15:

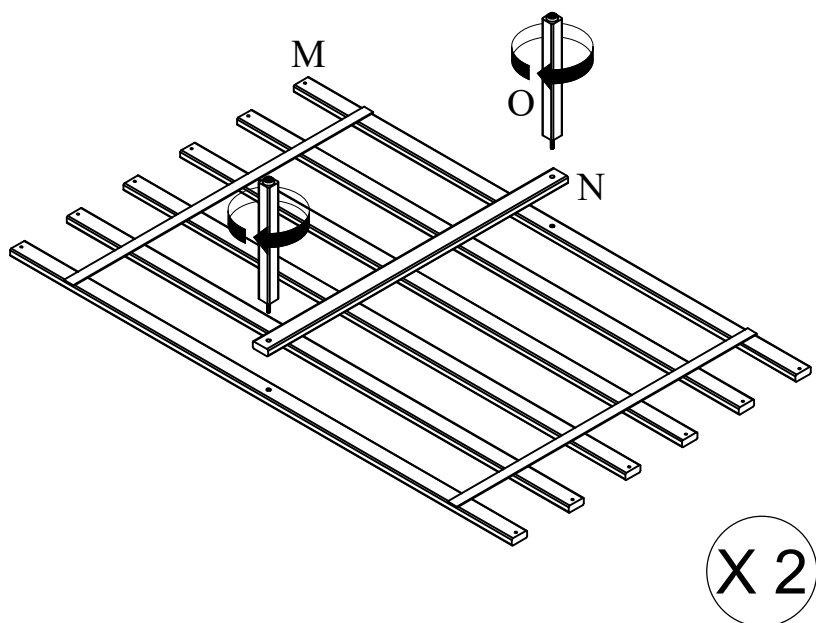

STEP 16:

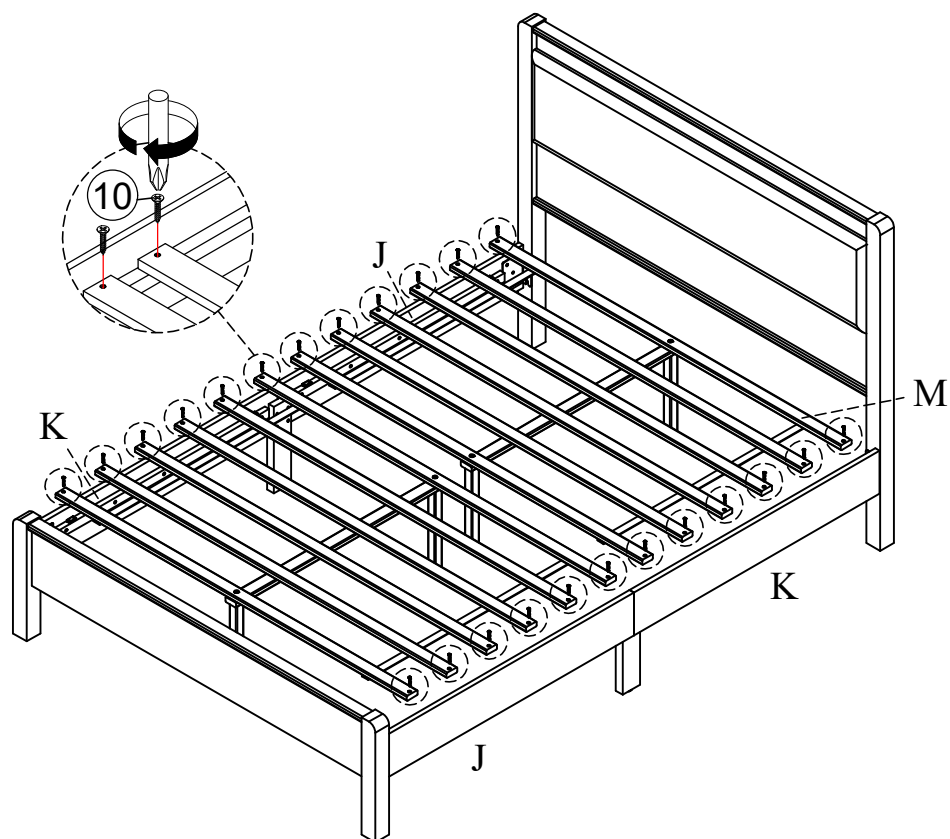

10



24 PCS