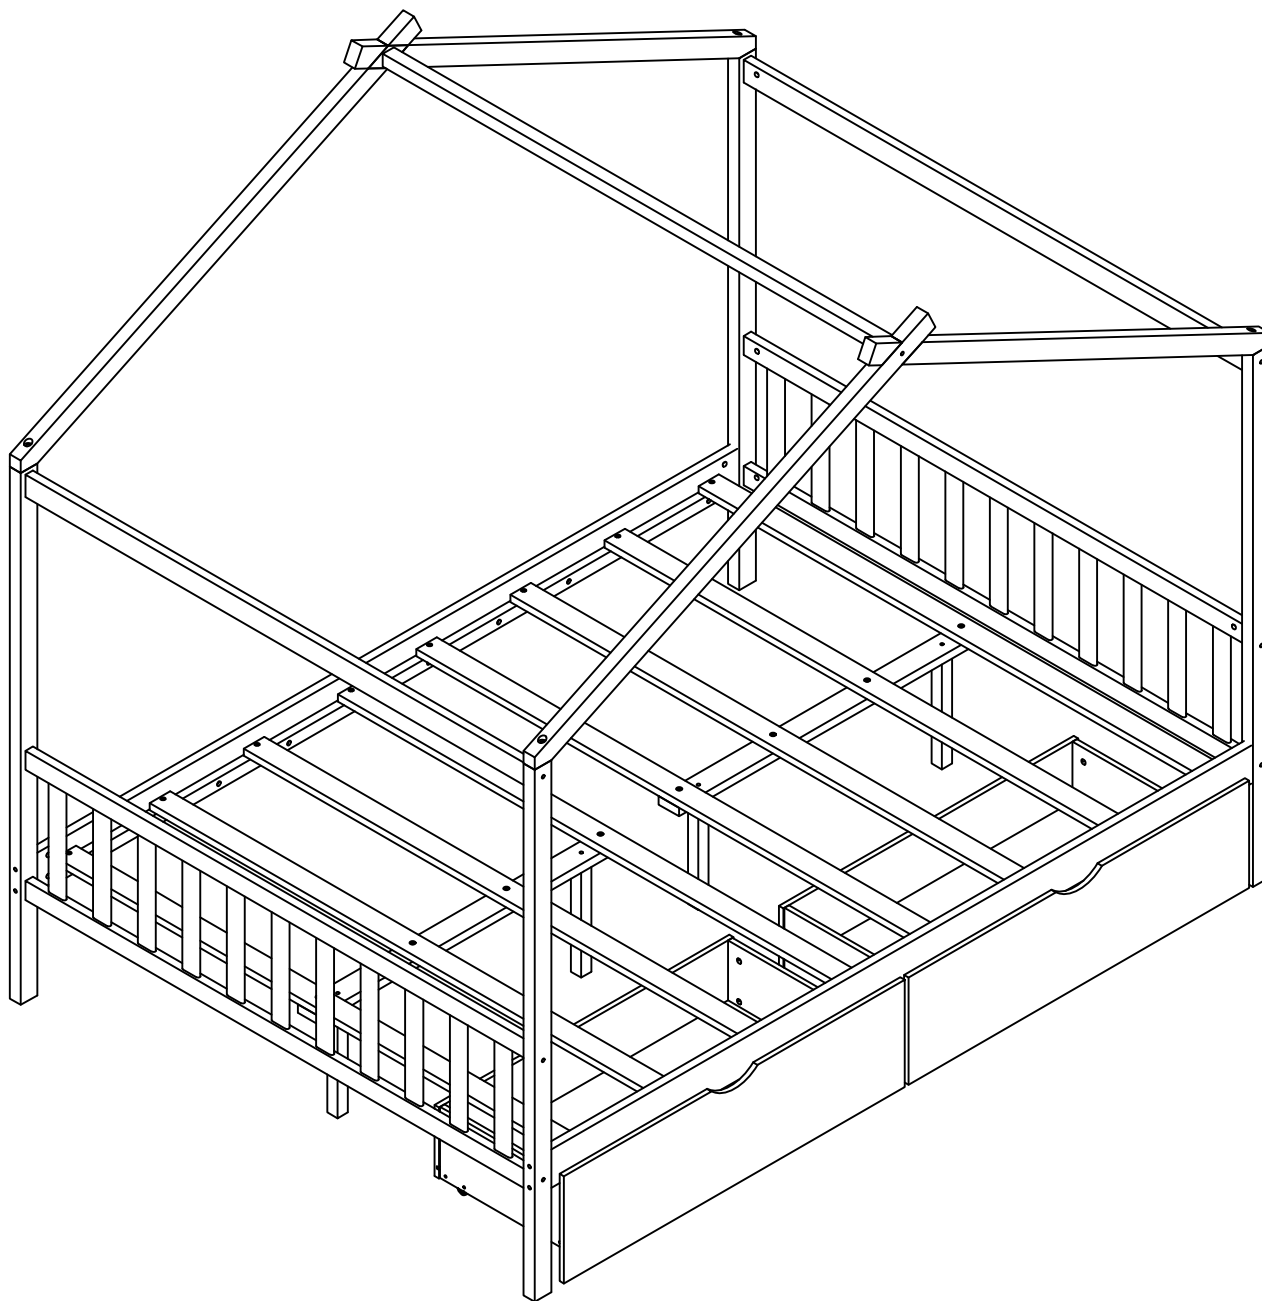



ASSEMBLY INSTRUCTIONS

FULL SIZE HOUSE BED WITH DRAWERS



WF292923








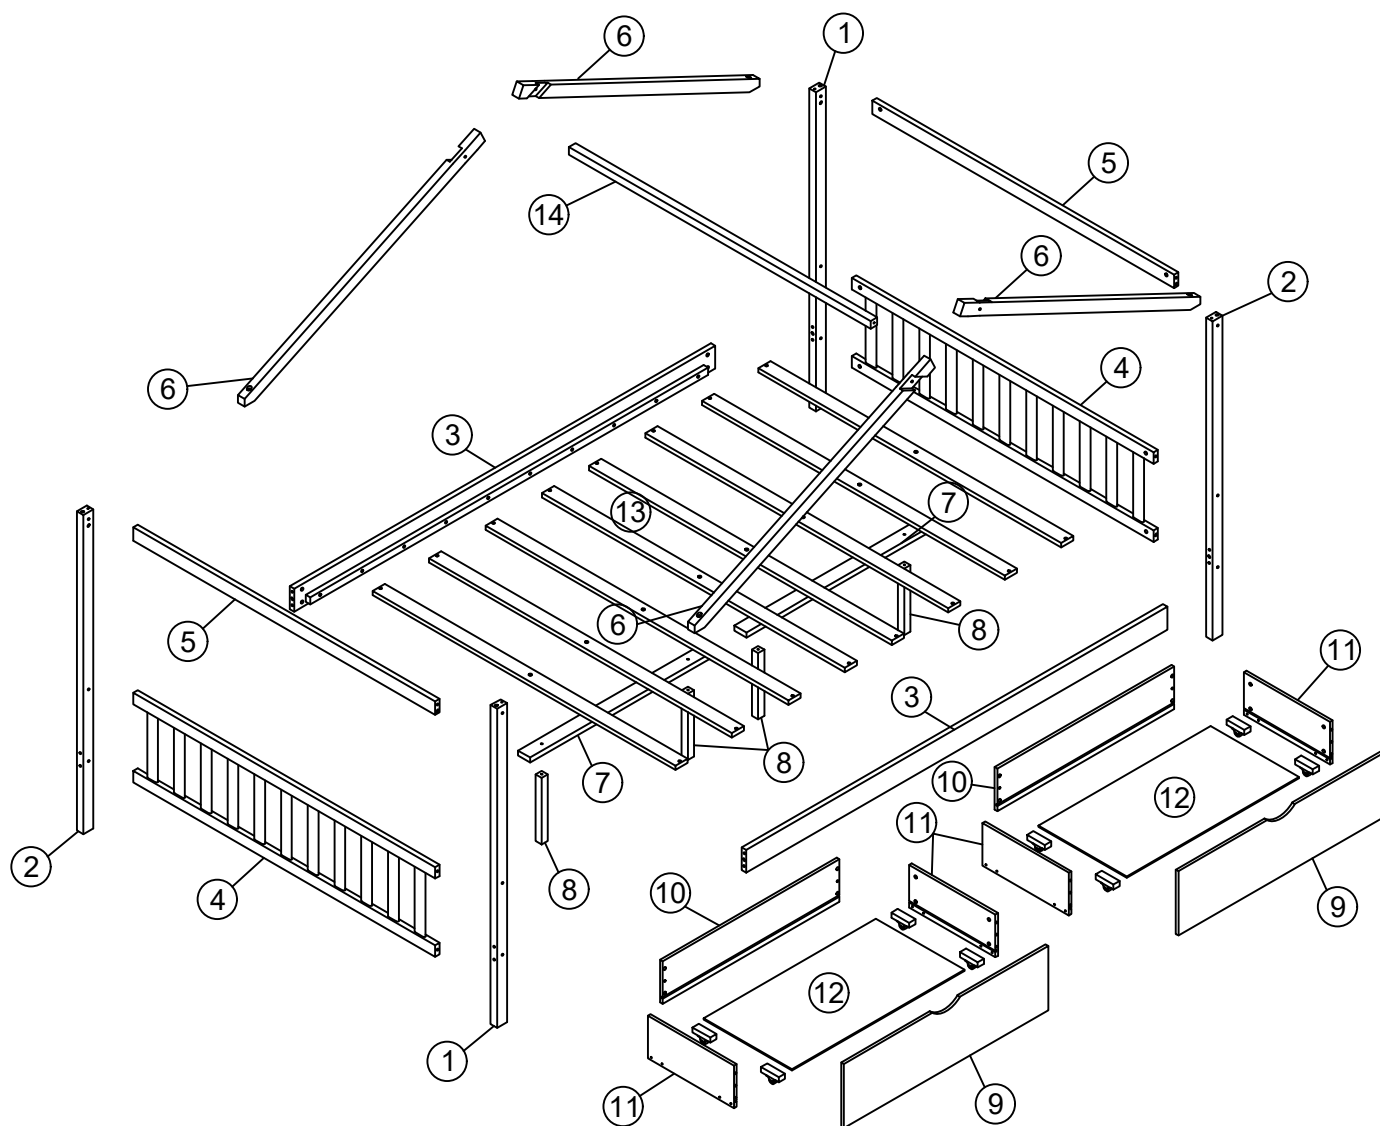
ASSEMBLY INSTRUCTIONS




ASSEMBLY INSTRUCTIONS

PARTS LIST

WF292923 (Hardware in this SKU)


1		2pcs	8		4pcs
2		2pcs	9		2pcs
3		2pcs	10		2pcs
4		2pcs	11		4pcs
5		2pcs	12		2pcs
6		4pcs	13		8pcs
7		2pcs	14		1pc


HARDWARE LIST (WF292923)

A	1/4x75 	12PCS	M	Ø4x30 	40PCS
B	1/4x90 	8PCS	H	6.5x50 	4PCS
C	6.5x80 	6PCS	Q	Ø12x10 	16PCS
D	Ø10x40 	12PCS	K	1/4x25 	4PCS
E	Ø8x30 	8PCS	L		8PCS
F	Ø 6.5x35 	16PCS	J	4x58 	1PC

ASSEMBLY INSTRUCTIONS

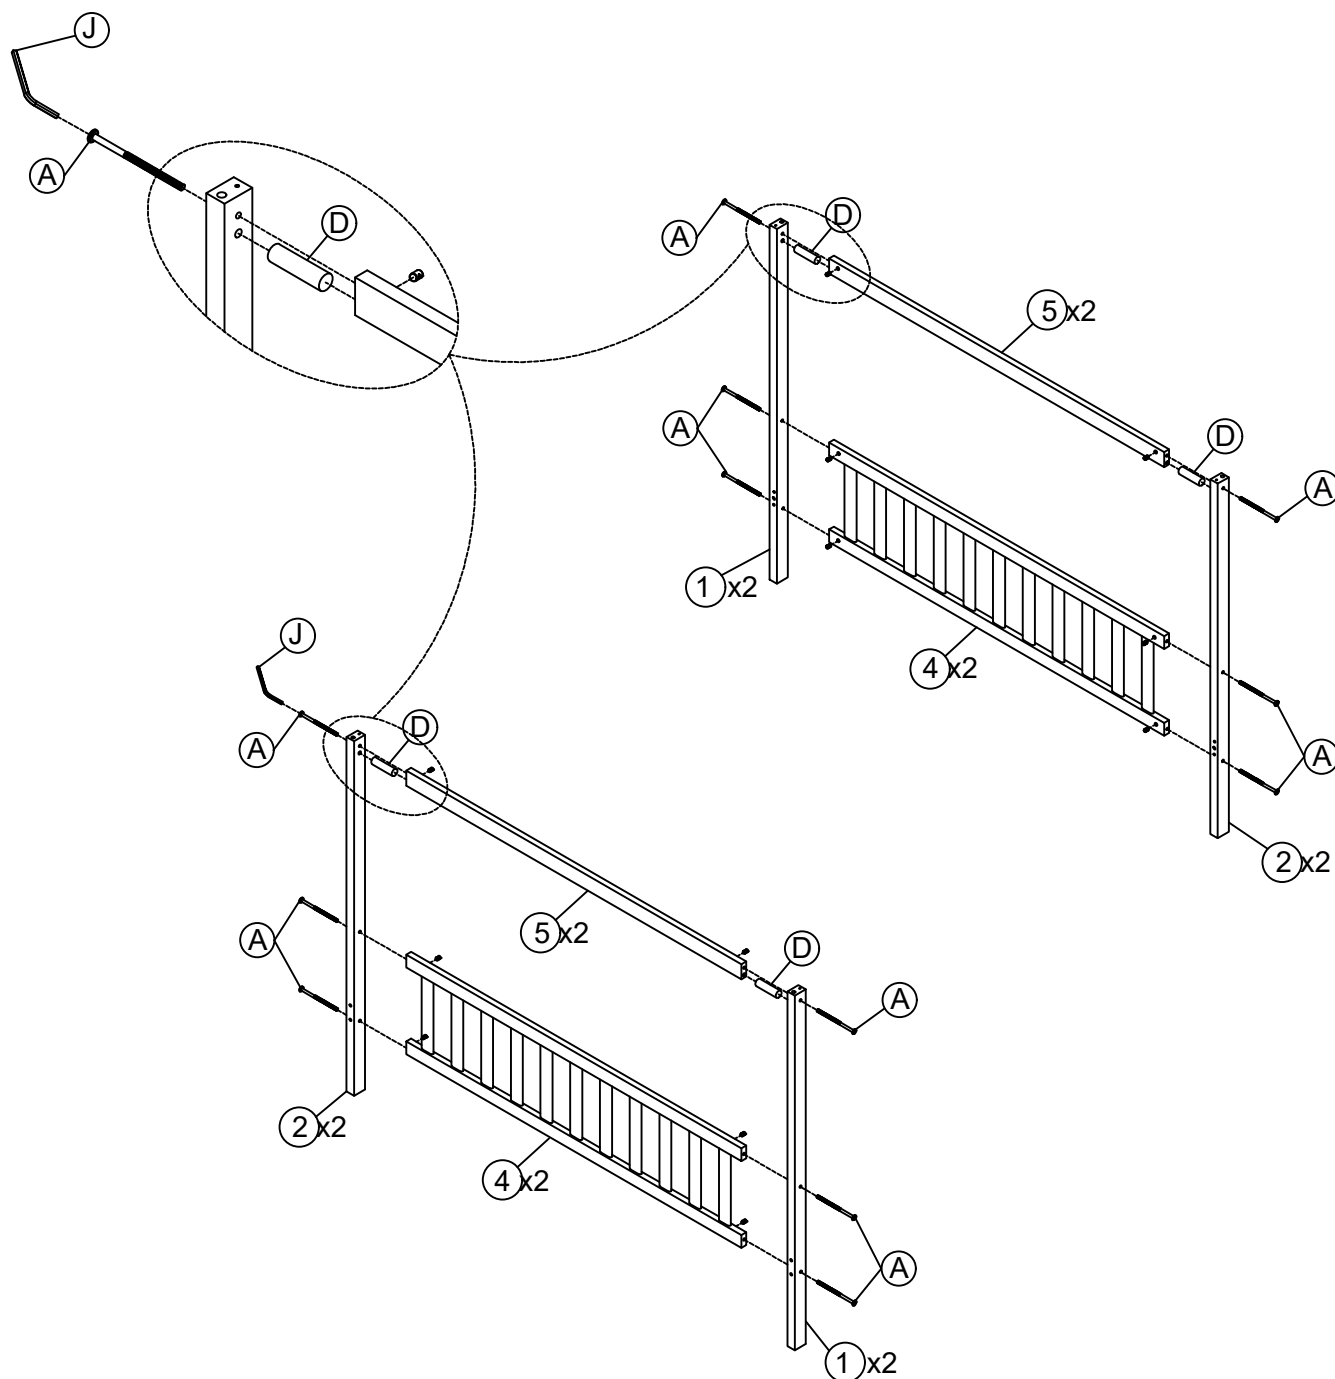
Step 1



				J	4x58		1PC
D	Ø10x40		4PCS	A	1/4x75		12PCS

ASSEMBLY INSTRUCTIONS

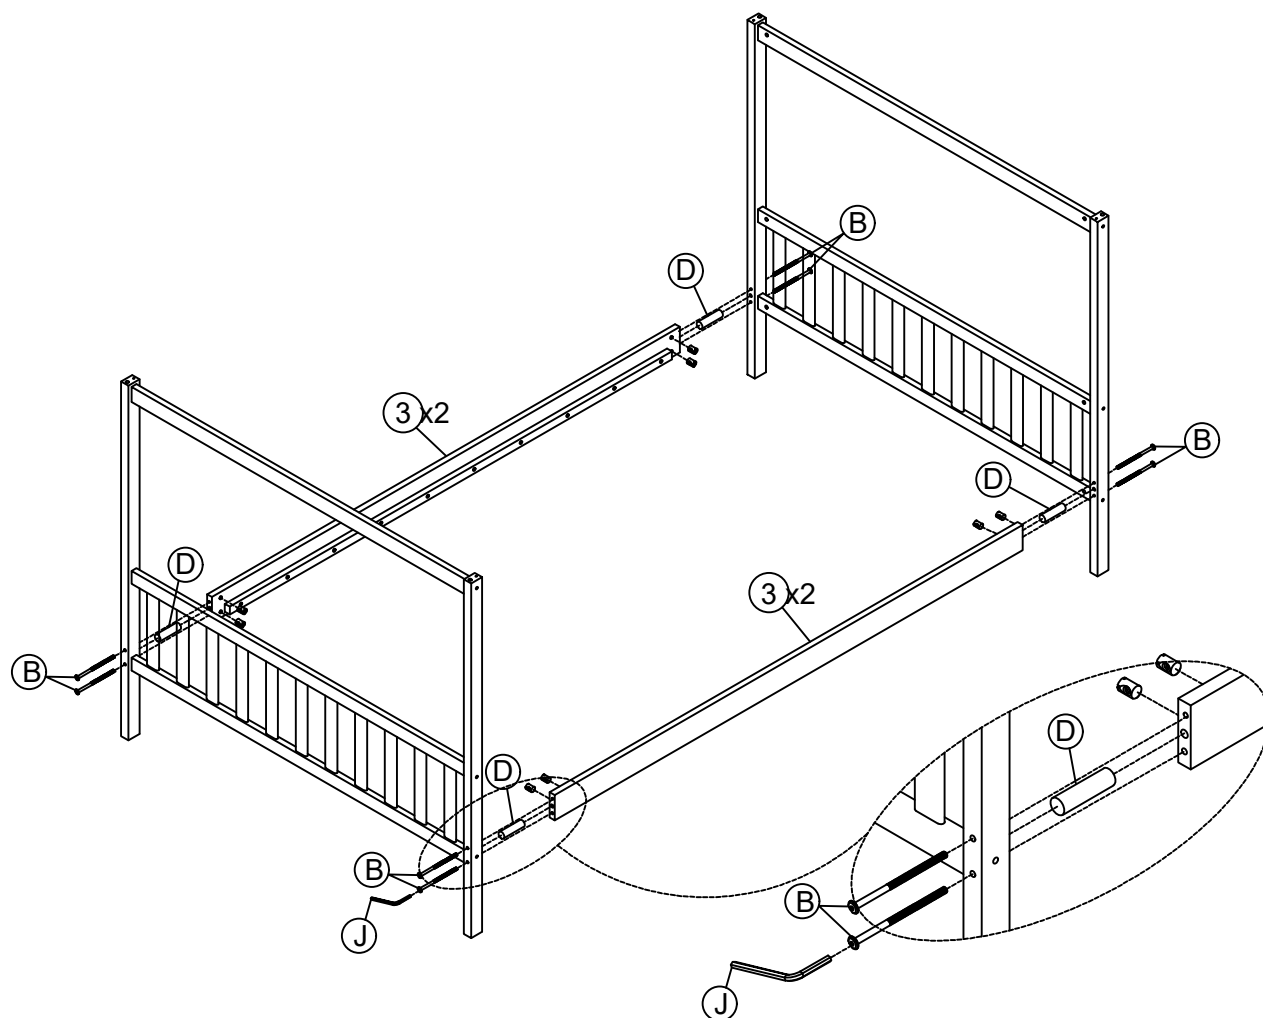
Step 2



				J	4x58		1PC
D	Ø10x40		4PCS	B	1/4x90		8PCS

ASSEMBLY INSTRUCTIONS

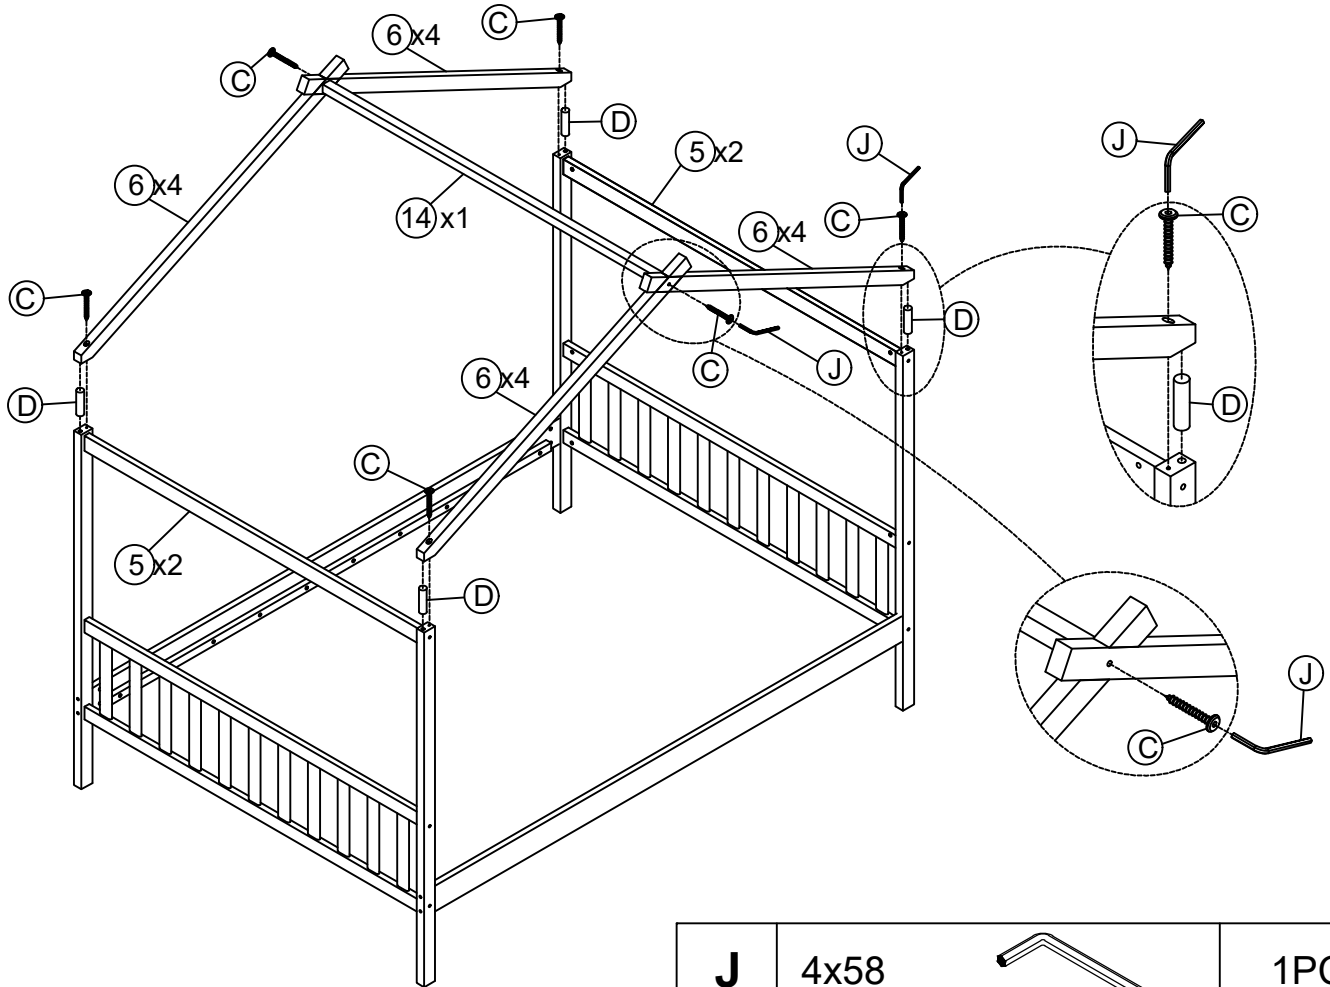
Step 3



J	4x58		1PC
C	6.5x80		6PCS

D	Ø10x40		4PCS
----------	--------	---	------

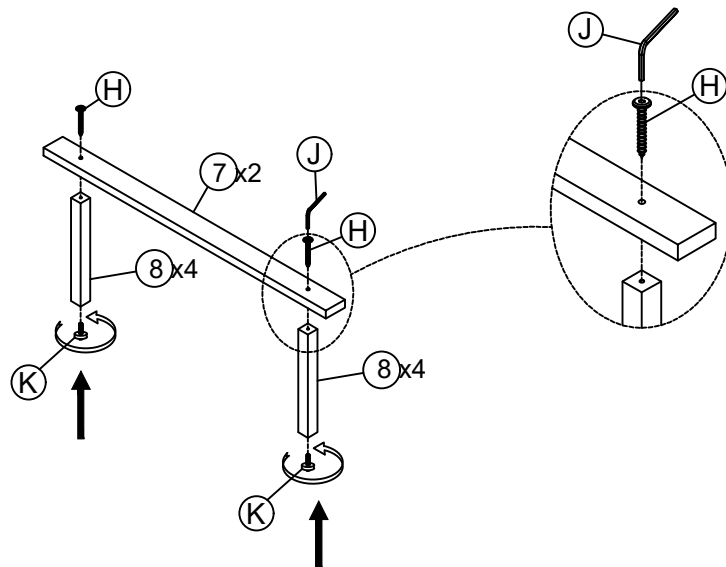Step 4




J	4x58		1PC
H	6.5x50		4PCS

K	1/4x25		4PCS
----------	--------	---	------


ASSEMBLY INSTRUCTIONS

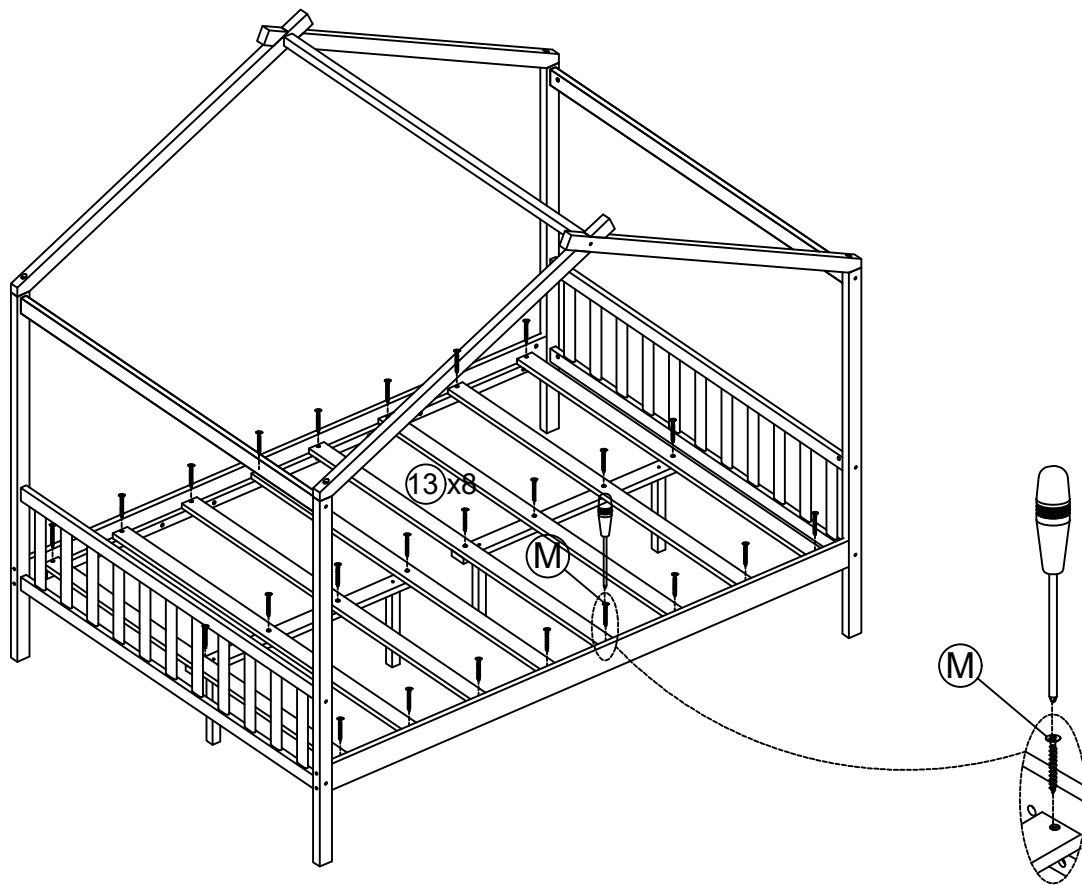
Step 5 First attach 2pcs part 13 to the front and end of the frame between headboard. Then attach the remaining part 13 equidistantly between headboard




M	Ø4x30		24PCS
----------	-------	---	-------

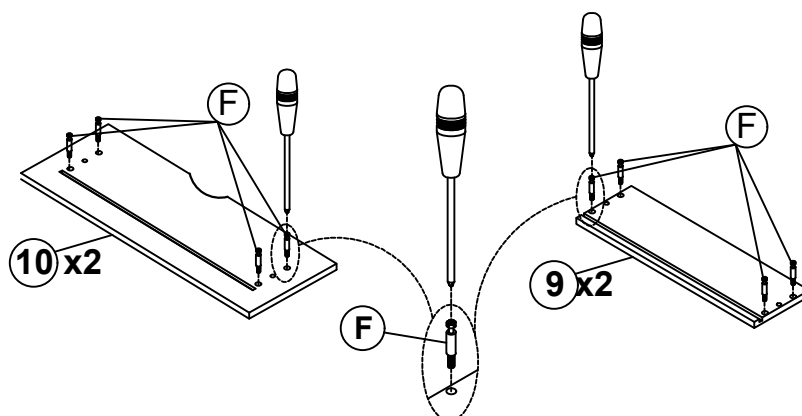Step 6



F	Ø 6.5x35		16PCS
----------	----------	---	-------

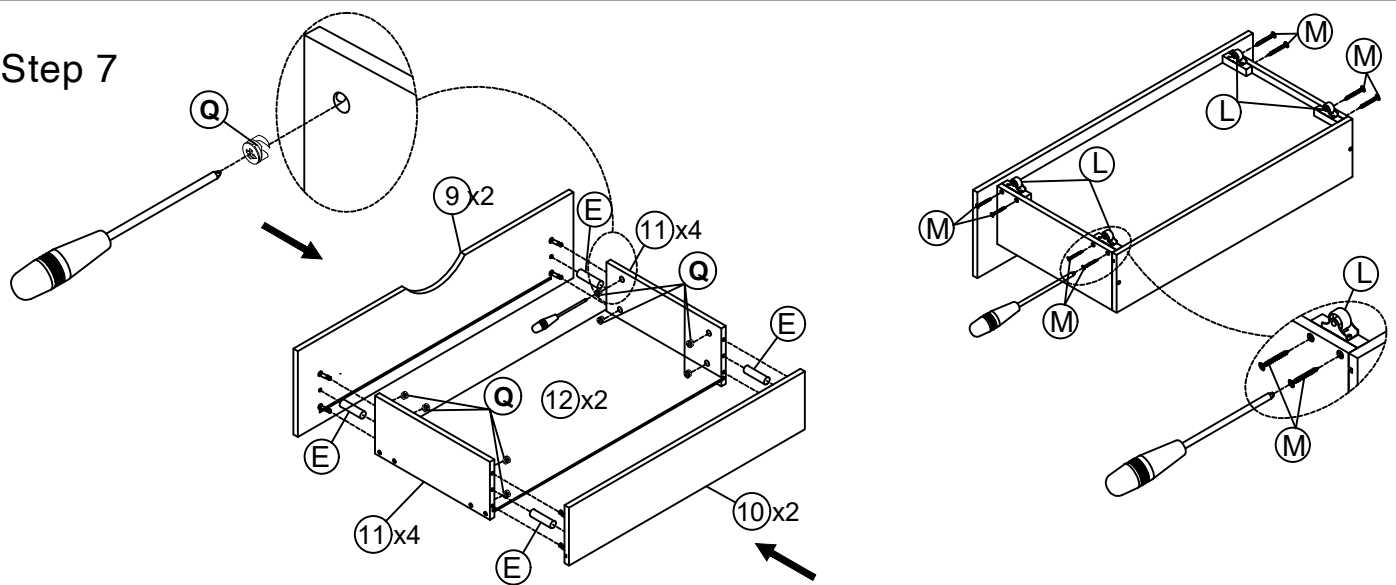Step 7



M	Ø4x30		16PCS	Q	Ø12x10		16PCS
E	Ø8x30		8PCS	L			8PCS

Step 8

