

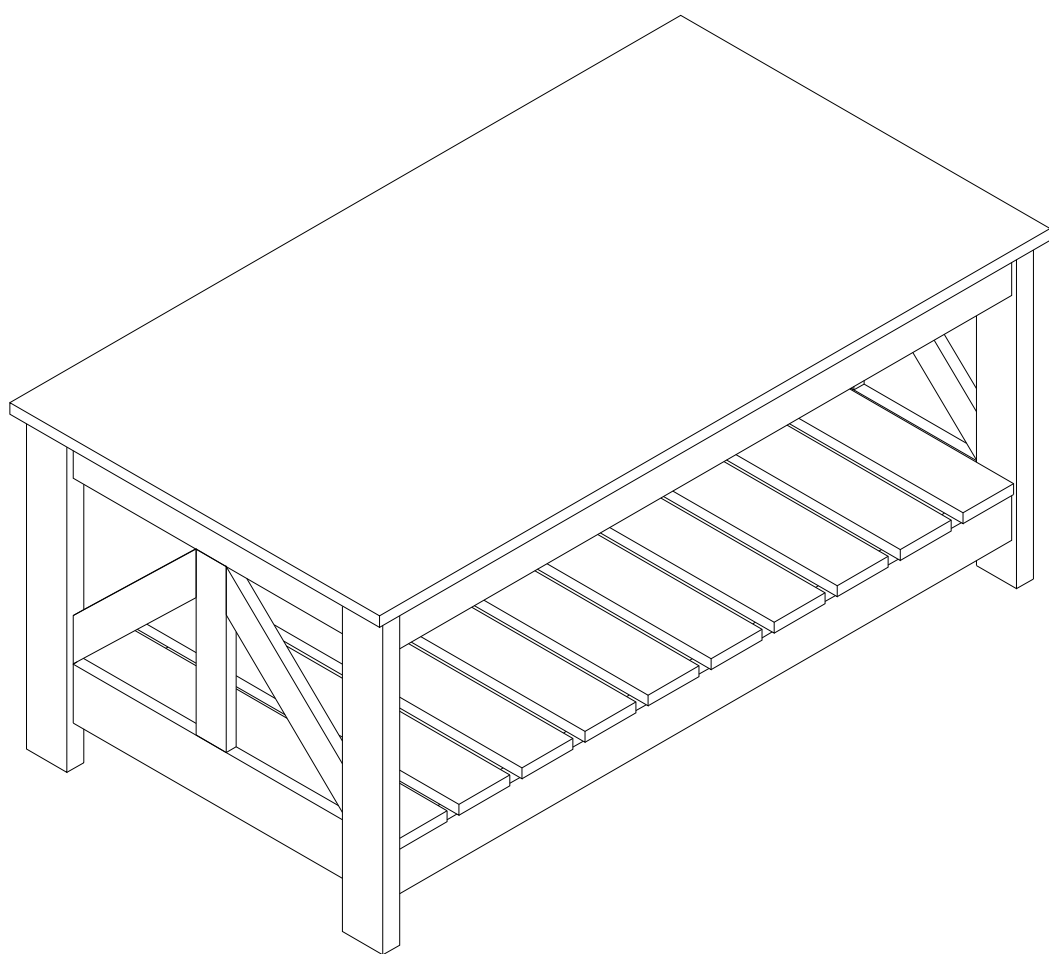
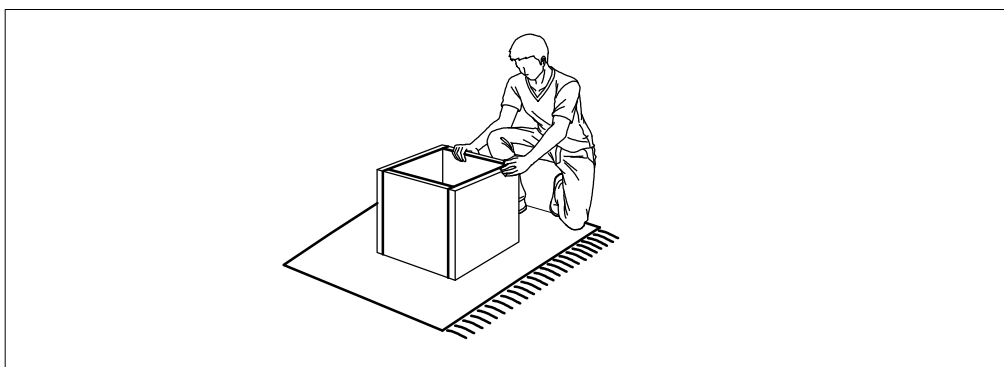



ASSEMBLY INSTRUCTIONS

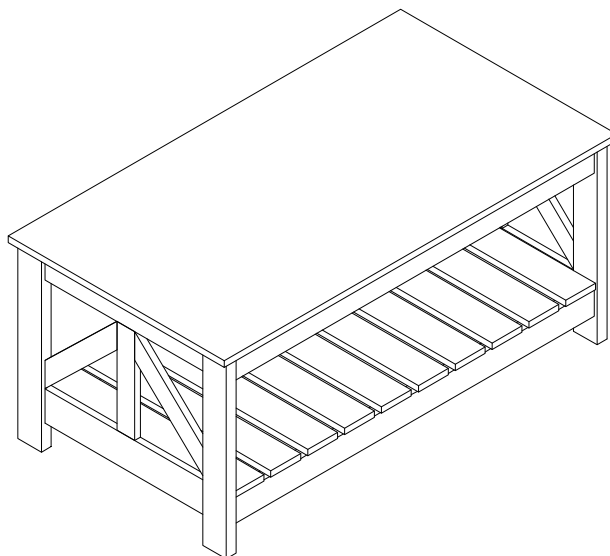

WARNING !



Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

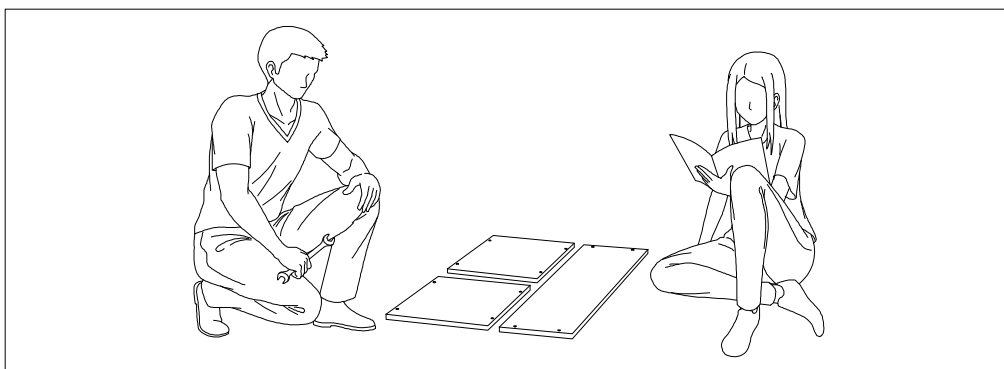


This furniture requires 2 people to assemble.

Make sure no parts are missing or damaged before assemble.




PACKAGE CONTENT


Board Identification

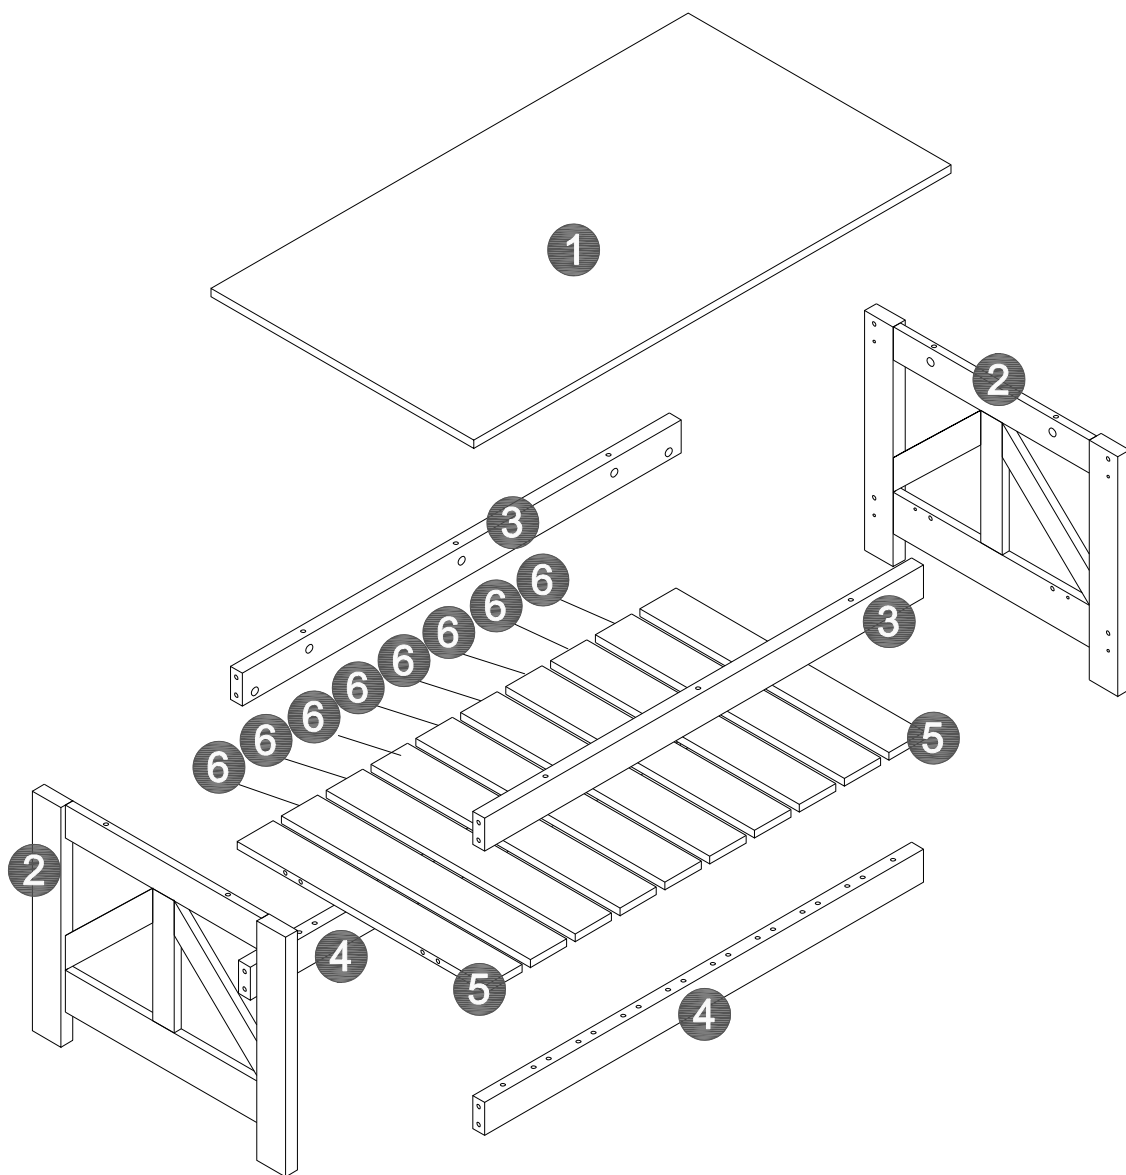


Board Identification

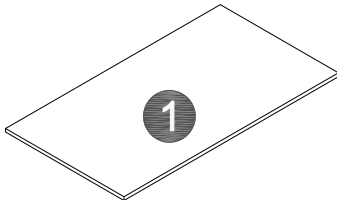


Board x1

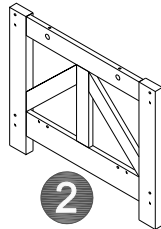


Side Frame x 2

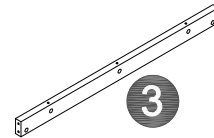


Brace x2

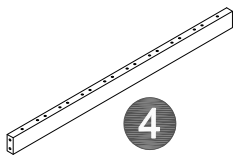

Brace Board Lower x2





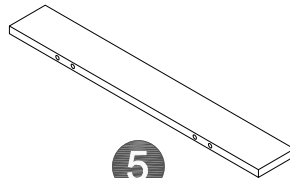


Side Brace Board x2

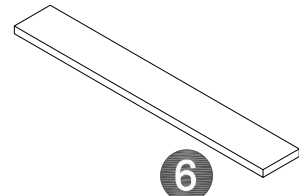


Between Brace Board x8



Hardware List

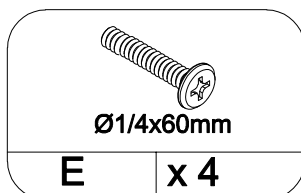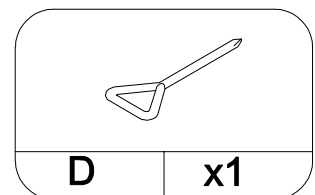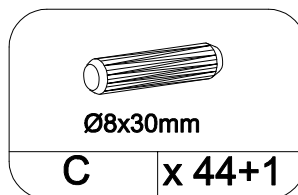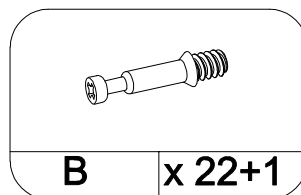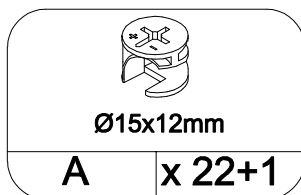



STEP 1:

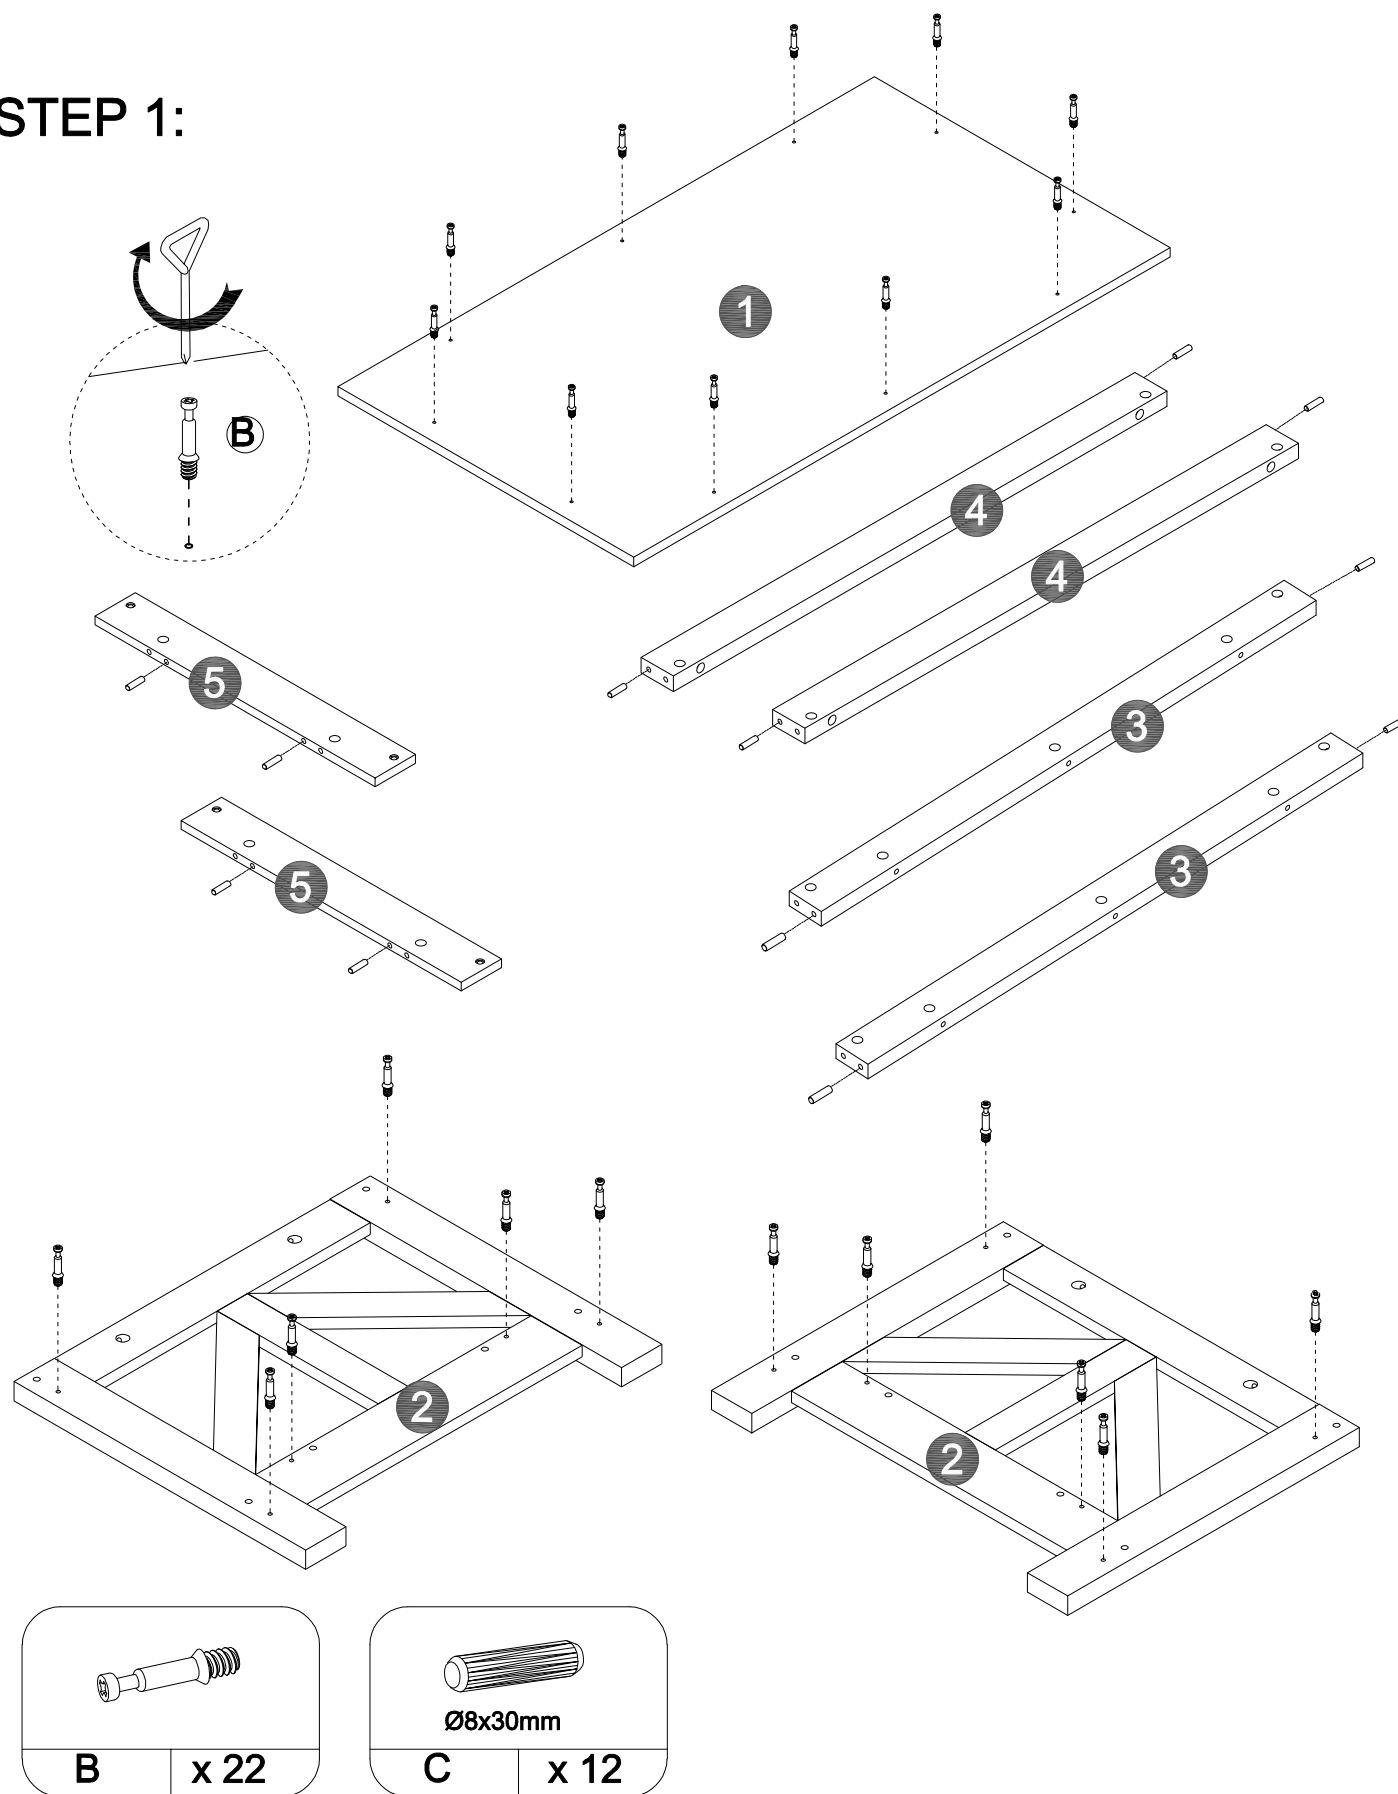

STEP 2:

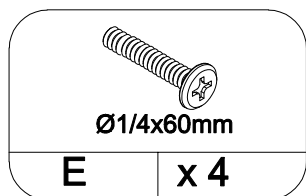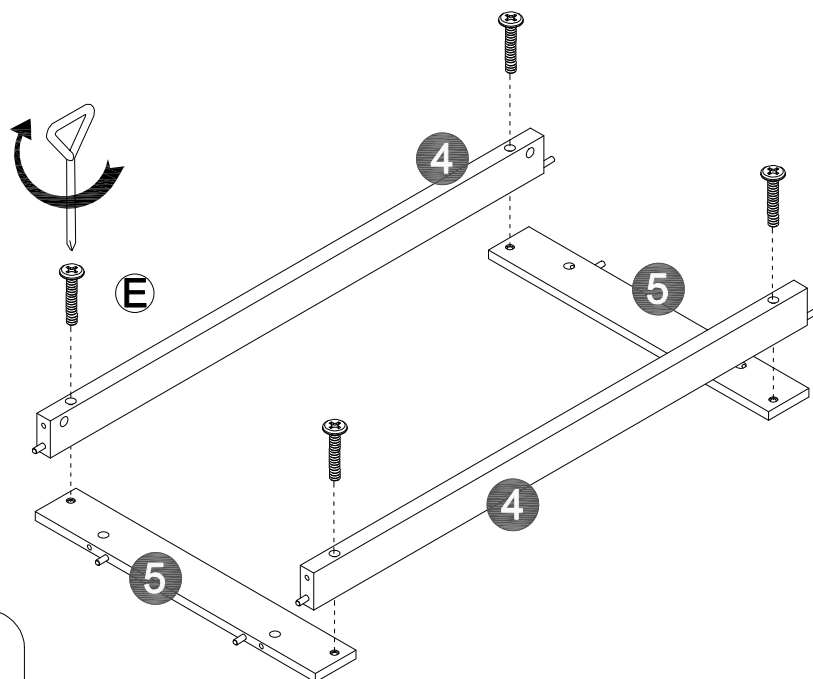

STEP 3:

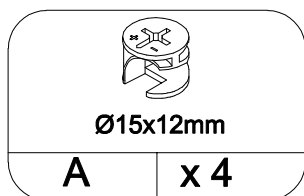
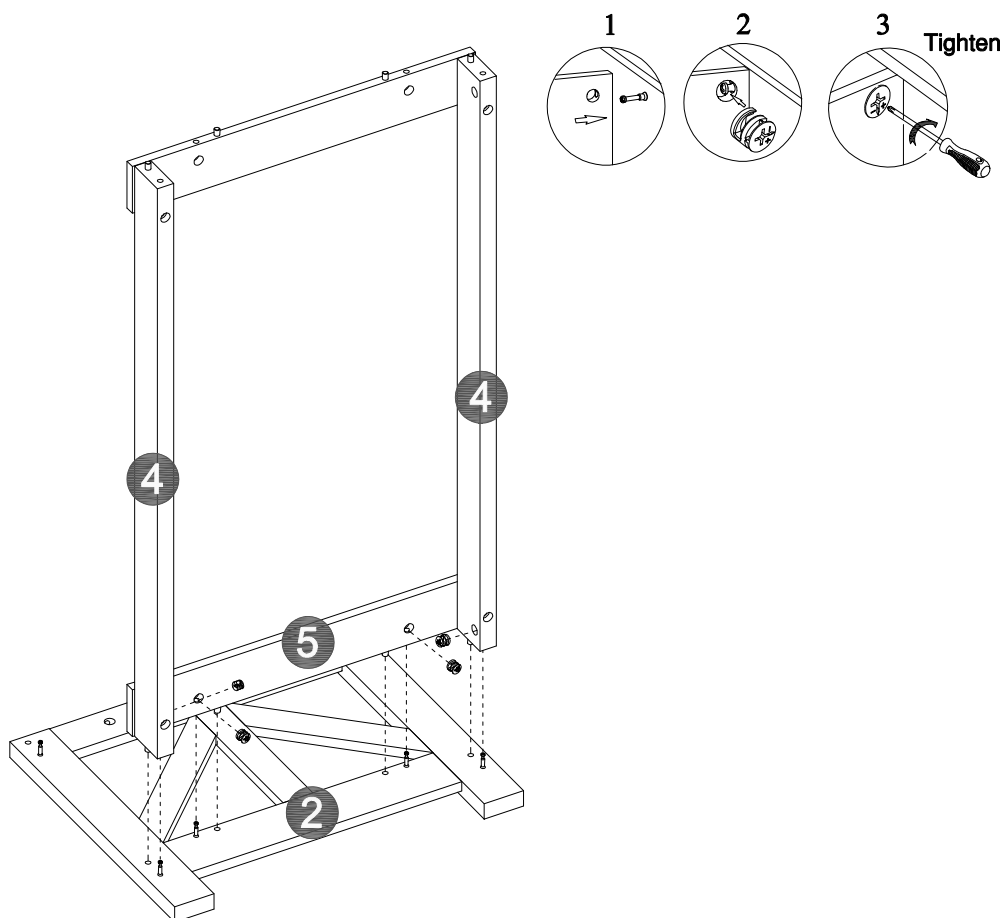


STEP 4:



Ø15x12mm

A	x 2
---	-----

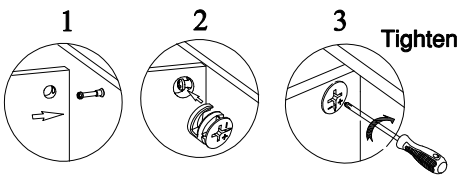
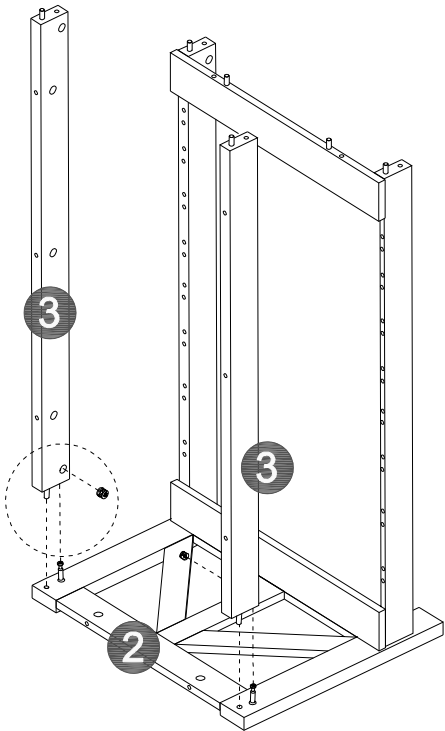


STEP 5:






Ø15x12mm




A	x 6
---	-----

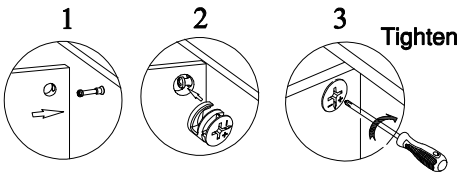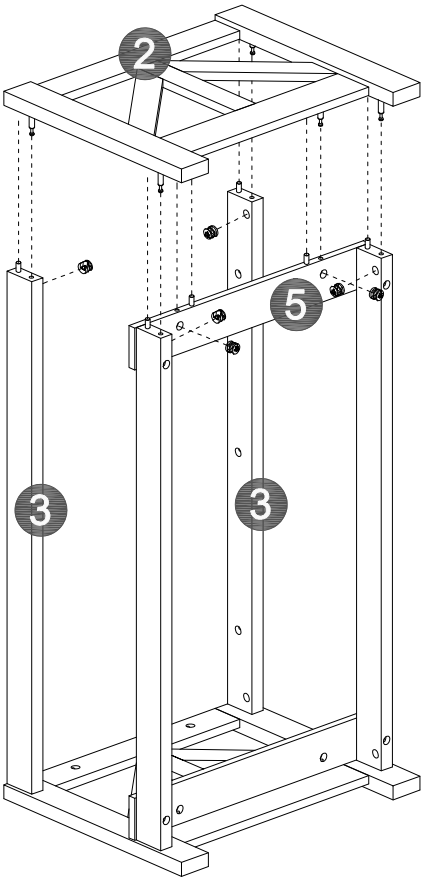

STEP 6:

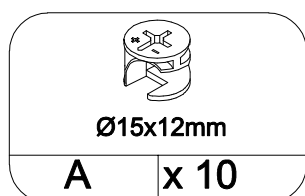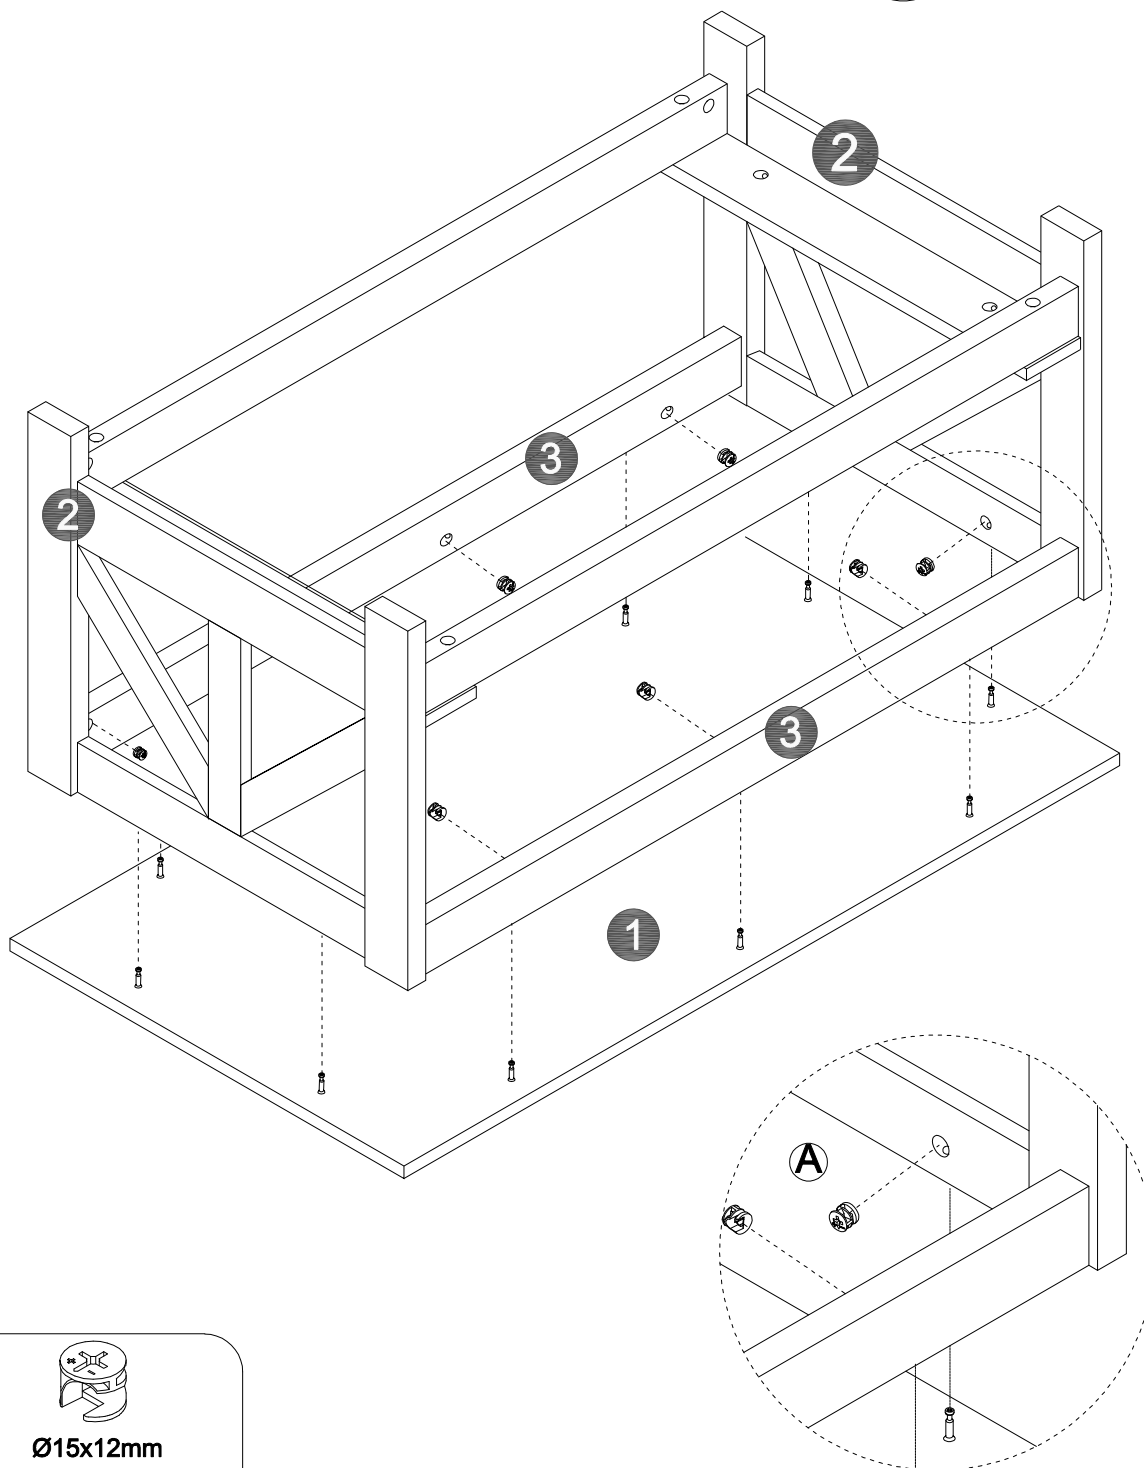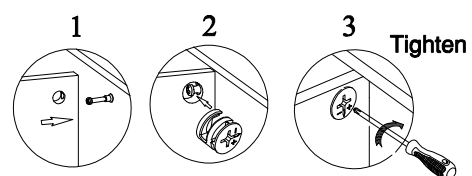

STEP 7:

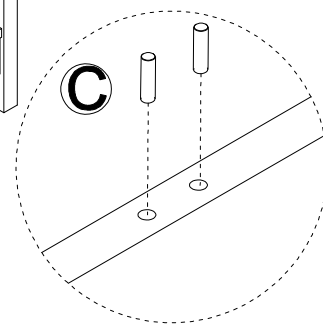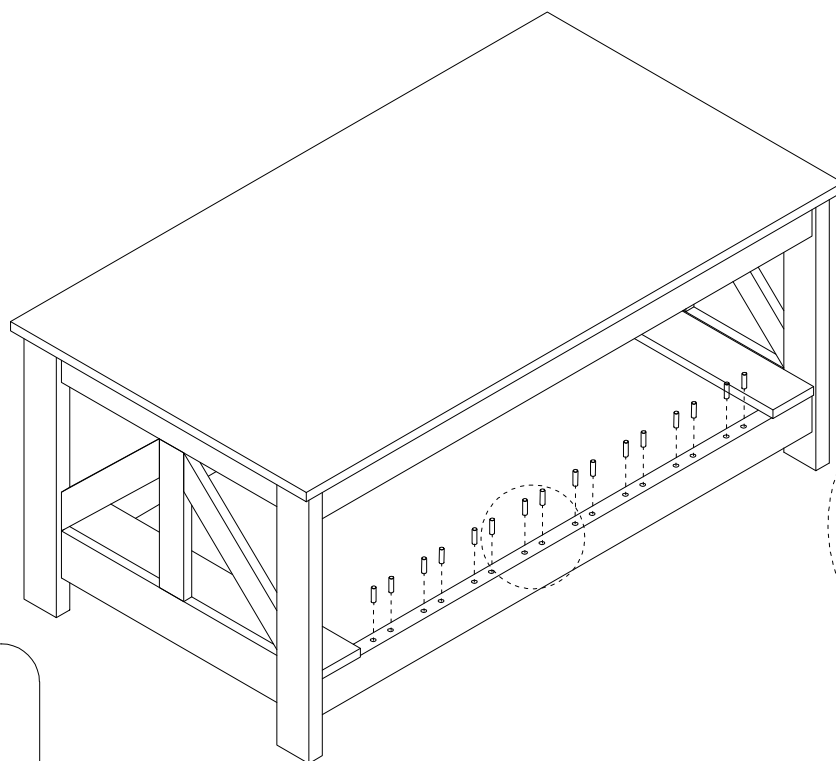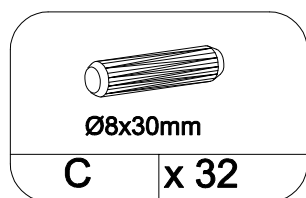

STEP 8:

