

MINI PENDANT

ASSEMBLY/INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock

GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker

1. Gently take all parts out of the package, lay them on a smooth surface and unscrew the WIRE NUT. Carefully pull the wires through the STEMS in to CANOPY. Thread ROD NIPPLE into STEM. Attach as many of the STEMS as desired to make suitable height.
2. Attach the first STEMS to the SWIVEL located at bottom of CANOPY. Attach the last STEMS to FIXTURE SOCKET ASSEMBLY and carefully pull excess wires through CANOPY.
3. Attach MOUNTING BAR to the OUTLET BOX using (2) MOUNTING SCREWS.
4. Make wire connections with WIRE NUTS:
A-Connect the black wire from the Fixture to the black supply wires.
B-Connect the white wire from the Fixture to the white supply wires.
C-Attach the fixture ground wire to the CROSS BAR with the GREEN GROUND SCREW. Then connect it to the supply GROUND WIRE with the WIRE NUTS. Carefully tuck wires back into the OUTLET BOX.
5. Attach the CANOPY over the OUTLET BOX and tighten the NUT on to the FIXTURE SCREWS.
6. Locate the GLASS SHADE and SPACER pass over the SOCKET, Thread SOCKET RING onto end of the SOCKET. Hand tighten until snug.
7. Install BULBS with TYPE A MAX. 60W wattage (not included).

Turn on the power at fuse or circuit breaker.

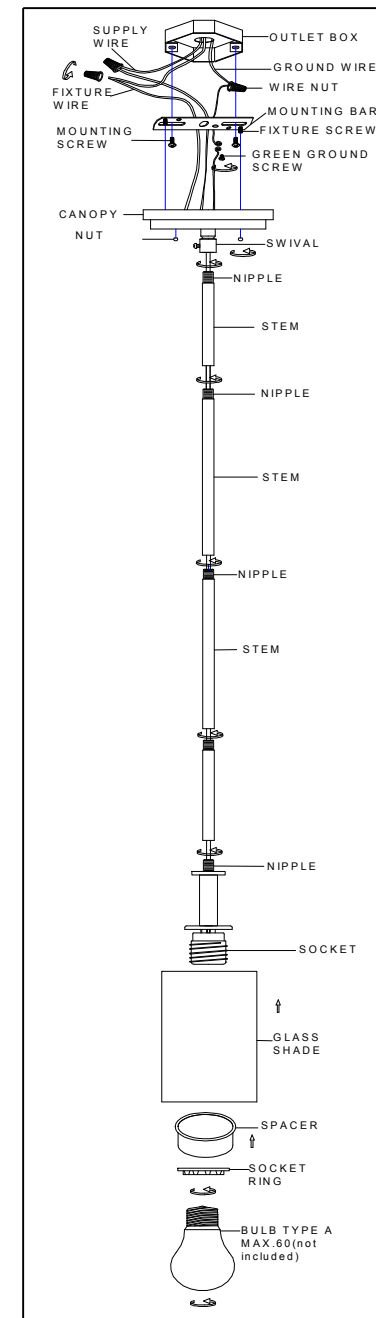

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.**