


JY JONATHAN Y

INSTALLATION INSTRUCTIONS

Please read carefully before installation


TOOLS you will need

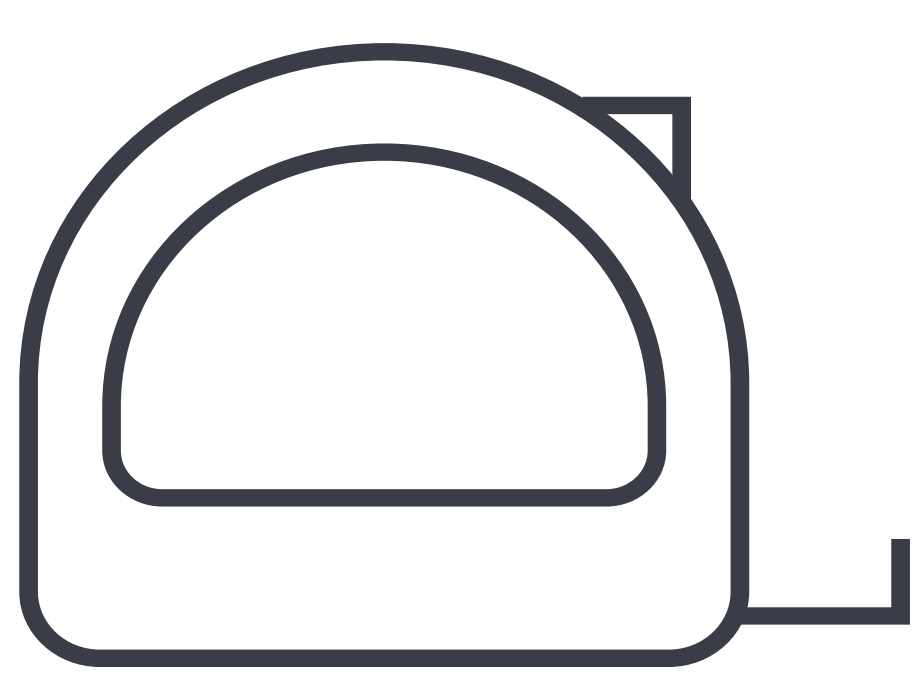


tape
measure




pencil &
ruler

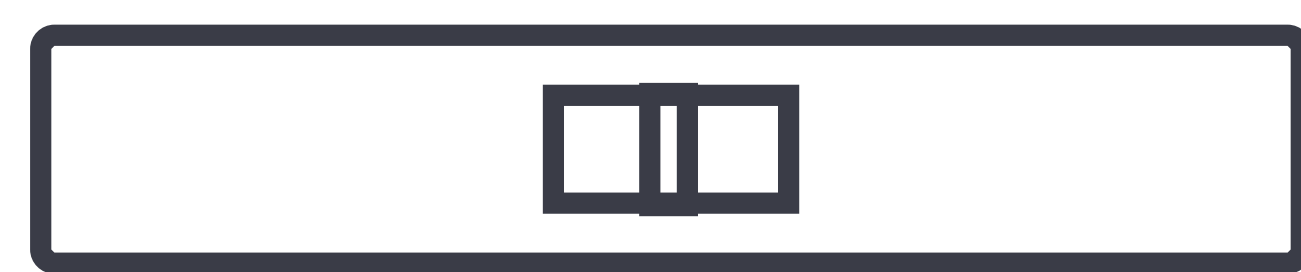

level

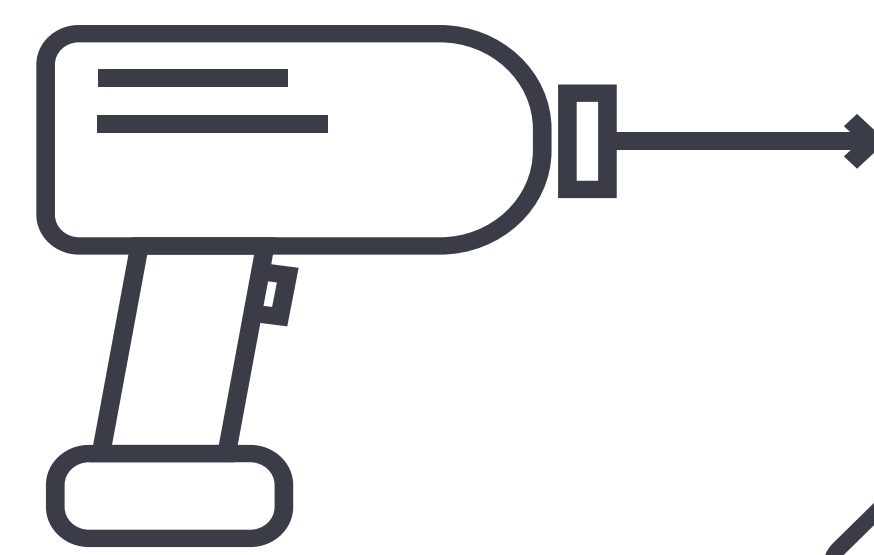


drill

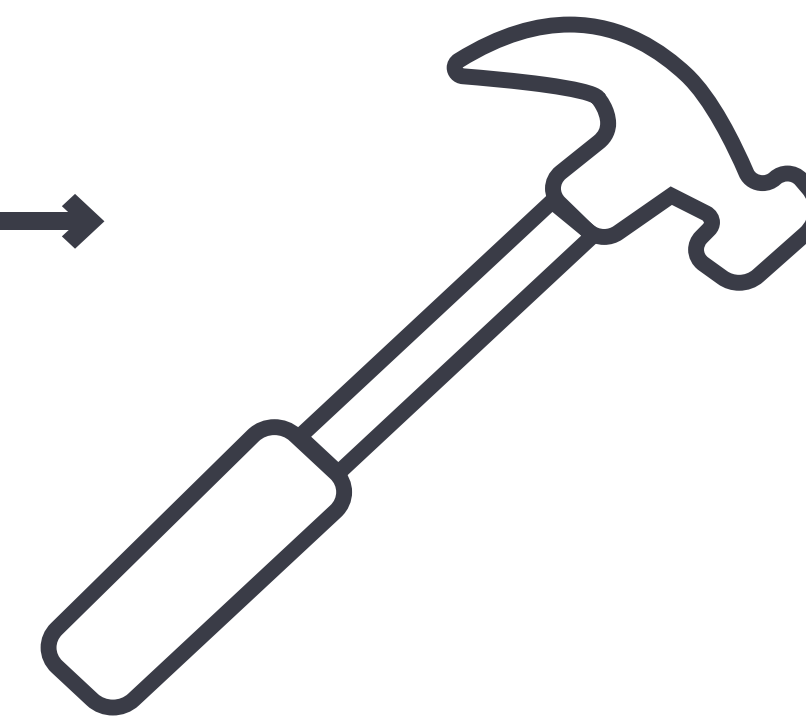

hammer




screwdriver

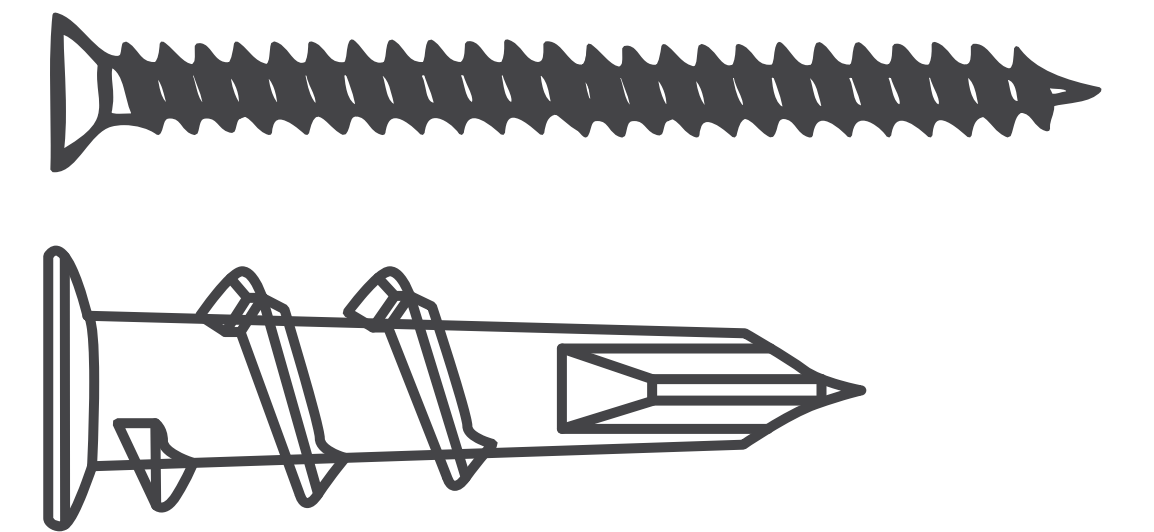


screws and
anchors


INSTALLATION

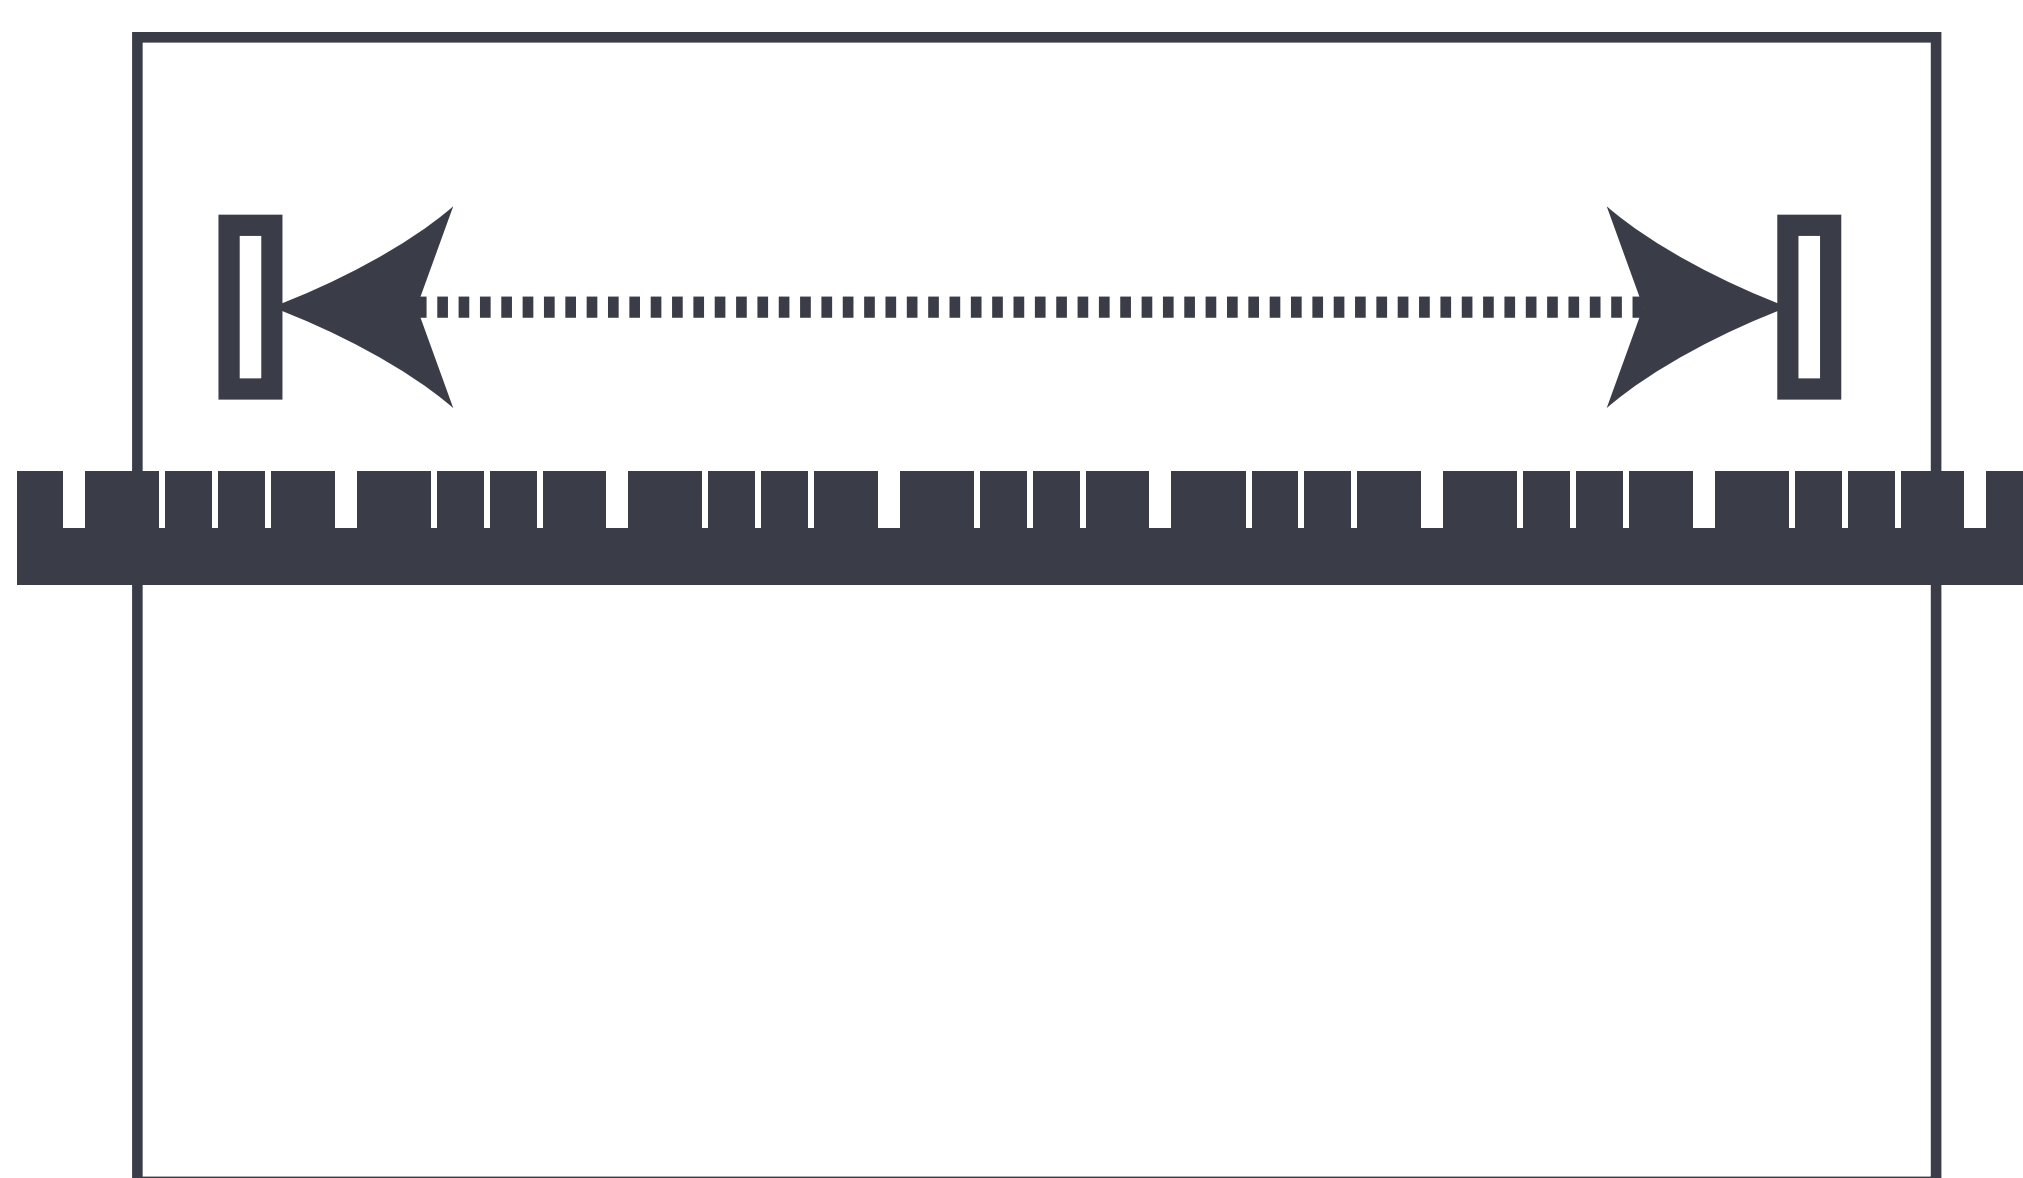


1. Measure and Mark:
Use the tape measure to determine where you want to hang the mirror.
Mark the spots using a pencil and ruler.

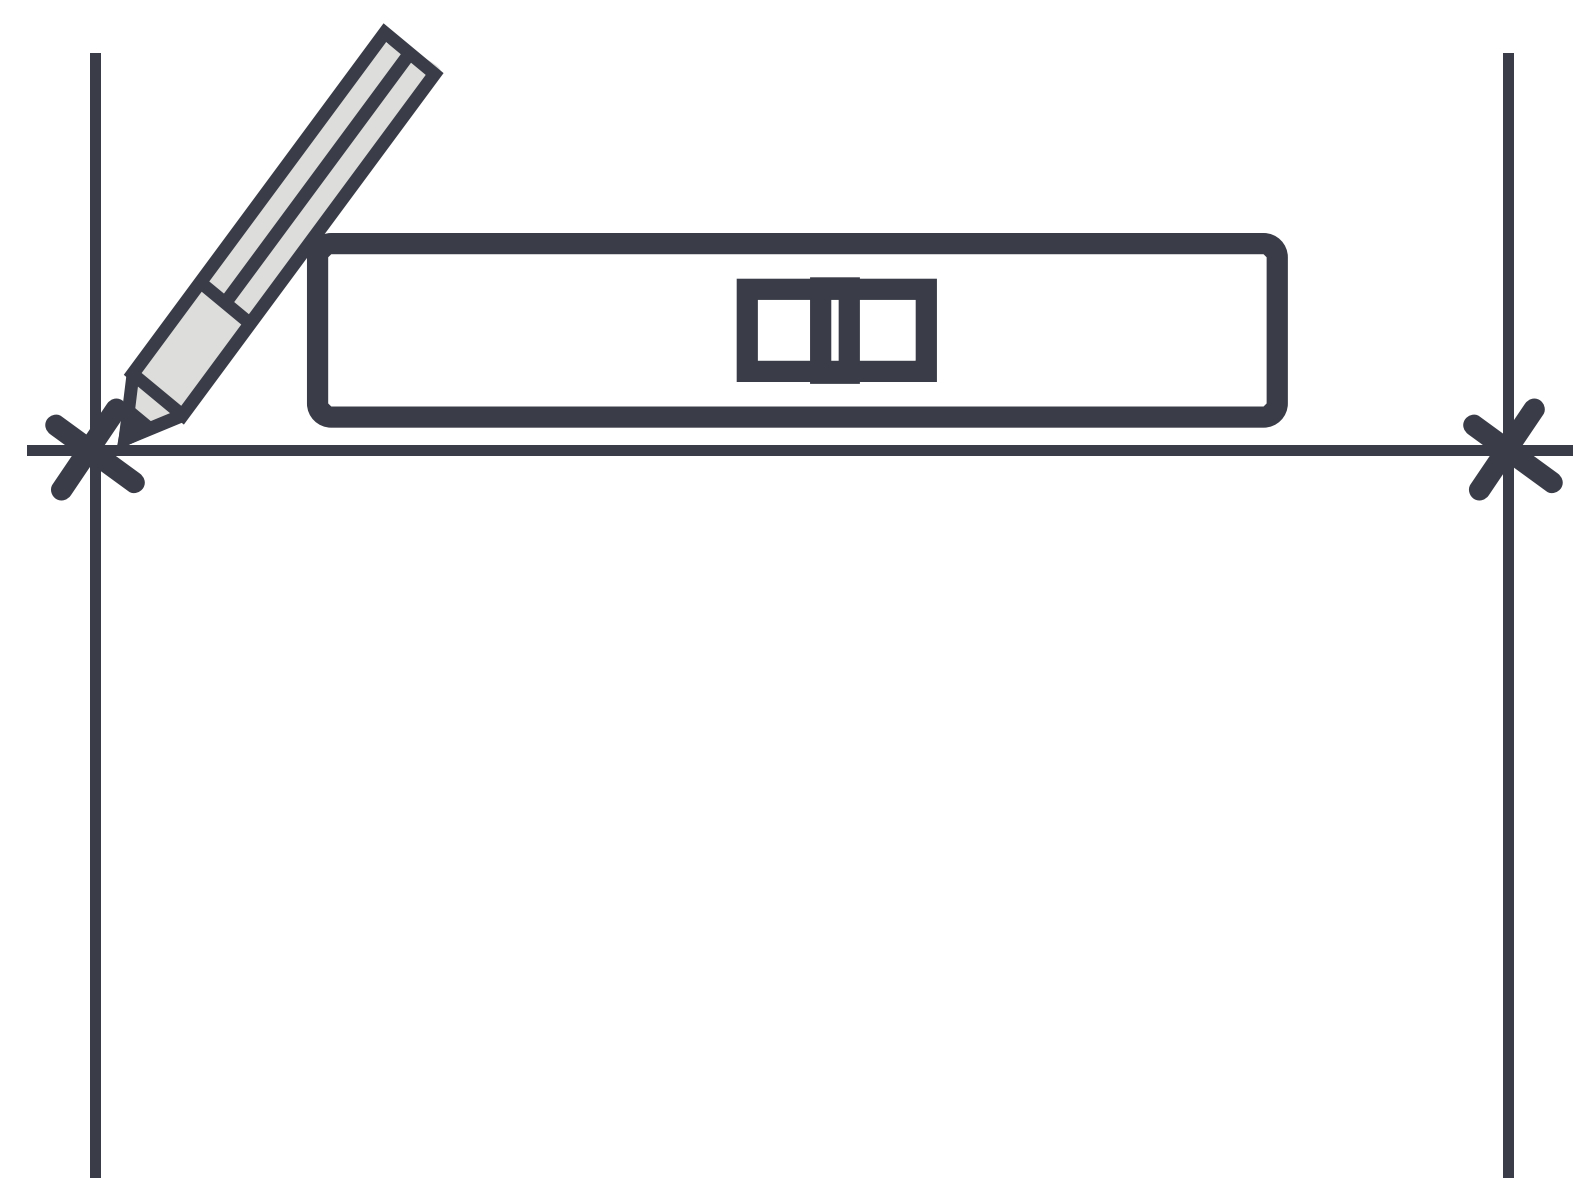


2. Level the Marks:
With the level, check that your markings are straight and aligned properly.

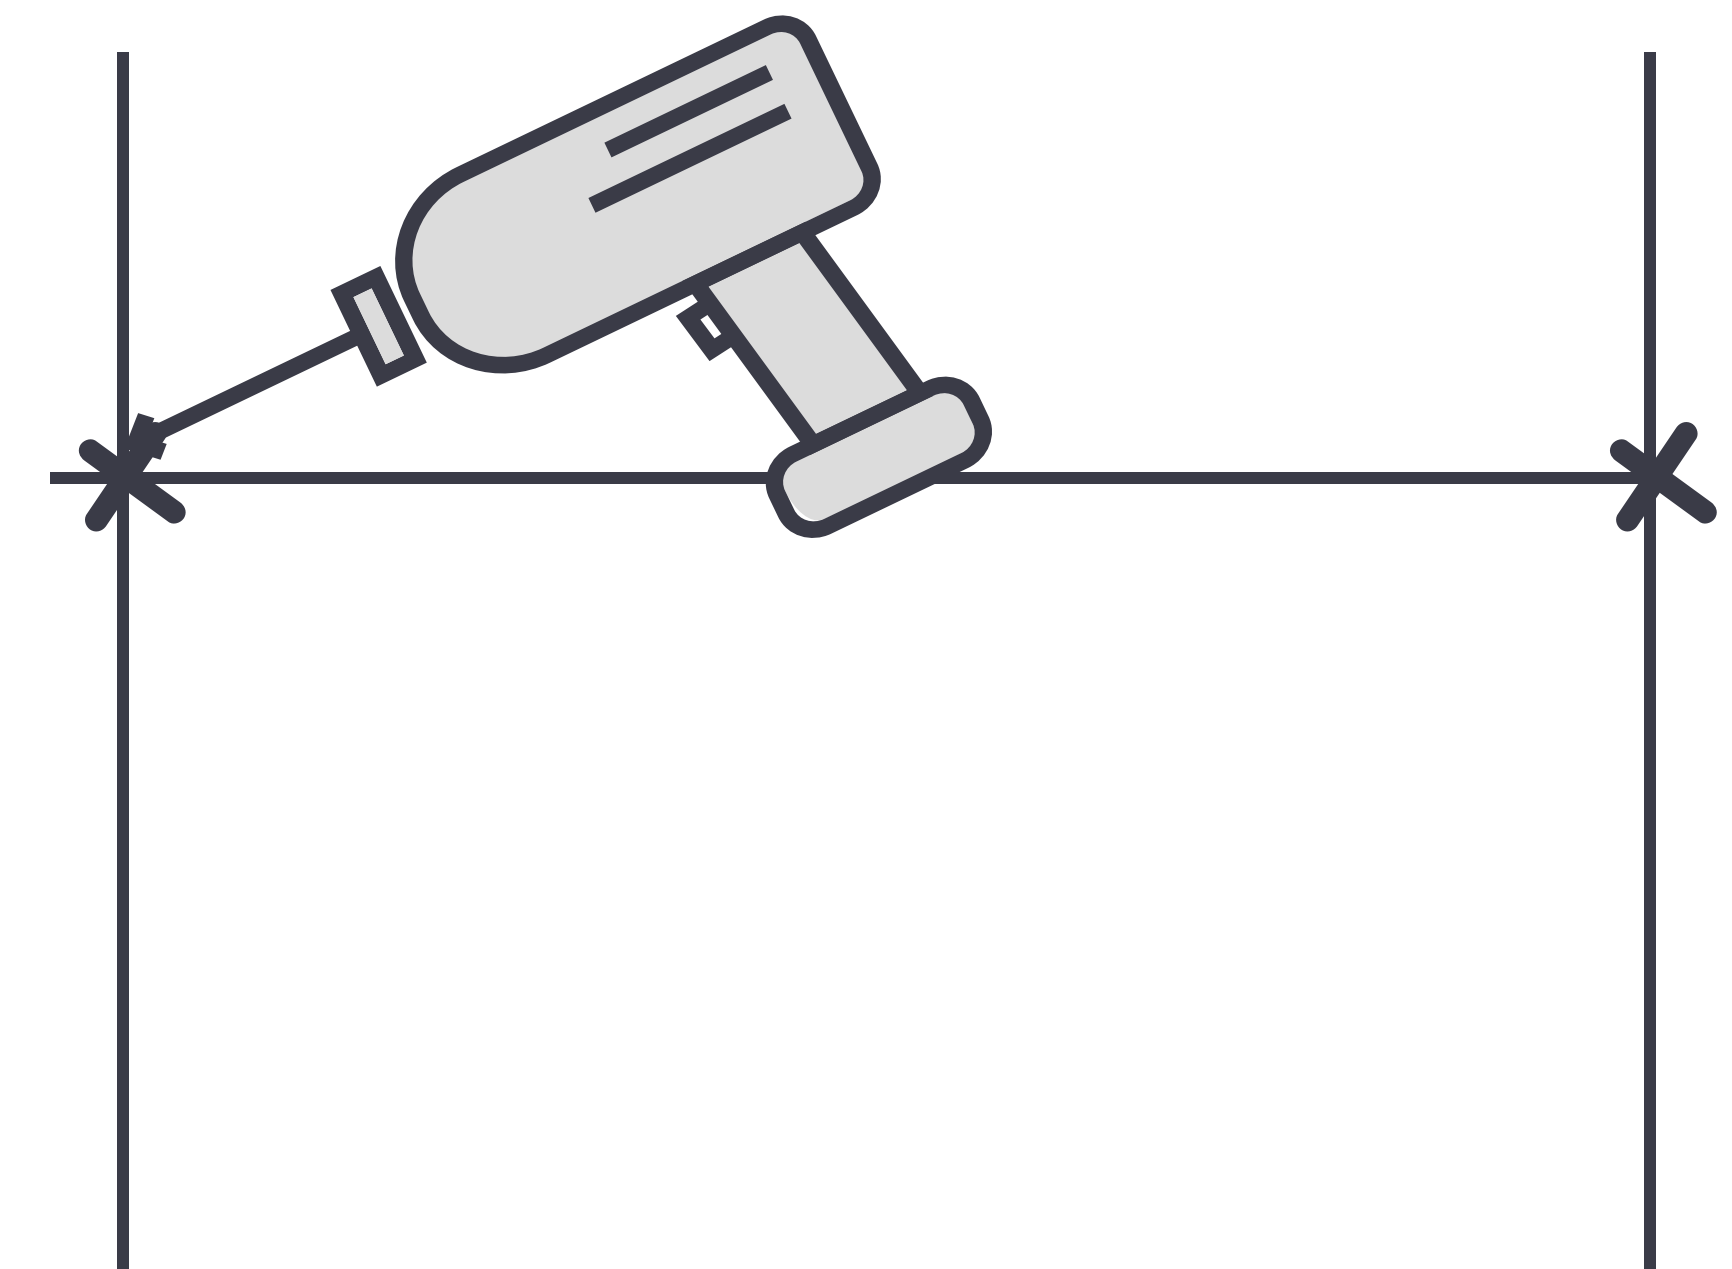


3. Drill holes on the marked intersections with the drill.

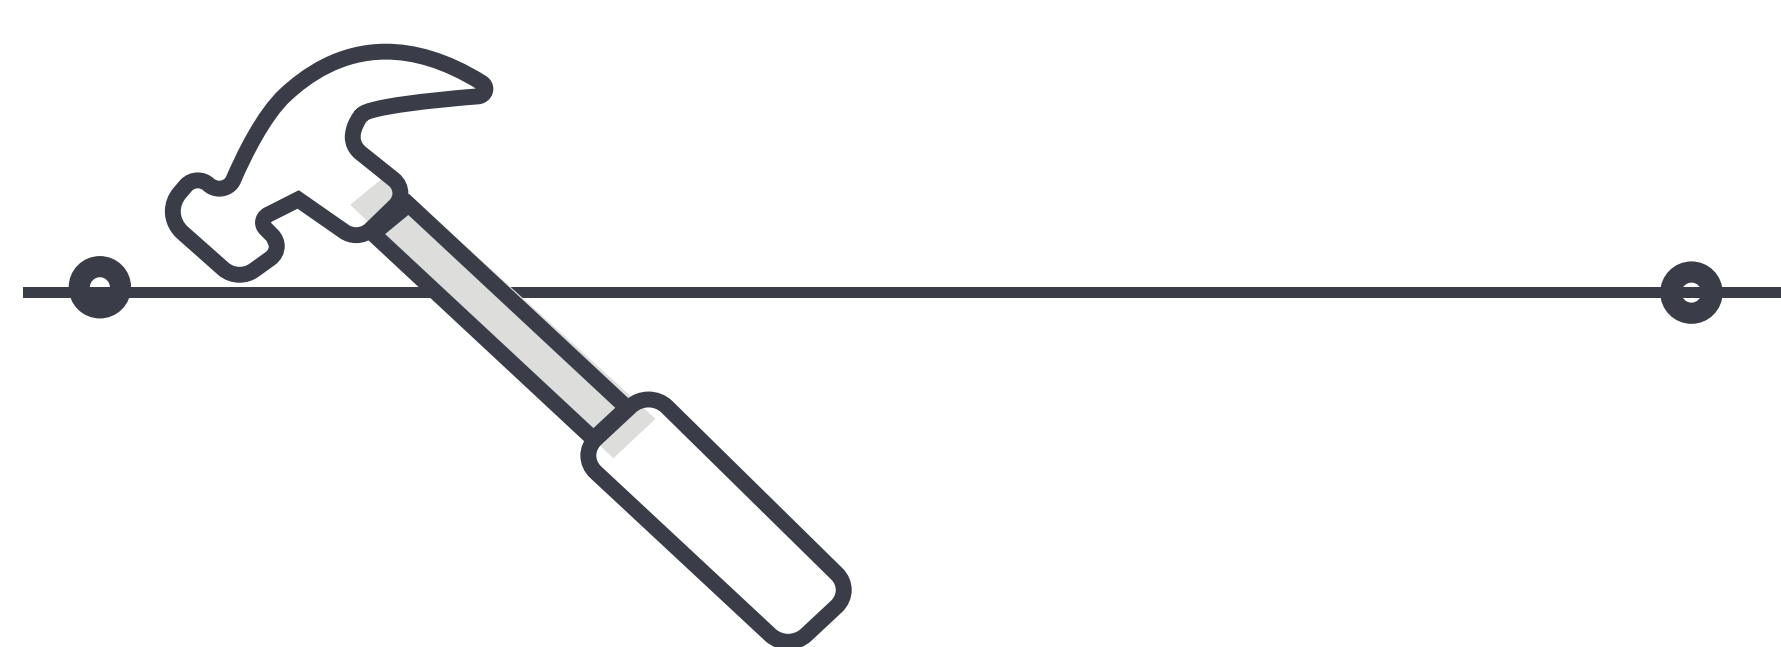


4. Insert Anchors:
Tap the wall anchors into the drilled holes using a hammer to provide extra support.

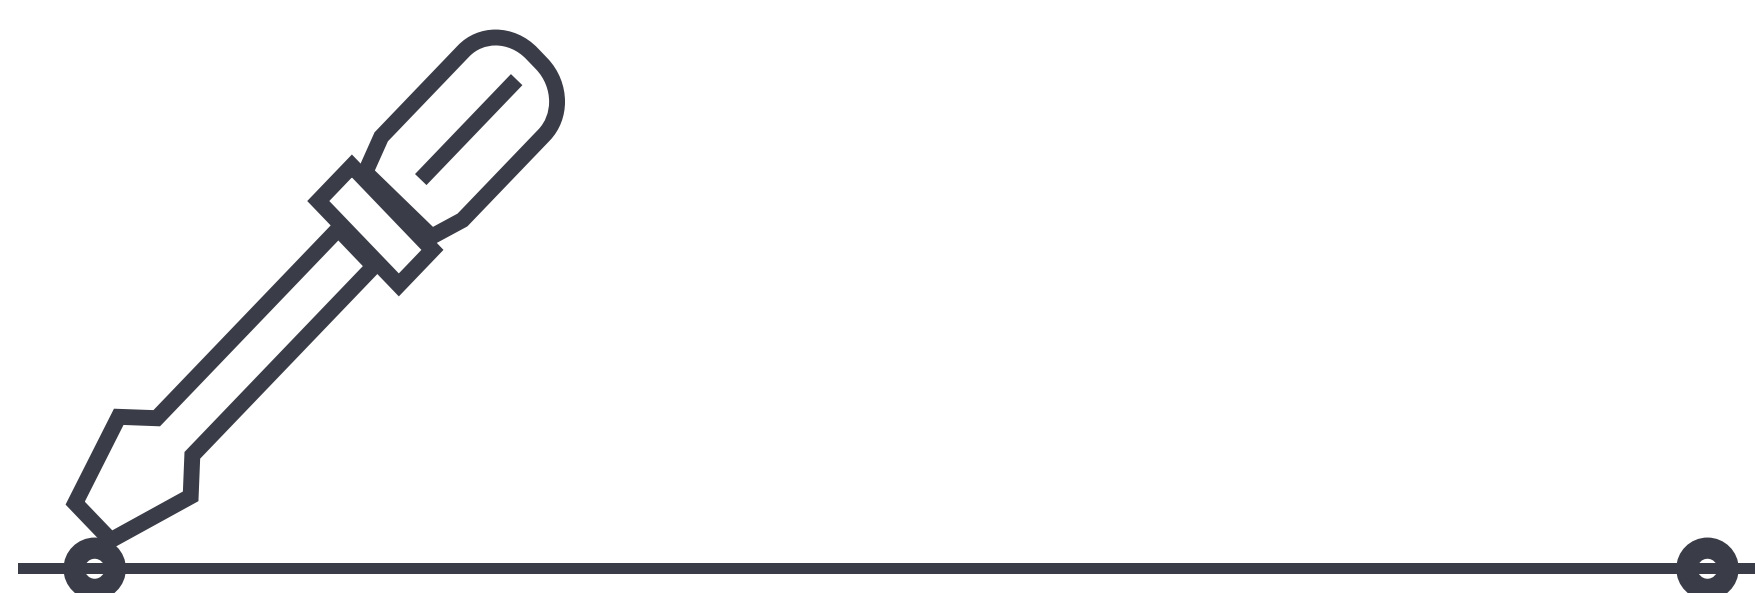

5. Attach Screws:
Using a screwdriver, insert the screws into the anchors, leaving part of the screw protruding to hang the mirror.



6. Hang the Mirror:
Carefully hang the mirror onto the screws and adjust as needed.

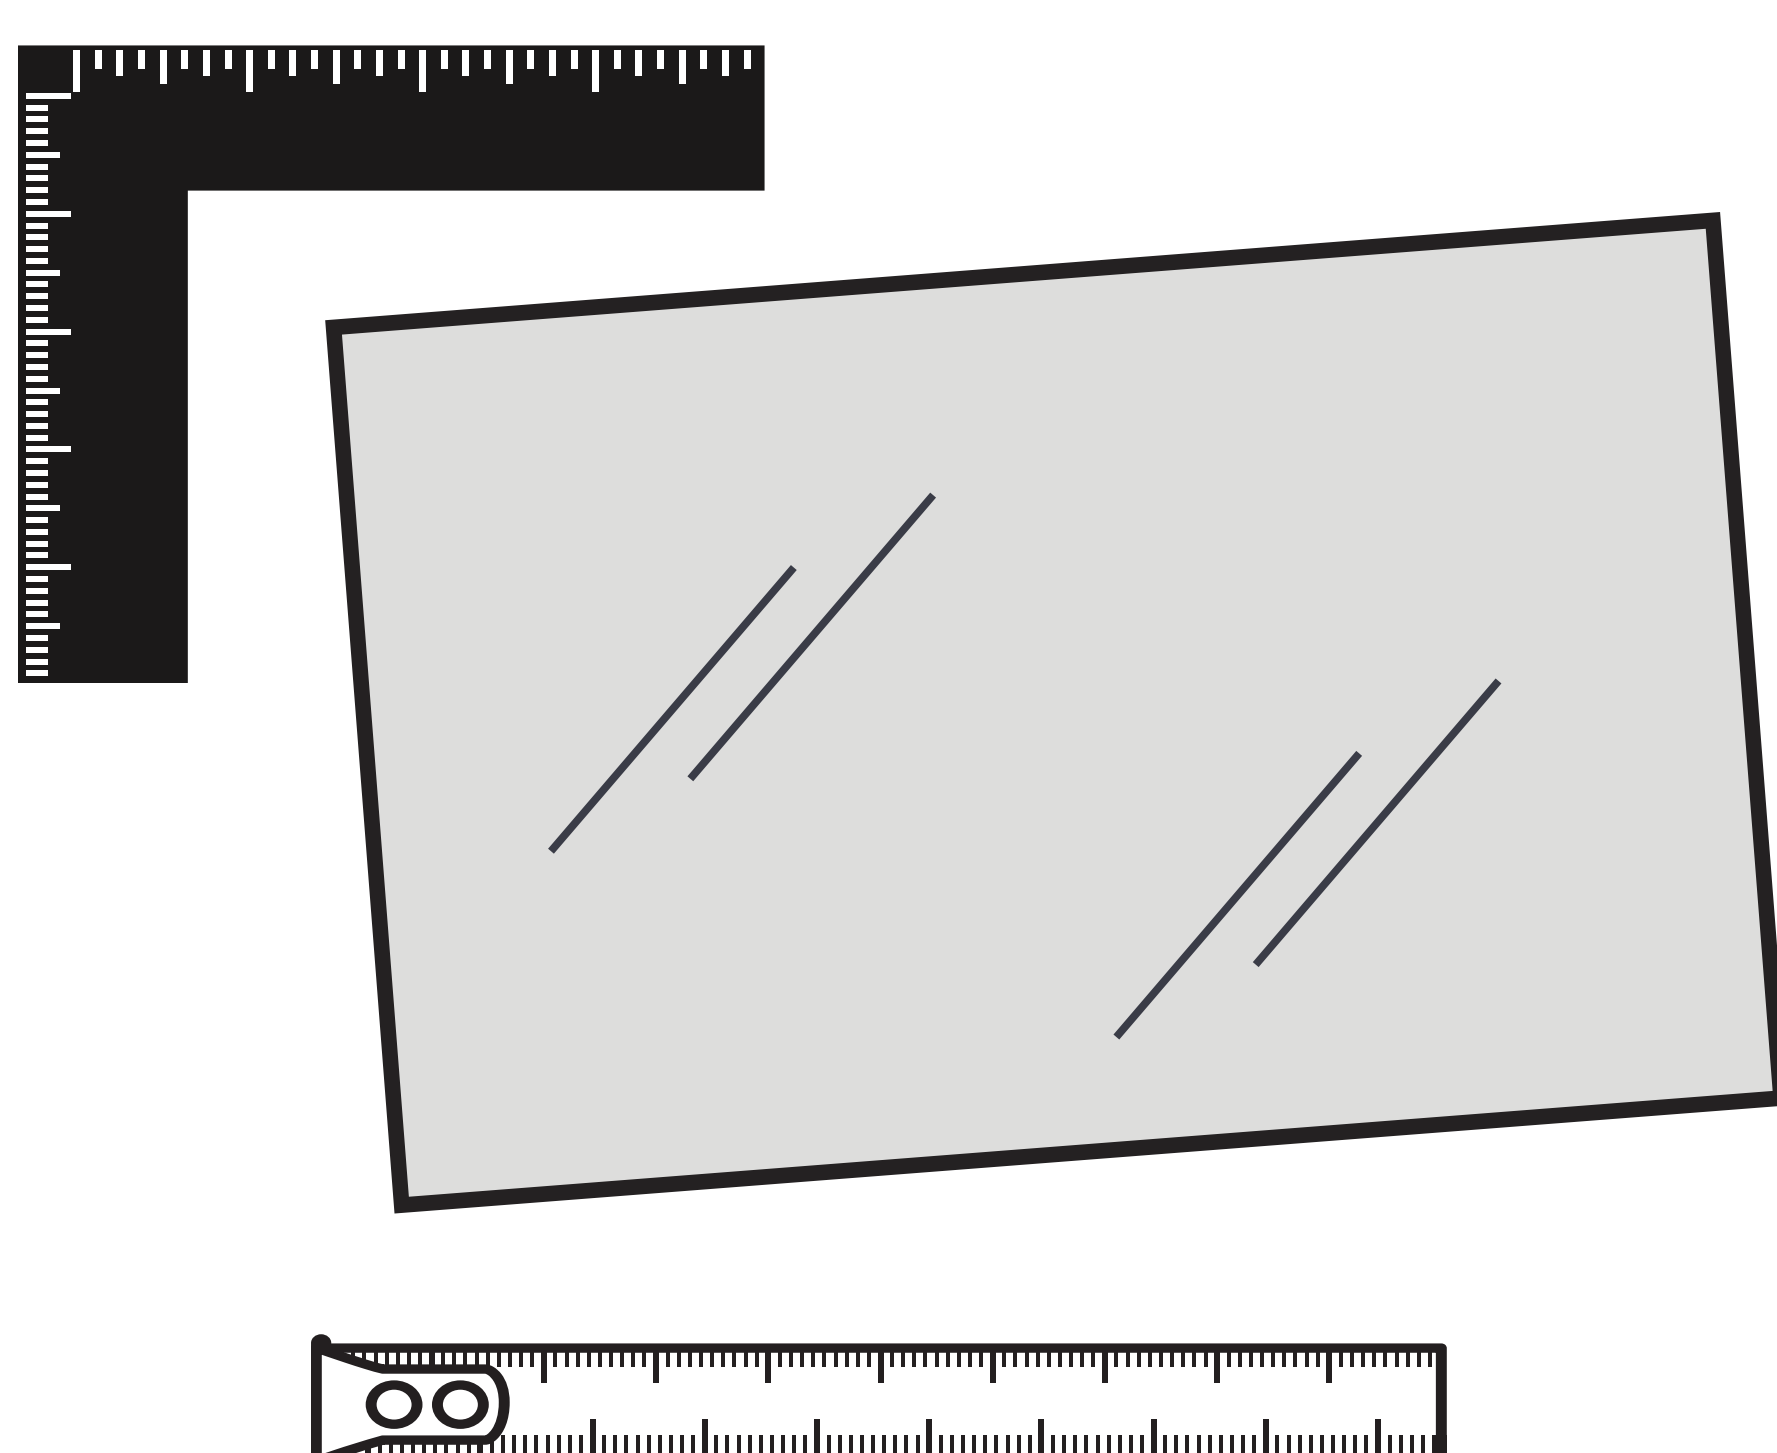

7. Check Alignment:
Ensure the mirror is properly aligned using the level again, making any necessary adjustments.

If there are any questions relating to defects, missing parts, assembly issues or replacements, please send a detailed email to cs@jonathany.com.