












ASSEMBLY INSTRUCTIONS
MODEL #032 E: END TABLE BOOKCASE

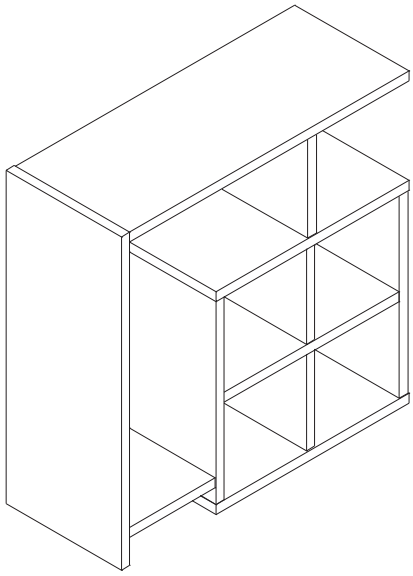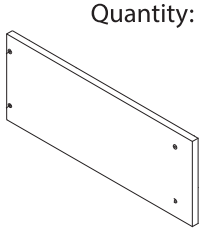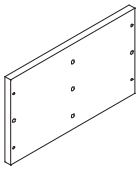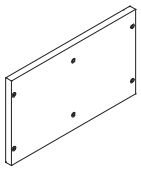




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


PARTS IDENTIFICATION

P1 Quantity: 1  Side Panel - Left	**P2** Quantity: 1  Top Panel	**P3** Quantity: 1  Upper Shelve	**P4** Quantity: 1  Bottom Panel	**P5** Quantity: 1  Vertical Panel-Left
P6 Quantity: 1  Vertical Panel-Right	**P7** Quantity: 1  Upper Vertical Panel	**P8** Quantity: 1  Middle Shelve Panel	**P9** Quantity: 1  Lower Shelve-Left	**P10** Quantity: 1  Middle Vertical Panel
P11 Quantity: 1  Lower Vertical Panel	**Tools required:** MALLET  HOUSEHOLD SCREWDRIVER 			


HARDWARE LIST

H1 Wooden Dowel M8 x 25  Quantity: 11 pcs	**H2** Connecting Bolts  Quantity: 2 pcs	**H3** Cam Lock 15 x 12.5mm for H2  Quantity: 6 pcs	**H4** Double End Connecting bolt  Quantity: 2 pcs	**H5** Screw #9 x 1 1/2″  Quantity: 20 pcs
H6 Wooden Dowel M8 x 50  Quantity: 4 pcs	**H7** Leg Stud  Quantity: 6 pcs	**H8** Sticker  Quantity: 12 pcs		


PARTS IDENTIFICATION

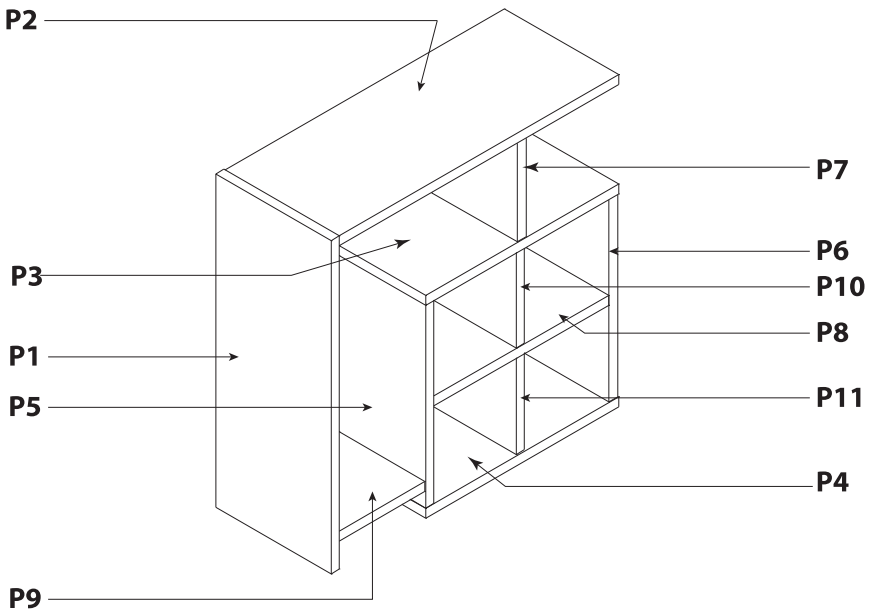


STEP 1 *Insert wooden dowels (H1) into the following parts,*

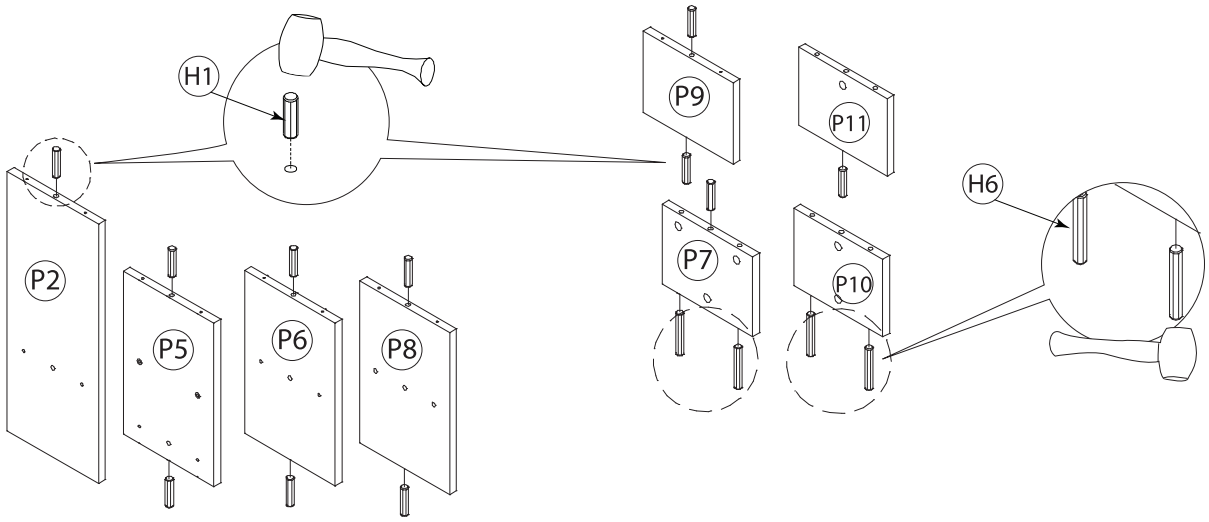

STEP 2

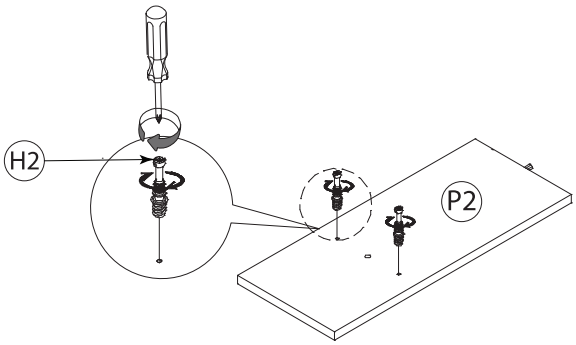



STEP 3

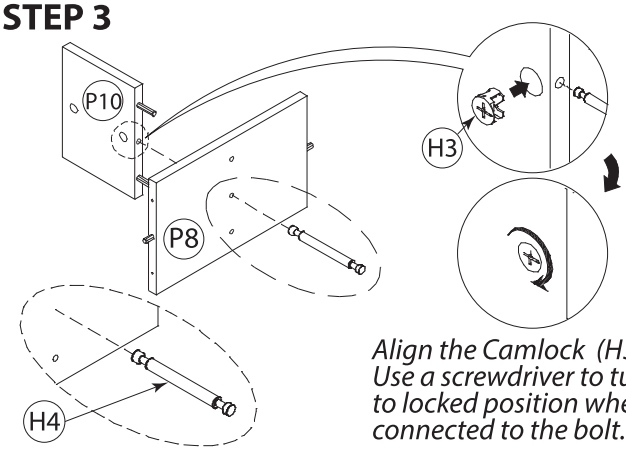

Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.


STEP 4

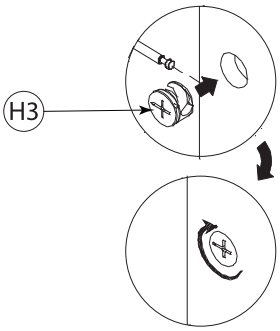

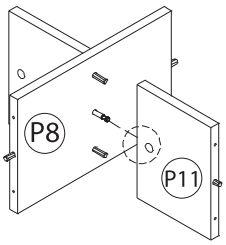


Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.


STEP 5

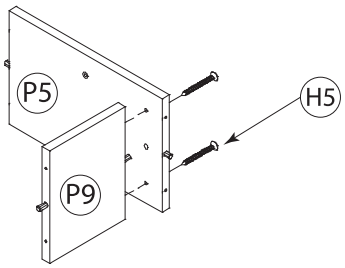


STEP 6

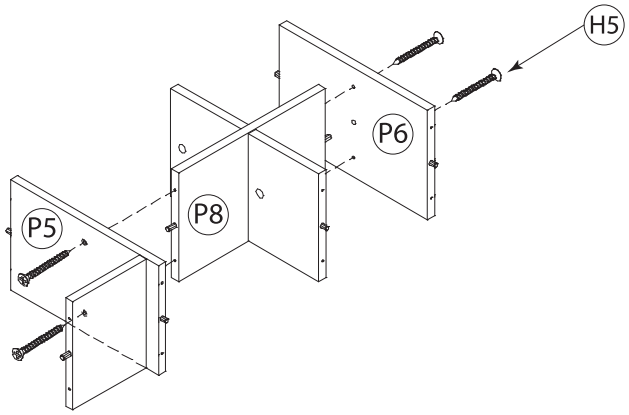


STEP 7

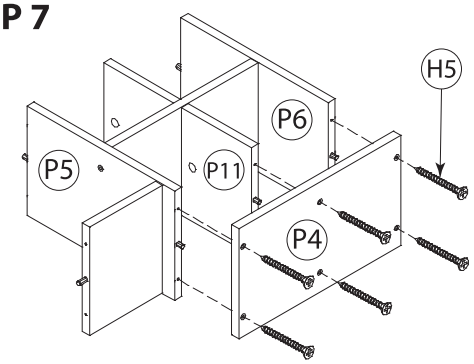

STEP 8

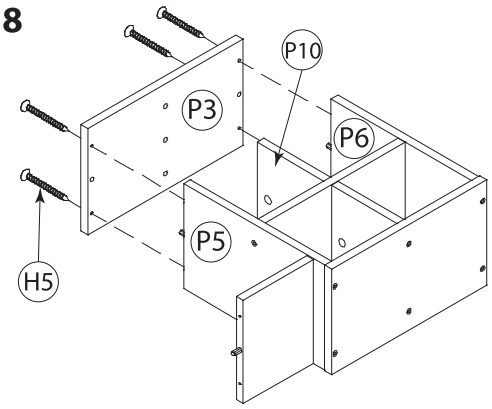


STEP 9

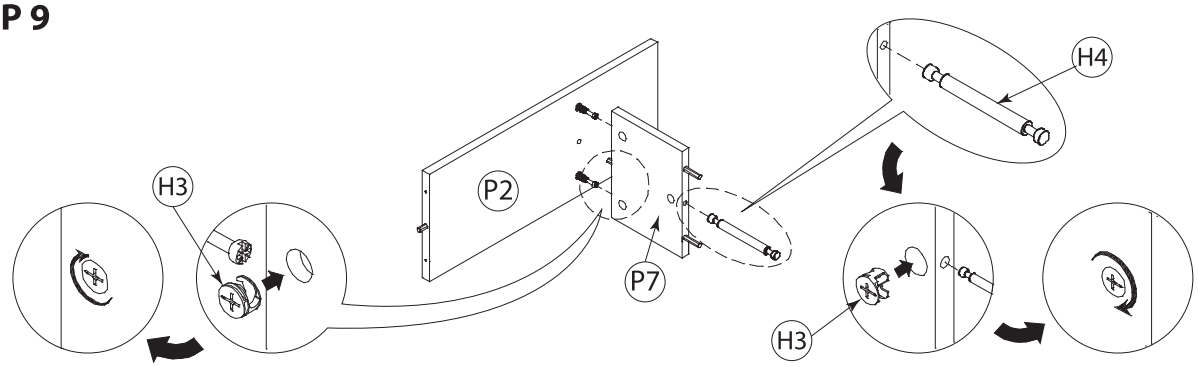

Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.


Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.

STEP 10

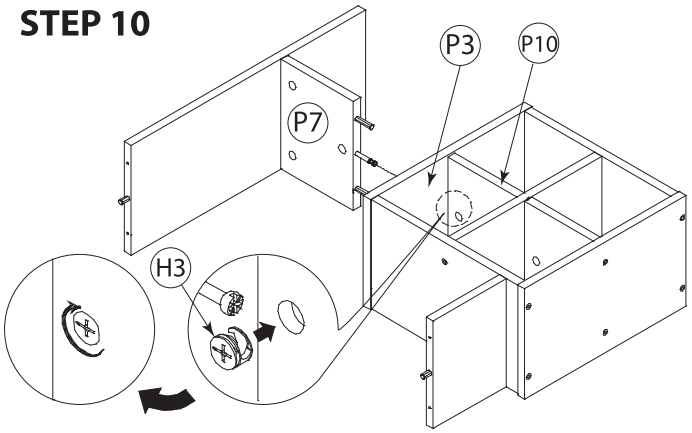

Align the Camlock (H3), Use a screwdriver to turn it to locked position when it is connected to the bolt.

STEP 11

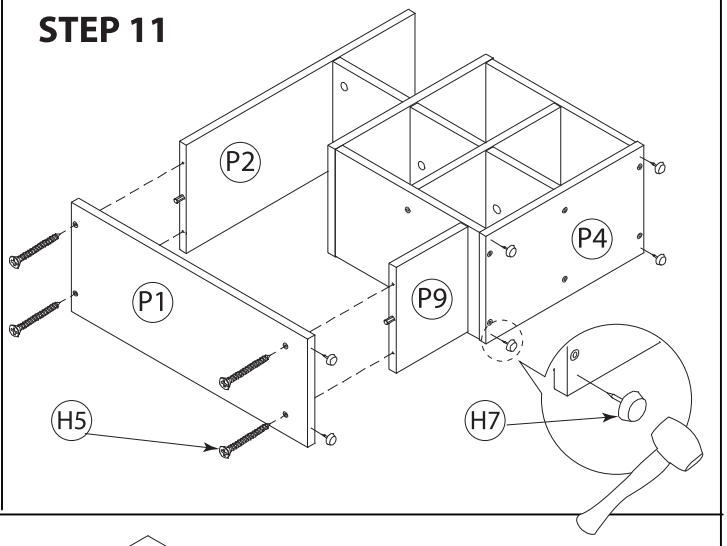

STEP 12

