


ASSEMBLY INSTRUCTIONS


Step 1

Stand two assembled Base Cabinets side by side as shown and close to final location of where cabinets will be placed.

With 2 people, position a 84"x 19" WOOD TOP on top of aligned base cabinets. Make sure logo on Wood Top edge is upright and front facing on cabinets.

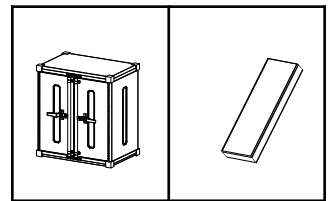

Base Cabinet (2) Wood Top (1)

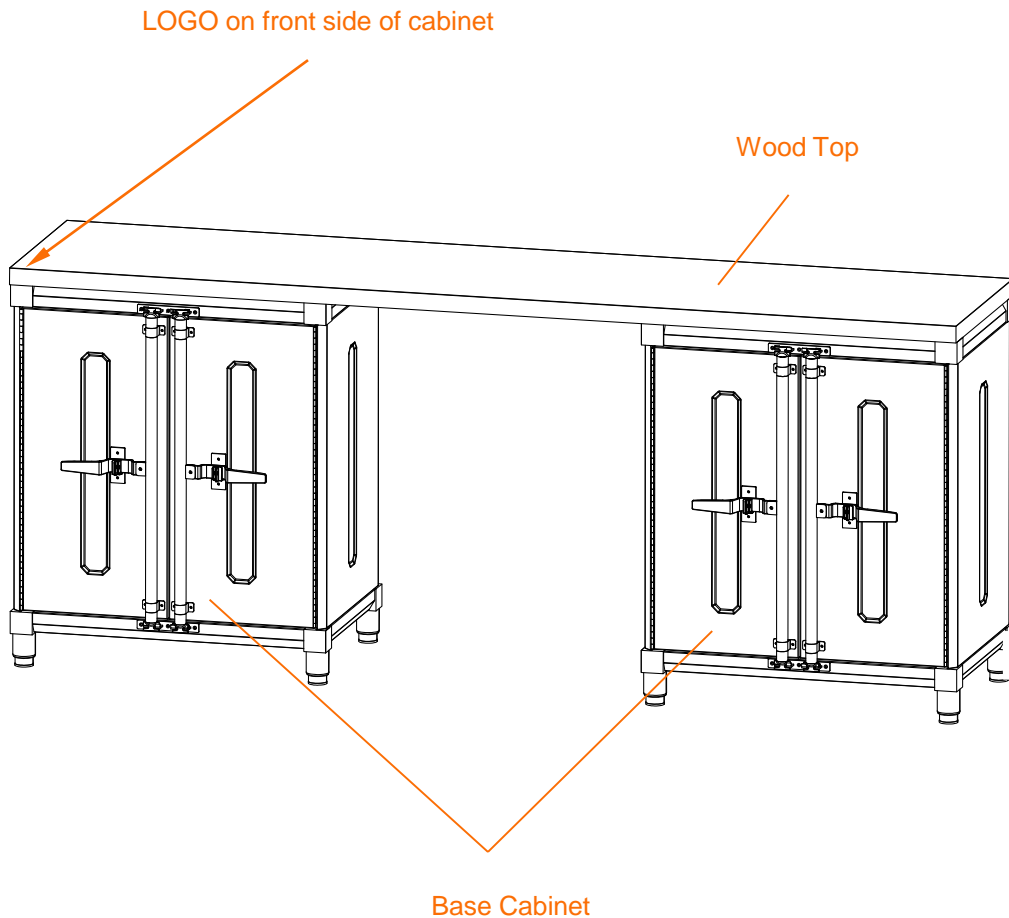



ASSEMBLY INSTRUCTIONS

Step 2

Align Wood Top edges to Base Cabinets top edges. Place WOOD TOP BRACKET (A) on back corner of each cabinet. Align bottom hole on WOOD TOP BRACKET (A) to each pre-installed nut on back corner of cabinet. Insert CABINET SCREW (C) into each bottom hole and tighten them fully to cabinet with a Philips screwdriver.

Insert WOOD SCREW (B) into each top hole and tighten them fully to wood top edge with a Philips screwdriver.

With 2 people, carefully slide entire assembly into final location. Do NOT lift assembly by Wood Top.

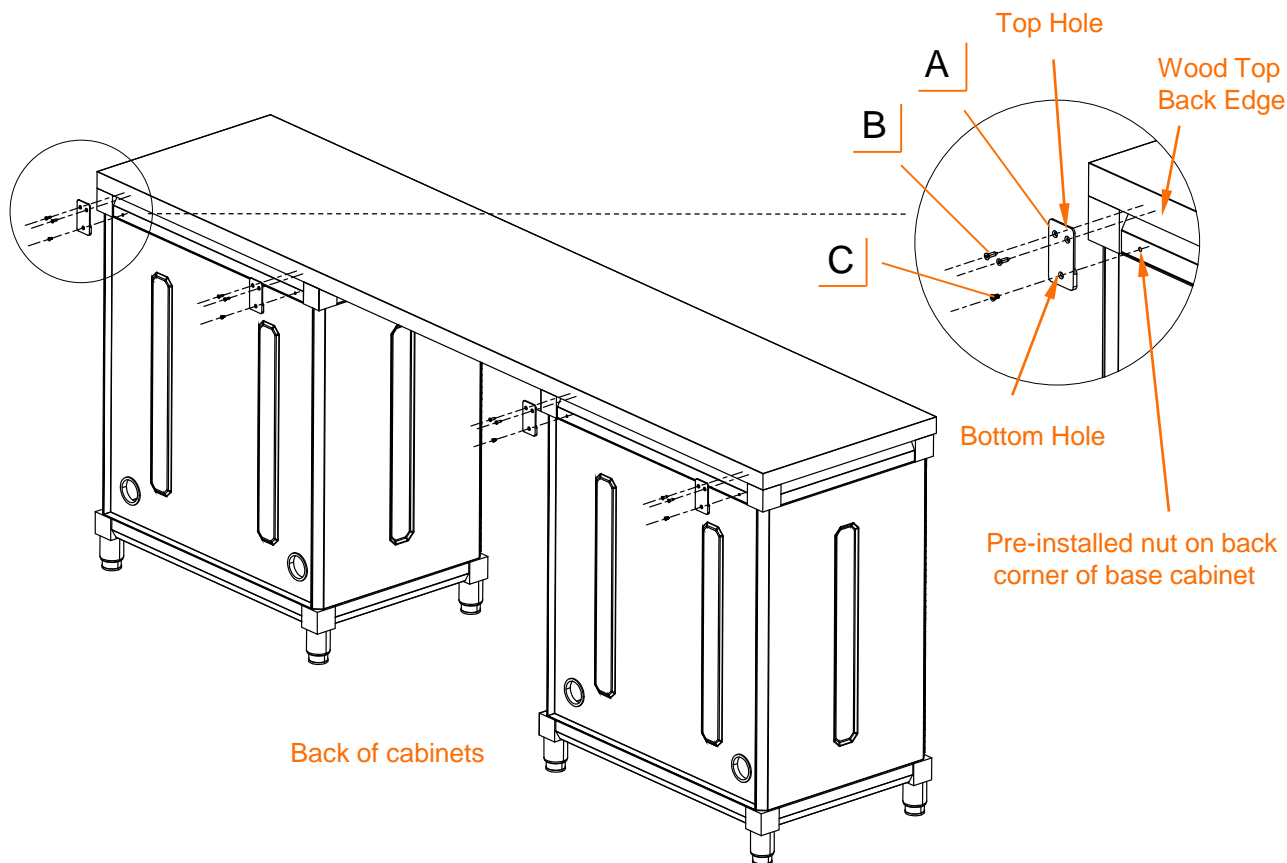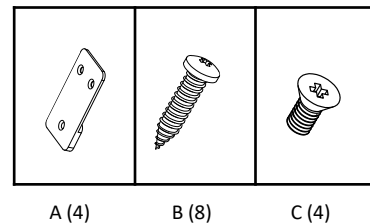

ASSEMBLY INSTRUCTIONS



Optional Installation with Wood Top Overhang

If you want to attach your Wood Top with 2 Base Cabinets next to each other and have overhang of the Wood Top on either side, you will need to buy a Wall Mounting Hardware Kit (PBK-02-011-0014) which is available for purchasing through our website or our customer service number.

Move Base Cabinets next to each other and close to final location where it will be placed. With 2 people, position a 84"x 19" WOOD TOP on top of base cabinets. Make sure logo on Wood Top edge is upright and front facing on cabinet.

Place WOOD TOP BRACKET (A) on back corner of each cabinet. Align bottom hole on WOOD TOP BRACKET (A) to each pre-installed nut on back corner of each cabinet. Insert CABINET SCREW (C) into each bottom hole and tighten them fully to cabinet with a Philips screwdriver.


Insert WOOD SCREW (B) into each top hole and tighten them fully to Wood Top edge with a Philips screwdriver.

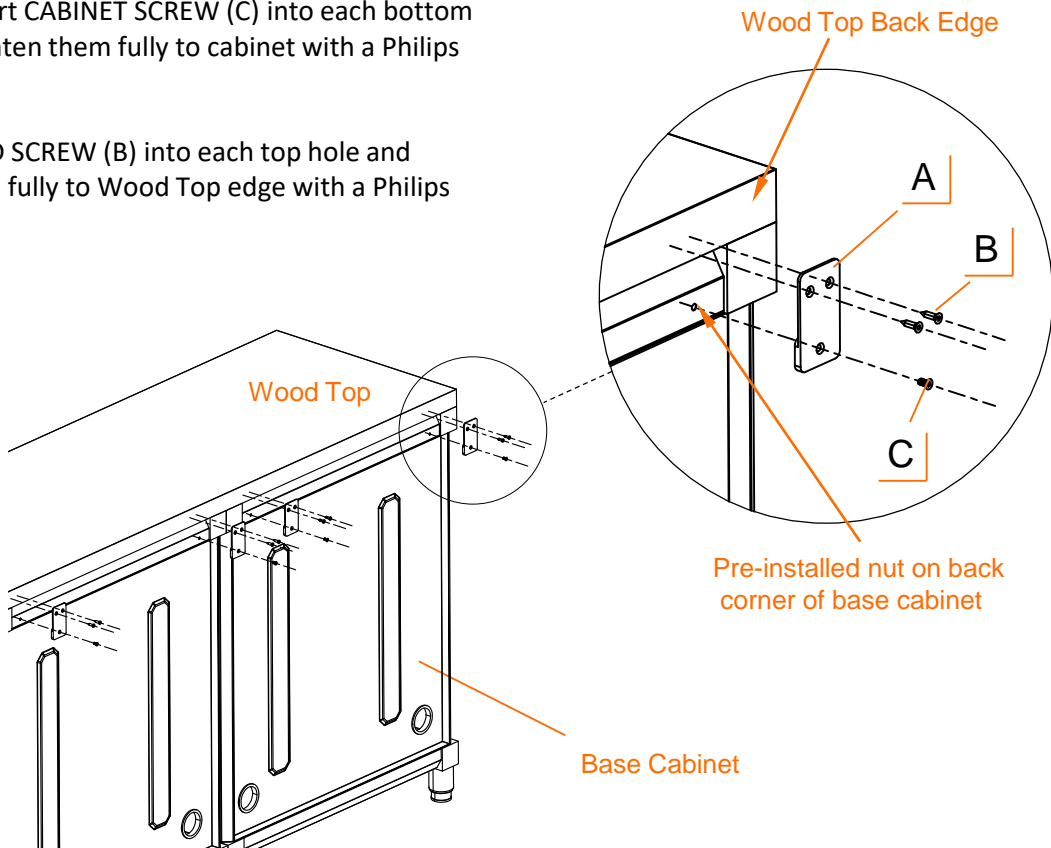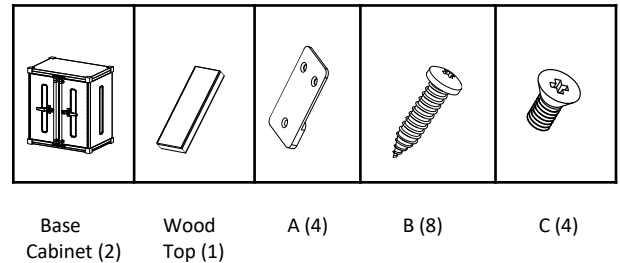

ASSEMBLY INSTRUCTIONS

Optional Installation with Wood Top Overhang

Place two WALL BRACKETS (D) to back edge of the overhang Wood Top as shown. Make sure one bracket is as close as possible to end of unsupported end of wood top. Insert WOOD SCREW (B) into each top hole and tighten them fully to Wood Top edge with a Philips screwdriver.

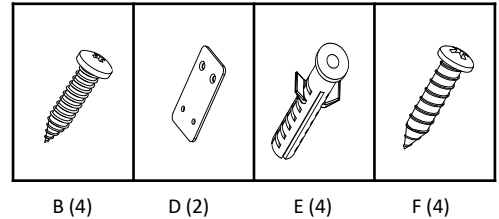

With 2 people, carefully slide assembled unit to wall at desired location. Do NOT lift assembly by wood top.

Mark off mounting location on wall through bottom holes on WALL BRACKET (D). If WALL ANCHORS (E) are required, drill holes in marked locations. Insert WALL ANCHOR (E) completely into each drilled hole.

Fasten WALL SCREWS (F) through bottom holes on WALL BRACKET (D) into the wall or anchors tightly with a Philips screwdriver.

Note: Please consult a local contractor if you are unsure if your wall is able to bear the load of the Wood Top.

