


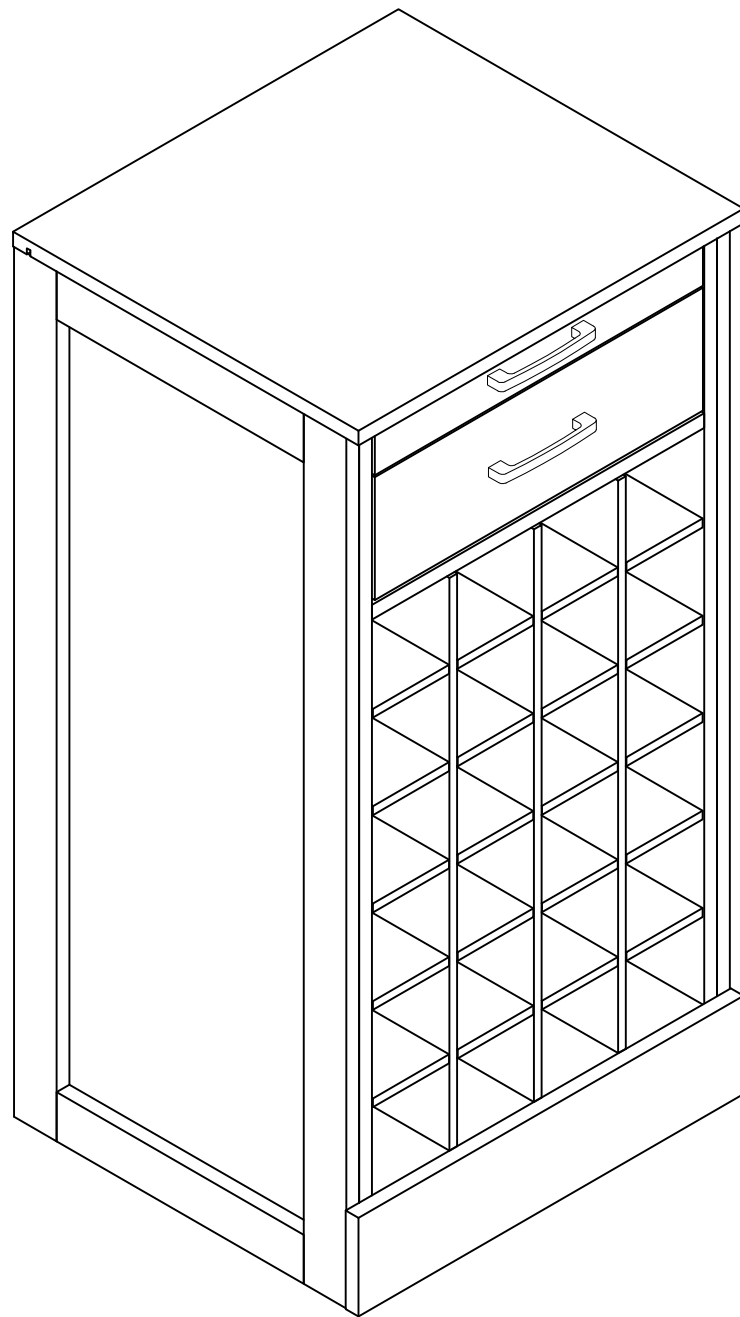
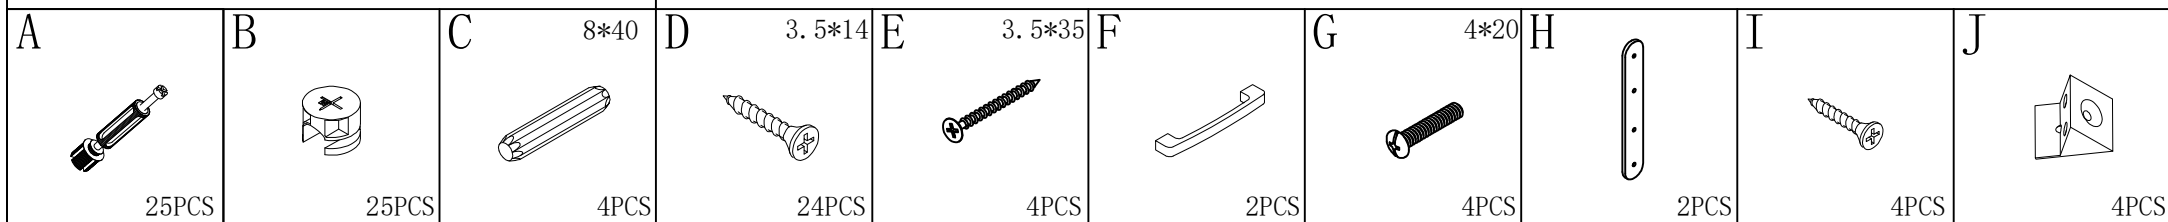
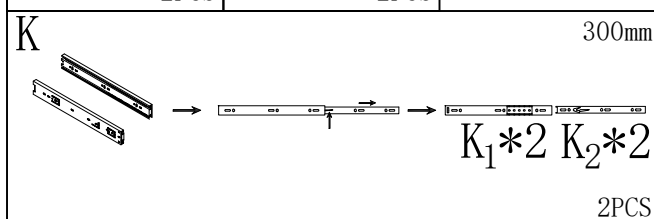
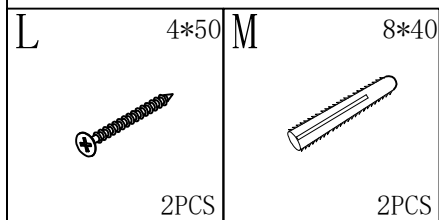
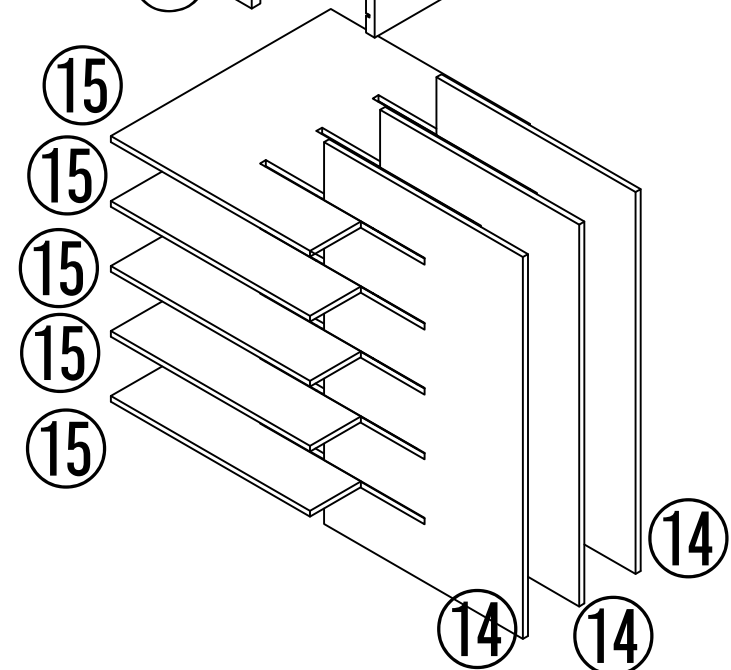
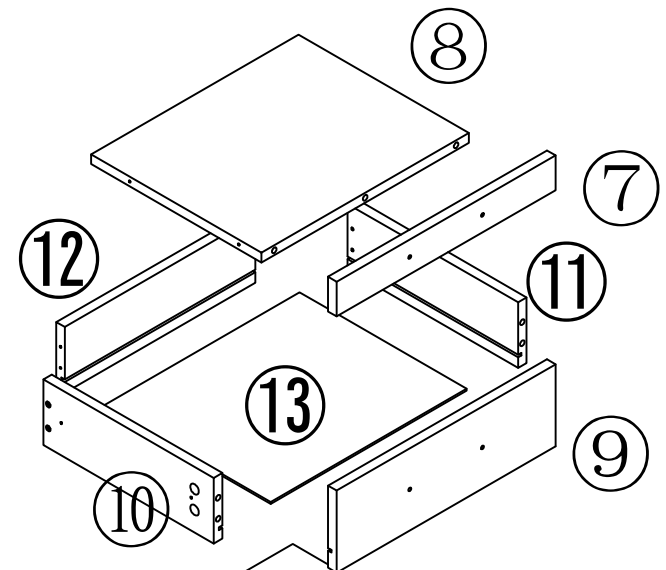
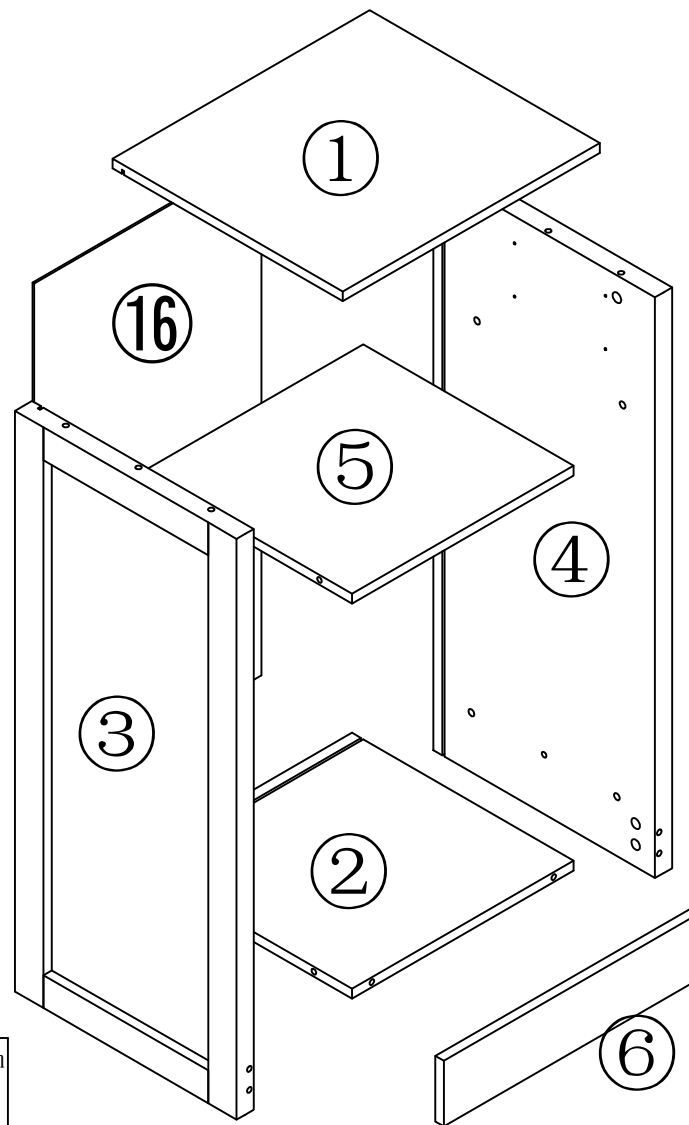
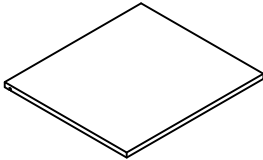
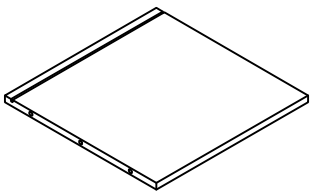


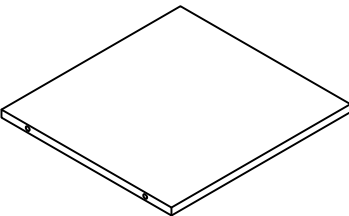
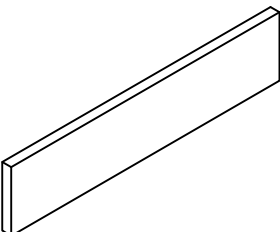
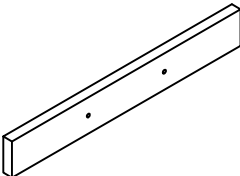
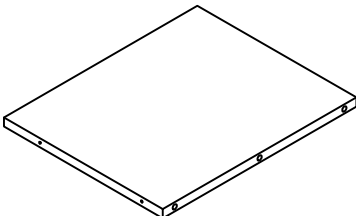
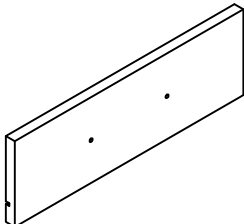
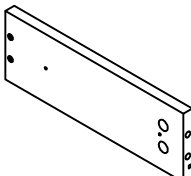
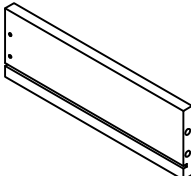
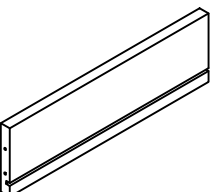
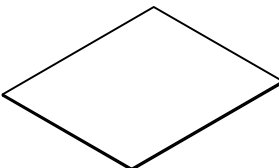


HS25074

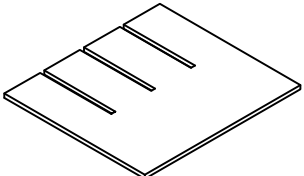



1  452*405 1PCS	2  390*390 1PCS	3  885*390 1PCS	4  885*390 1PCS	5  390*370 1PCS
6  452*100 1PCS	7  385*53 1PCS	8  365*300 1PCS	9  385*125 1PCS	10  300*100 1PCS
11  300*100 1PCS	12  335*100 1PCS	13  345*294 1PCS	14  582*350 3PCS	15  387*350 5PCS
16  879*400 1PCS				

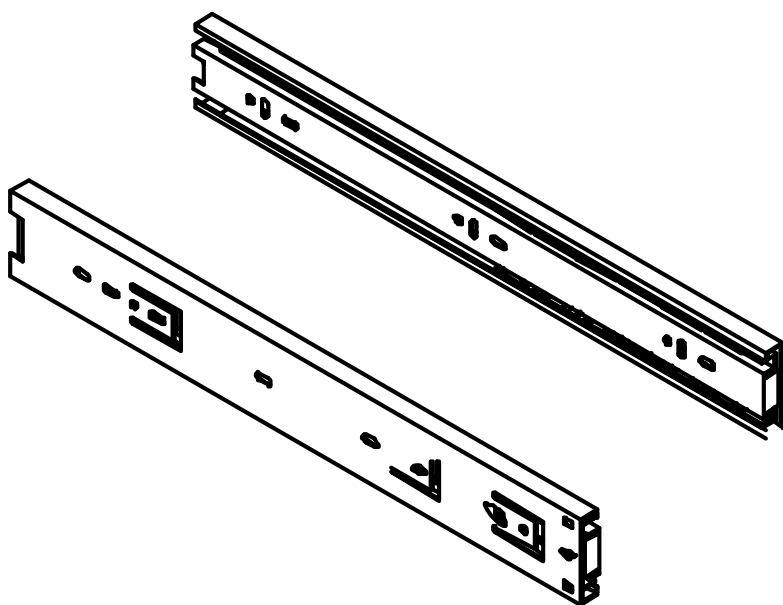


Scan QR code for hardware instructions




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

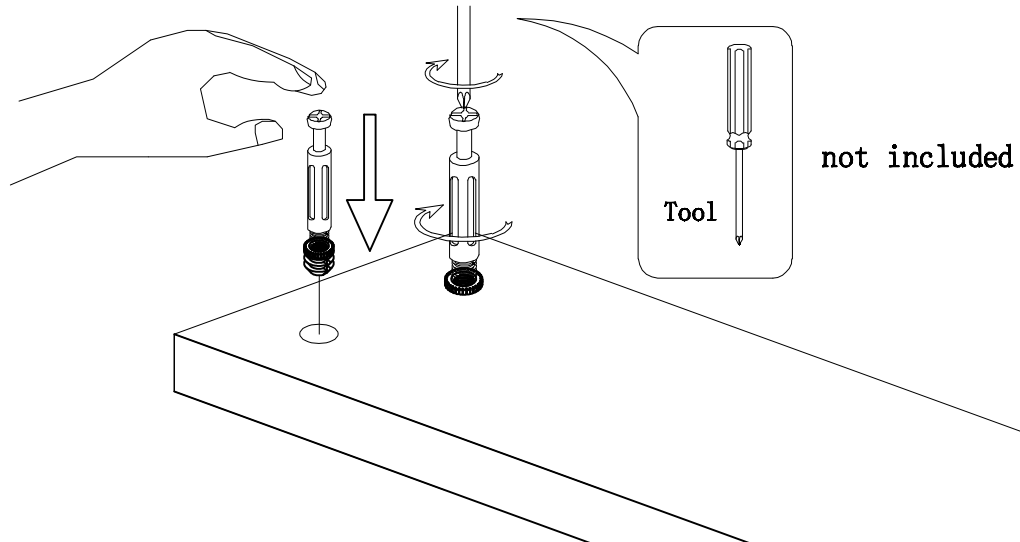


II

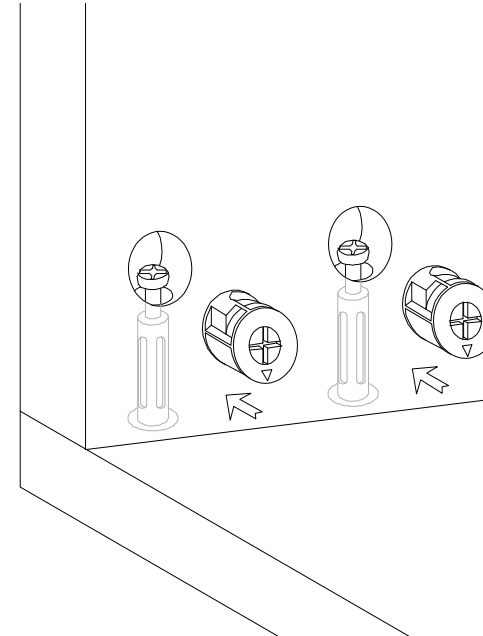

III




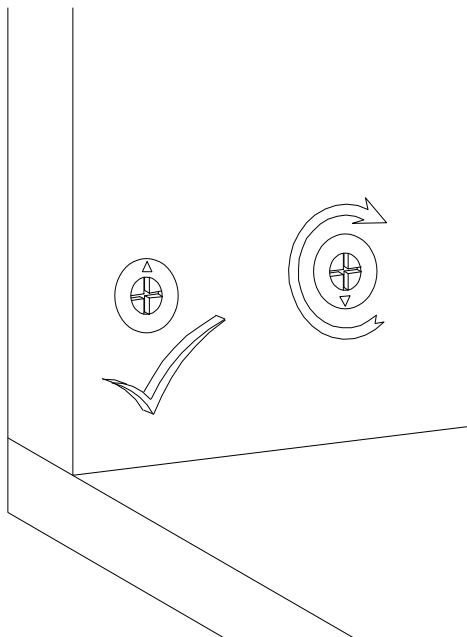


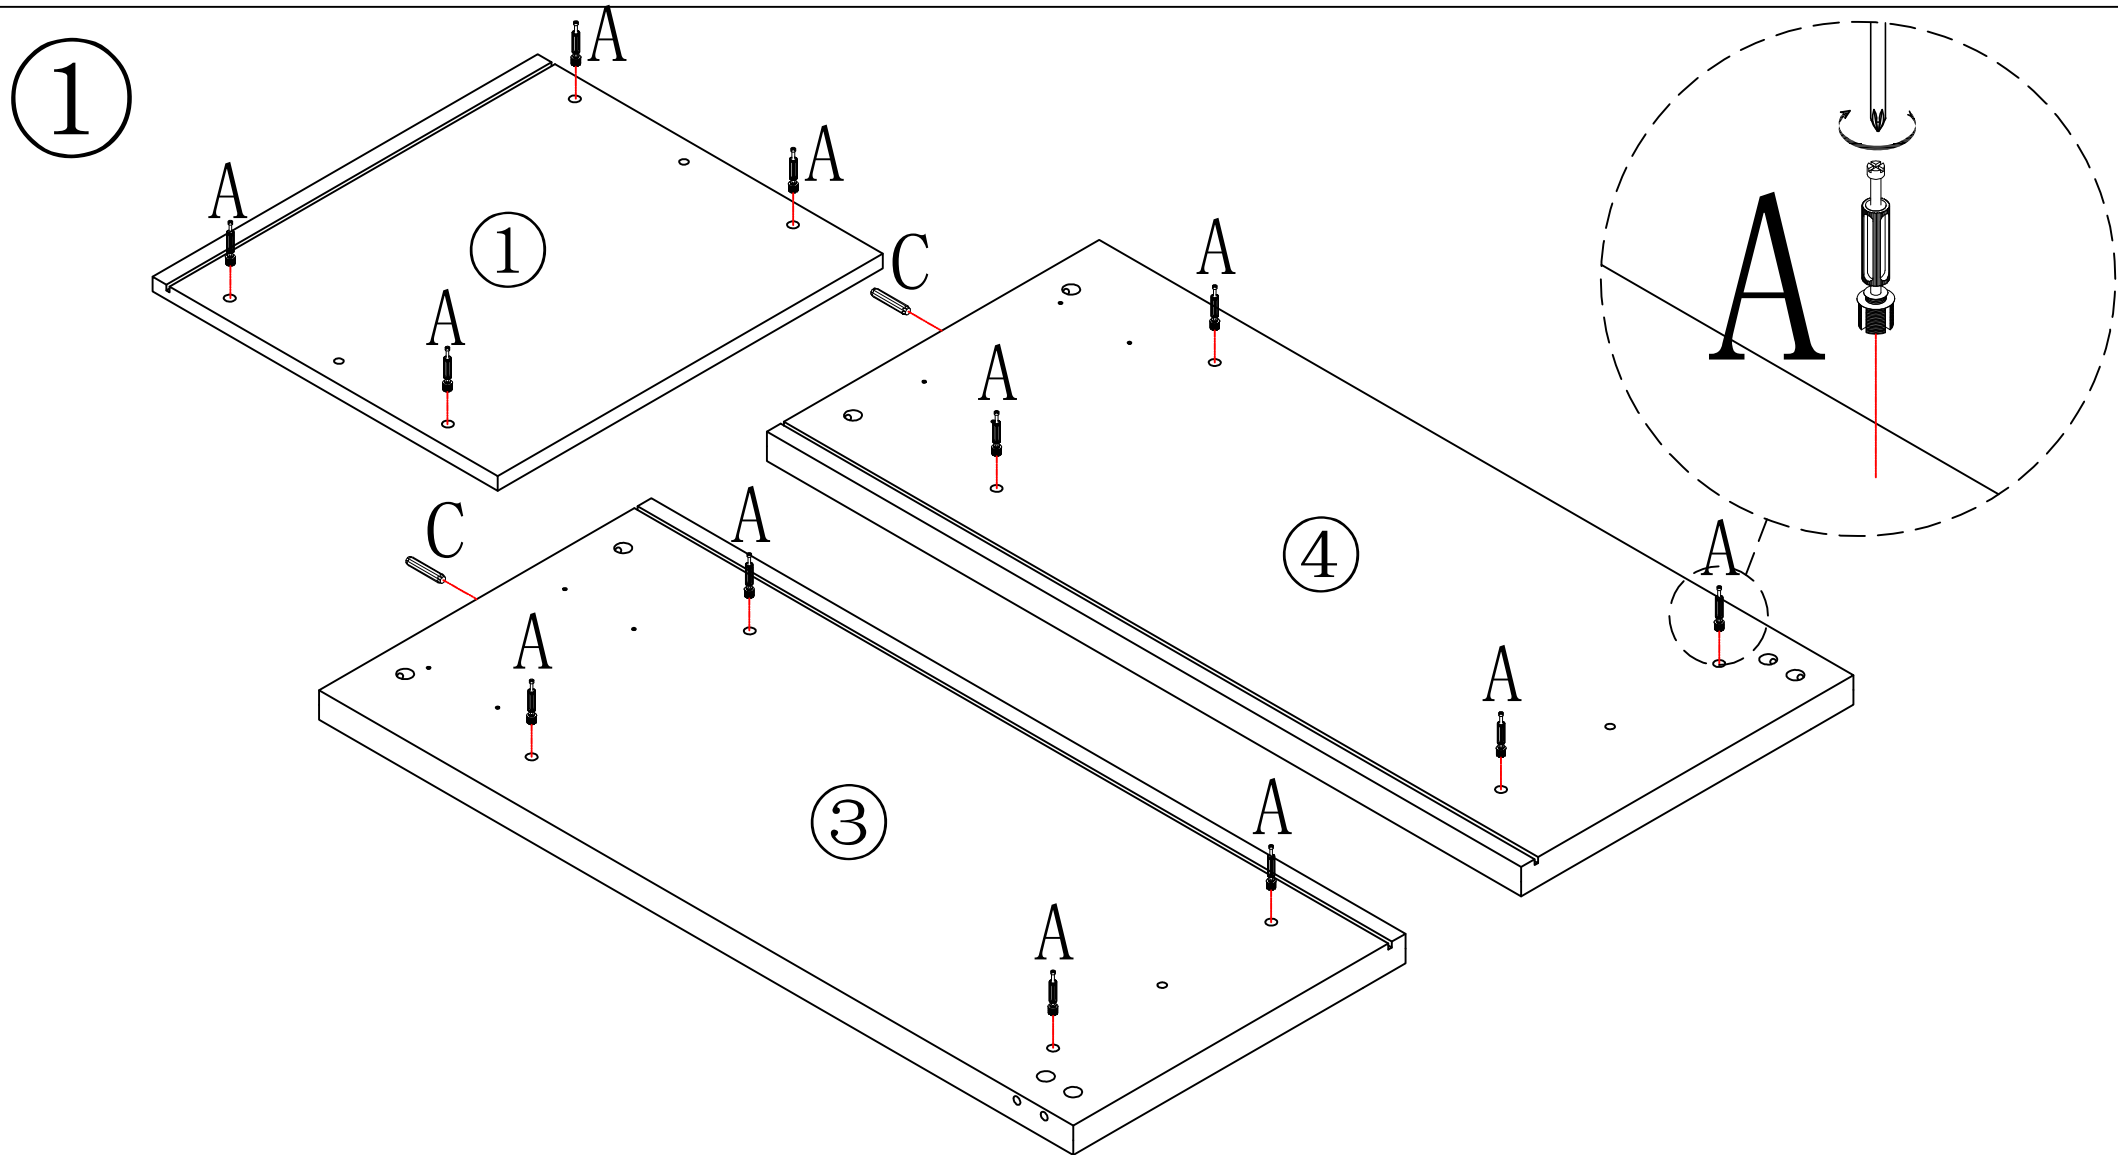

	A*12
	C*2

put A on board ① ③ ④
 put C on board ③ ④

②

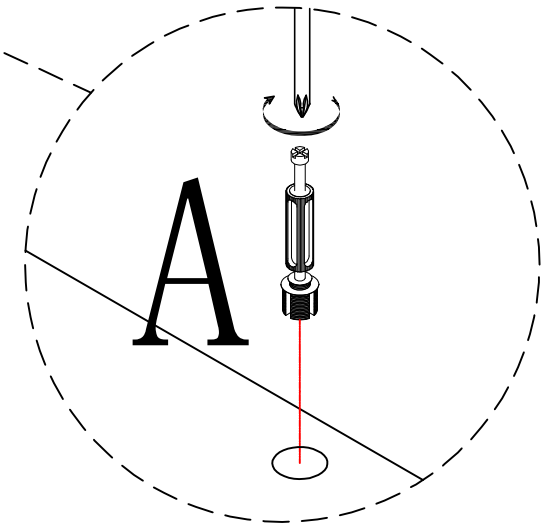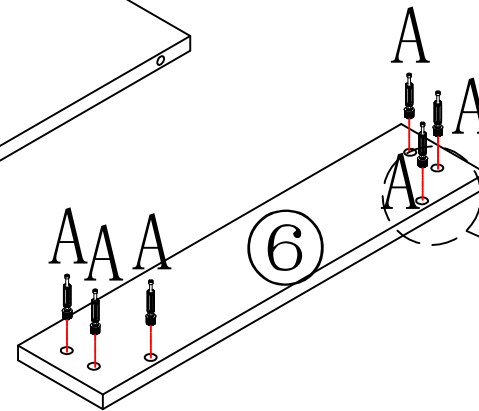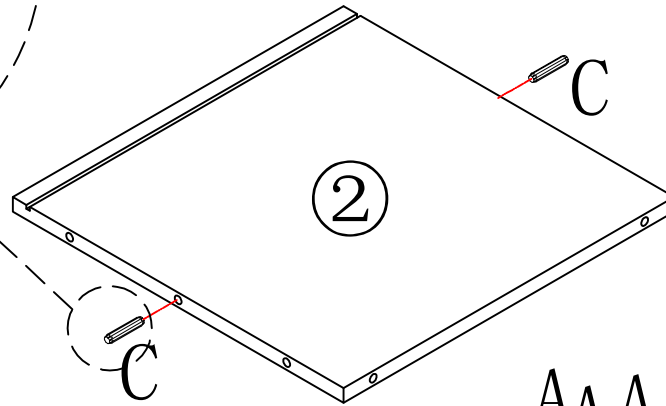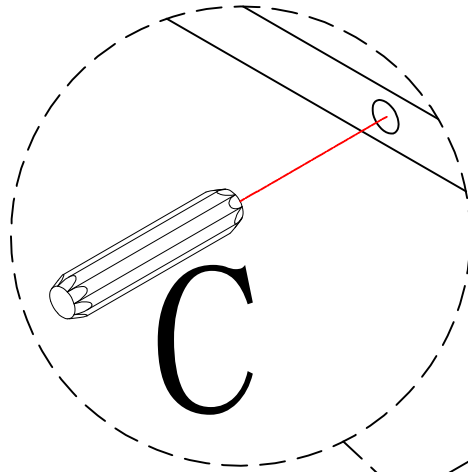

put A on board ⑥

put C on board ②




A*6



C*2

③

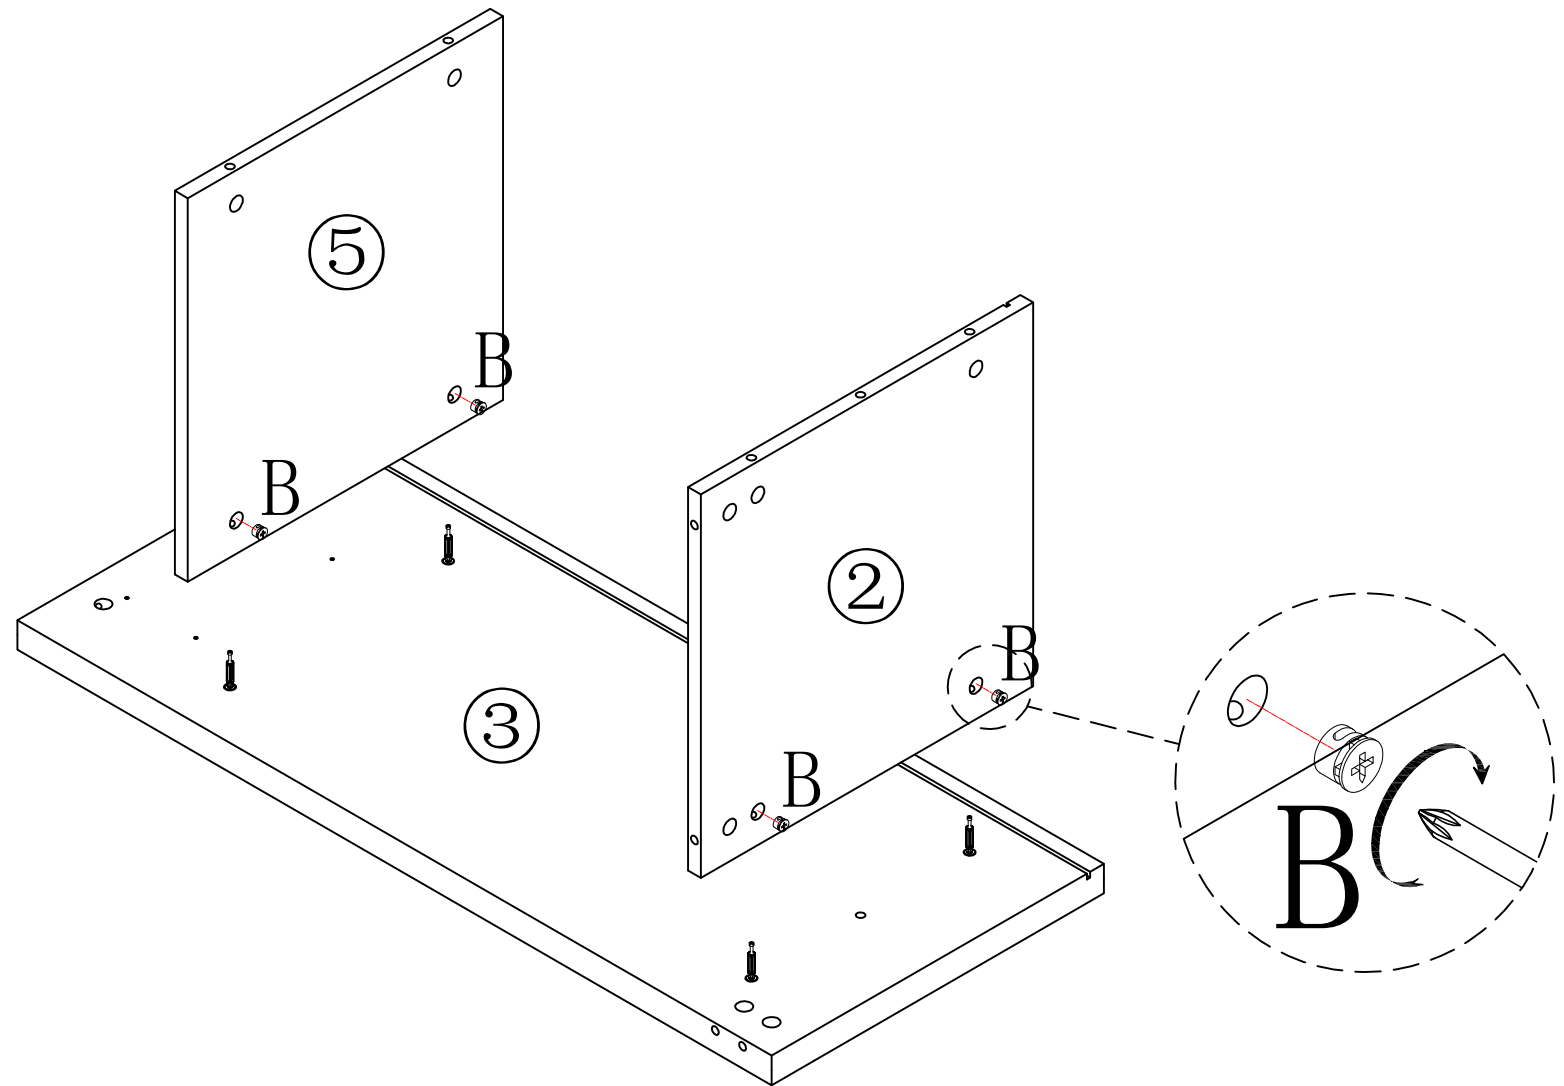

Make sure the arrow on the screw align to the hole on the side.


put B on board ② ⑤



B*4

4


put B on board ② ⑤

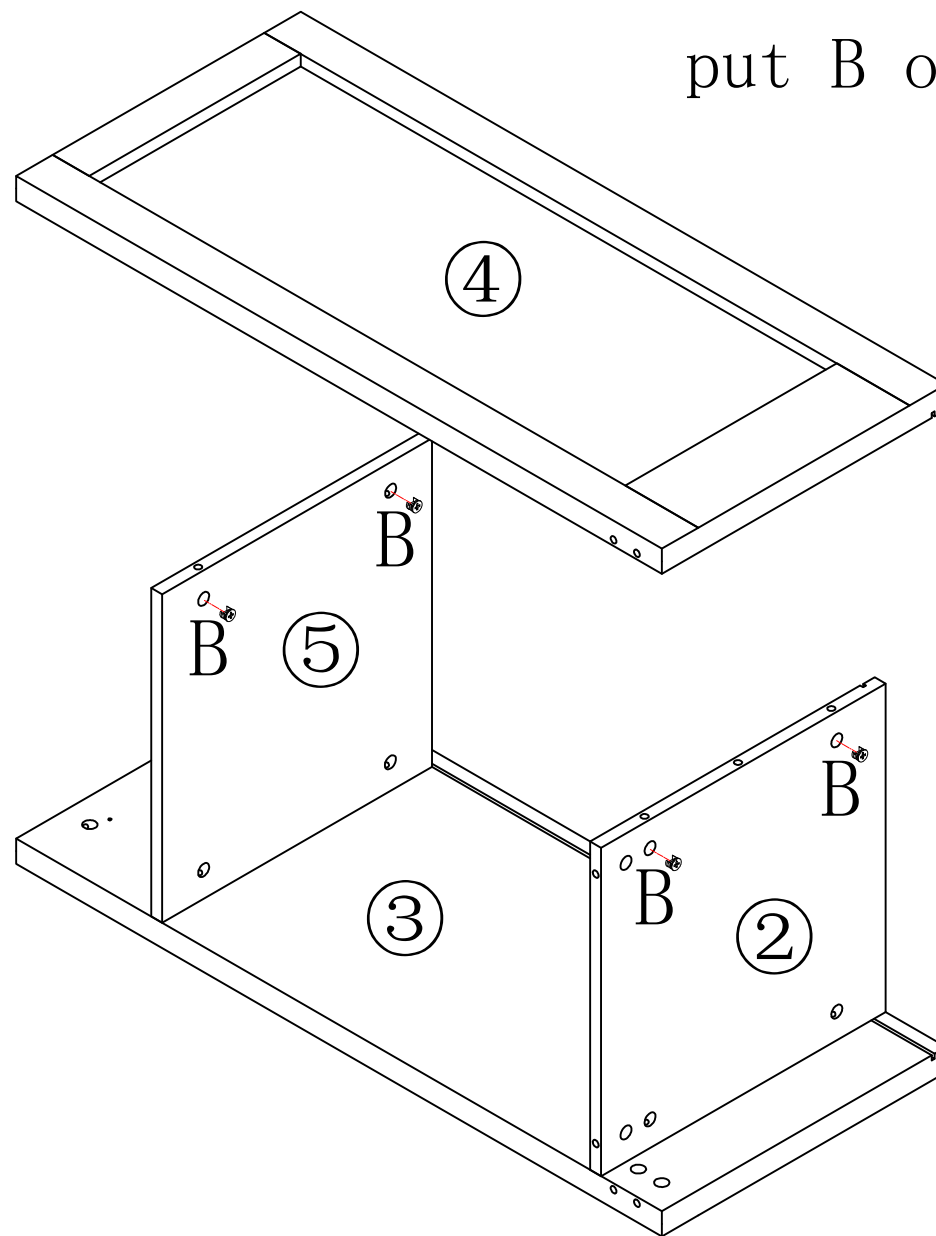

B*4


⑤

put B on board ② ③ ④

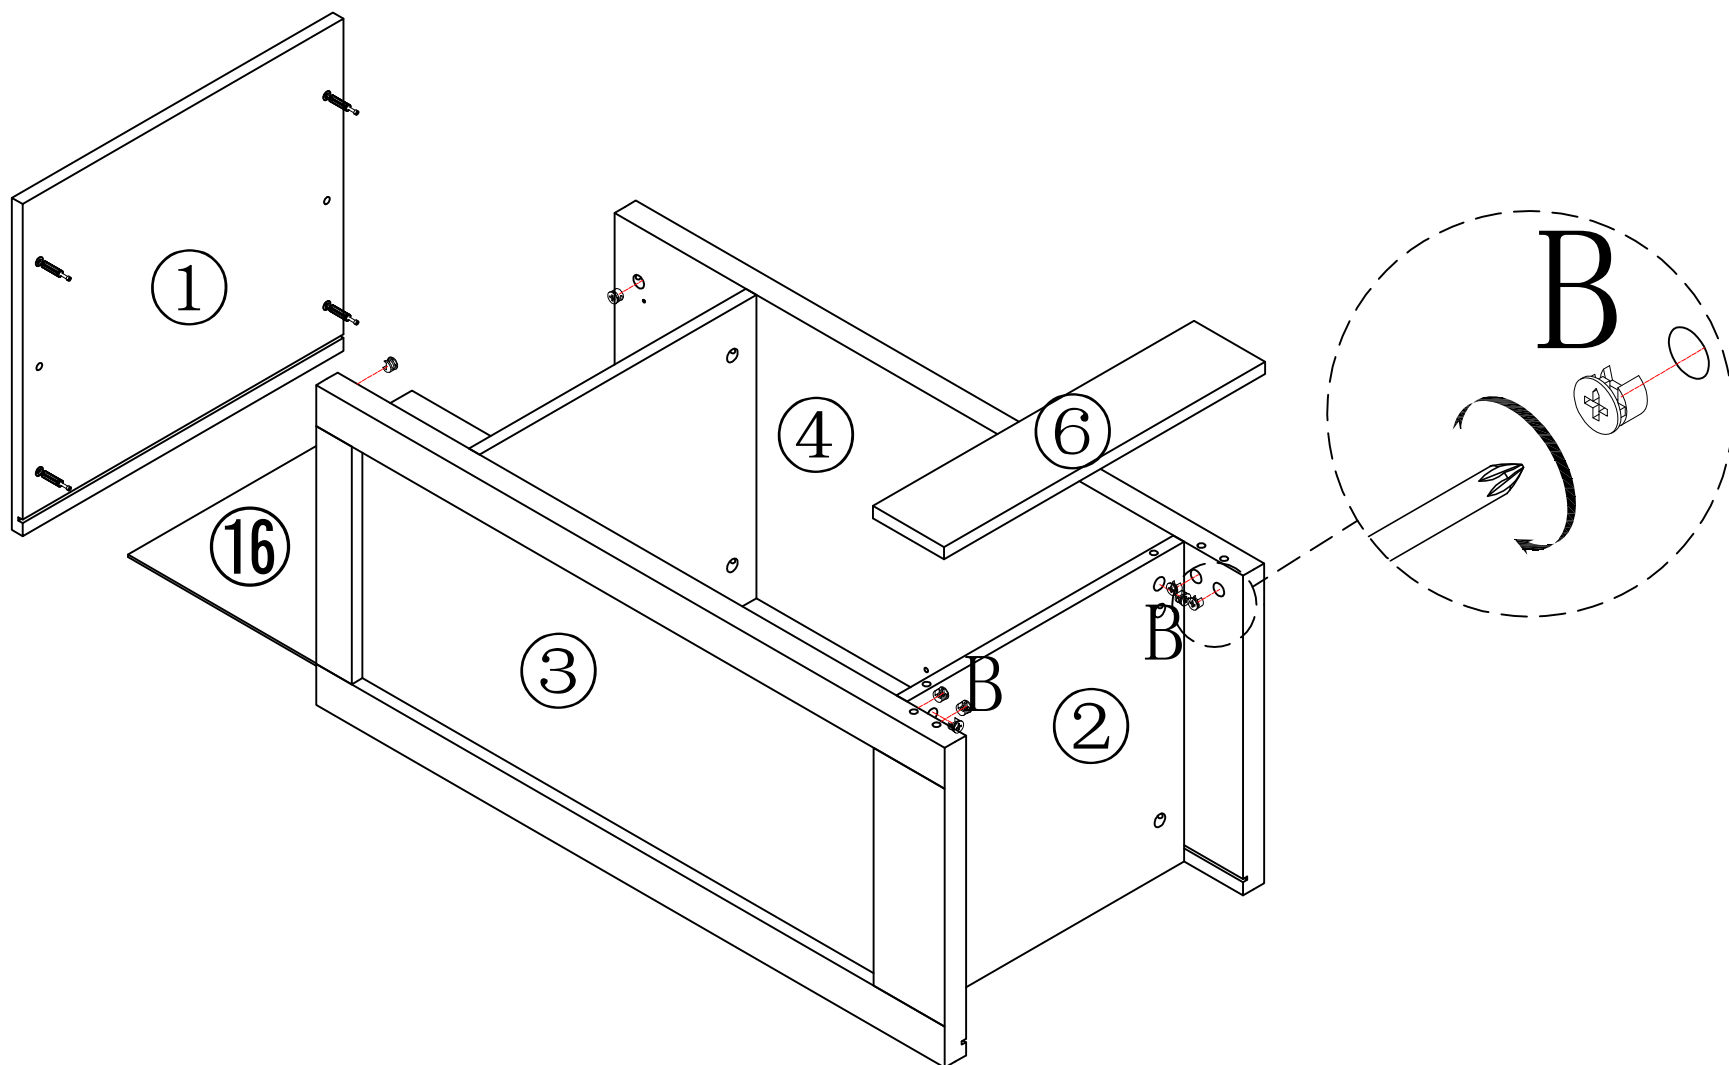

B*10

⑥

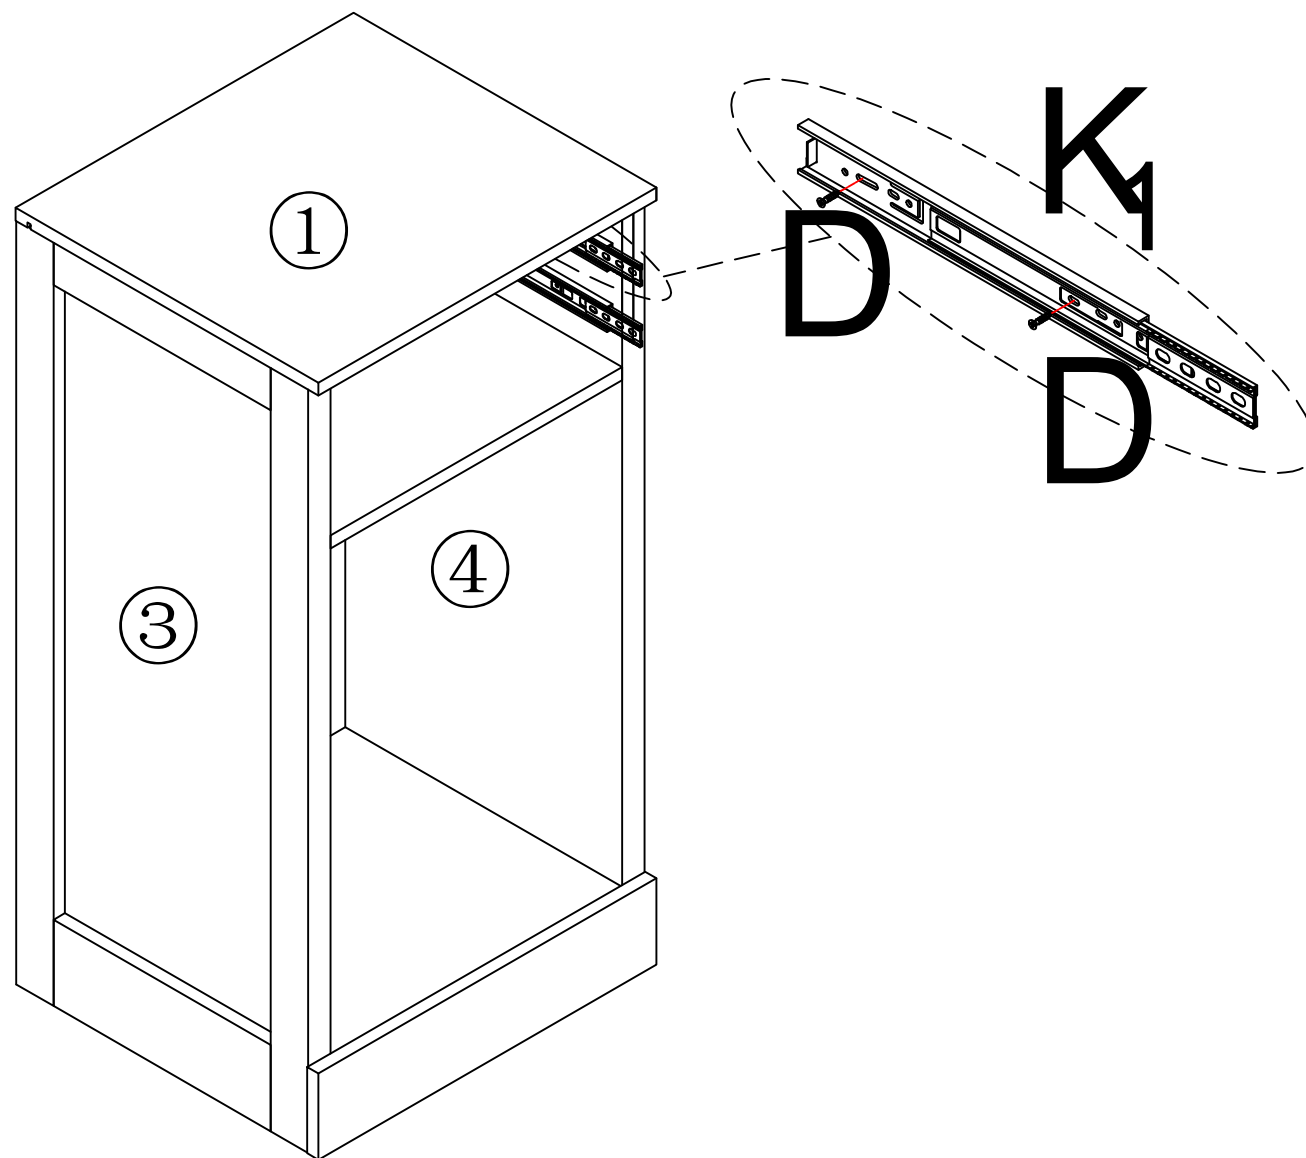


D*8






K₁*4

7

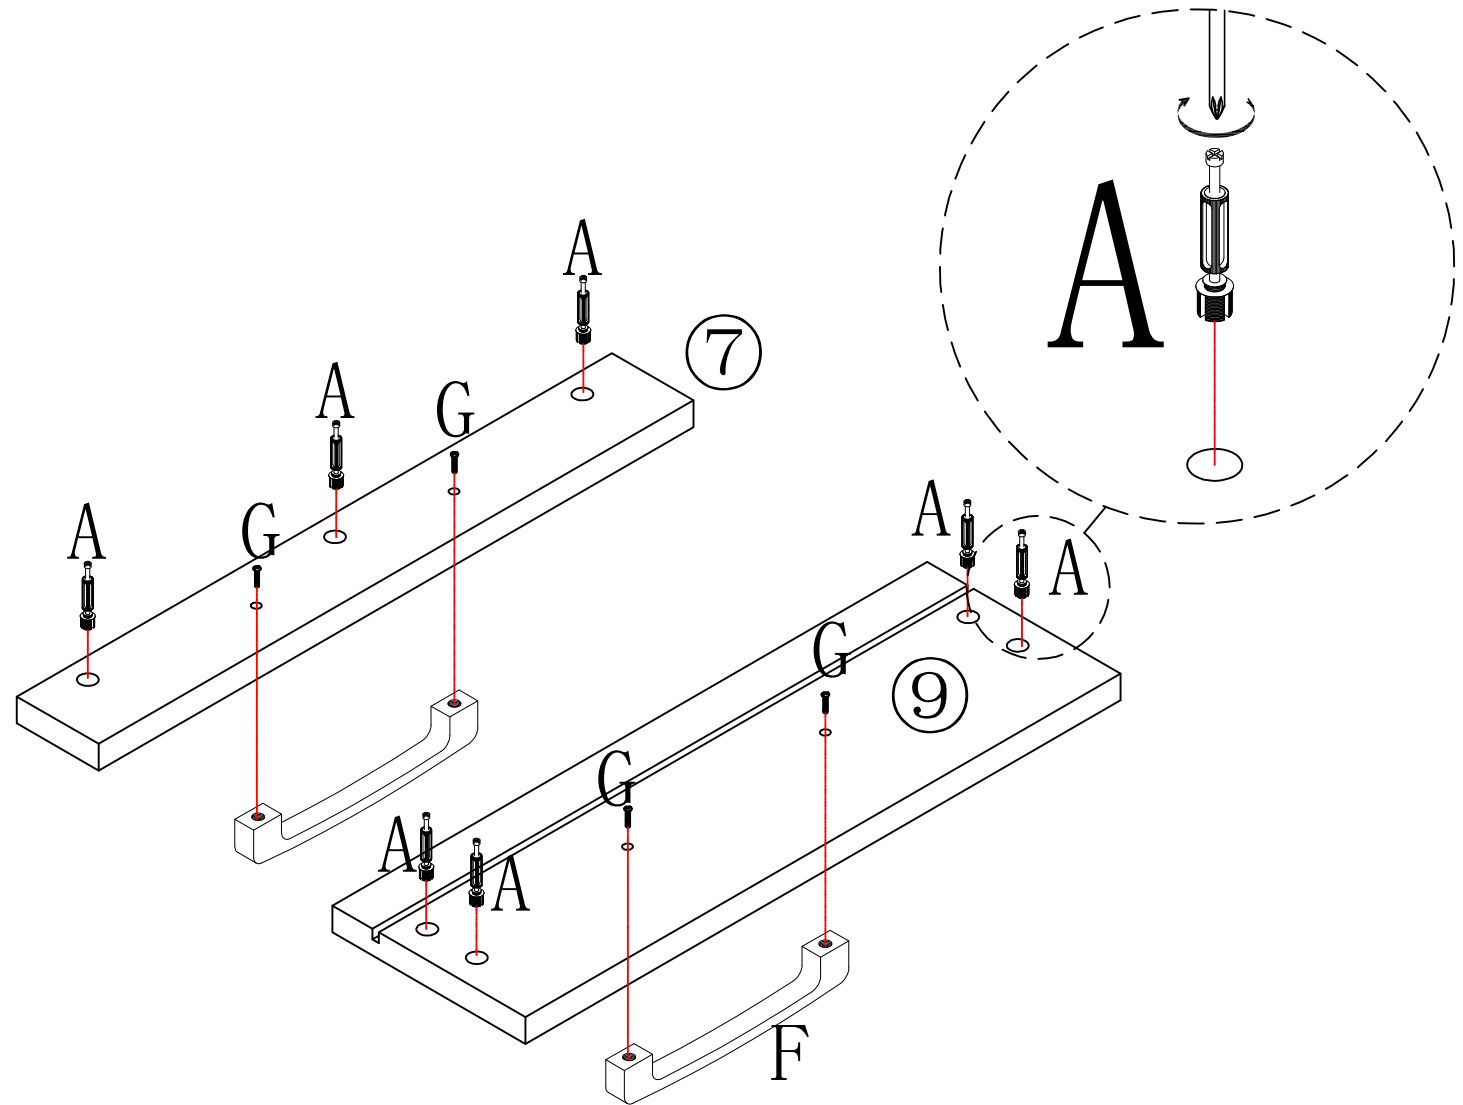

	A*7
	F*2
	G*4

⑧

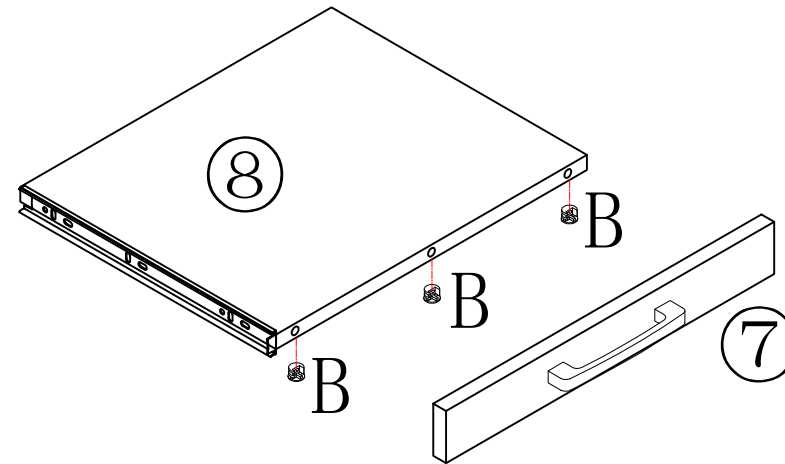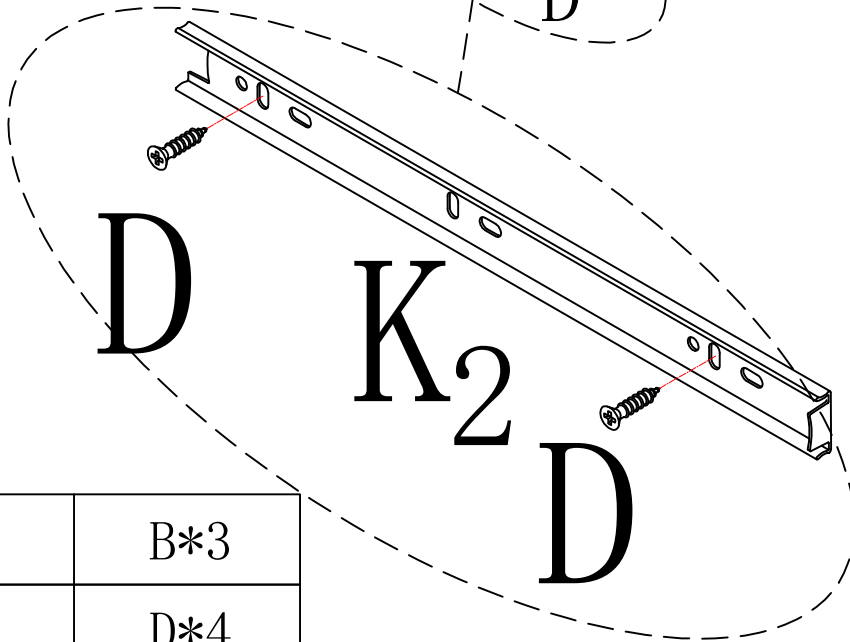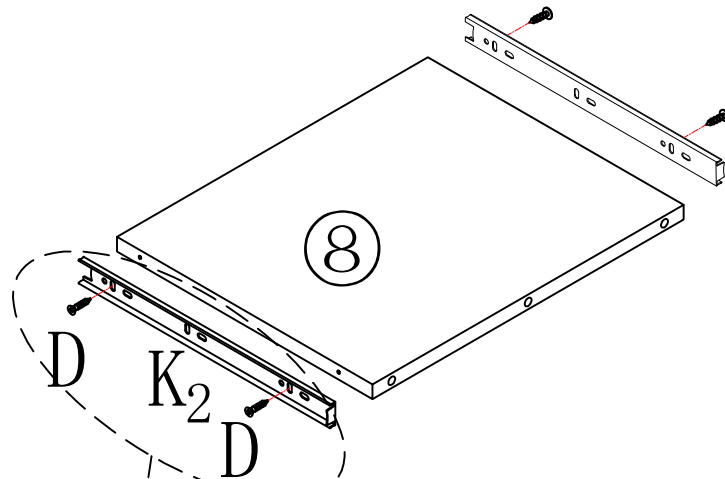


put B on board ⑧

	B*3
	D*4
	K ₂ *2


9

put B on board 10 11

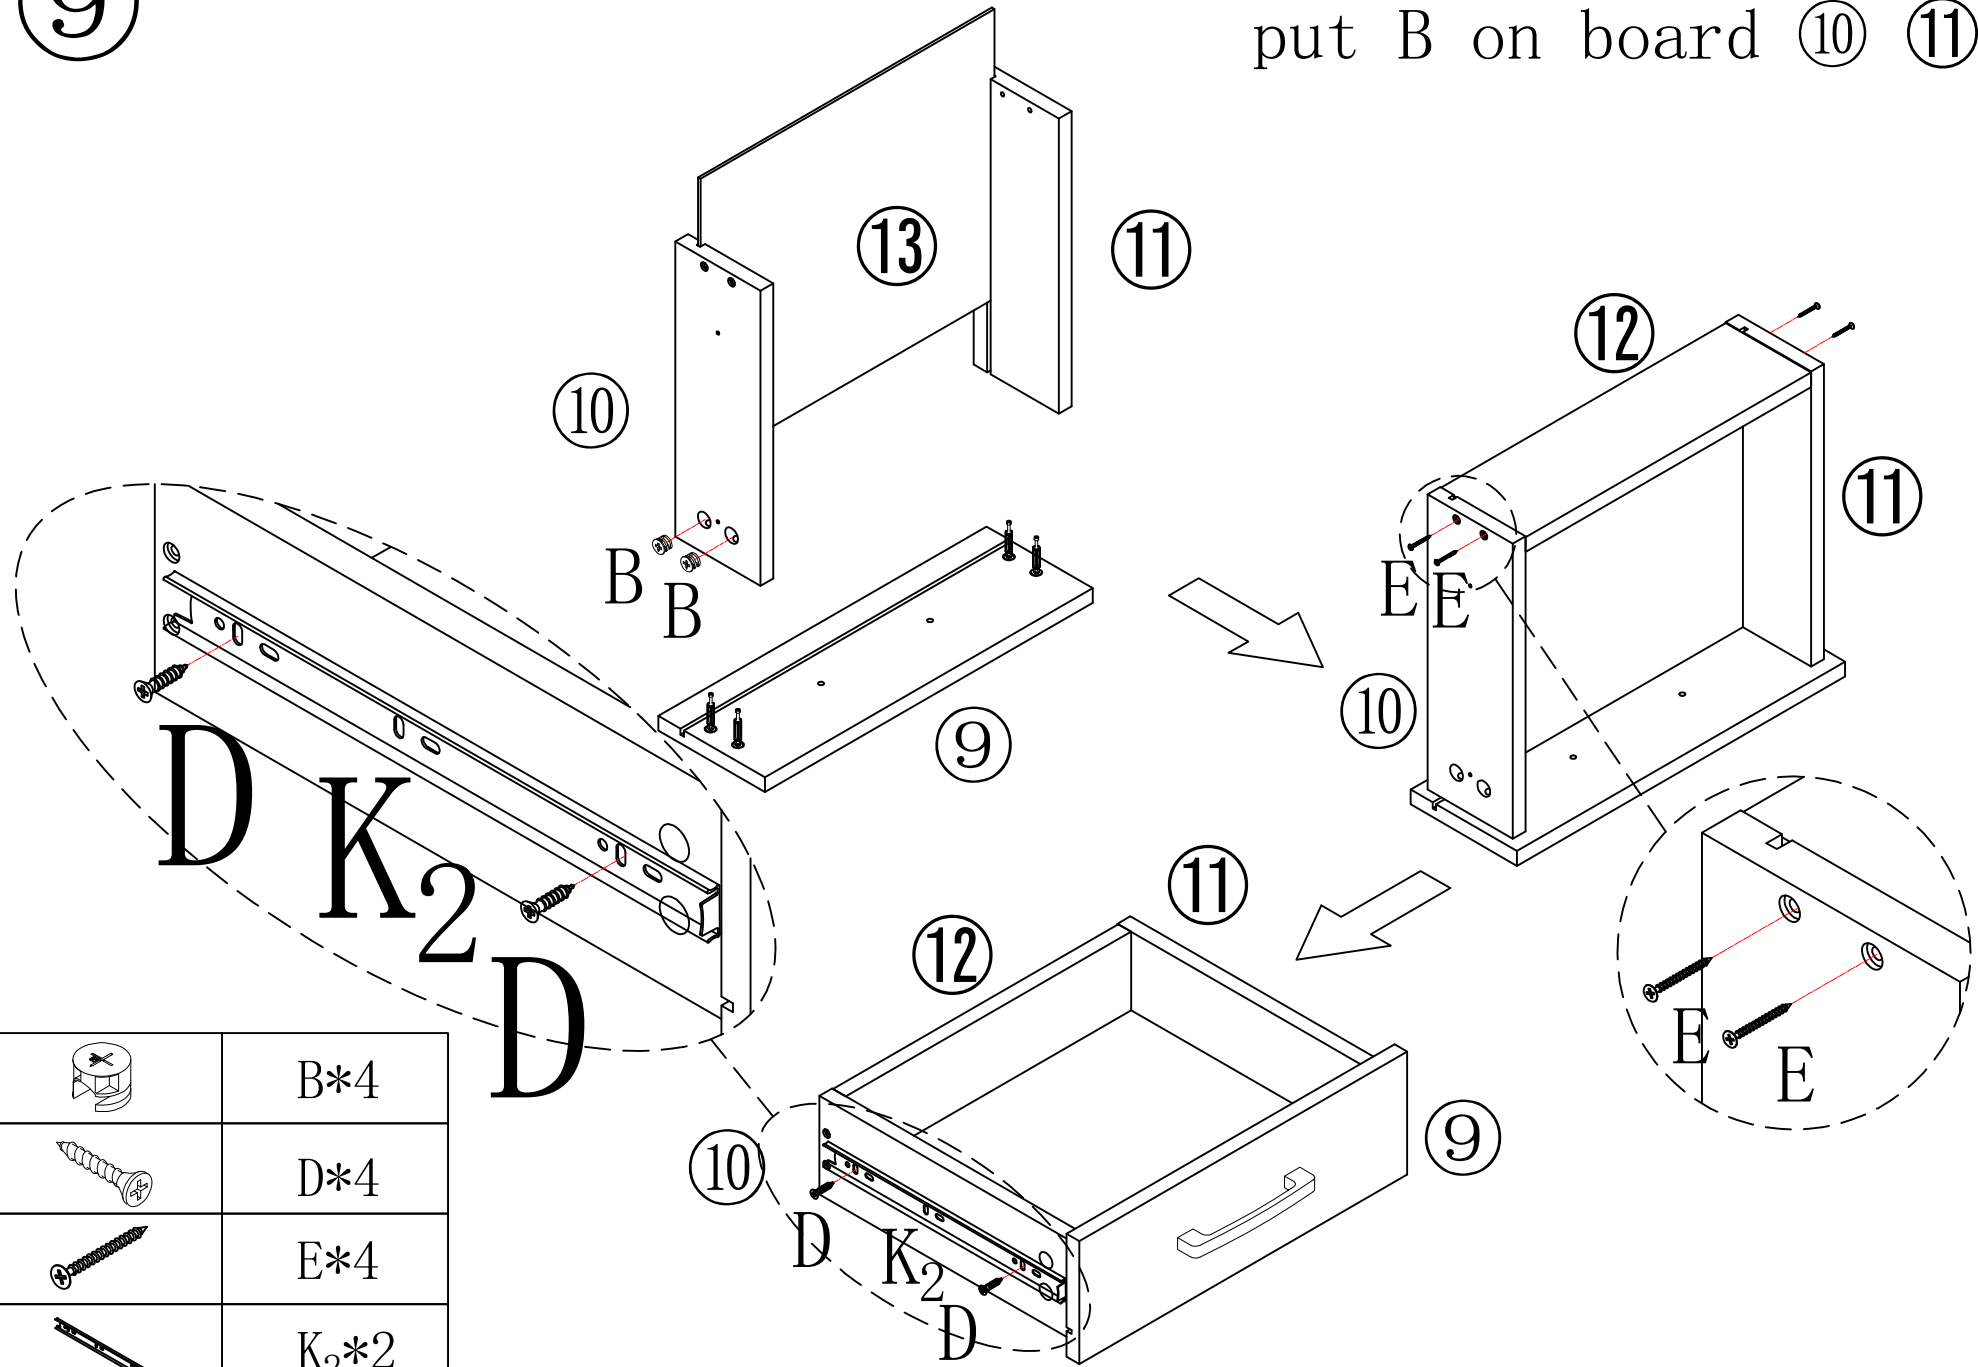


	B*4
	D*4
	E*4
	K ₂ *2


10

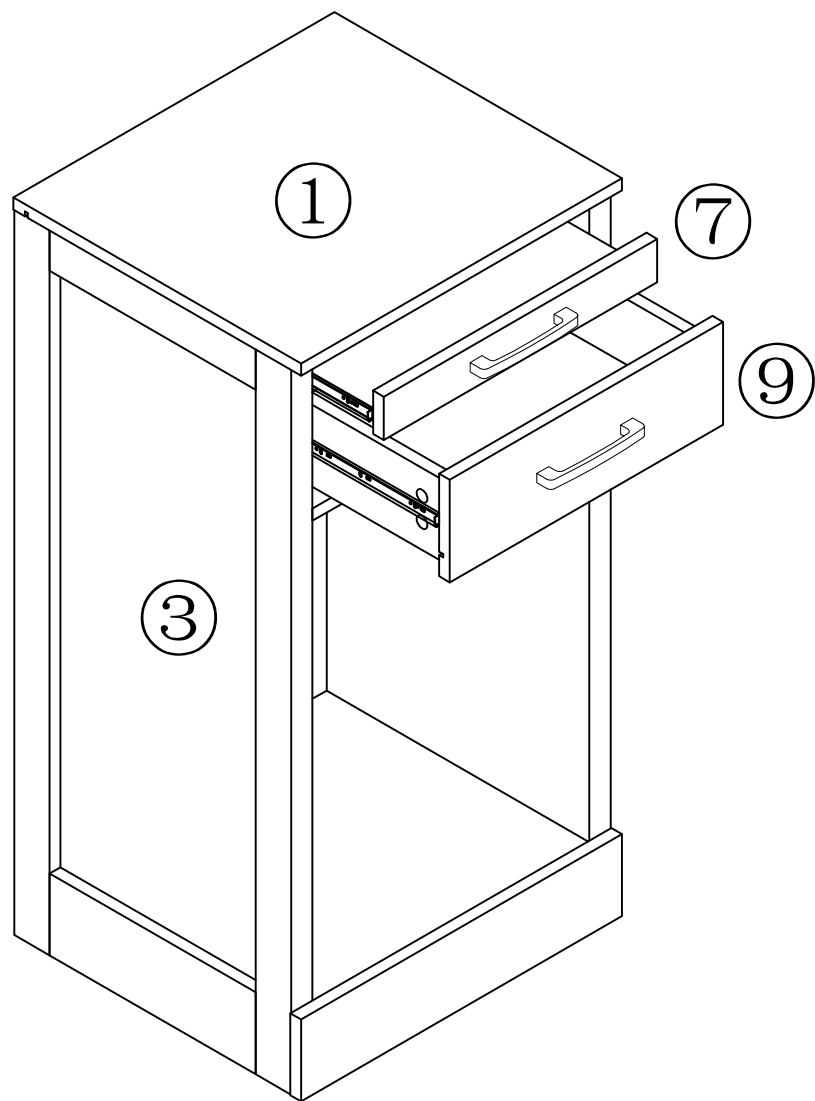


11

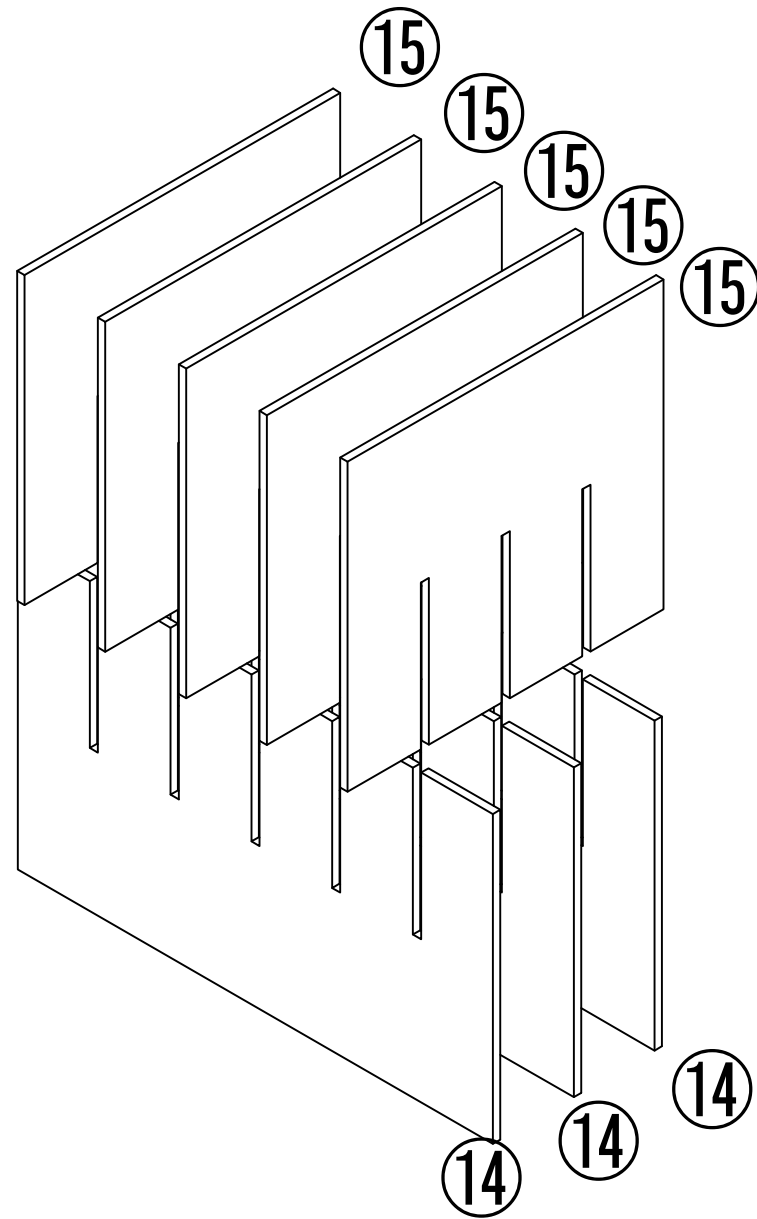

12




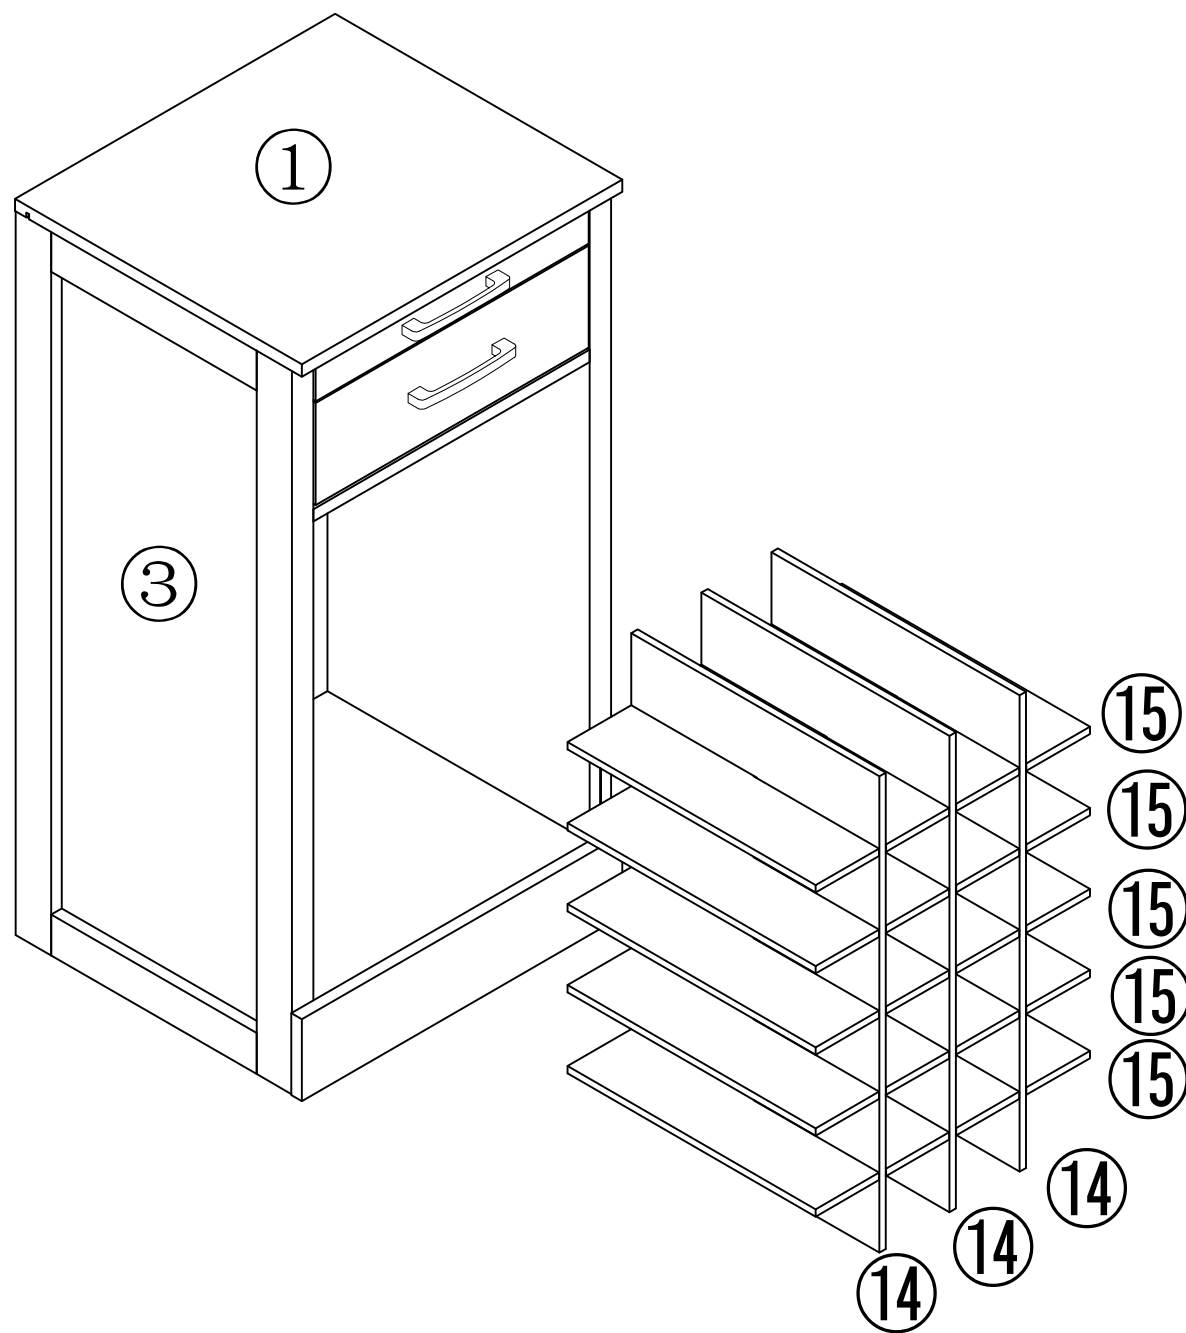


13

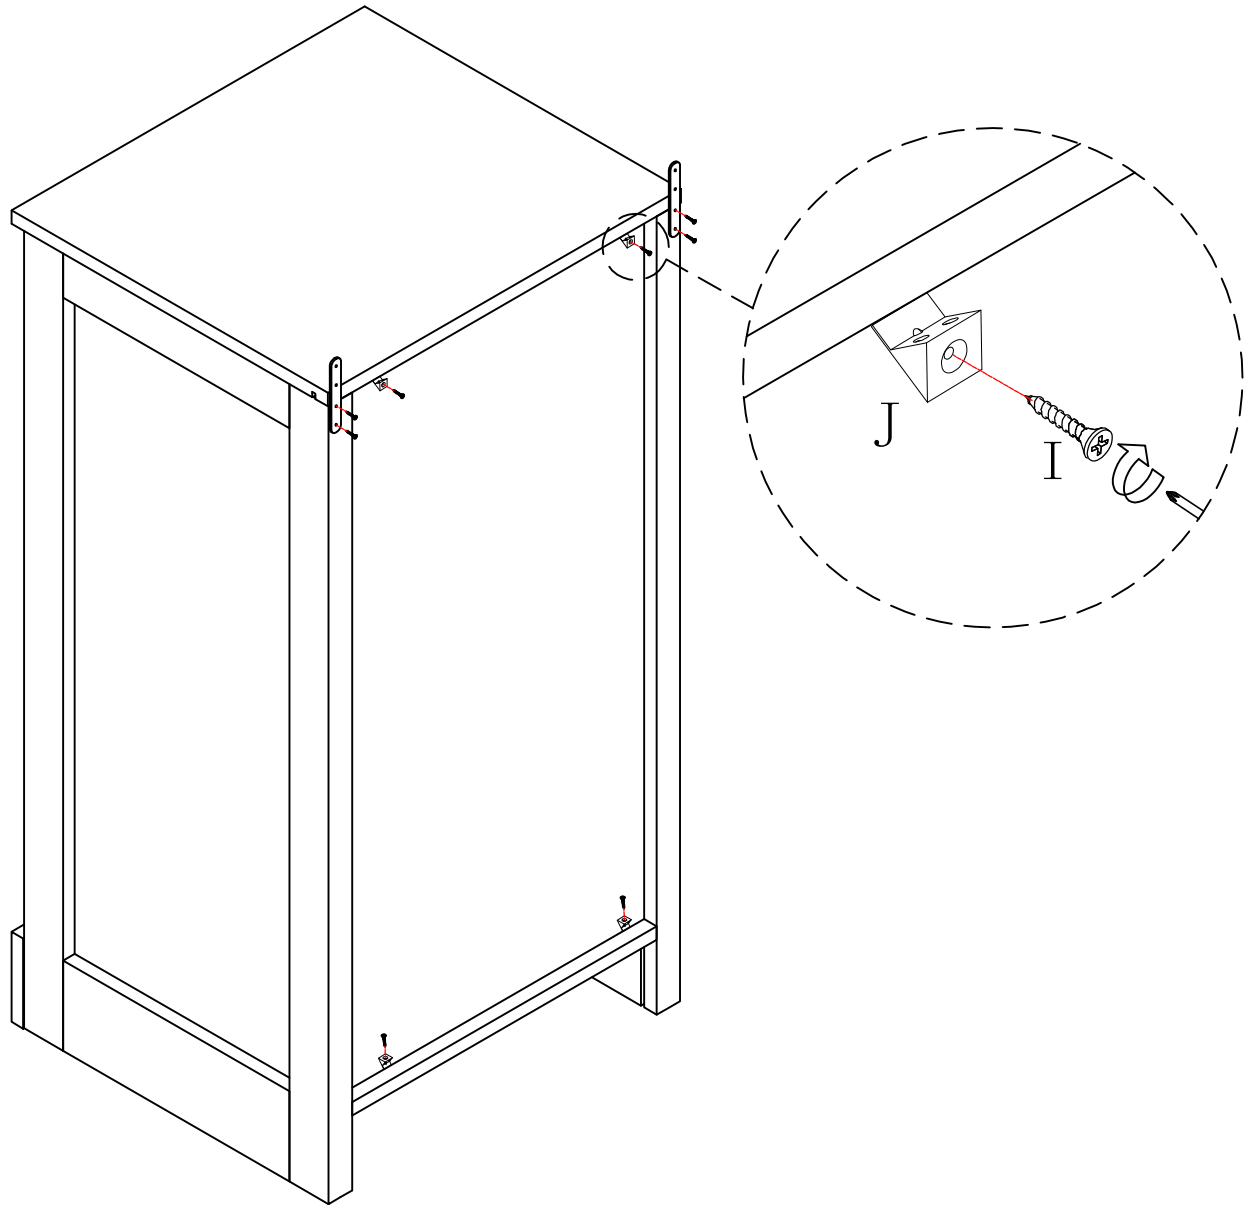



	D*4
	H*2
	I*4
	J*4

14

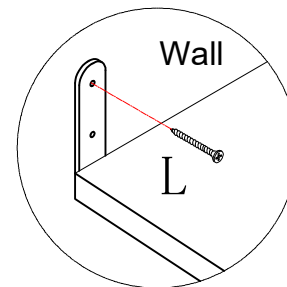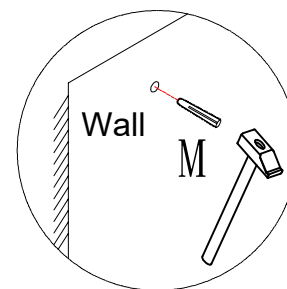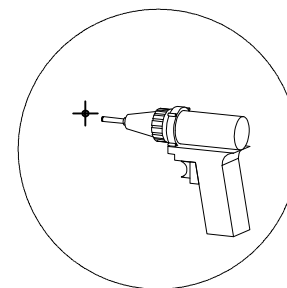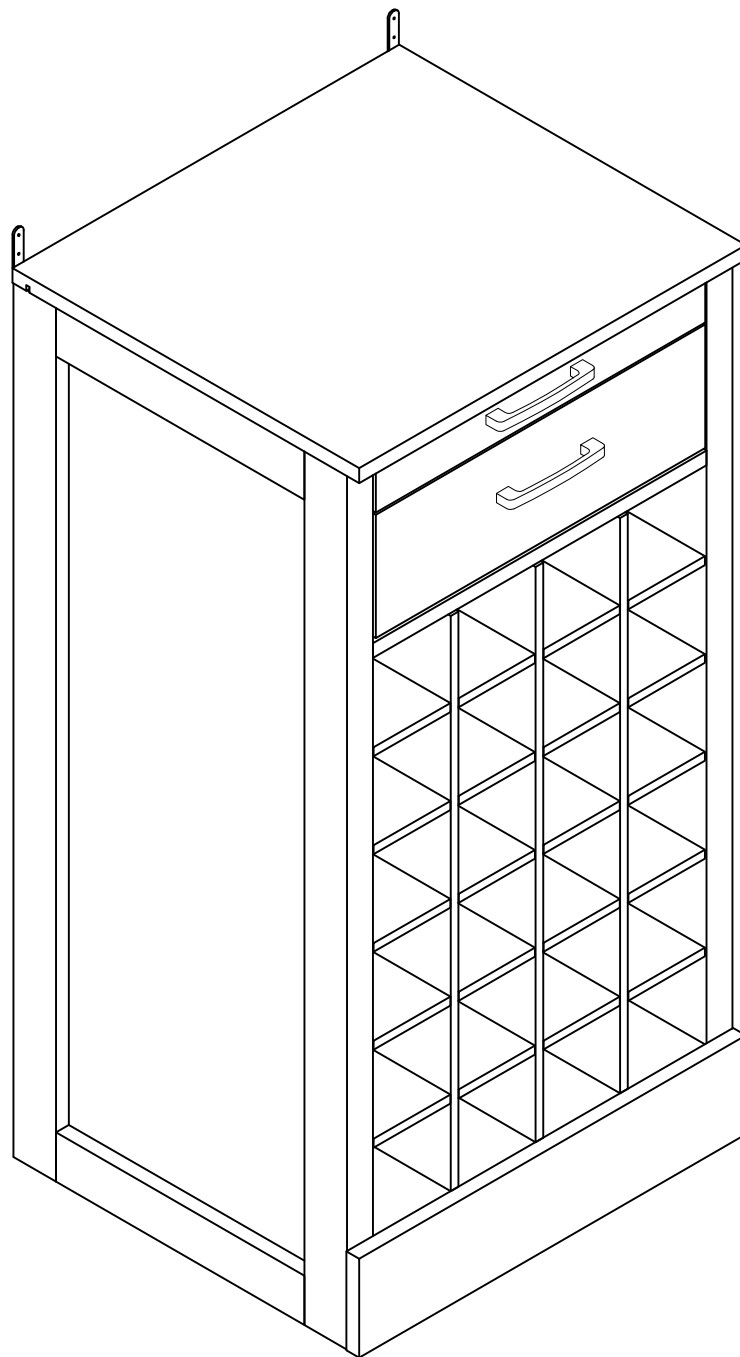


Please install tip-proof fitting.

	L*2
	M*2

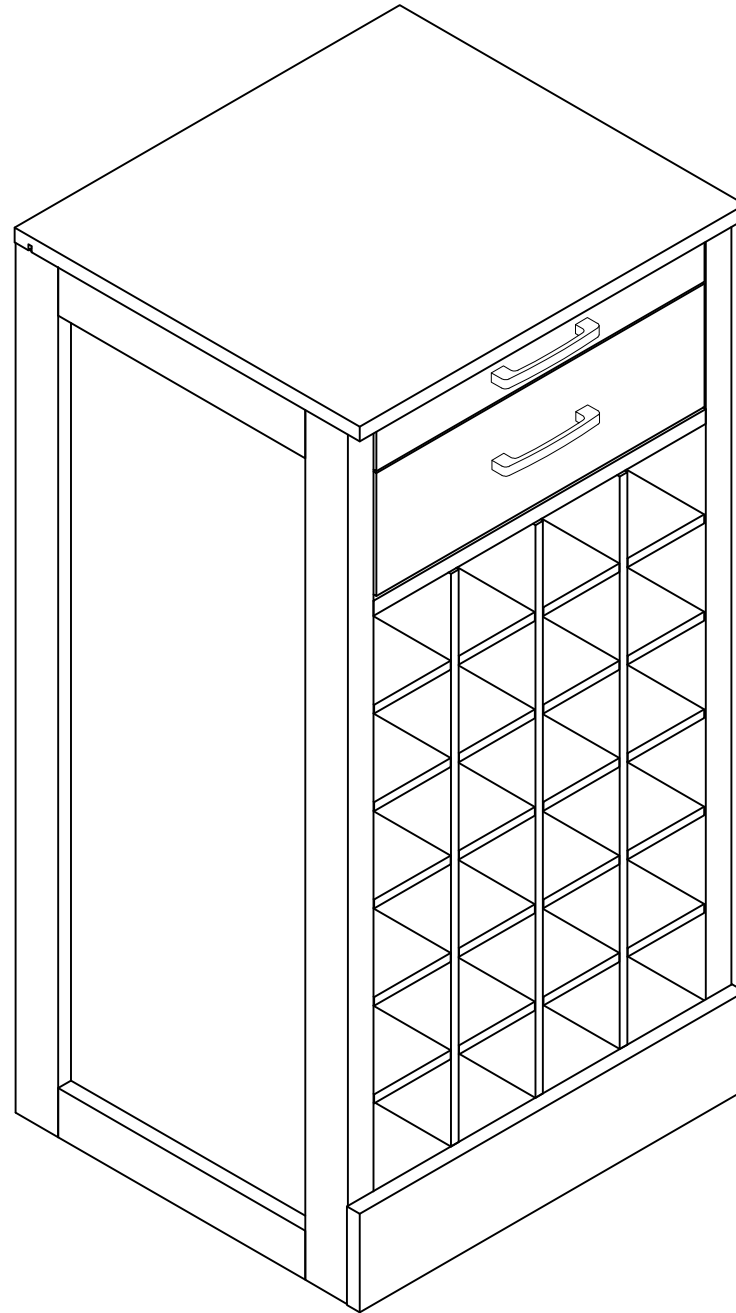

END

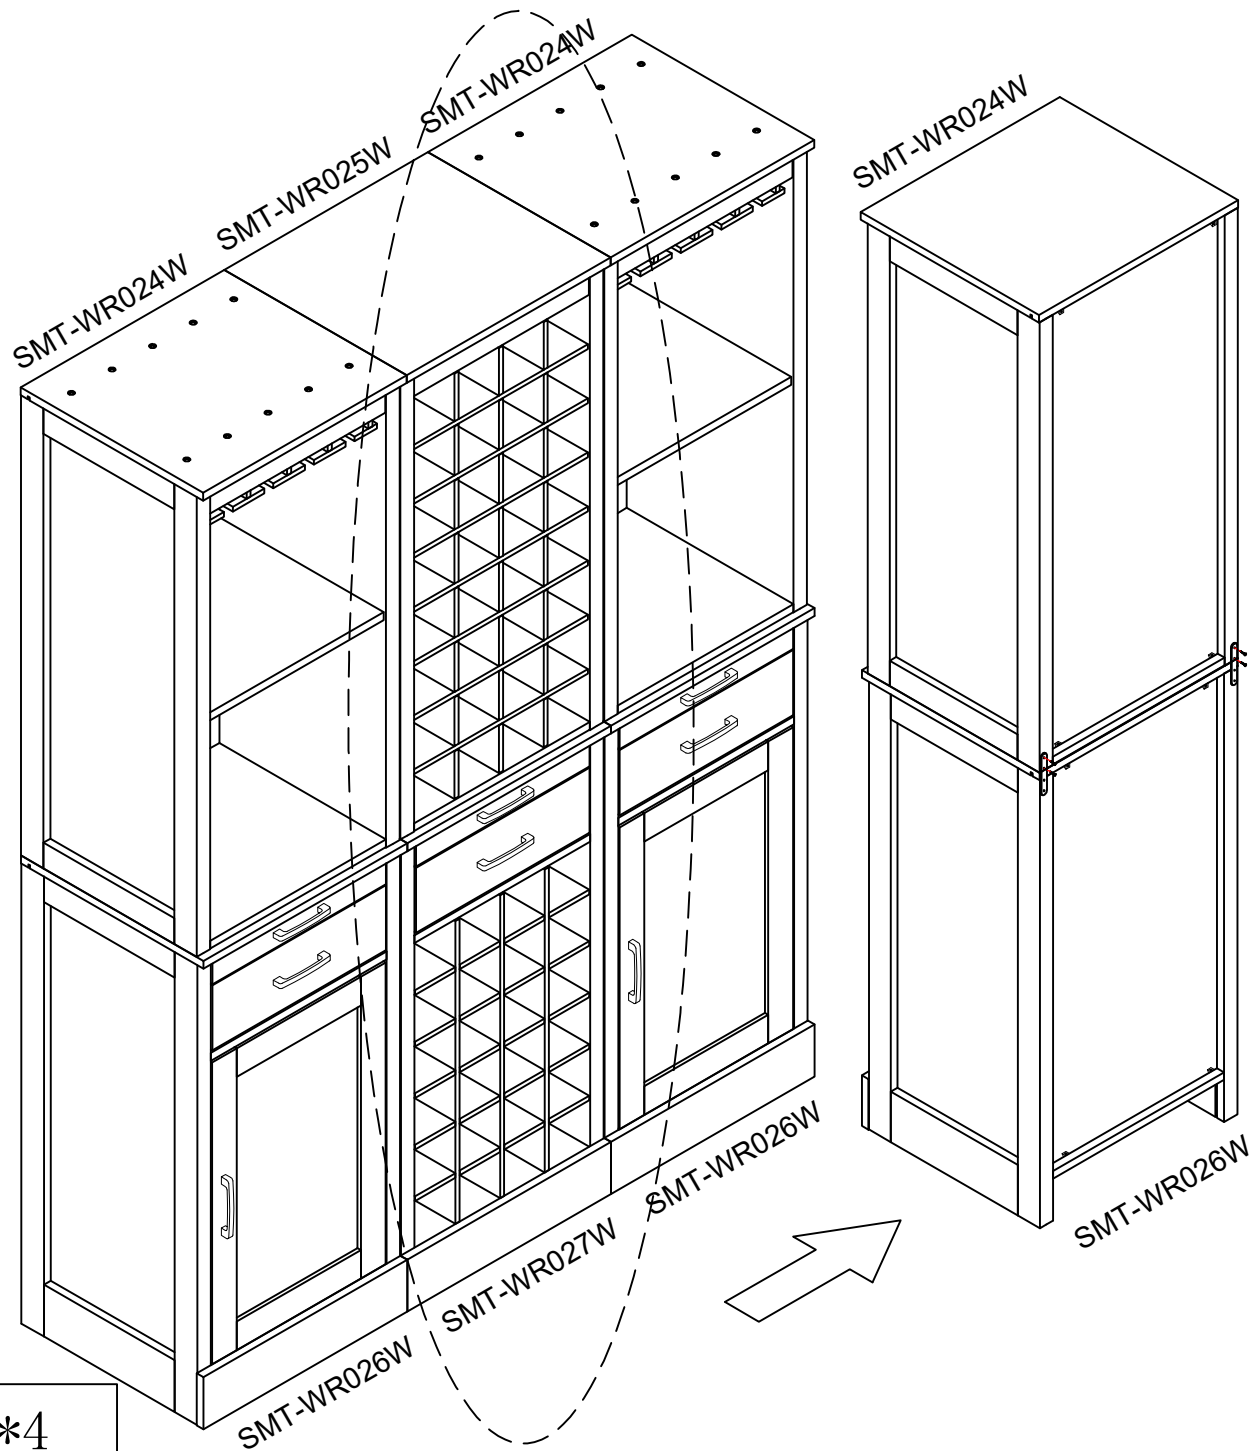

D*4