


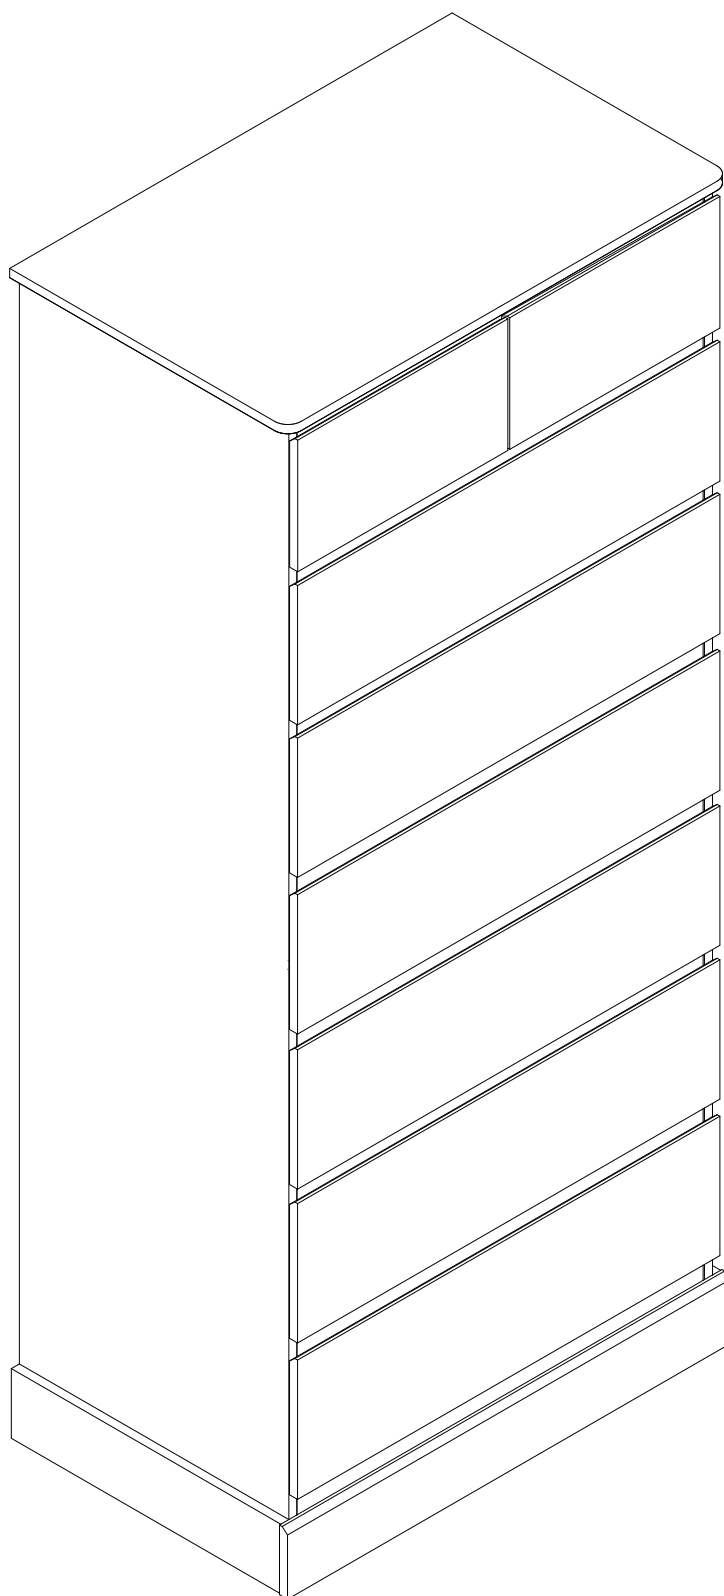


# Assembly instructions

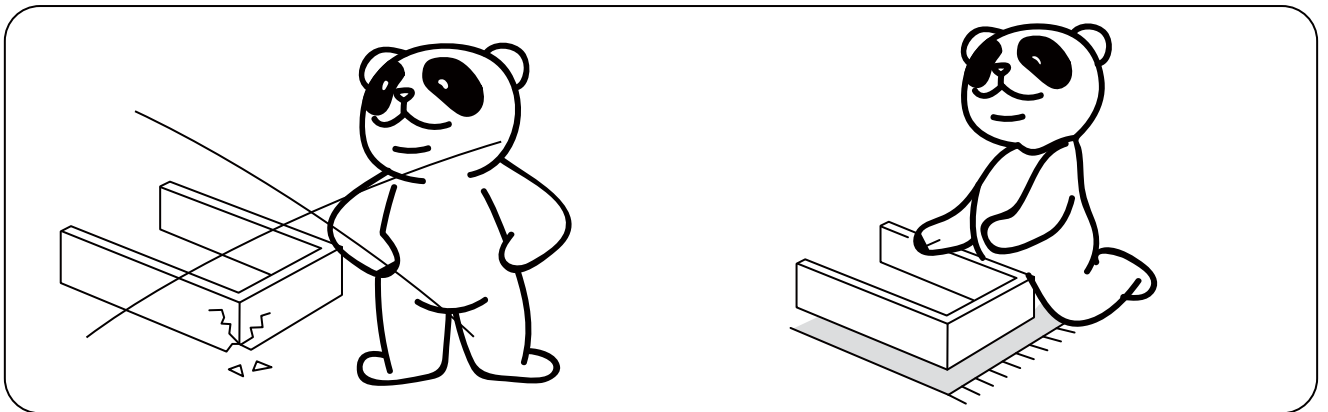


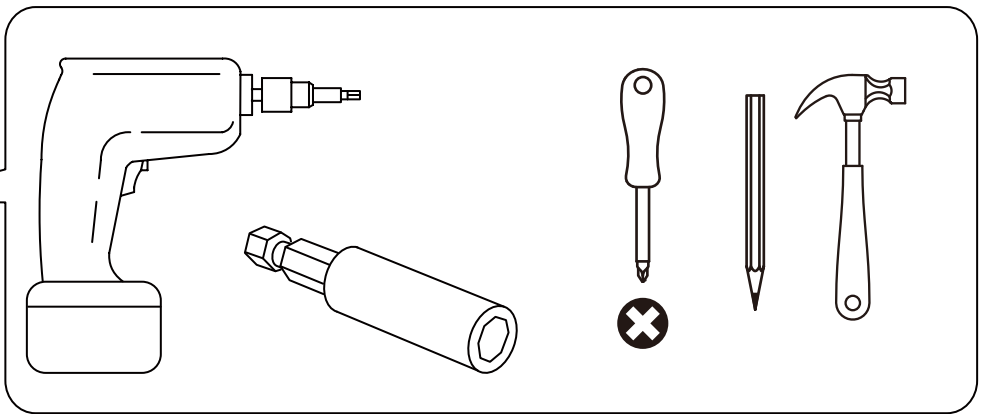

Violent installation is prohibited

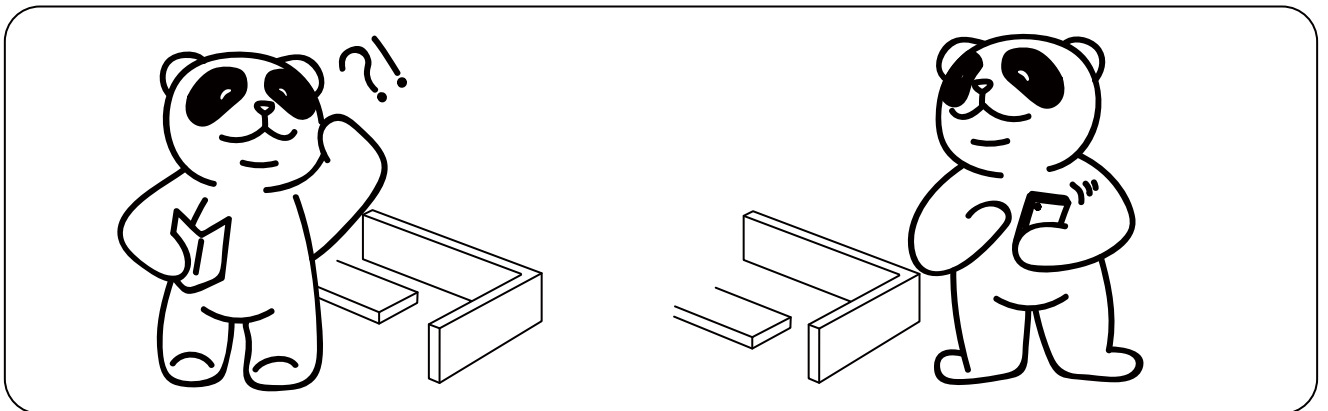


Please call if you need help

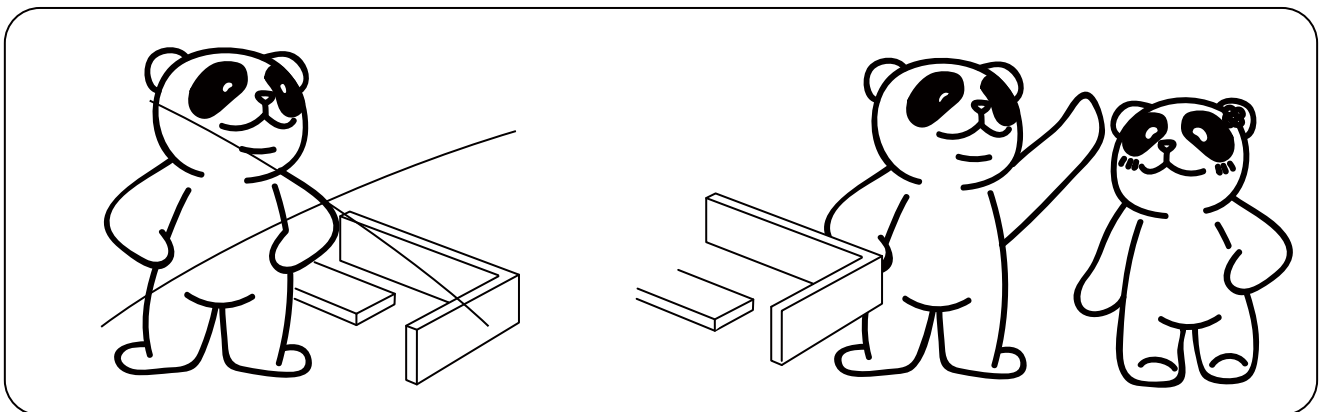


Multi-person cooperation is recommended

# Install parts


## PARTS LIST

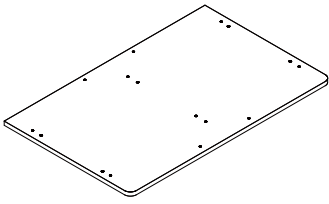


1 x1

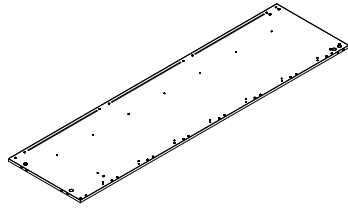


2 x1

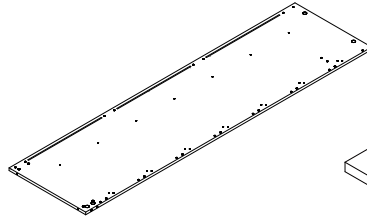


3 x1

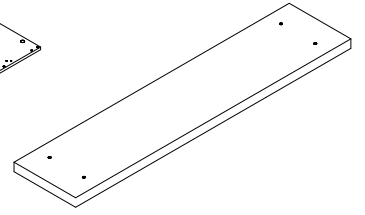


4 x2

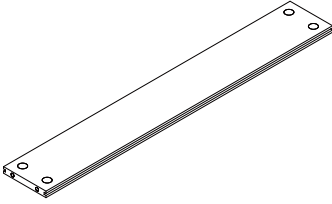


5 x2

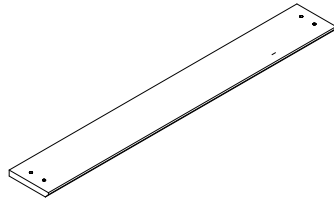


6 x1

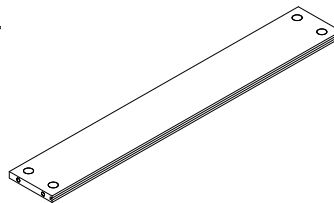


7 x1

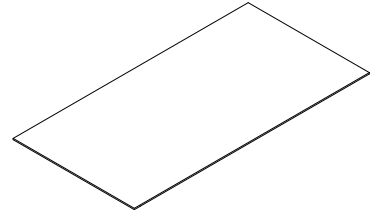


8 x3

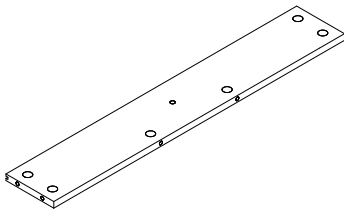


9 x1

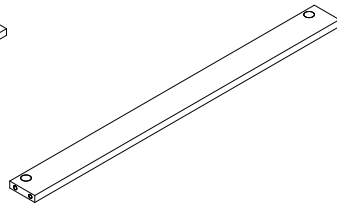


10 x7

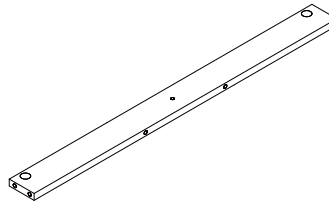


11 x1

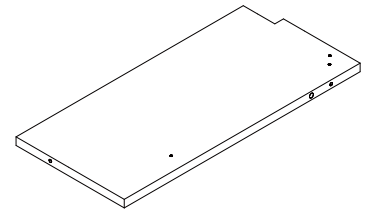


12 x1

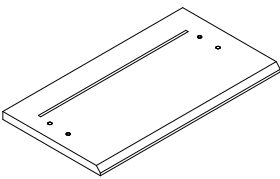


13 x1

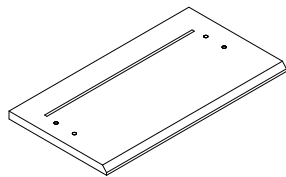


14 x1

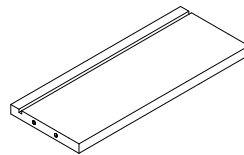


15 x2

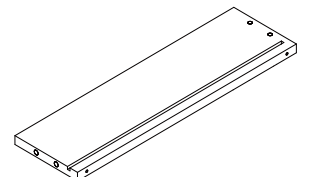


16 x2

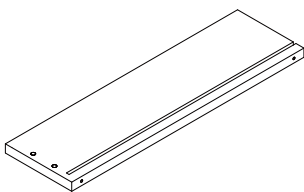


17 x2

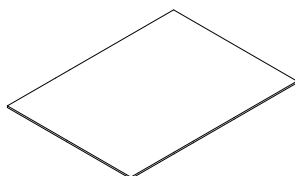

18 x2

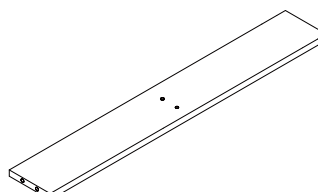


19 x1

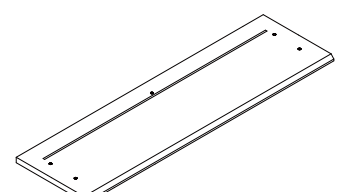


20 x6

# Install parts


## PARTS LIST

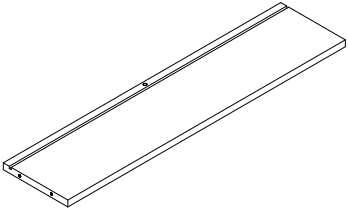


21 x6

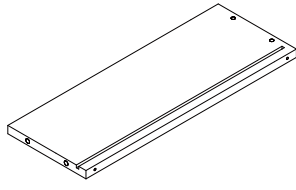


22 x6

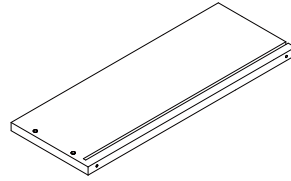

23 x6

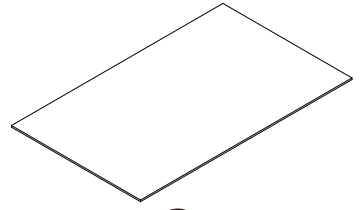

24 x6

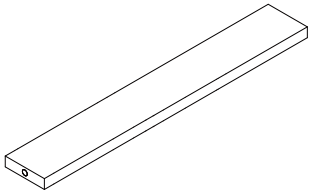


25 x6

# HARDWARE LIST



Ø6x28mm

A x 93

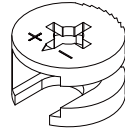

Ø15x9 mm

B x 93




Ø6x30mm

C x 25




Ø3.5x12mm

D x 80



Ø5x40mm


E x 34



F x 12




G x 8



Ø4x18mm

H x 8

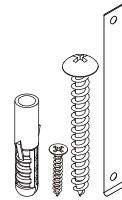


J x 2




Ø3.5x 14 mm


L x 12




**CL**  
x8  
350MM



**CR**  
x8  
350MM



**DL**  
x8  
350MM



**DR**  
x8  
350MM


**Note:**

**1. Should be assembled on flat ground to keep balance.**




**It needs at least two people to install.**


**Before starting the assembly, you must read the whole manual and follow the instructions**

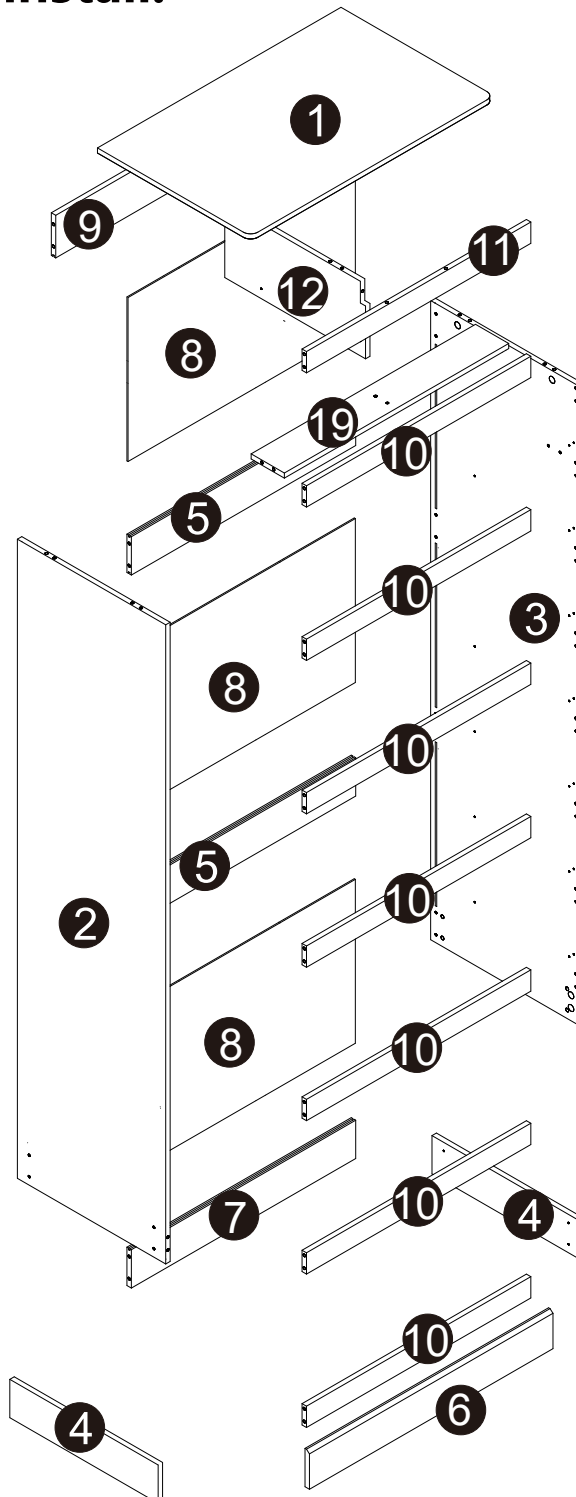


# Drawer installation

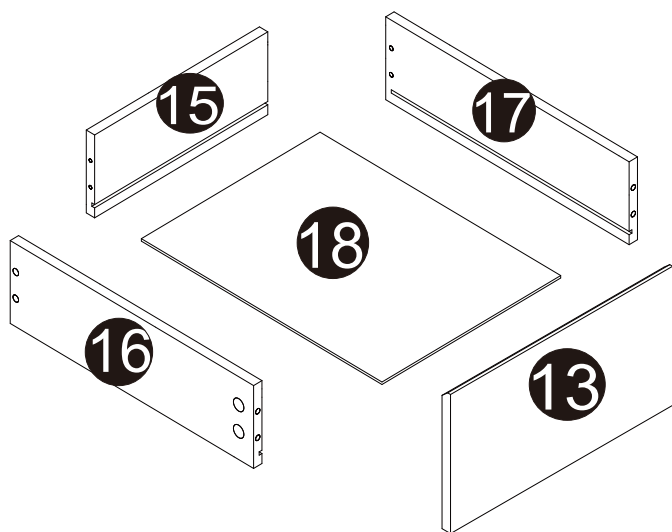

**X1**



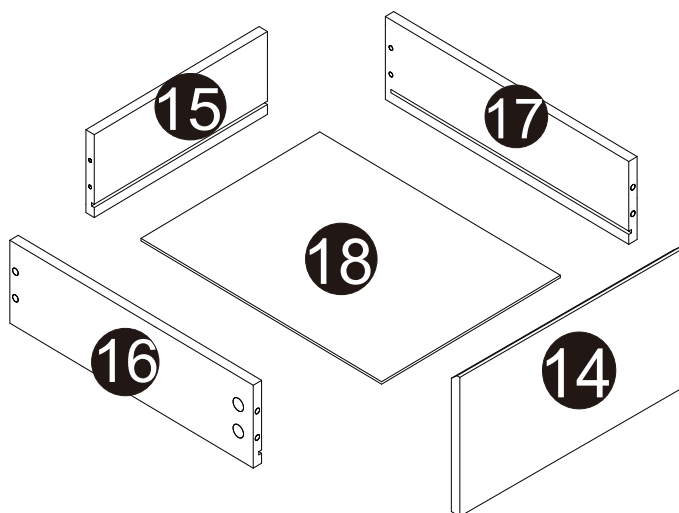


**X1**


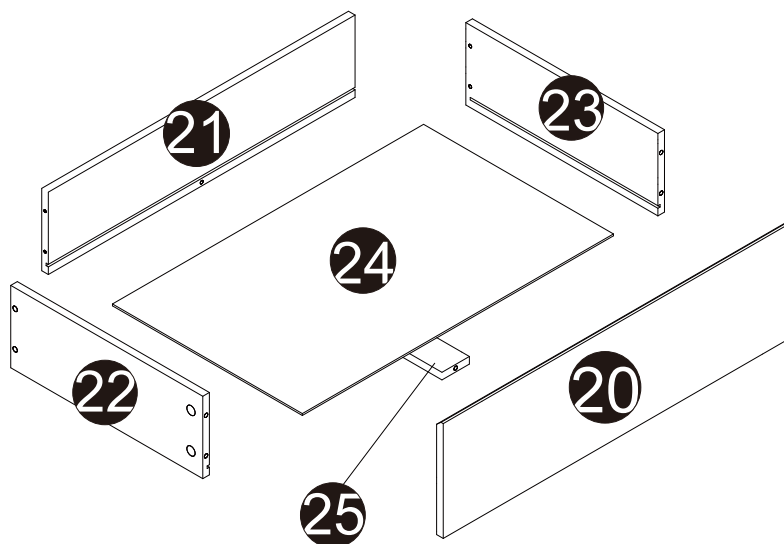


**X6**

1

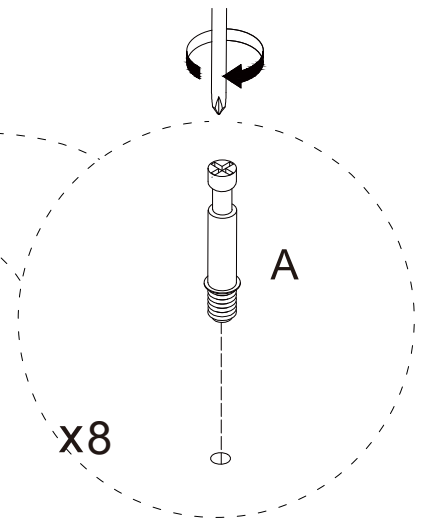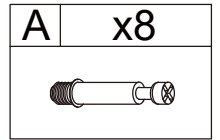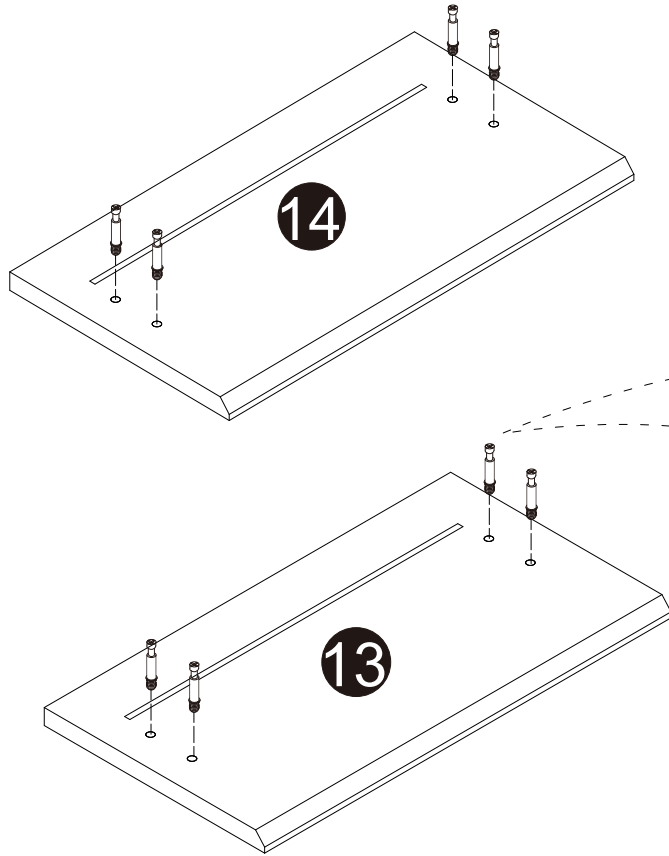


2

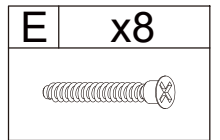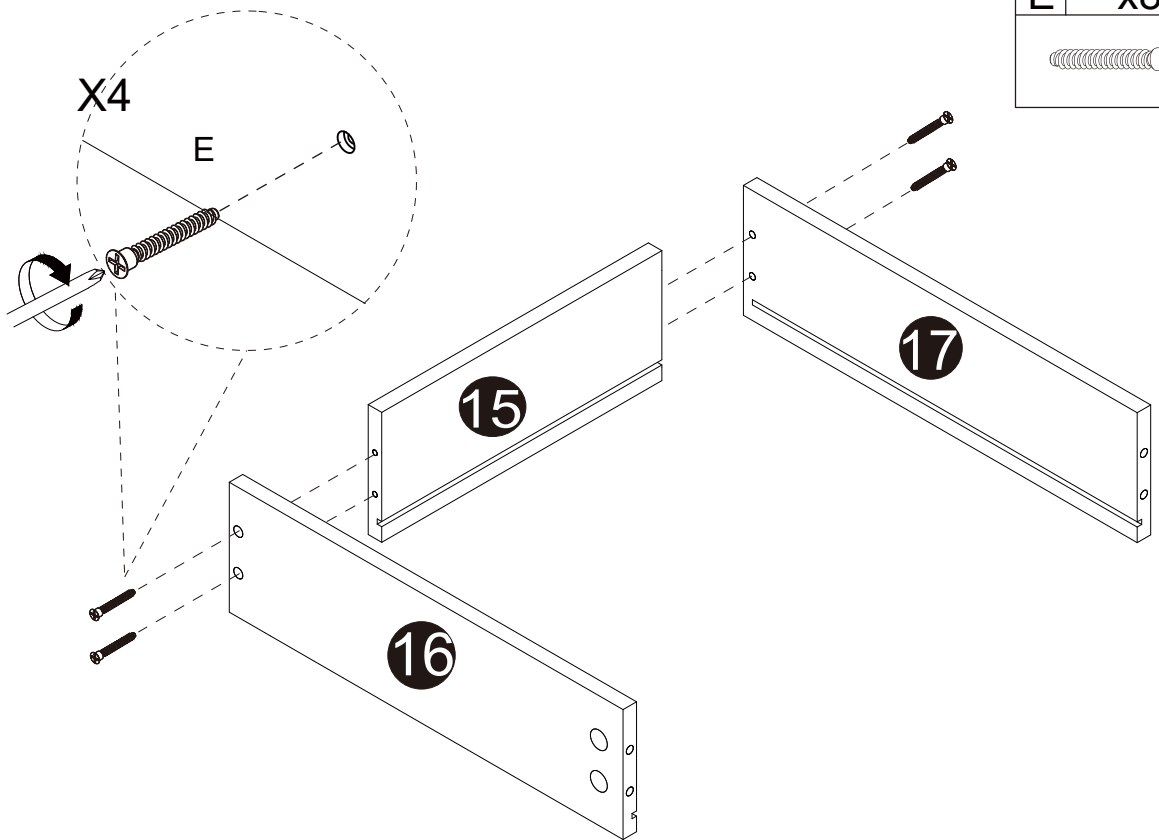


x2

3

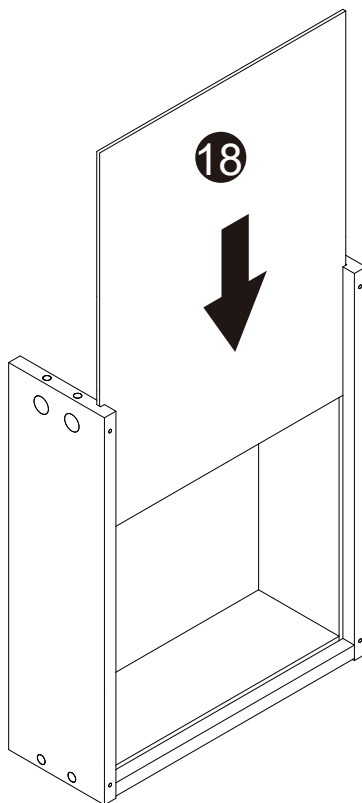


x2

4

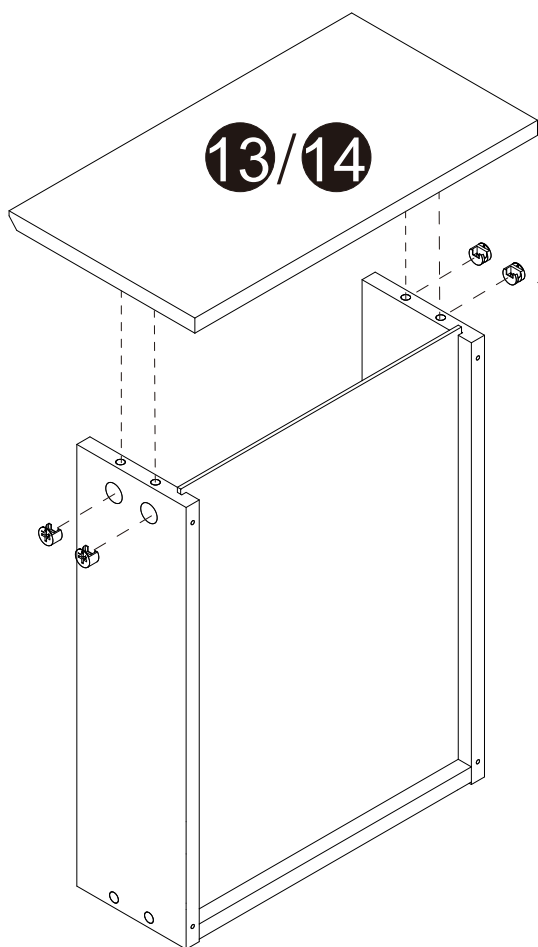

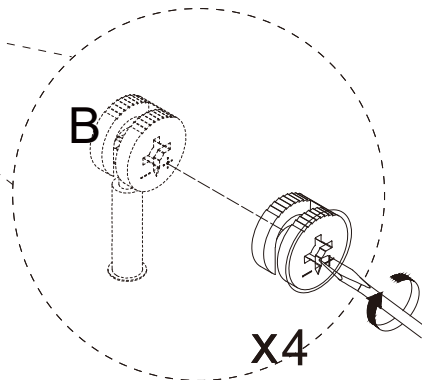


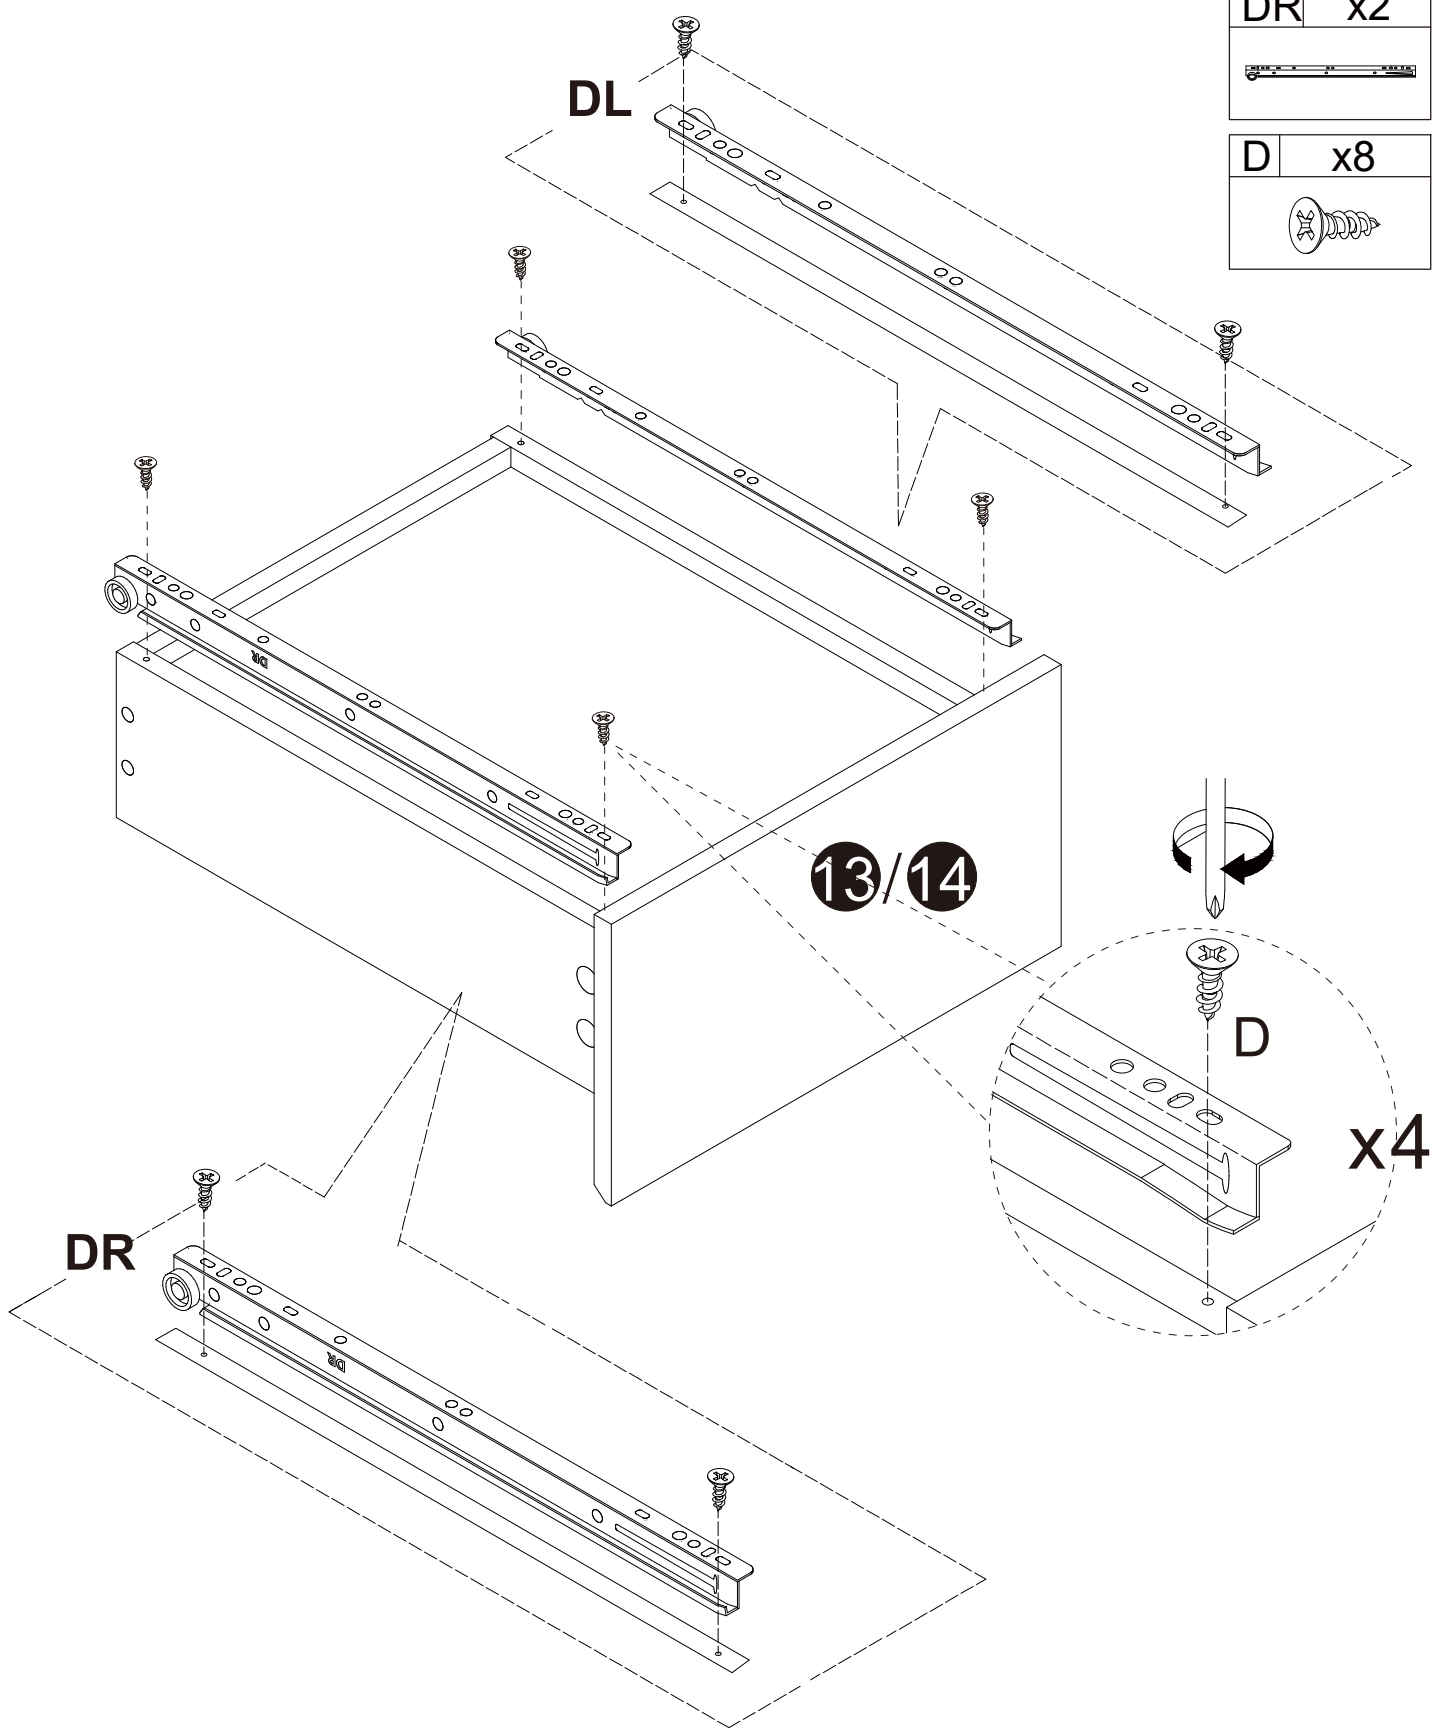
B	x8



x2


5

DL	x2
	
DR	x2
	
D	x8
	




x2


6

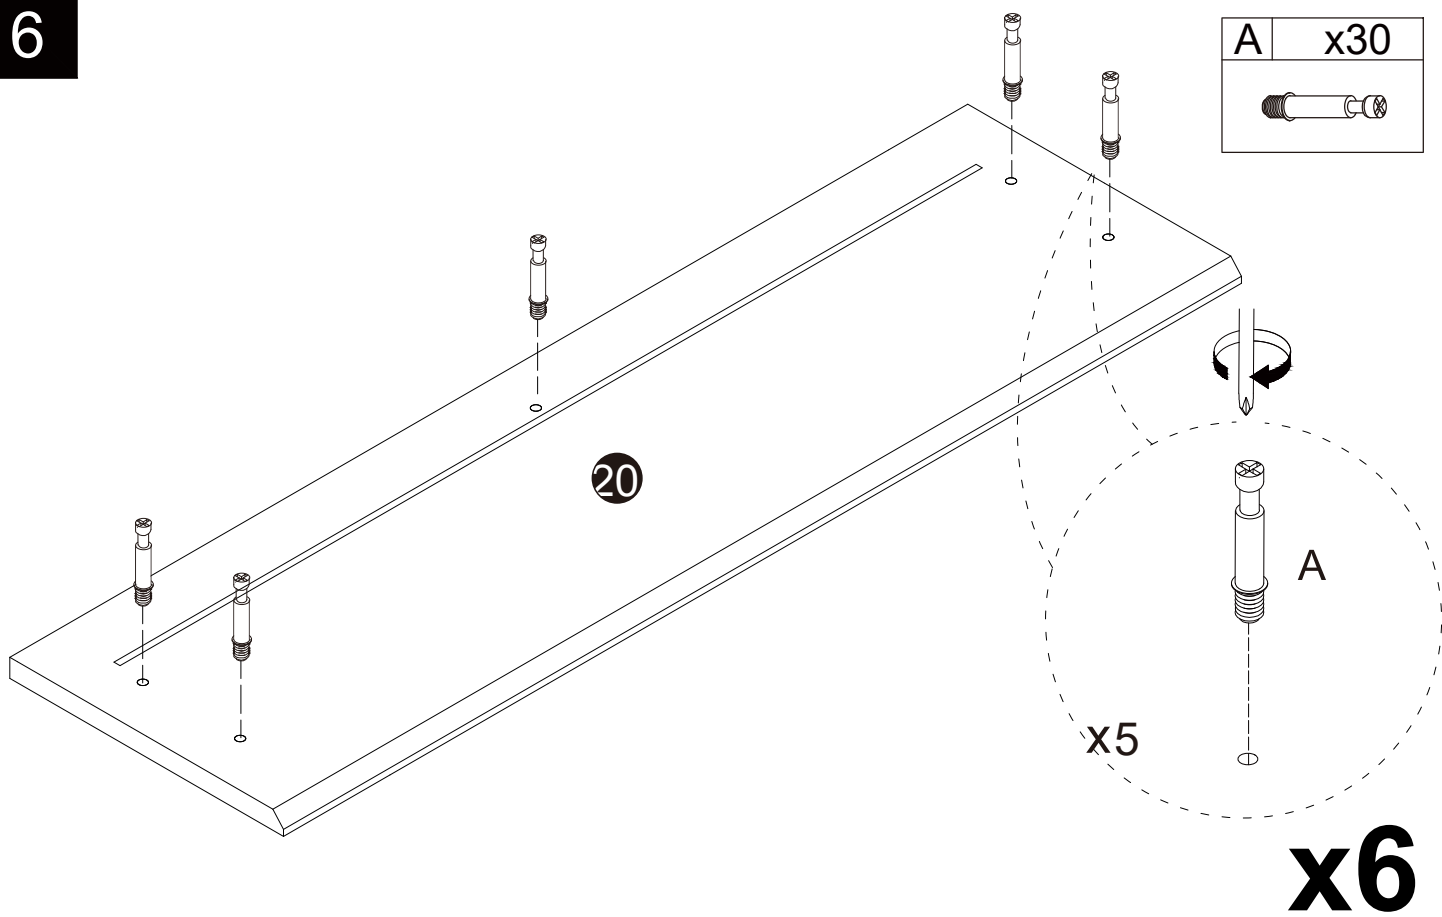

7

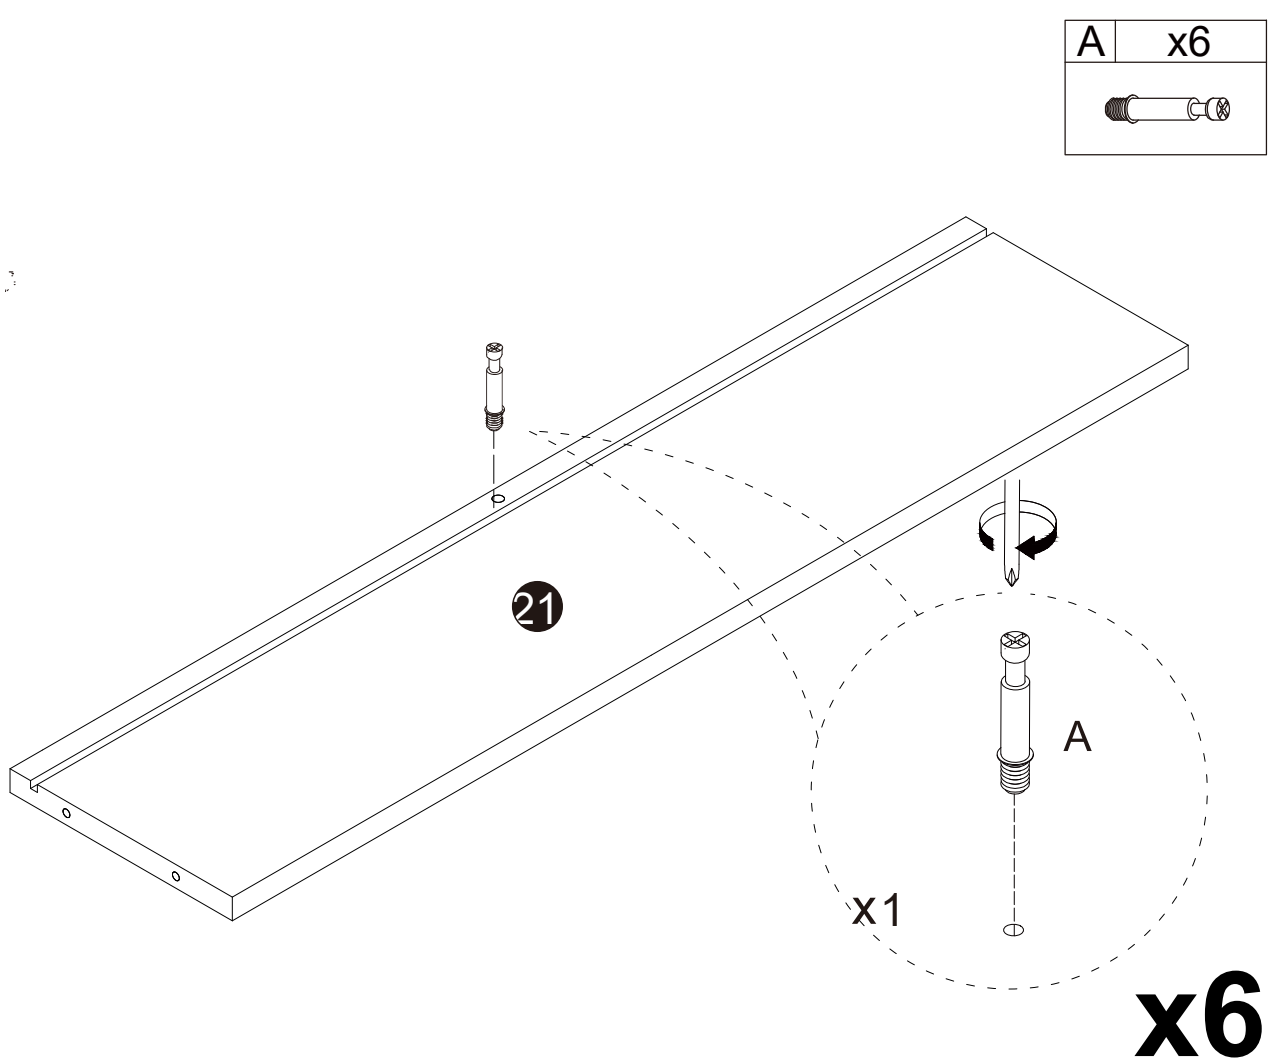


8

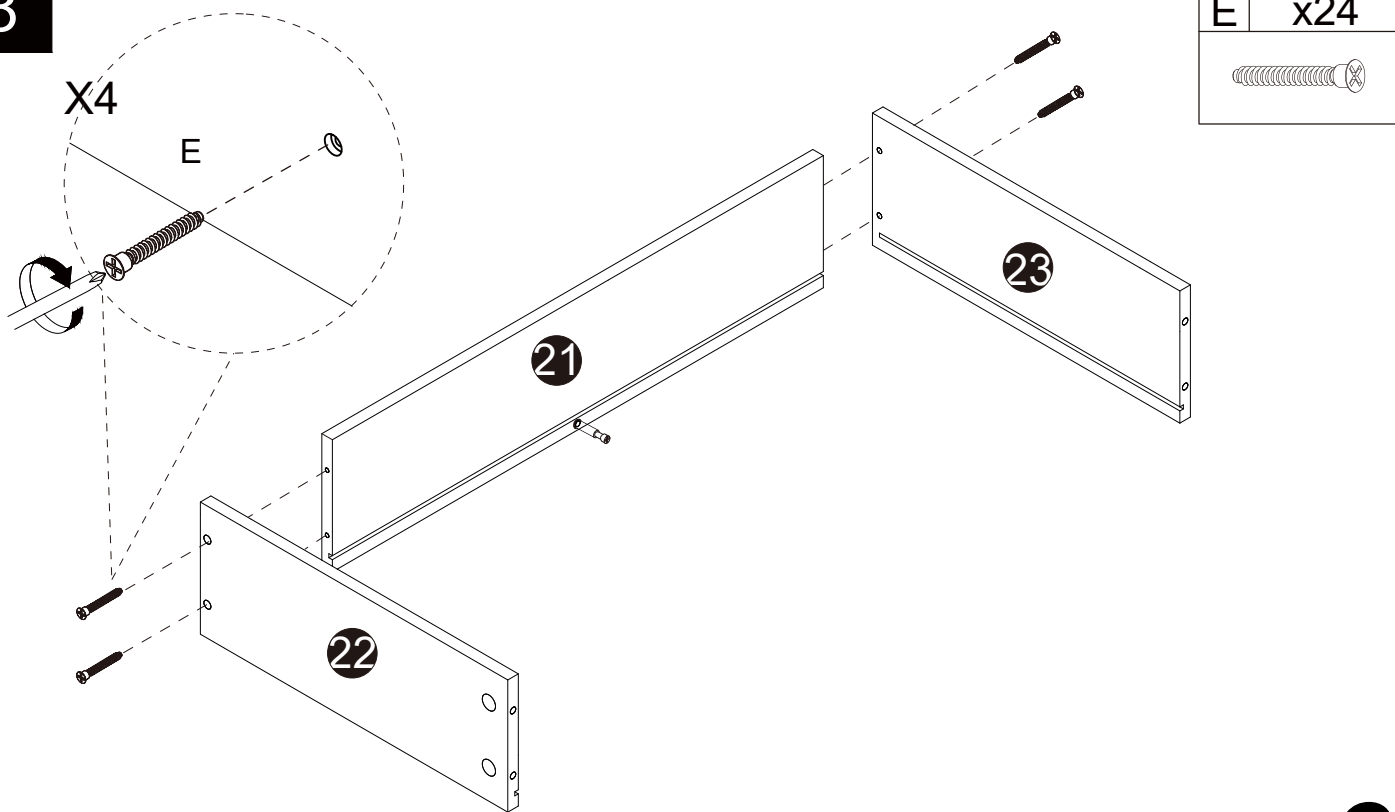


x6

9

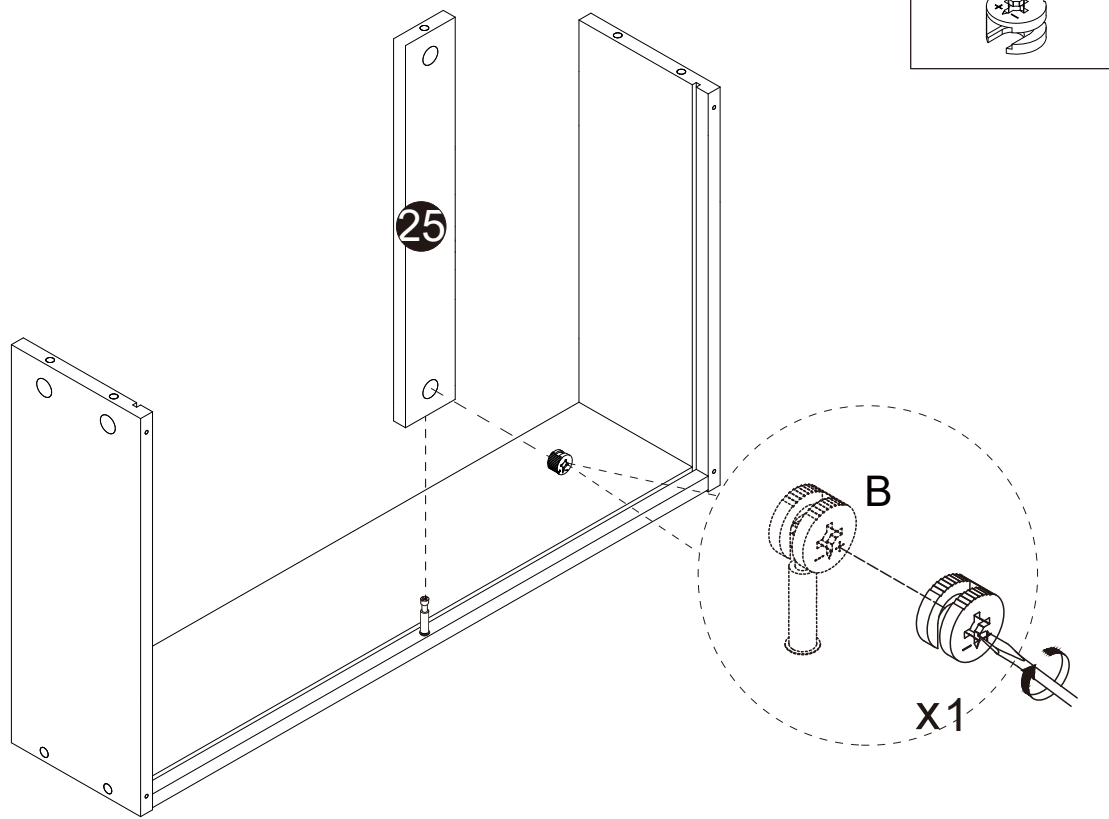


x6

10

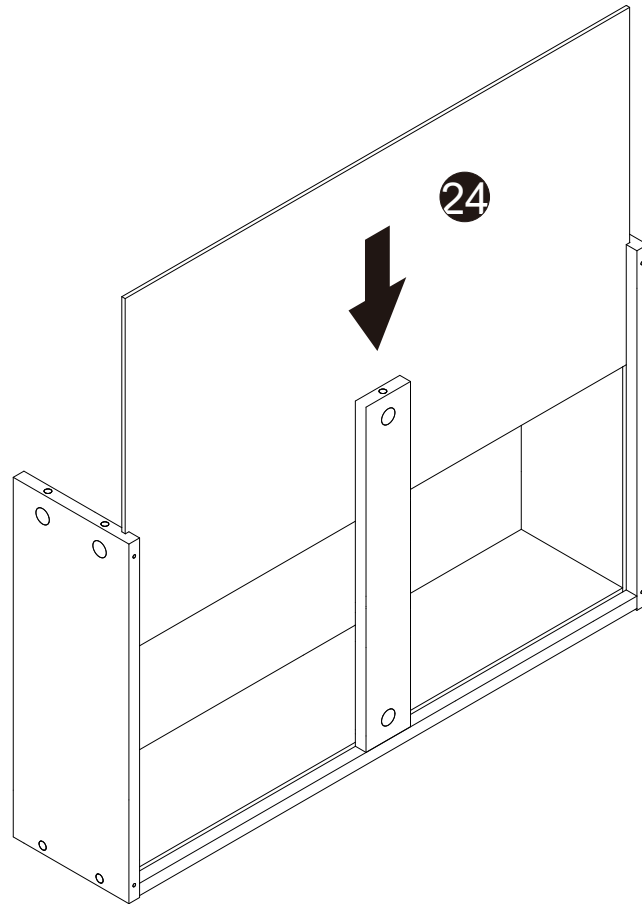





x6

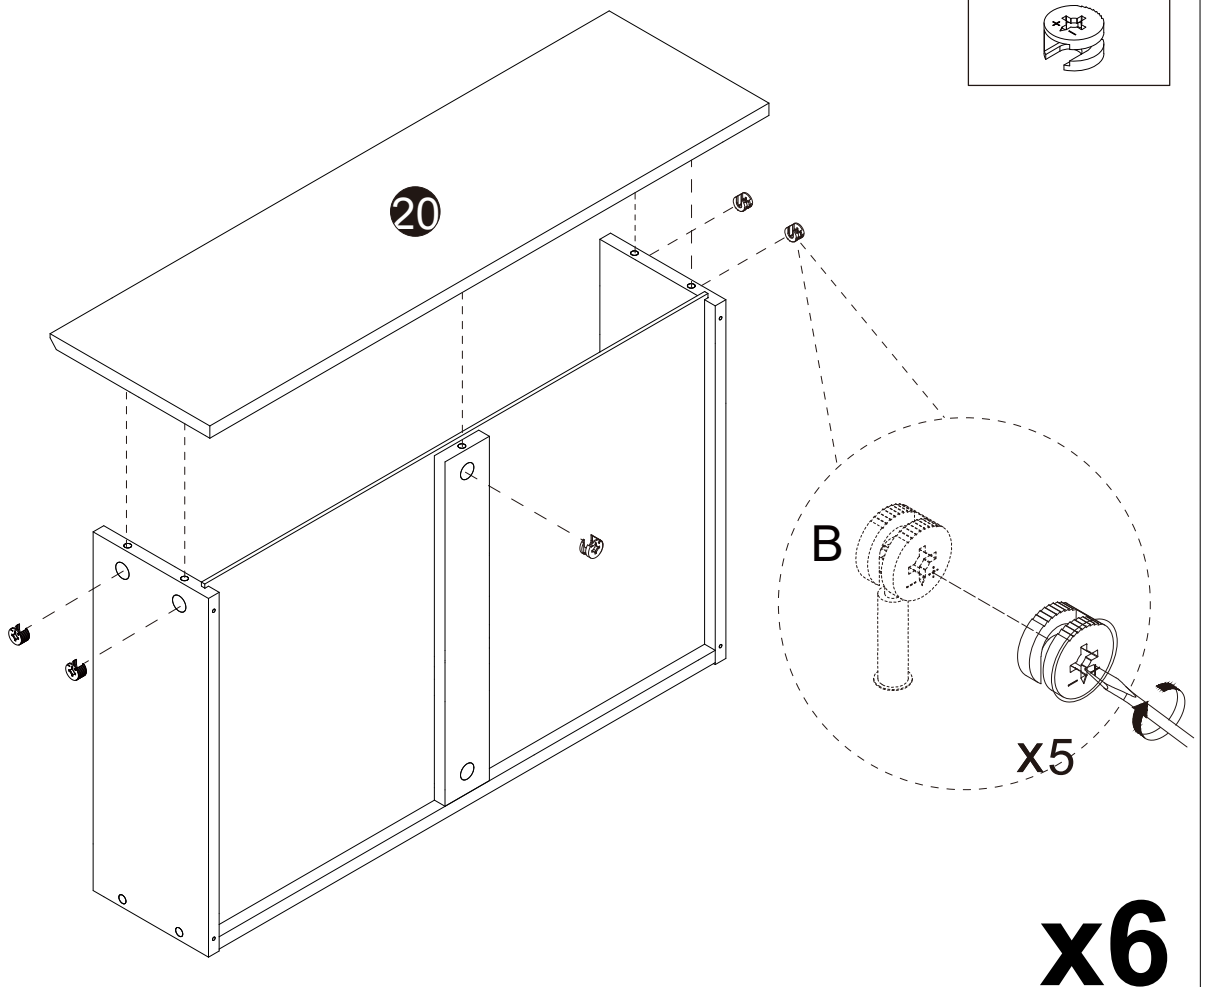11






x6


DL	x6
	
DR	x6
	
D	x24
	

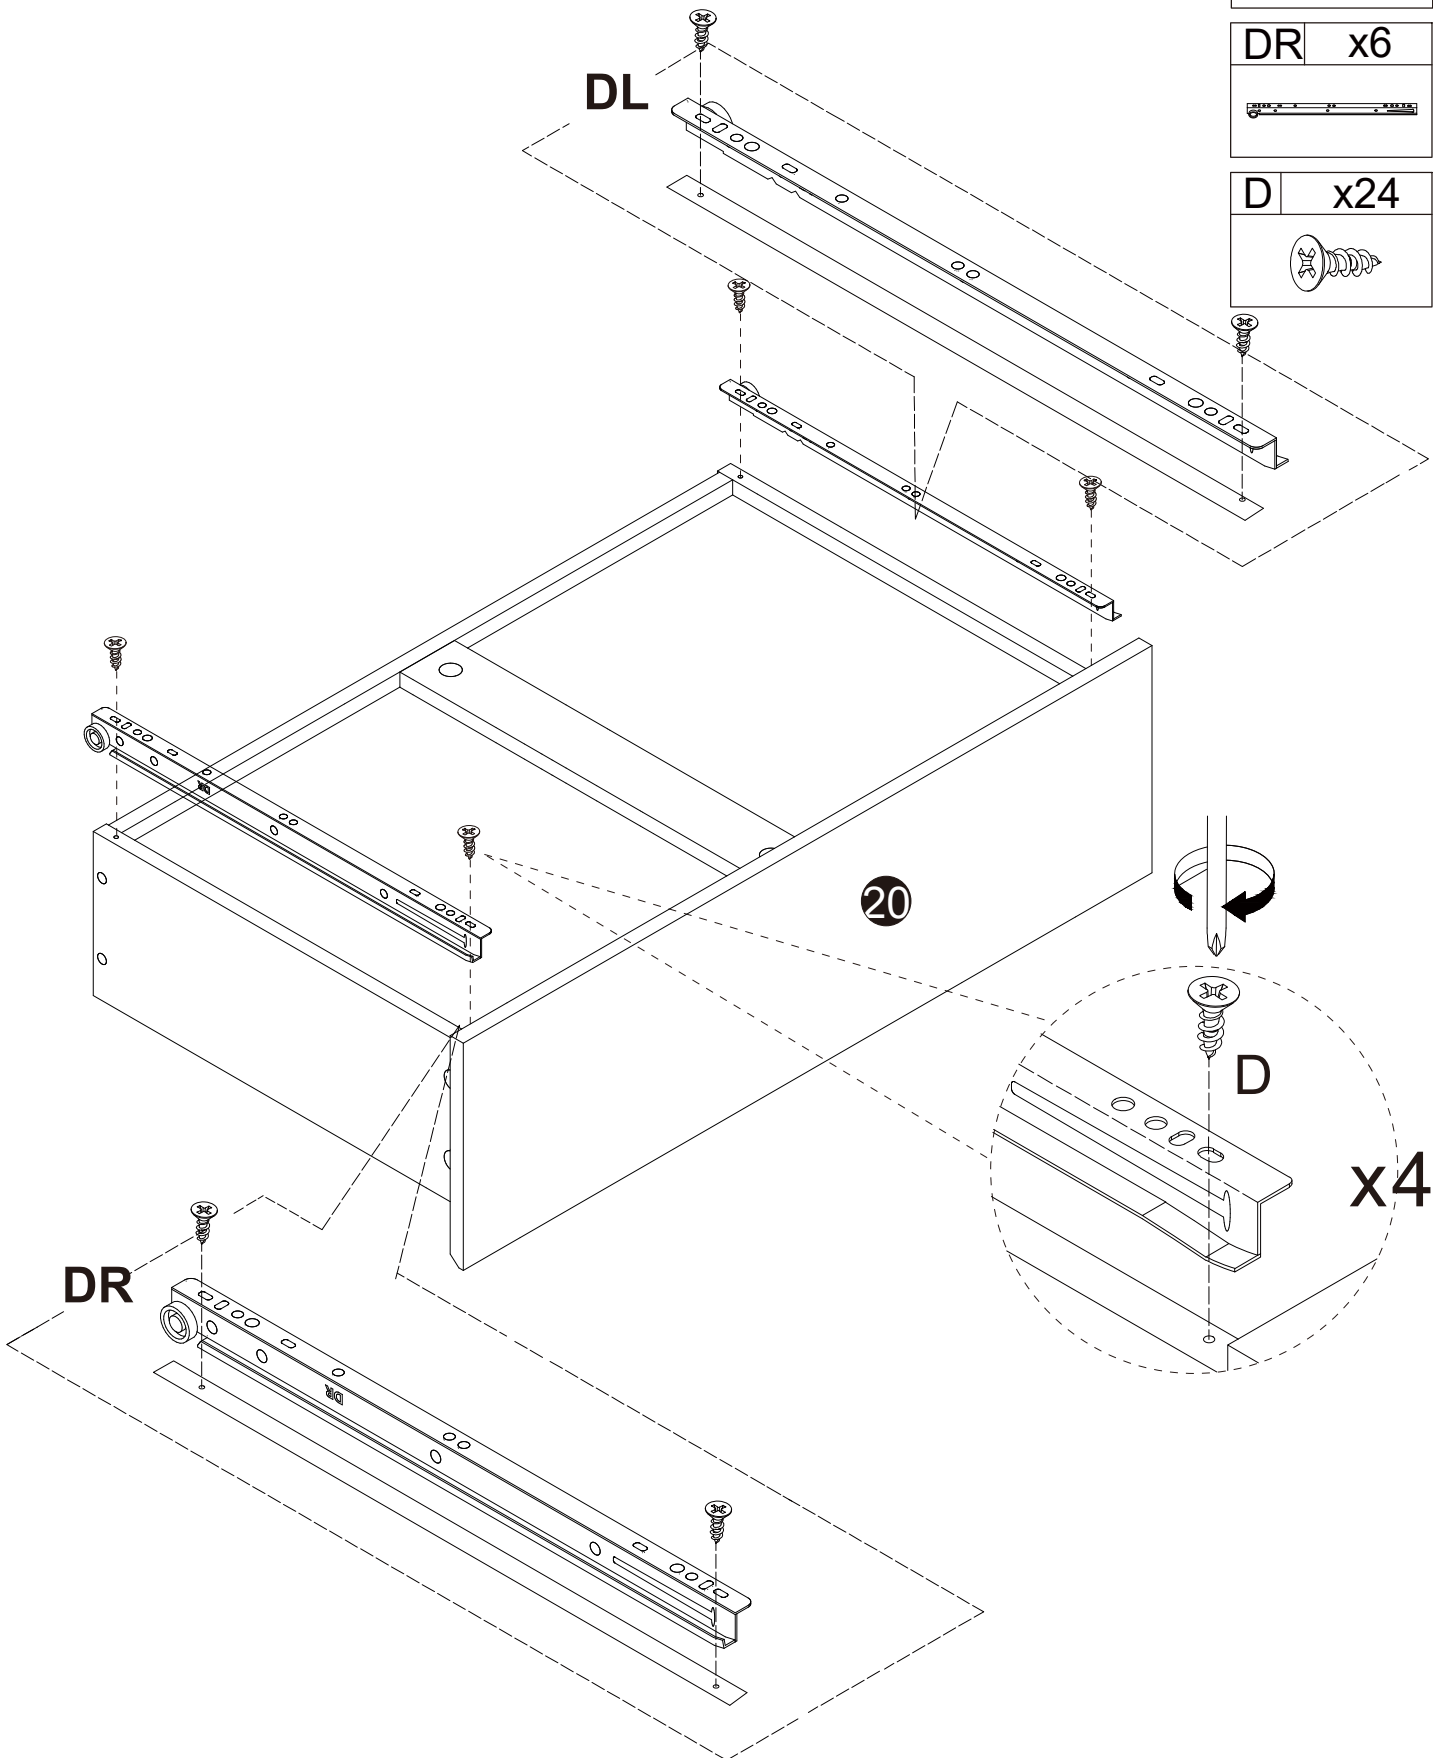





**x6**

D	x21
	
CL	x7
	

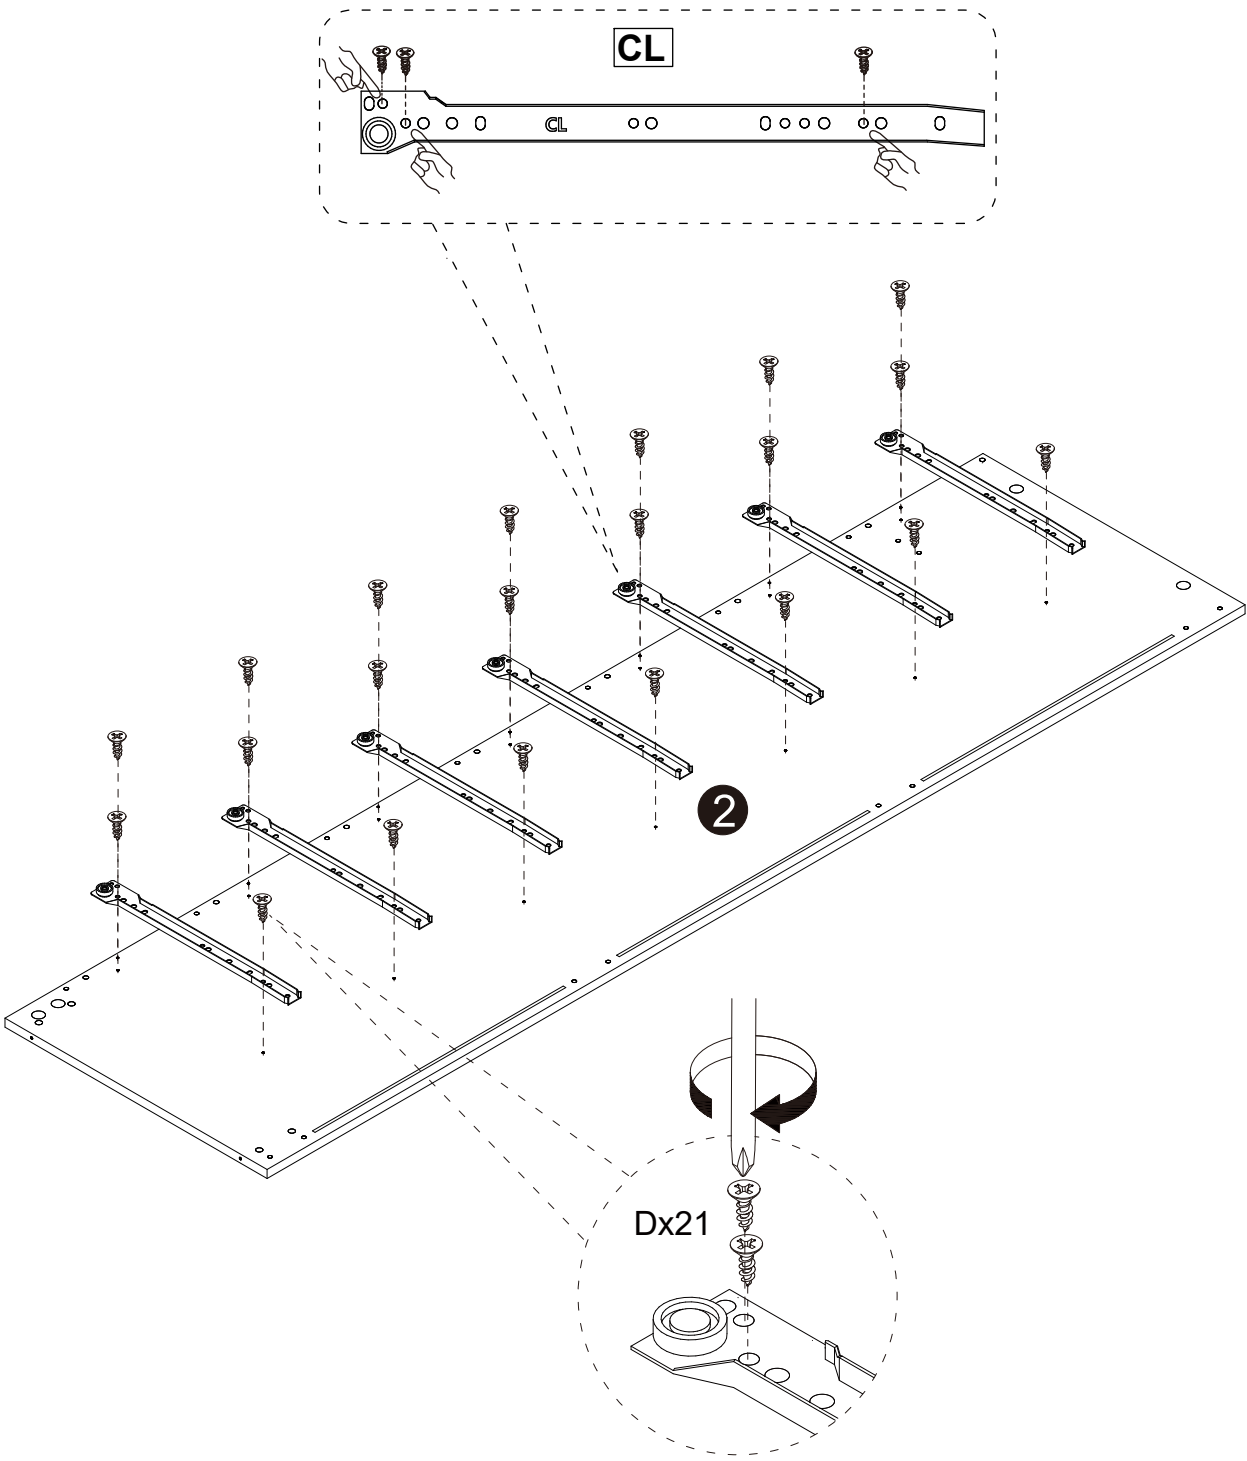


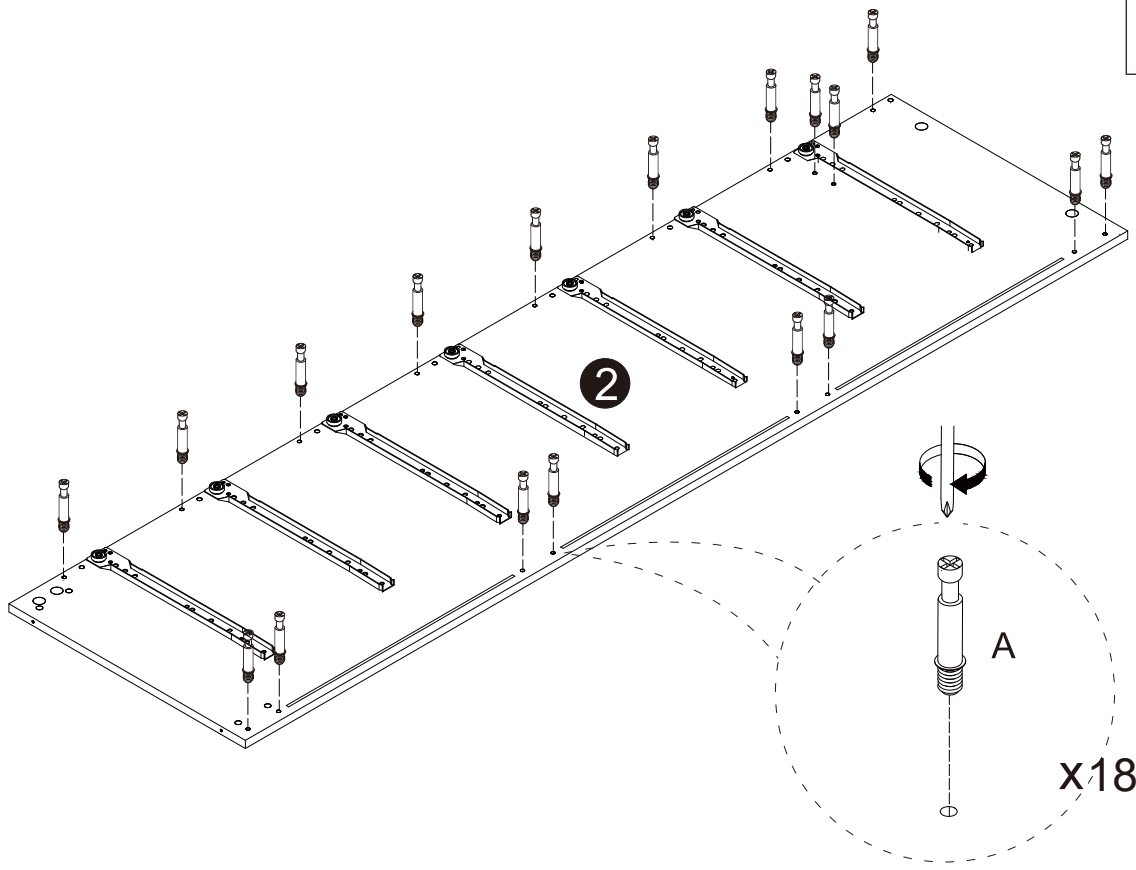
D	x21
	

CR	x7
	

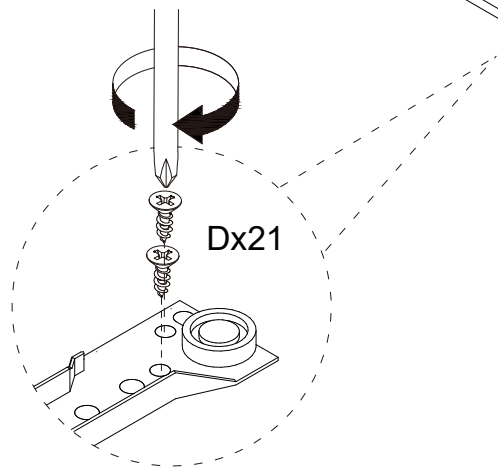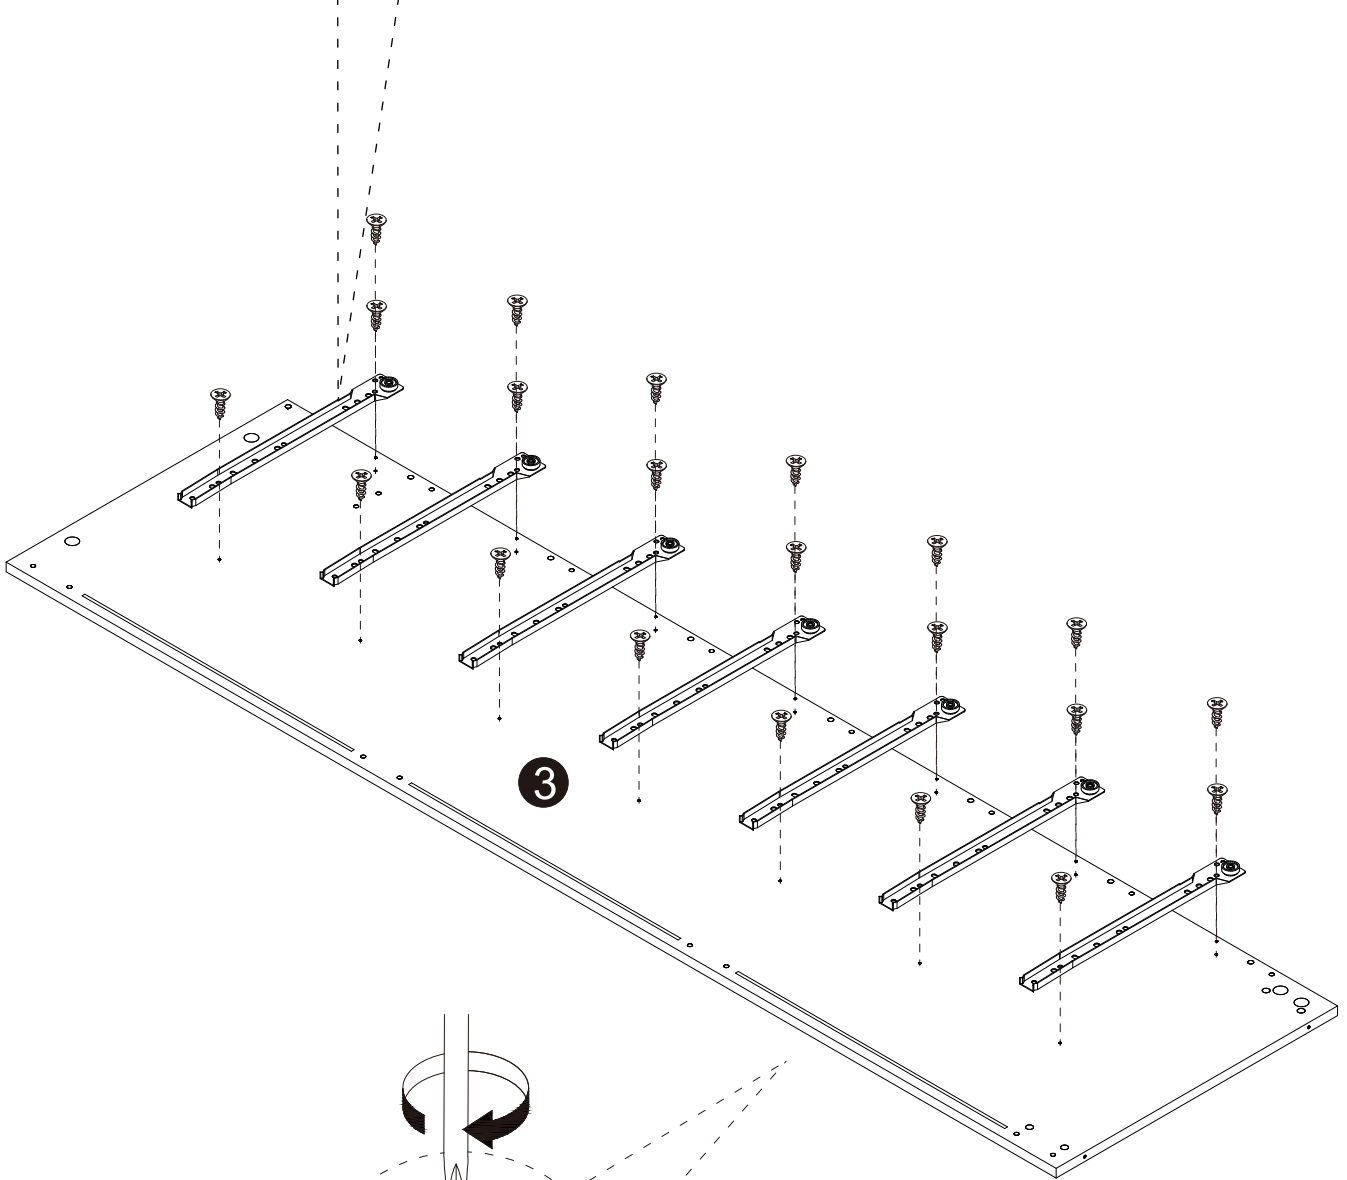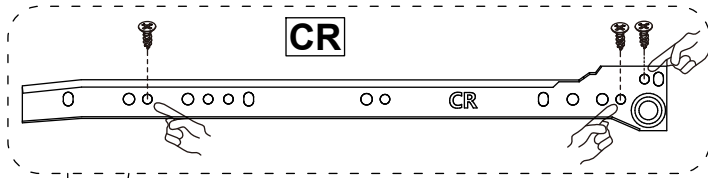


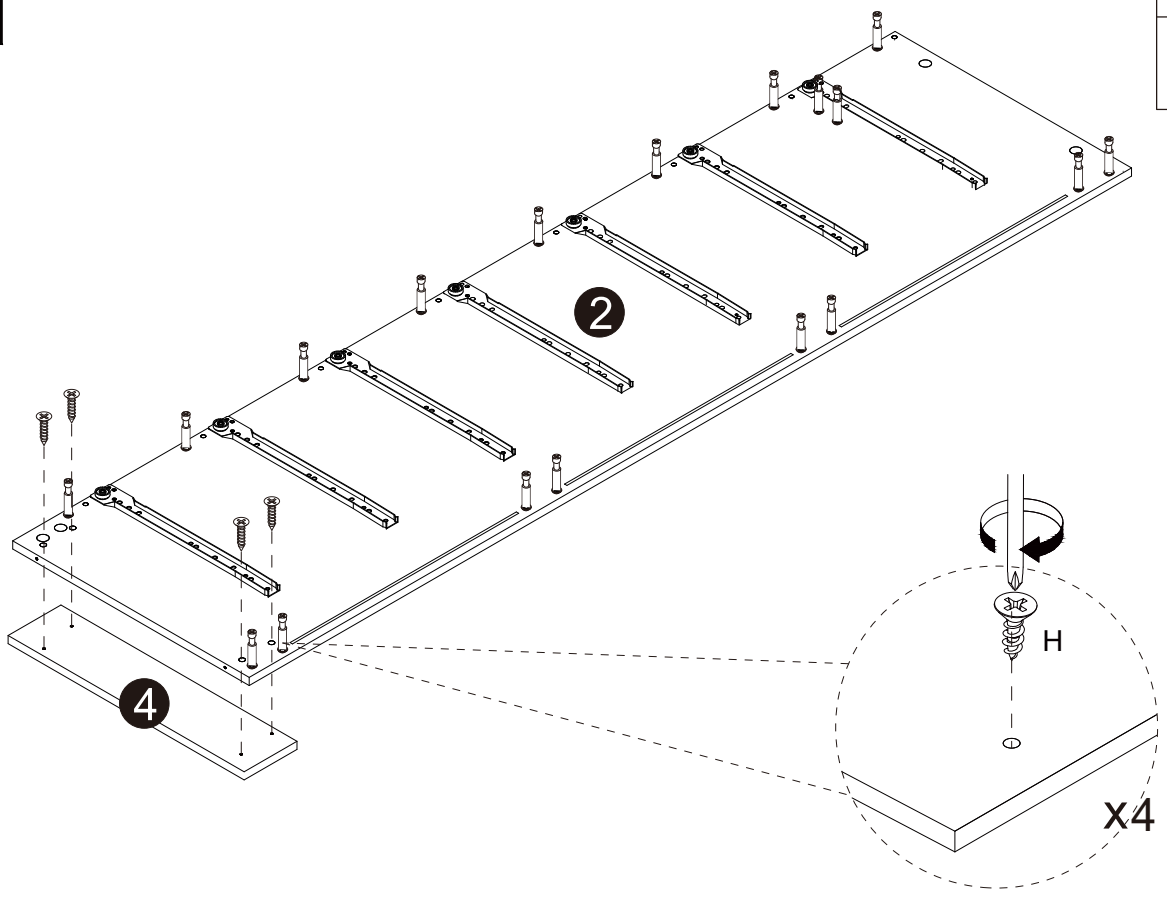
15

A	x18
	





16

H	x4
	




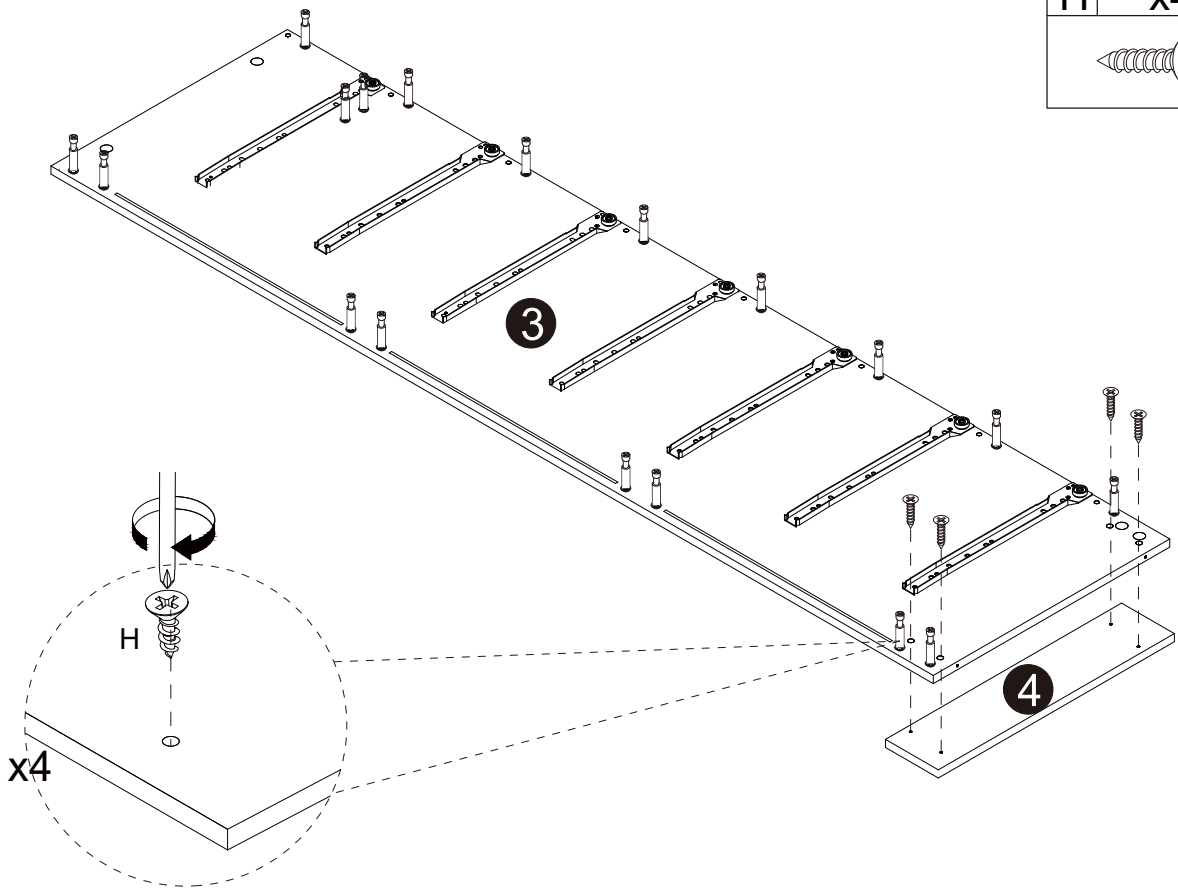
17


A	x18
	

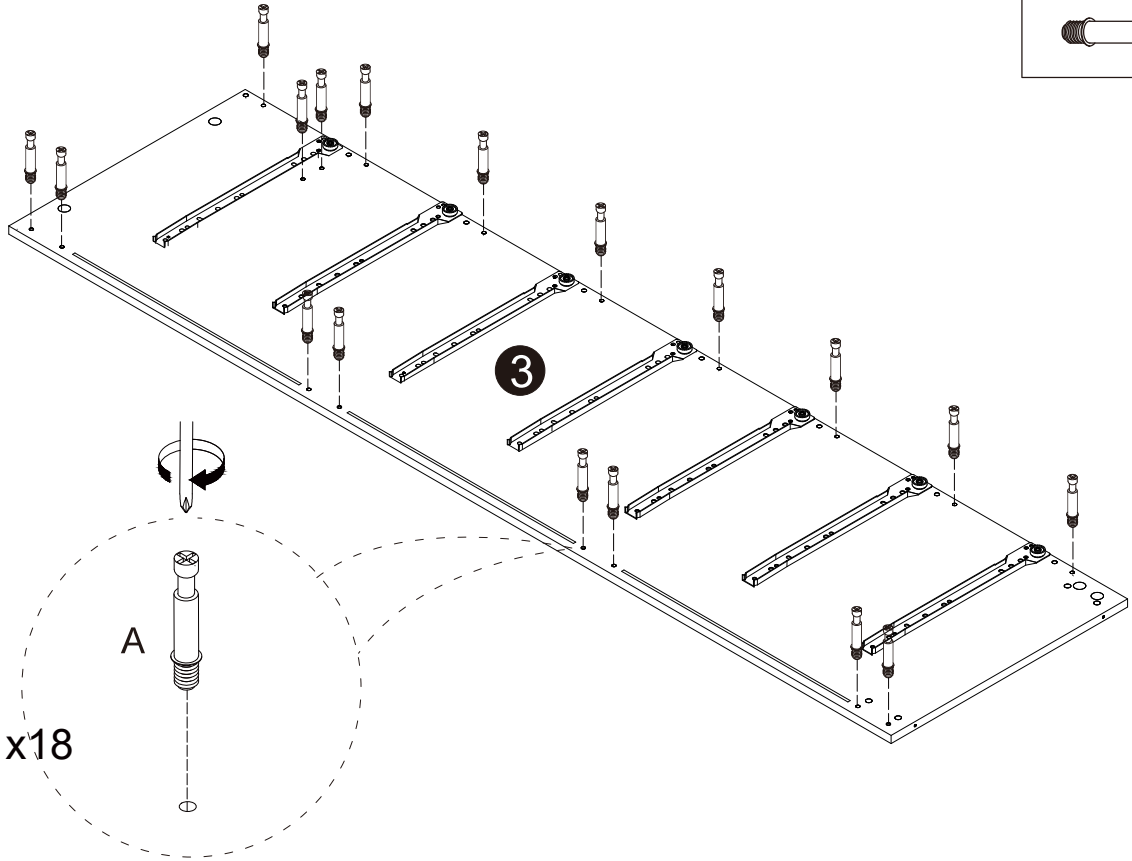


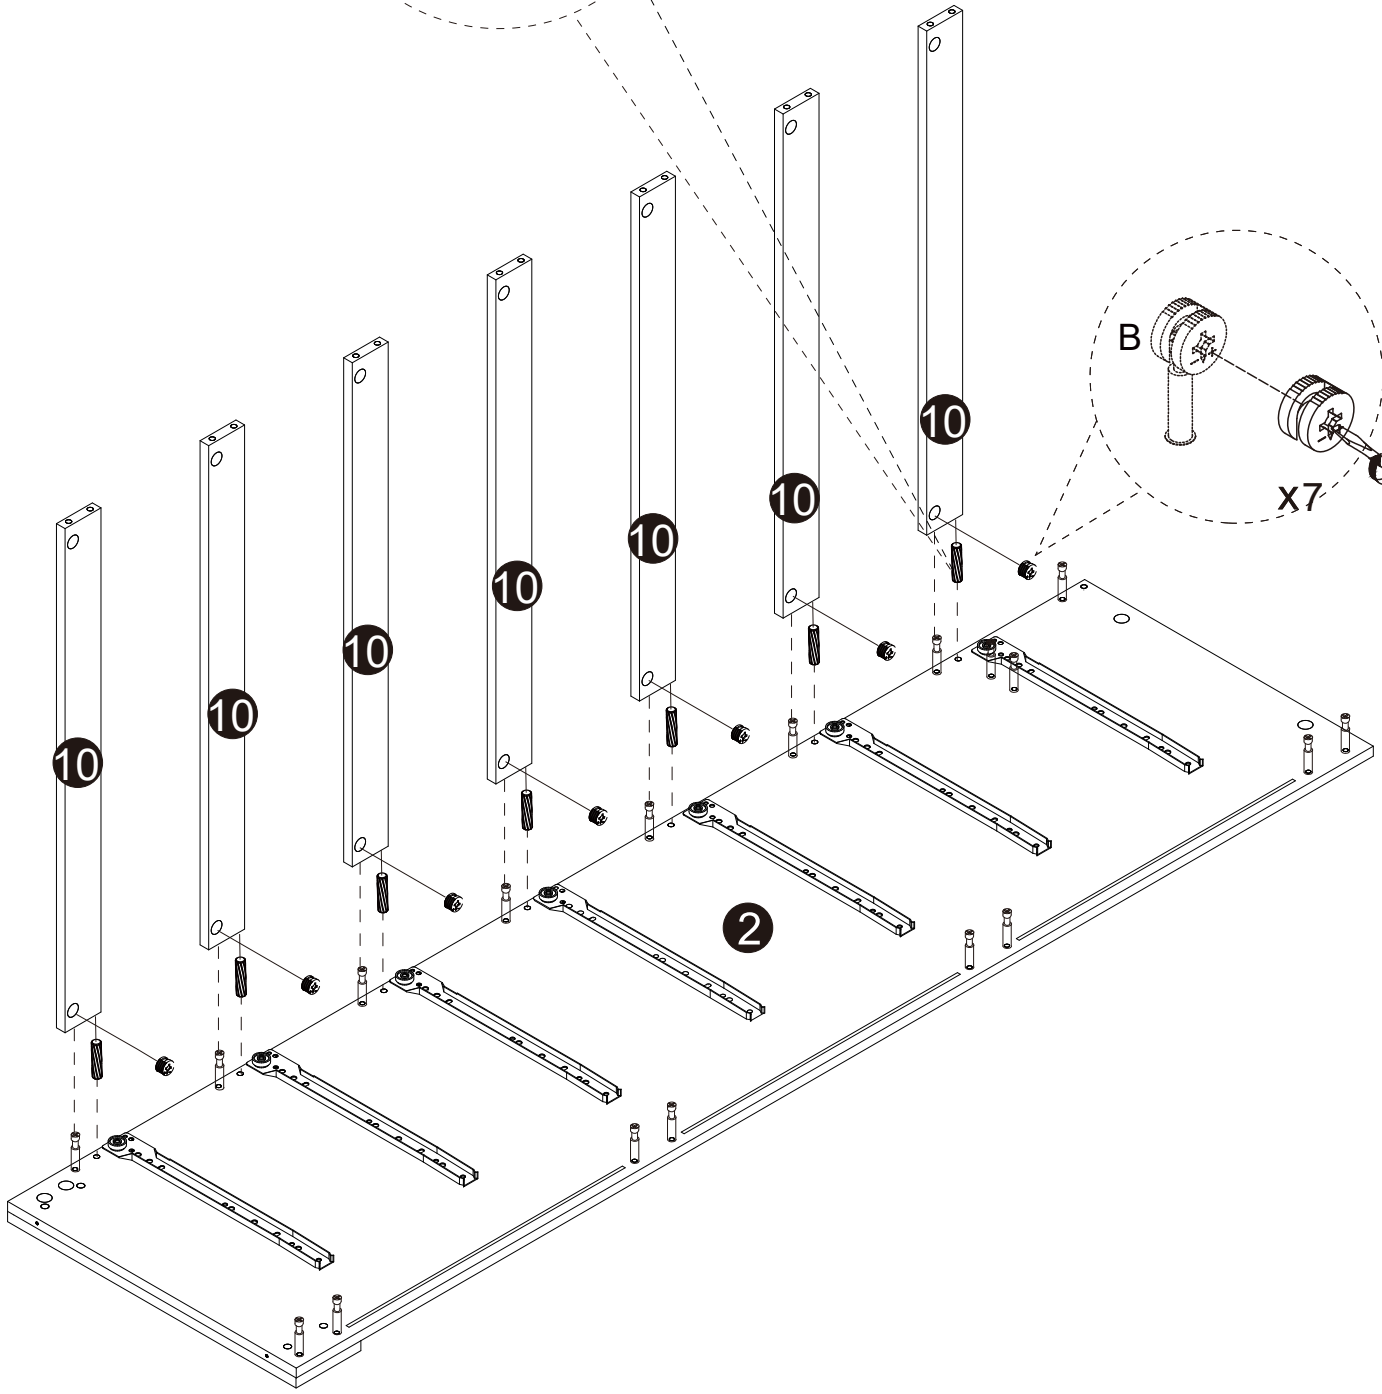
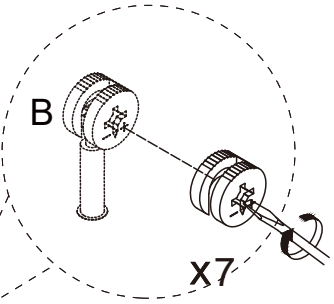
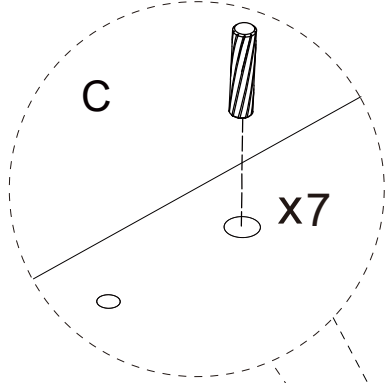
18


H	x4
	






B	x7
	

C	x7
	



B	x6
	






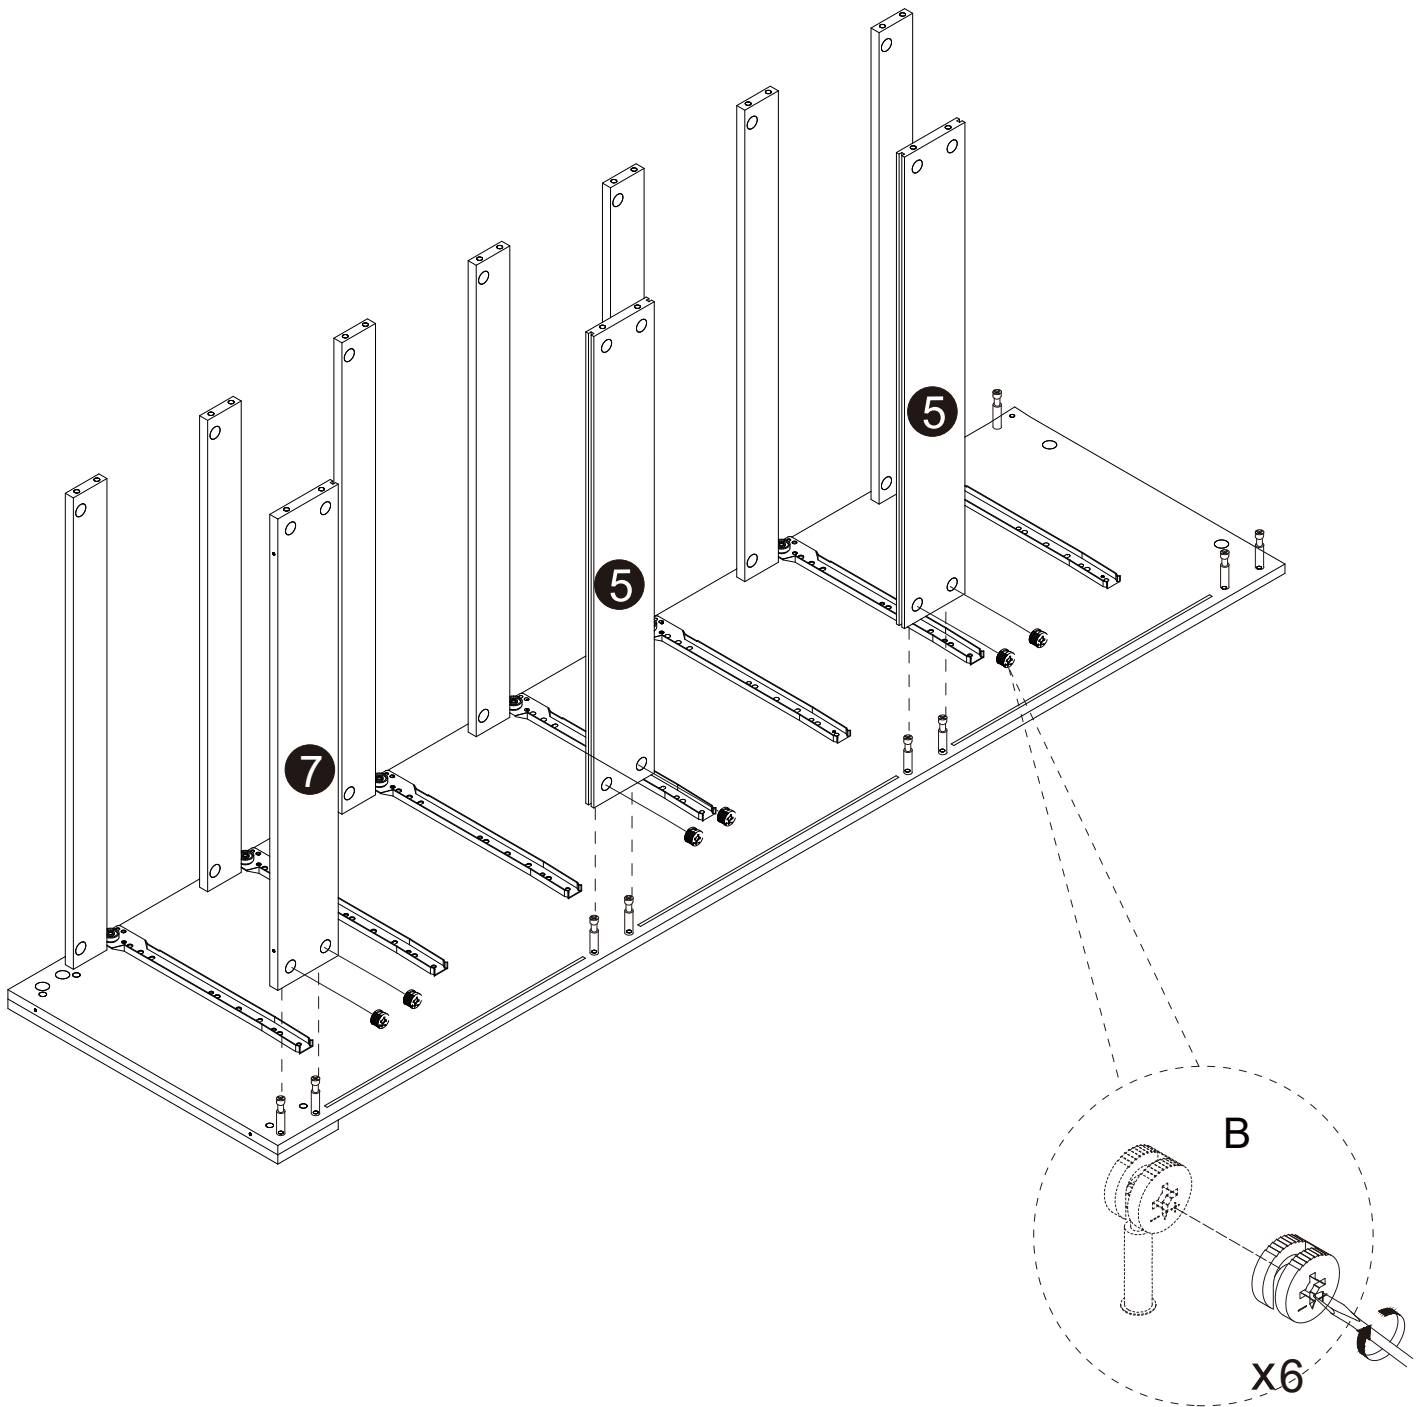


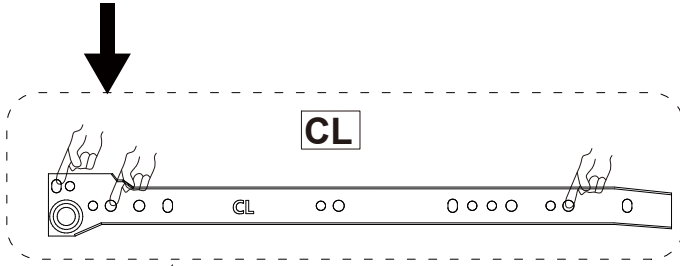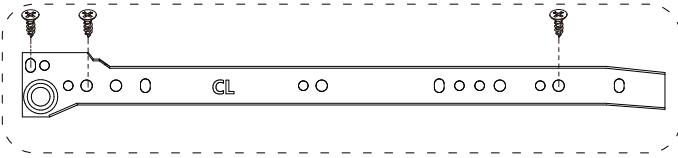


D	x6


CL	x1

CR	x1

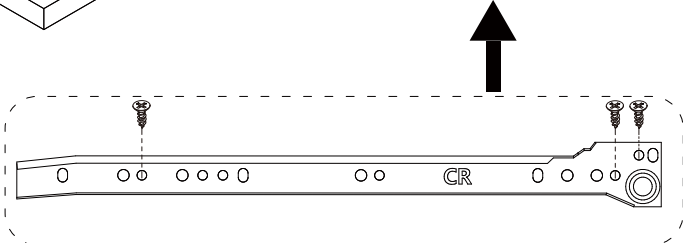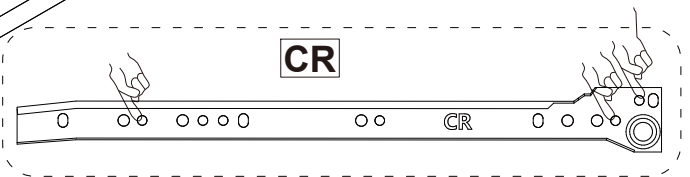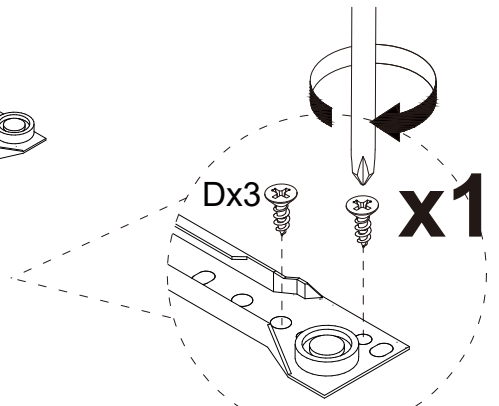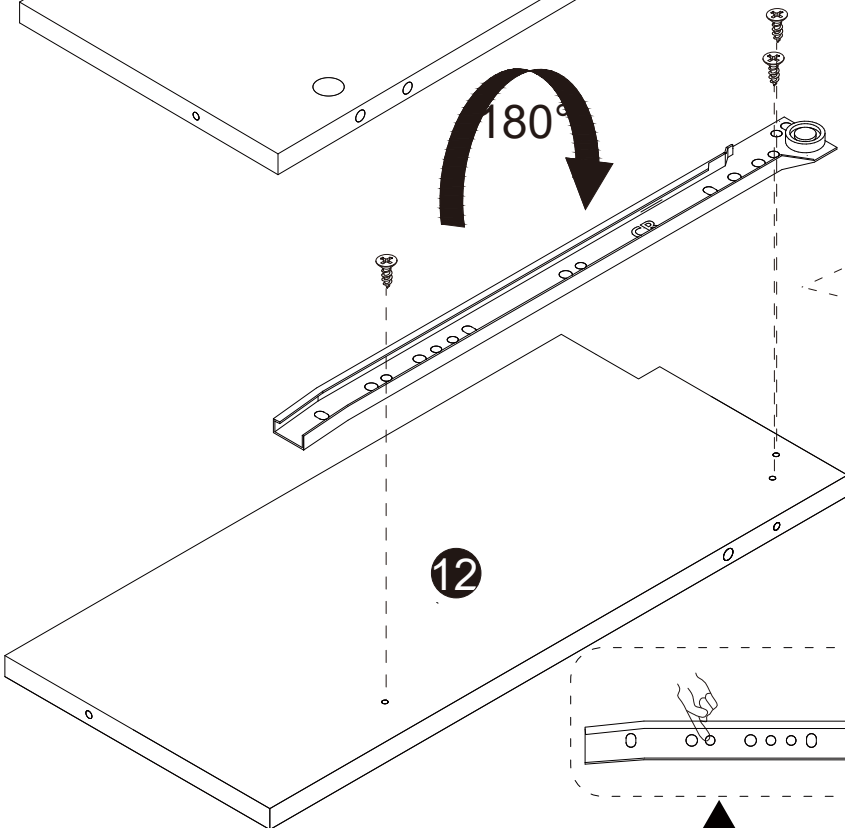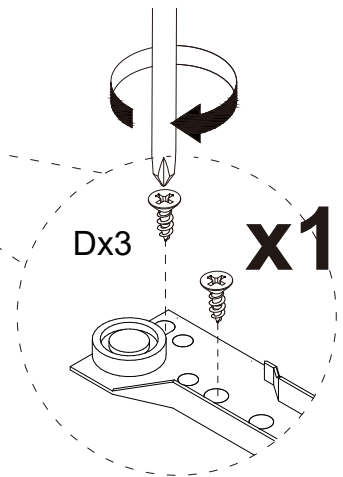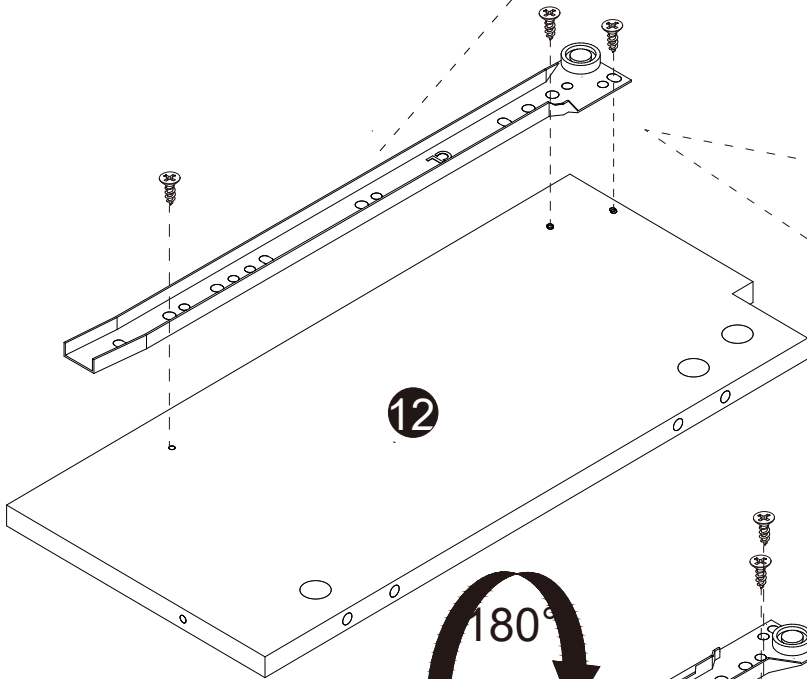


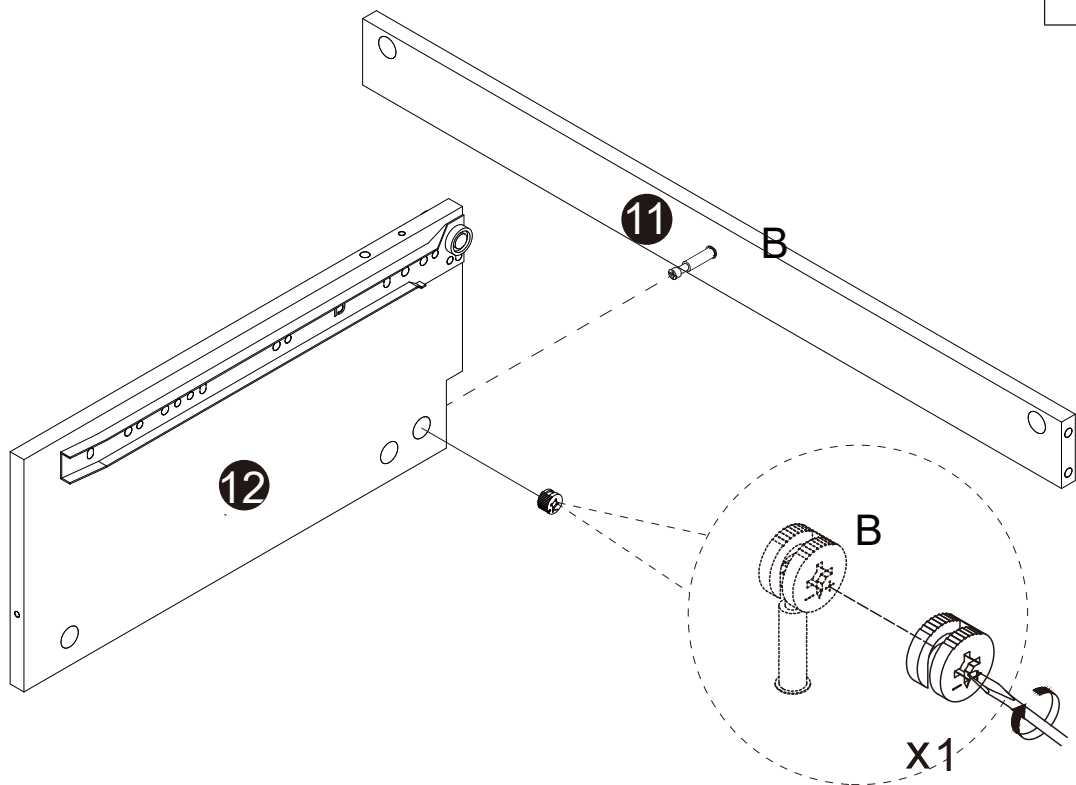
22

A	x1
	

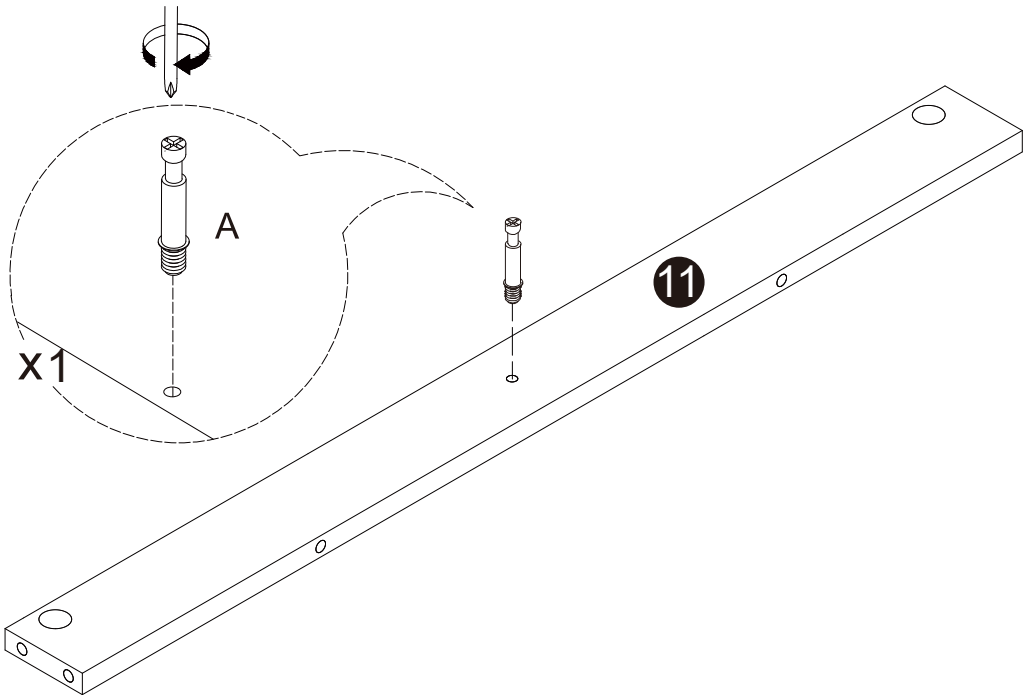


23

B	x1
	




24

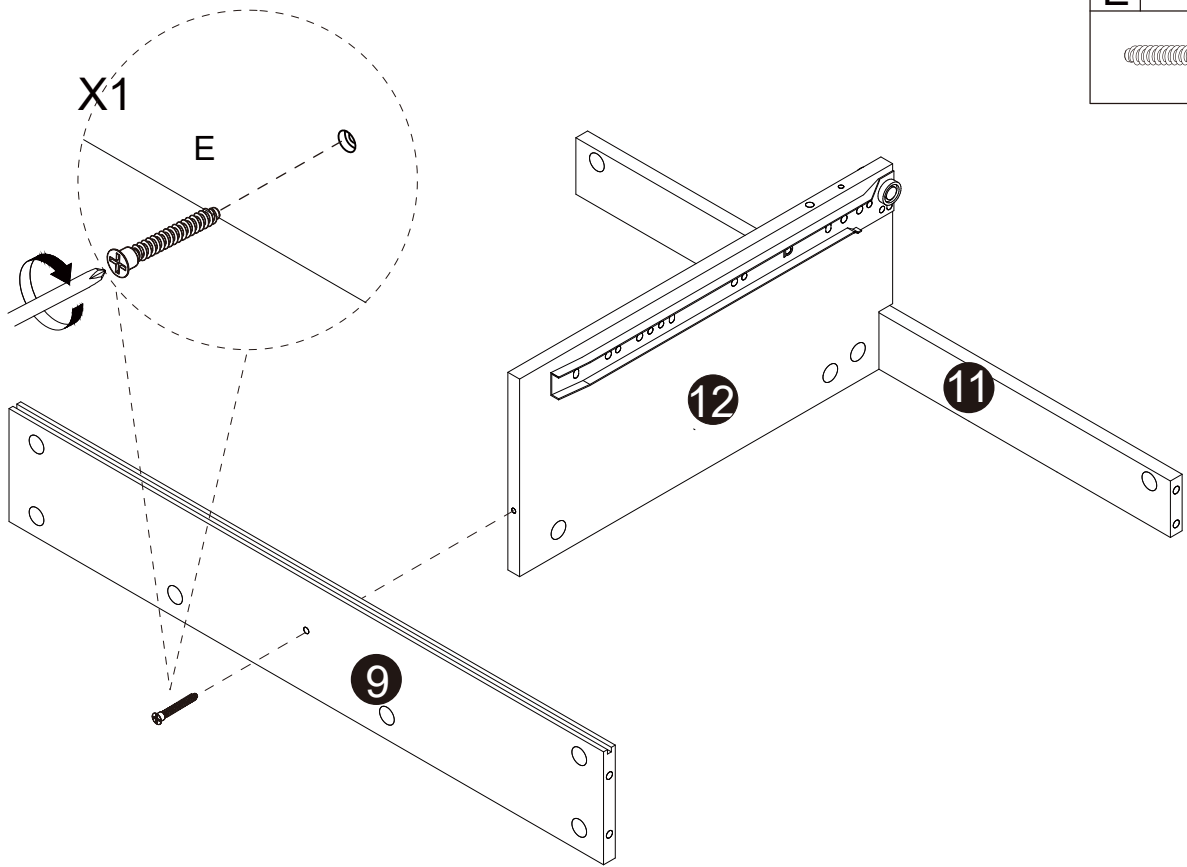



E	x1


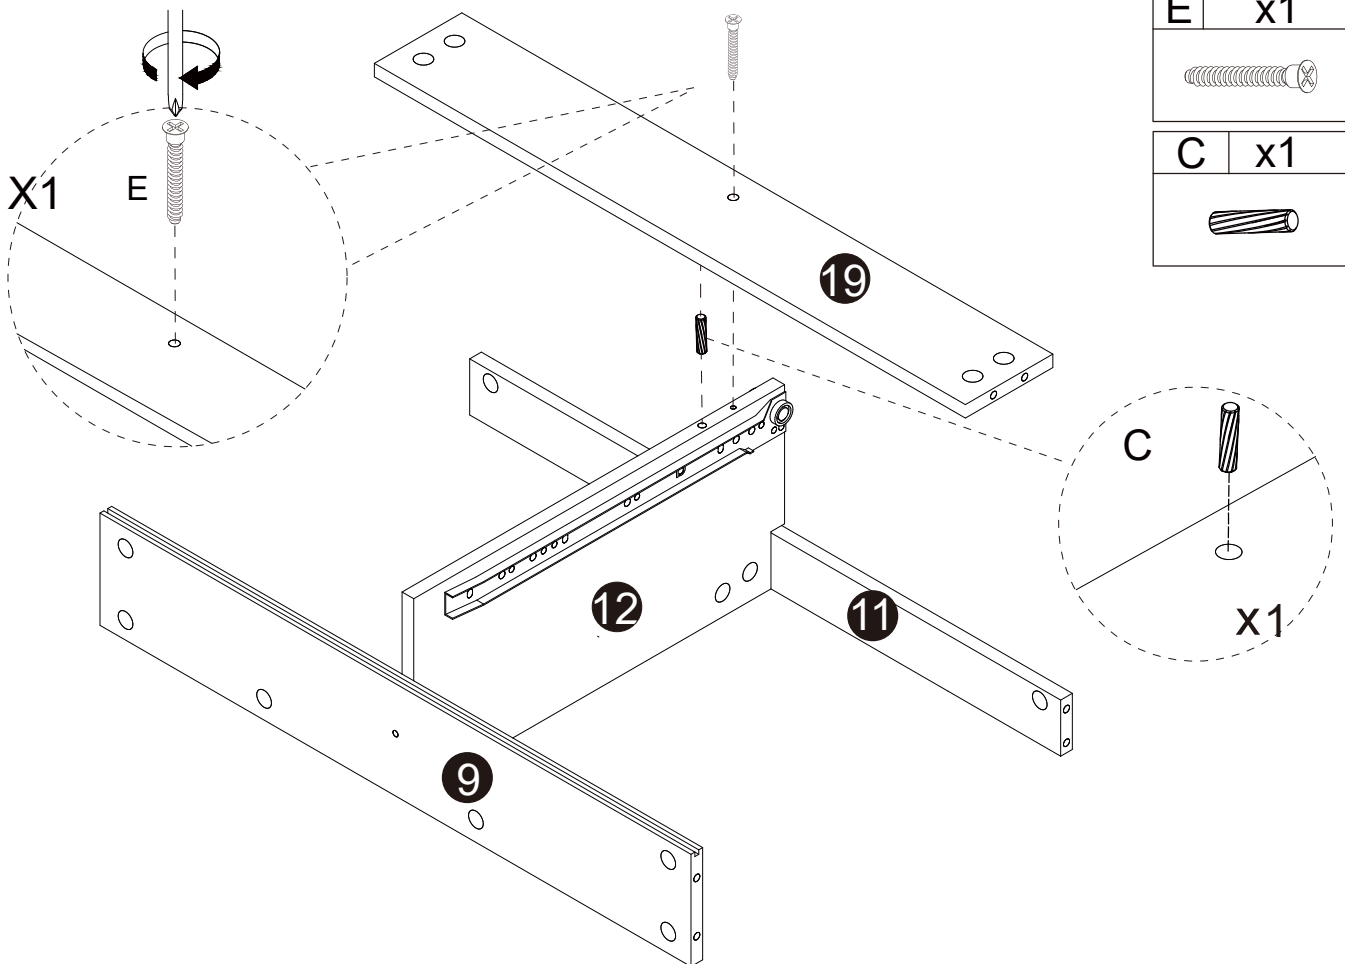
25






E	x1


C	x1

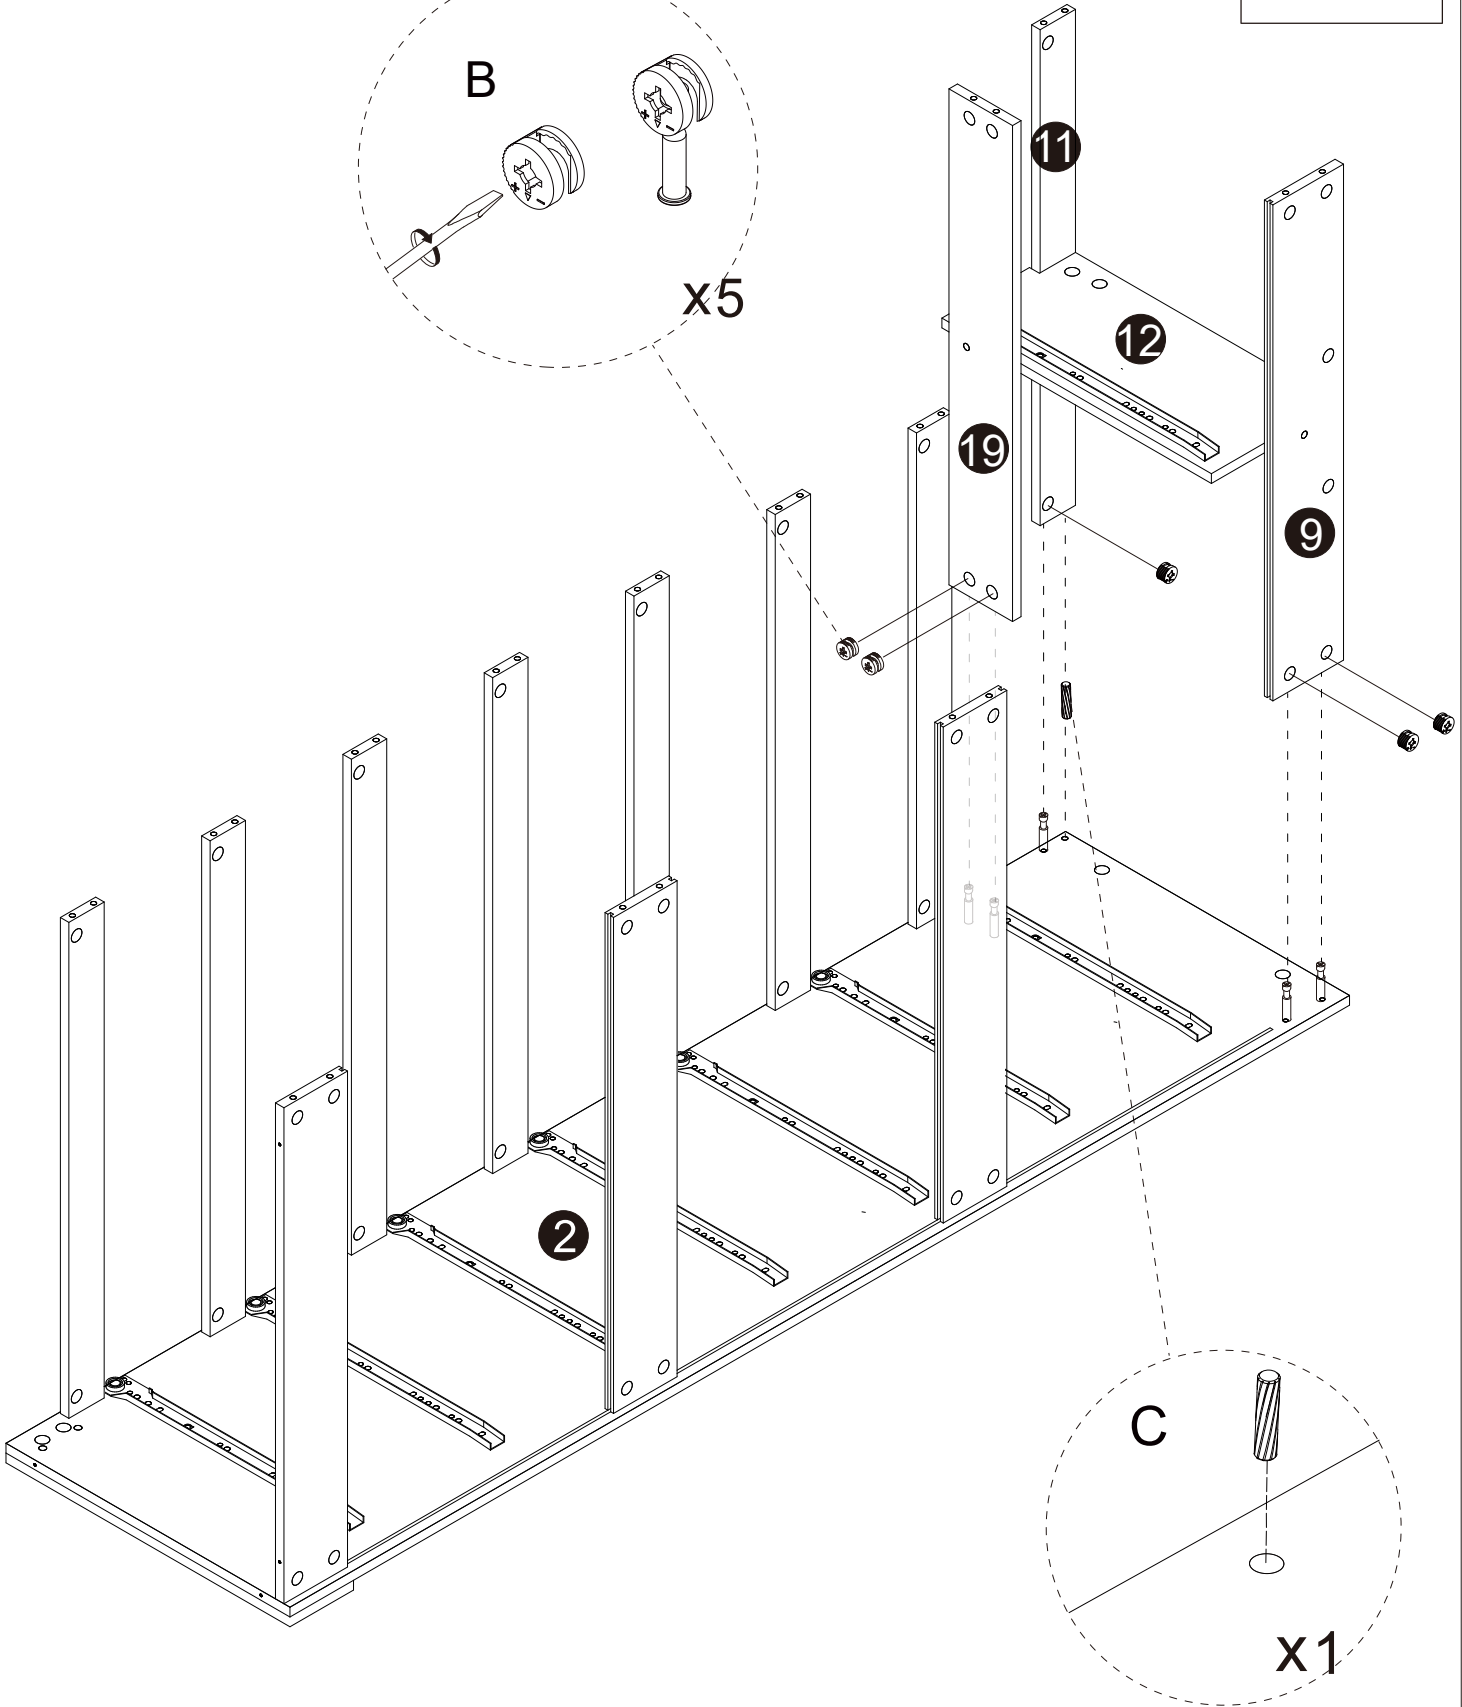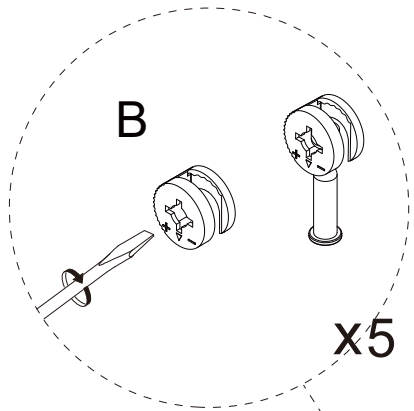B	x5
	
C	x1
	

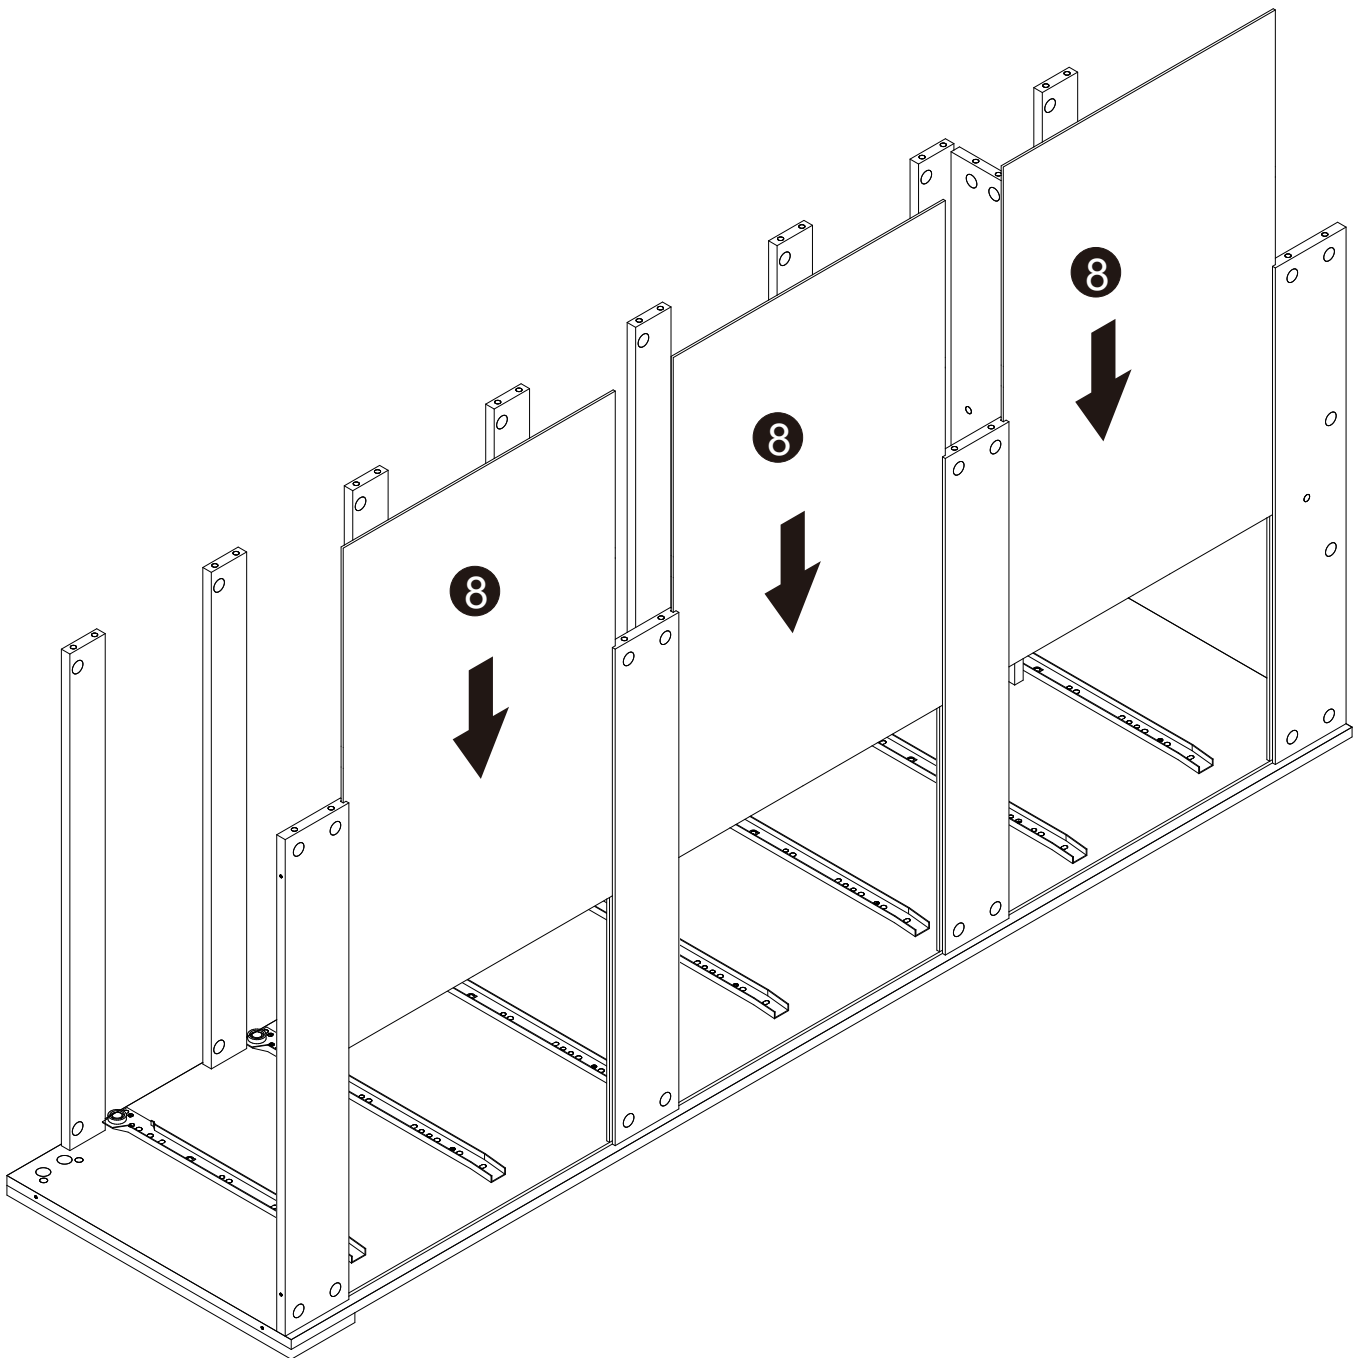





B	x18
	
C	x8
	

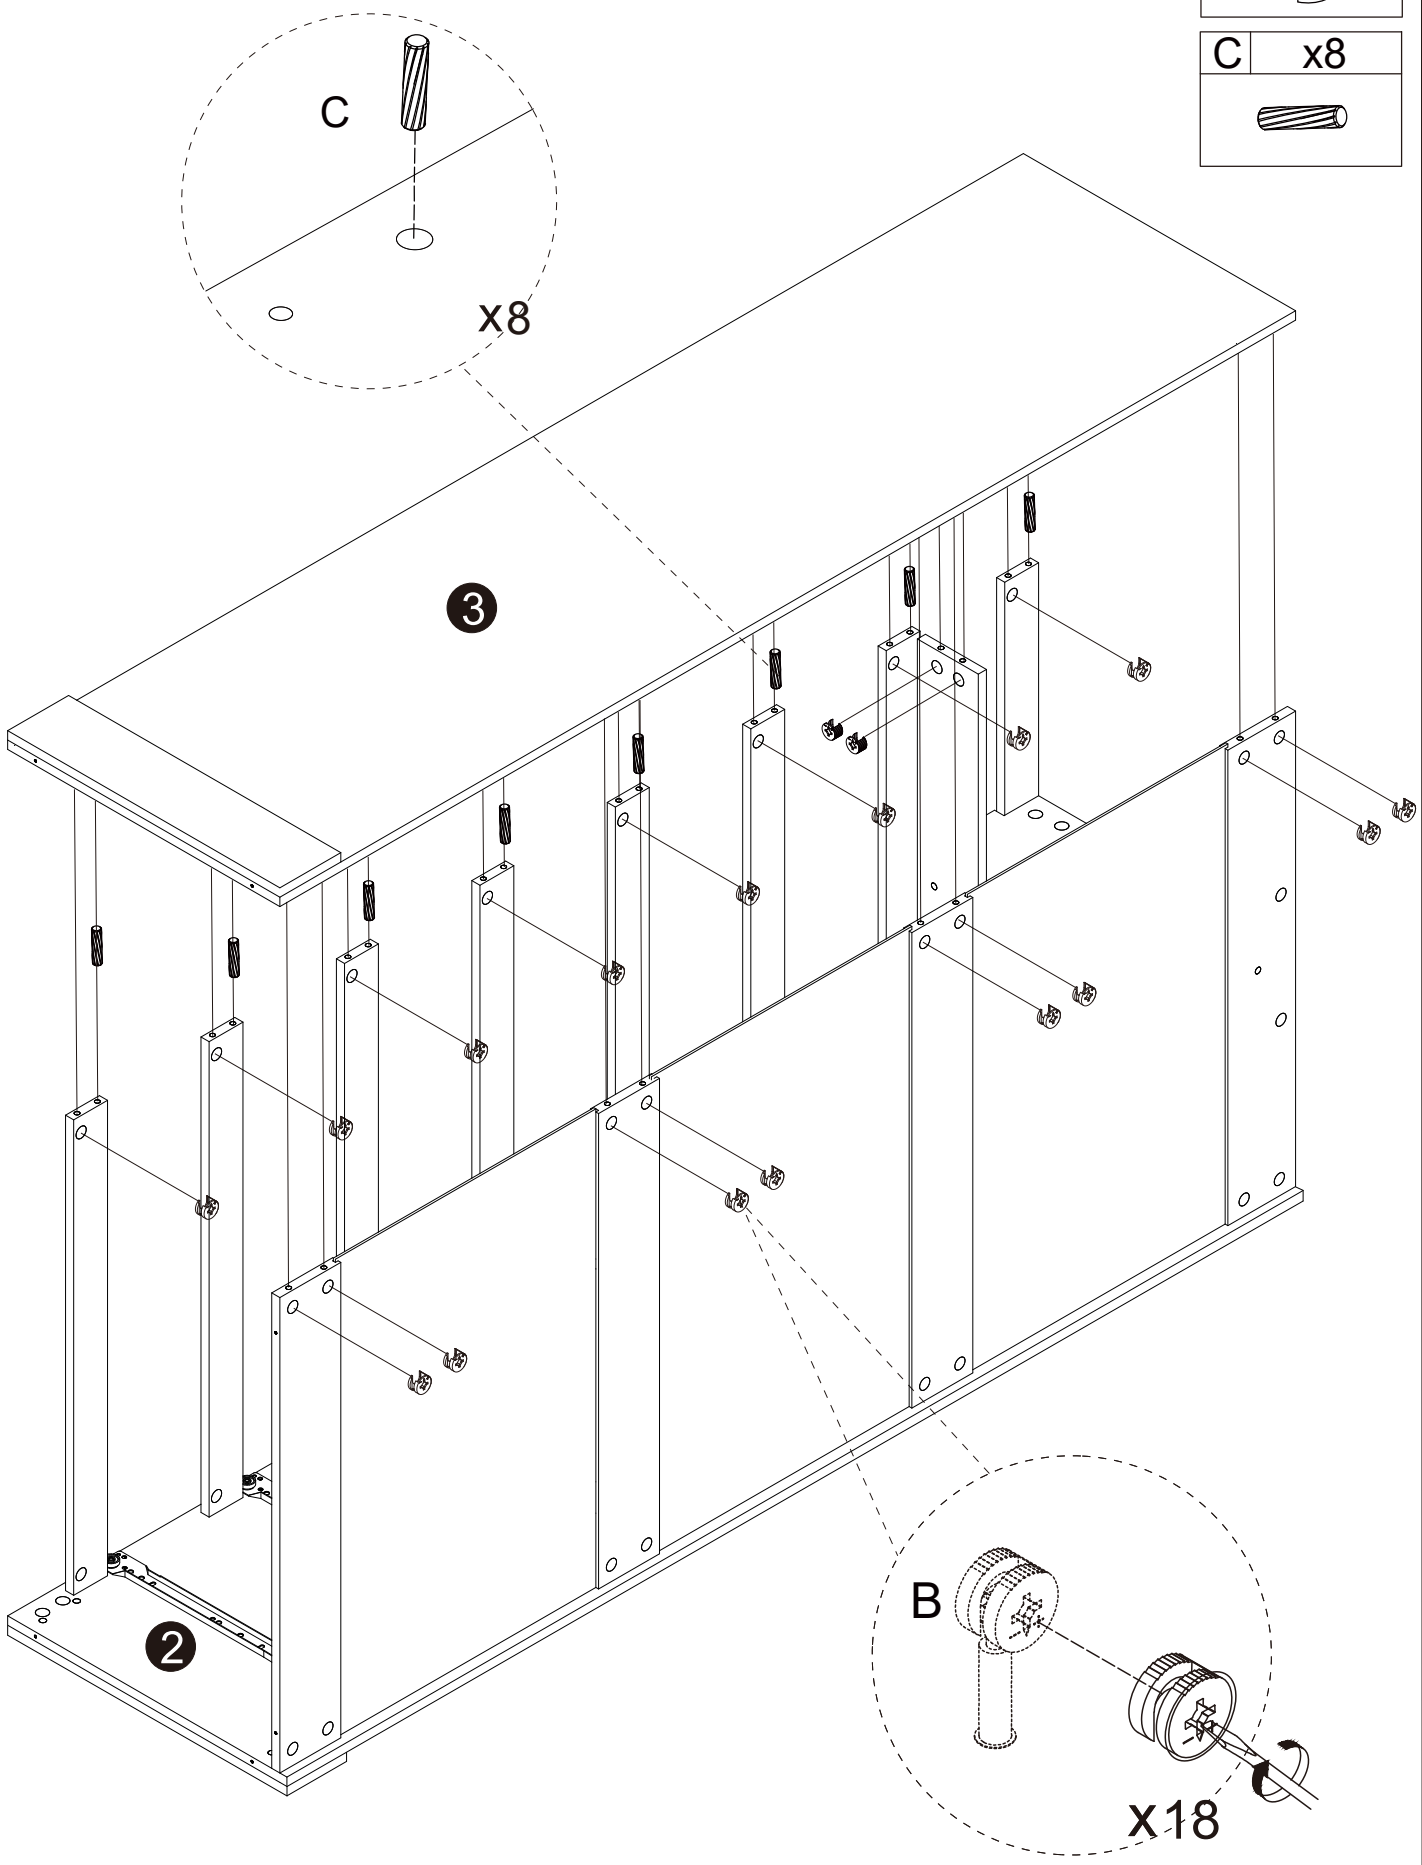



29

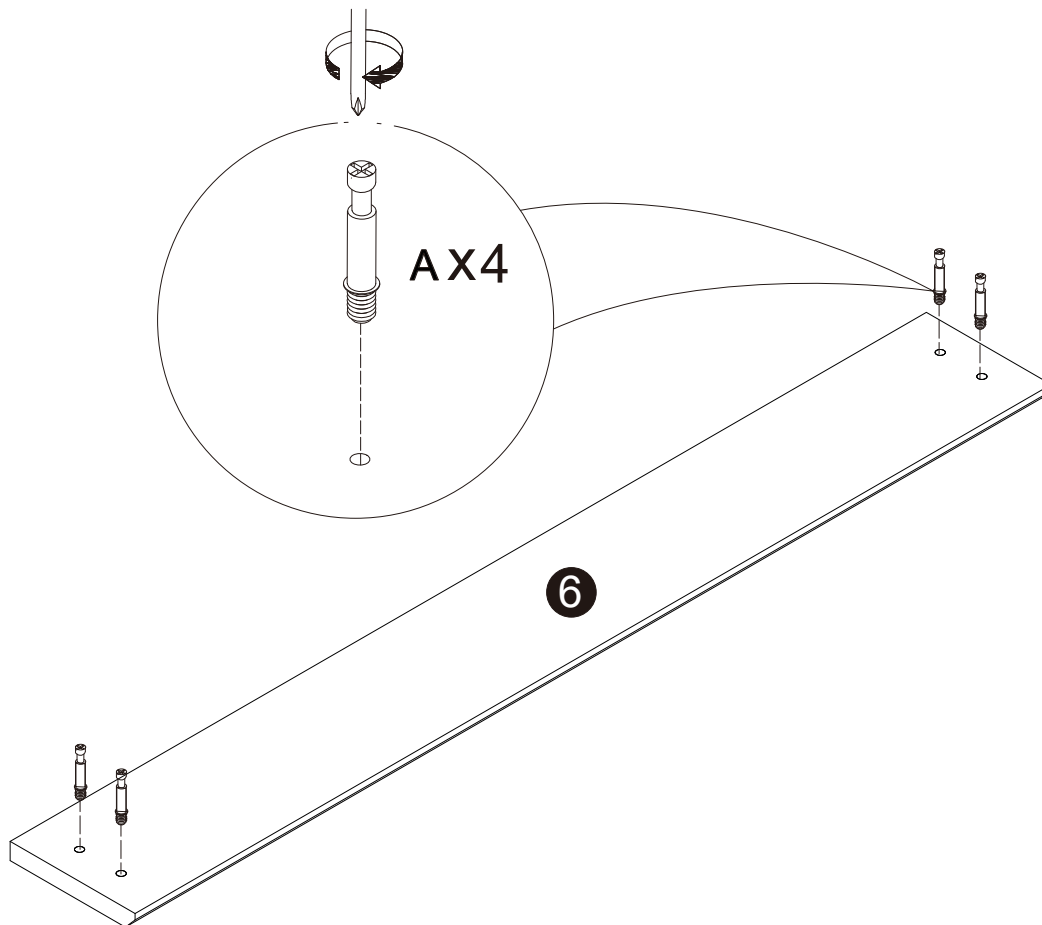



A	x4
	

30


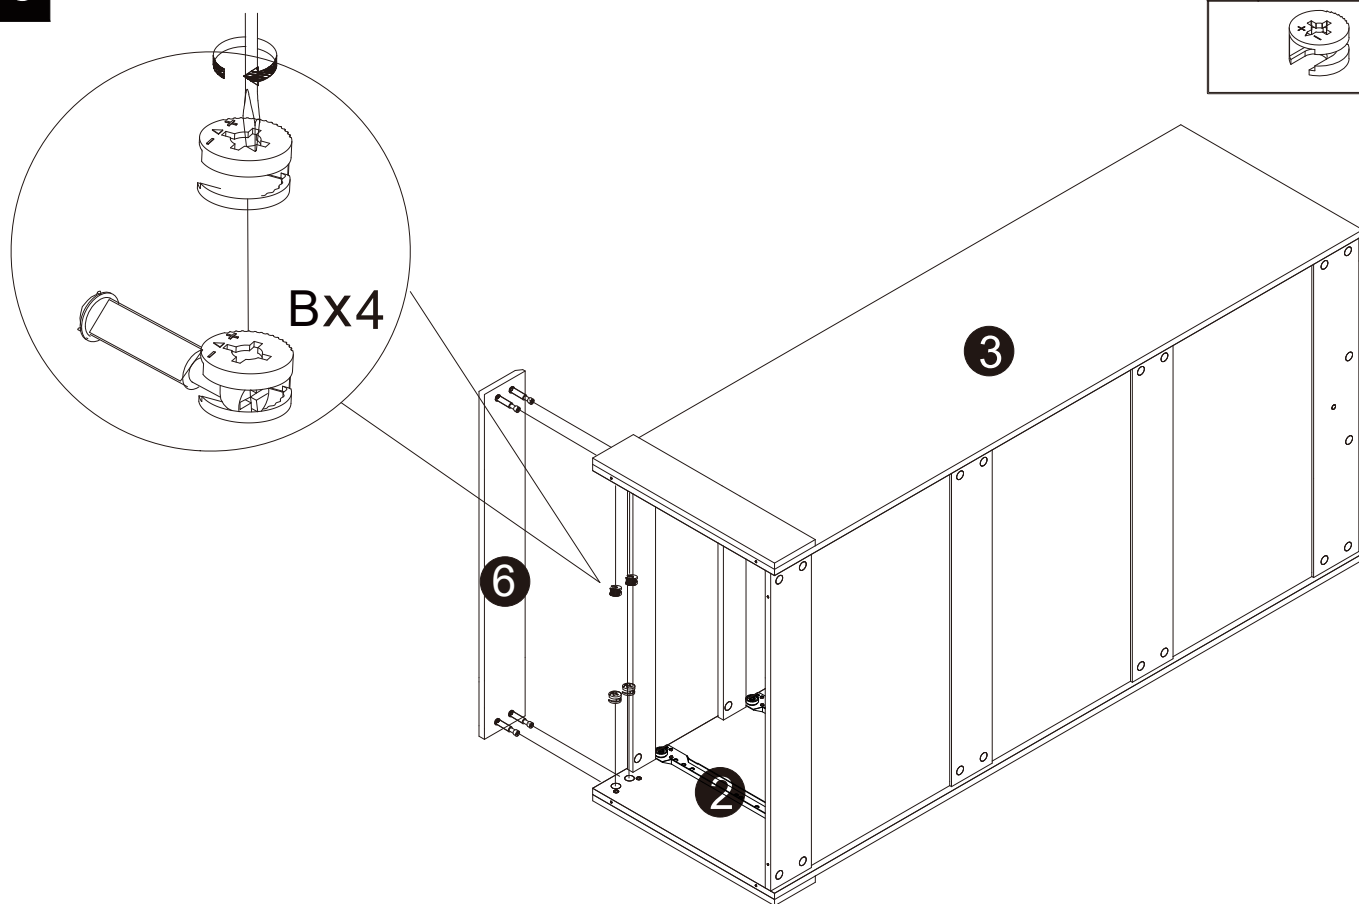




B	x4
	


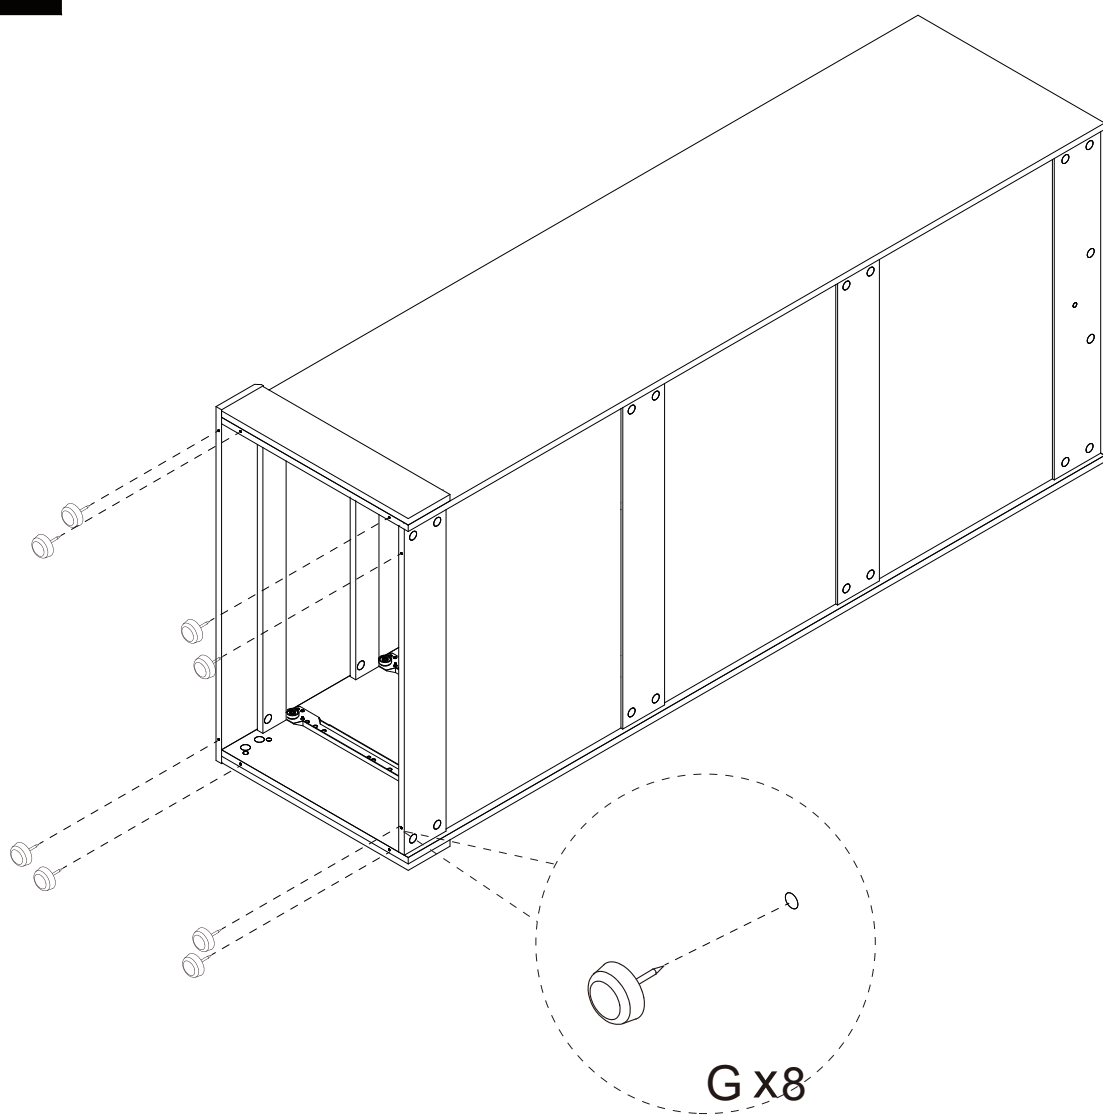
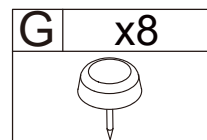
31








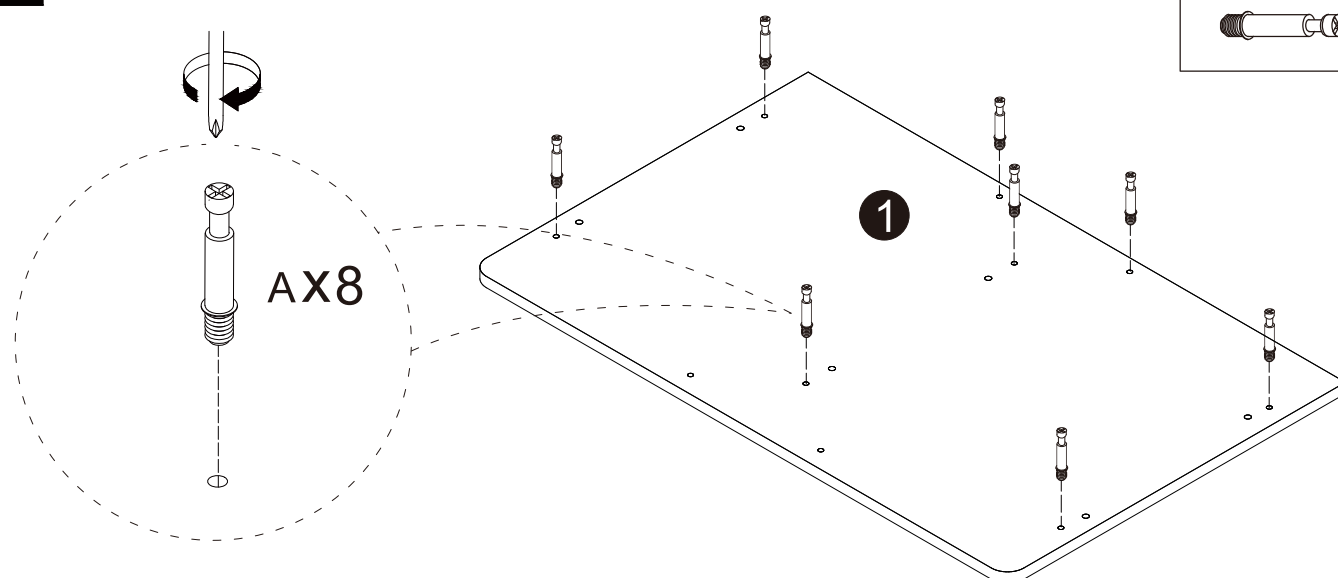
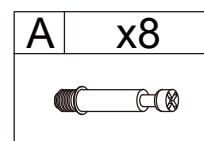
32





B	x8
	
C	x8
	

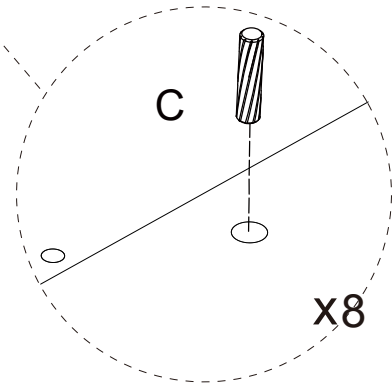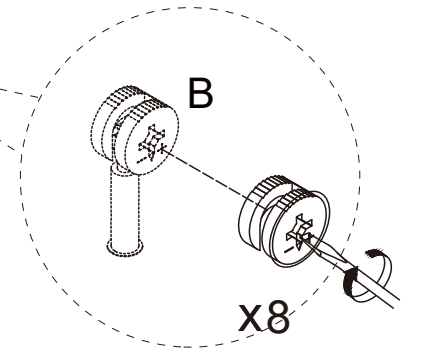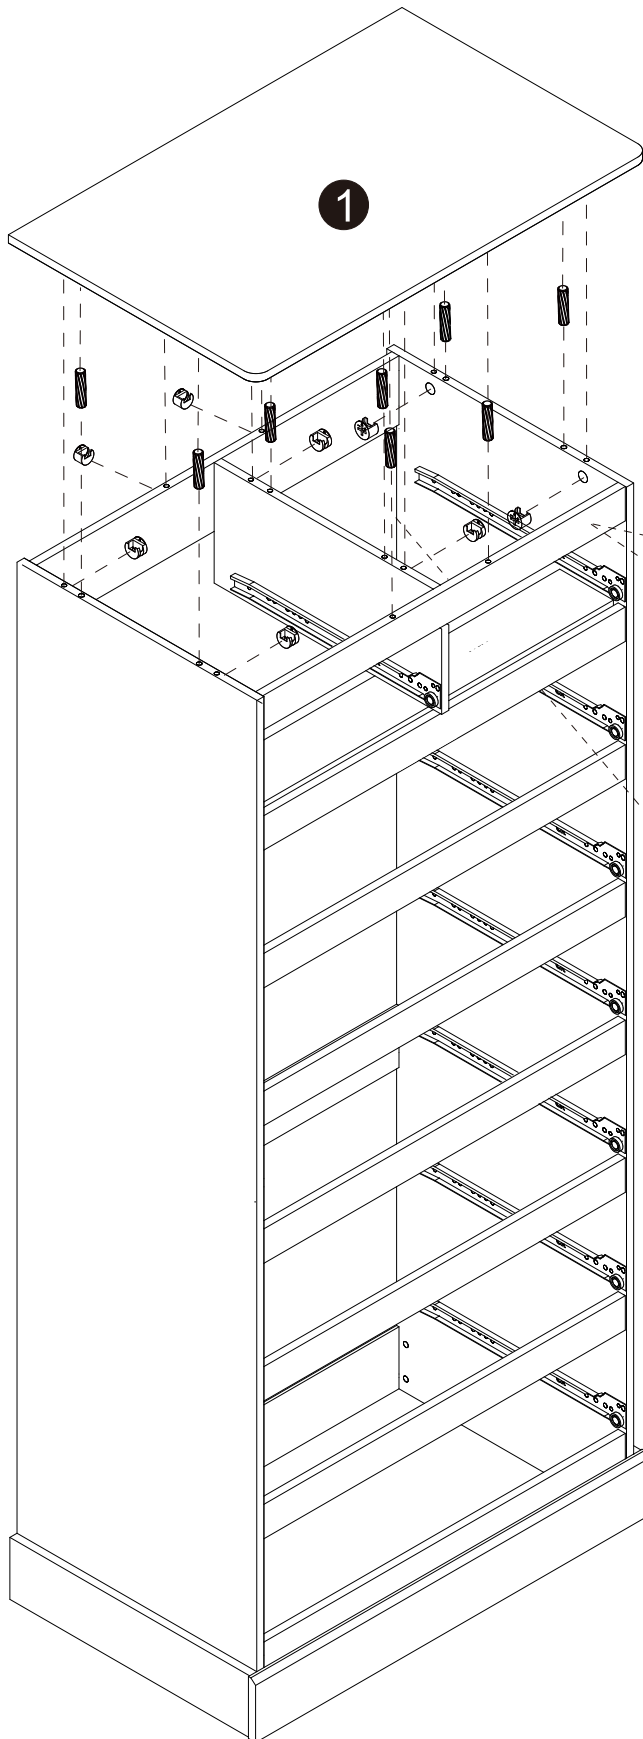



- F** x12  

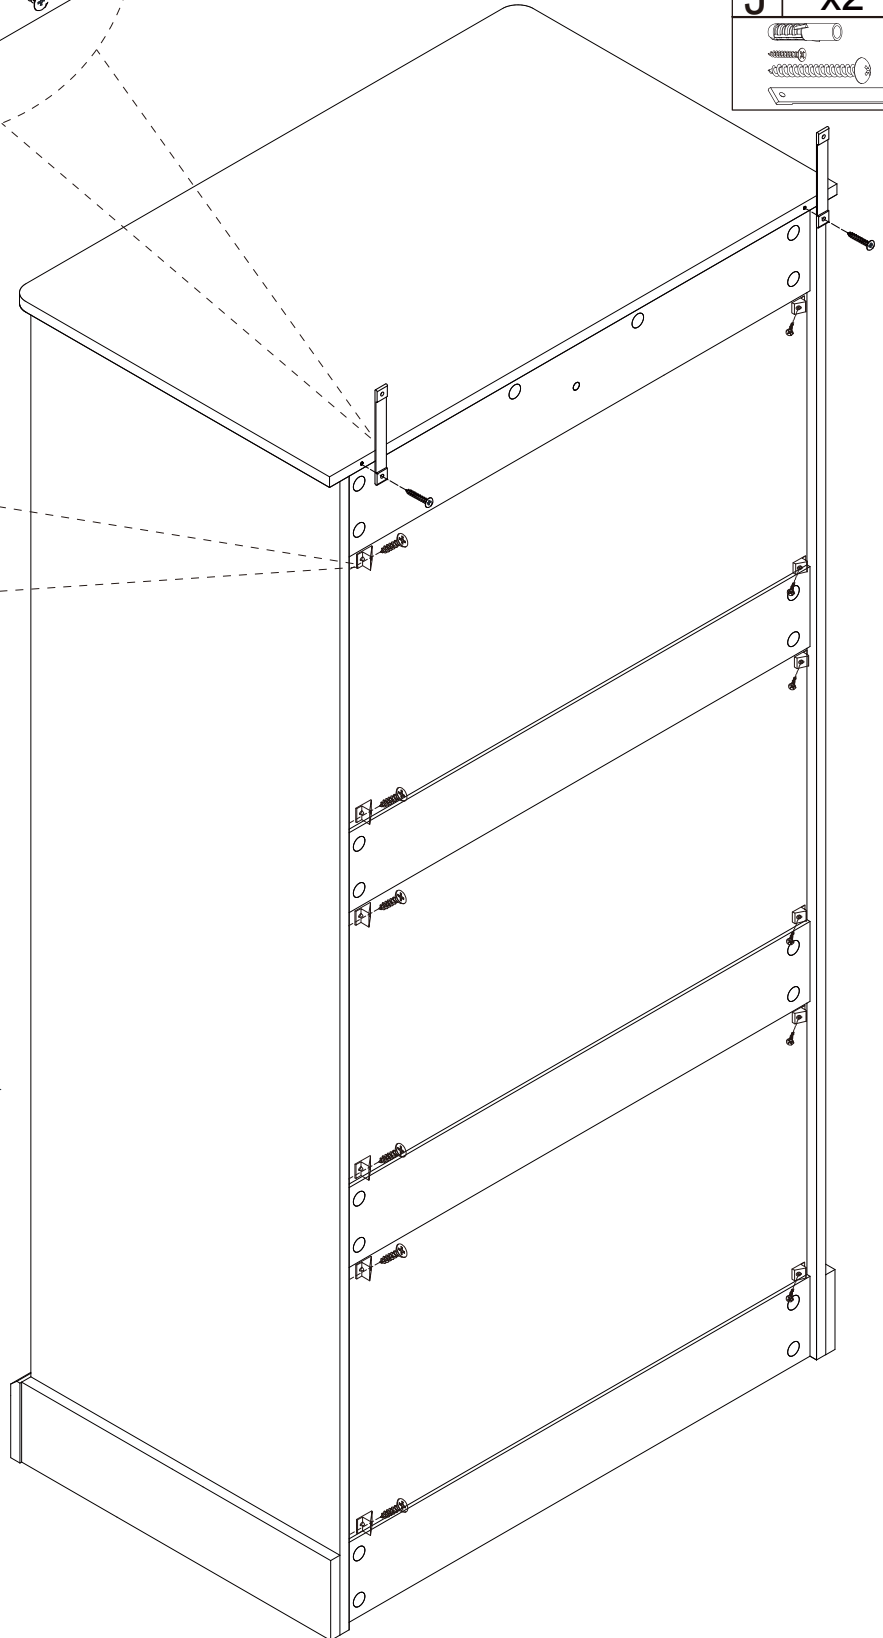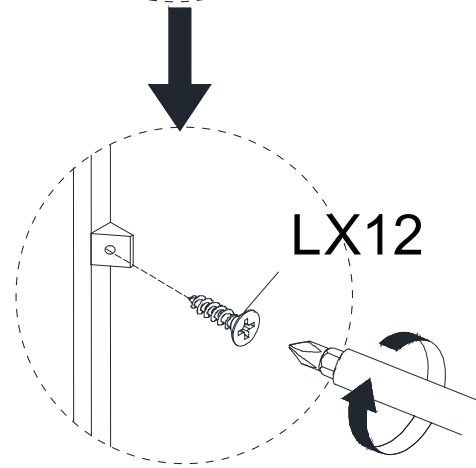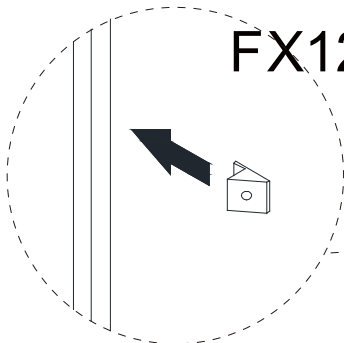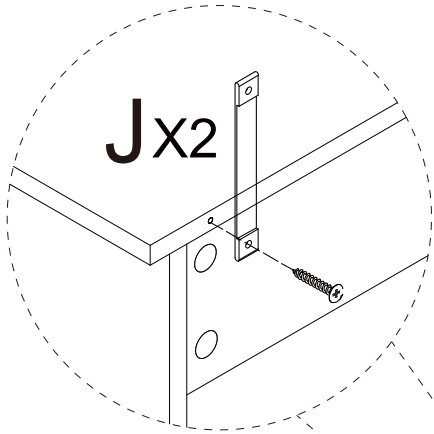- L** x12  

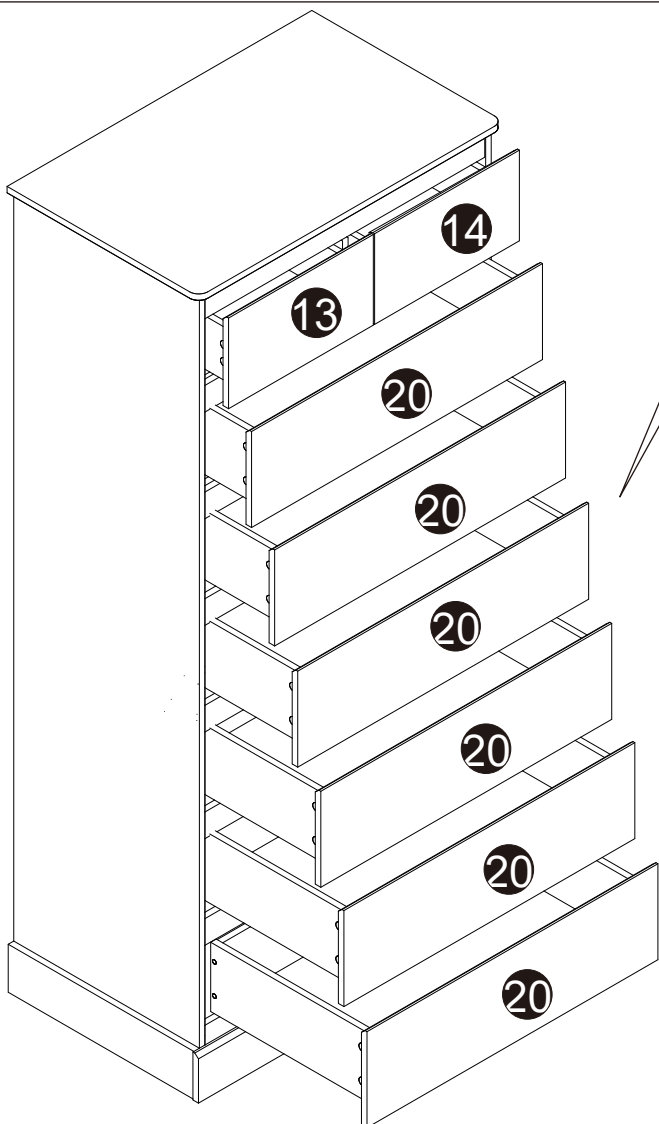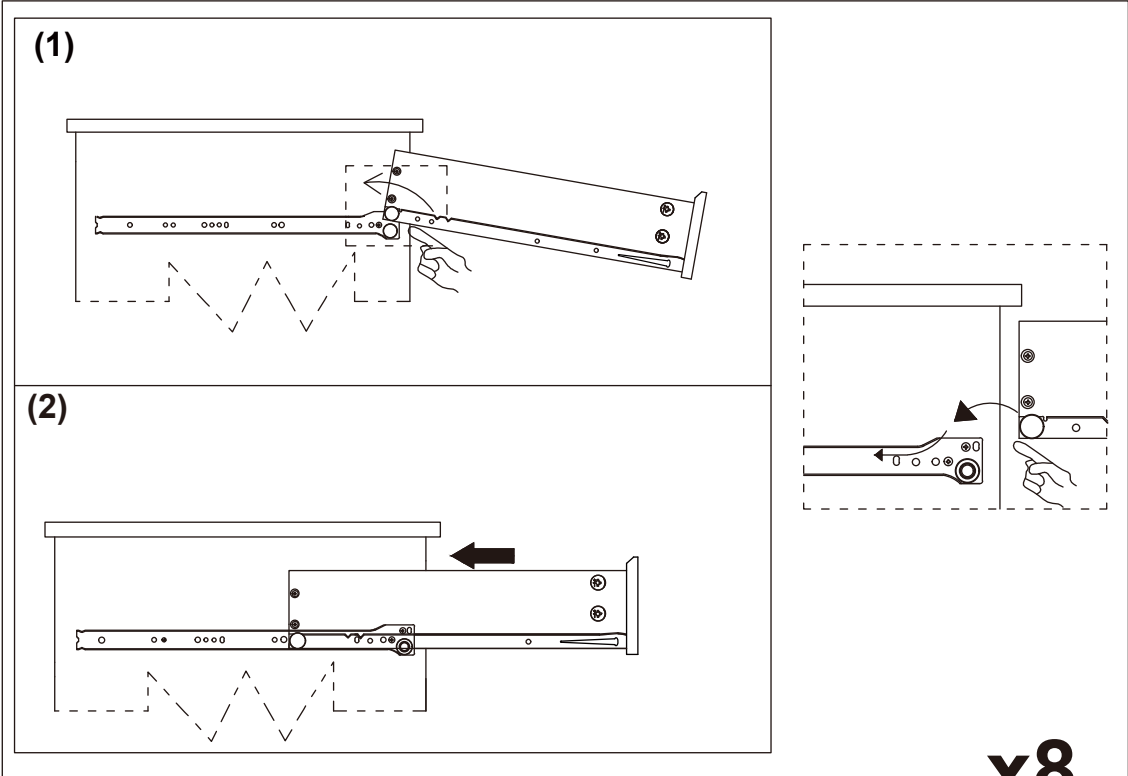- J** x2  


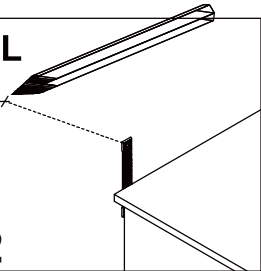




Please pay attention to the drawer number.  
The drawer panel has an installation direction.


J	x2
	
	

**WALL**



**I x2**


**WALL** +  
drilling hole

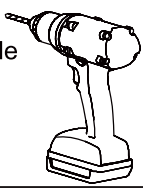

**II x2**

**WALL**

**J**

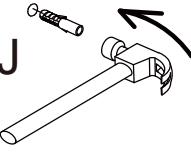

**III x2**

