


ASSEMBLY INSTRUCTIONS

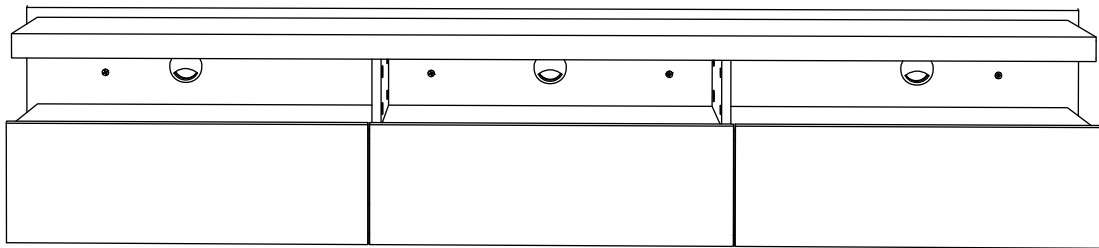


IMPORTANT REMARKS




Never climb or lean on the furniture.
You may suffer serious accidents.



Use the packaging to cover the
assembly area and separate
all parts.

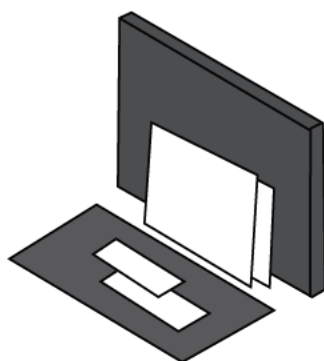

Identify the parts by observing the
number printed on their edges.

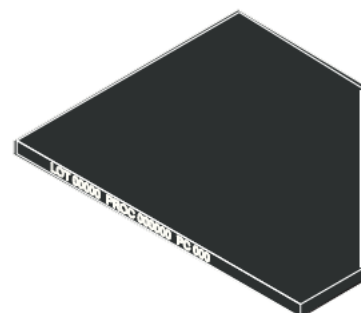


CARE INSTRUCTIONS



Wipe clean using a damp cloth and a mild cleaner.
Do not use abrasive and chemical products.



HANDLING

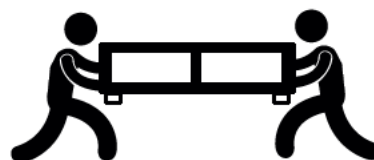


Move the piece carefully, don't drag it. Ask
for someone else's help to do so.

HARDWARE



Identify and separate the hardware used in the assembly. There's a label on each package identifying the parts and where to use them.

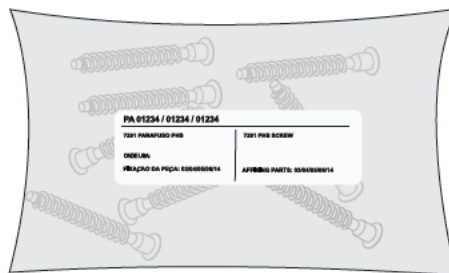

cod. 0599-12x



A

cod. 0494-12x



B

cod. 1533-24x



C

cod. 0160-12x




D

cod. 3557-06x



E

cod. 3706-06x




F

cod. 6533-12x



G

cod. 3527-37x



H

cod. 0338-6x



I

STICKER-12x




J

cod. 1668-54x



K

cod. 9070-6x



L

cod. 0348-1x



M

cod. 4157-06x



N

cod. 2088-08x



O

cod. 4505-4x



P

cod. 6244-04x



Q

cod. 2661-3x







R

WIRE CHANNEL-3x




S

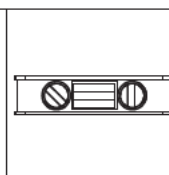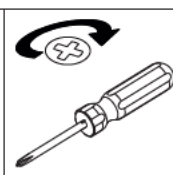
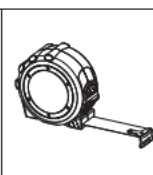
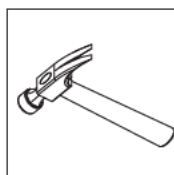


DESCRIPTION







W:71.26 inches H:14.96 inches D: 17.12 inches
 L:1810mm A:380mm P:435 mm

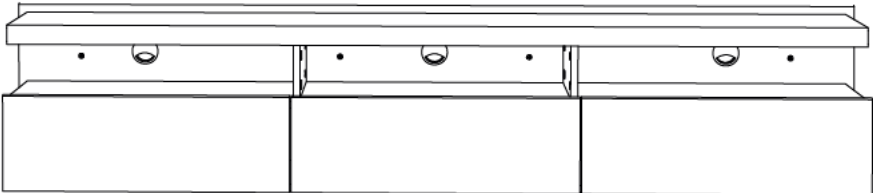


CÓD: 220200			
PART	QUANTITY	DESCRIPTION	BOX
22	01	TOP BOARD	01
23	01	CENTER BOARD	01
24	01	BOTTOM BOARD	01
25	02	UPPER DIVIDER	01
26	02	BOTTOM DIVIDER	02
27	01	LEFT SIDE	01
28	01	RIGHT SIDE	01
37	03	DRAWER FRONT	01
38	06	DRAWER SIDE	02
39	06	DRAWER BACK PANEL	02
40	03	DRAWER BOTTOM	02
41	01	BACKPLATE	01
42	02	SIDE BATTEN	01

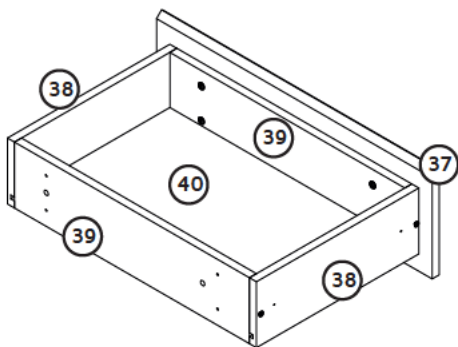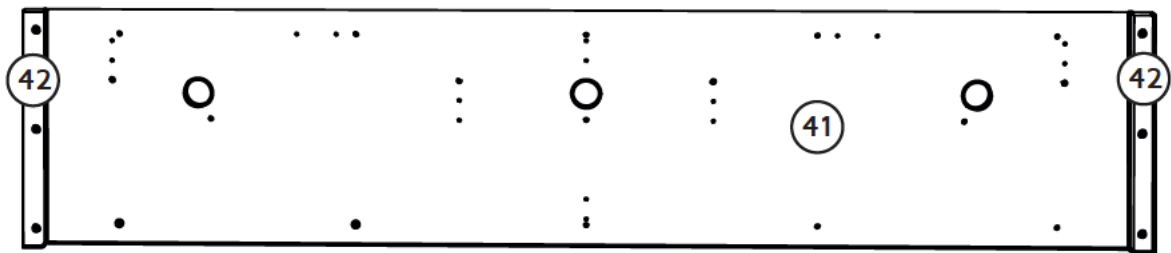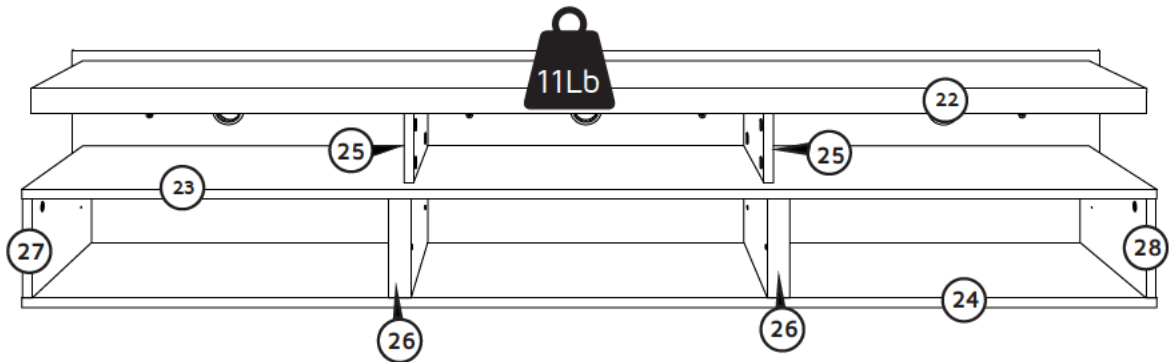


01

 COD. 0599 A	 COD. 0494 B	 COD. 1533 C	 COD. 3527 H	 STICKER J	 COD. 1668 K	 COD. 2661 R
--	--	--	---	--	--	--


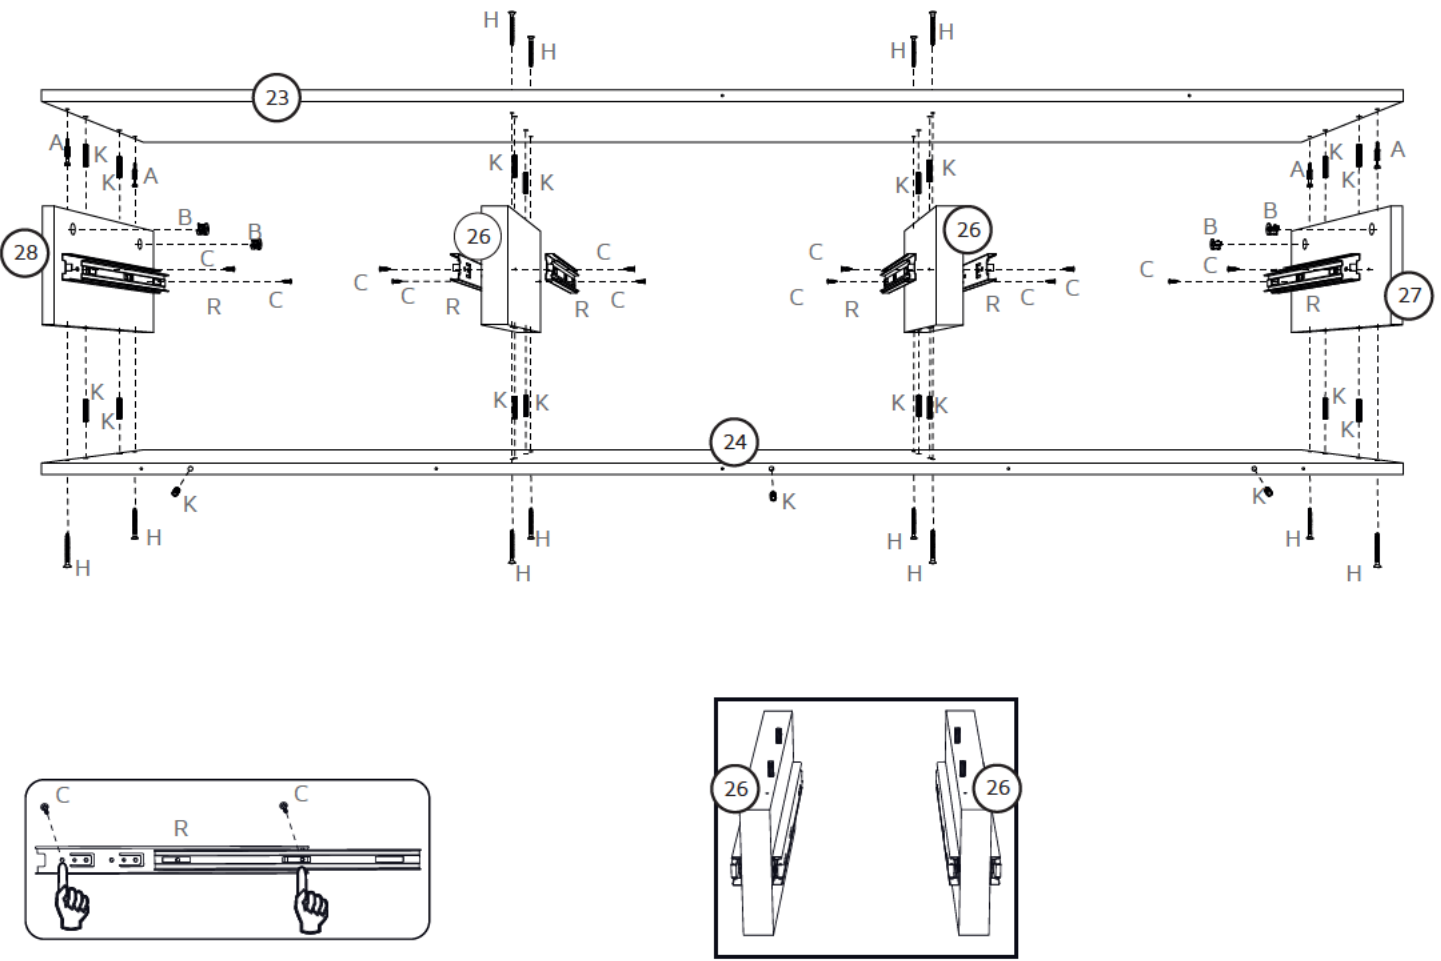


02


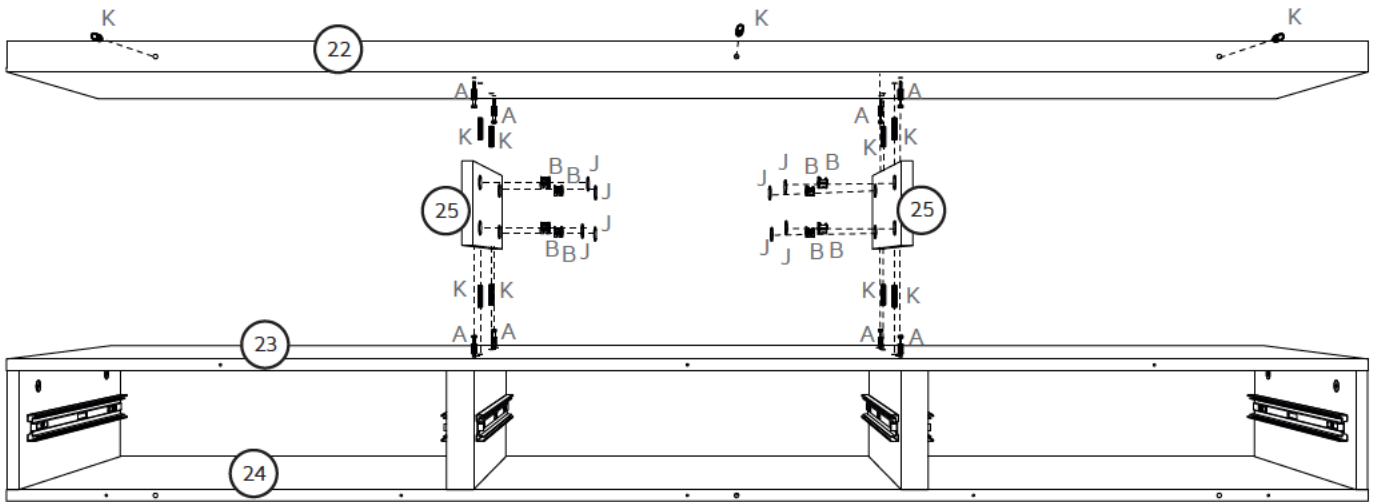


03








cod. 0160	cod. 3557	cod. 3706	cod. 3527	cod. 9070	cod. 0348	cod. 4157
D	E	F	H	L	M	N
						

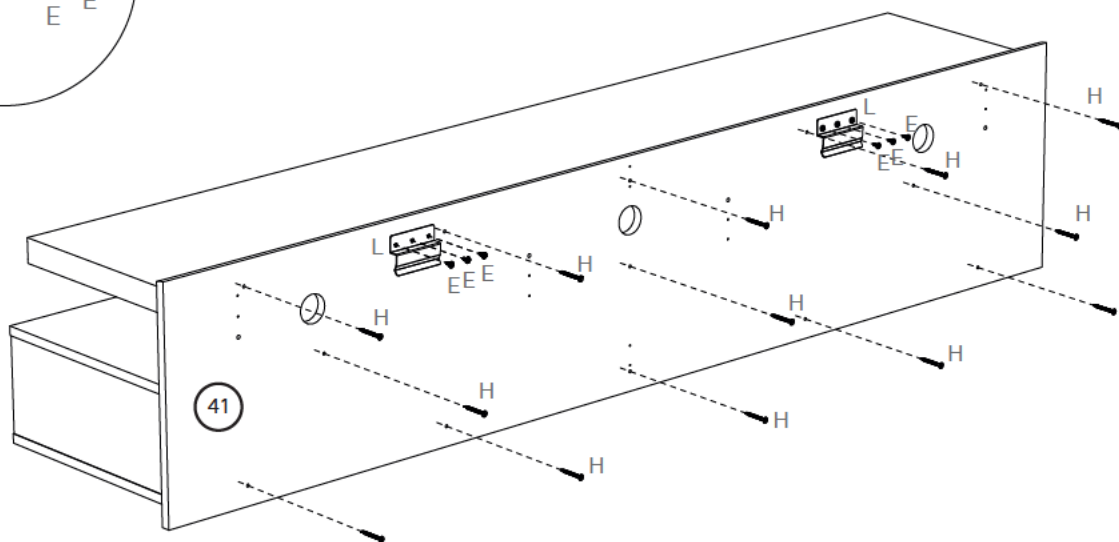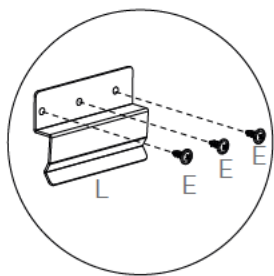


04

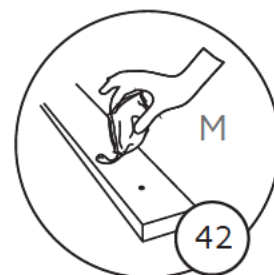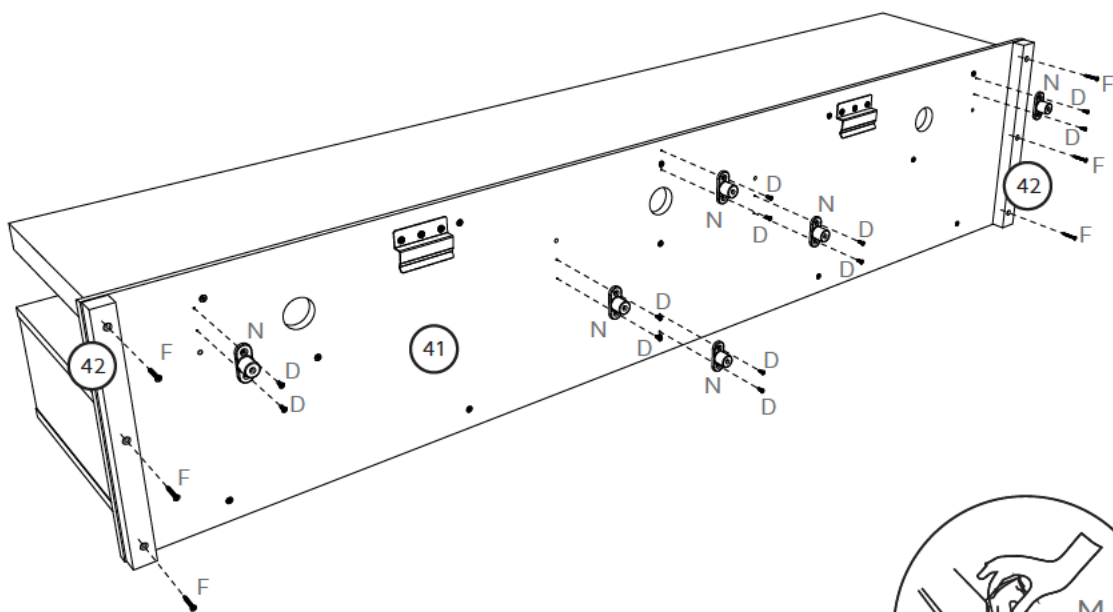


Use the PVA glue before screwing.

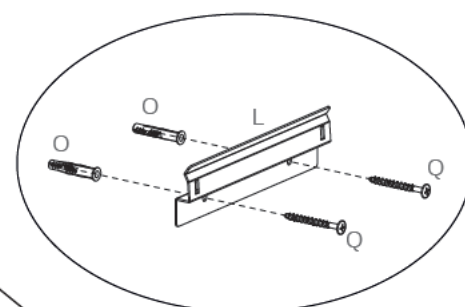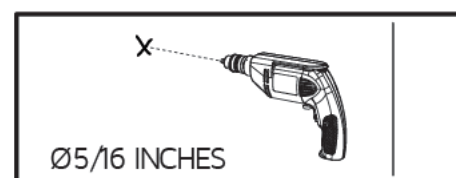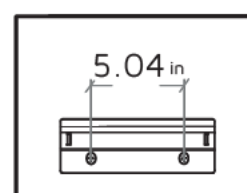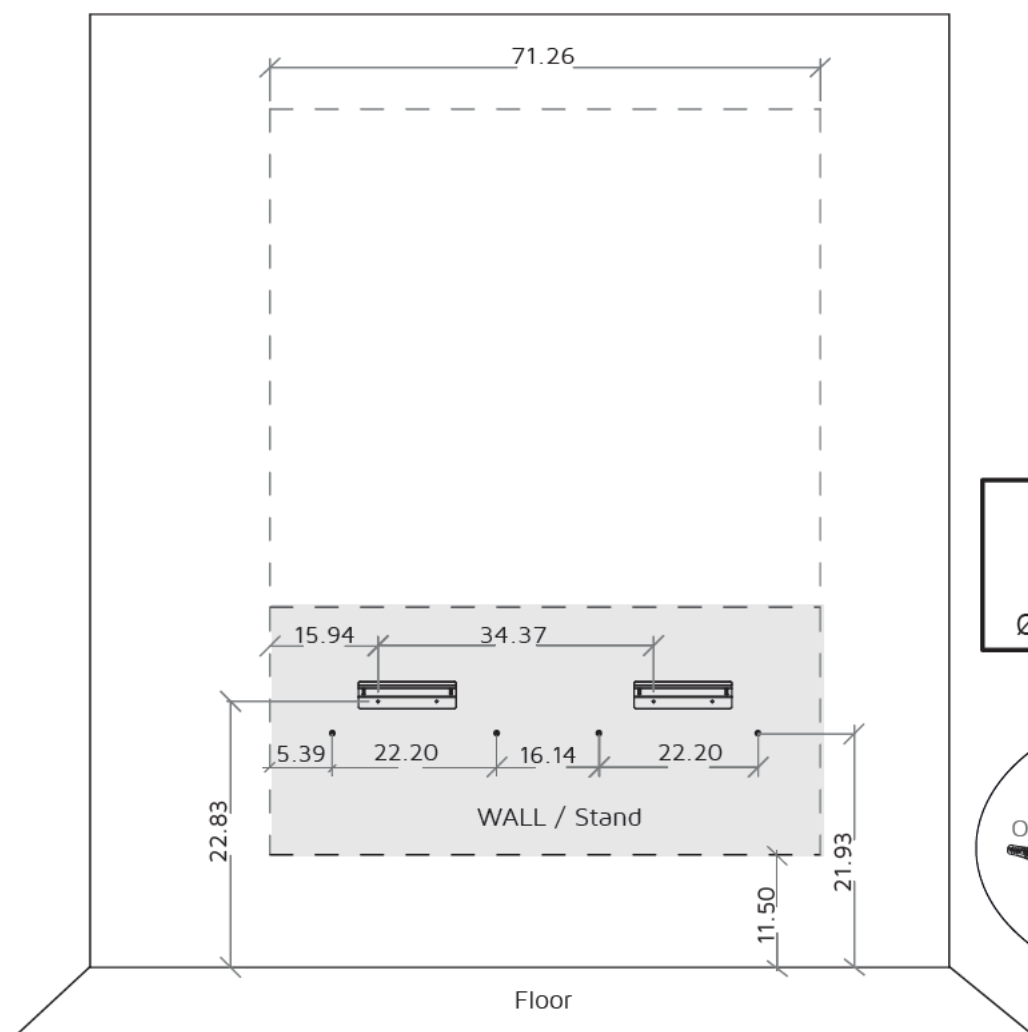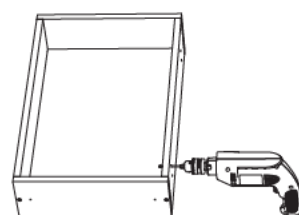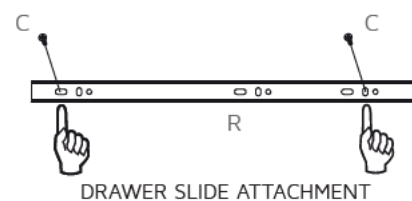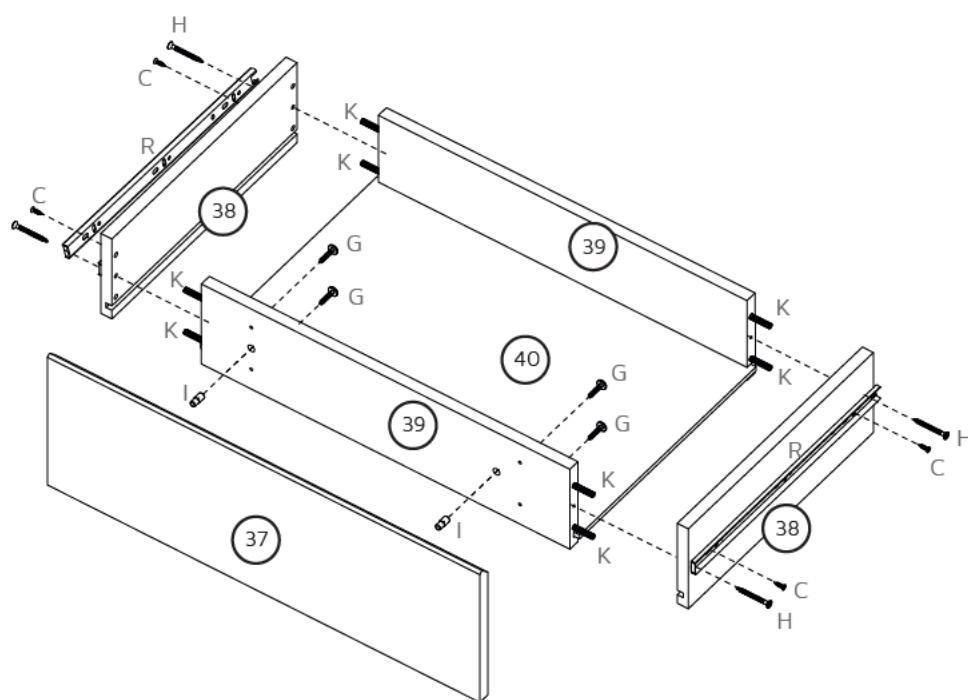


06


COD. 4505	STICKER	WIRE CHANNEL
P	J	S
		

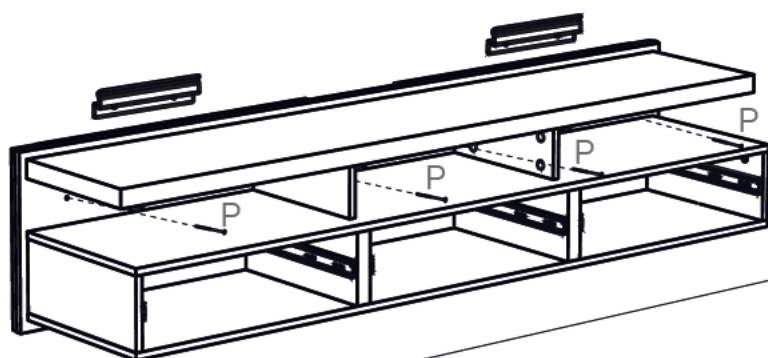**ATTENTION**

Pass the cables through the wire channel before screwing (P)


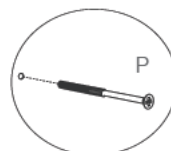


SAFETY SCREW

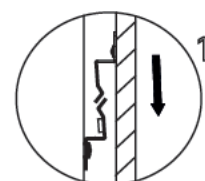

07

DETAIL

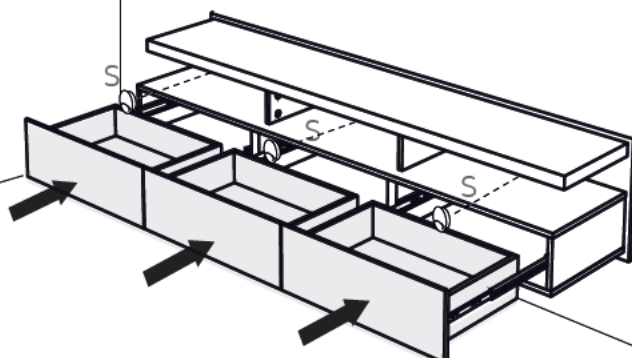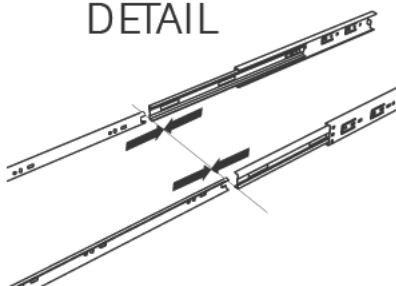

08