
## **INSTALLATION GUIDE**

## STOP, please make sure the cabinet is level before installing the countertop

## HARDWARE COMPONENTS TOOLS Base cabinet · Permanent marker Hardware · Caulking gun Countertop\* Power Drill Wing nuts (4) · Sink basin\* Drywall Screws Bolts (4) Backsplash\* Washers (4) Undermount clips (4) \*Not included in Rase Cabinet products

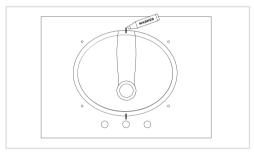


STEP 1 - PLACE & TRACE


Place the sink basin on the bottom of the countertop, making sure to center over the opening. Draw guide lines on the countertop and the basin in two locations.



**STEP 2 -** PREPARE SINK BASIN Using a caulking gun, apply a heavy amount of silicone of your choice on the top side of the sink basin edge.

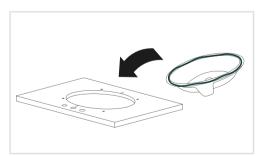


STEP 3 - FLIP & SET IN PLACE
Carefully flip the sink basin over and place it so the quide lines match up in both locations.

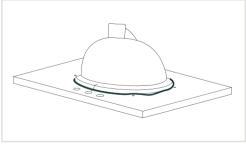

**STEP 4 -** DRY & SET Press down on the sink basin to seal the silicone. Remove any excess. Follow dry time recommendation found on your product, typically 12 to 24 hours.

## **INSTALLATION GUIDE**

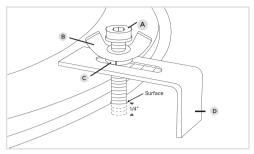


STEP 5 - ATTACH UNDERMOUNT CLIPS
Please tighten Bolt (A) into wing nut (B) slide on washer
(C) and guide through Under-mount clip (D) opening
into threaded bolt hole in the countertop. ONLY-Hand
Tighten Bolt (A) to a depth of about 1/4" below countertop surface. Then secure the Sink with the
under-mount clip (D) by Tightening wing nut (B) only




**STEP 6 -** ATTACH BASE CABINET TO WALL Place cabinet in desired location and determine where the wall studs are.



**STEP 7 -** PREPARE BASE CABINET Using a caulking gun, apply silicone around the top of the base cabinet.

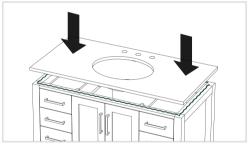

STEP8 - SET COUNTERTOP IN PLACE
Carefully place the countertop, with the sink attached, onto the cabinet and press down firmly.
Wipe away any excess silicone immediately.

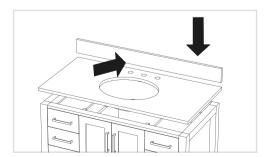

STEP 9 - SET BACKSPLASH

After the vanity is in place, use a caulking gun to apply silicone to the back and bottom unfinished sides of the backsplash. Press firmly down and back to set in place. Remove any excess silicone.