

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED:

Allen wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Turn the cabinet upside down on to a clean, soft surface. Attach four legs to the bottom rail and tighten Hex Nut (A) with Lock washer (B) , Flat washer (C) by Spanner Wrench (D) as shown in Figure 1.

2. Attach the center leg to the bottom. As shown in Figure 2


266-215



266-130



266-131

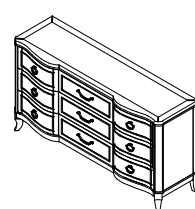


266-420



266-421



Figure 1

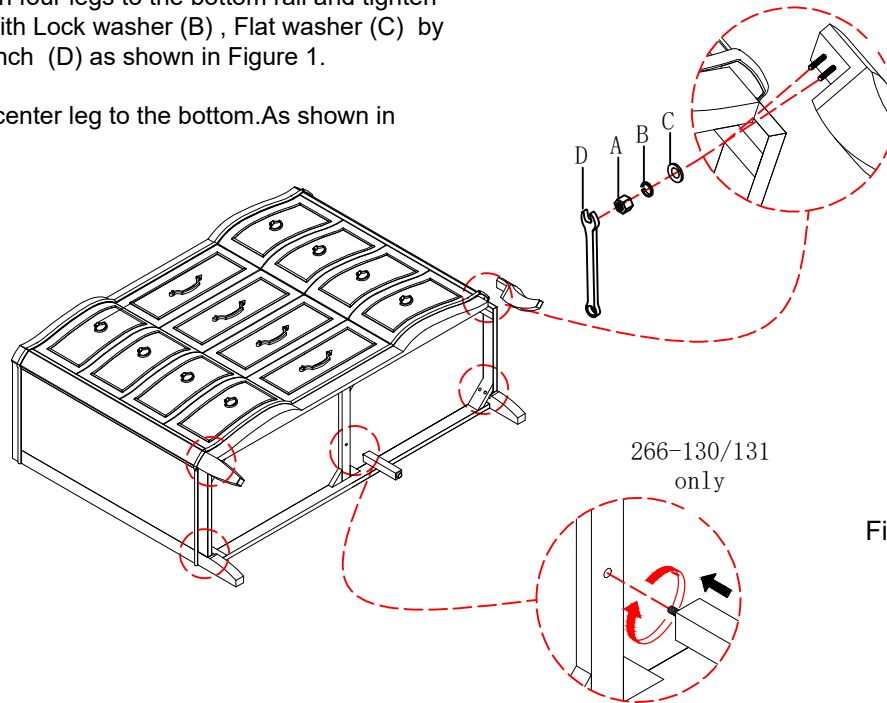

266-130/131
only

Figure 2

No.		Hardware List	Q' ty
A		Hex nut (Ø5/16"*12mm)	8pcs
B		Lock Washer (Ø5/16")	8pcs
C		Flat Washer (Ø5/16"*19*1.5mm)	8pcs
D		Spanner Wrench (Ø12mm*160mmL)	1pc

Thank you for purchasing furniture
from american drew!