


Installation Instruction

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

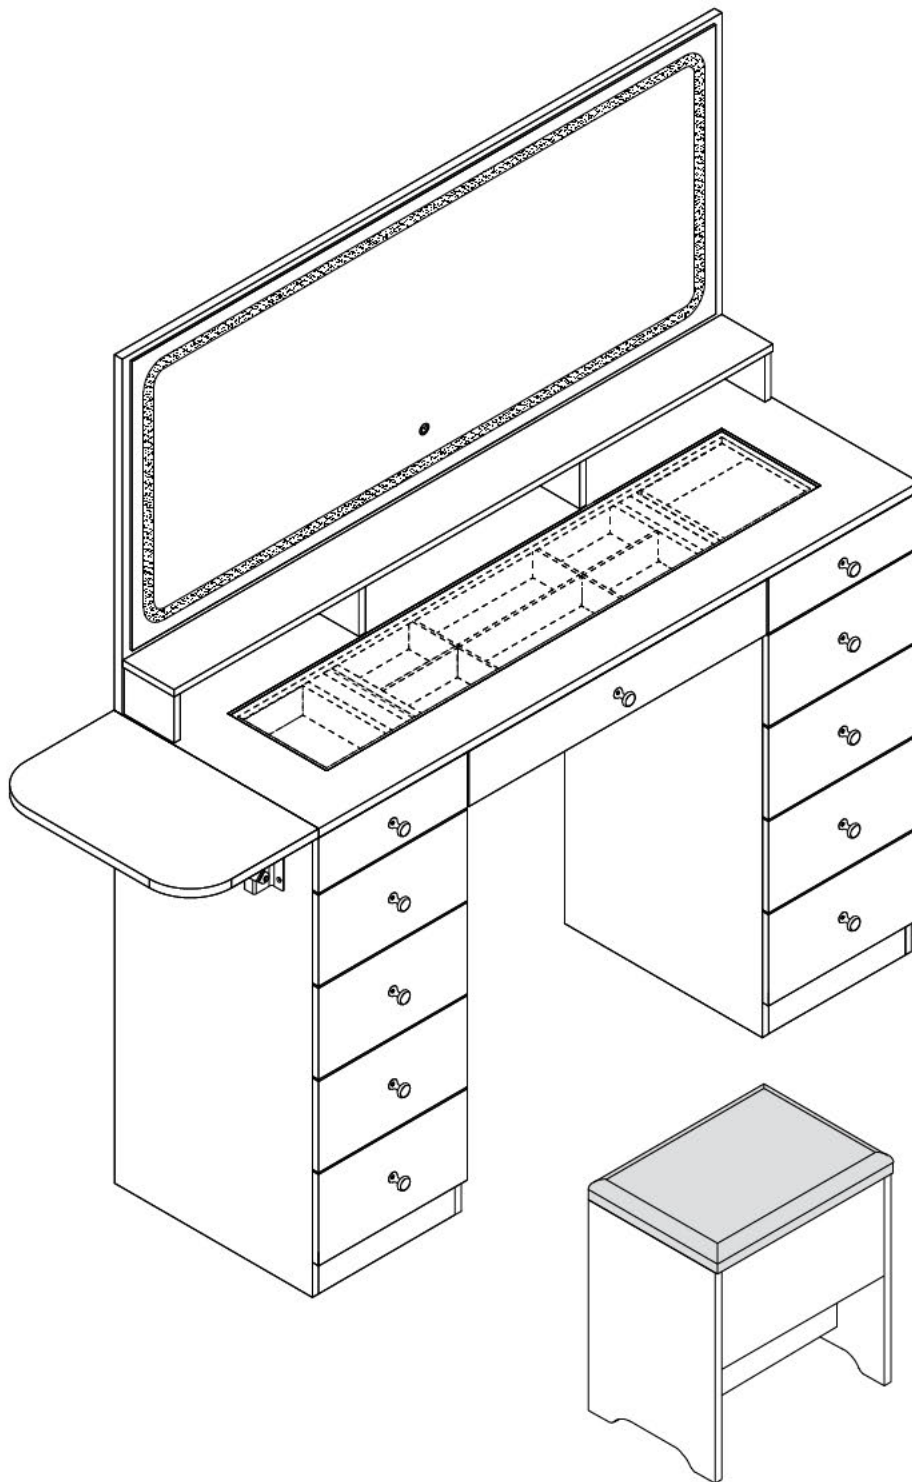


























Please carefully review the following precautions before proceeding with the installation:



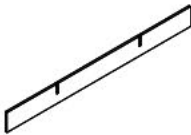

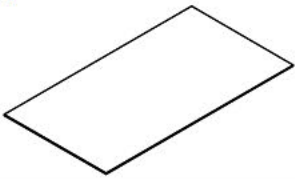

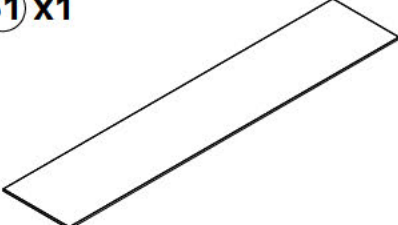
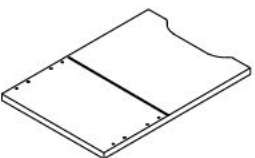
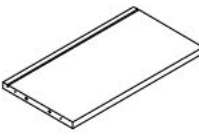
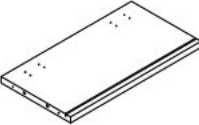
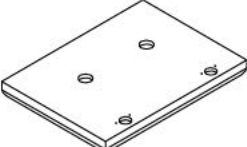
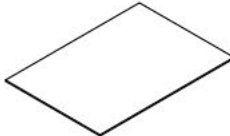


- 1. The installation process for this product is complex, and it is highly recommended to have at least two individuals working together during the installation.**
- 2. Prior to each step, please refer to the screw hole positions to ensure that the board is aligned correctly according to the images provided in the instruction manual. This will help prevent any errors.**
- 3. In case power tools are used for installation, it is important to tighten the screws intermittently rather than applying excessive force continuously. This precaution will help avoid potential cracks around the screw holes.**
- 4. If you encounter any difficulties or issues during the assembly process, please don't hesitate to reach out to us via email or Amazon message. We assure you that we will address your concerns and provide a solution within 24 hours.**

Thank you for your attention to these important instructions.

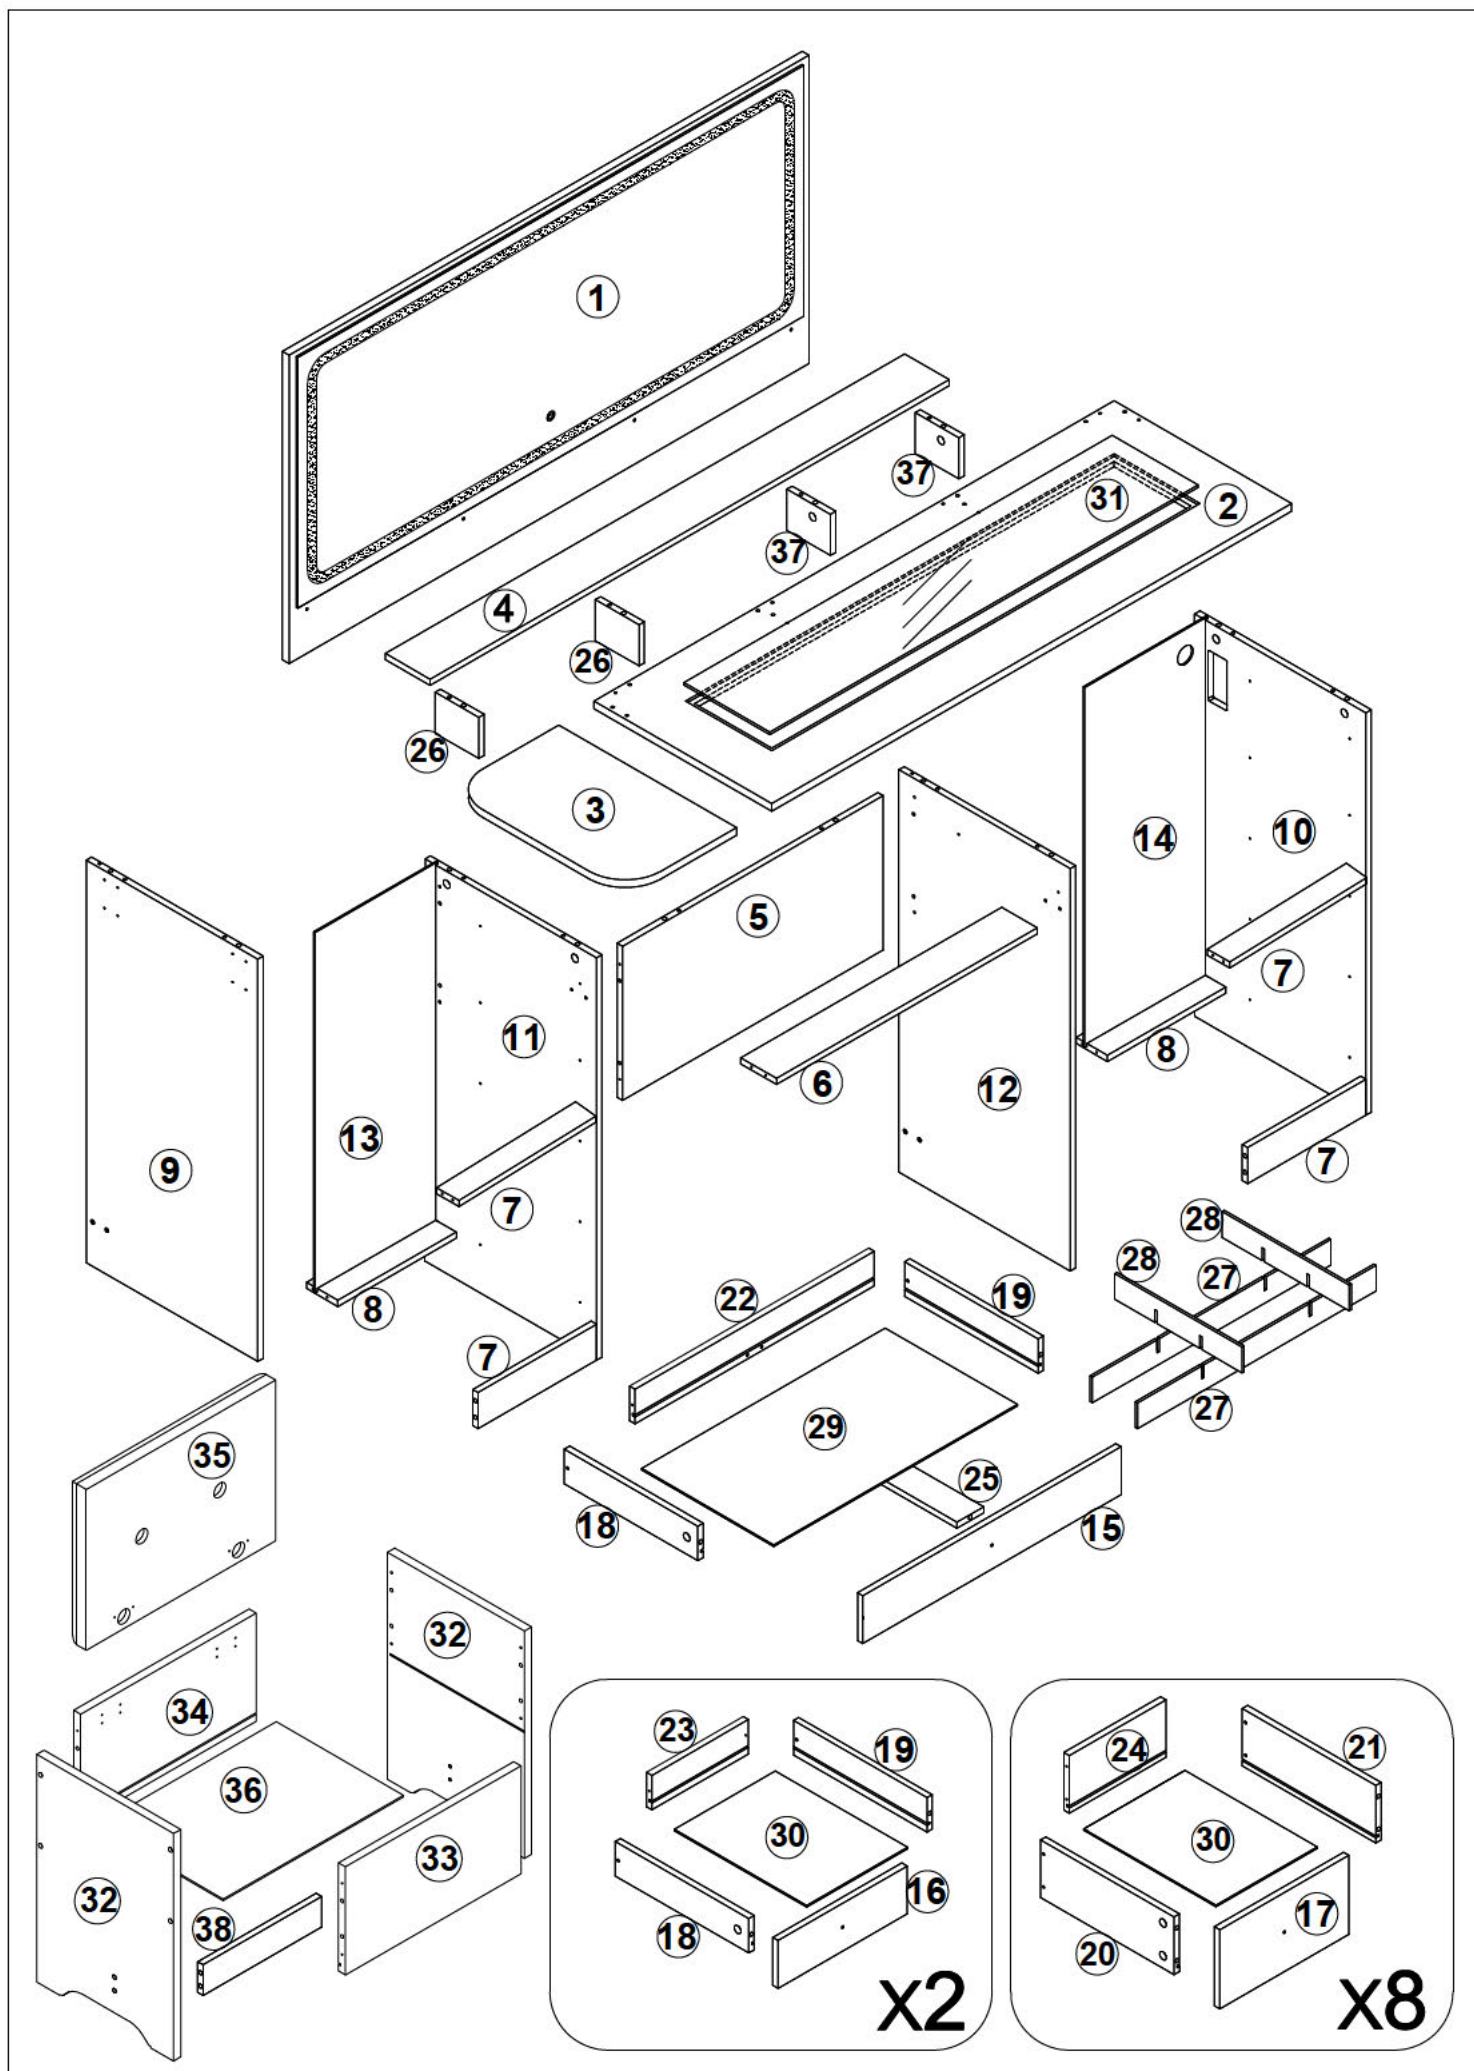





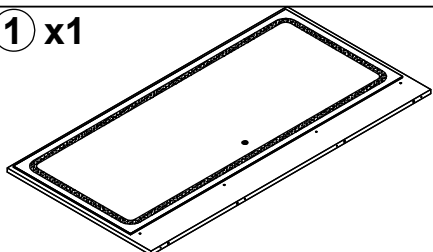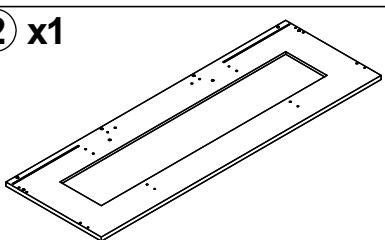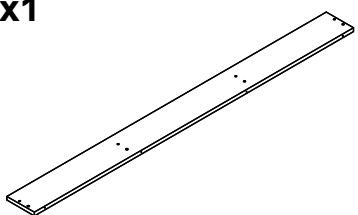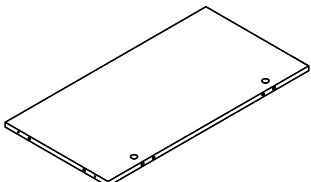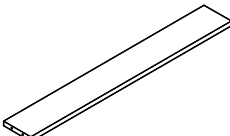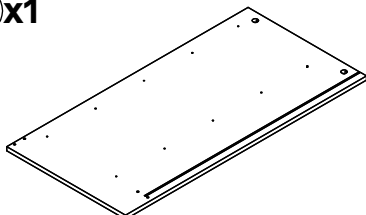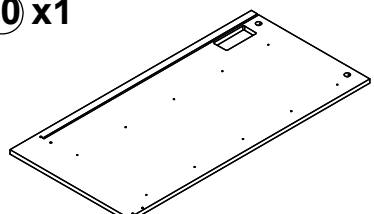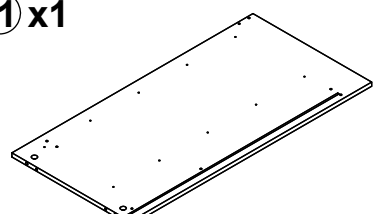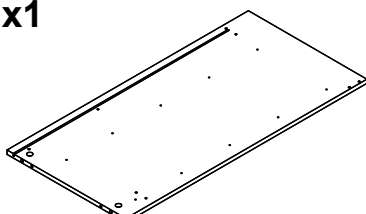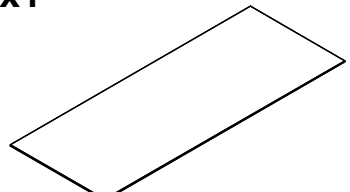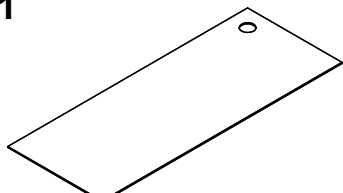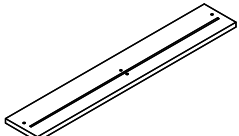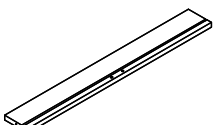























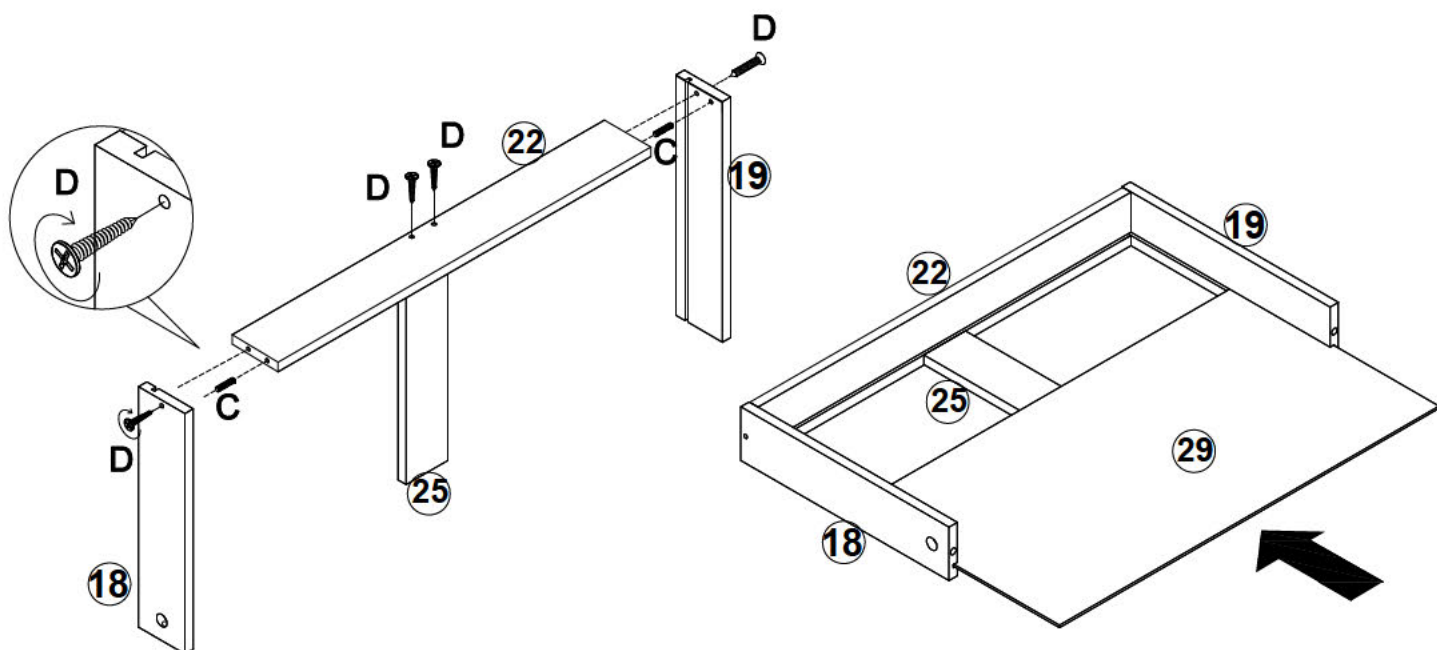
① x1 	② x1 	③ x1 
④ x1 	⑤ x1 	⑥ x1 
⑦ x4 	⑧ x2 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x1 
⑯ x2 	⑰ x8 	⑱ x3 
⑲ x3 	⑳ x8 	㉑ x8 
㉒ x1 	㉓ x2 	㉔ x8 



25 x1 	26 x2 	27 x2 
28 x2 	29 x1 	30 x10 
31 x1 	32 x2 	33 x1 
34 x1 	35 x1 	36 x1 
37 x2 	38 x1 	

Hardware



A x69 +5(spare)  Ø6x35mm	B x69 +5(spare)  Ø15x10mm	C x40 +5(spare)  Ø6x30mm	D x80 +5(spare)  Ø4x35mm	E x149 +5(spare)  Ø3.5x10mm	F x20  Ø20mm
G x11 	H x11 +2(spare)  Ø4x14mm	I x1 	J x1 	K x2 	L1 x2  Ø4x14mm
L2 x2  Ø6x30mm	M x2 	N x2 	O x1 	P x1 	Q x8 
R x8  Ø3x14mm	S x12 +2(spare)  Ø4x14mm	T x1 	U x2  Ø4x35mm	CL x11  L300mm	CR x11  L300mm
DL x11  L300m	DR x11  L300m				



1



C	x2	D	x4
			
Ø6x30mm		Ø4x35mm	

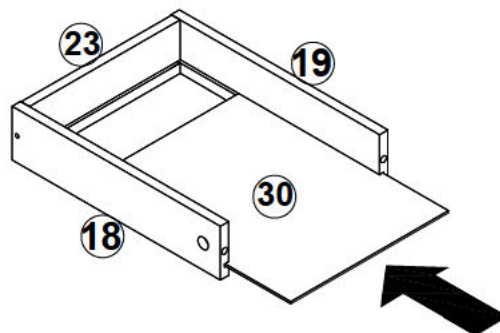
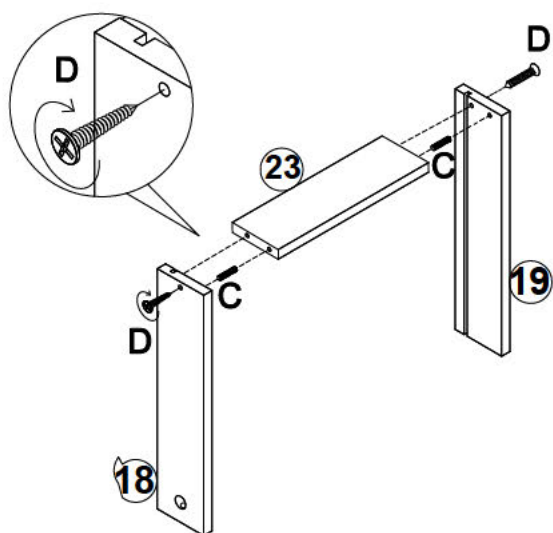
2




C	x4	D	x4
			
Ø6x30mm		Ø4x35mm	

x2


3

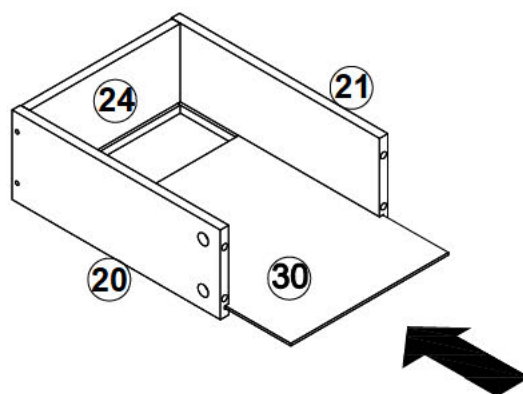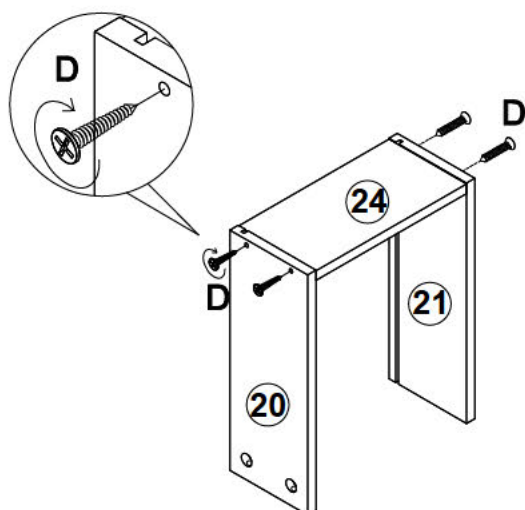


x8

D	x32
	
Ø4x35mm	


4

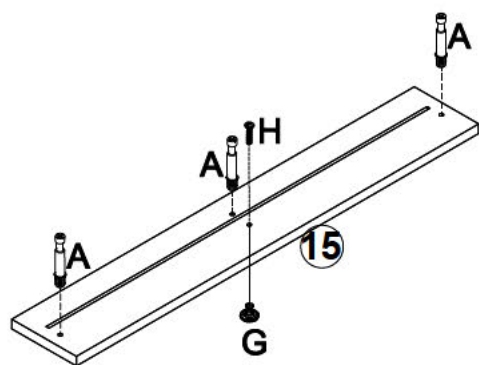


x1

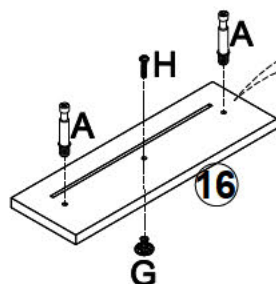

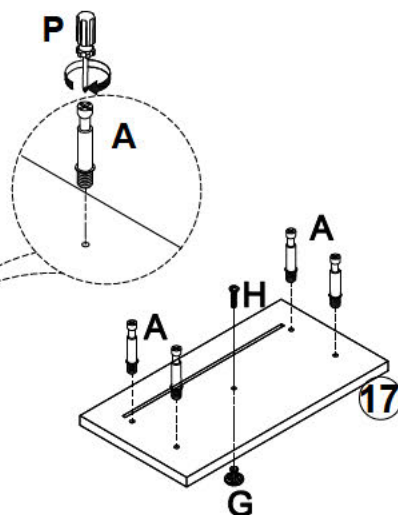

x2

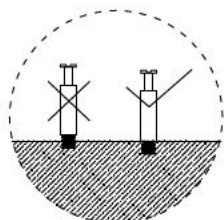


x8






A	x39
	
Ø6x35mm	

G	x11
	



H	x11
	
Ø4x16mm	

5

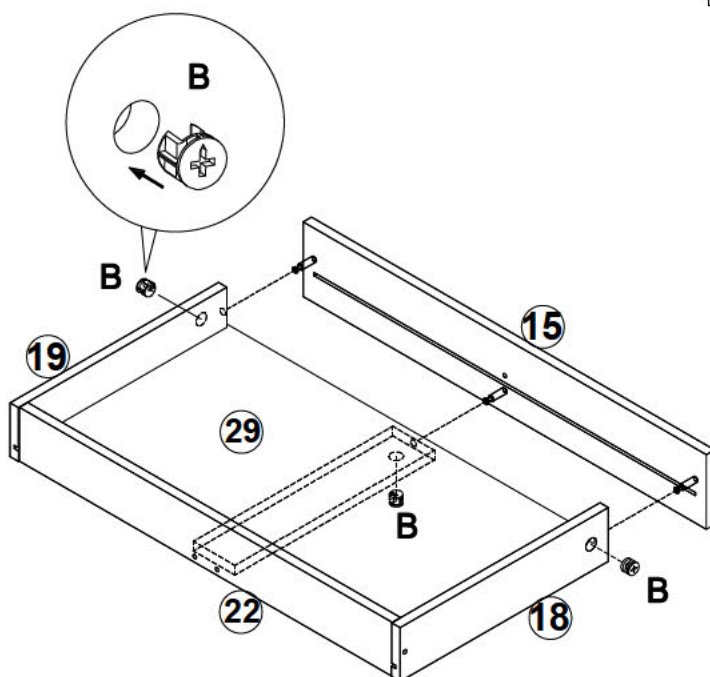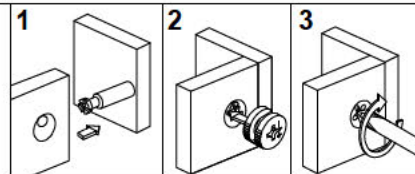


B	x3
	
Ø15x10mm	


6

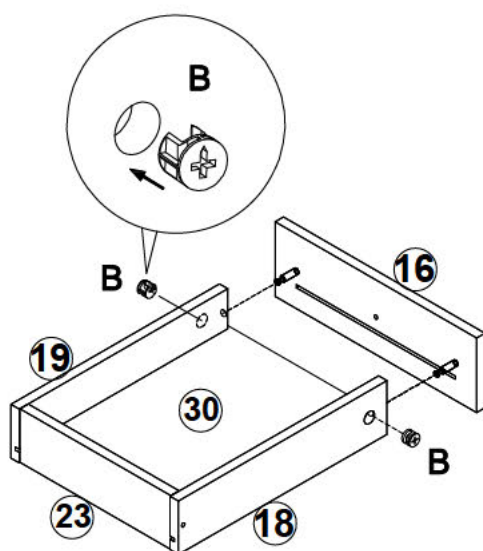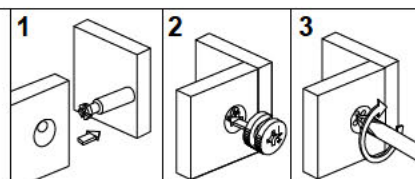


x2

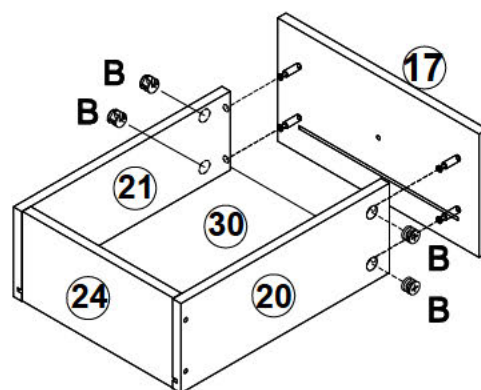


x8

B	x36
	
Ø15x10mm	

7

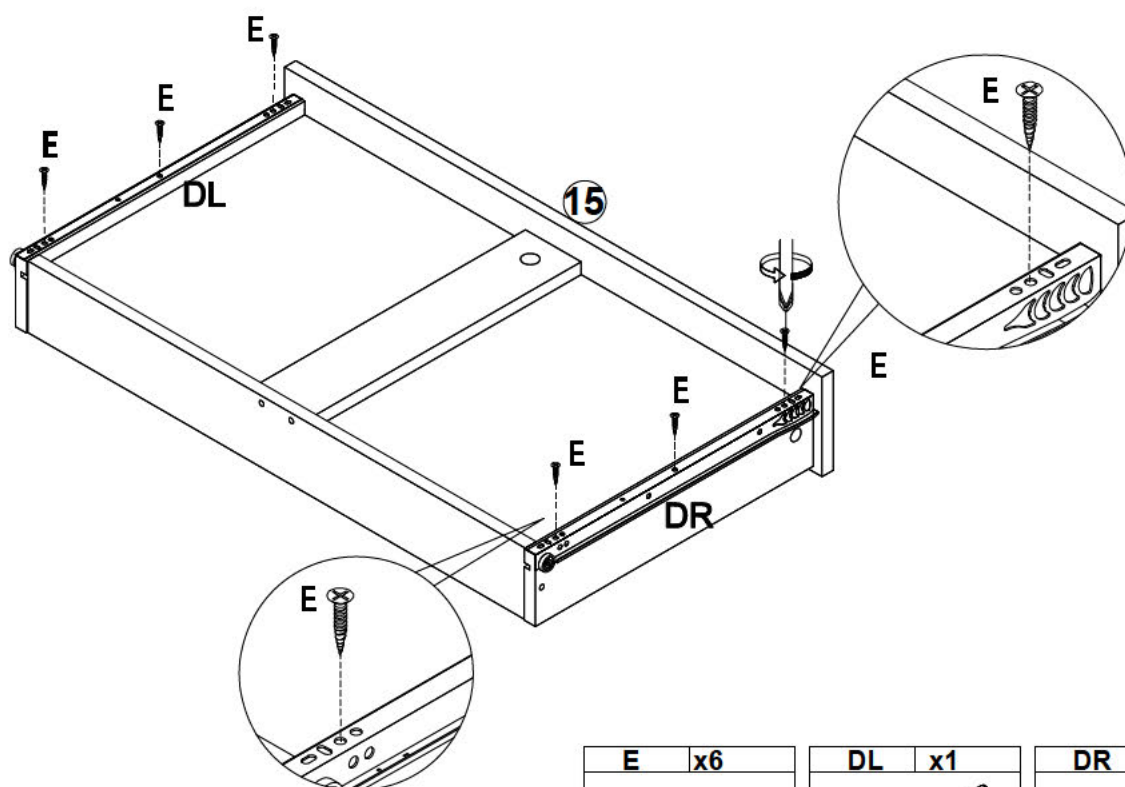



E	x6
	
Ø3.5x10mm	

DL	x1
	
L300mm	

DR	x1
	
L300mm	

8

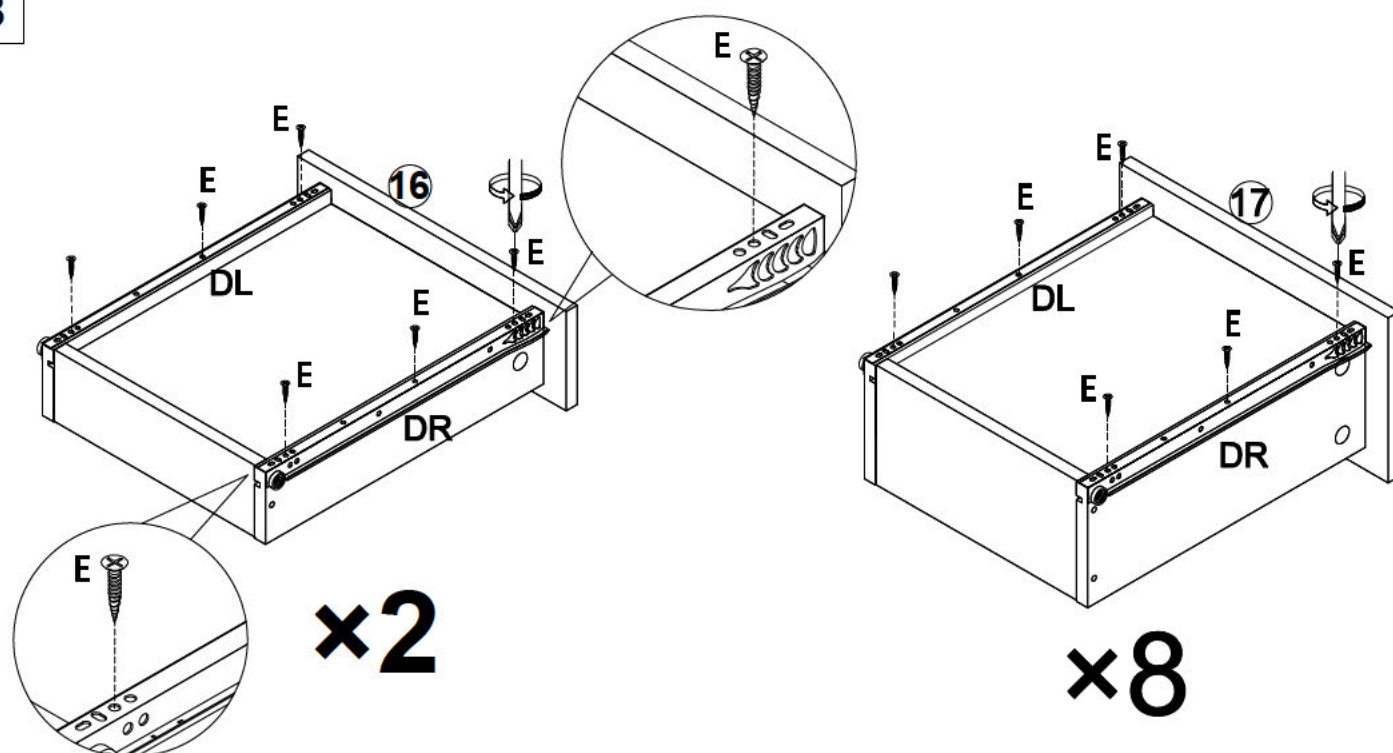




E	x60
	
Ø3.5x10mm	

DL	x10
	
L300mm	

DR	x10
	
L300mm	

[illegible]

11

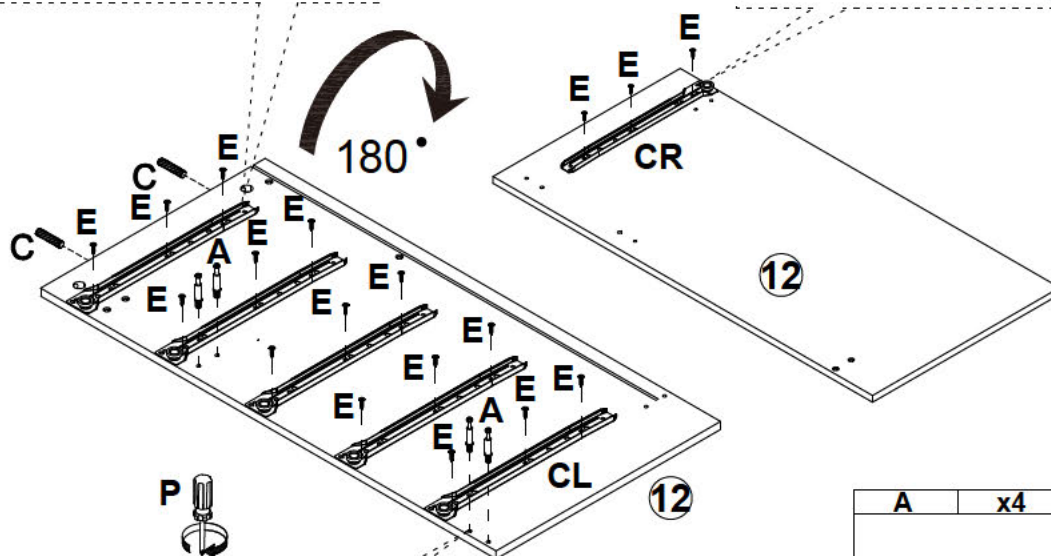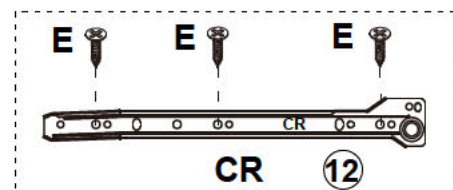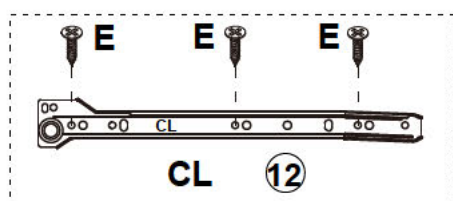

E	x 18
Ø3.5x10mm	




A	x4
Ø6x35mm	

CL	x5
L300mm	

C	x2
Ø6x30mm	

CR	x1
L300mm	

12

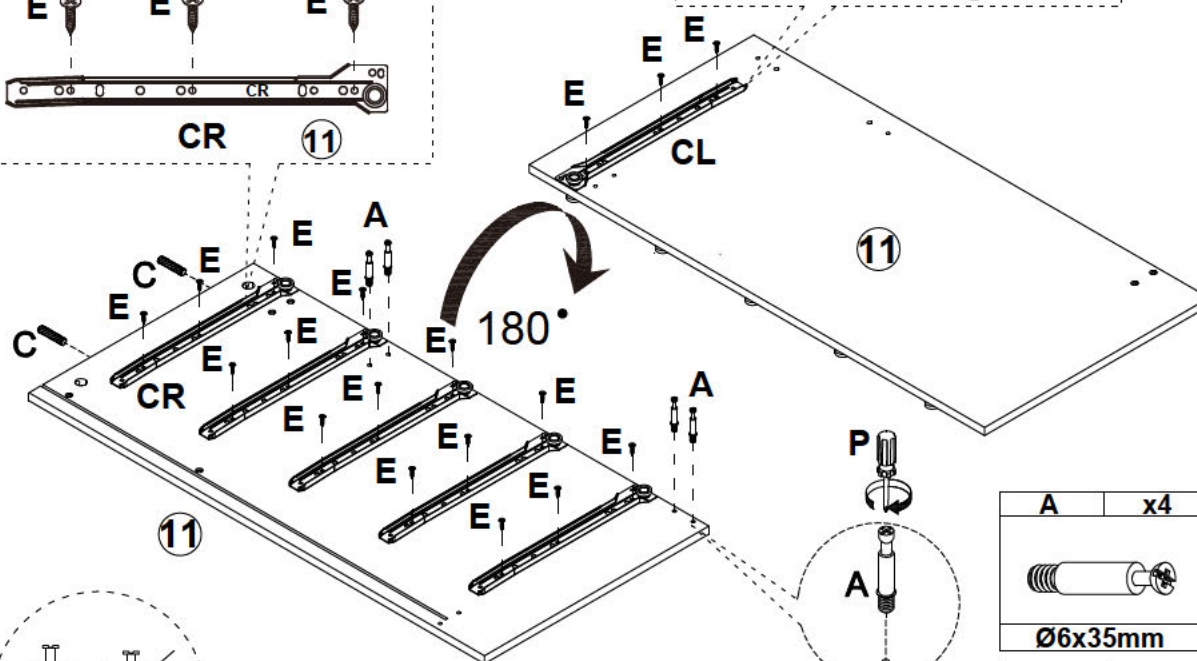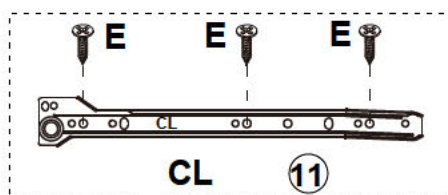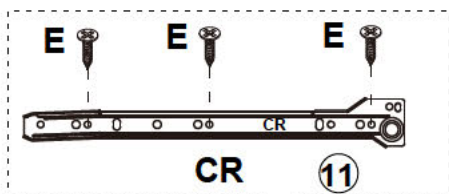

E	x 18
Ø3.5x10mm	

A	x4
Ø6x35mm	


CL	x1
L300mm	

C	x2
Ø6x30mm	




CR	x5
L300mm	



13

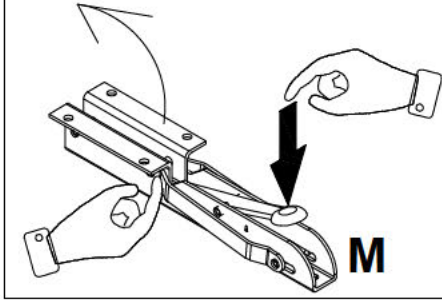(1) x2

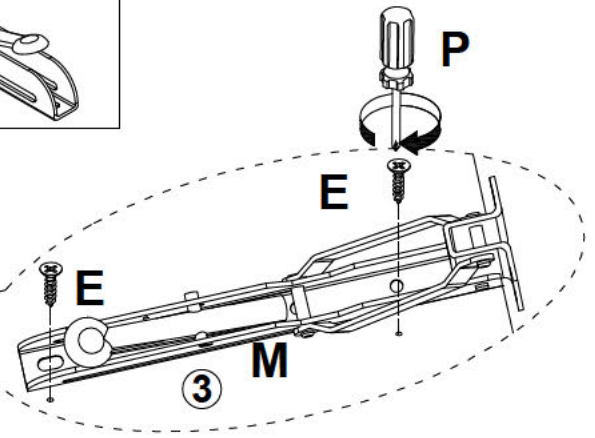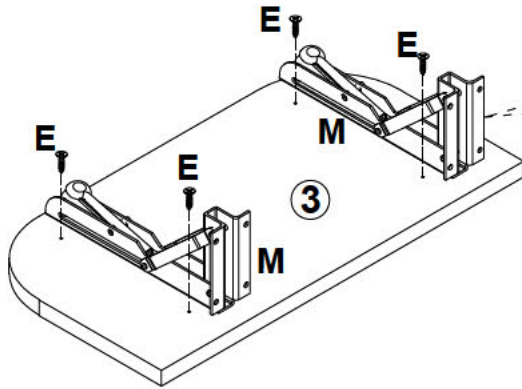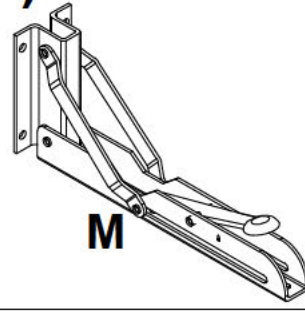



(2) x2






M	x2	E	x4
			
		Ø3.5x10mm	

14

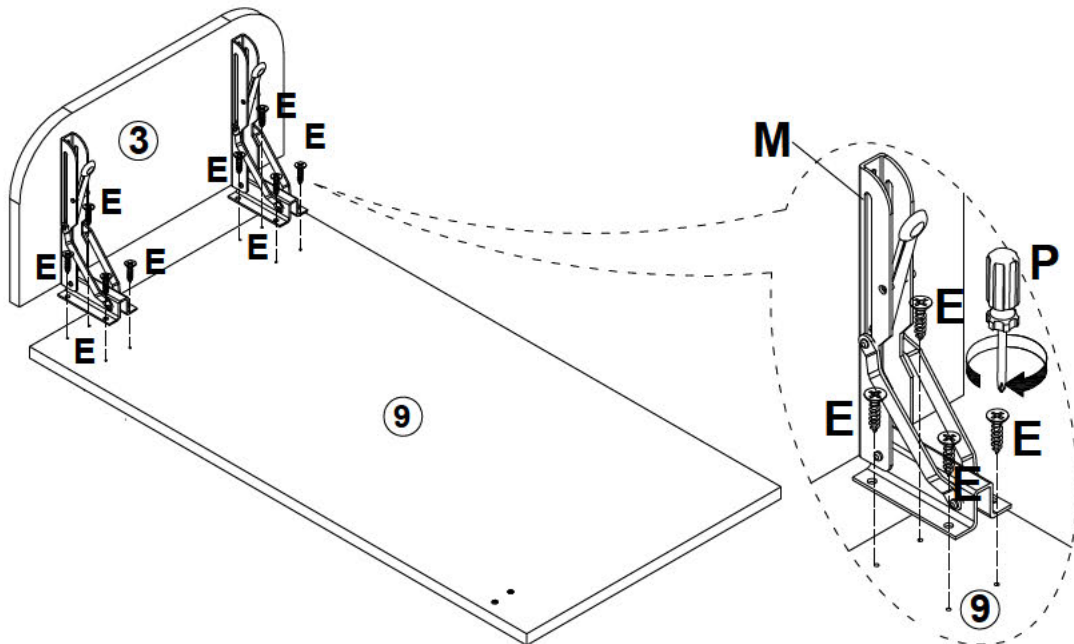




E	x8
	
Ø3.5x10mm	

15

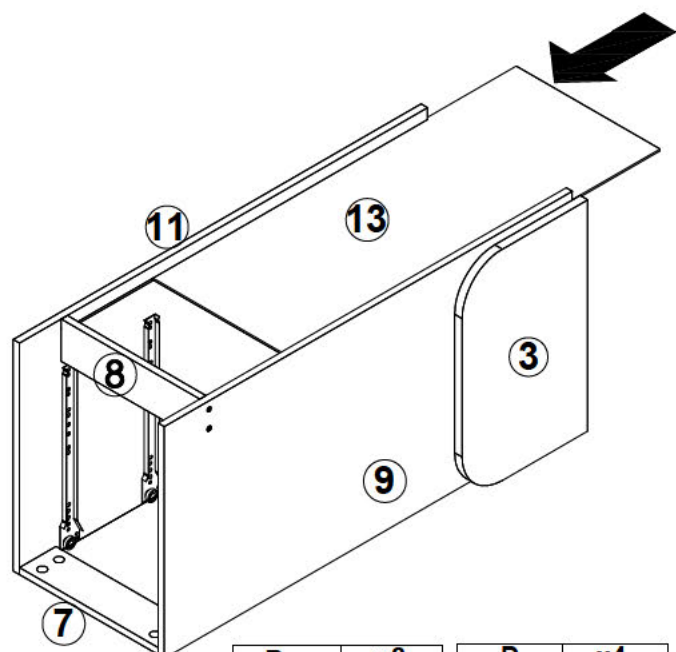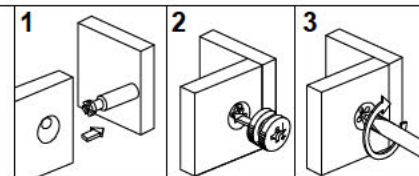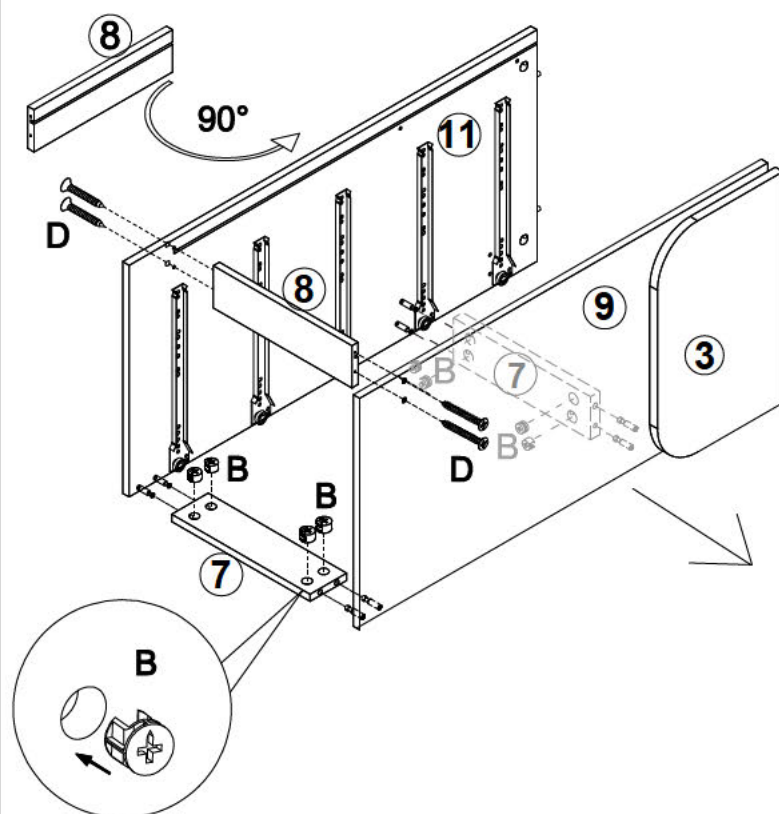


B	x8	D	x4
Ø15x10mm		Ø4x35mm	

16

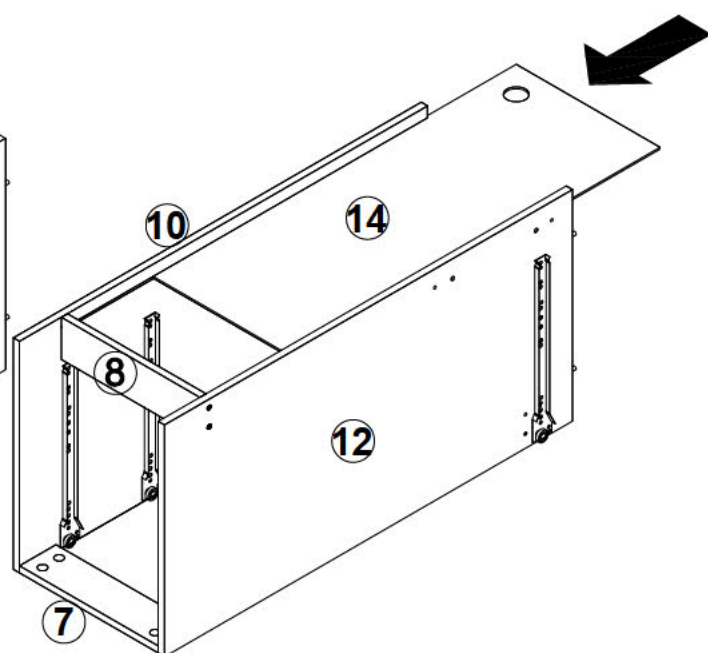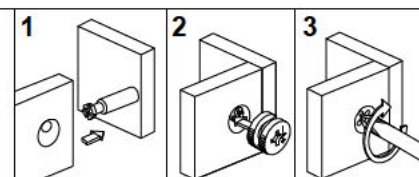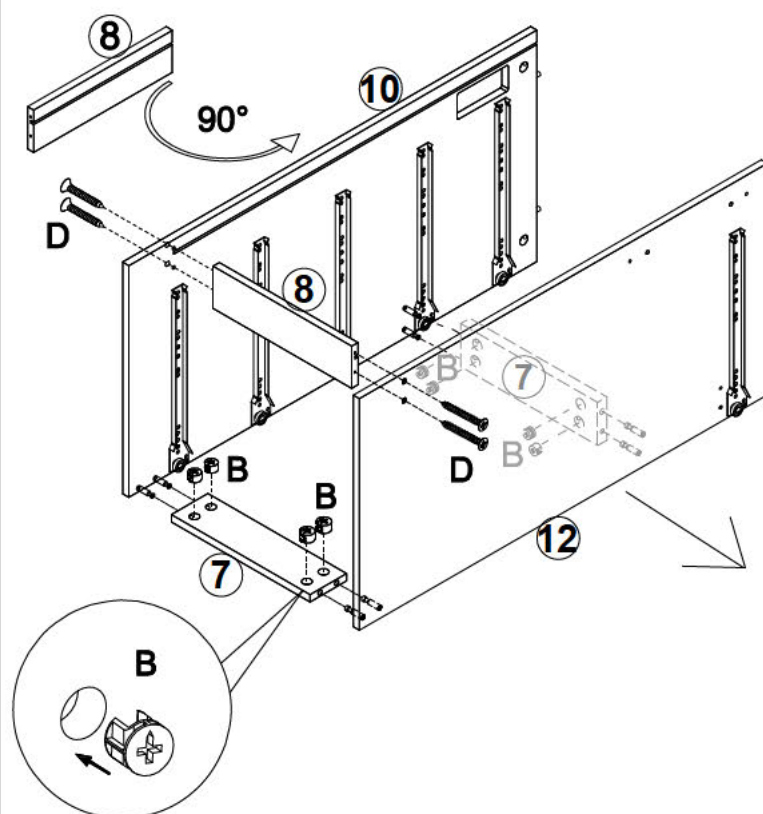

B	x8	D	x4
Ø15x10mm		Ø4x35mm	



17

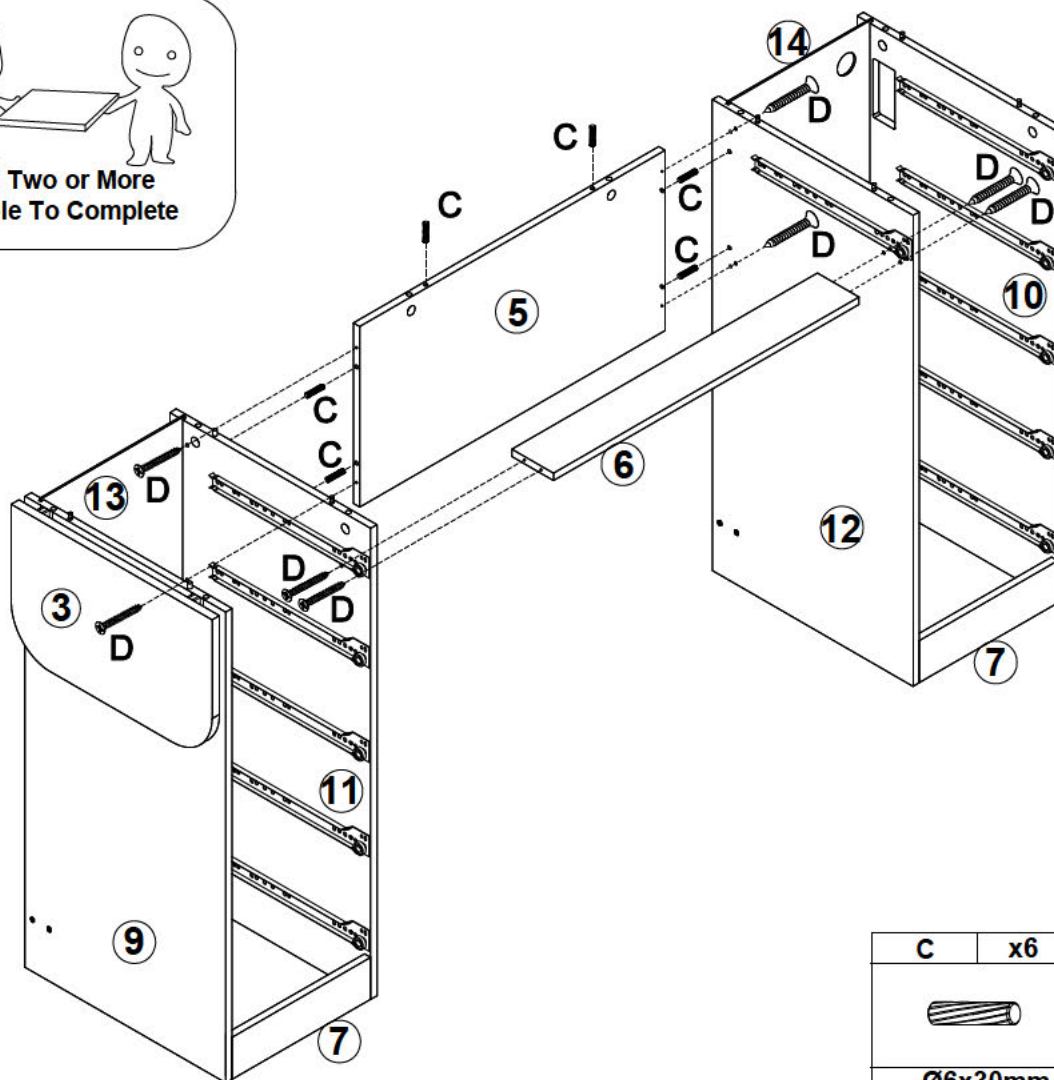

C	x6
Ø6x30mm	

D	x8
Ø4x35mm	

18

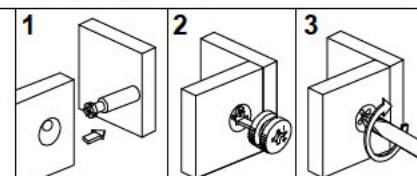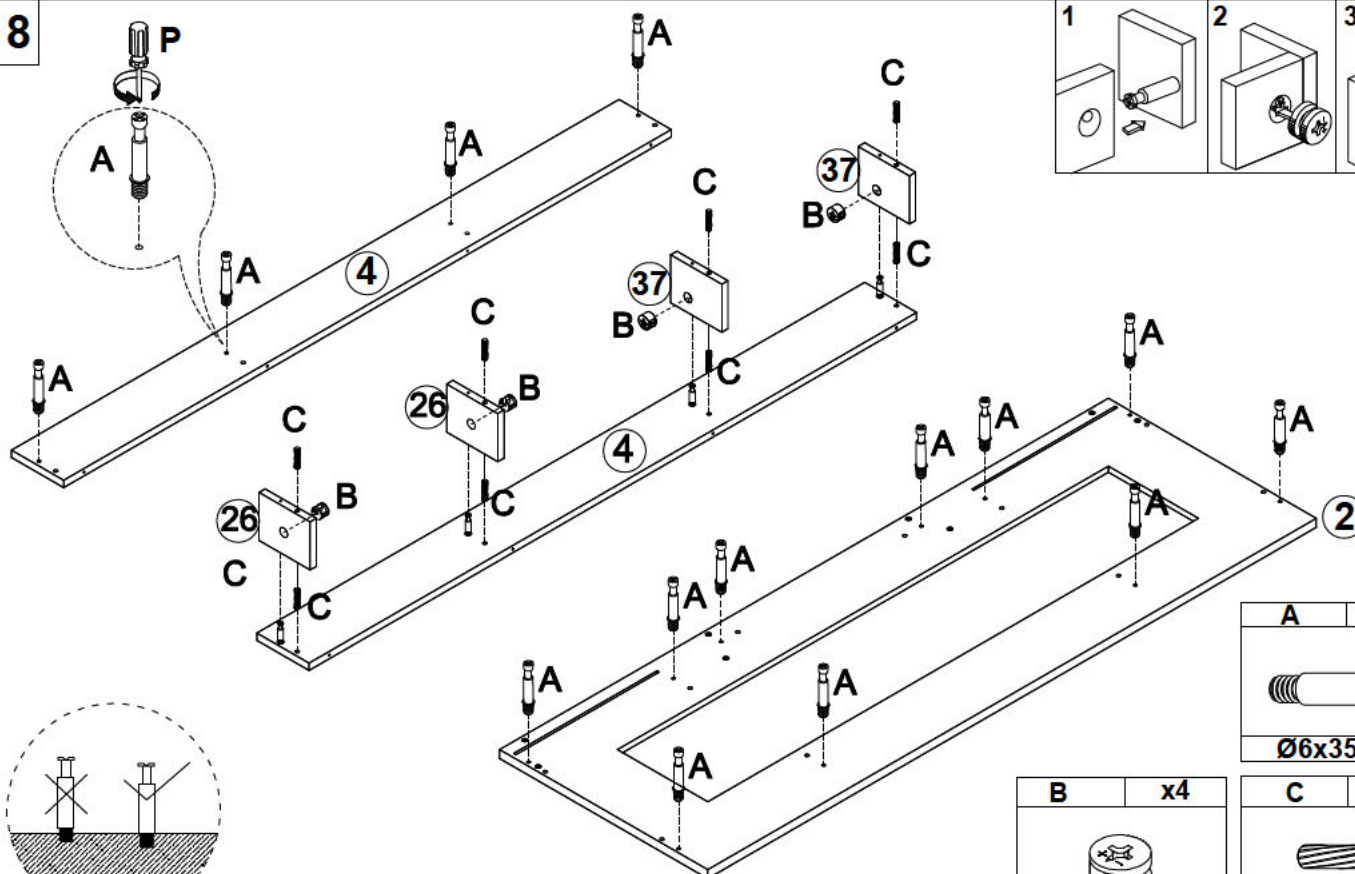



A	x14
Ø6x35mm	

B	x4
Ø15x10mm	




C	x8
Ø6x30mm	


19

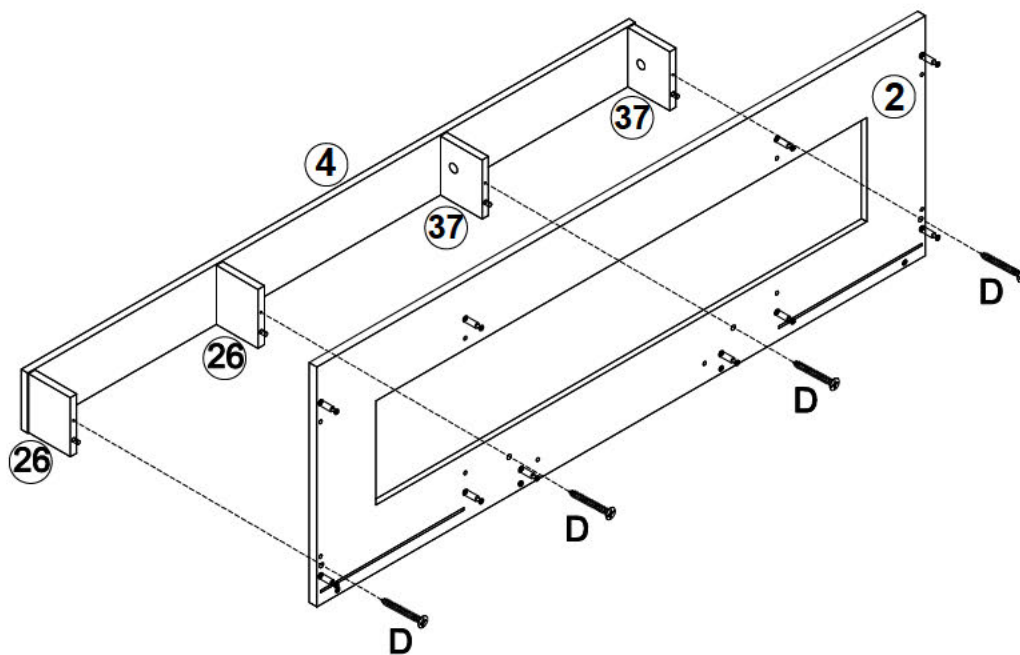


D	x4
	
Ø4x35mm	

20

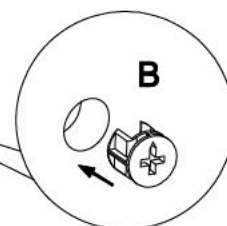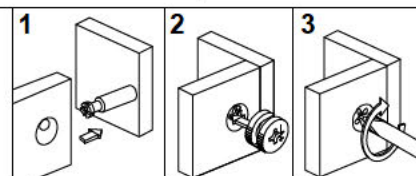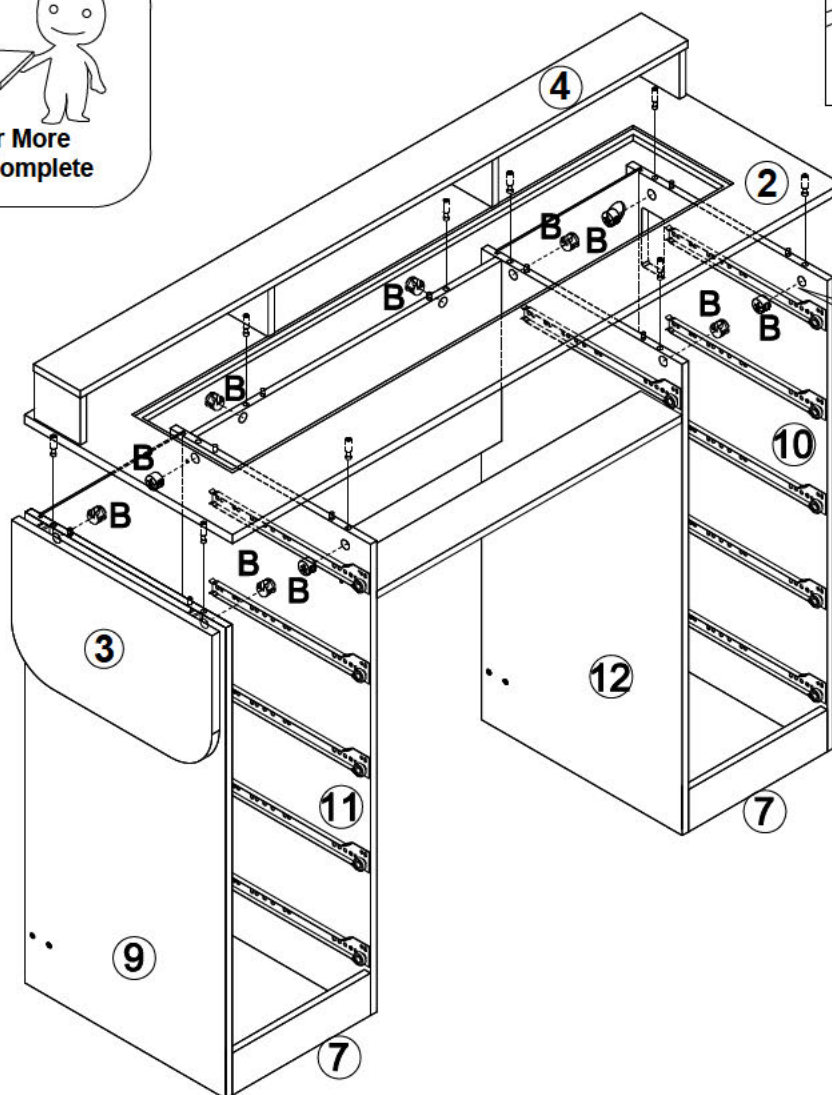

B	x10
	
Ø15x10mm	


21

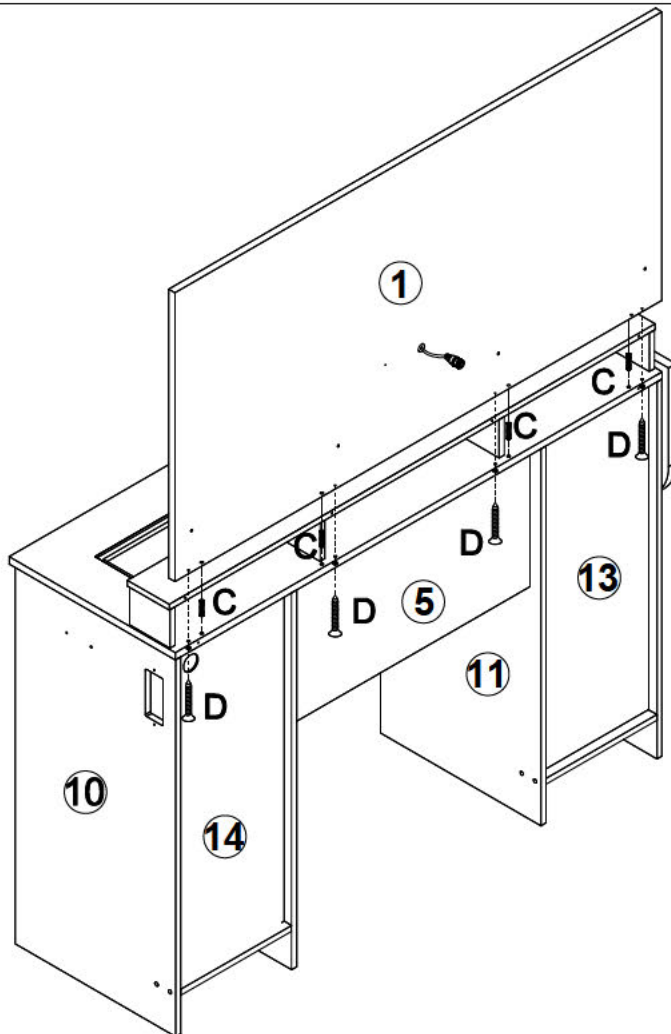

C	x4
Ø6x30mm	

D	x4
Ø4x35mm	

22

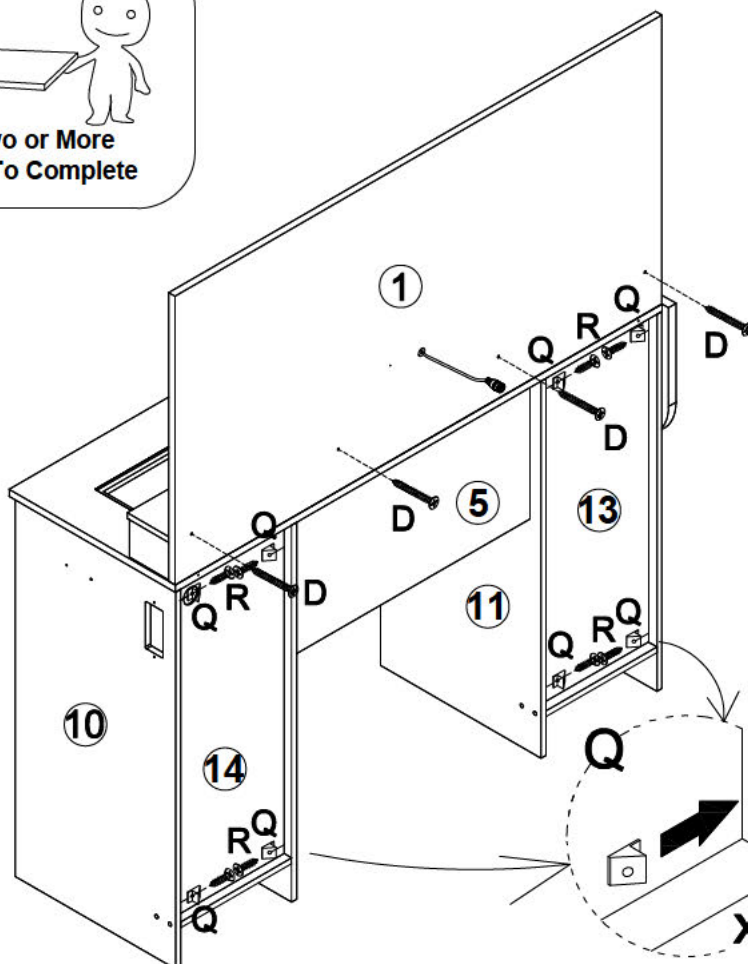


D	x4
Ø4x35mm	


Q	x8


R	x8
Ø3x14mm	

23

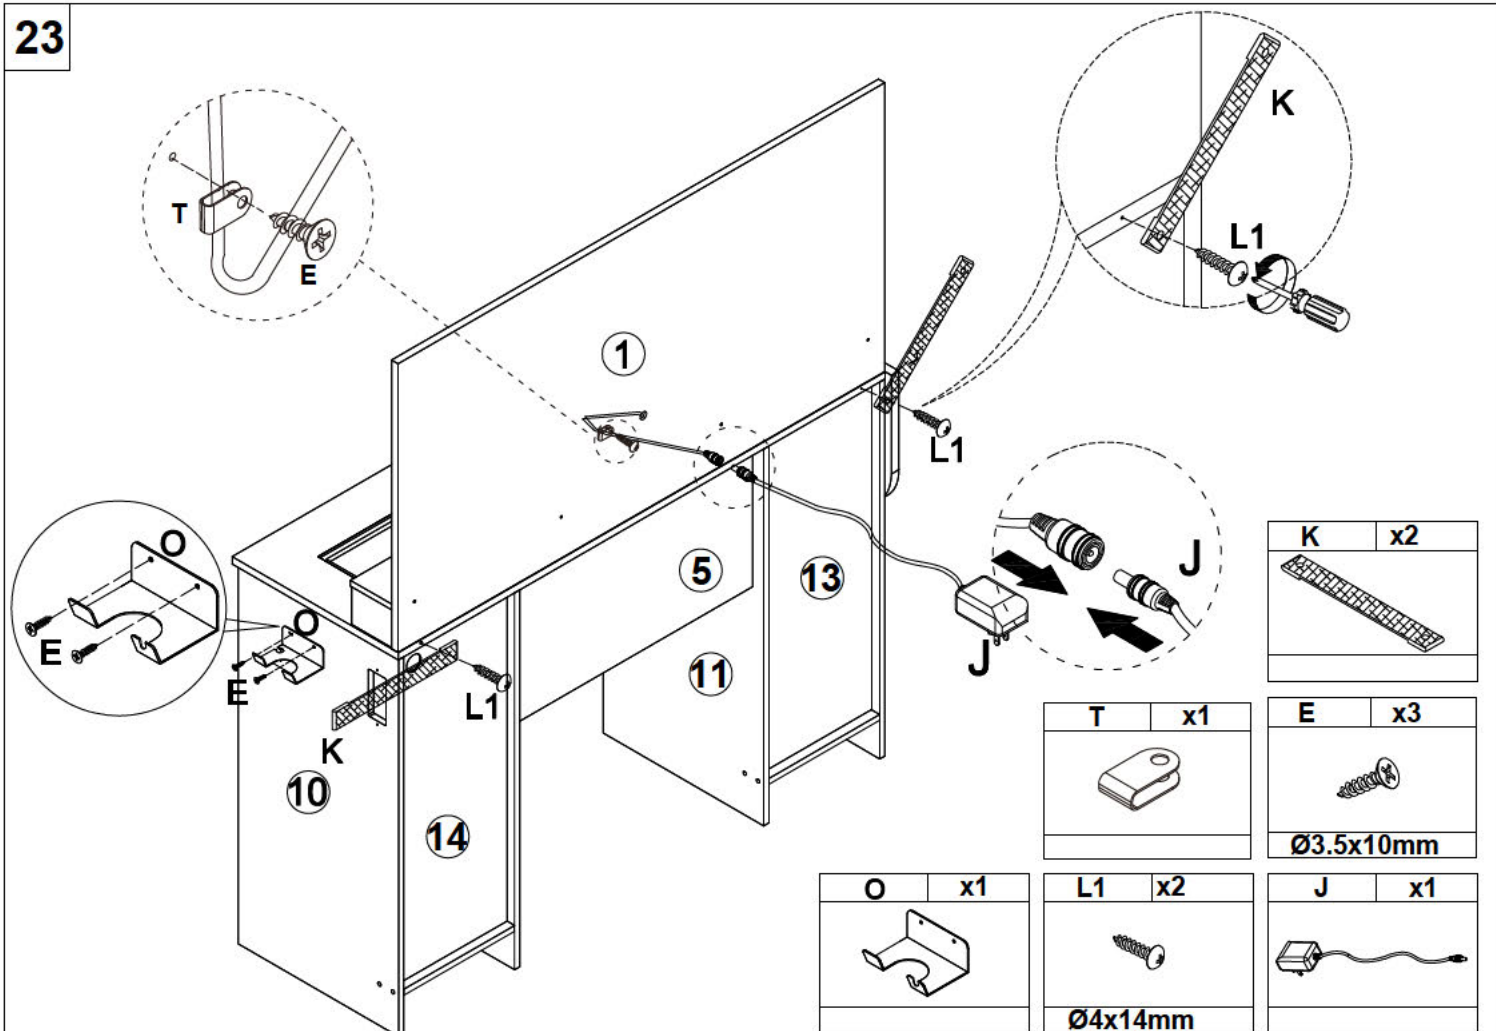


24


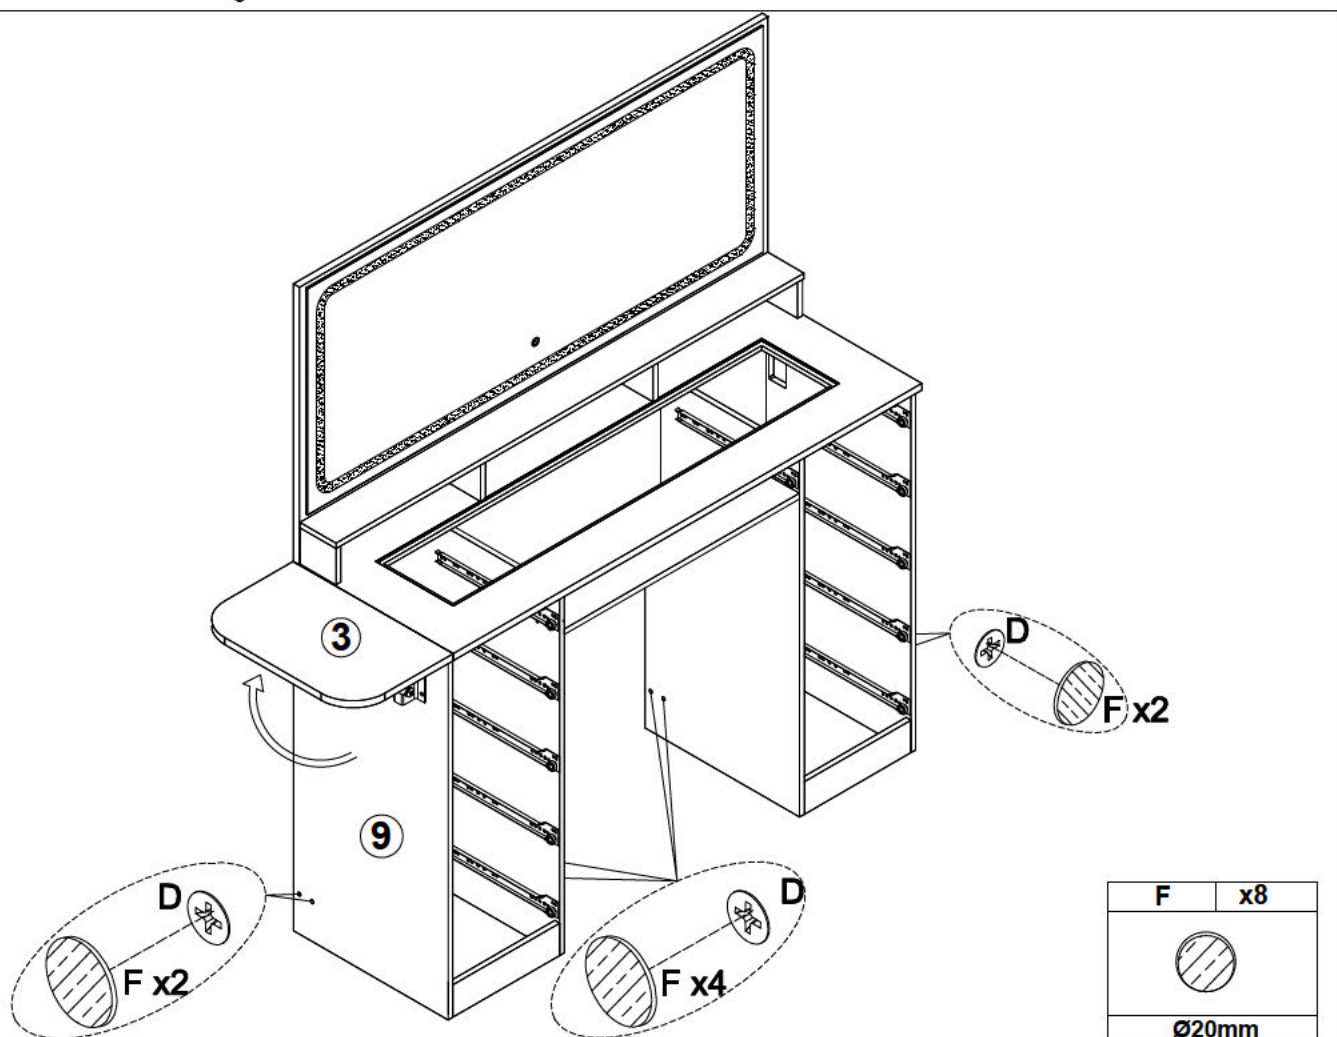


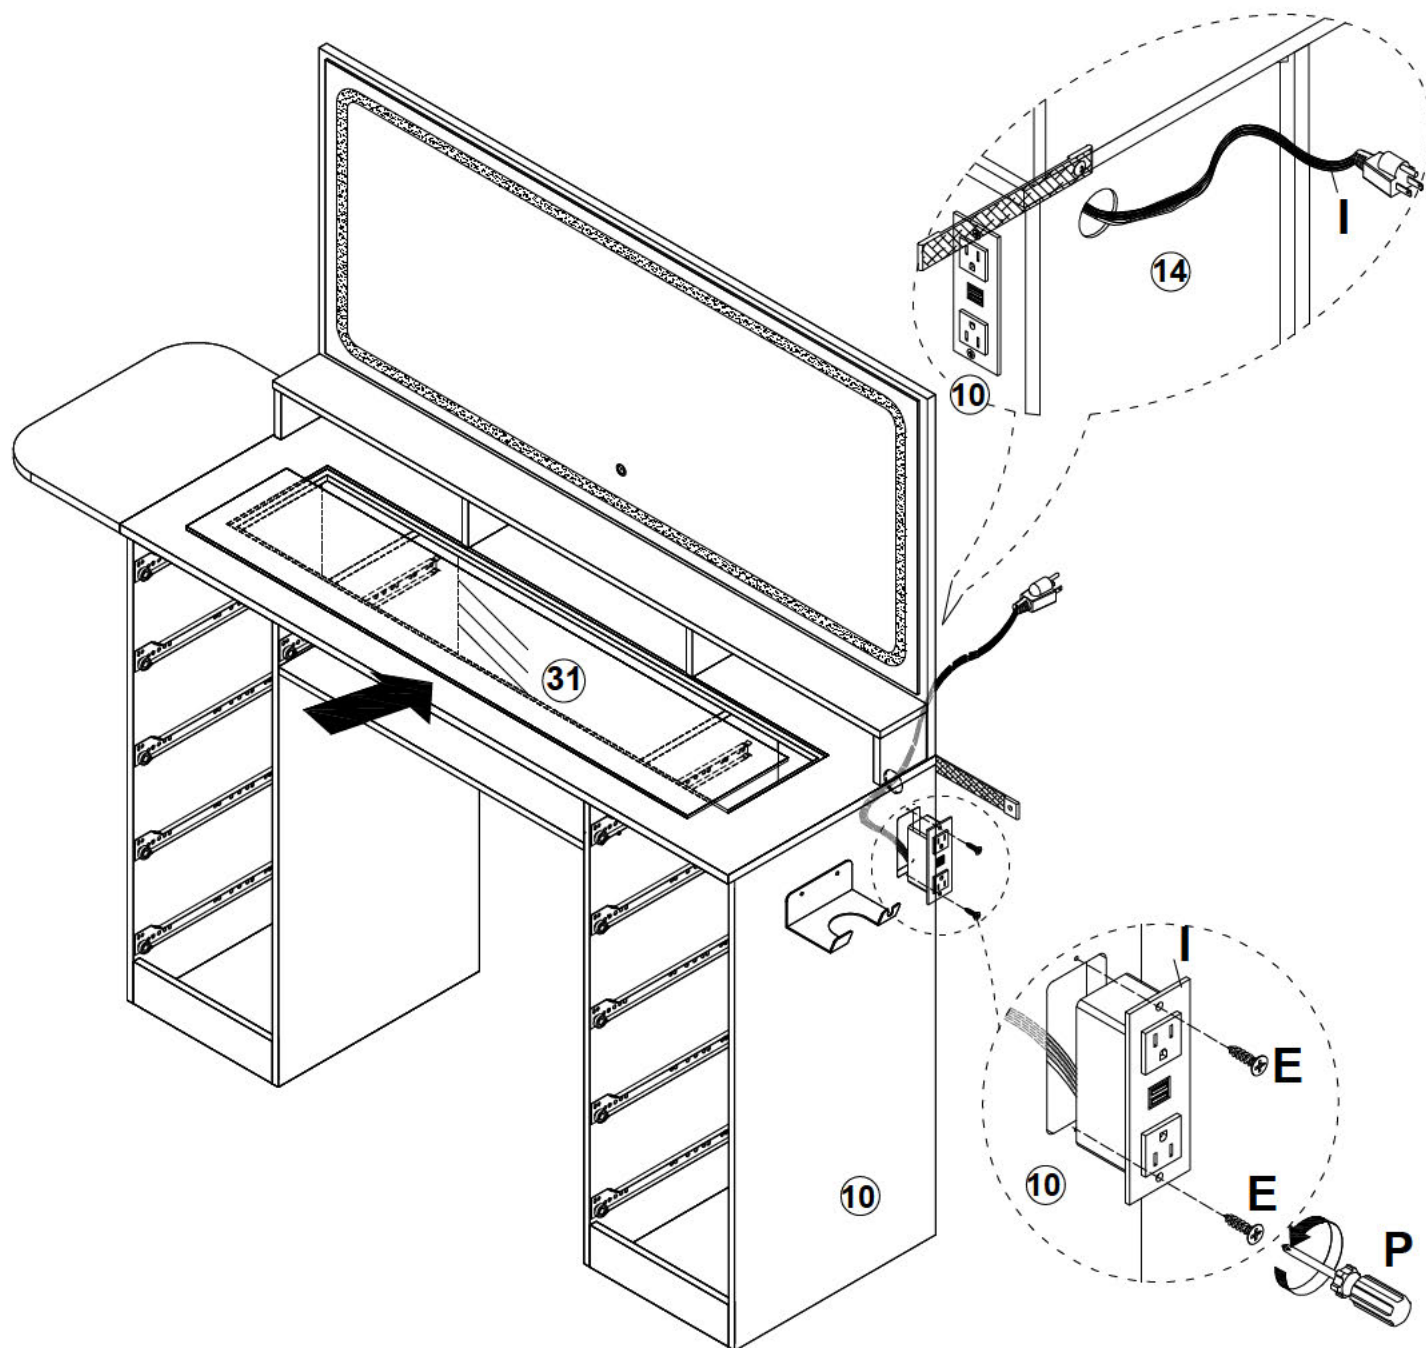



I	x1


E	x2
Ø3.5x10mm	

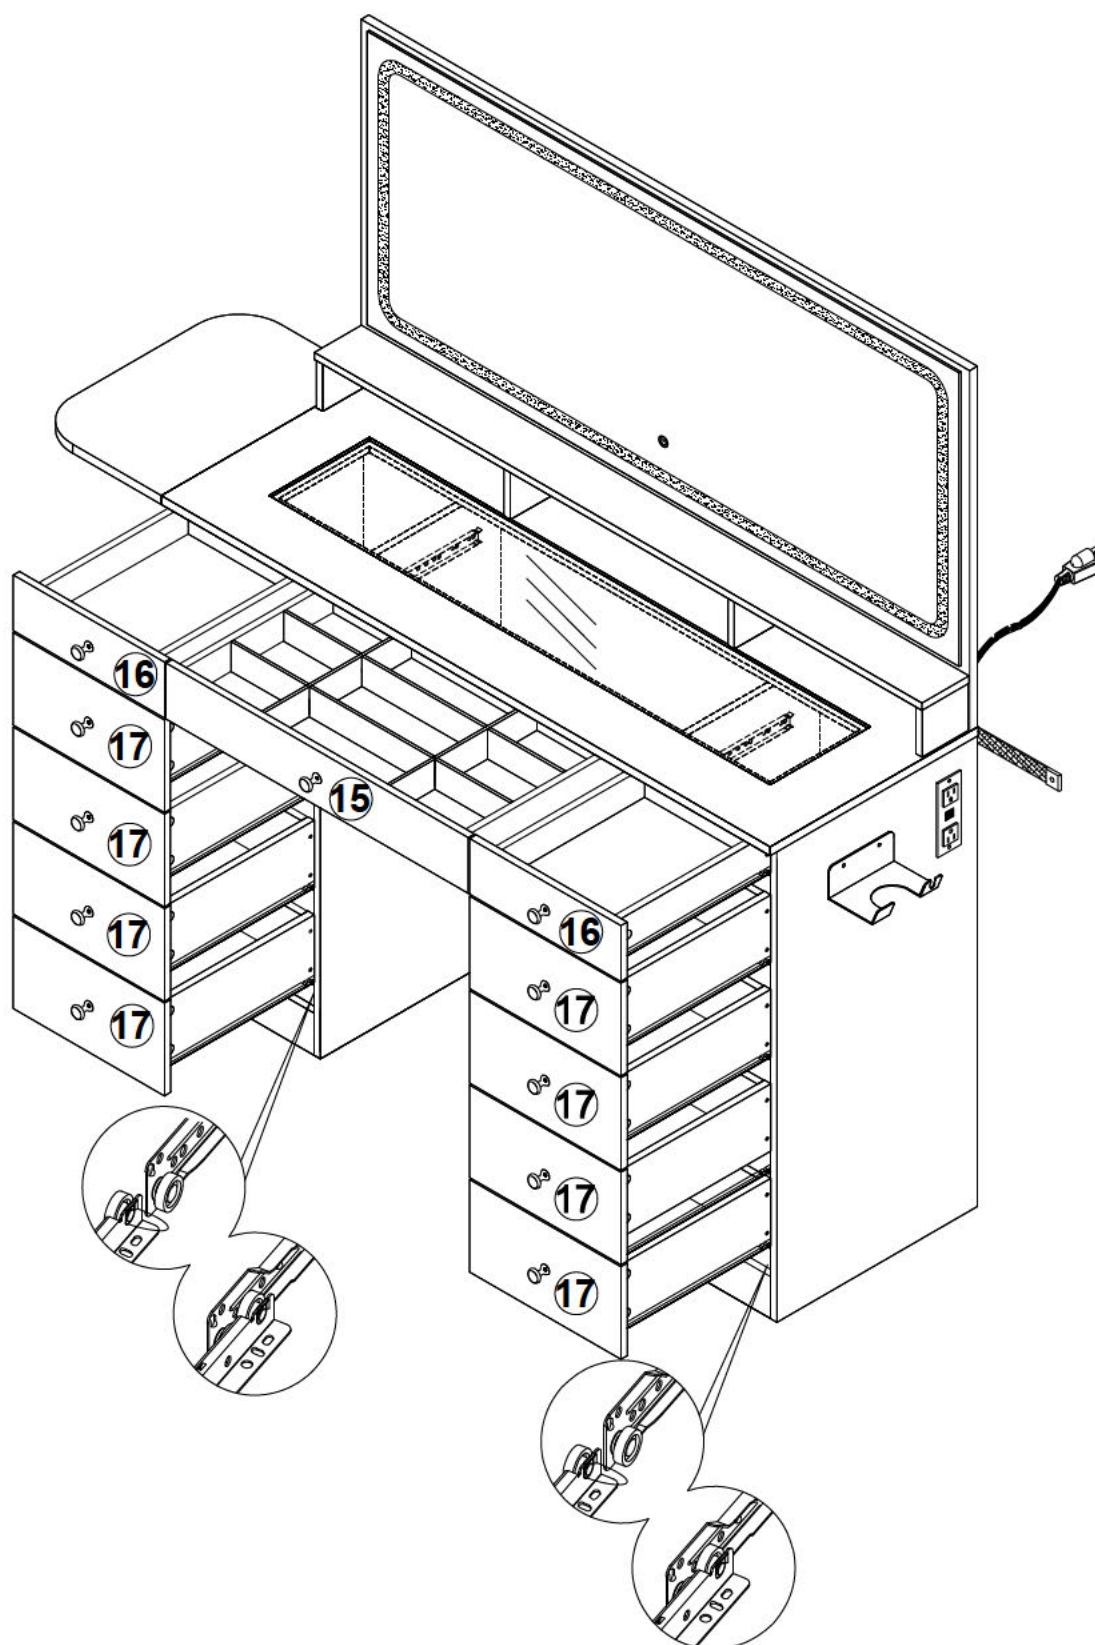

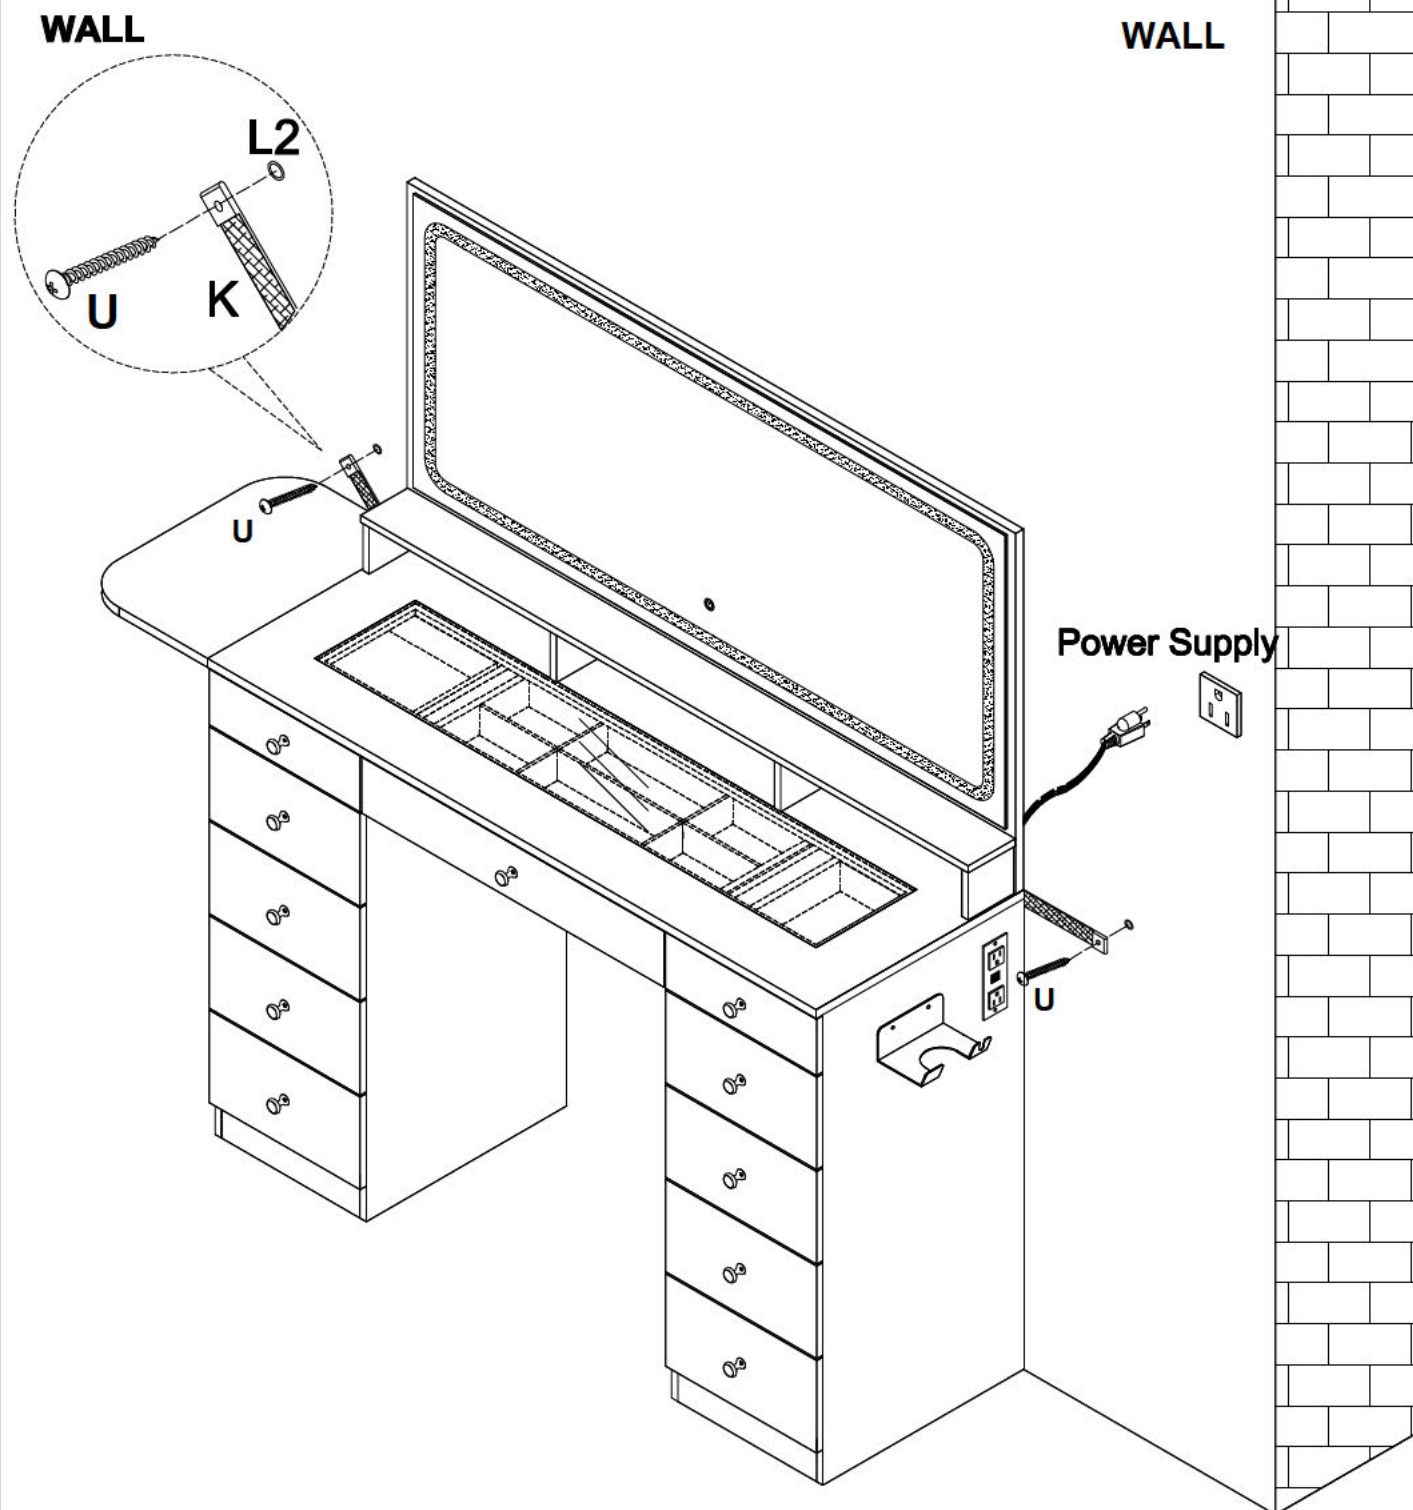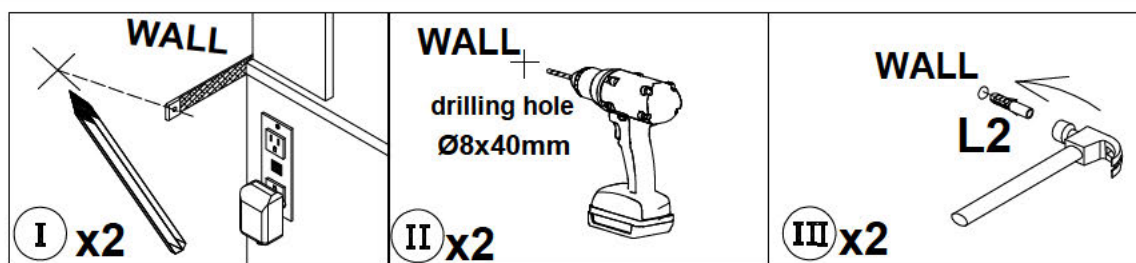


L2	x2	U	x2
			
Ø6x30mm		Ø4x35mm	


28

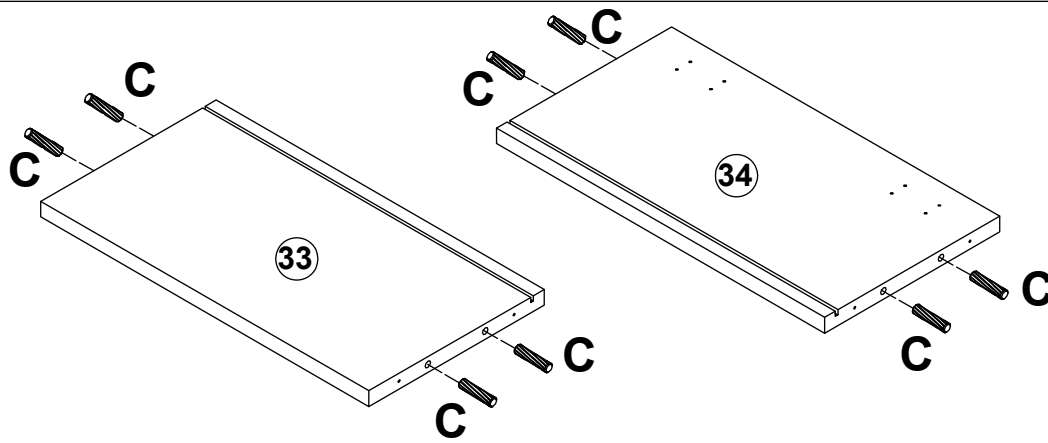


29

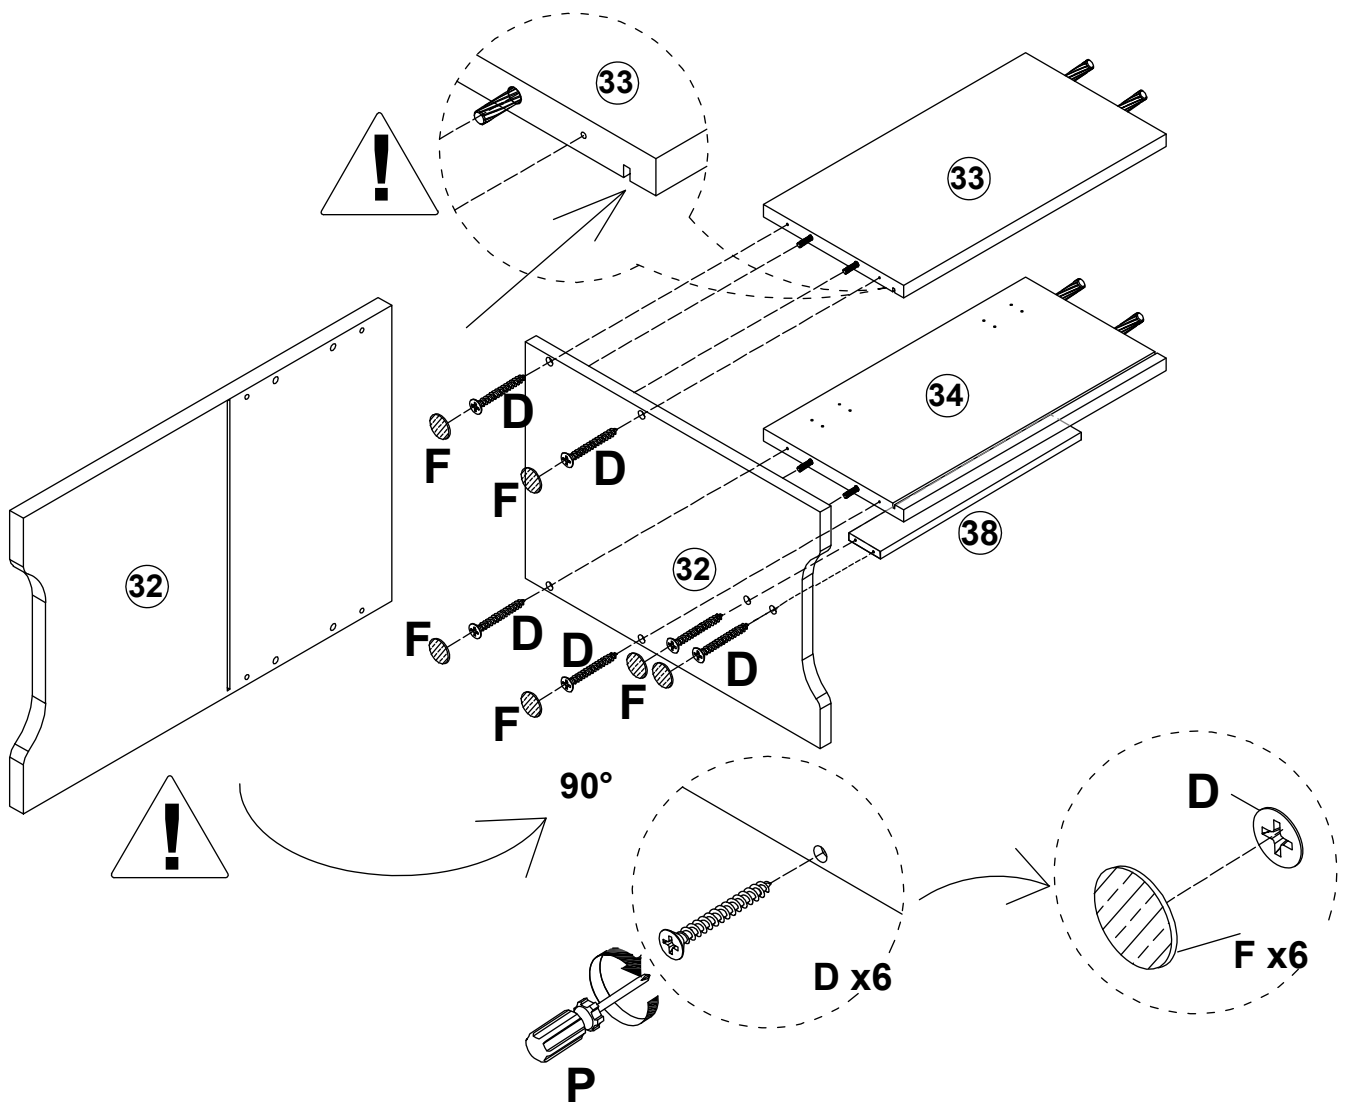



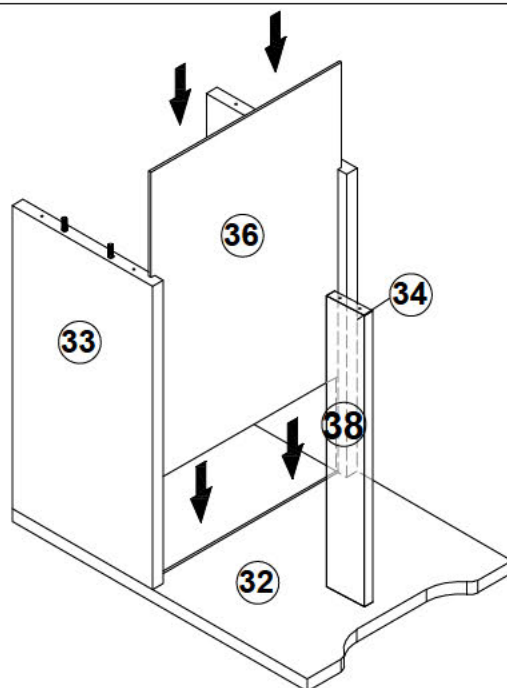

30

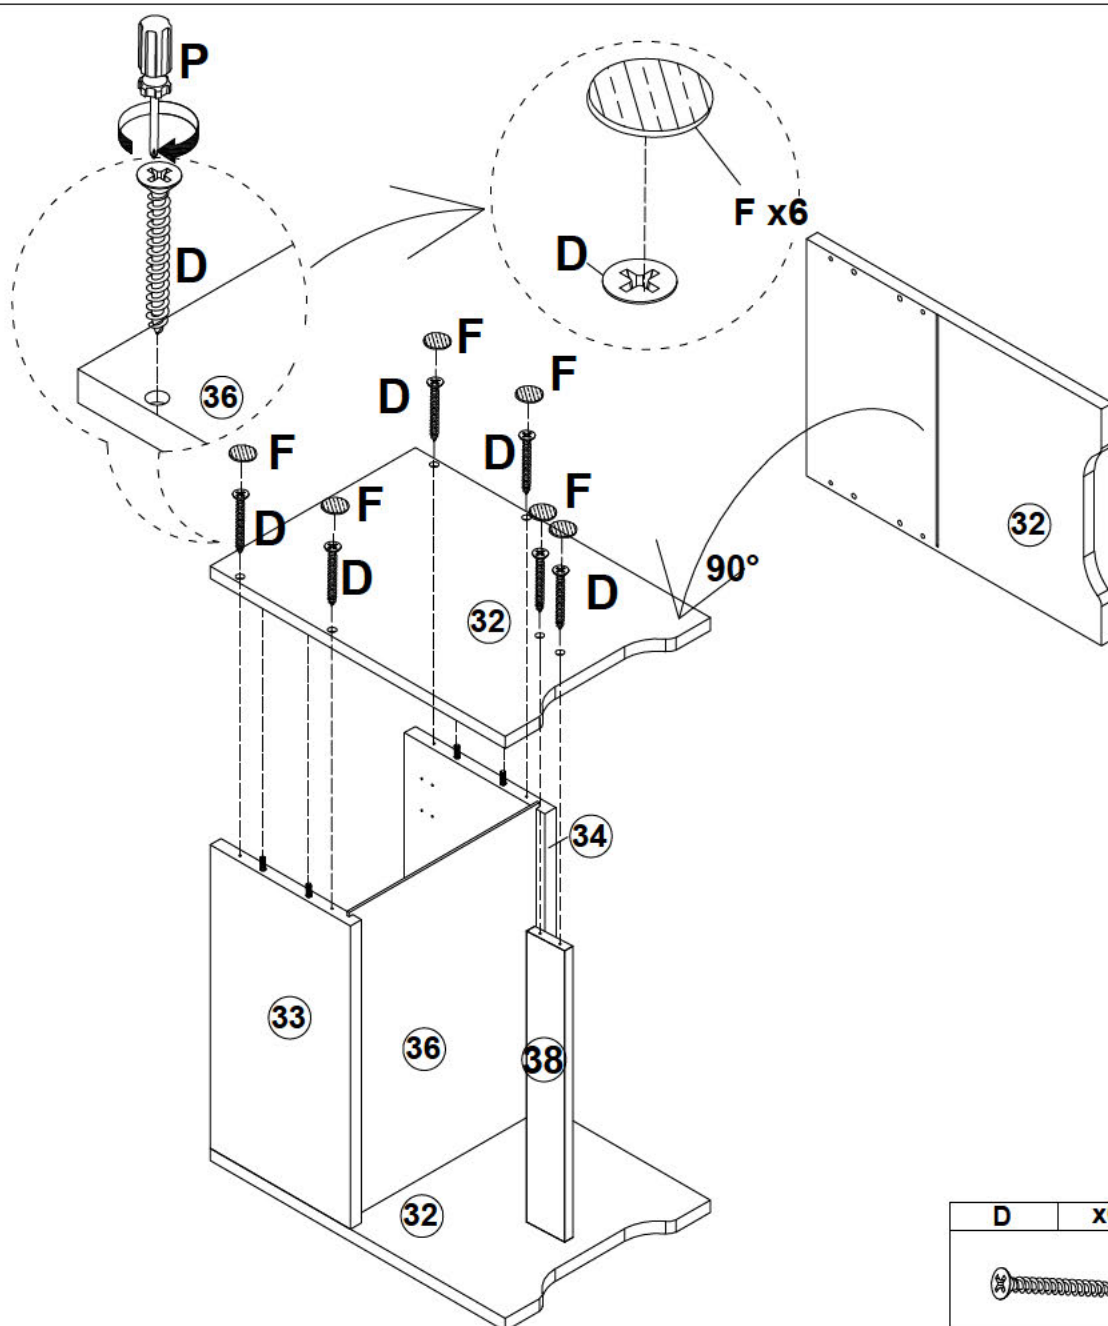


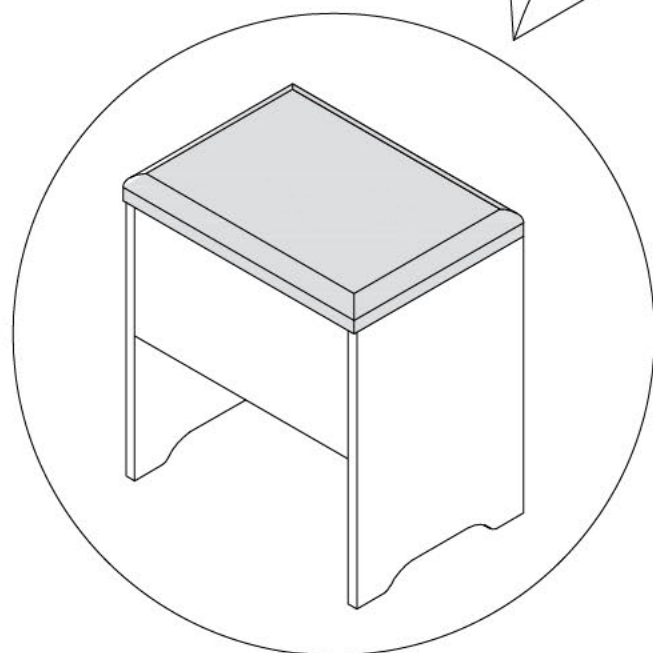
31




D	x6	F	x6
			
Ø4x35mm		Ø20mm	

N	x2
	
	

S	x4
	
Ø4x14mm	



S	x8
	
Ø4x14mm	

