
PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!




PAGE:1 OF 5

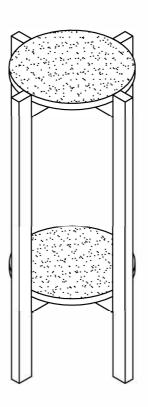

PAGE:1 OF 5

PARTS IDENTIFICATION

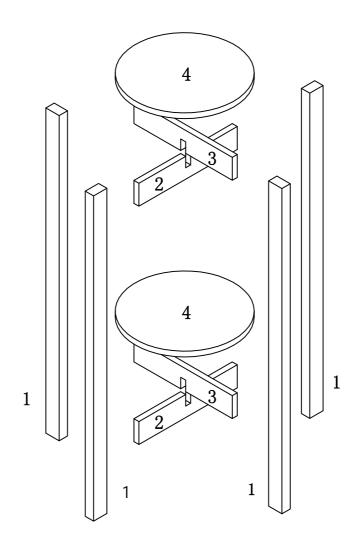


- (1) 4pcs
- (2) 2pcs
- (3) 2pcs
- (4) 2pcs


HARDWARE IDENTIFICATION

A		L29	24PCS
В	§	ET15	24PCS
С	888	Ø20	24PCS
D		Ø16	4PCS
E		197×5×1	1PC
F	()mm>	Ø4×25	1PC
G		Ø5×40	1PC
Н		Ø8×40	1PC
I		12×12×1	2PCS


PAGE:3 OF 5

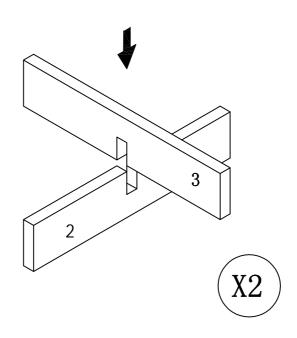


STEP 1

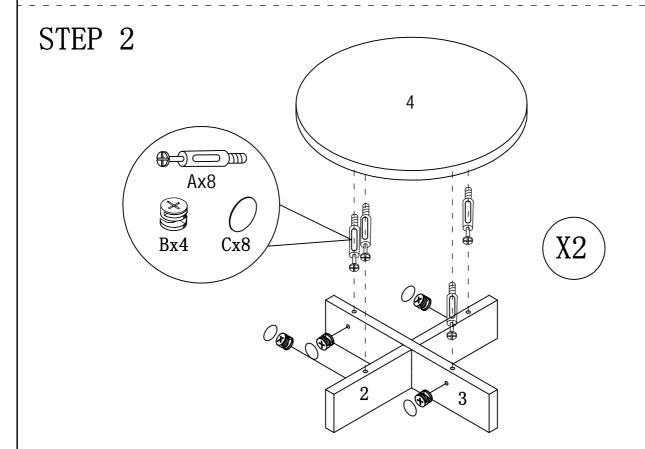

PAGE:4 OF 5

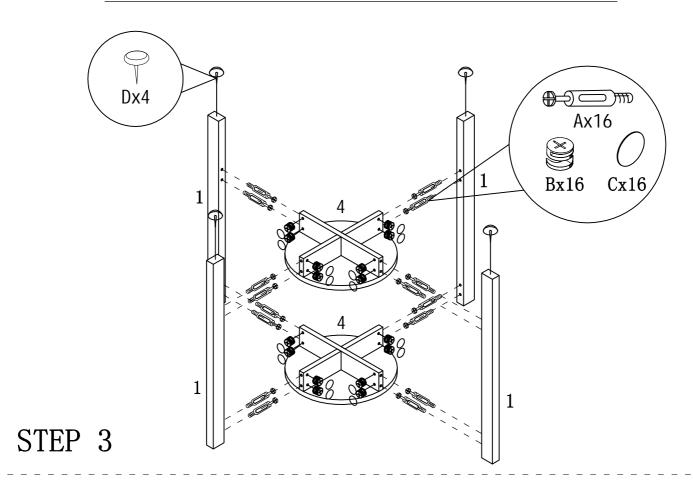

STEP 4

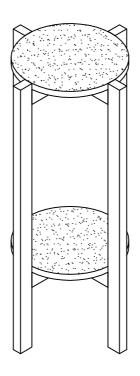

PAGE:5 OF 5

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED):

TOOLS NEEDED (NOT INCLUDED):

DRYWALL ANCHOR \$\phi 8X40 X 1PC



DRILL & DRILL BIT



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



LIGHT HAMMER



DRYWALL SCREW \$\phi 5 X 40 X 1PC




STRAP $197 \times 5 \times 1$ X 1PC




FLATHEAD SCREW \$\phi 4X25 X 1PC


Note: Hardware included only compatible with standard drywalls.

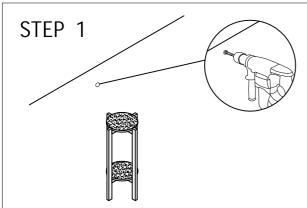


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

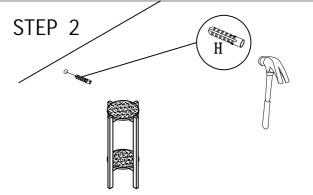

1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size . Do not force anchor into wall.

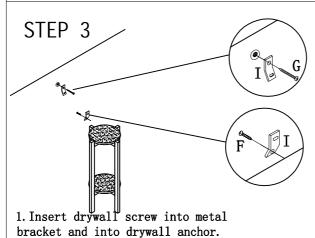

2. Insert flathead screw into second metal bracket and into back of item. along top edge.

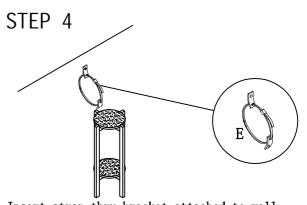

1. Insert strap thru bracket attached to wall. then thru bracket on item, and into head of strap. 2. pull lightly til strap stops.

Assembly is complete.