


ENTRY WAY BENCH MISSION STYLE BACK

ASSEMBLY INSTRUCTIONS

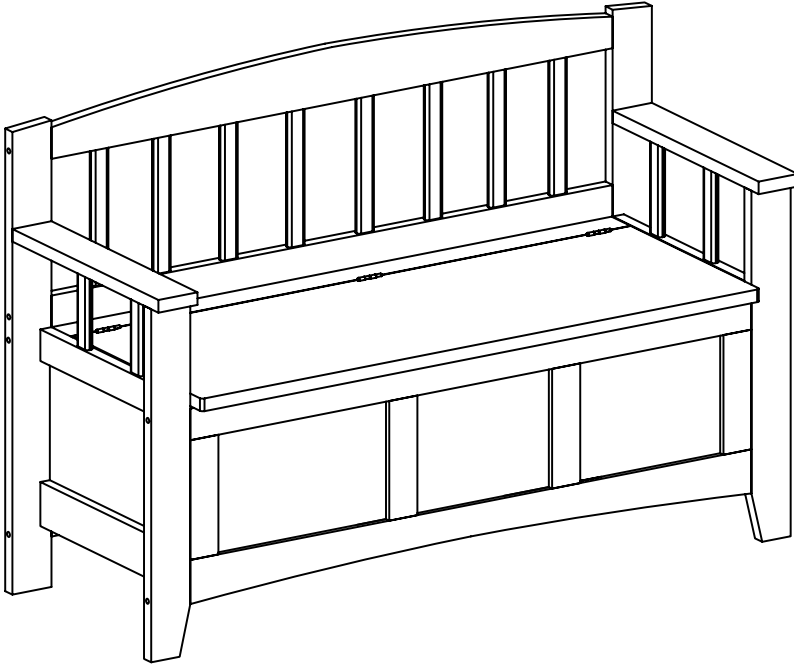

WARNING











1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **Intended for residential use only**

LIMITED WARRANTY

PARTS LIST

NO	DESCRIPTION	Q'TY
1	Seat Assembly	1
2	Left Side Frame	1
3	Right Side Frame	1
4	Backrest	1
5	Front Panel	1
6	Back Panel	1
7	Bottom Panel	1
8	Support Back	1


HARDWARE LIST

NO	SKETCH	DESCRIPTION	SIZE	Q'TY
A		Long Bolt	60 mm	12
B		Wood Screw		4
C		Safety Hinge		1
D		Long Wood Dowel	30 mm	16
E		Wrench		1
F		Wood Plug		12
G		Short Wood Dowel	20 mm	2
H		Medium Bolt	50 mm	1
I		Short Bolt	30 mm	3
J		Wood Screw		4

NOTE: Phillips screwdriver also needed for assembly (not provided).


STEP 1

Attach Seat Assembly (1) to Back Panel (6) using three Short Bolts (I). **FULLY TIGHTEN SHORT BOLTS (I).**

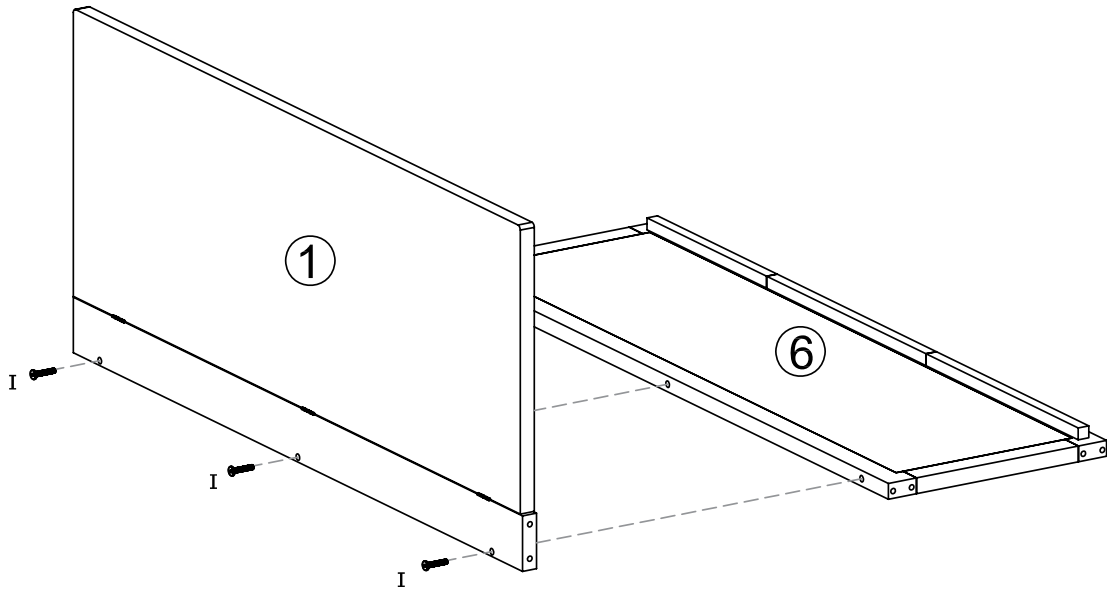


STEP 2

Attach Support Back (8) to Seat Assembly (1) using one Medium Bolt (H), **FULLY TIGHTEN MEDIUM BOLT (H).** Further secure Seat Assembly (1) to Back Panel (6) using four Wood Screws (J). **FULLY TIGHTEN ALL WOOD SCREWS (J).**

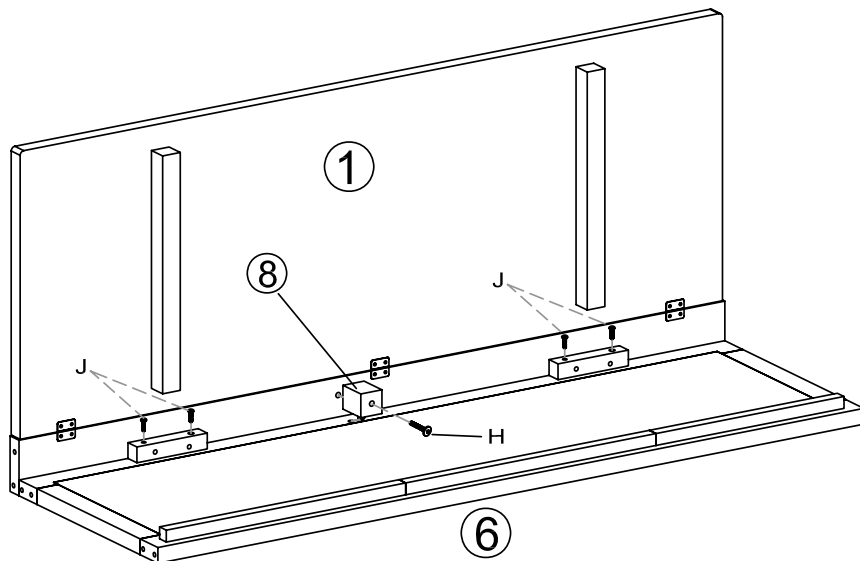


STEP 3

Insert six Long Wood Dowels (D) into Left Side Frame (2). Secure Front Panel (5) to Left Side Frame (2) using two Long Bolts (A), **DO NOT FULLY TIGHTEN LONG BOLTS (A)**. Secure Seat Assembly (1) and Back Panel (6) to Left Side Frame (2) using two Long Bolts (A). **FULLY TIGHTEN ALL LONG BOLTS (A)**.

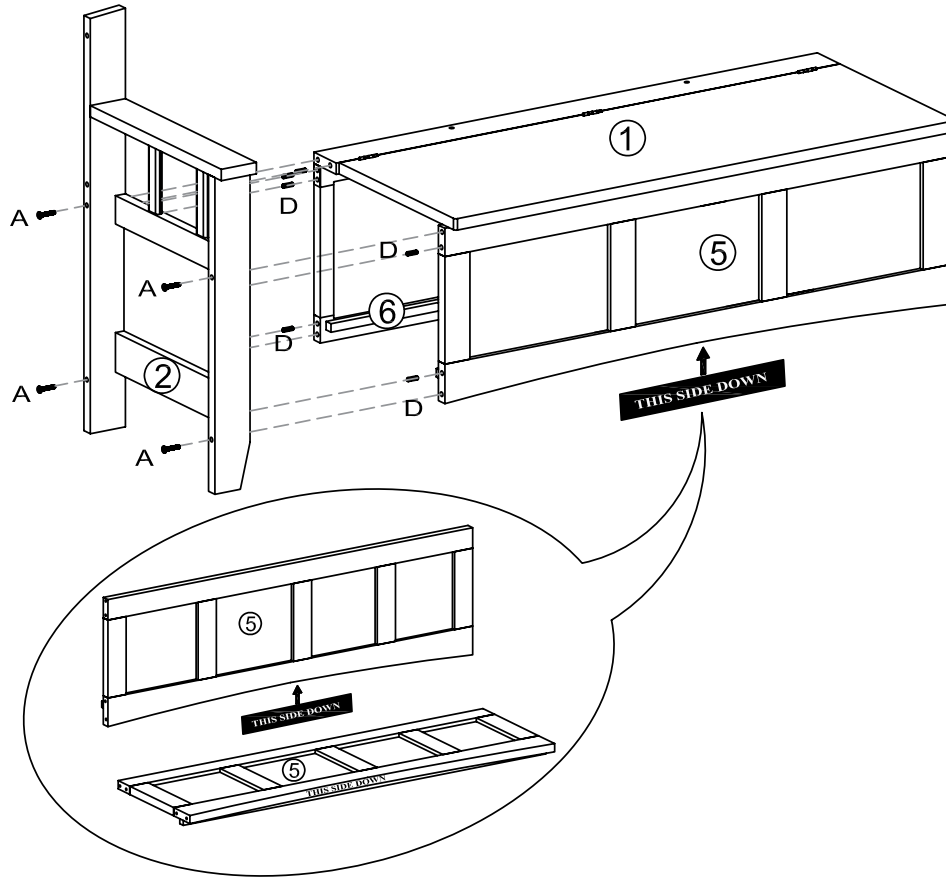

STEP 4


Insert two Long Wood Dowels (D) into Left Side Frame (2), and insert two Short Wood Dowels (G) into bottom of Backrest (4). Attach Backrest (4) to assembly and secure using two Long Bolts (A). **FULLY TIGHTEN ALL LONG BOLTS (A)**.

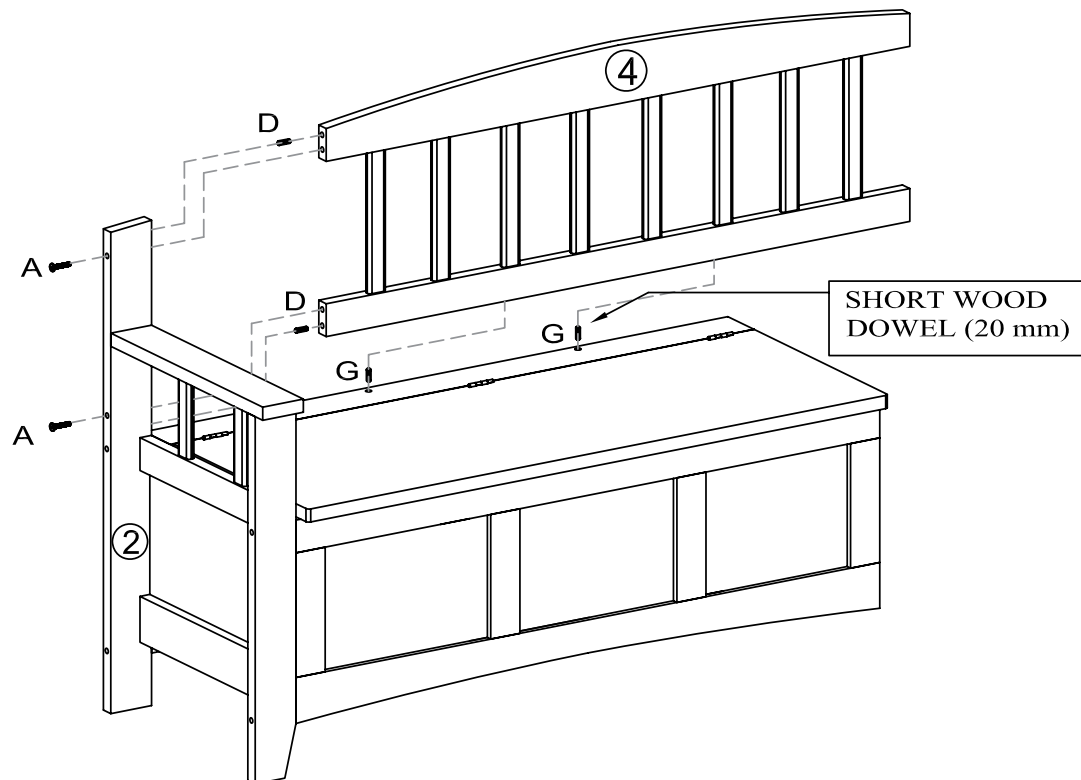

STEP 5


Insert eight Long Wood Dowels (D) into Right Side Frame (3), attach Right Side Frame (3) to assembly and secure using six Long Bolts (A).

FULLY TIGHTEN ALL LONG BOLTS (A).

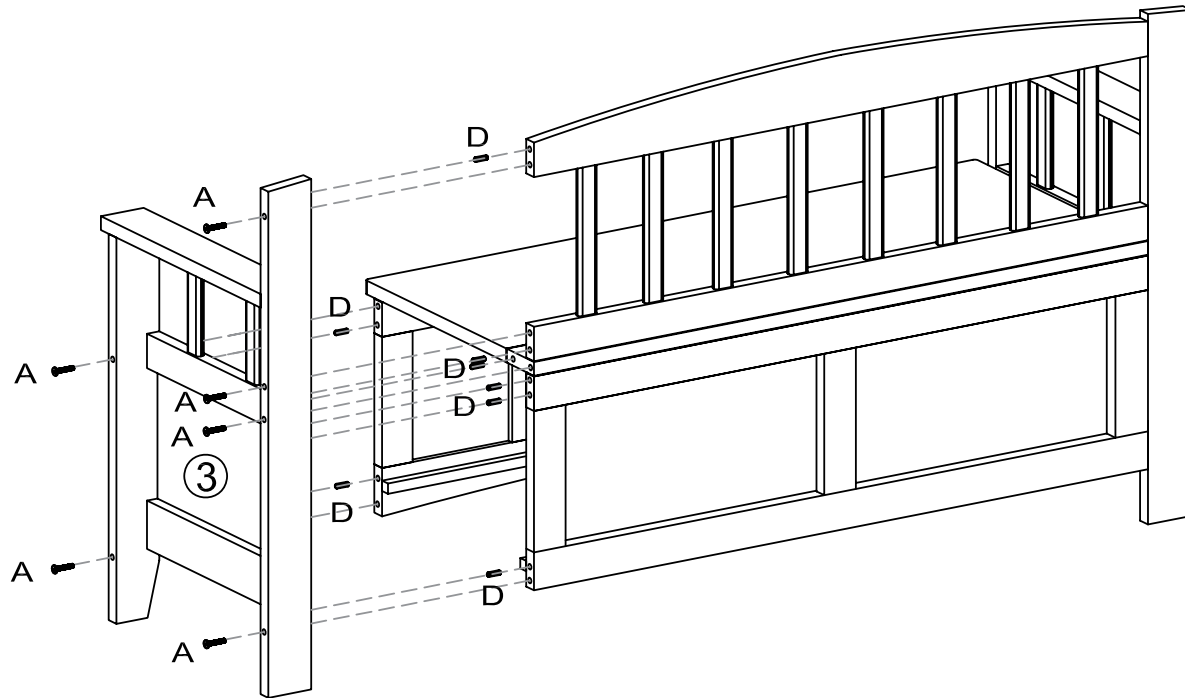


STEP 6

Carefully prop open Seat Assembly (1). Attach Safety Hinge (C) to Support Back (8) and Seat Assembly (1) using four Wood Screws (B). **FULLY TIGHTEN ALL WOOD SCREWS (B).**

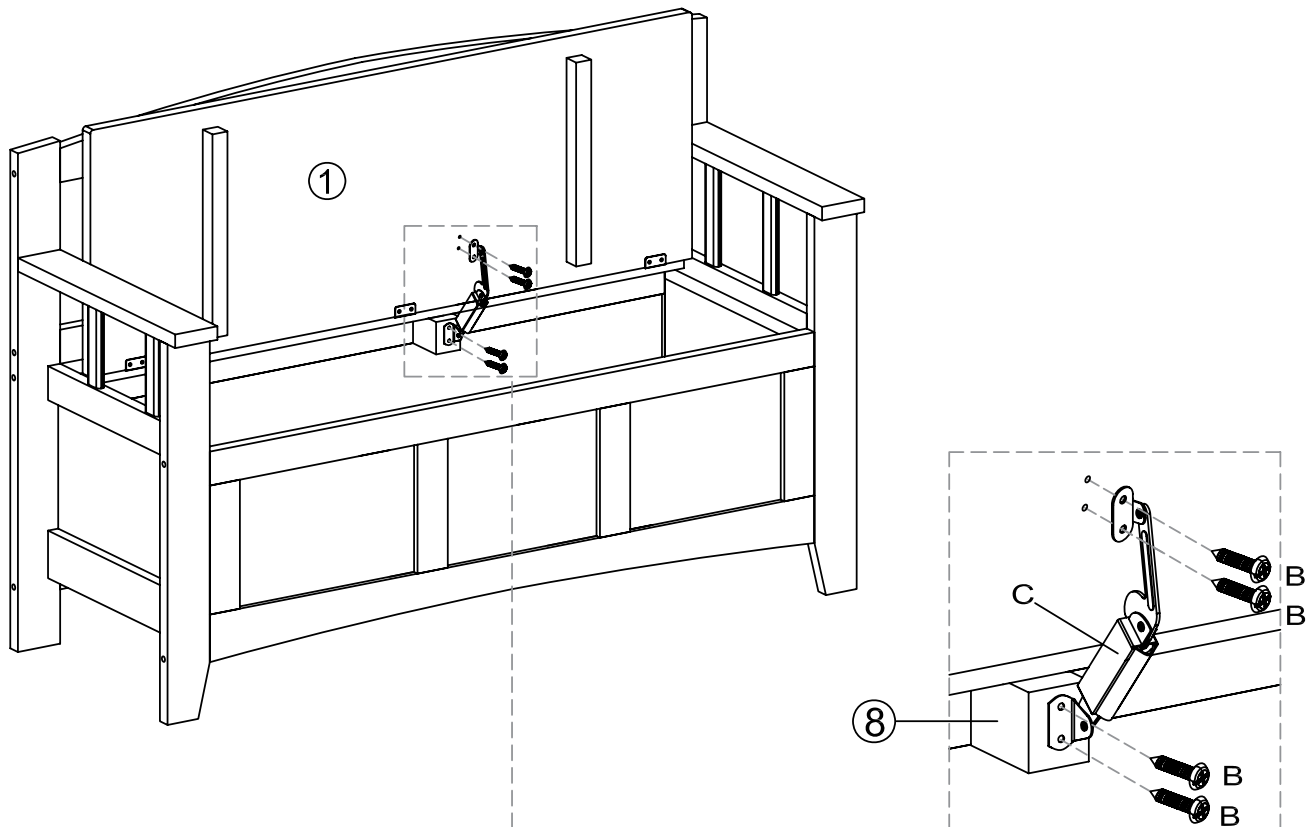

STEP 7

Cover holes in Left Side Frame (2) and Right Side Frame (3) using six Wood Plugs (F) for each side frame. Carefully place Bottom Panel (7) into assembly.

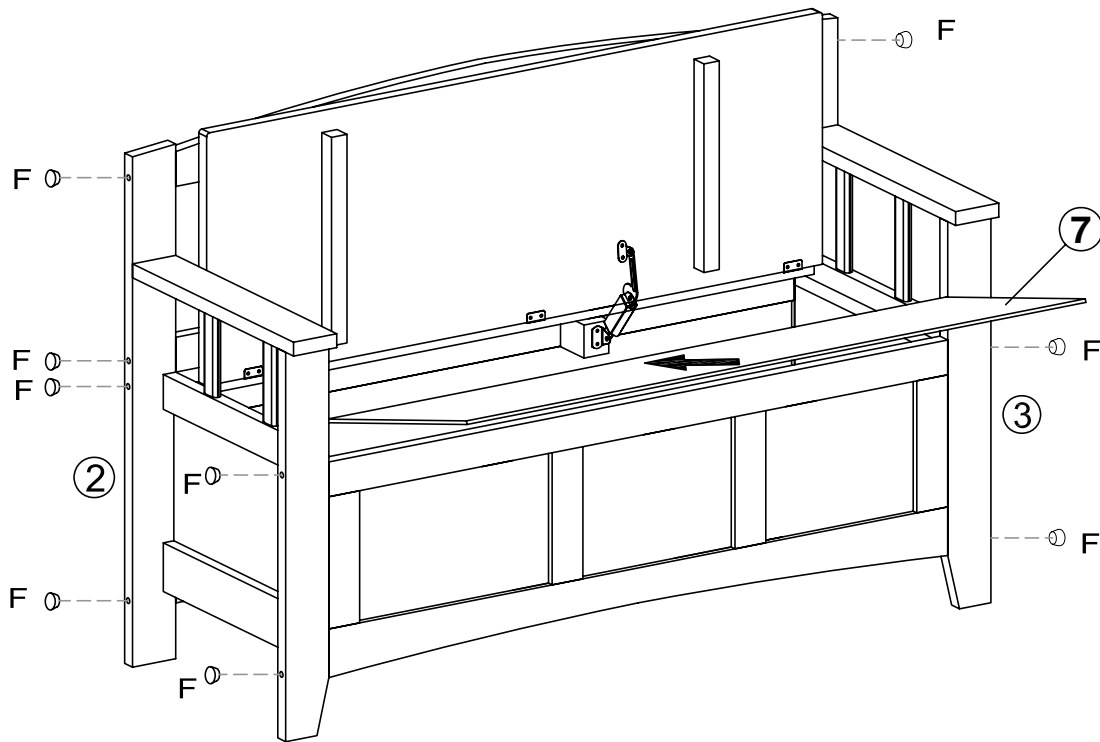

ATTENTION: MAKE SURE ALL SCREWS AND BOLTS ARE SECURELY TIGHTENED BEFORE USING THIS PRODUCT.